


GENESIS COUPE(BK) > 2013 > G 3.8 GDI > General Information

General Information > General Information > General Information

Identification Number Locations

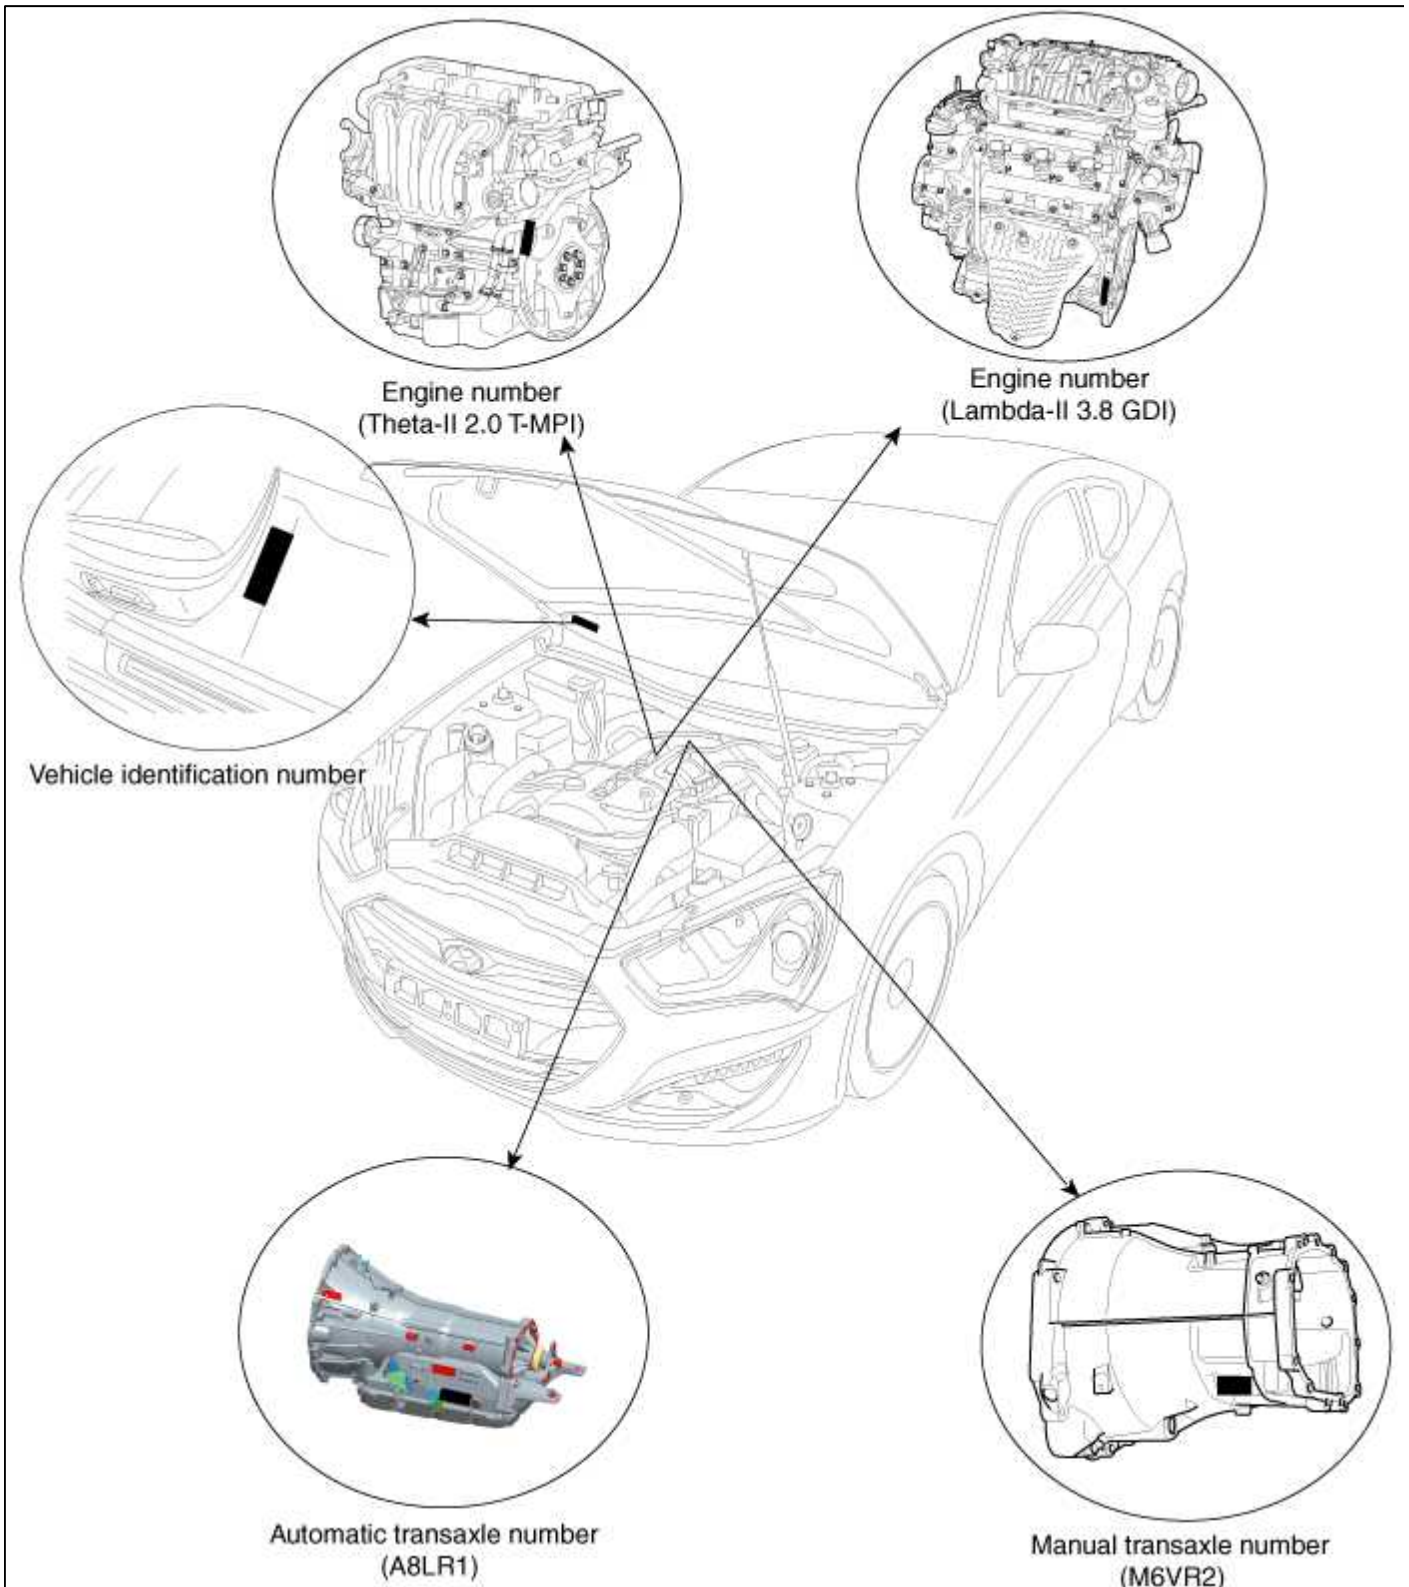

Identification Number Description

Vehicle Identification Number

K	M	H	H	T	6	1	D	B	C	U	000001
1	2	3	4	5	6	7	8	9			10

1. World Manufacturer Identifier (WMI)

- KMF : Commercial vehicle (Van)
- KMH : Passenger vehicle or MPV(Multipurpose Passenger Vehicle)/SUV(Sports Utility Vehicle)/RV(Recreational Vehicle)
- KMJ : Van
- KM8 : MPV/SUV/RV (For U.S.A, Canada, Mexico)

2. Vehicle line

- H : GENESIS COUPE

3. Model & Series

- S : Low grade (L)
- T : Middle-Low grade (GL)
- U : Middle grade (GLS, JSL, TAX)
- V : Middle-High grade (HGS)
- W : High grade (TOP)

4. Body/Cabin type, Gross Vehicle Weight Rating

KMF (Commercial vehicle / Van)

Except U.S.A, Canada, Mexico, Gulf Cooperation Council, China

- X : Standard Cabin / Semi-Bonnet
- Y : Double Cabin / Bonnet
- Z : Super Cabin / Box

For U.S.A, Canada, Mexico, Gulf Cooperation Council, China

- 3 : Standard Cabin Class-E 4×2 / Semi-Bonnet Class-E 4×2
- 4 : Standard Cabin Class-E 4×4 / Semi-Bonnet Class-E 4×4
- 5 : Standard Cabin Class-F 4×2 / Semi-Bonnet Class-F 4×2
- 6 : Standard Cabin Class-F 4×4 / Semi-Bonnet Class-F 4×4
- 7 : Double Cabin Class-E 4×2 / Bonnet Class-E 4×2
- 8 : Double Cabin Class-E 4×4 / Bonnet Class-E 4×4
- 9 : Double Cabin Class-F 4×2 / Bonnet Class-F 4×2
- 0 : Double Cabin Class-F 4×4 / Bonnet Class-F 4×4
- A : Super Cabin Class-E 4×2 / Box Class-E 4×2
- B : Super Cabin Class-E 4×4 / Box Class-E 4×4
- C : Super Cabin Class-F 4×2 / Box Class-F 4×2
- D : Super Cabin Class-F 4×4 / Box Class-F 4×4

KMH

- 1 : Limousine
- 2 : Sedan - 2 door
- 3 : Sedan - 3 door
- 4 : Sedan - 4 door
- 5 : Sedan - 5 door
- 6 : Coupe
- 7 : Convertible
- 8 : Wagon
- 9 : Commercial Van
- 0 : Pick-Up

KMJ

- 1 : Box
- 2 : Bonnet
- 3 : Semi-Bonnet

KM8

- 1 : Wagon 4×2 Class-A
- 2 : Wagon 4×2 Class-B
- 3 : Wagon 4×2 Class-C
- 4 : Wagon 4×2 Class-D
- 5 : Wagon 4×2 Class-E
- 6 : Wagon 4×2 Class-F
- 7 : Wagon 4×2 Class-G
- A : Wagon 4×4 Class-A
- B : Wagon 4×4 Class-B
- C : Wagon 4×4 Class-C
- D : Wagon 4×4 Class-D
- E : Wagon 4×4 Class-E
- F : Wagon 4×4 Class-F
- G : Wagon 4×4 Class-G

5. Restraint system, Brake system

KMH, KM8

Except U.S.A, Canada, Mexico

- 0 : Both side - None
- 1 : Both side - Active belt
- 2 : Both side - Passive belt

For U.S.A, Canada, Mexico

Code	Seat belt	Front air bag		Knee air bag		Side air bag			Curtain air bag		
		Driver's	Passenger's	Driver's	Passenger's	1st row	2nd row	3rd row	1st row	2nd row	3rd r
A	○	○	○	×	×	○	×	×	○	○	×
B	○	○	○	×	×	×	×	×	×	×	×
C	○	○	○	×	×	○	×	×	○	○	○
D	○	○	○	×	×	○	○	×	○	○	×
E	○	○	×	×	×	×	×	×	×	×	×
F	○	○	○	×	×	○	×	×	×	×	×
N	○	×	×	×	×	×	×	×	×	×	×

KMJ

Except U.S.A, Canada, Mexico

- 7 : Hydraulic brake system
- 8 : Pneumatic brake system
- 9 : Mixed brake system

For U.S.A, Canada, Mexico

- X : Hydraulic brake system
- Y : Pneumatic brake system
- Z : Mixed brake system

KMF

Except U.S.A, Canada, Mexico

- 7 : Hydraulic brake system

- 8 : Pneumatic brake system

- 9 : Mixed brake system

For U.S.A, Canada, Mexico

Code	Restraint system											Brake system		
	Seat belt	Front air bag		Knee air bag		Side air bag			Curtain air bag			Hydraulic	Pneumatic	Mi:
		Driver's	Passenger's	Driver's	Passenger's	1st row	2nd row	3rd row	1st row	2nd row	3rd row			
X	○	×	×	×	×	×	×	×	×	×	×	○	-	-
V	○	○	×	×	×	×	×	×	×	×	×	○	-	-
W	○	○	○	×	×	×	×	×	×	×	×	○	-	-

6. Engine type

- D : Gasoline engine 2.0 (Theta-II T-MPI)

- J : Gasoline engine 3.8 (Lambda-II GDI)

7. Check digit or Driver's side & Transmission

Except U.S.A, Canada, Mexico, Gulf Cooperation Council, China, Yemen

- A : LHD & MT

- B : LHD & AT

- C : LHD & MT+Transfer

- D : LHD & AT+Transfer

- E : LHD & CVT

- L : RHD & MT

- M : RHD & AT

- N : RHD & MT+Transfer

- S : RHD & AT+Transfer

- T : RHD & CVT

For U.S.A, Canada, Mexico, Gulf Cooperation Council, China, Yemen

- Check digit : 0 ~ 9, ×

8. Production year

- B : 2011, C : 2012, D : 2013, E : 2014 ...

9. Plant of production

- A : Asan (Korea)

- C : Cheonju (Korea)

- U : Ulsan (Korea)


10. Vehicle production sequence number

- 000001 ~ 999999

Paint Code

Code	Color
NAA	Ceramic White
NBA	Space Black
NCA	Sleek Silver
NDA	Gray Titanium
NEA	Blue Diamond
NFA	Dynamic Yellow
NGA	Super Red
NHA	Blue Sapphire
NJA	Lime Green

Engine Number

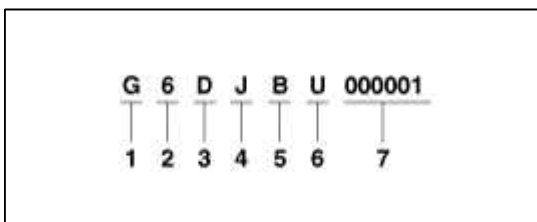


1. Engine fuel
 - G : Gasoline
2. Engine range
 - 4 : 4 cycle 4 cylinder
 - 6 : 4 cycle 6 cylinder
3. Engine development order
 - D : Lambda engine
 - K : Theta engine
4. Engine capacity
 - J : Lambda 3778 cc (Lambda-II GDI)
 - F : Theta-II 1998 cc (Theta-II T-MPI)
5. Production year
 - B : 2011, C : 2012, D : 2013, E : 2014 ...
6. Plant of production
 - A : Asan (Korea)
 - B : Beijing (China)
 - H : Hwasung (Korea)
 - K : Montgomery (U.S.A)
 - M : Chennai (India)
 - P : Poseung (Korea)
 - S : Sohari (Korea)
 - T : Izmit (Turkey)
 - U : Ulsan (Korea)
 - W : Shandong (China)
 - Z : Zilina (Slovakia)
 - 1 : Yancheng (China)

7. Engine production sequence number

- 000001 ~ 999999

Transaxle Number

Automatic

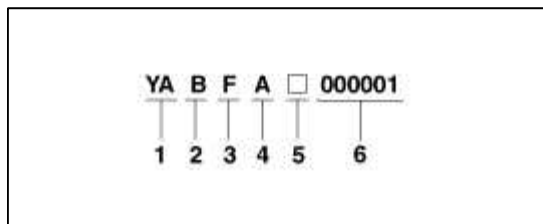

1. Model

- YA : A8LR1

2. Production year

- B : 2011, C : 2012, D : 2013, E : 2014...

3. Engine

- F : Lambda-II 3.8 GDI

- G : Theta-II 2.0 T-MP

4. Detailed classification


- A : Lambda-II 3.8 GDI / Theta-II 2.0 T-MPI

5. Spare

6. Transaxle production sequence number

- 000001 ~ 999999

Manual

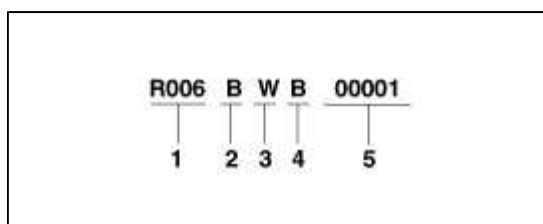

1. Assembly code

- R006 : Theta-II 2.0 T-MPI

- R007 : Lambda-II 3.8 GDI

2. Production year

- B : 2011, C : 2012, D : 2013, E : 2014...

3. Plant of production

- W : Wia (Korea)


4. Production month

- 1 : January
- 2 : February
- 3 : March
- 4 : April
- 5 : May
- 6 : June
- 7 : July
- 8 : August
- 9 : September
- A : October
- B : November
- C : December

5. Transaxle production sequence number


- 00001 ~ 99999

Warning / Caution Label Locations

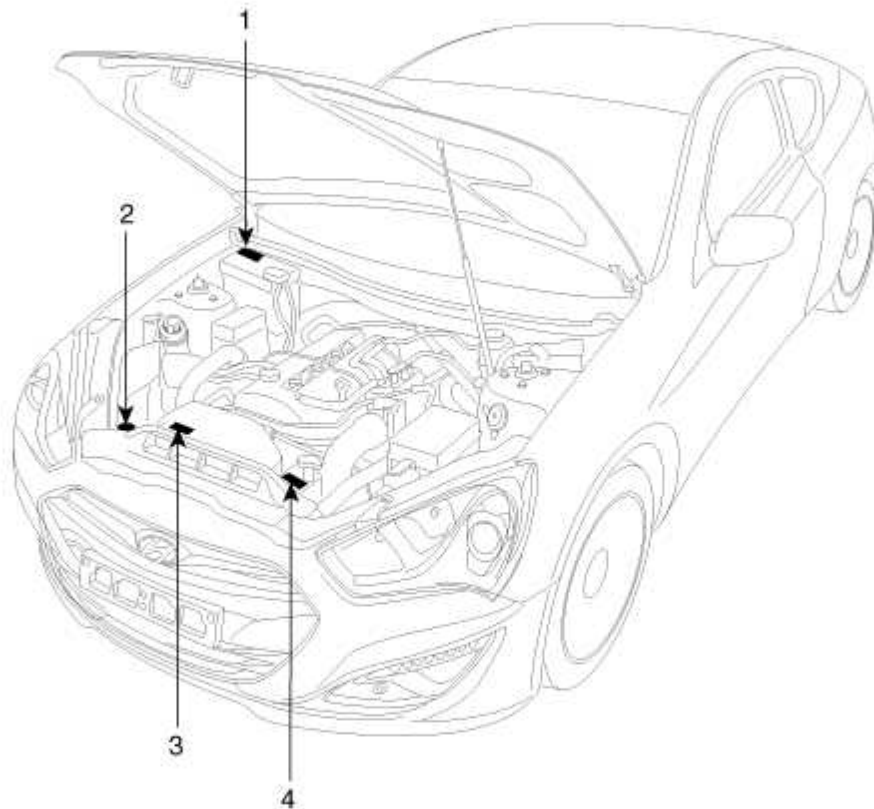

1. Radiator Cap Caution	3. Fan Caution
2. Battery Caution	4. Coolant Level Caution

Battery Caution Label Description

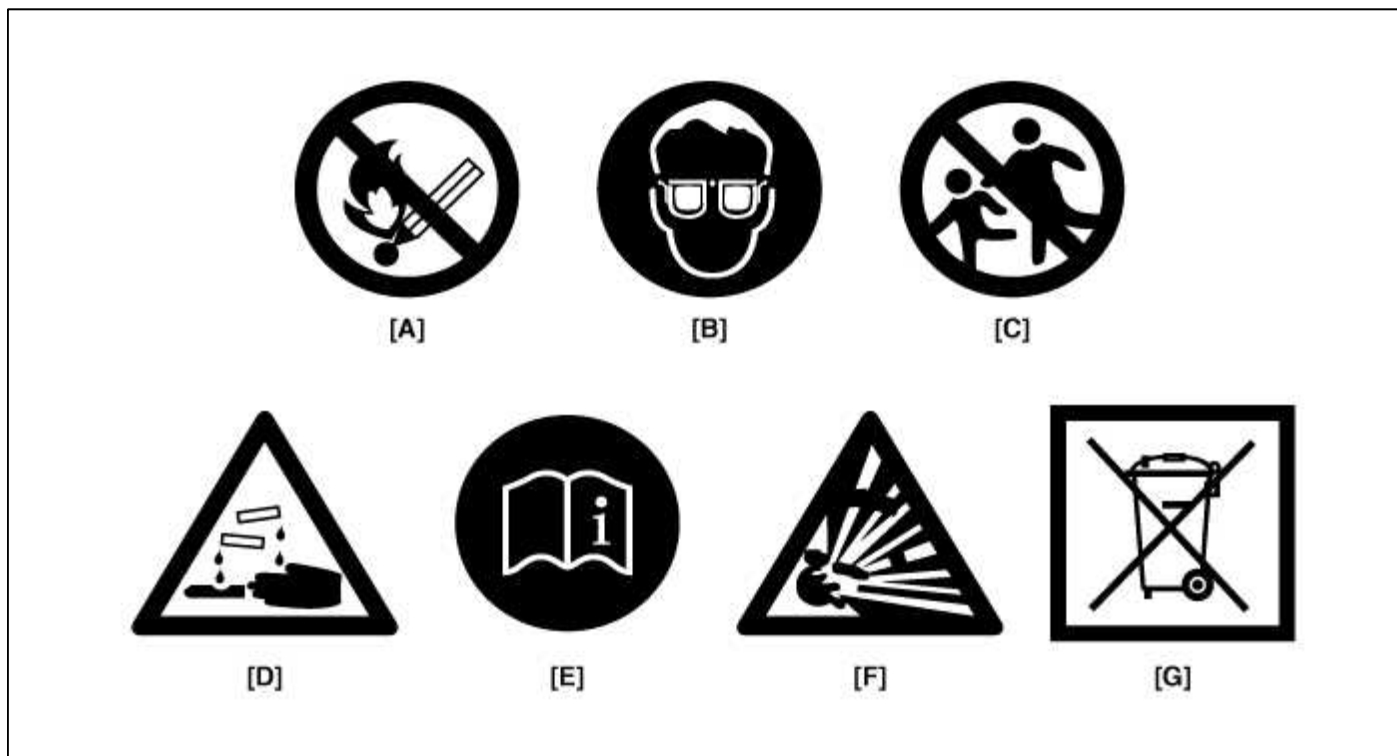**Warning / Caution Label (Cont'd)**

A.

Keep lighted cigarettes and all other flames or sparks away from the battery.

B.

Wear eye protection when charging or working near a battery. Always provide ventilation when working in an enclosed space.

- When lifting a plastic-cased battery, excessive pressure on acid to leak resulting in personal injury. Lift with a battery carrier or with your hands on opposite corners.
- Never attempt to change the battery when the battery cables are connected.
- The electrical ignition system works with high voltage.

Never touch these components with the engine running or the ignition switched on.

C.

Keep batteries out of the reach of children because batteries contain highly corrosive SULFURIC ACID. Do not allow battery acid to contact your skin, eyes, clothing or paint finish.

D.

If any electrolyte gets into your eyes, flush your eyes with clean water for at least 15 minutes and get immediate medical attention. If possible, continue to apply water with a sponge or cloth until medical attention is received. If electrolyte gets on your skin, thoroughly wash the contacted area. If you feel a pain or a burning sensation, get medical attention immediately.

E.

Always read the following instructions carefully when handling a battery.

F.
Hydrogen, which is a highly combustible gas, is always presents in battery cells and may explode if ignited.

G.
An improperly disposed battery can be harmful to the environment and human health.
Always confirm local regurations for battery disposal.

Handling And Storage The Battery

Battery Itself	<ul style="list-style-type: none"> • Batteries should be stored in cool, dry (27 degrees Celsius) places and out of direct sunlight. • MF batteries are tightly sealed to prevent acid leakage. However, tilting the battery to an angle of 45 degrees can cause acid to leak through the vents on the sides. Therefore, batteries should always be stored in their upright positions. Prevent placing any aqueous or solid (i.e. conductors) bodies on top of the battery. • It is extremely dangerous to use tools, such as hammers, on the battery terminals when connecting cables to the mounted battery.
Battery on Vehicle	<ul style="list-style-type: none"> • When storing the vehicle for long periods of time, make sure to remove the memory fuse at junction box to prevent natural discharging. • Also, run the engine for battery charging within 1 month if the memory fuse wasn't removed from the start of vehicle storing. If the memory fuse was removed, run the engine for battery charging within 3 months from the start of vehicle storing.

NOTE

After reconnecting or recharging a discharged battery, the ESC OFF indicator may illuminate. In this case, turn the handle half way to the left and right whilst the ignition switch is in the ON position. Then, restart the engine after the ignition is OFF. The ESC OFF indicator may turn OFF. If the ESC OFF indicator does not turn OFF, have the system checked referring to DTC. (Refer to the BR group.)

Lift And Support Points

WARNING


When heavy rear components such as suspension, fuel tank, spare tire, tailgate and trunk lid are to be removed, place additional weight in the luggage area before hoisting. When substantial weight is removed from the rear of the vehicle, the center of gravity may change and cam cause the vehicle to tip forward on the hoist.

NOTE

- Since each tire/wheel assembly weights approximately 30lbs (14kg), placing the front wheels in the luggage area can assist with the weight distribution.
- Use the same support points to support the vehicle on safety stands.

1. Place the lift blocks under the support points as shown in the illustration.
2. Raise the hoist a few inches (centimeters) and rock the vehicle to be sure it is firmly supported.

3. Raise the hoist to full height to inspect the lift points for secure support.

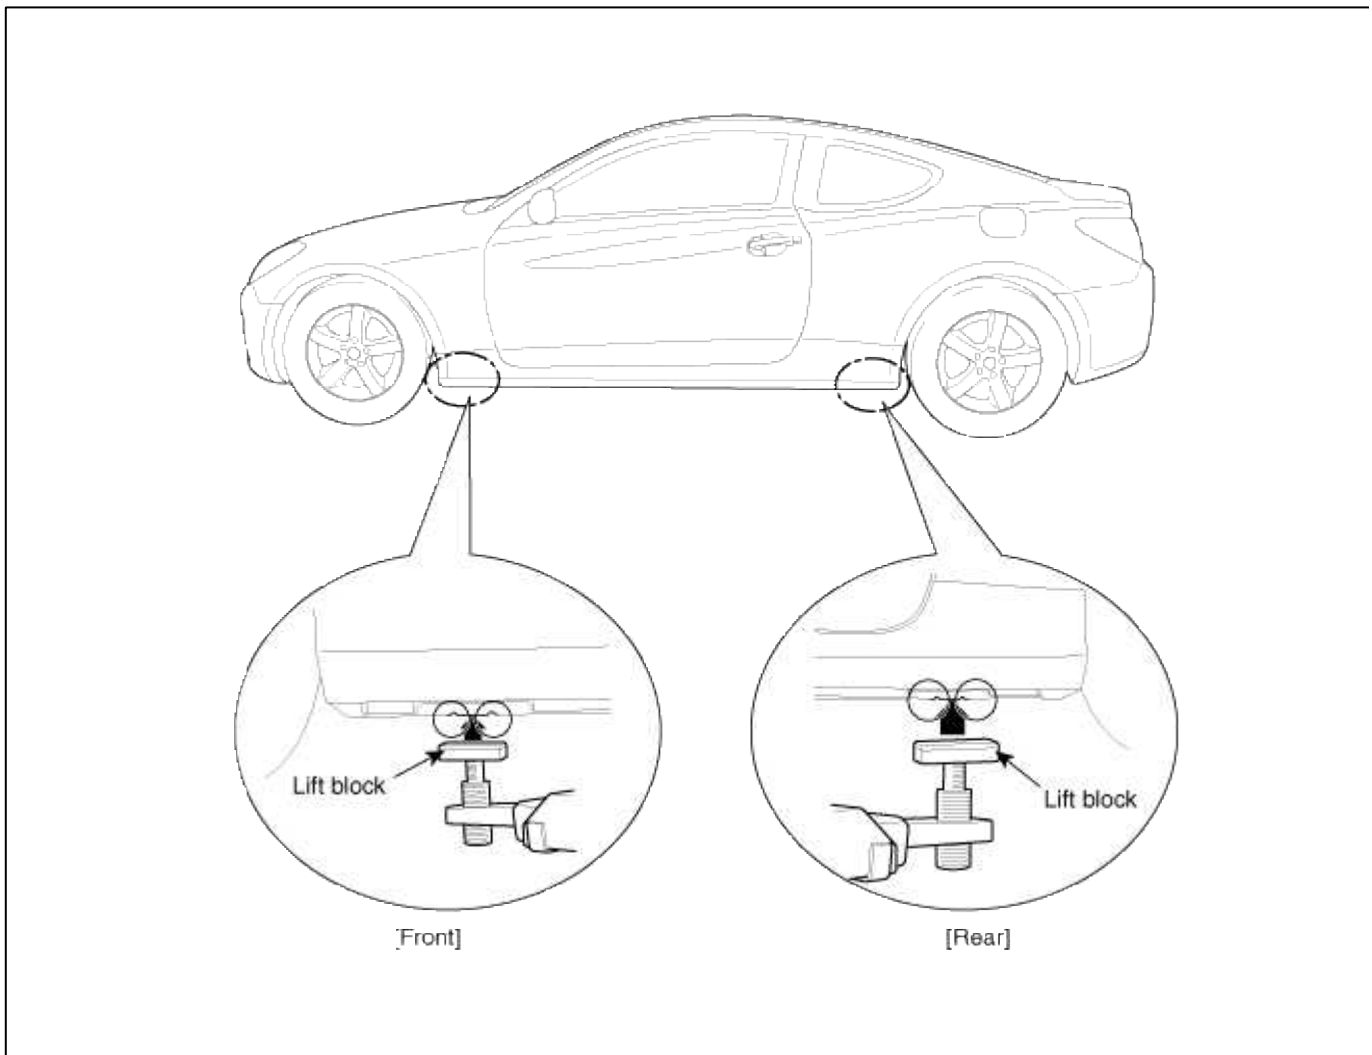

Towing

If the vehicle needs to be towed, call a professional towing service. Never tow vehicle with just a rope or chain. It is very dangerous.

Emergency Towing

There are three popular methods of towing a vehicle :

- The operator loads the vehicle on the back of truck. This is best way of transporting the vehicle.
- The tow truck uses two pivoting arms that go under the tires of the driving axle and lift them off the ground. The other two wheels remain on the ground.
- The tow truck uses metal cables with hooks on the ends. These hooks go around parts of the frame or suspension, and the cables lift that end of the vehicle off the ground. The vehicle's suspension and body can be seriously damaged if this method of towing is attempted.

If the vehicle cannot be transported by flat-bed, should be towed with the wheels of the drivig axle off the ground and do the following :

Manual Transaxle

- Release the parking brake.
- Shift the Transaxle to neutral

Automatic Transaxle

- Release the parking brake.
- Start the engine.
- Shift to [D] position, then [N] position.

- Turn off the engine.

CAUTION

- The vehicle equipped with full-time 4WD should be only transported on a flat-bed.
- Improper towing preparation will damage the transaxle. follow the above procedure exactly. If you cannot shift the transaxle or start the engine(automatic transaxle), your vehicle must be transported on a flatbed.
- It is the best to tow vehicle no farther than 30km (19miles), and keep the speed below 50km/h (30mph). (For the full-time 4WD vehicle, limit the towing to 1.5km (1mile) and 15km/h (10mph)
- Trying to lift or tow your vehicle by the bumpers will cause serious damage. The bumpers are not designed to support the vehicle's weight.





Front :



Rear :



Tightening Torque Table Of Standard Parts

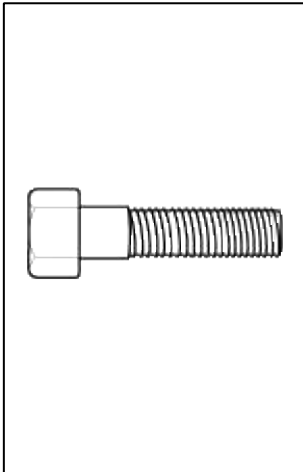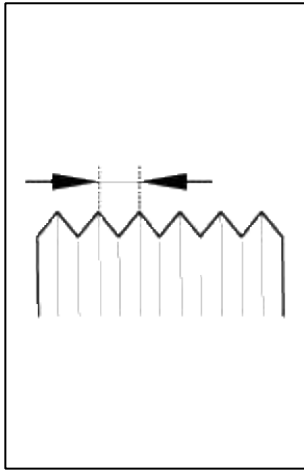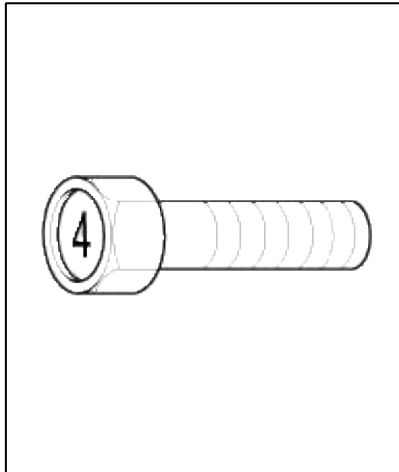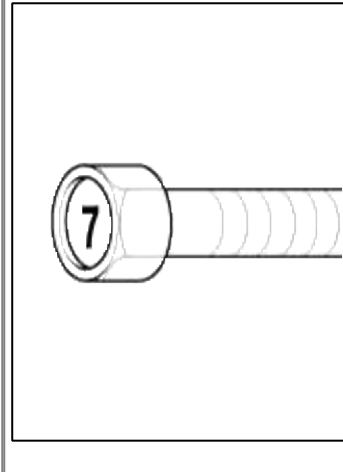Bolt nominal diameter (mm)	Pitch (mm)	Torque Nm (kg.cm, lb.ft)	
		Head Mark 4	Head Mark 7
			
M5	0.8	3 ~ 4 (30 ~ 40, 2.2 ~ 2.9)	5 ~ 6 (50 ~ 60, 3.6 ~ 4.3)
M6	1.0	5 ~ 6 (50 ~ 50, 3.6 ~ 4.3)	9 ~ 11 (90 ~ 110, 6.5 ~ 7.9)
M8	1.25	12 ~ 15 (120 ~ 150, 9 ~ 11)	20 ~ 25 (200 ~ 250, 14.3 ~ 18.0)
M10	1.25	25 ~ 30 (250 ~ 300, 18 ~ 22)	30 ~ 50 (300 ~ 500, 22 ~ 36)
M12	1.25	35 ~ 45 (350 ~ 450, 25 ~ 33)	60 ~ 80 (600 ~ 800, 43 ~ 58)
M14	1.5	75 ~ 85 (750 ~ 850, 54 ~ 61)	120 ~ 140 (1,200 ~ 1,400, 87 ~ 100)
M16	1.5	110 ~ 130 (1,100 ~ 1,300, 80 ~ 94)	180 ~ 210 (1,800 ~ 2,100, 130 ~ 150)
M18	1.5	160 ~ 180 (1,600 ~ 1,800, 116 ~ 130)	260 ~ 300 (2,600 ~ 3,000, 190 ~ 215)
M20	1.5	220 ~ 250 (2,200 ~ 2,500, 160 ~ 180)	360 ~ 420 (3,600 ~ 4,200, 265 ~ 300)
M22	1.5	290 ~ 330 (2,900 ~ 3,300, 210 ~ 240)	480 ~ 550 (4,800 ~ 5,500, 350 ~ 400)
M24	1.5	360 ~ 420 (3,600 ~ 4,200, 260 ~ 300)	610 ~ 700 (6,100 ~ 7,000, 445 ~ 505)

NOTE

- The torques shown in the table are standard values under the following conditions :
 - Nuts and bolts are made of galvanized steel bar.
 - Galvanized plain steel washers are inserted.
 - All nuts, bolts and plain washers are dry.
- The torques shown in the table are not applicable :
 - When spring washers, toothed washers and the like are inserted.
 - If plastic parts are fastened.
 - If self-tapping screws or self-locking nuts are used.
 - If threads and surfaces are coated with oil.
- If you reduce the torques in the table to the percentage indicated below, under the following conditions, it will be the standard value.
 - If spring washers are used : 85%
 - If threads and bearing surfaces are stained with oil : 85%

General Service Information**Protection Of The Vehicle**

Always be sure to cover fenders, seats, and floor areas before starting work.

CAUTION

The support rod must be inserted into the hole near the edge of the hood whenever you inspect the engine compartment to prevent the hood from falling and causing possible injury.


Make sure that the support rod has been released prior to closing the hood. Always check to be sure the hood is firmly latched before driving the vehicle.

Preparation Of Tools And Measuring Equipment


Be sure that all necessary tools and measuring equipment are available starting work.

Special Tools

Use special tools when they are required.

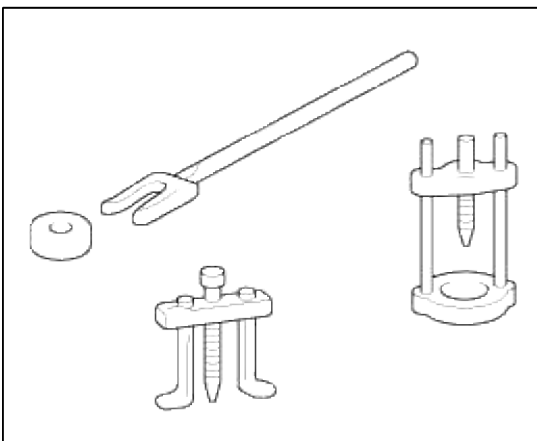**Removal Of Parts**

First find the cause of the problem and then determine whether removal or disassembly before starting the job.

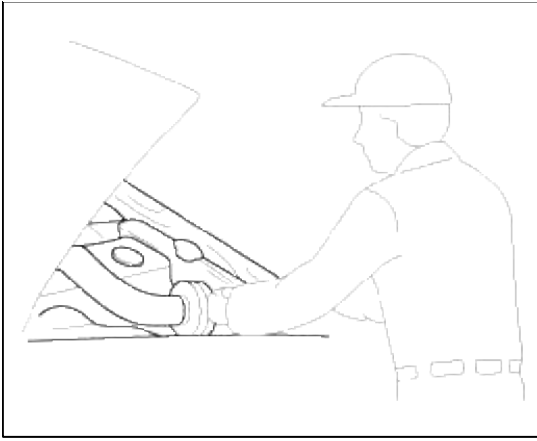


Disassembly

If the disassembly procedure is complex, requiring many parts to be disassembled, all parts should be disassembled in a way that will not affect their performance or external appearance.

1. Inspection of parts


Each part, when removed, should be carefully inspected for malfunction, deformation, damage, and other problems.

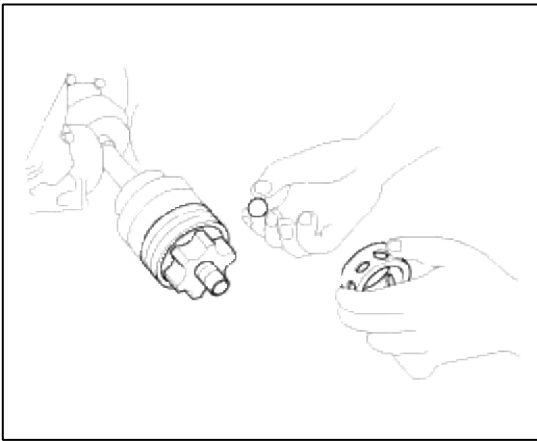

2. Arrangement of parts


All disassembled parts should be carefully arranged for effective reassembly.

Be sure to separate and correctly identify the parts to be replaced from those that will be used again.

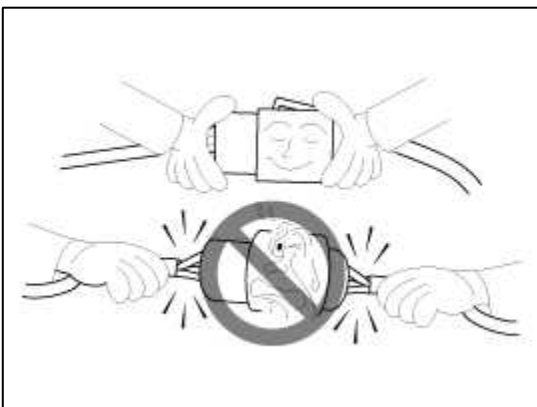

3. Cleaning parts for reuse

All parts to be used again should be carefully and thoroughly cleaned by an appropriate method.

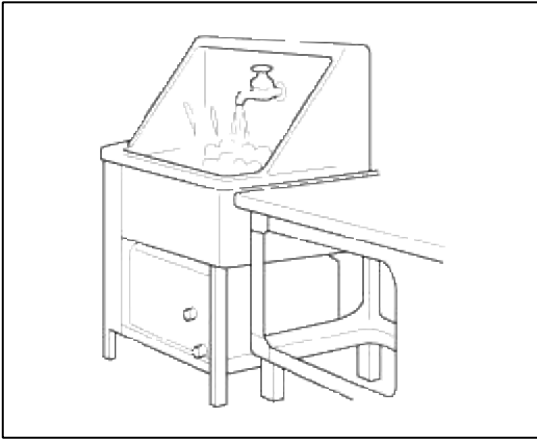

Parts

When replacing parts, use HYUNDAI genuine parts.




Replacement

Standard values, such as torques and certain adjustments, must be strictly observed in the reassembly of all parts. If removed, the following parts should always be replaced with new ones.

1. Oil seals
2. Gaskets
3. O-rings
4. Lock washers
5. Cotter pins (split pins)

6. Plastic nuts

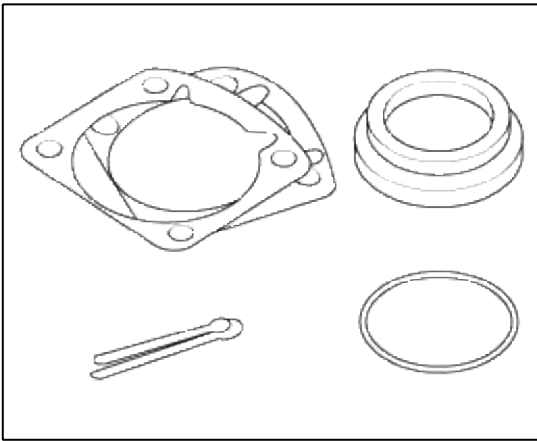


Depending on their location.

7. Sealant should be applied to gaskets.

8. Oil should be applied to the moving components of parts.

9. Specified oil or grease should be applied to the prescribed locations (oil seals, etc) before assembly.

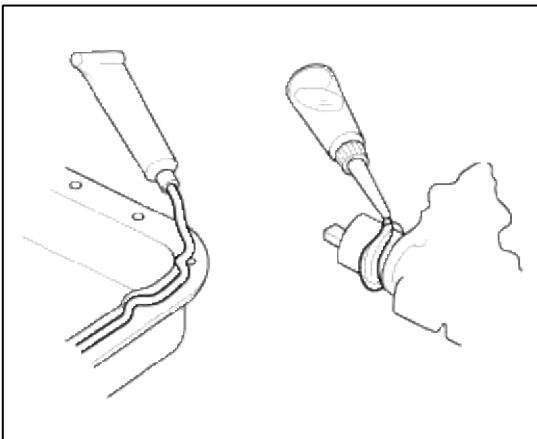


Adjustment

Use gauges and testers to adjust correctly the parts to standard values correctly.


Electrical System

1. Be sure to disconnect the battery cable from the negative (-) terminal of the battery.
2. Never pull on the wires when disconnecting connectors.
3. Locking connectors will click when the connector is secure.
4. Handle sensors and relays carefully. Be careful not to drop them against other parts.

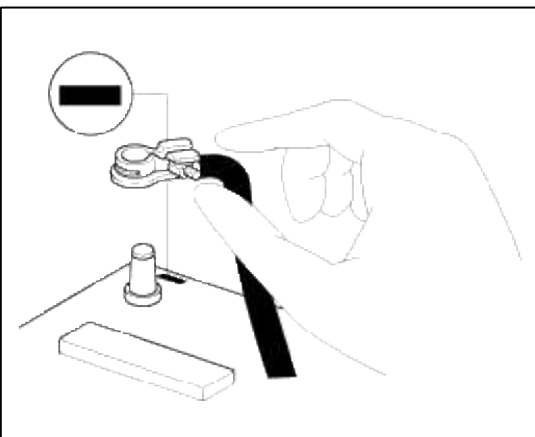

Ruber Parts And Tubes

Always prevent gasoline or from touching rubber parts or tubing.

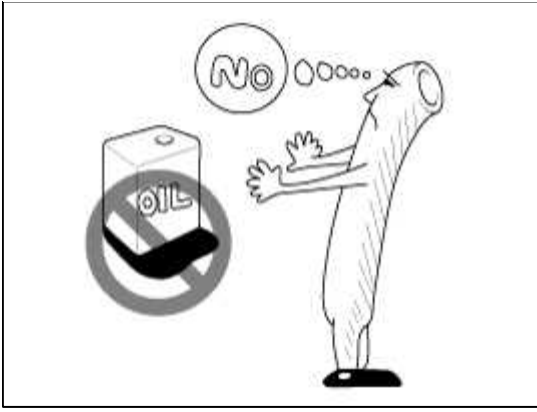


Measuring Body Dimensions

1. Basically, all measurements in this manual are taken with a tracking gauge.
2. When a measuring tape is used, check to be sure there is no elongation, twisting or bending.
3. For measuring dimensions, both projected dimensions and actual - measurement dimensions are used in this manual.

Dimensions Projected

1. These are the dimensions measured when the measurement points are projected from the vehicle's surface, and are the reference dimensions used for used for body alterations.
2. If the length of the tracking gauge probes is adjustable, measure it by lengthening one of two probes as long as the different value in height of the two surface.

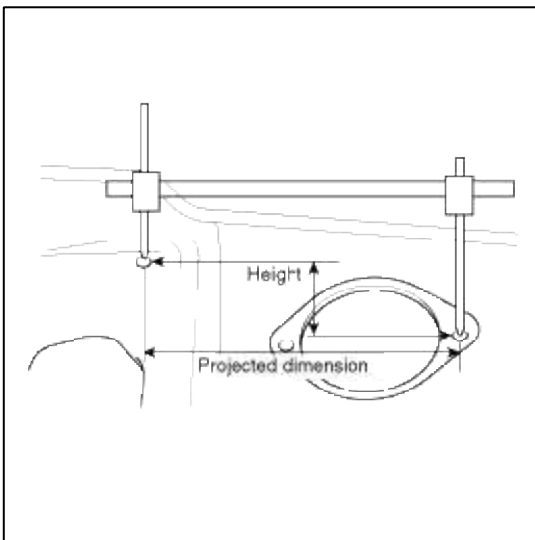


Measuring Actual Dimensions

1. These dimensions indicate the actual linear distance between measurement points, and are used as the reference dimensions when a tracking gauge is used for measurement.

2. First adjust both probes to the same length ($A=A'$) before measurement.


NOTE

Check the probes and gauge itself to make sure there is no free play.

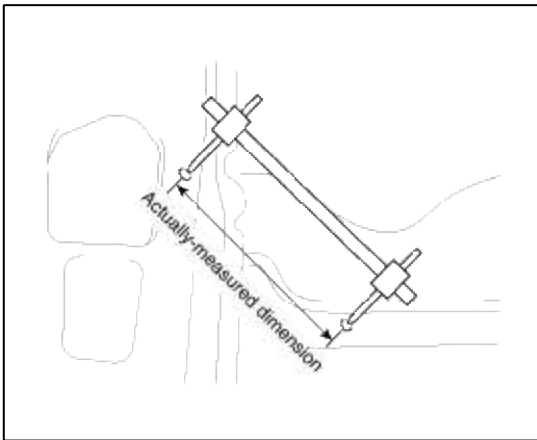

Measurement Point


Measurements should be taken at the center of the hole.

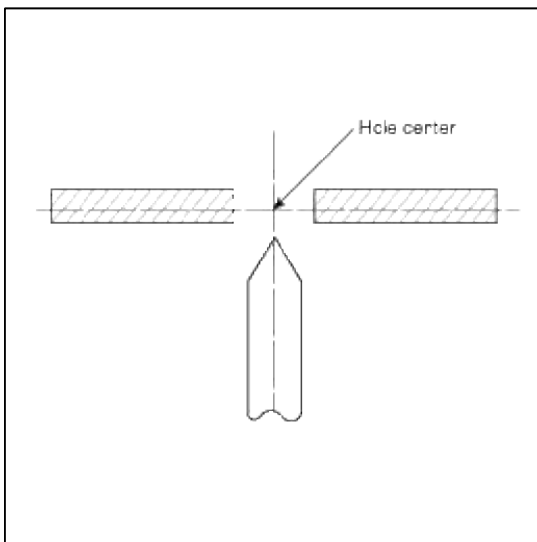

Checking Cables And Wires


1. Check the terminal for tightness.
2. Check terminals and wires for corrosion from battery electrolyte, etc.
3. Check terminals and wires for open circuits.
4. Check wire insulation and coating for damage, cracks and degrading.
5. Check the conductive parts of terminals for contact with other metallic parts (vehicle body and other parts).
6. Check grounded parts to verify that there is complete continuity between their attaching bolt(s) and the vehicle's body.
7. Check for incorrect wiring.
8. Check that the wiring is so clamped to the prevent contact with sharp corners of the vehicle body, etc. or hot parts (exhaust manifold, etc.)
9. Check that the wiring is clamped firmly to provide enough clearance from the fan pulley, fan belt and other rotating or moving parts.

10. Check that the wiring has a little space so that it can vibrate between fixed and moving parts such as the vehicle body and the engine.

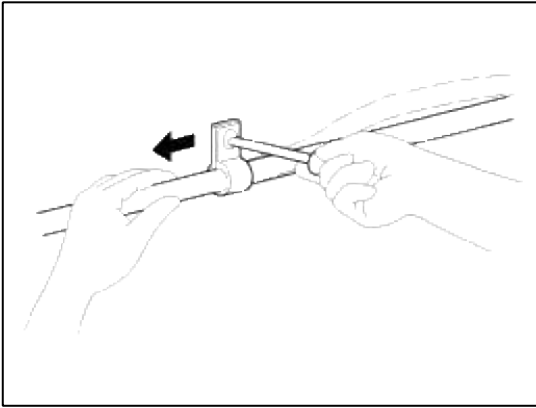

Check Fuses

A blade type fuse test taps provided to allow checking the fuse itself without removing it from the fuse box. The fuse is good if the test lamp lights up when one lead is connected to the test taps (one at a time) and the other lead is grounded. (Turn the ignition switch so that the fuse circuit becomes operative)

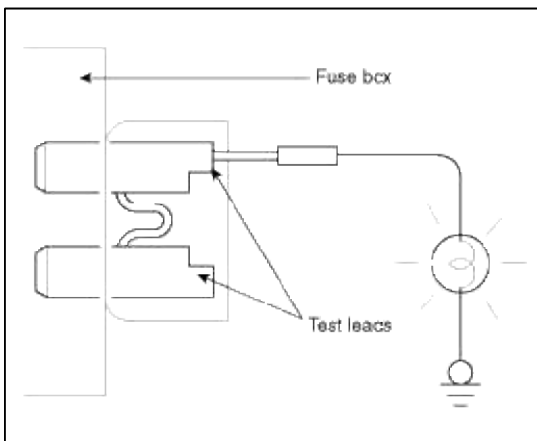


Servicing The Electrical System


1. Prior to servicing the electrical system, be sure to turn off the ignition switch and disconnect the battery ground cable.

NOTE


In the course of MFI or ELC system diagnosis, when the battery cable is removed, any diagnostic trouble code retained by the computer will be cleared. Therefore, if necessary, read the diagnostic before removing the battery cable.

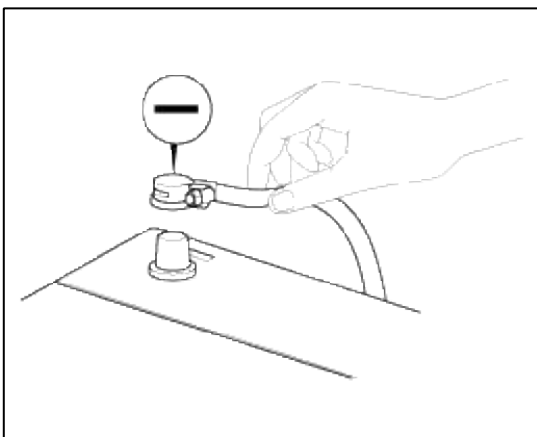


2. Attach the wiring harnesses with clamps so that there is no slack. However, for any harness which passes the engine or other vibrating parts of the vehicle, allow some slack within a range that does not allow the engine vibrations to cause the harness to come into contact with any of the surrounding parts and then secure the harness by using a clamp.

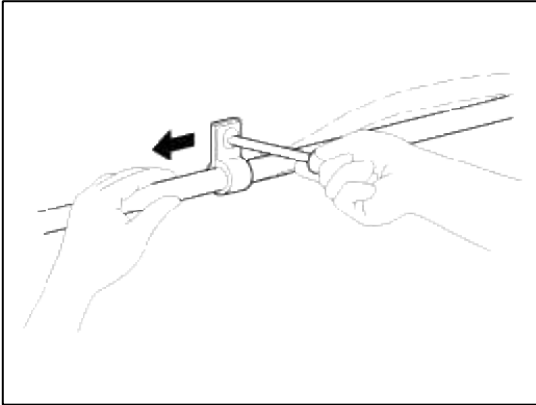


3. If any section of a wiring harness interferes with the edge of a parts, or a corner, wrap the section of the harness with tape or something similar in order to protect it from damage.

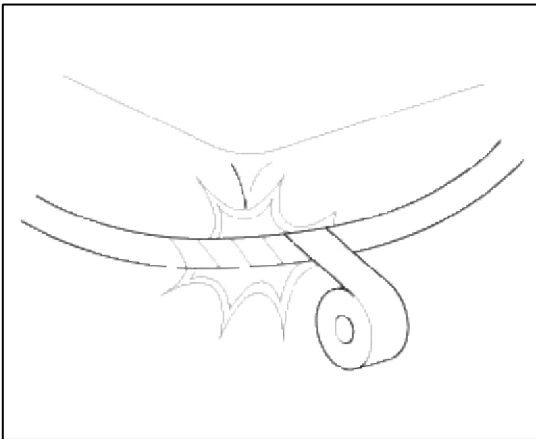


4. When installing any parts, be careful not to pinch or damage any of the wiring harness.

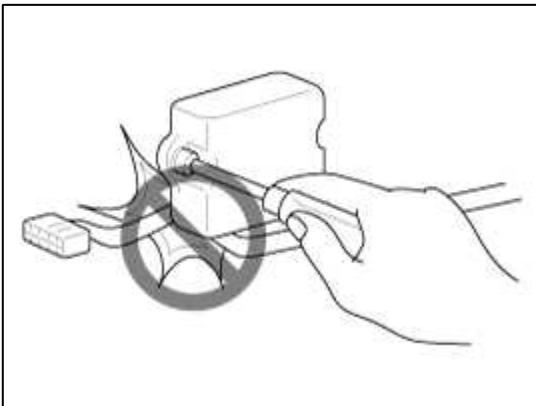


5. Never throw relays, sensors or electrical parts, or expose them to strong shock.

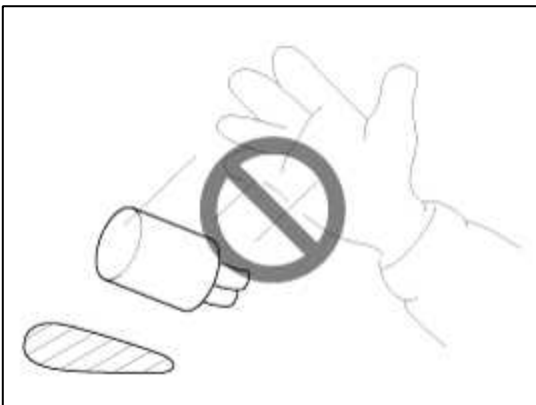


6. The electronic parts used in the computer, relays, etc. are readily damaged by heat. If there is a need for service operations that may cause the temperature to exceed 80°C (176°F), remove the electronic parts before hand.

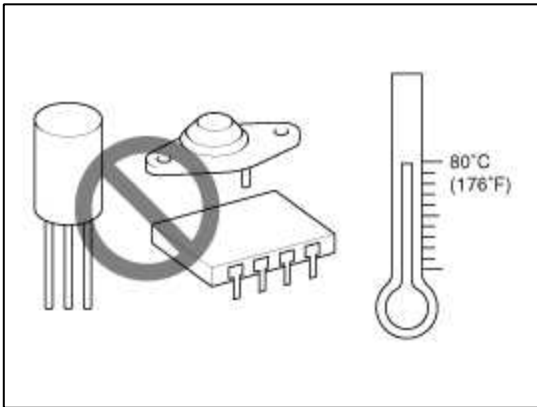


7. Loose connectors cause problems. Make sure that the connectors are always securely fastened.

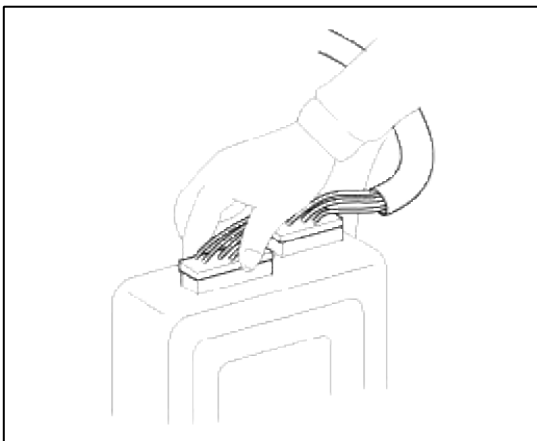


8. When disconnecting a connector, be sure to grip only the connector, not the wires.

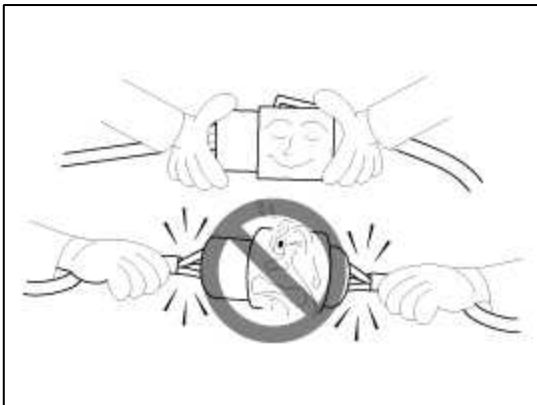


9. Disconnect connector which have catches by pressing in the direction of the arrows shown the illustration.

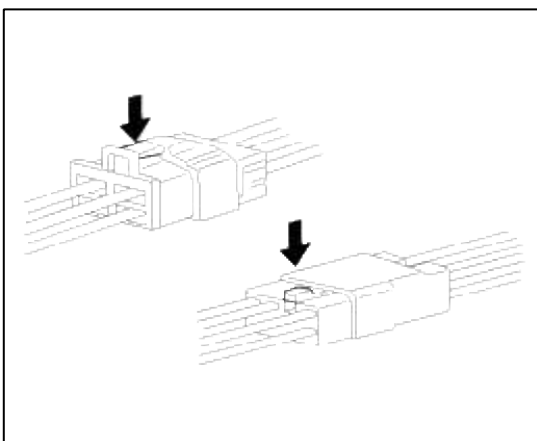

10. Connect connectors which have catches by inserting the connectors until they make a clicking sound.

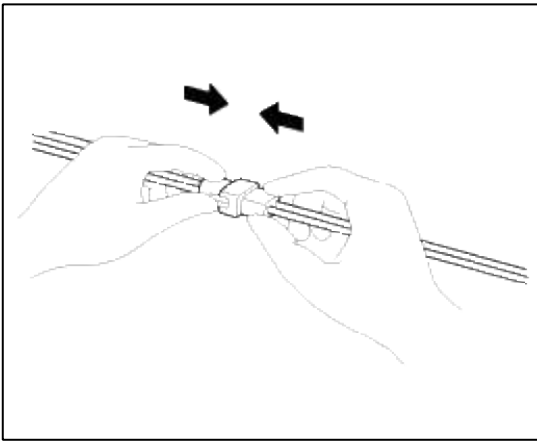

11. When using a circuit tester to check continuity or voltage on connector terminals, insert the test probe into the harness side. If the connector is a sealed connector, insert the test probe through the hole in the rubber cap until contacts the terminal, being careful not to damage the insulation of the wires.

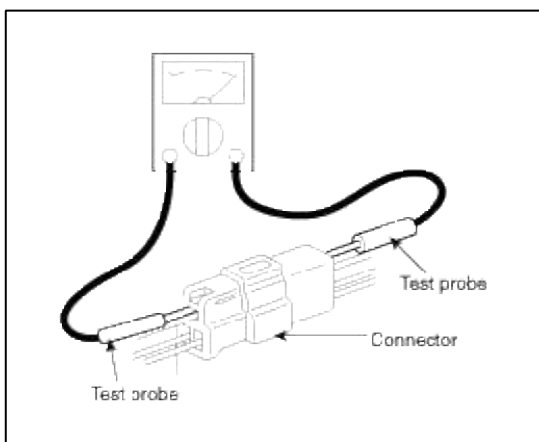

12. To avoid overloading the wiring, take the electrical current load of the optional equipment into consideration, and determine the appropriate wire size.

Nominal size	SAE gauge No.	Permissible current	
		In engine compartment	Other areas
0.3mm ²	AWG 22	-	5A
0.5mm ²	AWG 20	7A	13A
0.85mm ²	AWG 18	9A	17A
1.25mm ²	AWG 16	12A	22A
2.0mm ²	AWG 14	16A	30A
3.0mm ²	AWG 12	21A	40A
5.0mm ²	AWG 10	31A	54A

Precautions For Catalytic Converter

CAUTION

If a large amount of unburned gasoline flow into the converter, it may overheat and create a fire hazard. To prevent this observe the following precautions and explain them to your customer.

1. Use only unleaded gasoline.
2. Do not run the engine while the car is at rest for a long time. Avoid running the engine at fast idle for more than 10 minutes and idle speed for more than 20 minutes.

3. Avoid start-jump tests. Do start-jumps only when absolutely necessary. Perform this test as rapidly as possible and, while testing, never race the engine.
4. Do not measure engine compression for an extended time. Engine compression tests must be made as rapidly as possible.
5. Avoid coasting with the ignition turned and during prolonged braking.
6. Do not dispose of used catalytic converter together with parts contaminated with gasoline or oil.

GENESIS COUPE(BK) > 2013 > G 3.8 GDI > Automatic Transaxle System**Automatic Transaxle System > General Information > Specifications**

Specifications

Item		Specifications
Transmission type		A8LR1
Engine model		Gasoline 3.8 GDI
Torque converter type		3-element, 1-stage, 2-phase type
Oil pump system		Internal gear type
Friction elements		Clutch: 4EA
		Brake: 2EA
		OWC : 1EA
Planetary gear		3EA
Gear ration	1st	3.964
	2nd	2.468
	3rd	1.61
	4th	1.176
	5th	1
	6th	0.832
	7th	0.652
	8th	0.565
	Reverse	2.273
Final gear ratio		4.181
Accumulator		6EA
Solenoid valve		9EA
Shift lever position		4 Range (P,R,N,D)
Oil filter		1EA

* VFS: Variable Force Solenoid

Sensors

Input Speed Sensor

Type: Hall effect sensor

Specifications

Operation condition (°C)°F		((-40 ~ 150)) -40 ~ 302
Air gap(mm)in.		1.3(0.0512)
Output voltage (V)	High	1.4
	Low	0.7

Middle Speed Sensor

Type: Hall effect sensor

Specifications

Operation condition (°C)°F	((-)40 ~ 150)) -40 ~ 302	
Air gap(mm)in.	1.3(0.0512)	
Output voltage (V)	High	1.4
	Low	0.7

Output Speed Sensor

Type: Hall effect sensor

Specifications

Operation condition (°C)°F	((-)40 ~ 150)) -40 ~ 302	
Air gap(mm)in.	1.3(0.0512)	
Output voltage (V)	High	1.4
	Low	0.7

Oil Temperature Sensor

Type: Negative thermal coefficient type

Specifications

Temp.[(°C)°F]	Resistance (kΩ)
(-40)-40	139.5
(-20)-4.0	47.4
(0)32.0	18.6
(20)68.0	8.10
(40)104.0	3.80
(60)140.0	1.98
(80)176.0	1.08
(100)212.0	0.63
(120)248.0	0.38
(140)284.0	0.25
(150)302.0	0.16

Inhibitor Switch

Type: Combination of output signals from 4 terminals

Specifications

Power supply (V)	12
Output type	Pin to Pin

Solenoid Valves

Direct control VFS[UD/C, 27/B, 6/C]

Control type : Normal low type

Control Pressure kpa (kgf/cm ² , psi)	0 ~ 1569.06 (0 ~ 16,0 ~ 227.57)
Current value (mA)	0 ~ 1100
Internal resistance (Ω)	5.0 ~ 5.6

Direct control VFS[8LR/B]

Control type : Normal low type

Control Pressure kpa (kgf/cm ² , psi)	0 ~ 2108.42 (0 ~ 21.5 ~ 305.80)
Current value (mA)	0 ~ 1100
Internal resistance (Ω)	5.0 ~ 5.6

Direct control VFS[4&OD/C]

Control type : Normal high type

Control Pressure kpa (kgf/cm ² , psi)	0 ~ 1569.06 (0 ~ 16,0 ~ 227.57)
Current value (mA)	0 ~ 1100
Internal resistance (Ω)	5.0 ~ 5.6

Direct control VFS[35R/C]

Control Type : Normal high type

Control Pressure kpa (kgf/cm ² , psi)	0 ~ 2108.42 (0 ~ 21.5 ~ 305.80)
Current value (mA)	0 ~ 1100
Internal resistance(Ω)	5.0 ~ 5.6

Line Pressure Control VFS

Control type : Normal high type

Control Pressure kpa (kgf/cm ² , psi)	0 ~ 500.14 (0 ~ 5.1,0 ~ 72.54)
Current value (mA)	0 ~ 850
Internal resistance (Ω)	4.8 ~ 5.4

Damper Clutch Control VFS

Control type : Normal low type

Control Pressure kpa (kgf/cm ² , psi)	0 ~ 500.14 (0 ~ 5.1, 0 ~ 72.54)
Current value (mA)	0 ~ 850
Internal resistance (Ω)	4.8 ~ 5.4

ON/OFF Solenoid Valve

Control type : Normal low type

Control pressure kpa (kgf/cm ² , psi)	539.36 (5.5, 78.23)
Internal resistance (Ω)	10 ~ 11

Solenoid Valve Operation Table

	UD/C	4&OD/C	35R/C	27/B	8LR/B	6/C	ON/OFF
P		O		O			O
N		O	O		O		O
1	O	O	O				
2	O	O	O	O			
3	O	O					
4	O		O				
5							
6			O			O	
7			O	O			
8			O		O		
LOW	O	O	O		O		
REV		O			O		O

O : Connected status

Tightening Torques

Item	N.m	Kgf.m	lb-ft
TCM installation mounting bolt	9.8 ~ 11.8	1.0 ~ 1.2	7.2 ~ 8.7
Shift lever assembly bolt	8.8 ~ 13.7	0.9 ~ 1.4	6.5 ~ 10.1
Inhibitor switch mounting bolt	9.8 ~ 11.8	1.0 ~ 1.2	7.2 ~ 8.7
Oil drain plug	22.6 ~ 24.5	2.3 ~ 2.5	16.6 ~ 18.1
Oil check plug	22.6 ~ 24.5	2.3 ~ 2.5	16.6 ~ 18.1
Torque converter mounting bolt	45.1 ~ 52.0	4.6 ~ 5.3	33.3 ~ 38.3
Automatic transaxle upper mounting bolt (TM=>Eng)	63.7 ~ 83.4	6.5 ~ 8.5	47.0 ~ 61.5
	34.3 ~ 46.1	3.5 ~ 4.7	25.3 ~ 34.0
Automatic transaxle lower mounting bolt (Eng=>TM)	42.2 ~ 48.1	4.3 ~ 4.9	31.1 ~ 35.4
Stater motor mounting bolt	49.0 ~ 63.7	5.0 ~ 6.5	36.2 ~ 47.0
Stater motor mounting nut	42.2 ~ 53.9	4.3 ~ 5.5	31.1 ~ 39.8

Lubricants

Item	Specified lubricant	Quantity
Transaxle fluid	GS CALTEX ATF SP-IV-RR Hyundai Genuine ATF SP-IV-RR	9.6L (2.535 U.S gal., 10.14 U.S.qt., 8.45 Imp.qt.)

Automatic Transaxle System > Automatic Transaxle System > Repair procedures


EOL Input

Description


When shift shock is occurred or parts related with the transaxle are replaced, EOL should be performed.

In the following case, EOL is required.


- Transaxle assembly replacement
- TCM replacement

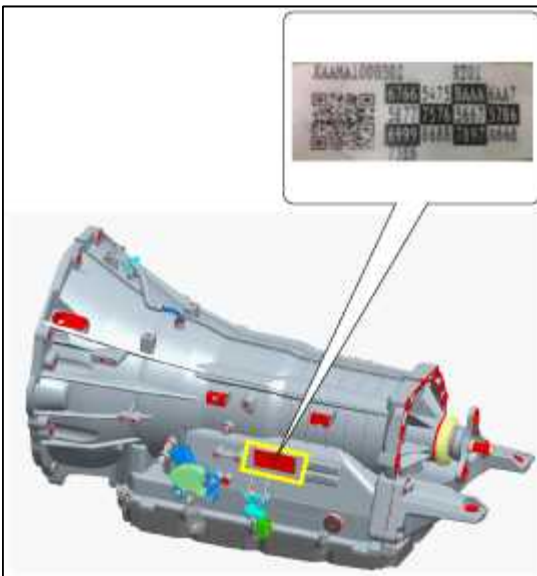Bar code location**EOL Input procedure**



- Transaxle assembly replacement

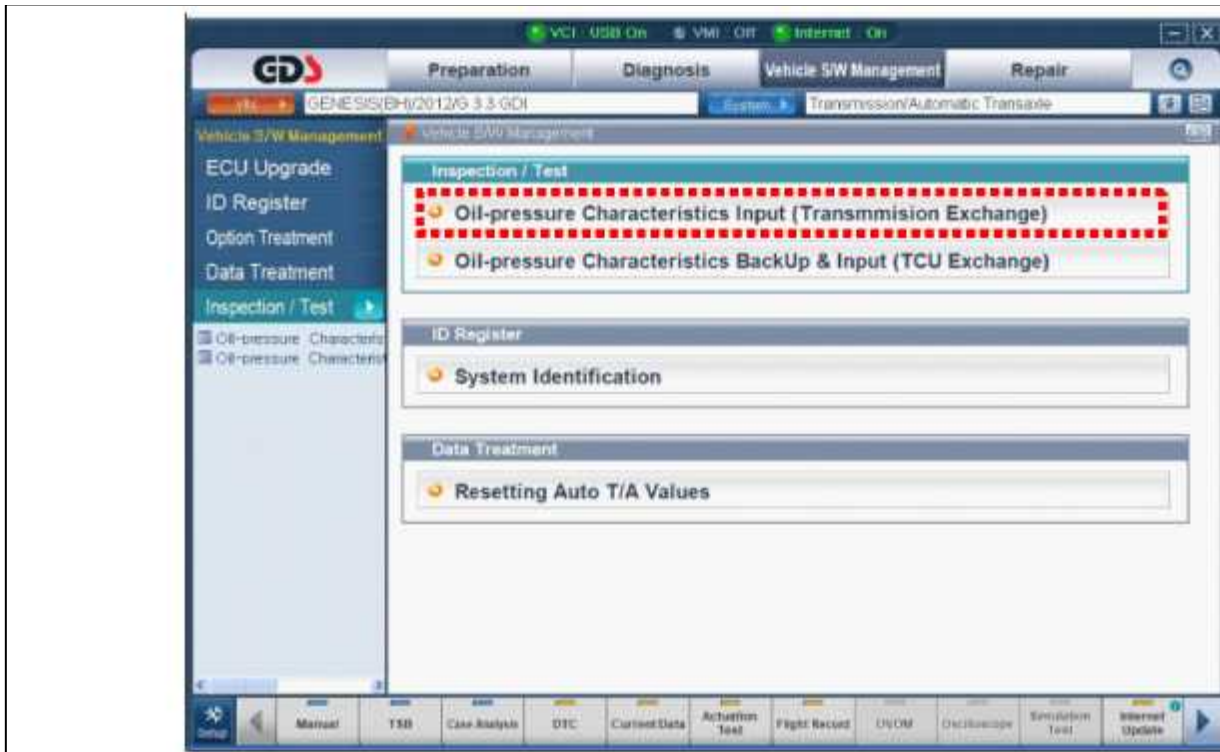



Internet : On


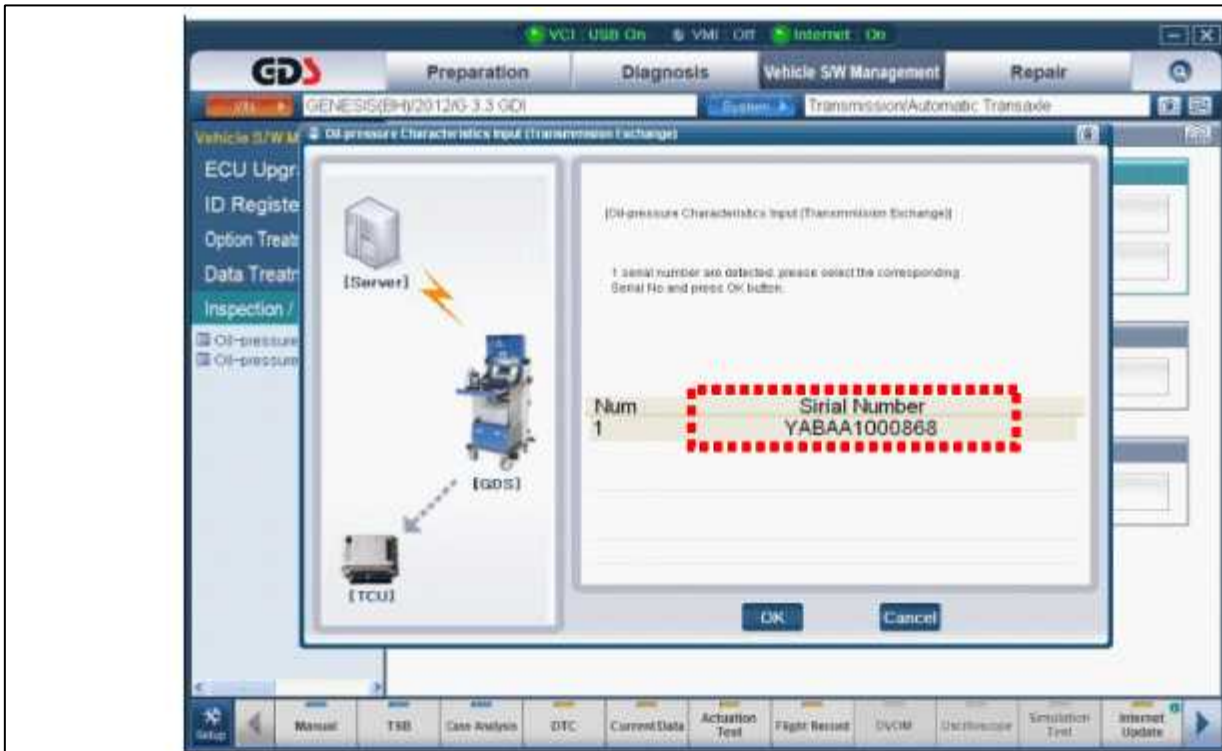




Internet :Off

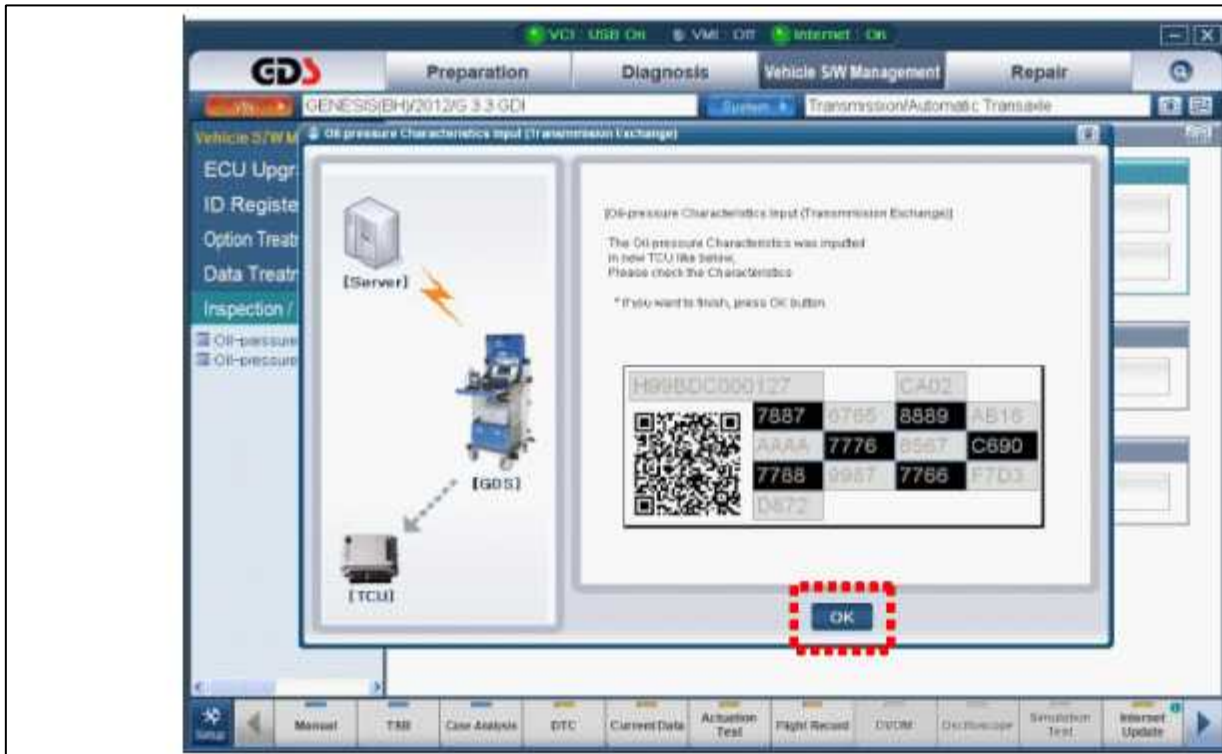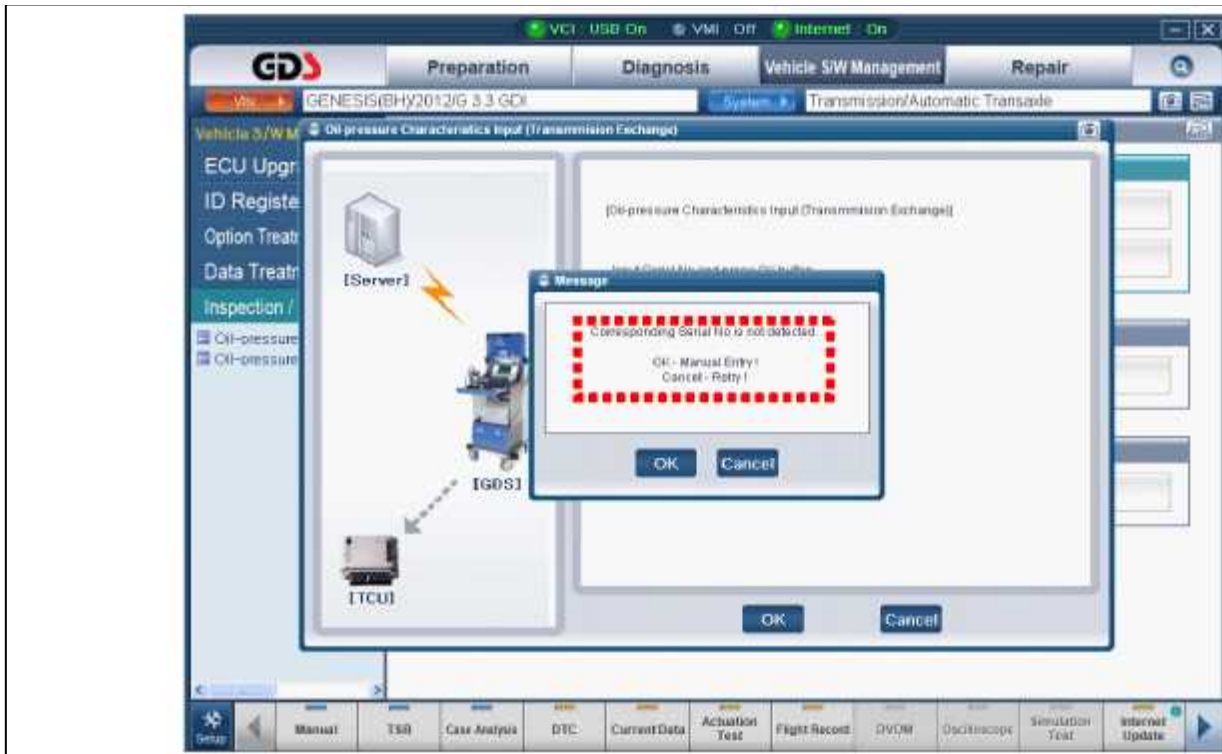


- TCM replacement

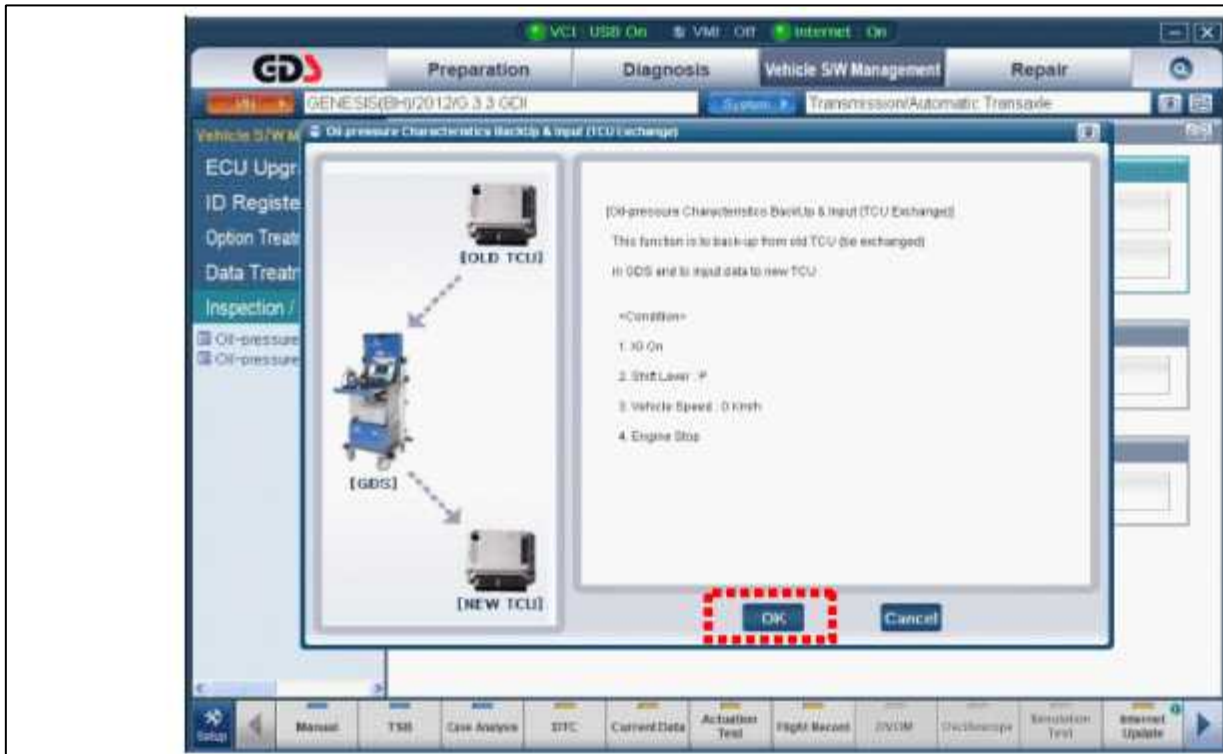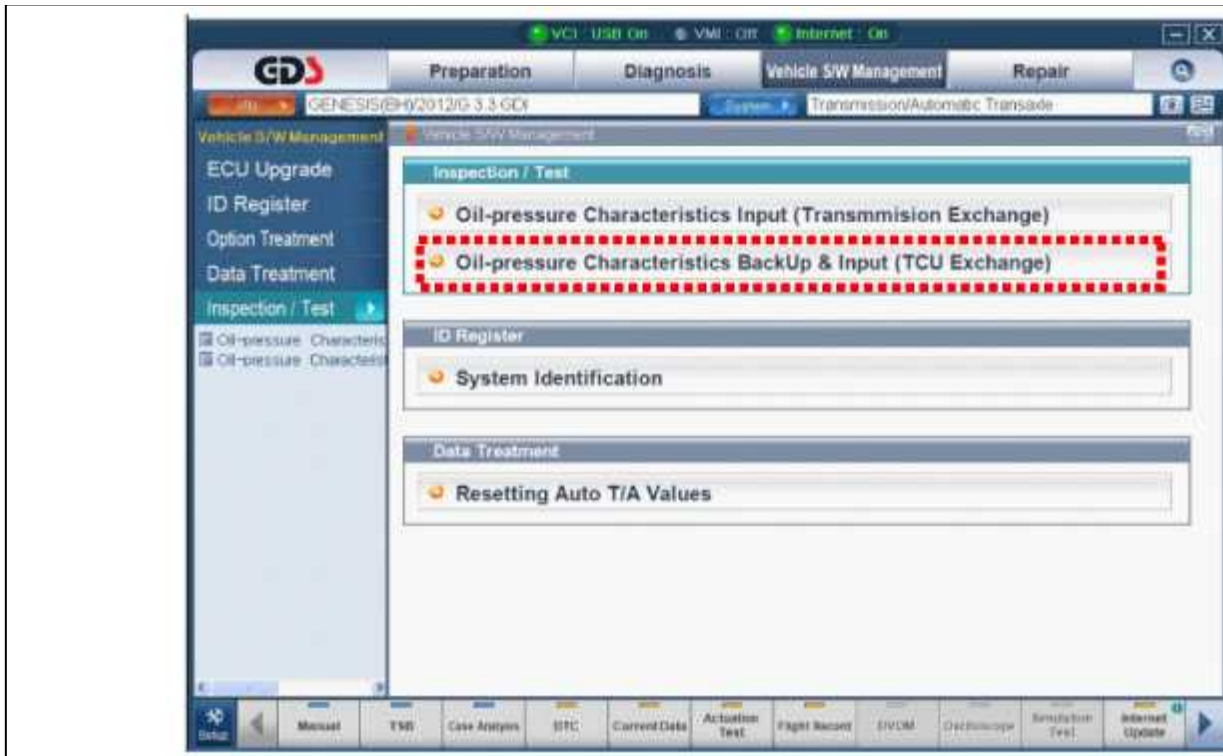

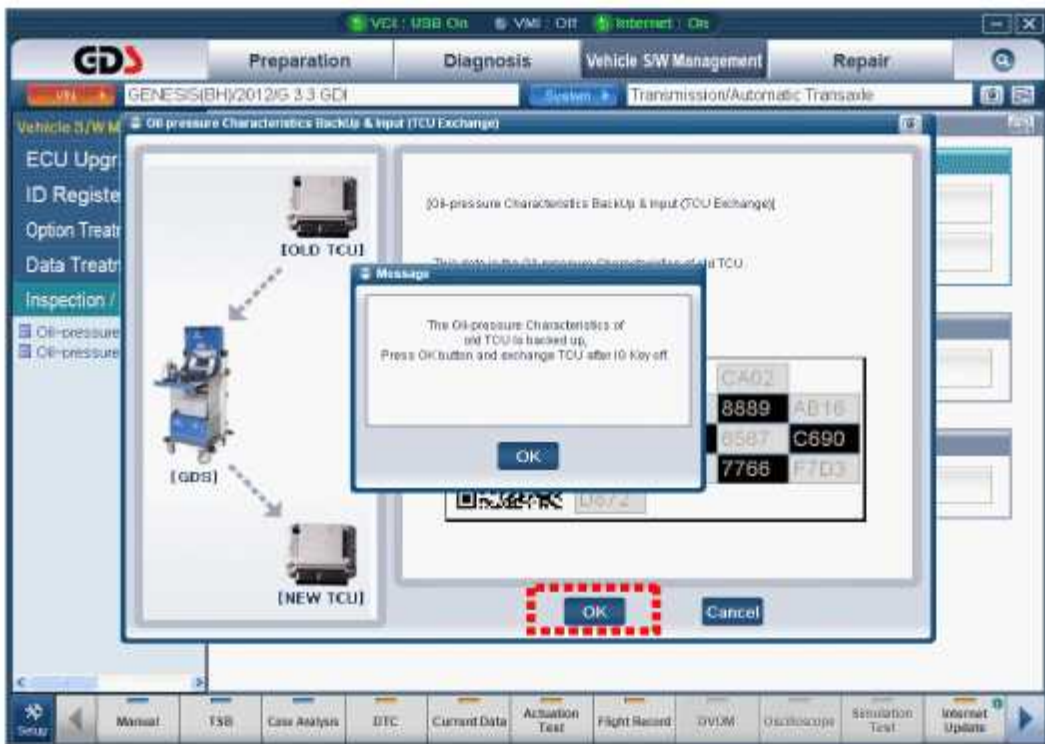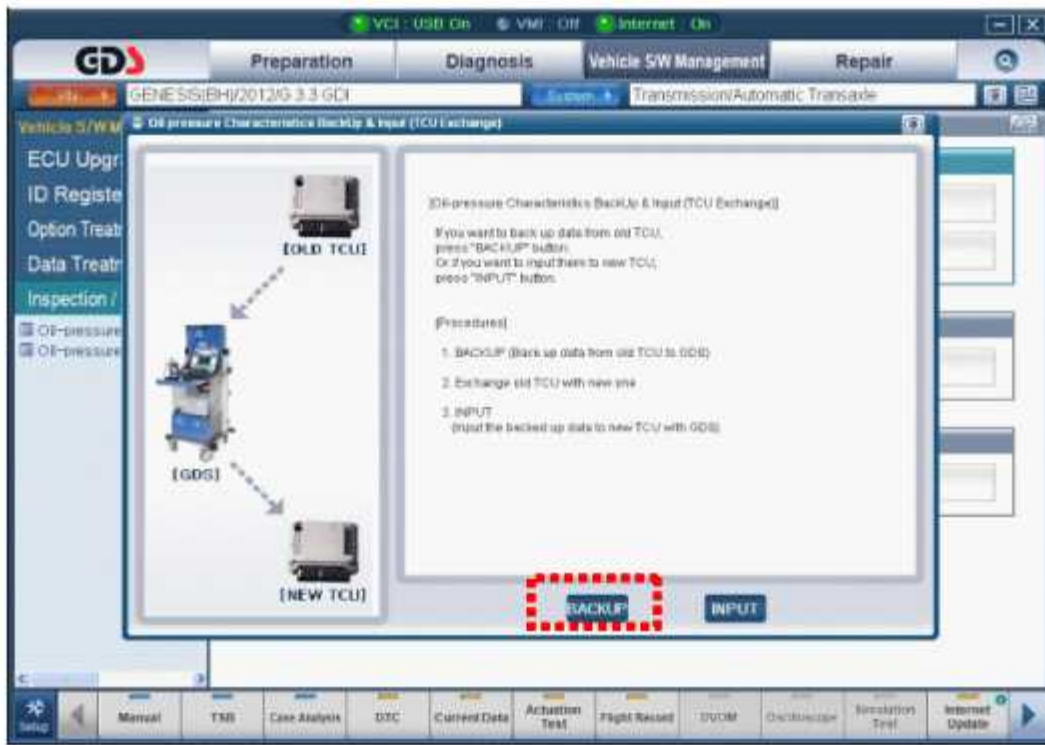


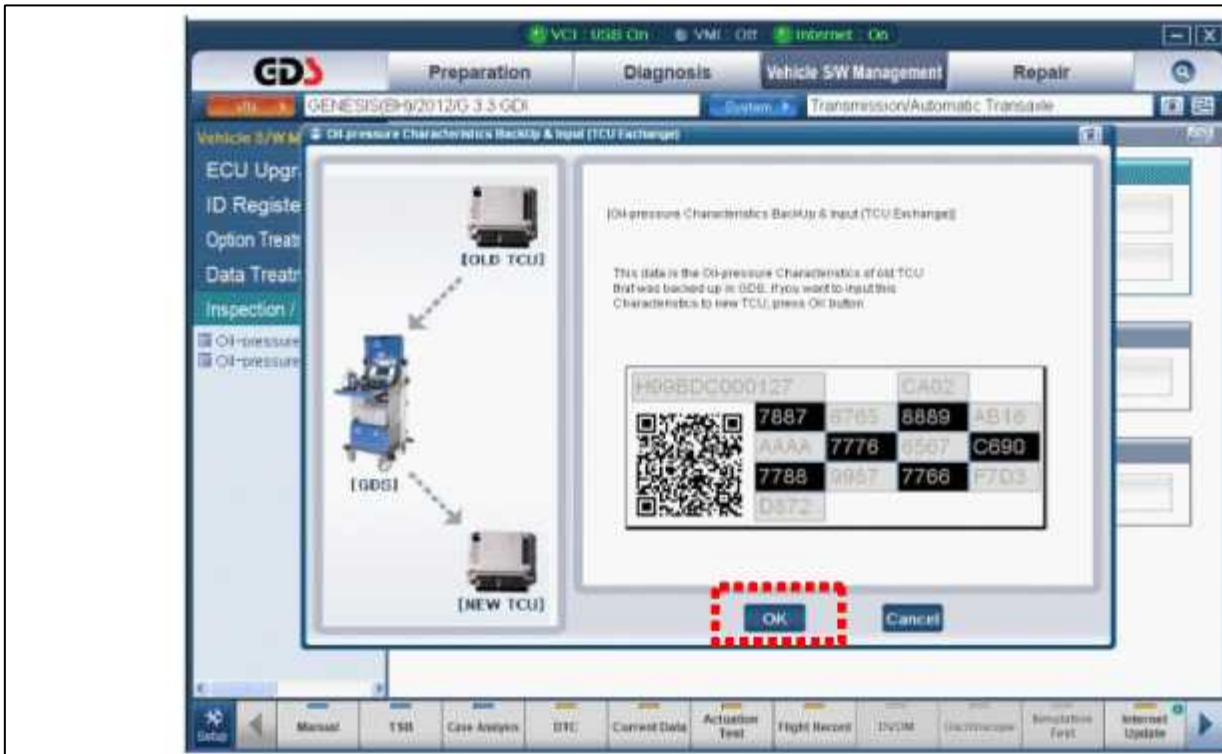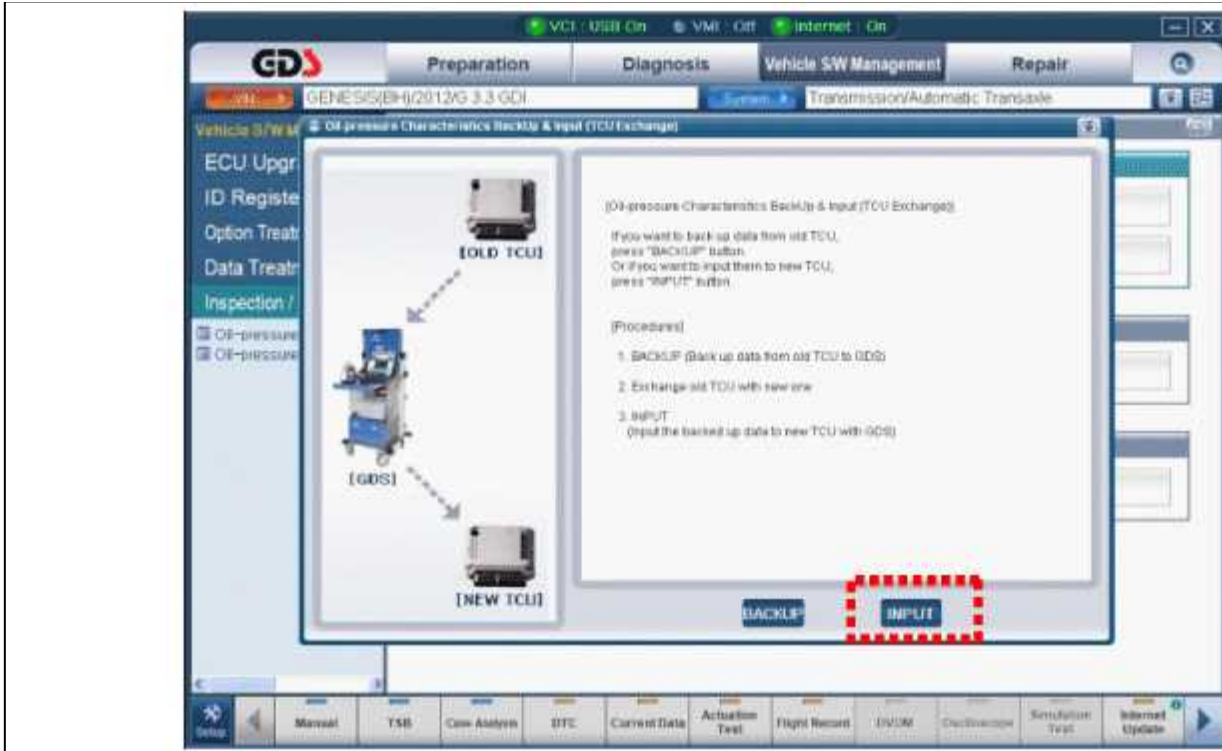

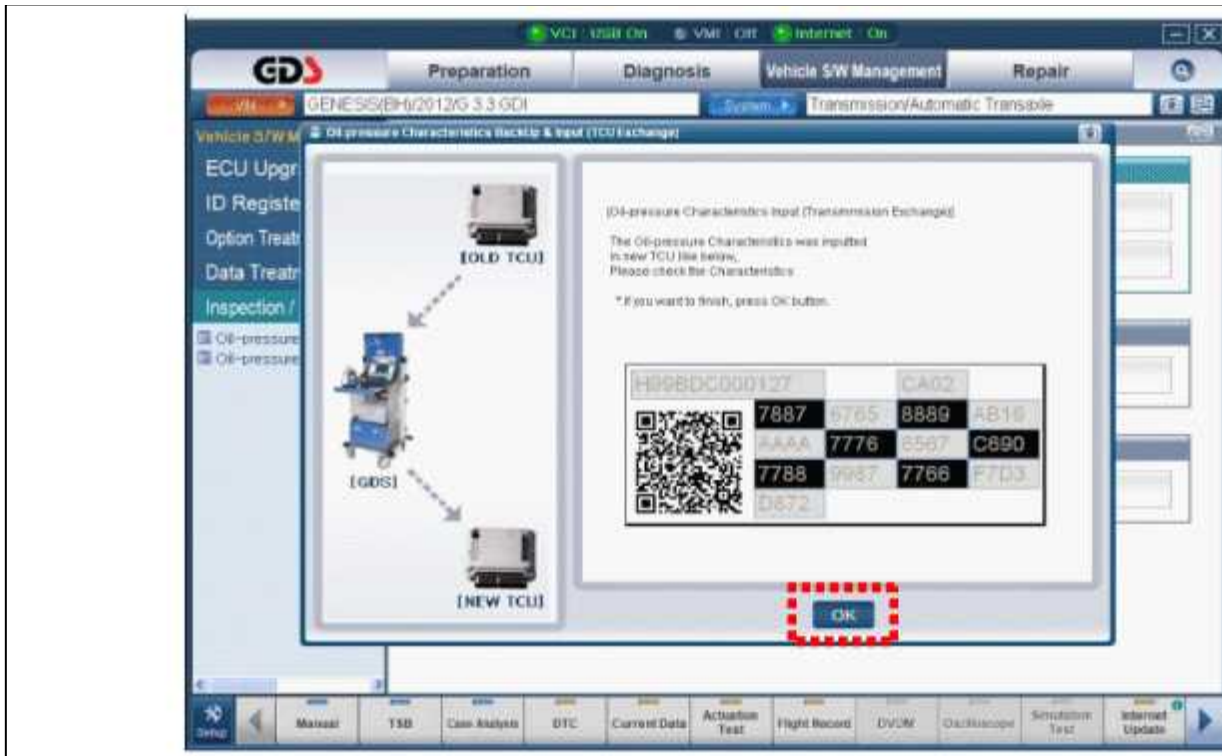

Automatic Transaxle System > Automatic Transaxle System > Automatic Transaxle > Components and Components Location

Components Location

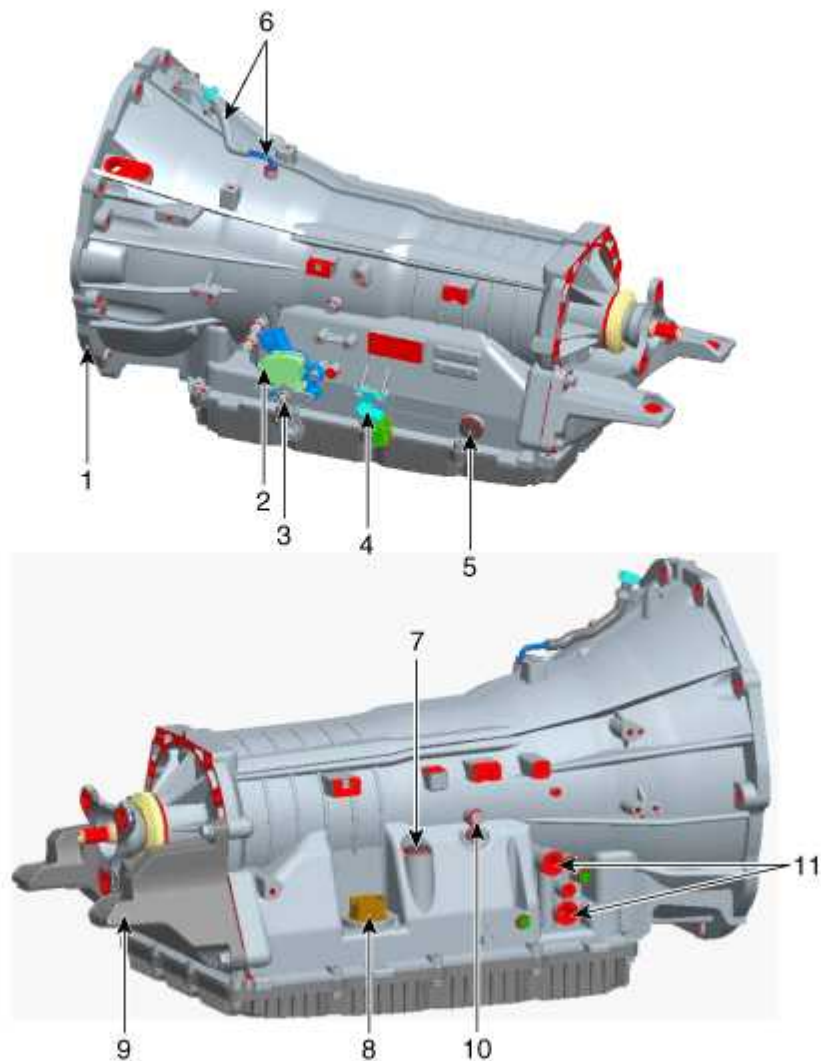


1. Automatic transmission case	7. Oil injection hall (in factory)
2. Inhibitor switch	8. E Module connector
3. Manual control lever	9. Support bracket
4. Shift cable bracket	10. Check plug
5. Oil injection hall	11. Oil cooler port
6. Air breather hose & pipe	

Automatic Transaxle System > Automatic Transaxle System > Automatic Transaxle > Repair procedures


Removal

1. Disconnect (-) terminal from the battery.


2. Remove the under cover (A).

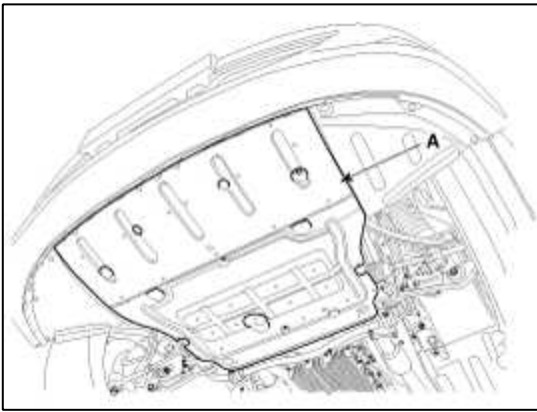


3. Remove the stay (A).

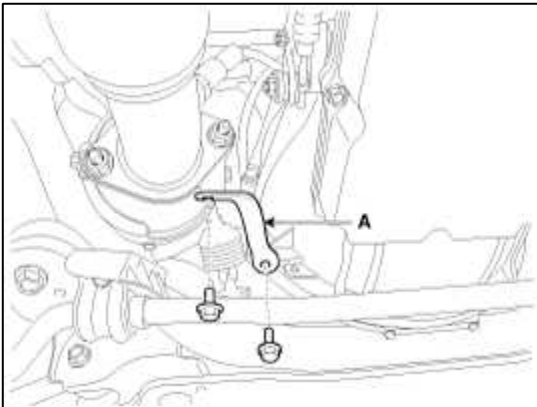

4. Remove the front stabilizer bar (A).
(Refer to "front suspension system" in SS group)

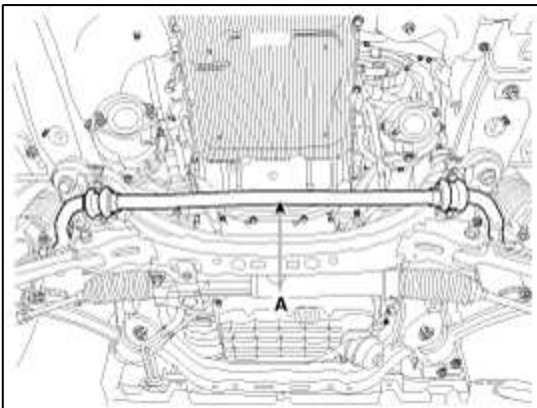

5. Disconnect the ground wire (A) by removing the bolt.

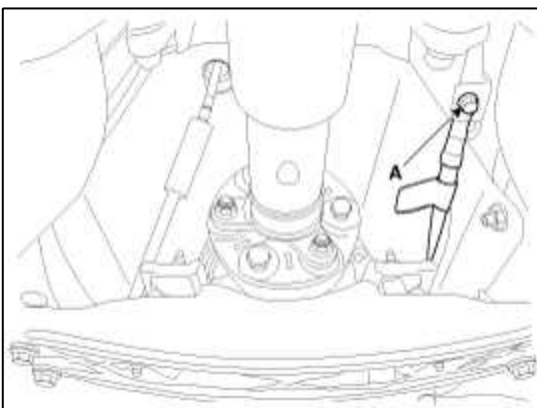


6. Remove the propellar shaft assembly.
(Refer to "Propellar shaft" in DS group)


7. Disconnect the inhibitor connector (B) and then remove the shift cable (A) by removing nut (C).
-

Tightening torque :


13.7 ~ 17.7 N.m (1.4 ~ 1.8 kgf.m, 10.1 ~ 13.0 lb-ft)

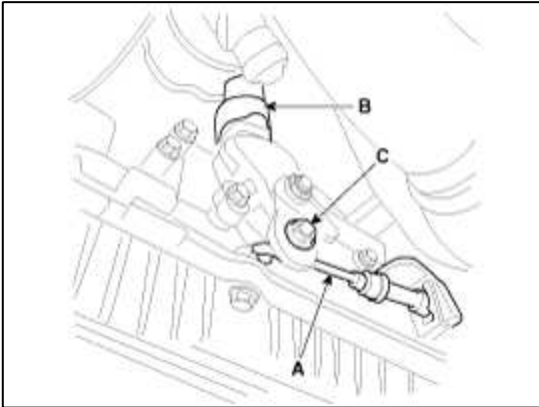


8. Disconnect the oxygen sensor (A) and then remove the wiring bracket (B,C).

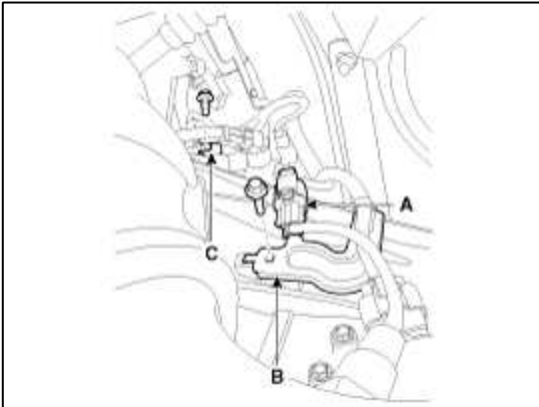


9. Remove the CKP sensor (A).

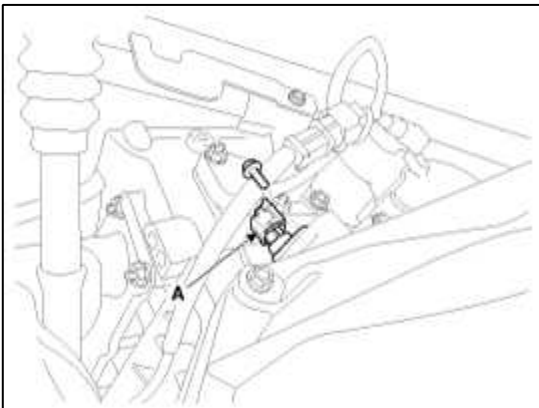


10. Disconnect the solenoid valve connector (A).

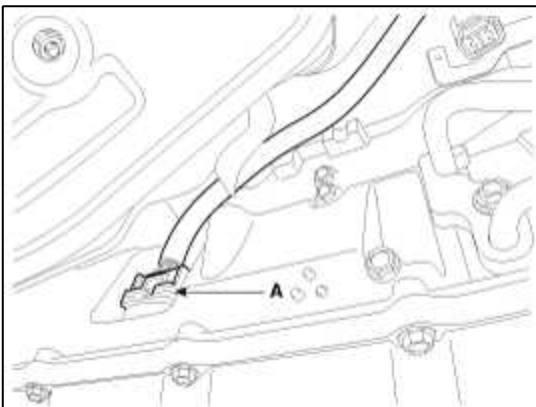


11. Disconnect the oxygen sensor (A).

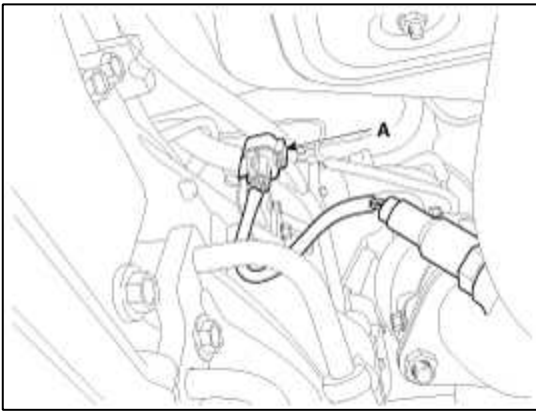


12. Remove the oxygen sensor (A) from the bracket (B) and then remove the bracket (C).

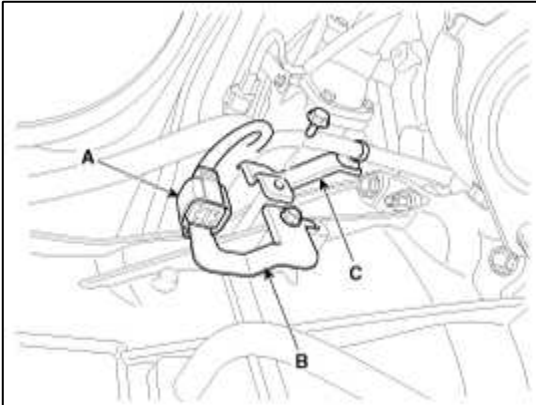

13. Remove the oil cooler tubes (A).

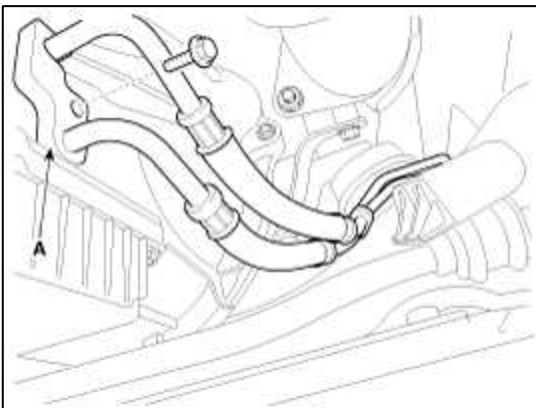


14. Remove the dust cover (A).

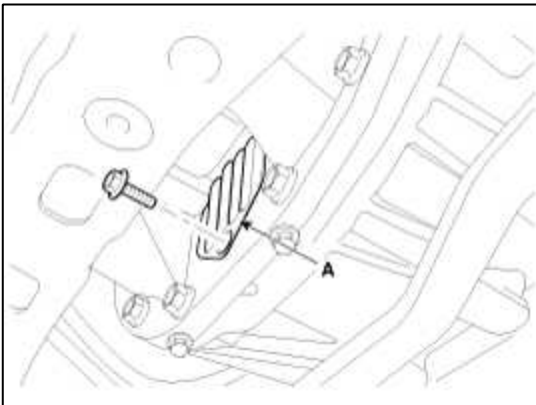

15. Remove the torque converter mounting bolts (A-6ea) by rotating the crank shaft.

Tightening torque :


45.1 ~ 52.0 N.m (4.6 ~ 5.3 kgf.m, 33.3 ~ 38.3 lb-ft)

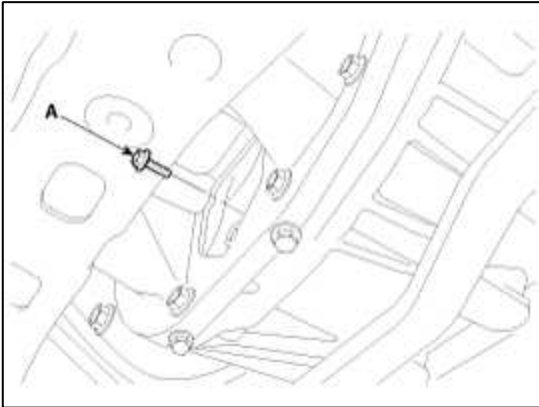

16. Using a jack support the transmission assembly.
 17. Remove the mounting bolts (A-4ea) lower in the engine side.

Tightening torque :


42.2 ~ 48.1 N.m (4.3 ~ 4.9 kgf.m, 31.1 ~ 35.4 lb-ft)

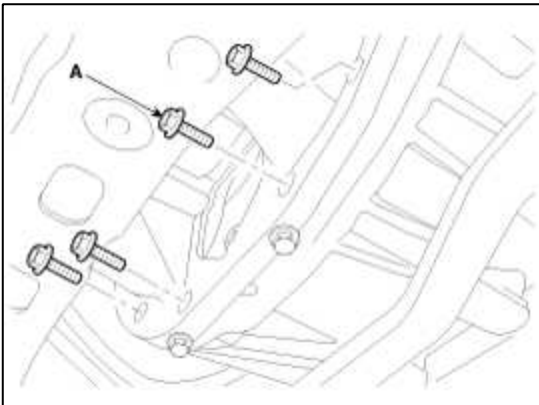

18. Remove the cross member (A) by removing bolts.

Tightening torque :

49.0 ~ 63.7 N.m (5.0 ~ 6.5 kgf.m, 36.2 ~ 47.0 lb-ft)

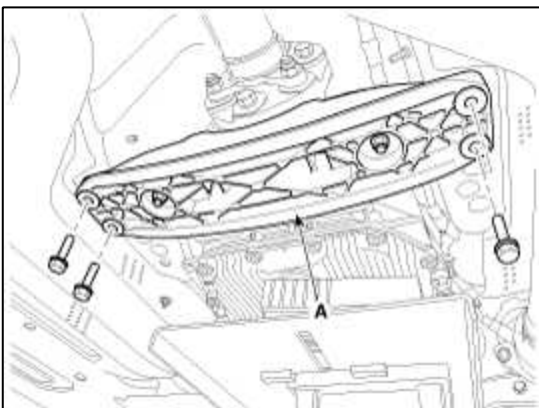

19. Remove the starter motor mounting bolts (A) and nut (B).


NOTE

Before removing one mounting bolt on the transmission side and the other bolt for the starter motor, remove the cross member and lower the transmission assembly.

Tightening torque :

(A) 50 ~ 65 N.m (5.0 ~ 6.5 kgf.m, 36.2 ~ 47.0 lb-ft)

(B) 42.2 ~ 53.9 N.m (4.3 ~ 5.5 kgf.m, 31.1 ~ 39.8 lb-ft)

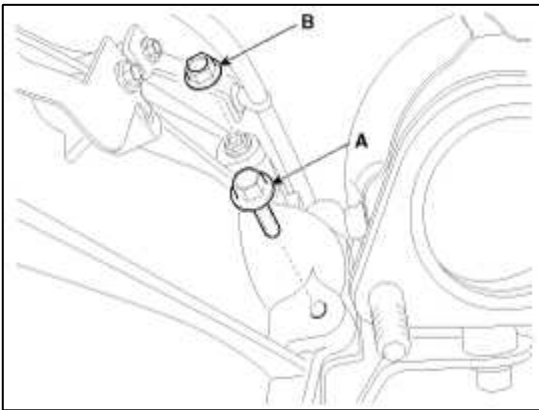


20. Remove the mounting bolts (A-3 ea, B-1ea) on the transmission side.

Tightening torque:

[A] 65 ~ 85 N.m (6.5 ~ 8.5 kgf.m, 47.0 ~ 61.5 lb-ft)

[B] 35 ~ 47 N.m (3.5 ~ 4.7 kgf.m, 25.3 ~ 34.0 lb-ft)

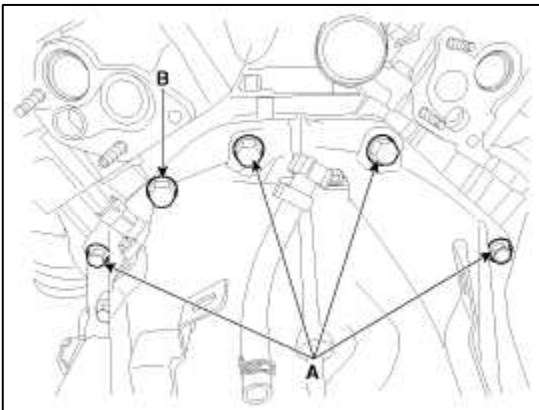

21. Remove the transmission assembly by lowering the supporting jack.

CAUTION

Be careful not to damage tubes, hoses or wire.


Installation

1. Installation is the reverse of removal.

NOTE

After replacement or reinstallation procedure of the automatic transmission assembly, perform the procedures b

- Adding automatic transmission fluid. (Refer to "automatic transmission system" in this group.)
- After servicing the automatic transmission or TCM, clear the diagnostic trouble codes (DTC) using the GDS Diagnostic trouble codes (DTC) cannot be cleared by disconnecting the battery.
When deleting diagnostic trouble code, use the GDS.
- When replacing the automatic transmission, reset the automatic transmissions values by using the GDS.
- After exchanging automatic transmission, input the EOL(End of line).
(Refer to "Repair procedures" in this group)
- Perform TCM learning after replacing the transmission to prevent slow transmission response, jerky accelerer jerky startup. (Refer to "Automatic transmission control system (Repair procedures)" in this group)

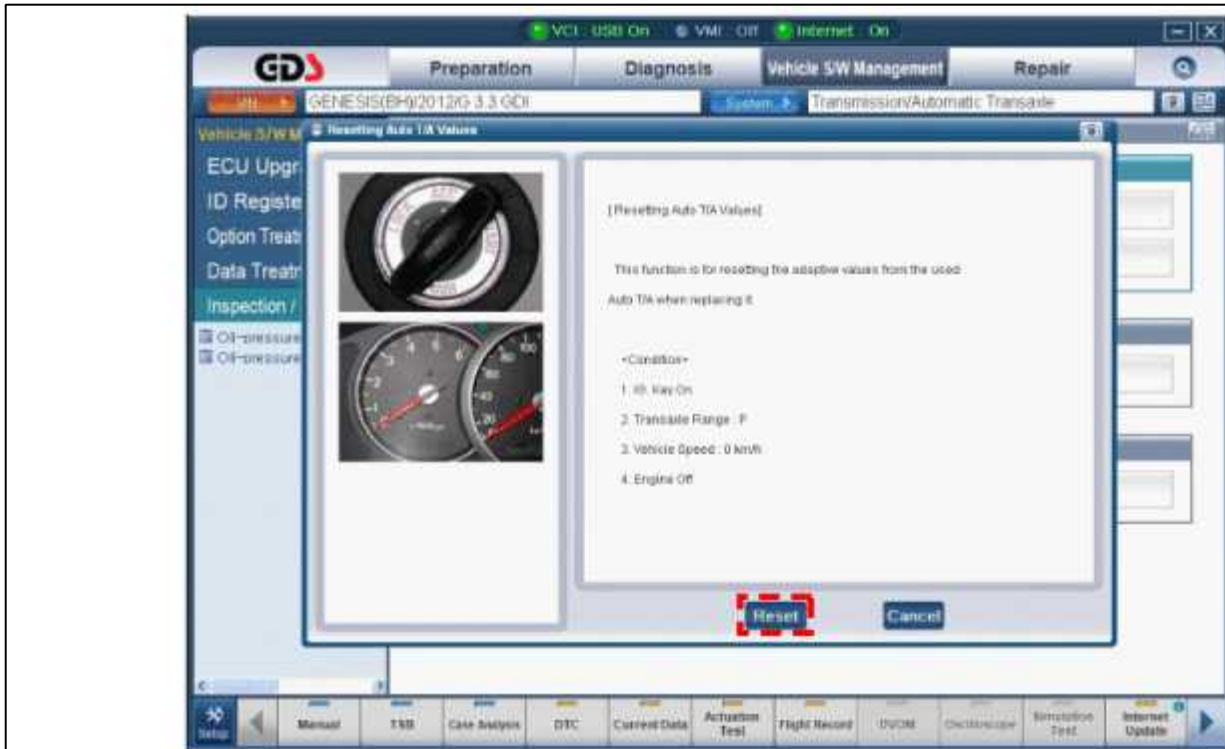


Automatic Transaxle System > Hydraulic System > Description and Operation

Description

The hydraulic system consists of oil, an oil filter, an oil pump, and a valve body (valves and solenoid valves). The oil pump is powered by the engine. ATF passes through the oil filter and gets distributed along the oil channels. The oil becomes highly pressurized as it exits the oil pump and passes through the line pressure valve before being fed to the clutch & brake control valve, clutch, and brakes. TCM controls the hydraulic pressure using solenoid valves and controls clutch and brake operations.

Automatic Transaxle System > Hydraulic System > Components and Components Location

Components Location

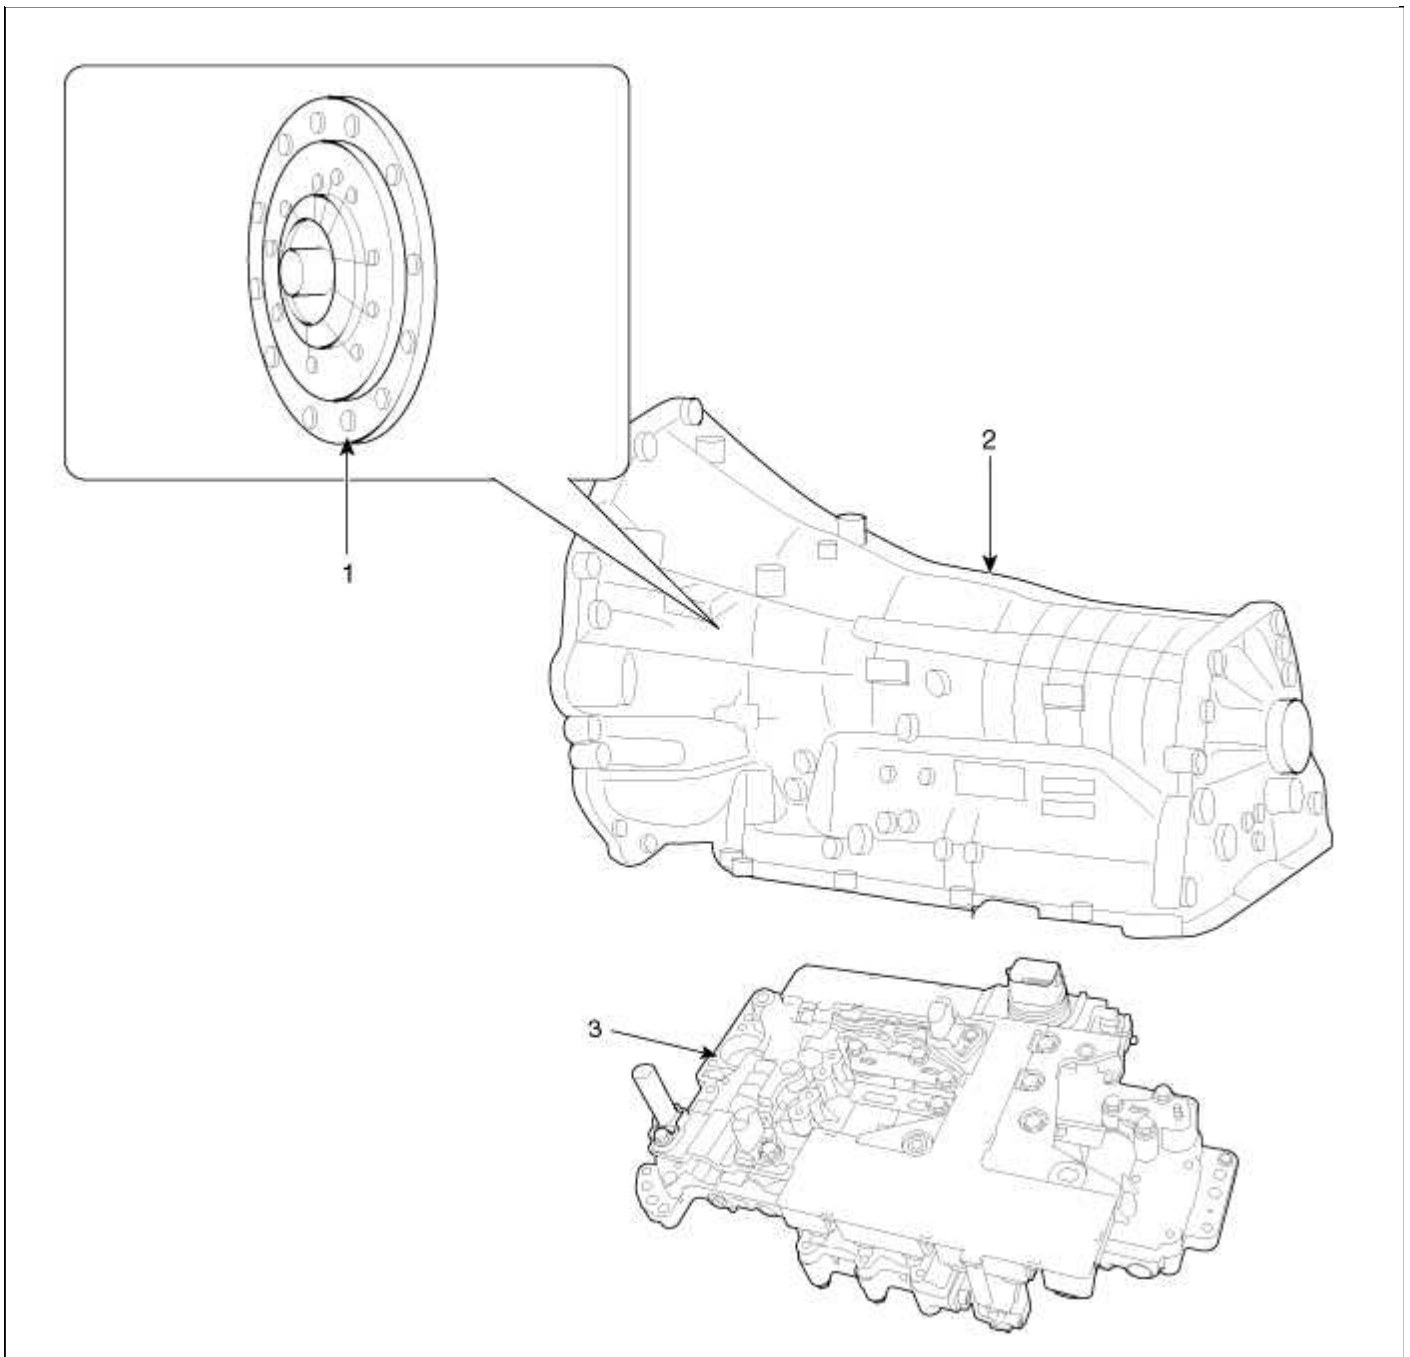

1. Oil pump assembly	3. Valve body assembly
2. Automatic transmission	4. Oil pan

Automatic Transaxle System > Hydraulic System > Oil Pump > Description and Operation

Description


The oil pump rotation builds the hydraulic pressure needed for the lubrication of the various parts of the automatic transmission and operation of the clutch and brakes.

The oil also circulates through the torque converter and the cooler.



Automatic Transaxle System > Hydraulic System > Oil Pump > Components and Components Location


Components Location

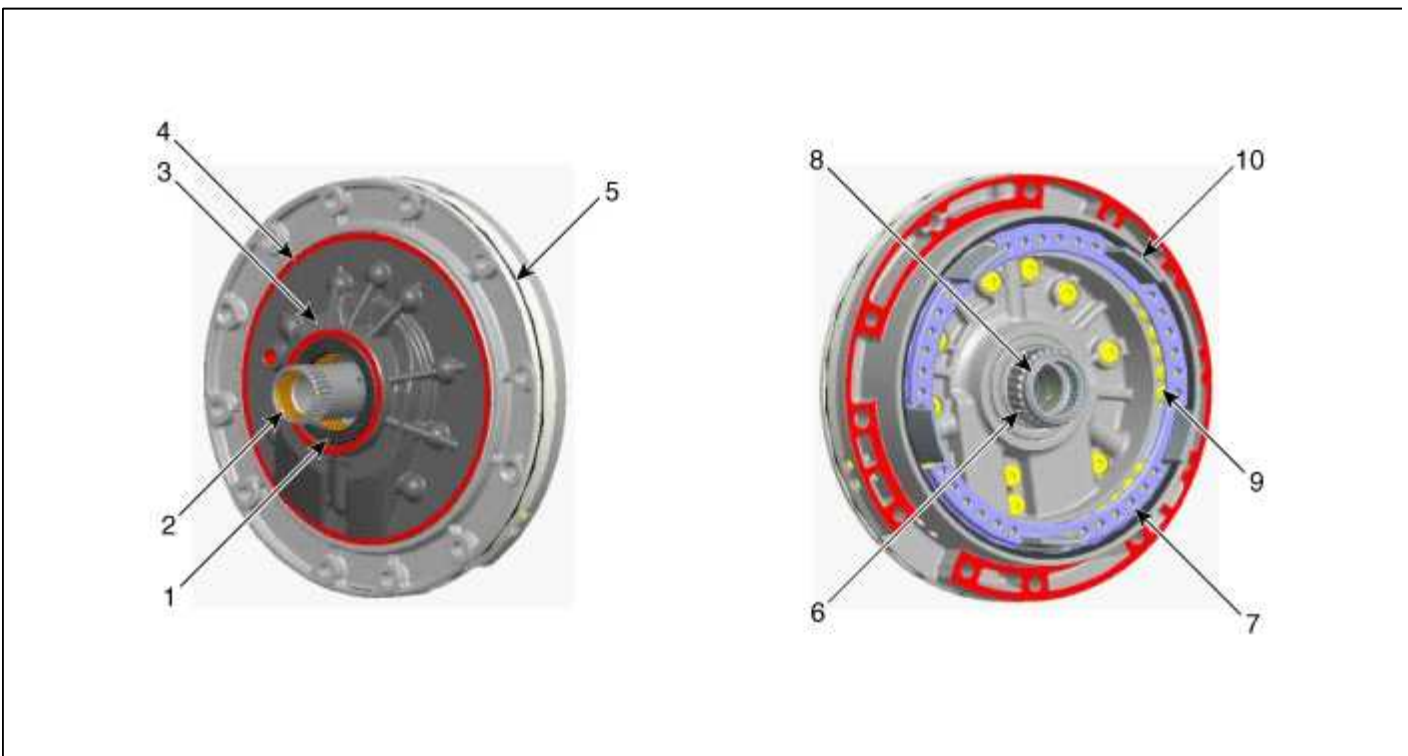

1. Oil seal	6. Reaction shaft
2. Reaction shaft	7. Snap ring
3. Housing	8. Niddle bearing
4. Cover	9. 8LR/B return spring
5. O-Ring	10. 8LR/B piston

Automatic Transaxle System > Hydraulic System > Fluid > Components and Components Location

Components Location

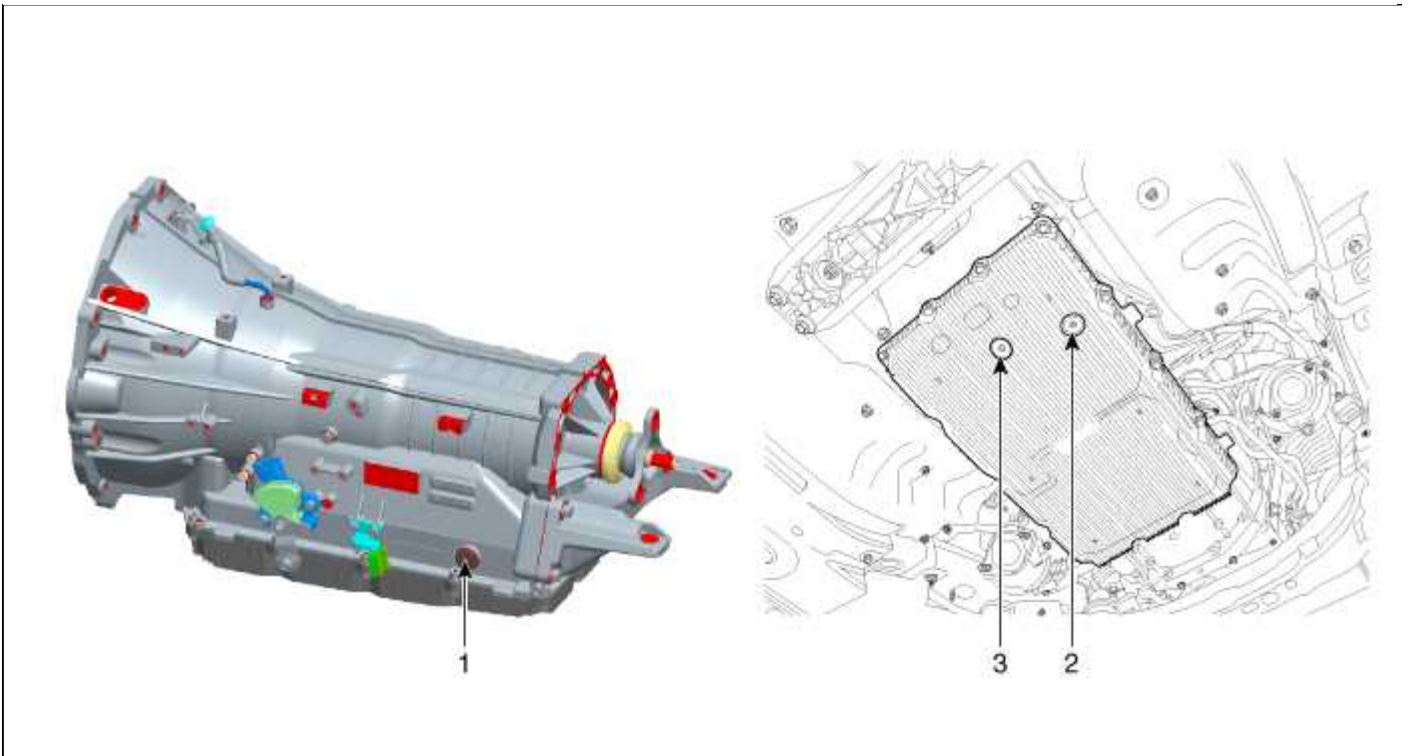

1. Oil injection hole	3. Oil drain piug
2. Oil level plug	

Automatic Transaxle System > Hydraulic System > Fluid > Repair procedures

Service Adjustment Procedure

Oil level Check

NOTE

A check of ATF level is not normally required during scheduled services. If an oil leak is found, perform the oil level check procedure after repairs are completed.

CAUTION

When checking the oil level, be careful not to enter dust, foreign matters, etc. from fill hole.

1. Start the engine. (Don't step on brake and accelerator simultaneously).
2. Confirm that the temperature of the A/T oil temperature sensor is 50~60°C(122~140°F) with the GDS.
3. Shift the shift lever slowly from "P" to "D" to "P" at idle. Repeat one time.
Shift the select lever to "N".


CAUTION

Keep on each speed position more than 2 sec.

4. Lift the vehicle, then remove the oil level plug (A) from the valve body cover.

CAUTION


At this time, the vehicle must be at a level state.

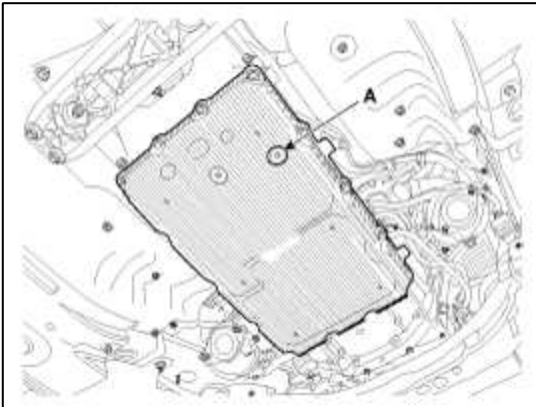

5. If there is no oil drain or the amount of oil drain is very low (within 20cc). Add ATF SP-IV-RR 650cc to the ATF injection hole (A).

CAUTION

If oil start to overflow from the oil level plug, you must stop adding oil.

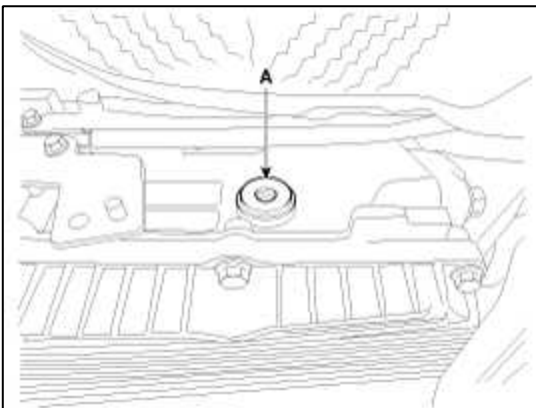

6. If the oil flows out of the overflow plug in thin steady stream, the oil level is correct. Then finish the procedure and tighten the oil plug.

NOTE

Oil level check (excess or shortage) method

- Excess: Drain quantity exceeds 500cc per mininute.(Let oil flow until oil stream becoms thin)
- Shortage: If there is no drain after adding 650cc of ATF.(Add more ATF oil until oil starts to drain)

CAUTION

If there is no damage at the automatic transaxle and the oil cooler, the oil cooler hose, transaxle case, valve body tightening state are normal, ATF must drip out after performing above 1 to 6 procedures. After performing above 1 to 6 procedures, if the oil doesn't drip out, inspect the automatic transaxle assembly.

CAUTION

Replace the gasket of the oil level plug and use new one whenever loosening the oil level plug.

Oil level check plug tightening torque:

22.6 ~ 24.5 N.m (2.3 ~ 2.5 kgf.m, 16.6 ~ 18.1 lb-ft)

7. After ATF level check or exchange, be sure to remove ATF of outside automatic transmission.
(be especially sure to remove residual ATF between automatic transmission case and oil pan)
8. Put down the vehicle with the lift.

Replacement

NOTE

ATF of 8 speed automatic transaxle doesn't need to be replaced in normal usage. If the vehicle is used severely in business or personal use, replace ATF every 100,000 miles.


Severe usage is defined as

- Driving in rough road (Bumpy, Gravel, Snowy, Unpaved road, etc)
- Driving in mountain road, ascent/descent
- Repetition of short distance driving
- More than 50% operation in heavy city traffic during hot weather above 30°C(89.6°F) .
- Police, Taxi, Commercial type operation or trailer towing, etc

1. Remove the drain plug (A) and reinstall the drain plug after draining ATF totally.

Drain plug tightening torque:

22.6 ~ 24.5 N.m (2.3 ~ 2.5 kgf.m, 16.6 ~ 18.1 lb-ft)

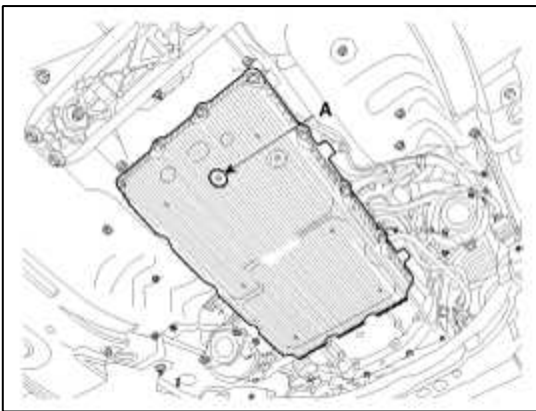**CAUTION**

The gasket of the drain plug use new one.


2. Fill the oil about 7.0 liters through oil injection hole.
3. Check the oil level.
(Refer to "Hydraulic system (Fluid)" in this group)

Automatic Transaxle System > Hydraulic System > Oil Filter > Repair procedures

Replacement

1. Draining ATF totally.

2. Remove the oil pan (A).

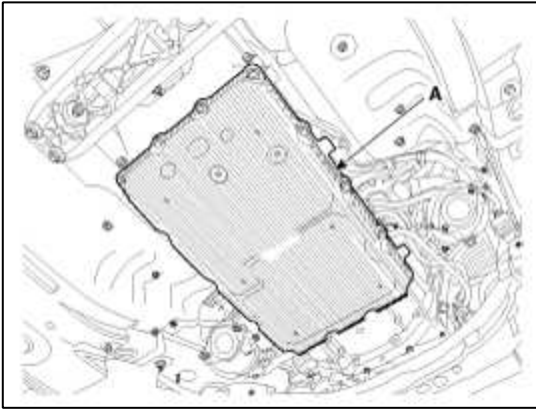

3. Must be replaced by new oil pan.

NOTE

Not replaceable filters integrated oil pan.




4. Adding automatic transmission fluid.
(Refer to "automatic transaxle system" in this group.)

Automatic Transaxle System > Hydraulic System > Valve Body > Description and Operation


Description

The valve body is essential to automatic transaxle control and consists of various valves used to control the oil feed from the oil pump. Specifically, these valves consist of pressure regulator valves, oil redirection valves, shift valves, and manual valves. The body also features electronic solenoid valves that ensure smooth gear changes.

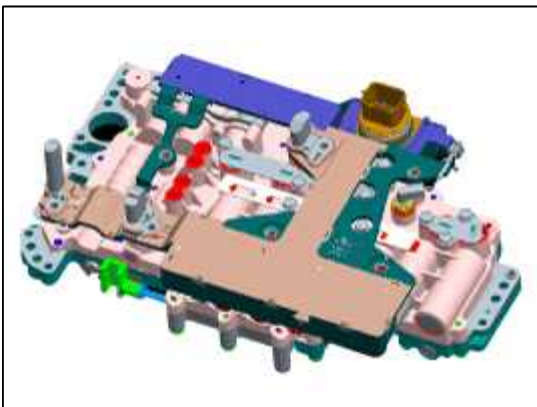

Automatic Transaxle System > Hydraulic System > Valve Body > Components and Components Location

Components Location

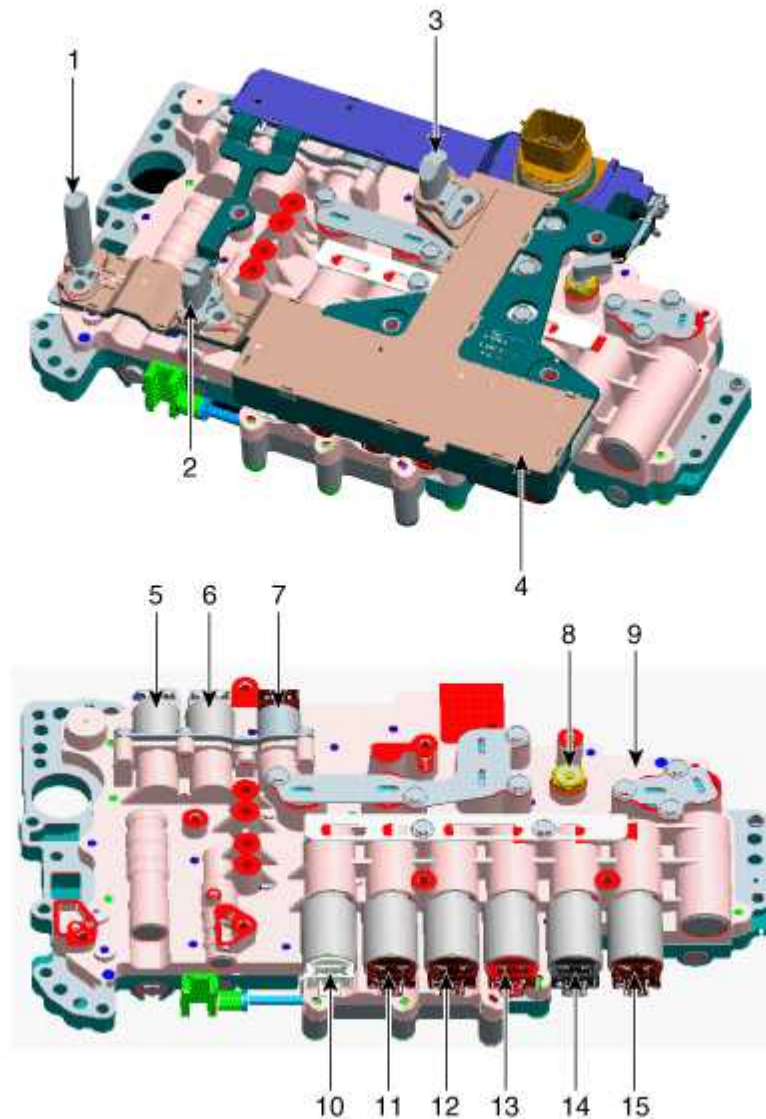

1. Input speed sensor	9. Valve body assembly
2. Middle speed sensor	10. 8LR/B control solenoid valve
3. Output speed sensor	11. 6/C control solenoid valve
4. E Module	12. 27/B control solenoid valve
5. Line pressure control solenoid valve	13. 35R/C control solenoid valve
6. Demper clutch control solenoid valve	14. 4&OD/C control solenoid valve
7. ON/OFF solenoid valve	15. UD/C control solenoid valve
8. Pressure switch	


Automatic Transaxle System > Automatic Transaxle Control System > Description and Operation

Description

Automatic transaxle system relies on various measurement data to determine the current control status and extrapolate the necessary compensation values. These values are used to control the actuators and achieve the

desired control output. If a problem with the drivetrain, including the transaxle, has been identified, perform self-diagnosis and basic transaxle inspection (oil and fluid inspection) and then check the control system's components using the diagnosis tool.

Control System Composition

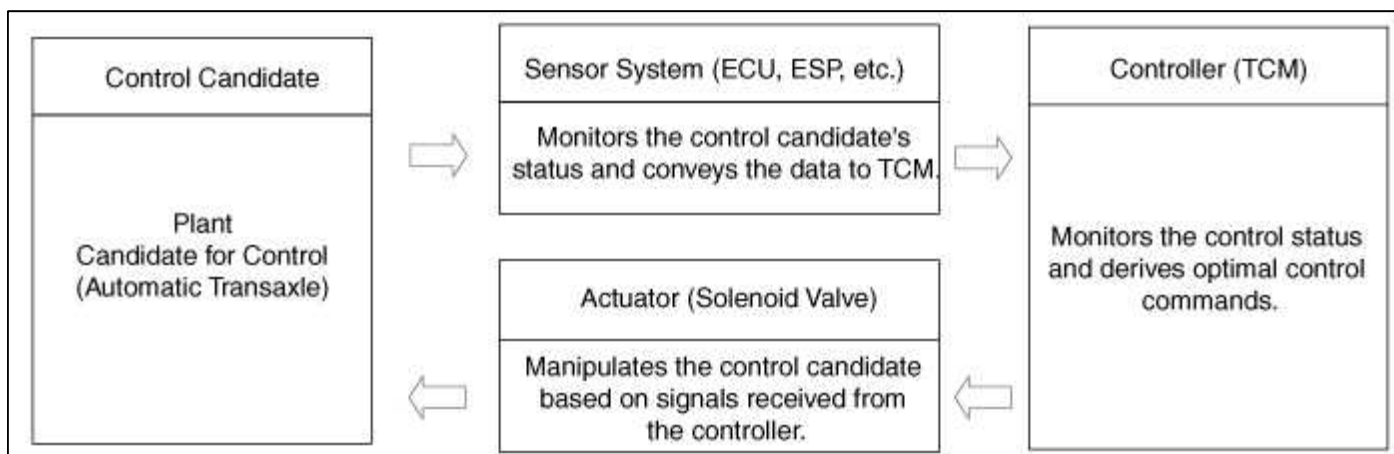

Fault Diagnosis

Features a fail-safe mechanism that prevents dangerous situations from developing in the event of a transaxle failure. The limp home mode engages if the transaxle malfunctions. In this mode, the transaxle operates at a minimal functionality level, making it possible for the vehicle to reach a service center.

Fail-Safe: Allows the vehicle to be driven safely in the event of a malfunction.

Limp Home: Maintains minimal functionality (*) in the event of a malfunction, making it possible for the vehicle to reach a service center.

(*) Minimal Functionality: Drive (fixed gear setting), Reverse, and Neutral

Self-diagnosis

TCM is in constant communication with the control system's components (sensors and solenoids). If an abnormal signal is received for longer than the predefined duration, TCM recognizes a fault, stores the fault code in memory, and then sends out a fault signal through the self-diagnosis terminal. Such fault codes are independently backed up and will not be cleared even if the ignition switch is turned off, the battery is disconnected, or the TCM connector is disconnected.

CAUTION

- Disconnecting a sensor or an actuator connector while the ignition switch is in the "On" position generates a diagnostic trouble code (DTC) and commits the code to memory. In such event, disconnecting the battery will not clear the fault diagnosis memory. The diagnosis tool must be used to clear the fault diagnosis memory.
- Before removing or installing any part, read the diagnostic trouble codes and then disconnect the battery negative (-) terminal.
- Before disconnecting the cable from battery terminal, turn the ignition switch to OFF. Removal or connection of the battery cable during engine operation or while the ignition switch is ON could cause damage to the TCM.
- When checking the generator for the charging state, do not disconnect the battery '+' terminal to prevent the ECM from damage due to the voltage.
- When charging the battery with the external charger, disconnect the vehicle side battery terminals to prevent damage to the TCM.

Checking Procedure (Self-diagnosis)

CAUTION

- When battery voltage is excessively low, diagnostic trouble codes can not be read. Be sure to check the battery for voltage and the charging system before starting the test.
- Diagnosis memory is erased if the battery or the TCM connector is disconnected. Do not disconnect the battery before the diagnostic trouble codes (DTC) are completely read and recorded.

Inspection Procedure (Using the GDS)

1. Turn OFF the ignition switch.
2. Connect the GDS to the data link connector on the lower crash pad.
3. Turn ON the ignition switch.
4. Use the GDS to check the diagnostic trouble code.
5. Repair the faulty part from the diagnosis chart.
6. Erase the diagnostic trouble code.
7. Disconnect the GDS.

CAUTION

- Perform TCM learning after replacing the automatic transaxle to prevent slow automatic transaxle response, jerky acceleration and jerky startup. (Refer to "Automatic transaxle control system (Repair procedures)" in this group)
- Adding automatic transaxle fluid. (Refer to "automatic transaxle system" in this group.)
- After servicing the automatic transaxle or TCM, clear the diagnostic trouble code (DTC) using the GDS tool. Diagnostic trouble codes (DTC) cannot be cleared by disconnecting the battery.

Automatic Transaxle System > Automatic Transaxle Control System > Repair procedures

Adjustment

TCM Learning


When shift shock is occurred or parts related with the transaxle are replaced, TCM learning should be performed. In the following case, TCM learning is required.

- Transaxle assembly replacement
 - TCM replacement
 - TCM upgrading
1. TCM learning condition
 - A. ATF temperature: 30 ~ 95°C (86 ~ 203°F)

2. TCM learning procedure

A. Stop learning


- Repeat the below shift pattern four times or more with stepping on the brake.

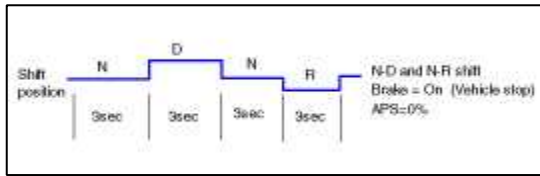

B. Driving learning


1. Drive the vehicle through all gears at D range. Drive from stop to 1st to 2nd to 3rd to 4th to 5th to 6th to 7th to 8th with keeping fixed throttle open.
2. Down shift from 8th to 7th, 7th to 6th, 6th to 5th, 5th to 4th, 4th to 3rd, 3rd to 2nd, 2nd to 1st.
3. Repeat the above driving pattern four times or more.

Up-shift throttle open : 15 ~ 30%

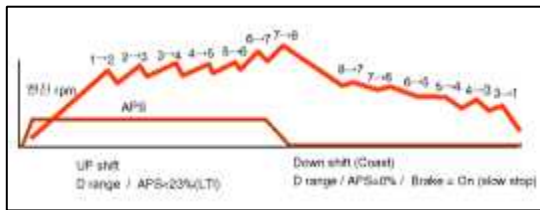

Automatic Transaxle System > Automatic Transaxle Control System > Schematic Diagrams


Circuit Diagram

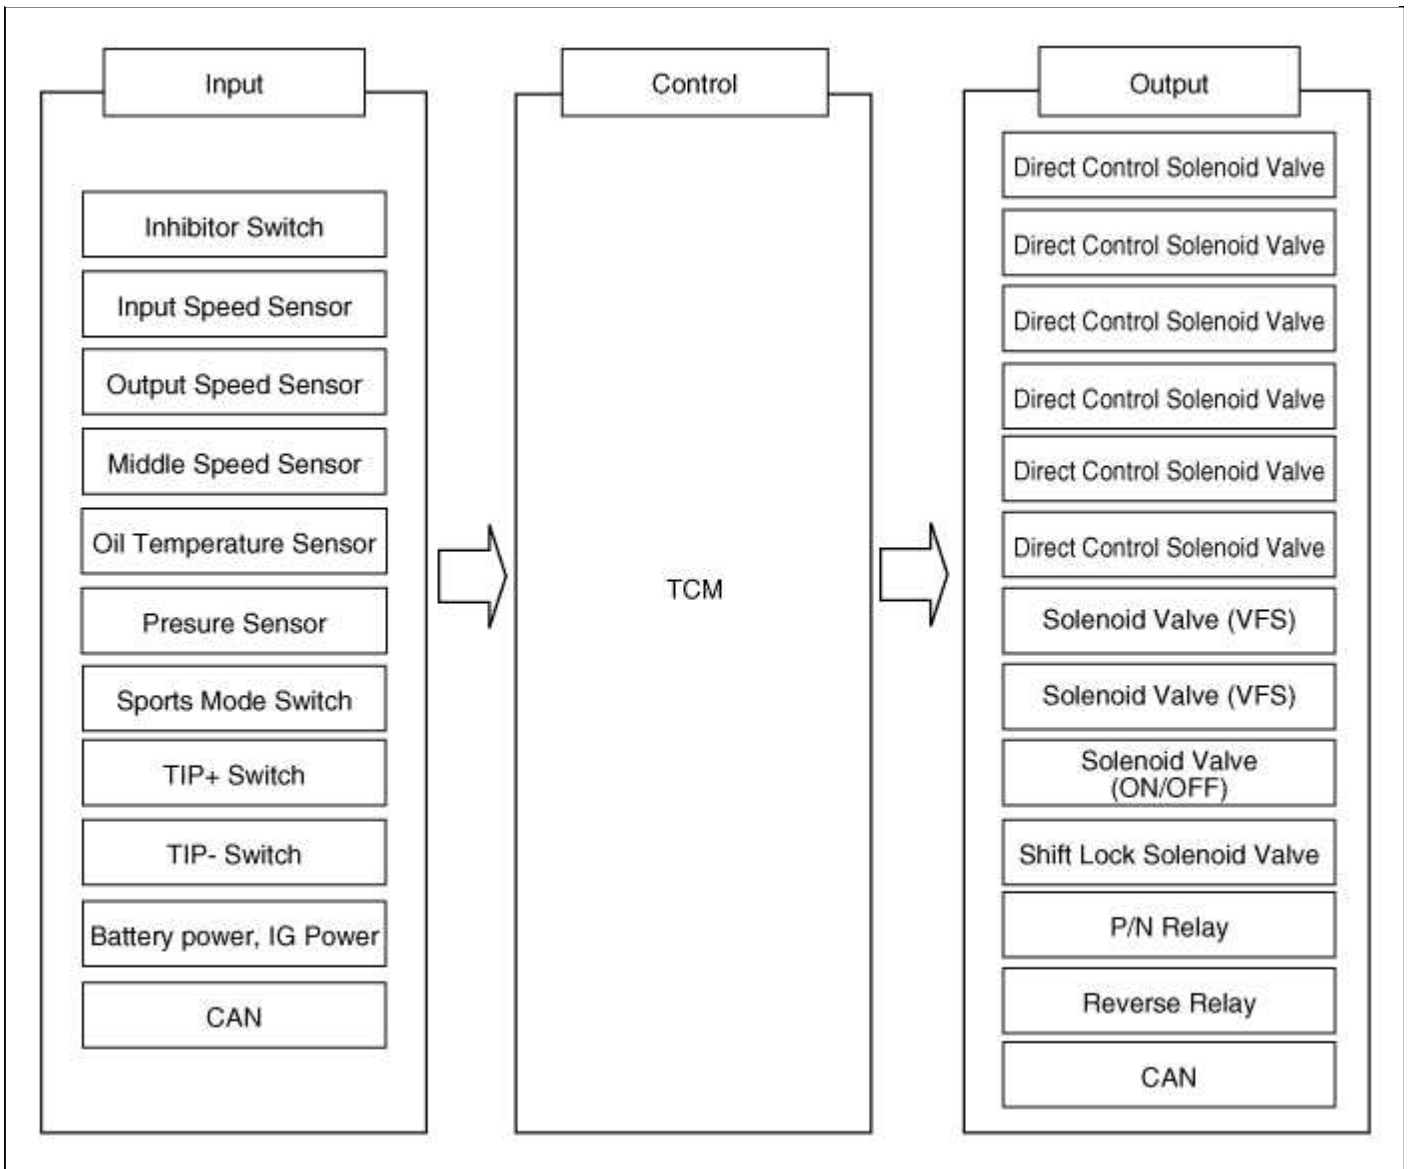

Automatic Transaxle System > Automatic Transaxle Control System > Components and Components Location

Components Location


[Vehicle Components]

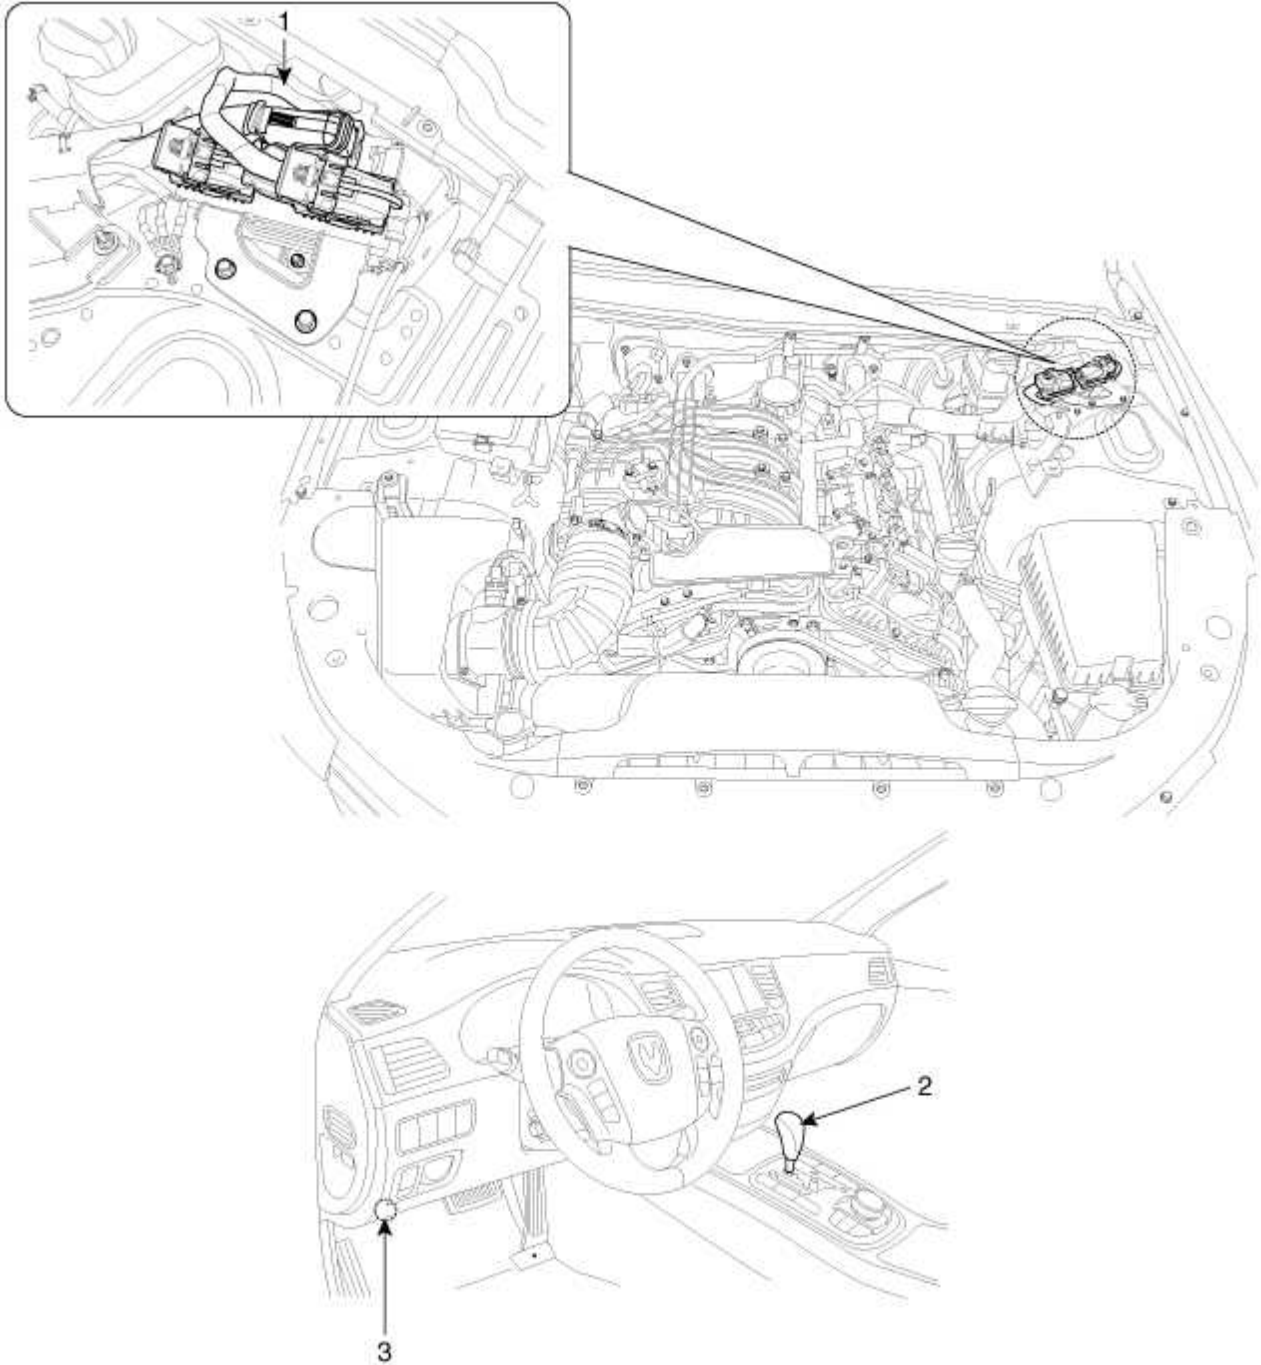

1. Transmission Control
Module(TCM)
2. Shift lever

3. Date Link Connector (DLC)

[Transmission Components]

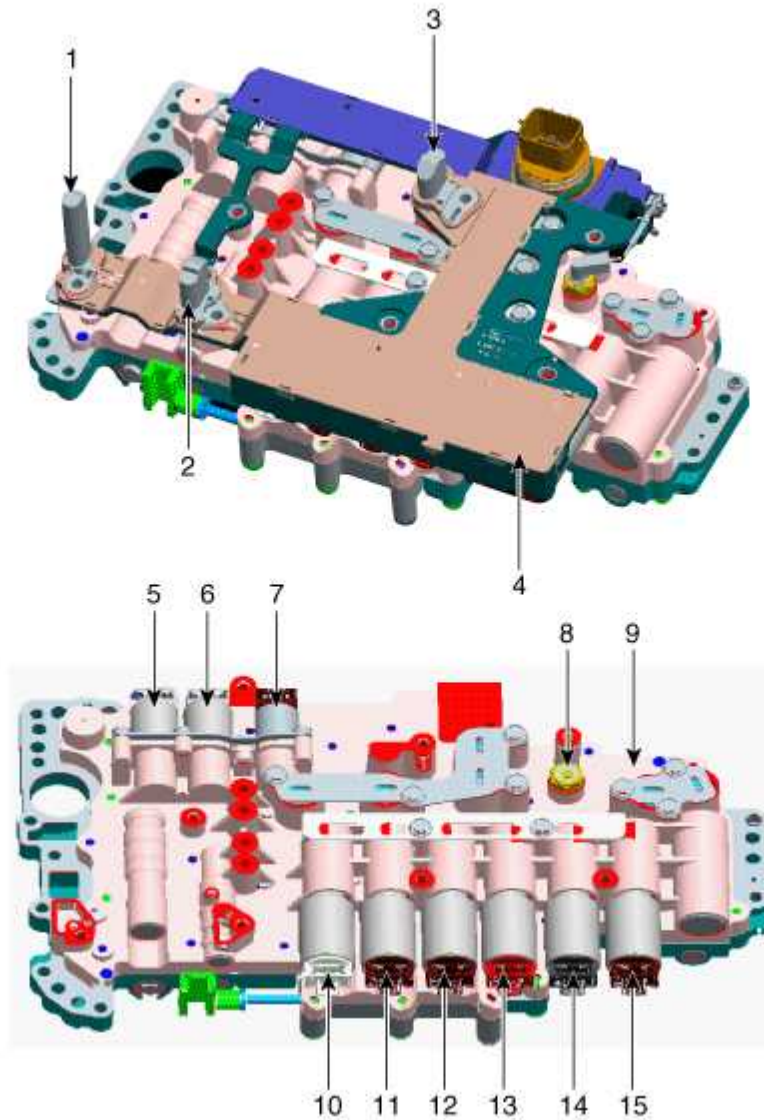

1. Input speed sensor	9. Valve body assembly
2. Middle speed sensor	10. 8LR/B control solenoid valve
3. Output speed sensor	11. 6/C control solenoid valve
4. E Module assembly	12. 27/B control solenoid valve
5. Line pressure control solenoid valve	13. 35R/C control solenoid valve
6. Demper clutch control solenoid valve	14. 4&OD/C control solenoid valve
7. ON/OFF solenoid valve	15. UD/C control solenoid valve
8. Pressure switch	

Automatic Transaxle System > Automatic Transaxle Control System > Transaxle Control Module (TCM) > Description and Operation

Description

Transaxle Control Module (TCM) is the automatic transaxle's brain. The module receives and processes signals from various sensors and implements a wide range of transaxle controls to ensure optimal driving conditions for the driver.

TCM is programmed for optimal response to any on-road situation. In the event of a transaxle failure or malfunction, TCM stores the fault information in memory so that the technician may reference the code and quickly repair the transaxle.


Functions

- Monitors the vehicle's operating conditions to determine the optimal gear setting.
- Performs a gear change if the current gear setting differs from the identified optimal gear setting.
- Determines the need for damper clutch (D/C) activation and engages the clutch accordingly.
- Calculates the optimal line pressure level by constantly monitoring the torque level and adjusts the pressure accordingly.
- Diagnoses the automatic transaxle for faults and failures.



Automatic Transaxle System > Automatic Transaxle Control System > Transaxle Control Module (TCM) > Schematic Diagrams

1. TCM Connector and Terminal Function

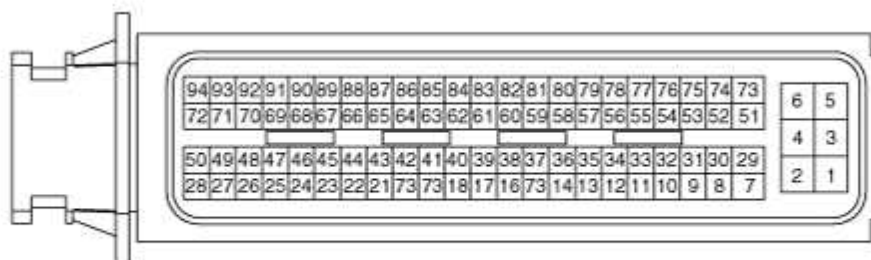

CLG-TG

2. TCM Terminal Function

Connector [CLG-TG]

Pin	Description	Pin	Description
1	Battery power	48	-
2	Battery power	49	-
3	Power(IG 1)	50	27 Brake control solenoid valve
4	Ground	51	-
5	Ground	52	ON/OFF solenoid valve
6	Ground	53	-

7	-	54	Input speed sensor signal
8	-	55	Middle speed sensor signal
9	-	56	Output speed sensor signal
10	-	57	-
11	-	58	-
12	-	59	-
13	Inhibitor switch signal "S1"	60	-
14	Oil temperature sensor (+)	61	Sports mode select switch
15	-	62	-
16	Sports mode up switch	63	-
17	Sports mode down switch	64	-
18	Pressure switch	65	CAN communication line (LOW)
19	-	66	-
20	-	67	-
21	Inhibitor switch signal "S2"	68	-
22	Inhibitor switch signal "S4"	69	-
23	Inhibitor switch signal "S3"	70	Solenoid supply power 2
24	-	71	-
25	-	72	-
26	-	73	Solenoid supply power(4&OD/C,35R/C,6/C,L/P)
27	-	74	-
28	-	75	-
29	Solenoid supply power(UD/C,27/B,8LR/B,D/C)	76	-
30	Input speed sensor power	77	-
31	Middle speed sensor power	78	-
32	-	79	-
33	-	80	-
34	-	81	-
35	-	82	-
36	-	83	-
37	-	84	-
38	Oil temperature sensor (-)	85	CCP CAN Low
39	-	86	CCP CAN High
40	-	87	CAN communication line (High)
41	35R Clutch control solenoid valve	88	-

42	8LR Brake control solenoid valve	89	-
43	Underdrive clutch control solenoid valve	90	-
44	6Speed clutch control solenoid valve	91	-
45	Line pressure control solenoid valve	92	-
46	Damper clutch control solenoid valve	93	Output speed sensor power
47	4&OD Clutch control solenoid valve	94	-

3. TCM Terminal input/output signal

Pin	Description	Condition	Input/Output Value	
			Type	Level
1	Battery power	ON	Power	0V/Battery voltage level
2		OFF		9V < Battery voltage level < 16V
3	Power (IG 1)	ON	Input	Battery voltage level
		OFF		0V voltage level
4	Ground	-	Ground	0V(GND level)
5	Ground	-	Ground	0V(GND level)
6	Ground	-	Ground	0V(GND level)
7	-	ON	Output	About 1V
		OFF		Battery voltage level
8	-	-	Output	0V/Battery voltage level
				9V < Battery voltage level < 16V
9	-	-	-	-
10	-	ON	Pulse input	About 9V~11V voltage level
		OFF		0V voltage level
11	-	-	-	-
12	-	-	-	-
13	Inhibitor switch signal "S1"	ON	Input	Battery voltage level
		OFF		0V(GND)
14	Oil temperature sensor (+)	-	Input	Maximum 5V voltage level
15	-	-	-	-
16	Sports mode up switch	ON	Input	0V(GND)
		OFF		Battery voltage level
17	Sports mode down switch	ON	Input	0V(GND)
		OFF		Battery voltage level
18	Pressure switch	-	Input	0V/Battery voltage level

19	-	-	-	-
20	-	-	-	-
21	Inhibitor switch signal "S2"	ON	Input	Battery voltage level
		OFF		0V(GND)
22	Inhibitor switch signal "S4"	ON	Input	Battery voltage level
		OFF		0V(GND)
23	Inhibitor switch signal "S3"	ON	Input	Battery voltage level
		OFF		0V(GND)
24	-	-	-	-
25	-	-	-	-
26	-	-	Output	0V/Battery voltage level
				9V < Battery voltage level <16V
27	-	-	-	-
28	-	-	Output	0V/Battery voltage level
				9V < Battery voltage level <16V
29	Solenoid supply power (UD/C,27/B,8LR/B,D/C)	-	Power	Battery voltage level
				9V < Battery voltage level <16V
30	Input speed sensor power	ON	Output	About 9V voltage level
		OFF		0V
31	Middle speed sensor power	ON	Output	About 9V voltage level
		OFF		0V
32	-	-	-	-
33	-	-	-	-
34	-	-	-	-
35	-	-	-	-
36	-	-	-	-
37	-	-	-	-
38	Oil temperature sensor (-)	-	Input	Minimum 0V voltage level
39	-	-	-	-
40	-	-	-	-
41	35R Clutch control solenoid valve	-	Output	0V/Battery voltage level
				9V < Battery voltage level <16V

42	8LR Brake control solenoid valve	-	Output	0V/Battery voltage level
				9V < Battery voltage level <16V
43	Underdrive clutch control solenoid valve	-	Output	0V/Battery voltage level
				9V < Battery voltage level <16V
44	6Speed clutch control solenoid valve	-	Output	0V/Battery voltage level
				9V < Battery voltage level <16V
45	Line presure control solenoid valve	-	Output	0V/Battery voltage level
				9V < Battery voltage level <16V
46	Damper clutch control solenoid valve	-	Output	0V/Battery voltage level
				9V < Battery voltage level <16V
47	4&OD Clutch control solenoid valve	-	Output	0V/Battery voltage level
				9V < Battery voltage level <16V
48	-	-	-	-
49	-	-	-	-
50	27 Brake control solenoid valve	-	Output	0V/Battery voltage level
				9V < Battery voltage level <16V
51	-	-	-	-
52	ON/OFF solenoid valve	-	Output	0V/Battery voltage level
				9V < Battery voltage level <16V
53	-	ON	Output	0V
		OFF		Battery voltage level
54	Input speed sensor signal		Pulse input	Low : About 0.7V, High : 1.4V
	NTU1			Maximum/Minimum Frequency : 9kHz/0Hz
55	Middle speed sensor signal		PulseInput	Low : About 0.7V, High : 1.4V
	NTU2			Maximum/Minimum Frequency : 9kHz/0Hz
	Output speed sensor signal			Low : About 0.7V, High : 1.4V

56	NAB		PulseInput	Maximum/Minimum Frequency : 9kHz/0Hz
57	-	-	-	-
58	-	-	-	-
59	-	-	-	-
60	-	-	-	-
61	Sports mode select switch	Sports mode	Input	0V/Battery voltage level
		Other		9V < Battery voltage level <16V
62	-	-	-	-
63	-	-	-	-
64	-	-	-	-
65	CAN communication line (LOW)	-	-	-
66	-	-	-	-
67	-	-	-	-
68	-	-	-	-
69	-	-	-	-
70	Solenoid supply power 2	-	Power	Battery voltage level
				9V < Battery voltage level <16V
71	-	-	-	-
72	-	-	-	-
73	Solenoid supply power (4&OD/C,35R/C,6/C,L/P)	-	Power	Battery voltage level
				9V < Battery voltage level <16V
74	-	-	-	-
75	-	-	-	-
76	-	-	-	-
77	-	-	-	-
78	-	-	-	-
79	-	-	-	-
80	-	-	-	-
81	-	-	-	-
82	-	-	-	-
83	-	-	-	-
84	-	-	-	-

85		-	-	-
86		-	-	-
87	CAN communication line (High)	-	-	-
88				
89				
90				
91				
92		-	-	-
93	Output speed sensor power	ON	Output	About 9V voltage level
		OFF		0V
94				

Automatic Transaxle System > Automatic Transaxle Control System > Transaxle Control Module (TCM) > Repair procedures

Inspection

TCM Problem Inspection Procedure

1. TEST TCM GROUND CIRCUIT: Measure resistance between TCM and chassis ground using the backside of TCM harness connector as TCM side check point. If the problem is found, repair it.


Specification: Below 1Ω

2. TEST TCM CONNECTOR: Disconnect the TCM connector and visually check the ground terminals on TCM side and harness side for bent pins or poor contact pressure. If the problem is found, repair it.
3. If problem is not found in Step 1 and 2, the TCM could be faulty. If so, make sure there were no DTC's before swapping the TCM with a new one, and then check the vehicle again. If DTC's were found, examine this first before swapping TCM.
4. RE-TEST THE ORIGINAL TCM: Install the original TCM (may be broken) into a known-good vehicle and check the vehicle.
If the problem occurs again, replace the original TCM with a new one. If problem does not occur, this is intermittent problem (Refer to "Intermittent Problem Inspection Procedure" in Basic Inspection Procedure).


Removal

1. Turn ignition switch OFF and disconnect the negative (-) battery cable.
2. Remove the cover.
3. Disconnect the ECM connector (A) and TCM connector (B).

4. Remove the ECM & TCM bracket installation bolts (C) and nut (D).

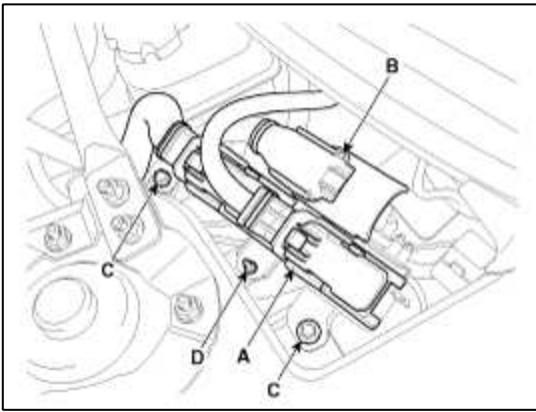

5. Remove the TCM from bracket after remove the installation bolts (A).

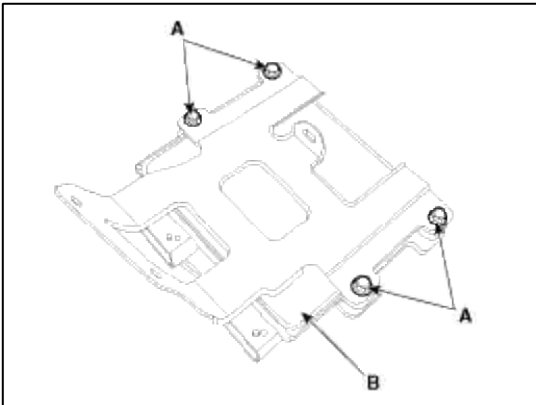


Installation

1. Installation is reverse of removal.

CAUTION

- A. In the case of the vehicle equipped with immobilizer or button engine start system, perform "Key Teaching" procedure together. (Refer to "Immobilizer" or "Button Engine Start System in BE group).
- B. After exchanging TCM, input the EOL (End of line).
(Refer to "Repair procedures" in this group)
- C. When replacing the TCM, reset the automatic transmissions values by using the GDS.

D. Perform TCM learning after replacing the TCM.

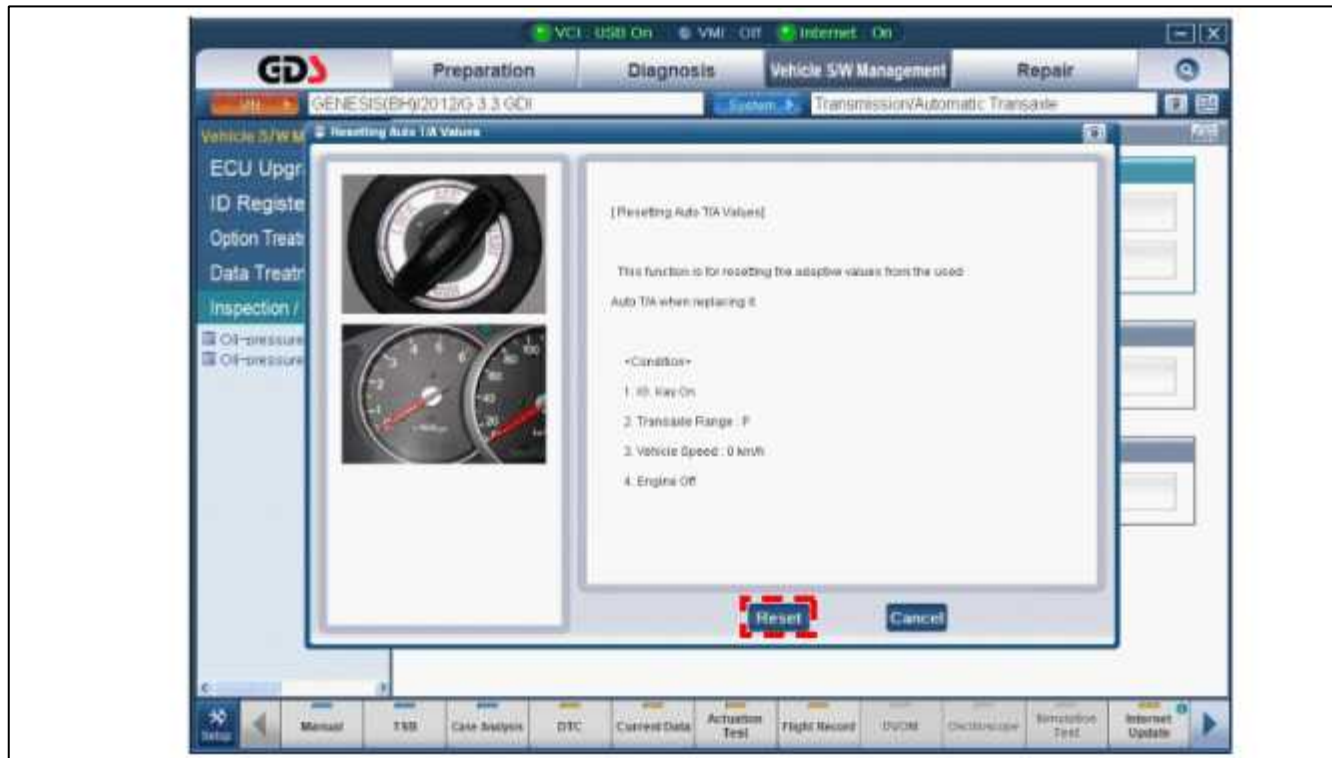


Automatic Transaxle System > Automatic Transaxle Control System > Transaxle Oil Temperature Sensor > Description and Operation

Description

Transaxle oil temperature sensor monitors the automatic transaxle fluid's temperature and conveys the readings to TCM.

It is an NTC (Negative Thermal Coefficient) sensor whose resistance has an inversely proportional relationship with the temperature level. Data produced by this sensor is used to identify damper clutch activation and deactivation zones within the low temperature and high temperature range and to compensate hydraulic pressure levels during gear changes.

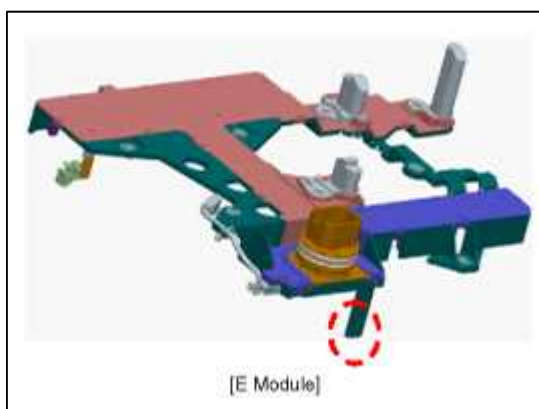

Automatic Transaxle System > Automatic Transaxle Control System > Transaxle Oil Temperature Sensor > Specifications

Specifications

Type: Negative Thermal Coefficient Type

Temp. [(°C)°F]	Resistance (kΩ)
(-40)-40	139.5
(-20)-4.0	47.4
(0)32.0	18.6
(20)68.0	8.1
(40)104.0	3.8
(60)140.0	1.98
(80)176.0	1.08
(100)212.0	0.63
(120)248.0	0.38
(140)284.0	0.25
(150)302.0	0.16

Automatic Transaxle System > Automatic Transaxle Control System > Transaxle Oil Temperature Sensor > Schematic Diagrams

Circuit Diagram

[Circuit Diagram]

Oil Temperature Sensor [CLG04]

TCM [CLG-TG]

38 - Oil Temperature Sensor (-)

14 - Oil Temperature Sensor (+)

[Connection Information]

Terminal	Connected to	Function
15	TCM(38)	Oil Temperature Sensor (-)
16	TCM(14)	Oil Temperature Sensor (+)

[Harness Connector]

E Module Connector [CLG04]

TCM Connector [CLG-TG]

Automatic Transaxle System > Automatic Transaxle Control System > Transaxle Oil Temperature Sensor > Repair procedures


Inspection

1. Turn ignition switch OFF.
2. Disconnect the E Module connector.
3. Measure resistance between sensor signal terminal and sensor ground terminal.
4. Check that the resistance is within the specification.

Automatic Transaxle System > Automatic Transaxle Control System > Output Speed Sensor > Description and Operation

Description

The output speed sensor is a vital unit that measures the rate of rotation of the transaxle's turbine shaft and output shaft, and delivers the readings to the TCM. The sensor provides critical input data that's used in feedback control, damper clutch control, gear setting control, line pressure control, clutch activation pressure control, and sensor fault analysis.

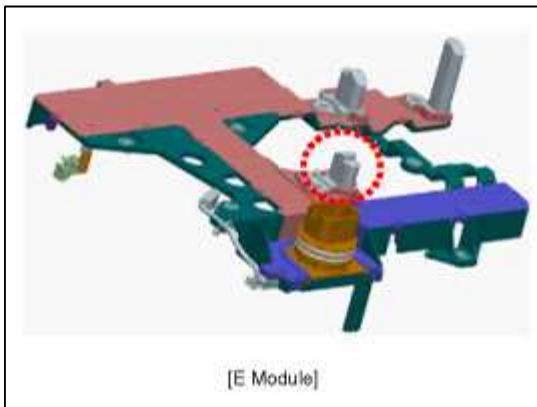

Automatic Transaxle System > Automatic Transaxle Control System > Output Speed Sensor > Specifications

Specifications


Type: Hall effect sensor

Specifications

Operation condition (°C)°F		((-40~150)) -40~302
Air gap(mm)in.		1.3(0.0512)
Output voltage	High	1.4
	Low	0.7

Automatic Transaxle System > Automatic Transaxle Control System > Output Speed Sensor > Schematic Diagrams

Circuit Diagram

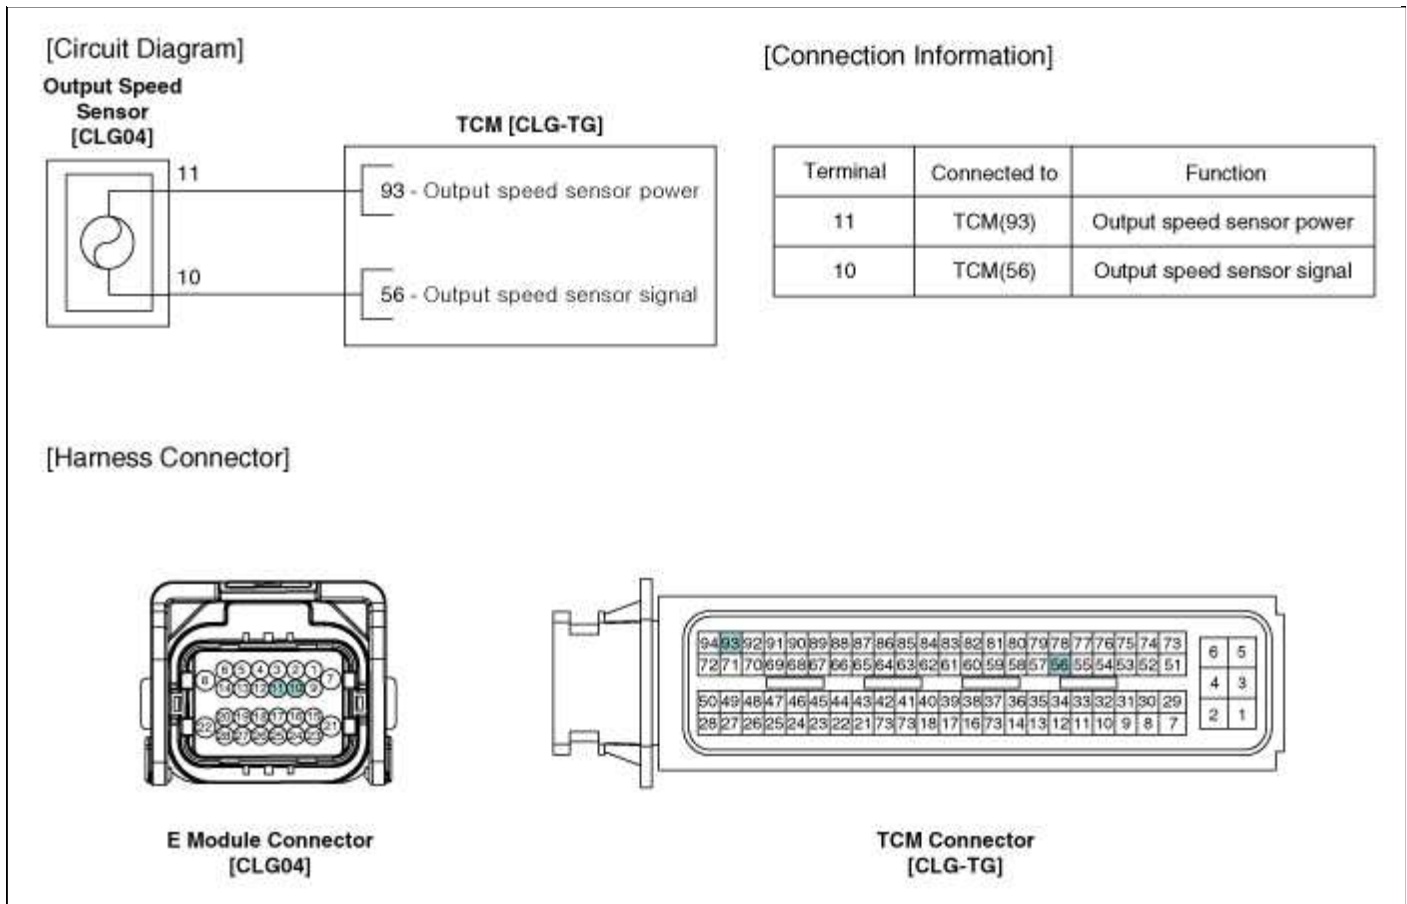


Automatic Transaxle System > Automatic Transaxle Control System > Output Speed Sensor > Repair procedures

Inspection

1. Check signal waveform of output speed sensor using the GDS.


Specification: Refer to "Signal Wave Form" section.

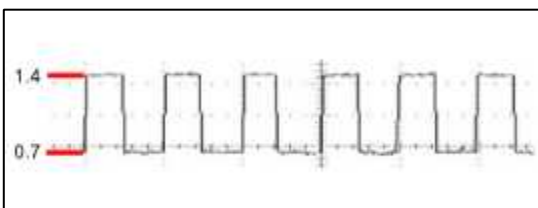

Automatic Transaxle System > Automatic Transaxle Control System > Input Speed Sensor > Description and Operation

Description

Input speed sensor is a vital unit that measures the rate of rotation of the input shaft inside the transaxle and delivers the readings to the TCM. The sensor provides critical input data that's used in feedback control, damper clutch control, gear setting control, line pressure control, clutch activation pressure control, and sensor fault analysis.

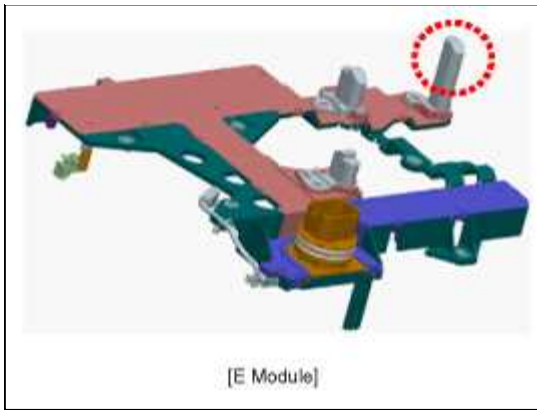

Automatic Transaxle System > Automatic Transaxle Control System > Input Speed Sensor > Specifications

Specifications


Type: Hall effect sensor

Specifications

Operation condition (°C)°F		((-40~150)) -40~302
Air gap(mm)in.		1.3(0.0512)
Output voltage	High	1.4
	Low	0.7

Automatic Transaxle System > Automatic Transaxle Control System > Input Speed Sensor > Schematic Diagrams

Circuit Diagram

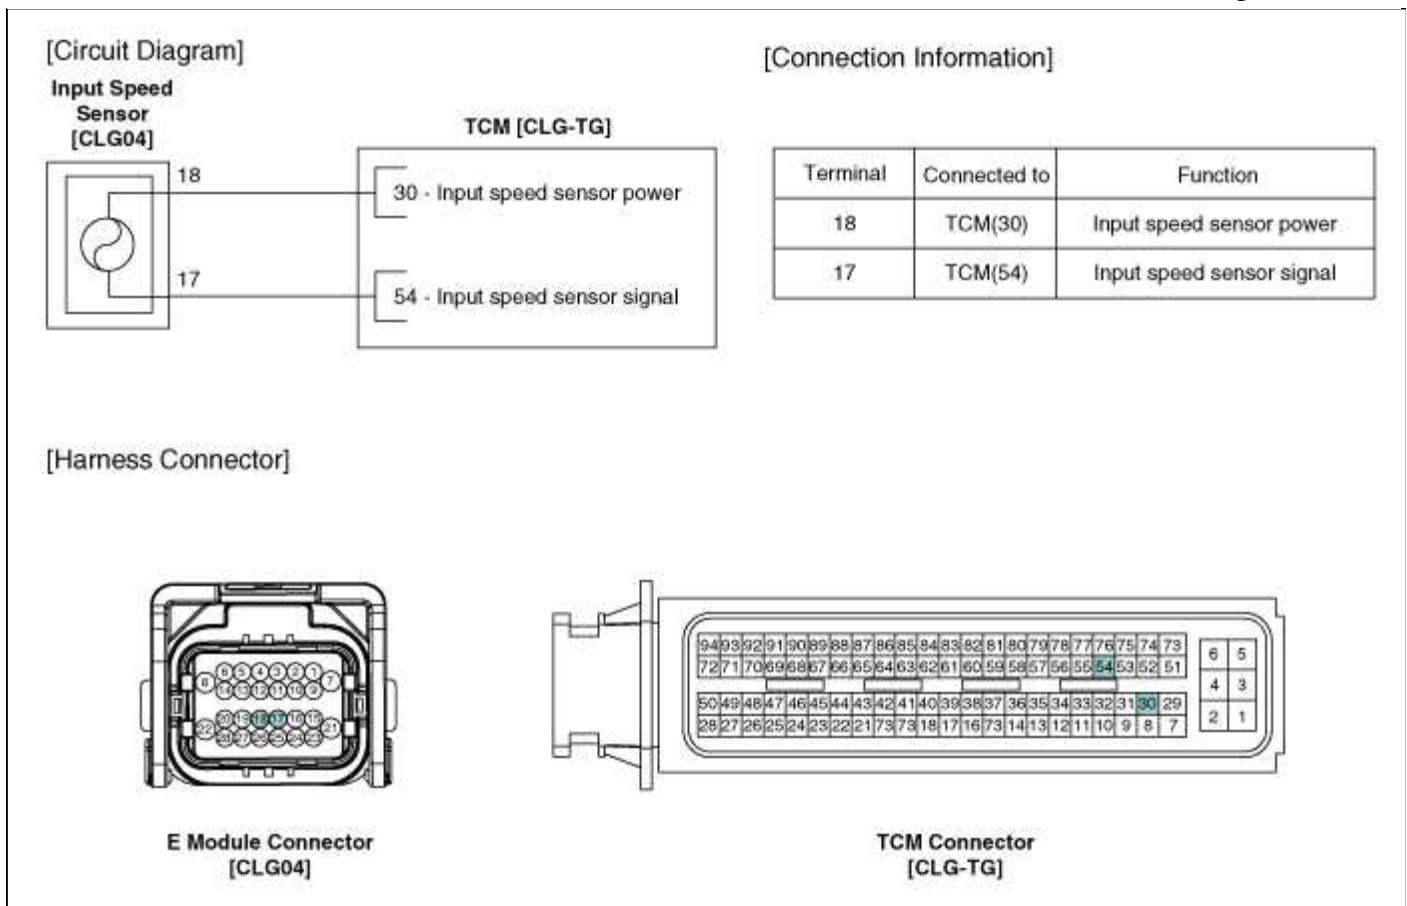


Automatic Transaxle System > Automatic Transaxle Control System > Input Speed Sensor > Repair procedures

Inspection

1. Check signal waveform of Input speed sensor using the GDS.


Specification: Refer to "Signal Wave Form" section.

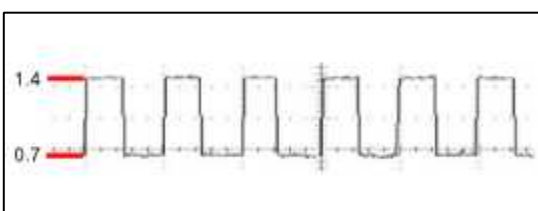

Automatic Transaxle System > Automatic Transaxle Control System > Middle Speed Sensor > Description and Operation

Description

Middle speed sensor is a vital unit that measures the rate of rotation of the input shaft inside the transaxle and delivers the readings to the TCM.

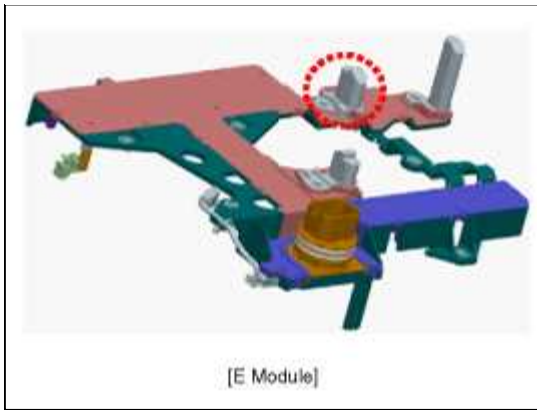

Automatic Transaxle System > Automatic Transaxle Control System > Middle Speed Sensor > Specifications

Specifications


Type: Hall effect sensor

Specifications

Operation condition (°C)°F	((-40~150))	
	-40~302	
Air gap(mm)in.	1.3(0.0512)	
Output voltage(V)	High	1.4
	Low	0.7

Automatic Transaxle System > Automatic Transaxle Control System > Middle Speed Sensor > Schematic Diagrams

Circuit Diagram

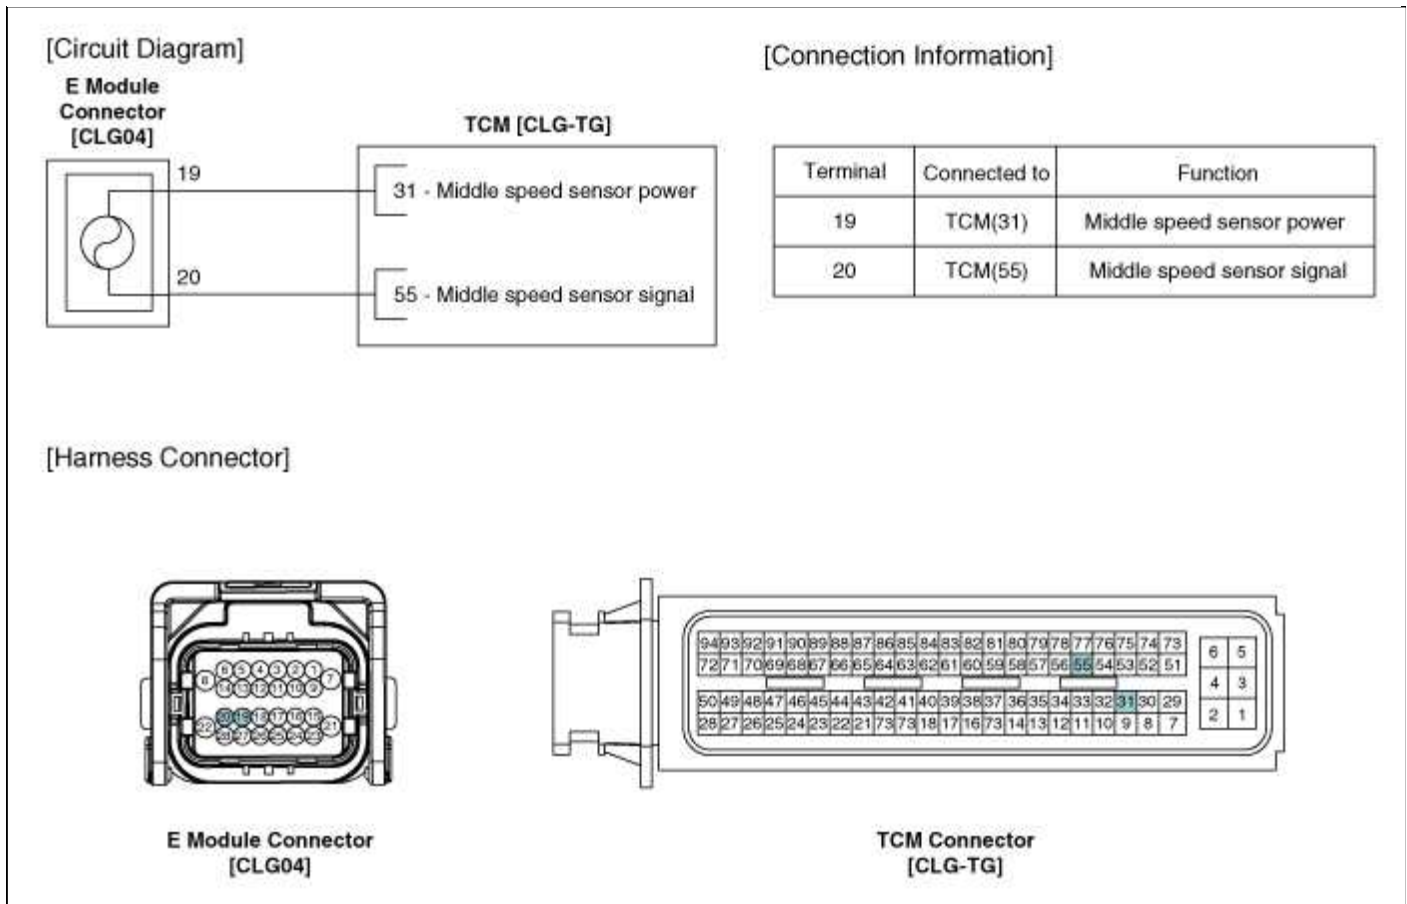


Automatic Transaxle System > Automatic Transaxle Control System > Middle Speed Sensor > Repair procedures

Inspection

1. Check signal waveform of middle speed sensor using the GDS.


Specification: Refer to "Signal Wave Form" section.

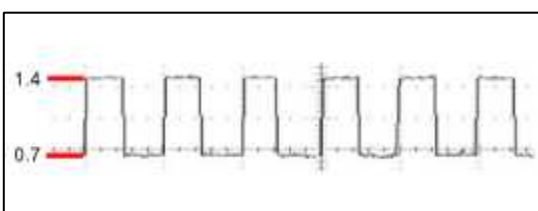

Automatic Transaxle System > Automatic Transaxle Control System > Pressure Switch > Description and Operation

Description

Pressure switch is attached to the valve body. This check the production of hydraulic.

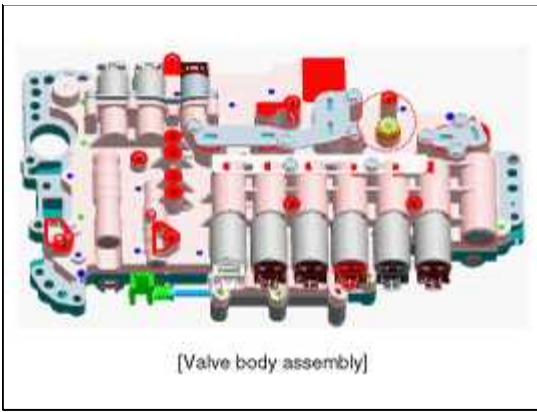


Automatic Transaxle System > Automatic Transaxle Control System > Presure Switch > Specifications

Specifications

	Specifications (20°C(68°F))
OFF => ON	146 ± 40 kPa
ON => OFF	50 kPa

Automatic Transaxle System > Automatic Transaxle Control System > Presure Switch > Schematic Diagrams

Circuit Diagram

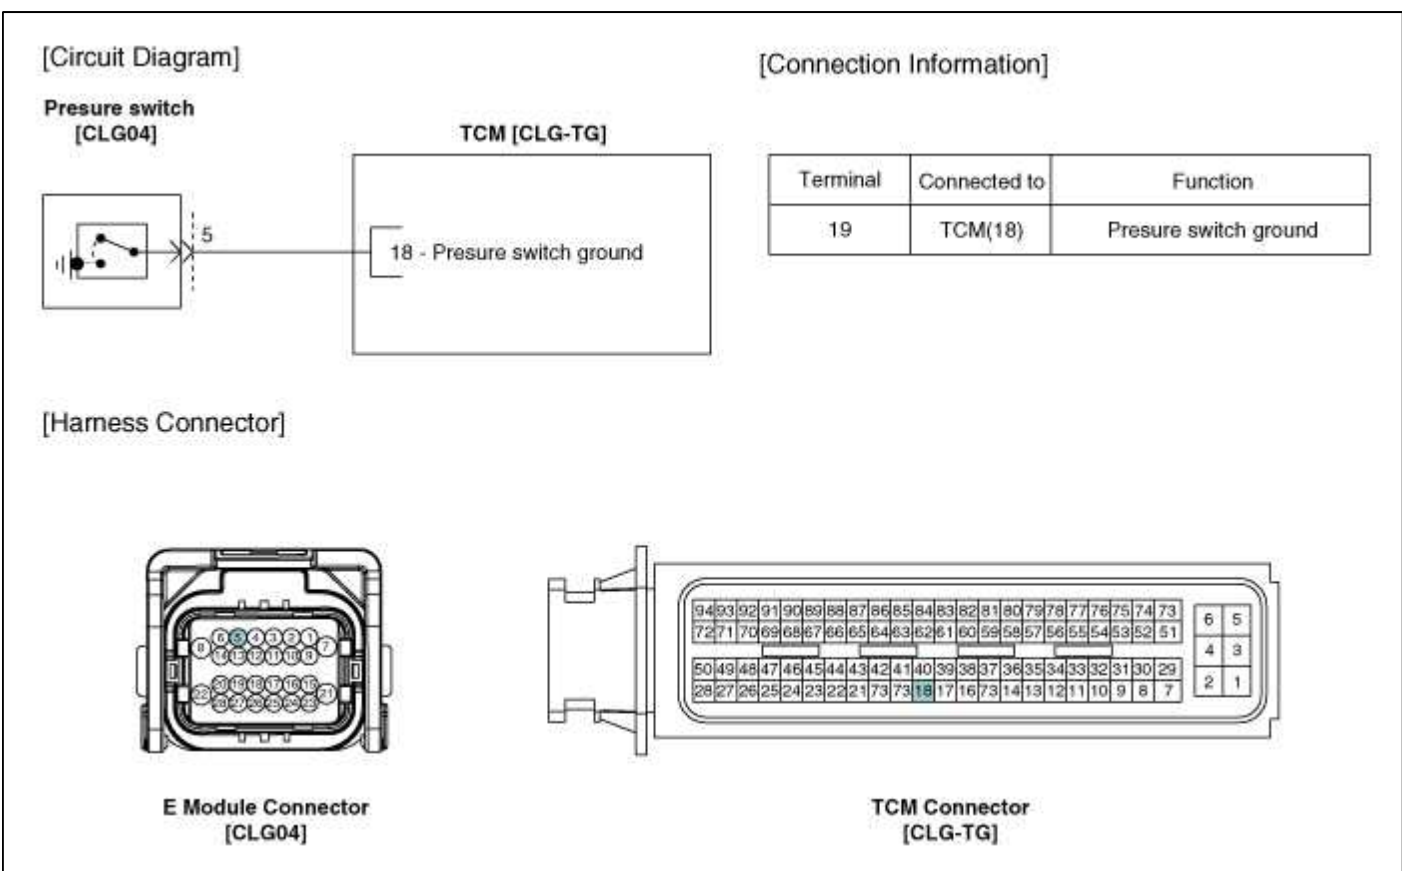

Automatic Transaxle System > Automatic Transaxle Control System > Pressure Switch > Repair procedures


Inspection

1. Turn ignition switch OFF.
2. Disconnect the E Module connector.
3. Measure resistance between switch signal terminal and switch ground terminal.
4. Check that the resistance is within the specification.

Automatic Transaxle System > Automatic Transaxle Control System > 6 Speed Clutch Control Solenoid Valve > Description and Operation

Description

6 Clutch control solenoid valve is attached to the valve body. This variable force solenoid valve directly controls the hydraulic pressure inside the 6 Clutch.

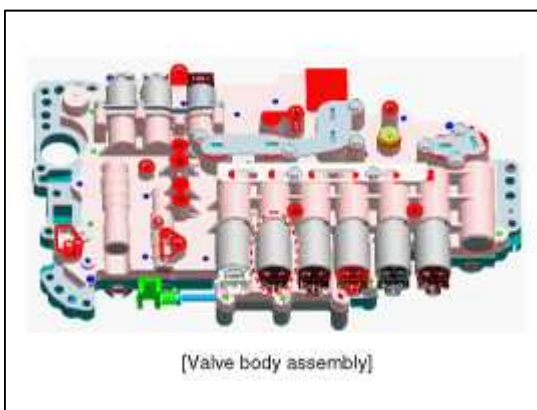

Automatic Transaxle System > Automatic Transaxle Control System > 6 Speed Clutch Control Solenoid Valve > Specifications

Specifications

Direct control VFS[6/C]


Control type : Normal low type

Control Pressure kpa (kgf/cm ² , psi)	0~1569.06 (0~16,0~227.57)
Current value(mA)	0~1100
Internal resistance(Ω)	5.0~5.6

Automatic Transaxle System > Automatic Transaxle Control System > 6 Speed Clutch Control Solenoid Valve > Schematic Diagrams

Circuit Diagram

[Circuit Diagram]

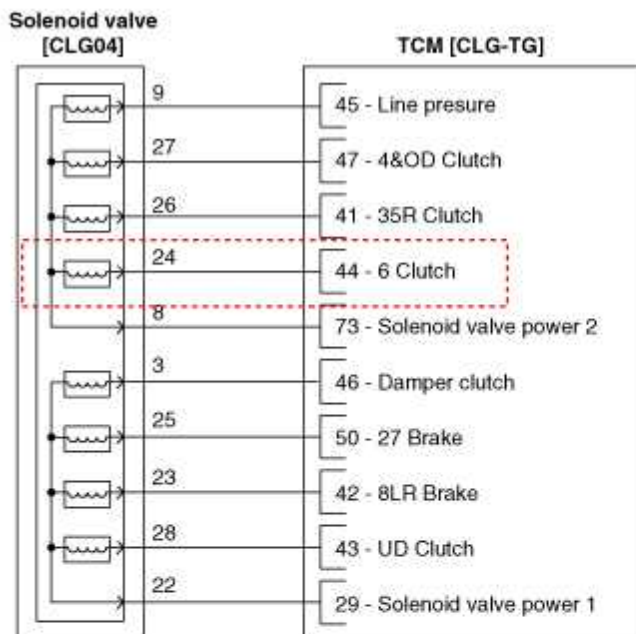


[Connection Information]

Terminal	Connected to	Function
9	TCM(45)	Line pressure control
27	TCM(47)	4&OD Clutch control
26	TCM(41)	35R Clutch control
24	TCM(44)	6 Clutch control
8	TCM(73)	Solenoid valve power 2
3	TCM(46)	Damper clutch control
25	TCM(50)	27 Brake control
23	TCM(42)	8LR Brake control
28	TCM(43)	UD Clutch control
22	TCM(29)	Solenoid valve power 1

[Harness Connector]



**E Module Connector
[CLG04]**

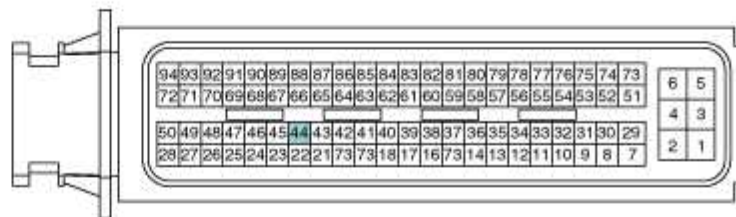

**TCM Connector
[CLG-TG]**

Automatic Transaxle System > Automatic Transaxle Control System > 6 Speed Clutch Control Solenoid Valve > Repair procedures


Inspection

1. Turn ignition switch OFF.
2. Disconnect the E Module connector.
3. Measure resistance between valve signal terminal and valve ground terminal.
4. Check that the resistance is within the specification.

Automatic Transaxle System > Automatic Transaxle Control System > 4&OD Clutch Control Solenoid Valve > Description and Operation

Description

4&OD Clutch control solenoid valve is attached to the valve body. This variable force solenoid valve directly controls the hydraulic pressure inside the 4&OD Clutch.

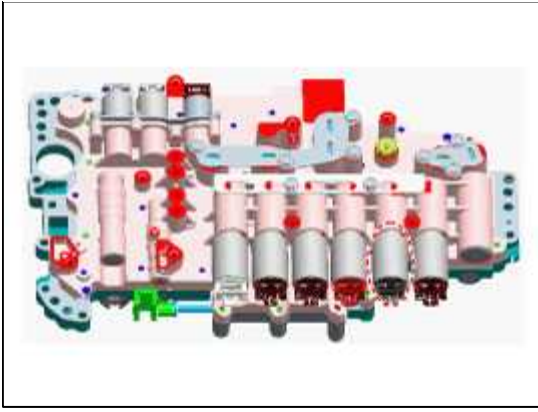

Automatic Transaxle System > Automatic Transaxle Control System > 4&OD Clutch Control Solenoid Valve > Specifications

Specifications

Direct control VFS[4&OD/C]


Control type : Normal low type

Control Pressure kpa (kgf/cm ² , psi)	0~1569.06 (0~16,0~227.57)
Current value(mA)	0~1100
Internal resistance(Ω)	5.0~5.6

Automatic Transaxle System > Automatic Transaxle Control System > 4&OD Clutch Control Solenoid Valve > Schematic Diagrams

Circuit Diagram

[Circuit Diagram]

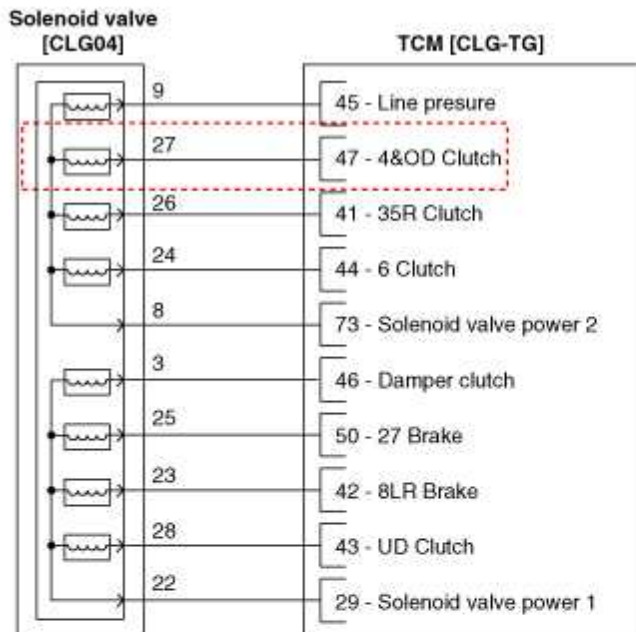


[Connection Information]

Terminal	Connected to	Function
9	TCM(45)	Line pressure control
27	TCM(47)	4&OD Clutch control
26	TCM(41)	35R Clutch control
24	TCM(44)	6 Clutch control
8	TCM(73)	Solenoid valve power 2
3	TCM(46)	Damper clutch control
25	TCM(50)	27 Brake control
23	TCM(42)	8LR Brake control
28	TCM(43)	UD Clutch control
22	TCM(29)	Solenoid valve power 1

[Harness Connector]



E Module Connector [CLG04]

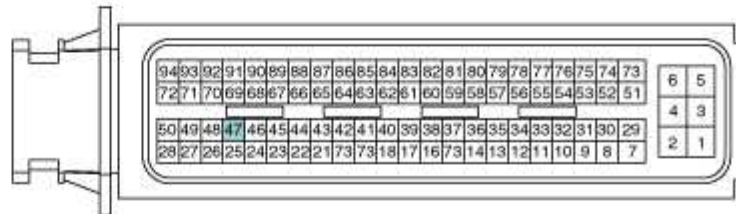

TCM Connector [CLG-TG]

Automatic Transaxle System > Automatic Transaxle Control System > 4&OD Clutch Control Solenoid Valve > Repair procedures


Inspection

1. Turn ignition switch OFF.
2. Disconnect the E Module connector.
3. Measure resistance between valve signal terminal and valve ground terminal.
4. Check that the resistance is within the specification.

Automatic Transaxle System > Automatic Transaxle Control System > 35R Clutch Control Solenoid Valve(35R/C_VFS) > Description and Operation

Description

35R Clutch control solenoid valve is attached to the valve body. This variable force solenoid valve directly controls the hydraulic pressure inside the 35R Clutch.

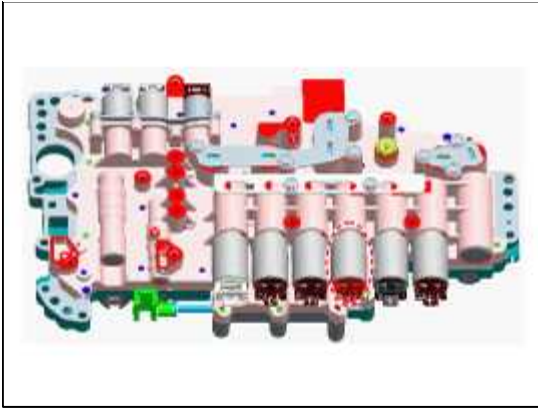

Automatic Transaxle System > Automatic Transaxle Control System > 35R Clutch Control Solenoid Valve(35R/C_VFS) > Specifications

Specifications

Direct control VFS[35R/C]


Control Type : Normal high type

Control Pressure kpa (kgf/cm ² , psi)	0~2108.42 (0~21.5~305.80)
Current value(mA)	0~1100
Internal resistance(Ω)	5.0~5.6

Automatic Transaxle System > Automatic Transaxle Control System > 35R Clutch Control Solenoid Valve(35R/C_VFS) > Schematic Diagrams

Circuit Diagram

[Circuit Diagram]

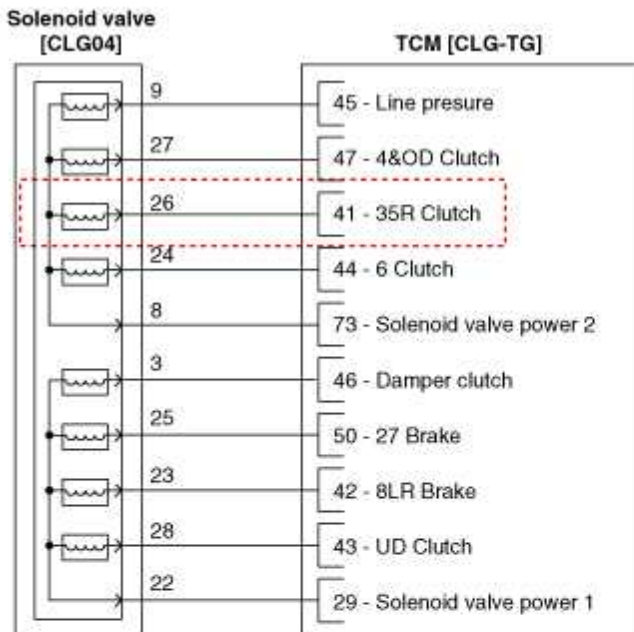

[Connection Information]

Terminal	Connected to	Function
9	TCM(45)	Line pressure control
27	TCM(47)	4&OD Clutch control
26	TCM(41)	35R Clutch control
24	TCM(44)	6 Clutch control
8	TCM(73)	Solenoid valve power 2
3	TCM(46)	Damper clutch control
25	TCM(50)	27 Brake control
23	TCM(42)	8LR Brake control
28	TCM(43)	UD Clutch control
22	TCM(29)	Solenoid valve power 1

[Harness Connector]



E Module Connector [CLG04]



TCM Connector [CLG-TG]

Automatic Transaxle System > Automatic Transaxle Control System > 35R Clutch Control Solenoid Valve(35R/C_VFS) > Repair procedures


Inspection

1. Turn ignition switch OFF.
2. Disconnect the E Module connector.
3. Measure resistance between valve signal terminal and valve ground terminal.
4. Check that the resistance is within the specification.

Automatic Transaxle System > Automatic Transaxle Control System > 27 Brake Control Solenoid Valve > Description and Operation

Description

27 Brake control solenoid valve is attached to the valve body. This variable force solenoid valve directly controls the hydraulic pressure inside the 27 Brake.

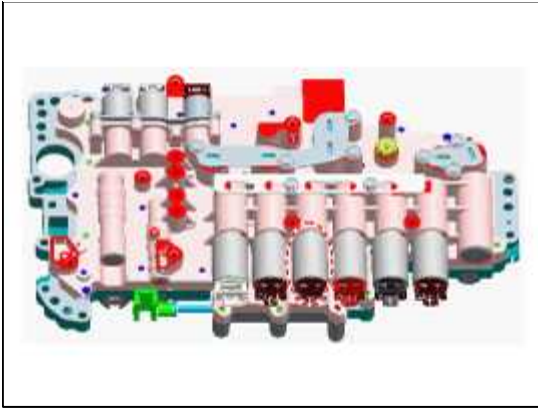

Automatic Transaxle System > Automatic Transaxle Control System > 27 Brake Control Solenoid Valve > Specifications

Specifications

Direct control VFS[27/B]


Control type : Normal low type

Control Pressure kpa (kgf/cm ² , psi)	0~1569.06 (0~16,0~227.57)
Current value(mA)	0~1100
Internal resistance(Ω)	5.0~5.6

Automatic Transaxle System > Automatic Transaxle Control System > 27 Brake Control Solenoid Valve > Schematic Diagrams

Circuit Diagram

[Circuit Diagram]

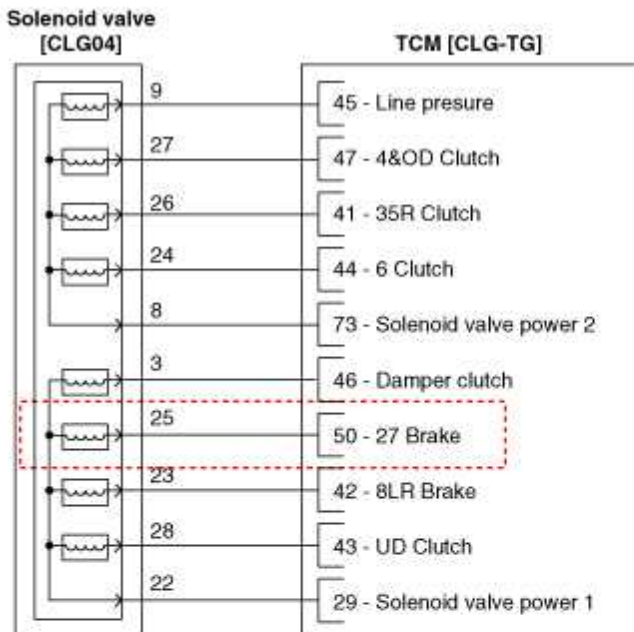


[Connection Information]

Terminal	Connected to	Function
9	TCM(45)	Line pressure control
27	TCM(47)	4&OD Clutch control
26	TCM(41)	35R Clutch control
24	TCM(44)	6 Clutch control
8	TCM(73)	Solenoid valve power 2
3	TCM(46)	Damper clutch control
25	TCM(50)	27 Brake control
23	TCM(42)	8LR Brake control
28	TCM(43)	UD Clutch control
22	TCM(29)	Solenoid valve power 1

[Harness Connector]



**E Module Connector
[CLG04]**

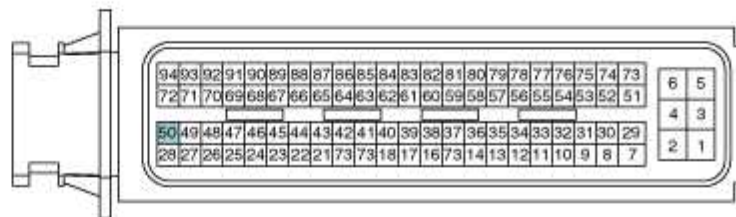

**TCM Connector
[CLG-TG]**

Automatic Transaxle System > Automatic Transaxle Control System > 27 Brake Control Solenoid Valve > Repair procedures


Inspection

1. Turn ignition switch OFF.
2. Disconnect the E Module connector.
3. Measure resistance between valve signal terminal and valve ground terminal.
4. Check that the resistance is within the specification.

Automatic Transaxle System > Automatic Transaxle Control System > Underdrive Brake Control Solenoid Valve(UD/B_VFS) > Description and Operation

Description

UD Clutch control solenoid valve is attached to the valve body. This variable force solenoid valve directly controls the hydraulic pressure inside the UD Clutch.

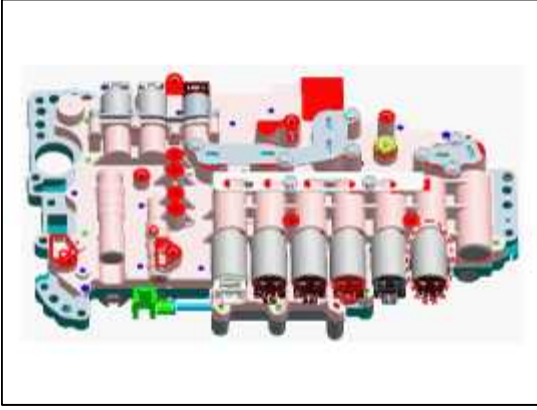

Automatic Transaxle System > Automatic Transaxle Control System > Underdrive Brake Control Solenoid Valve(UD/B_VFS) > Specifications

Specifications

Direct control VFS[UD/C]


Control type : Normal low type

Control Pressure kpa (kgf/cm ² , psi)	0~1569.06 (0~16,0~227.57)
Current value(mA)	0~1100
Internal resistance(Ω)	5.0~5.6

Automatic Transaxle System > Automatic Transaxle Control System > Underdrive Brake Control Solenoid Valve(UD/B_VFS) > Schematic Diagrams

Circuit Diagram

[Circuit Diagram]

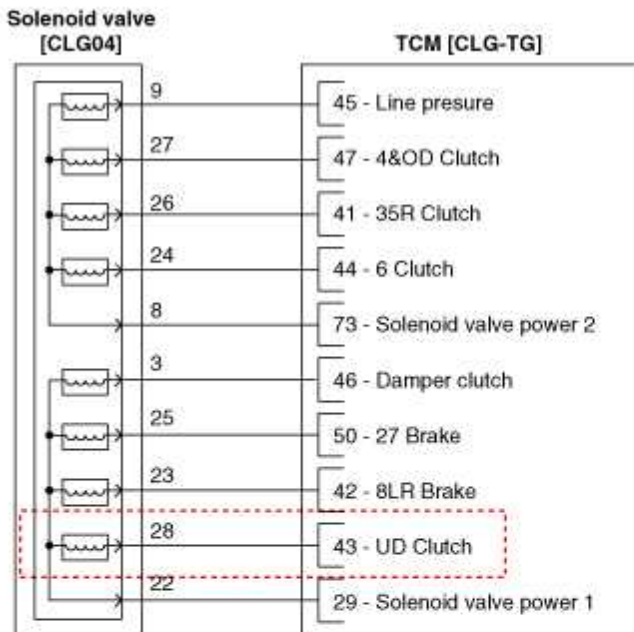


[Connection Information]

Terminal	Connected to	Function
9	TCM(45)	Line pressure control
27	TCM(47)	4&OD Clutch control
26	TCM(41)	35R Clutch control
24	TCM(44)	6 Clutch control
8	TCM(73)	Solenoid valve power 2
3	TCM(46)	Damper clutch control
25	TCM(50)	27 Brake control
23	TCM(42)	8LR Brake control
28	TCM(43)	UD Clutch control
22	TCM(29)	Solenoid valve power 1

[Harness Connector]



**E Module Connector
[CLG04]**

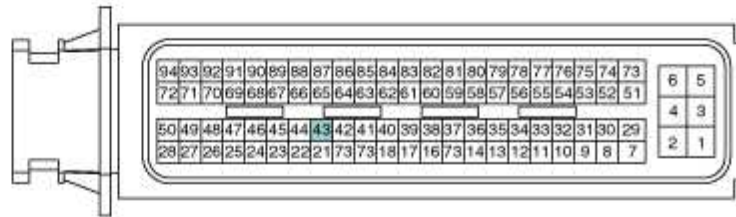

**TCM Connector
[CLG-TG]**

Automatic Transaxle System > Automatic Transaxle Control System > Underdrive Brake Control Solenoid Valve(UD/B_VFS) > Repair procedures


Inspection

1. Turn ignition switch OFF.
2. Disconnect the E Module connector.
3. Measure resistance between valve signal terminal and valve ground terminal.
4. Check that the resistance is within the specification.

Automatic Transaxle System > Automatic Transaxle Control System > 8LR Brake Control Solenoid Valve > Description and Operation

Description

8LR Brake control solenoid valve is attached to the valve body. This variable force solenoid valve directly controls the hydraulic pressure inside the 8LR Brake.

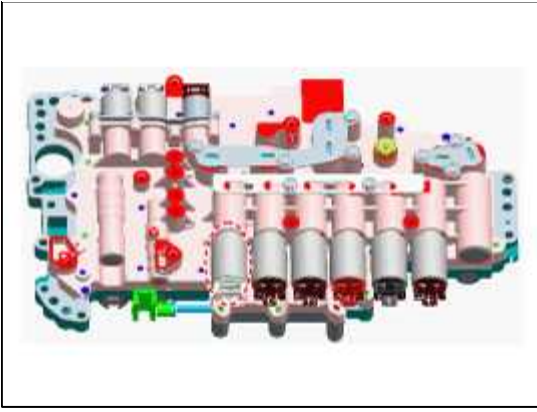

Automatic Transaxle System > Automatic Transaxle Control System > 8LR Brake Control Solenoid Valve > Specifications

Specifications

Direct control VFS[8LR/B]


Control Type : Normal low type

Control Pressure kpa (kgf/cm ² , psi)	0~2108.42 (0~21.5~305.80)
Current value(mA)	0~1100
Internal resistance(Ω)	5.0~5.6

Automatic Transaxle System > Automatic Transaxle Control System > 8LR Brake Control Solenoid Valve > Schematic Diagrams

Circuit Diagram

[Circuit Diagram]

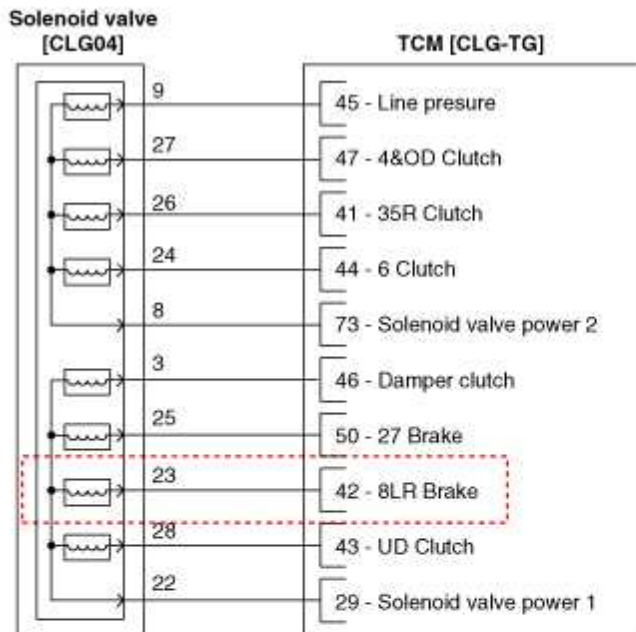


[Connection Information]

Terminal	Connected to	Function
9	TCM(45)	Line pressure control
27	TCM(47)	4&OD Clutch control
26	TCM(41)	35R Clutch control
24	TCM(44)	6 Clutch control
8	TCM(73)	Solenoid valve power 2
3	TCM(46)	Damper clutch control
25	TCM(50)	27 Brake control
23	TCM(42)	8LR Brake control
28	TCM(43)	UD Clutch control
22	TCM(29)	Solenoid valve power 1

[Harness Connector]



**E Module Connector
[CLG04]**

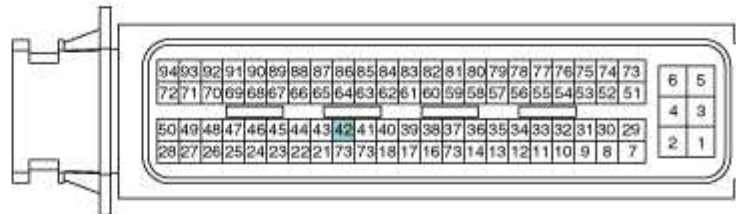

**TCM Connector
[CLG-TG]**

Automatic Transaxle System > Automatic Transaxle Control System > 8LR Brake Control Solenoid Valve > Repair procedures


Inspection

1. Turn ignition switch OFF.
2. Disconnect the E Module connector.
3. Measure resistance between valve signal terminal and valve ground terminal.
4. Check that the resistance is within the specification.

Automatic Transaxle System > Automatic Transaxle Control System > Line Pressure Control Solenoid Valve > Description and Operation

Description

Line pressure control solenoid valve is attached to the valve body. This variable force solenoid valve directly controls the hydraulic pressure inside the line pressure .

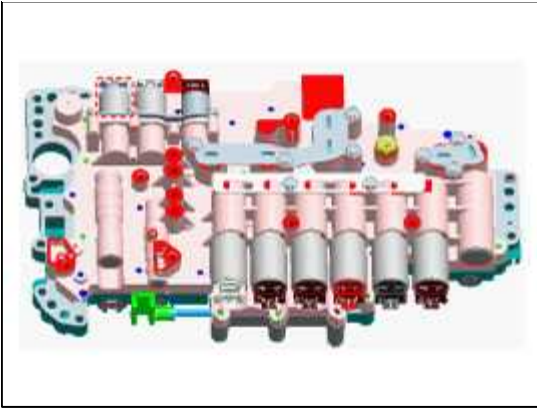

Automatic Transaxle System > Automatic Transaxle Control System > Line Pressure Control Solenoid Vale > Specifications

Specifications

Line Pressure Control VFS


Control type : Normal high type

Control Pressure kpa (kgf/cm ² , psi)	0~500.14 (0~5.1,0~72.54)
Current value(mA)	0~850
Internal resistance(Ω)	4.8~5.4

Automatic Transaxle System > Automatic Transaxle Control System > Line Pressure Control Solenoid Vale > Schematic Diagrams

Circuit Diagram

[Circuit Diagram]

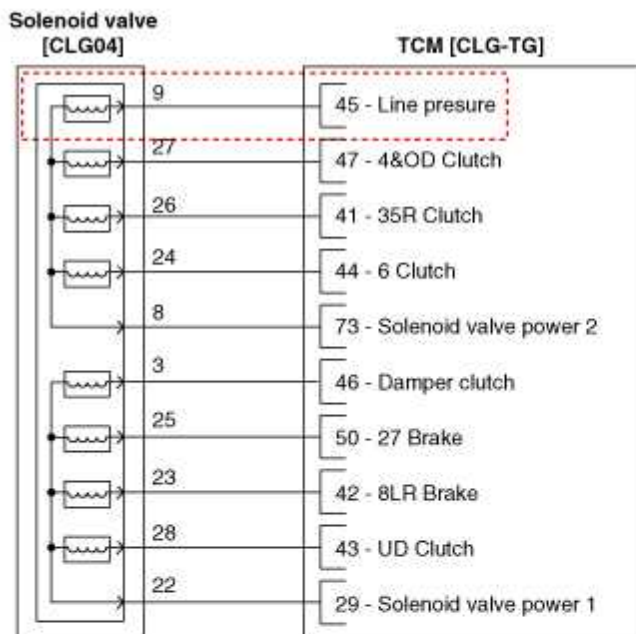


[Connection Information]

Terminal	Connected to	Function
9	TCM(45)	Line pressure control
27	TCM(47)	4&OD Clutch control
26	TCM(41)	35R Clutch control
24	TCM(44)	6 Clutch control
8	TCM(73)	Solenoid valve power 2
3	TCM(46)	Damper clutch control
25	TCM(50)	27 Brake control
23	TCM(42)	8LR Brake control
28	TCM(43)	UD Clutch control
22	TCM(29)	Solenoid valve power 1

[Harness Connector]



E Module Connector
[CLG04]

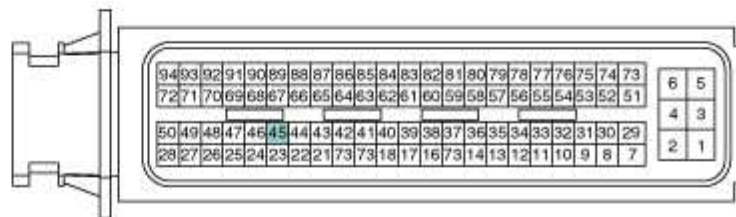

TCM Connector
[CLG-TG]

Automatic Transaxle System > Automatic Transaxle Control System > Line Pressure Control Solenoid Valve > Repair procedures


Inspection

1. Turn ignition switch OFF.
2. Disconnect the E Module connector.
3. Measure resistance between valve signal terminal and valve ground terminal.
4. Check that the resistance is within the specification.

Automatic Transaxle System > Automatic Transaxle Control System > Damper Clutch Control Solenoid Valve > Description and Operation

Description

Damper Clutch control solenoid valve is attached to the valve body. This variable force solenoid valve directly controls the hydraulic pressure inside the Damper Clutch.

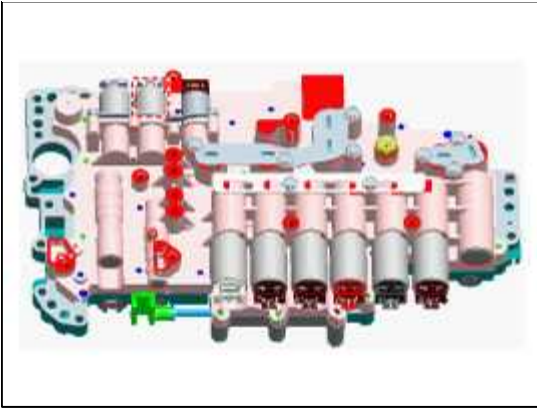

Automatic Transaxle System > Automatic Transaxle Control System > Damper Clutch Control Solenoid Valve > Specifications

Specifications

Damper Clutch Control VFS


Control type : Normal low type

Control Pressure kpa (kgf/cm ² , psi)	0~500.14 (0~5.1,0~72.54)
Current value(mA)	0~850
Internal resistance(Ω)	4.8~5.4

Automatic Transaxle System > Automatic Transaxle Control System > Damper Clutch Control Solenoid Valve > Schematic Diagrams

Circuit Diagram

[Circuit Diagram]

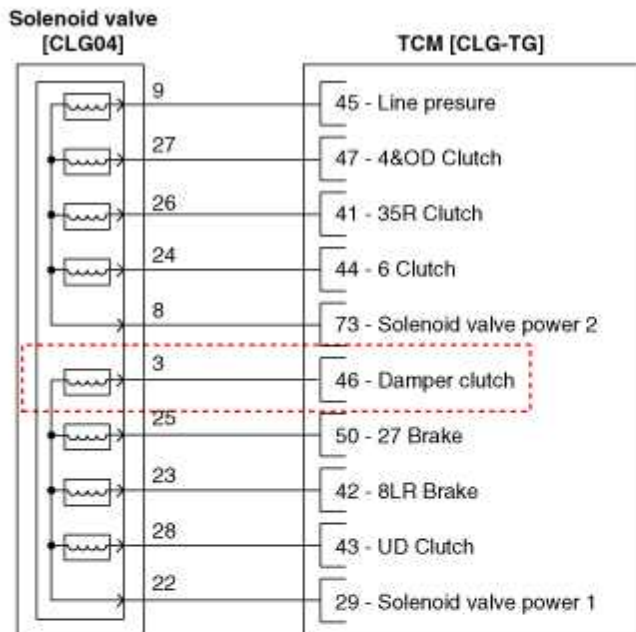


[Connection Information]

Terminal	Connected to	Function
9	TCM(45)	Line pressure control
27	TCM(47)	4&OD Clutch control
26	TCM(41)	35R Clutch control
24	TCM(44)	6 Clutch control
8	TCM(73)	Solenoid valve power 2
3	TCM(46)	Damper clutch control
25	TCM(50)	27 Brake control
23	TCM(42)	8LR Brake control
28	TCM(43)	UD Clutch control
22	TCM(29)	Solenoid valve power 1

[Harness Connector]



**E Module Connector
[CLG04]**

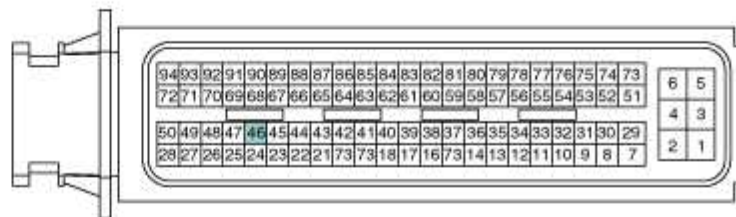

**TCM Connector
[CLG-TG]**

Automatic Transaxle System > Automatic Transaxle Control System > Damper Clutch Control Solenoid Valve > Repair procedures


Inspection

1. Turn ignition switch OFF.
2. Disconnect the E Module connector.
3. Measure resistance between valve signal terminal and valve ground terminal.
4. Check that the resistance is within the specification.

Automatic Transaxle System > Automatic Transaxle Control System > ON/OFF Solenoid Valve > Description and Operation

Description

ON/OFF solenoid valve is attached to the valve body and is an on/off solenoid valve that is used to change gears.

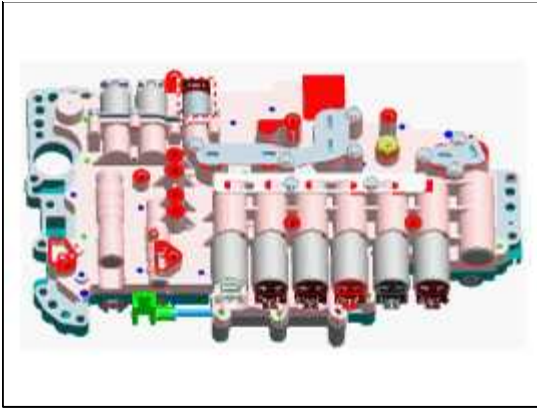

Automatic Transaxle System > Automatic Transaxle Control System > ON/OFF Solenoid Valve > Specifications

Specifications

ON/OFF Solenoid Valve

Control type : Normal low type

Control pressure kpa (kgf/cm ² , psi)	539.36 (5.5, 78.23)
Internal resistance(Ω)	10~11

Automatic Transaxle System > Automatic Transaxle Control System > ON/OFF Solenoid Valve > Schematic Diagrams

Circuit Diagram

[Circuit Diagram]

[Connection Information]

Terminal	Connected to	Function
4	TCM(52)	ON/OFF Solenoid
7	TCM(70)	Solenoid power

[Harness Connector]

E Module Connector
[CLG04]

TCM Connector
[CLG-TG]

Automatic Transaxle System > Automatic Transaxle Control System > ON/OFF Solenoid Valve > Repair procedures


Inspection

1. Turn ignition switch OFF.
2. Disconnect the E Module connector.
3. Measure resistance between valve signal terminal and valve ground terminal.
4. Check that the resistance is within the specification.

Automatic Transaxle System > Automatic Transaxle Control System > Inhibitor Switch > Description and Operation

Description

Inhibitor Switch monitors the lever's position(PRND) and is used to control gear setting signals.

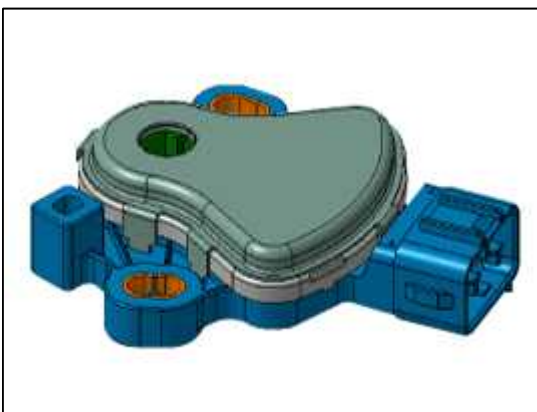

Automatic Transaxle System > Automatic Transaxle Control System > Inhibitor Switch > Specifications

Specifications

Type: Combination of output signals from 4 terminals

Power supply (V)	12
Output type	Pin to Pin


Signal Code Table

PIN No.	P	P-R	R	R-N	N	N-D	D
S1	12V	12V	O	O	O	O	O
S2	O	12V	12V	12V	O	O	O
S3	O	O	O	12V	12V	12V	O
S4	O	O	O	O	O	12V	12V

Automatic Transaxle System > Automatic Transaxle Control System > Inhibitor Switch > Schematic Diagrams

Circuit Diagram

[Circuit Diagram]

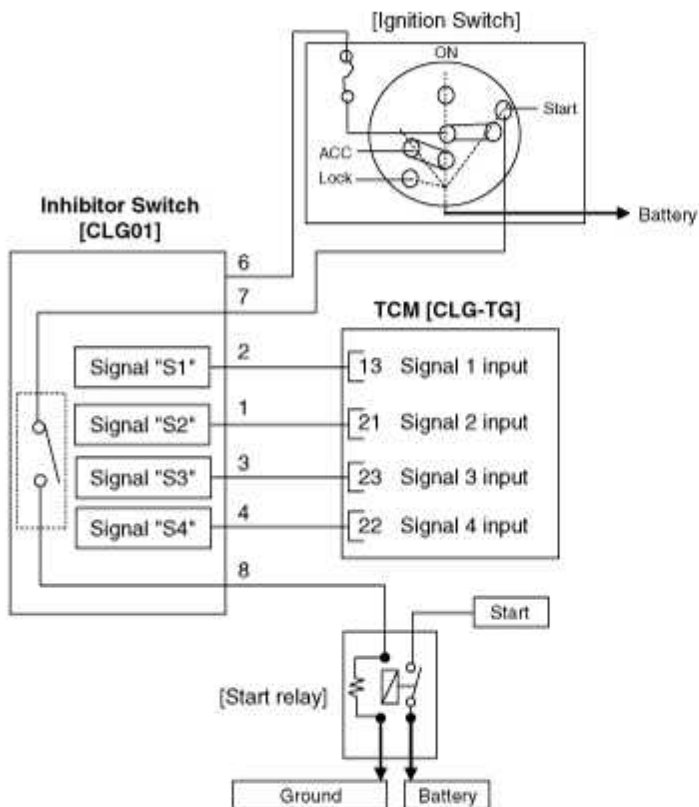


[Connection Information]

Terminal	Connected to	Function
1	TCM (21)	Signal 2 input
2	TCM (13)	Signal 1 input
3	TCM (23)	Signal 3 input
4	TCM (22)	Signal 4 input
6	Ignition switch	IG 1
7	Ignition switch	Start power(ON) 12V
8	Start relay	Start relay

[Harness Connector]



Inhibitor Switch Connector
[CLG01]

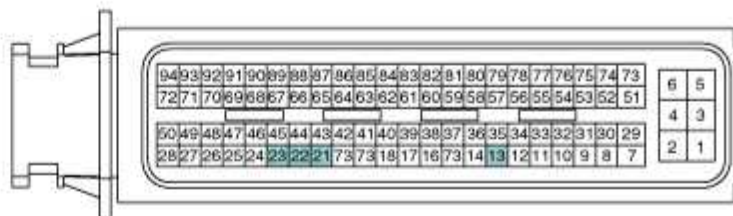

TCM Connector
[CLG-TG]

Automatic Transaxle System > Automatic Transaxle Control System > Inhibitor Switch > Repair procedures

Inspection

NOTE

- Thoroughly check connectors for looseness, poor connection, bending, corrosion, contamination, deterioration, or damage.

Power Circuit Inspection

1. Disconnect the Inhibitor switch connector.
2. Ignition KEY "ON" & Engine "OFF".

3. Measure voltage between supplied power and ground at inhibitor circuit.

Specification : Approx. 12V

Signal Circuit Inspection

1. Connect the Inhibitor switch connector.
2. Ignition KEY "ON" & Engine "OFF".
3. Measure voltages between each terminal and chassis ground during shift lever changed "P, R, N, D".

Specification : See below "Signal Code Table"

Signal Code Table


	P	P-R	R	R-N	N	N-D	D
Signal "1"	12V	12V	0	0	0	0	0
Signal "2"	0	12V	12V	12V	0	0	0
Signal "3"	0	0	0	12V	12V	12V	0
Signal "4"	0	0	0	0	0	12V	12V

Removal

1. Turn ignition switch OFF and disconnect the negative (-) battery cable.
2. Disconnect the inhibitor connector (B) and then remove the shift cable (A) by removing nut (C).

Tightening torque:

13.7 ~ 17.7 N.m (1.4 ~ 1.8 kgf.m, 10.1 ~ 13.0 lb-ft)

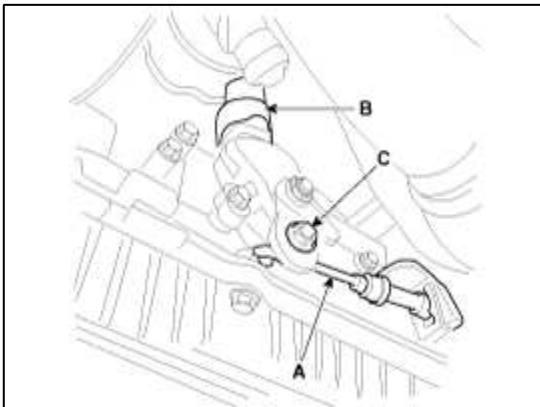


3. Remove the manual control lever (B) after removing a nut (A).

4. Remove the inhibitor switch assembly after removing the bolts (C).

Tightening torque:

[A] 16.7 ~ 25.5 N.m (1.7 ~ 2.6 kgf.m, 12.3 ~ 18.8 lb-ft)

[C] 9.8 ~ 11.8 N.m (1.0 ~ 1.2 kgf.m, 7.2 ~ 8.7 lb-ft)

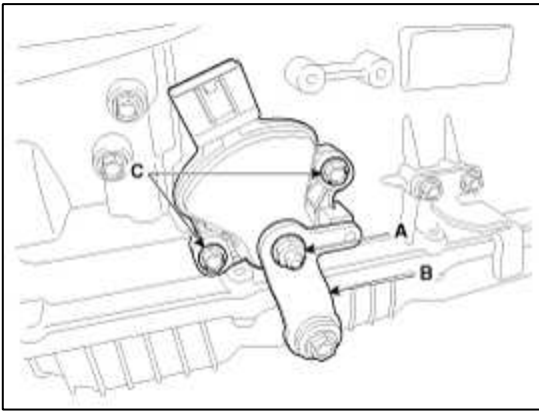


Installation

1. Installation is the reverse of removal.

NOTE


- Assemble the control lever (B) after seating hole (A) aligning.

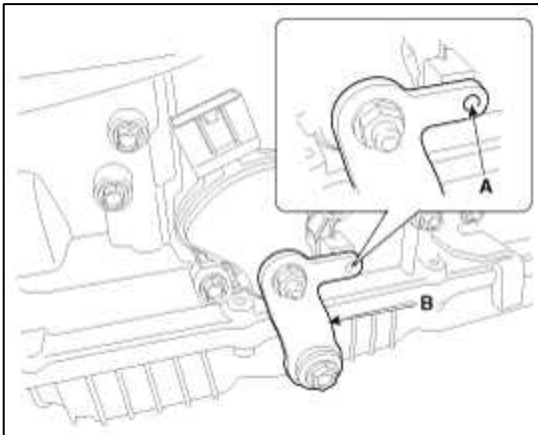

- Install the shift cable after adjust the FREE PLAY of cable.

Automatic Transaxle System > Automatic Transaxle Control System > Shift Lever > Components and Components Location

Components

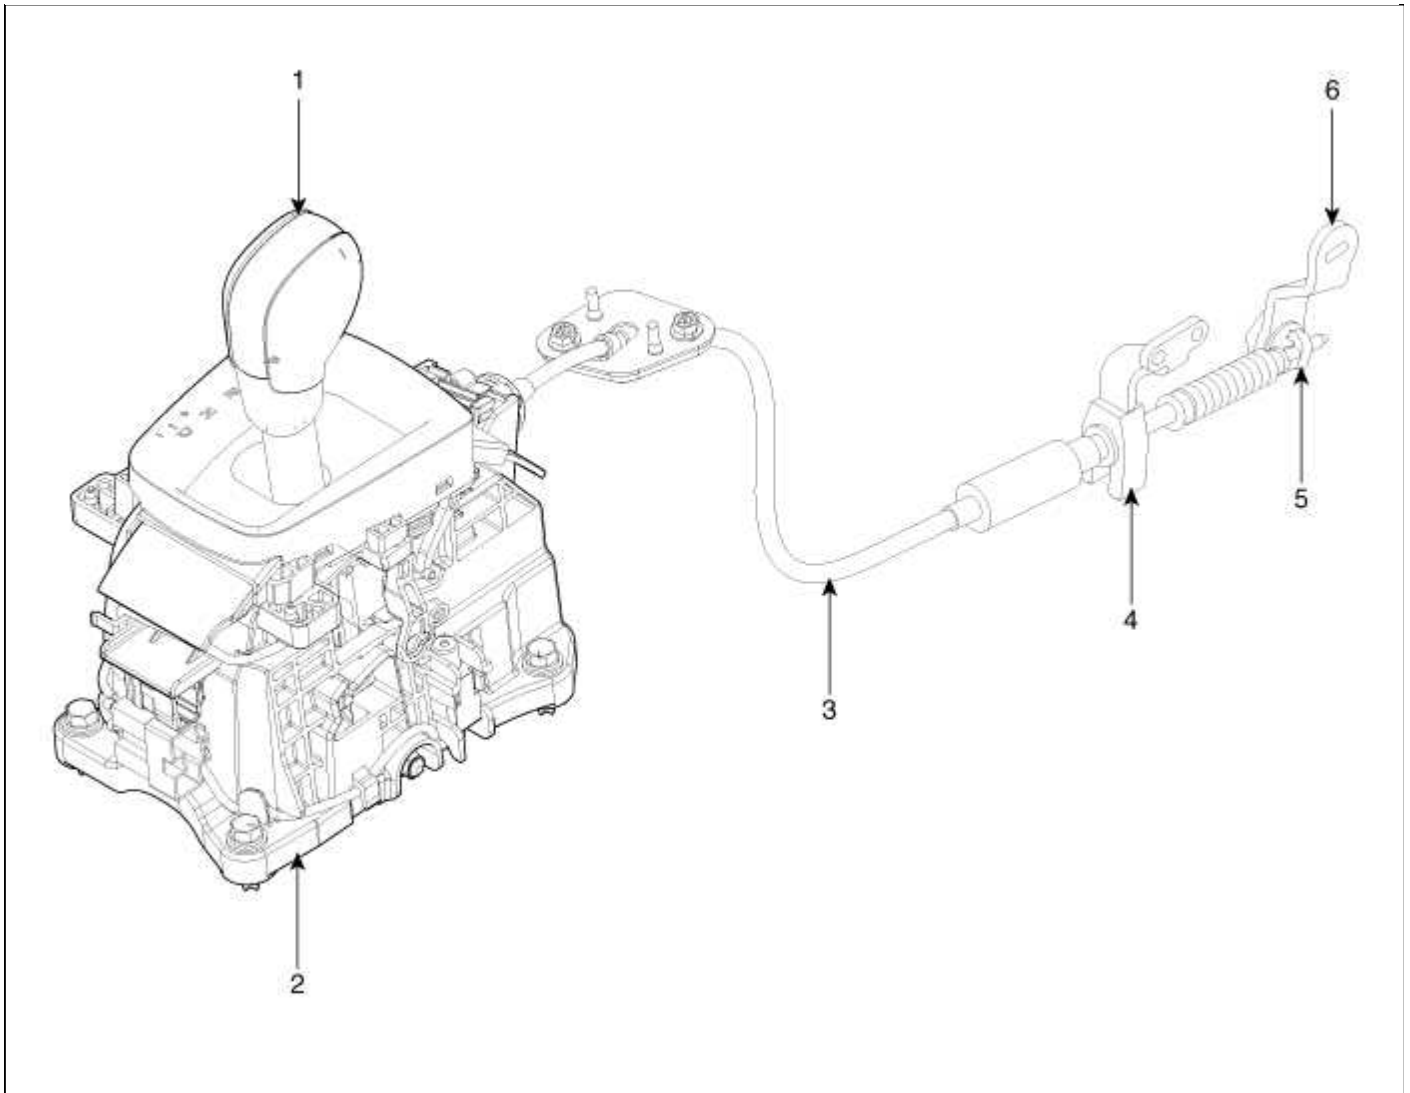


- | | |
|-------------------------|-----------------|
| 1. Shift lever knob | 4. Bracket |
| 2. Shift lever assembly | 5. Special bolt |
| 3. Shift cable | 6. Manual lever |

Automatic Transaxle System > Automatic Transaxle Control System > Shift Lever > Repair procedures


Removal

1. Disconnect (-) terminal from the battery.
2. Remove the console assembly.
(Refer to Body - "console")

3. Disconnect the sport mode connector (A) and indicator connector (B).

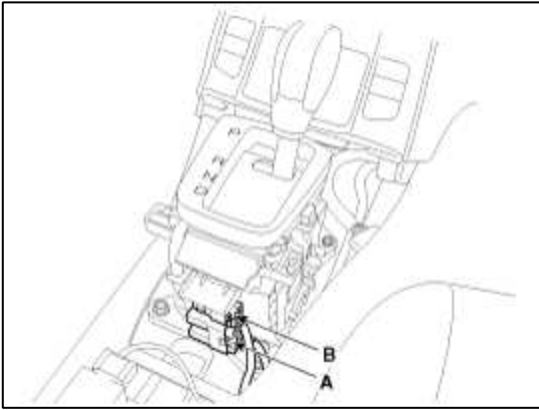


4. Take off the clip (A) and remove the shift cable assembly (C) by pressing the guide (B).

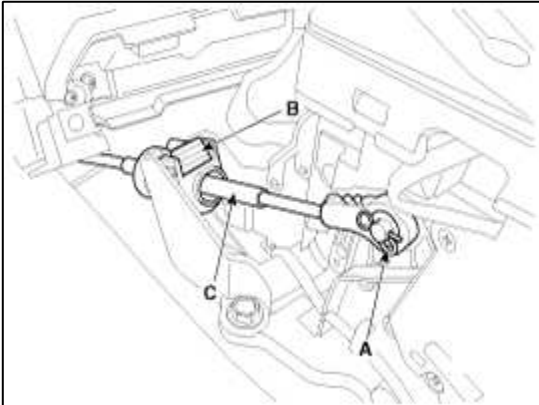

5. Remove the shift lever assembly (A) by removing the bolts.

Tightening torque :

9 ~ 14 N.m (0.9 ~ 1.4 kgf.m, 6.51 ~ 10.12 lb-ft)

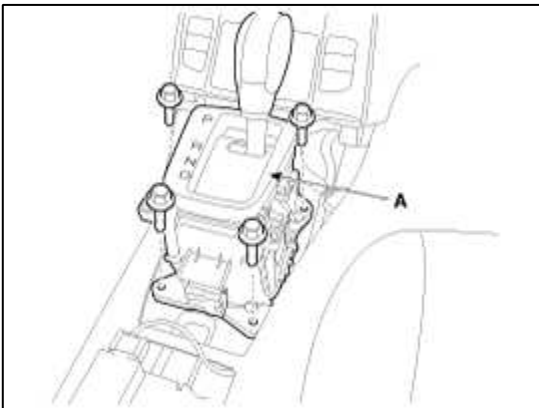

Installation


1. Installation is the reverse order of removal.

CAUTION

- When installing, set room side Shift lever and T/M side manual control lever to N position.
- After installing, check to be sure that this part operates as designed at each range of T/M side corresponding to each position of room lever.

Automatic Transaxle System > Automatic Transaxle Control System > Shift Cable > Components and Components Location

Components

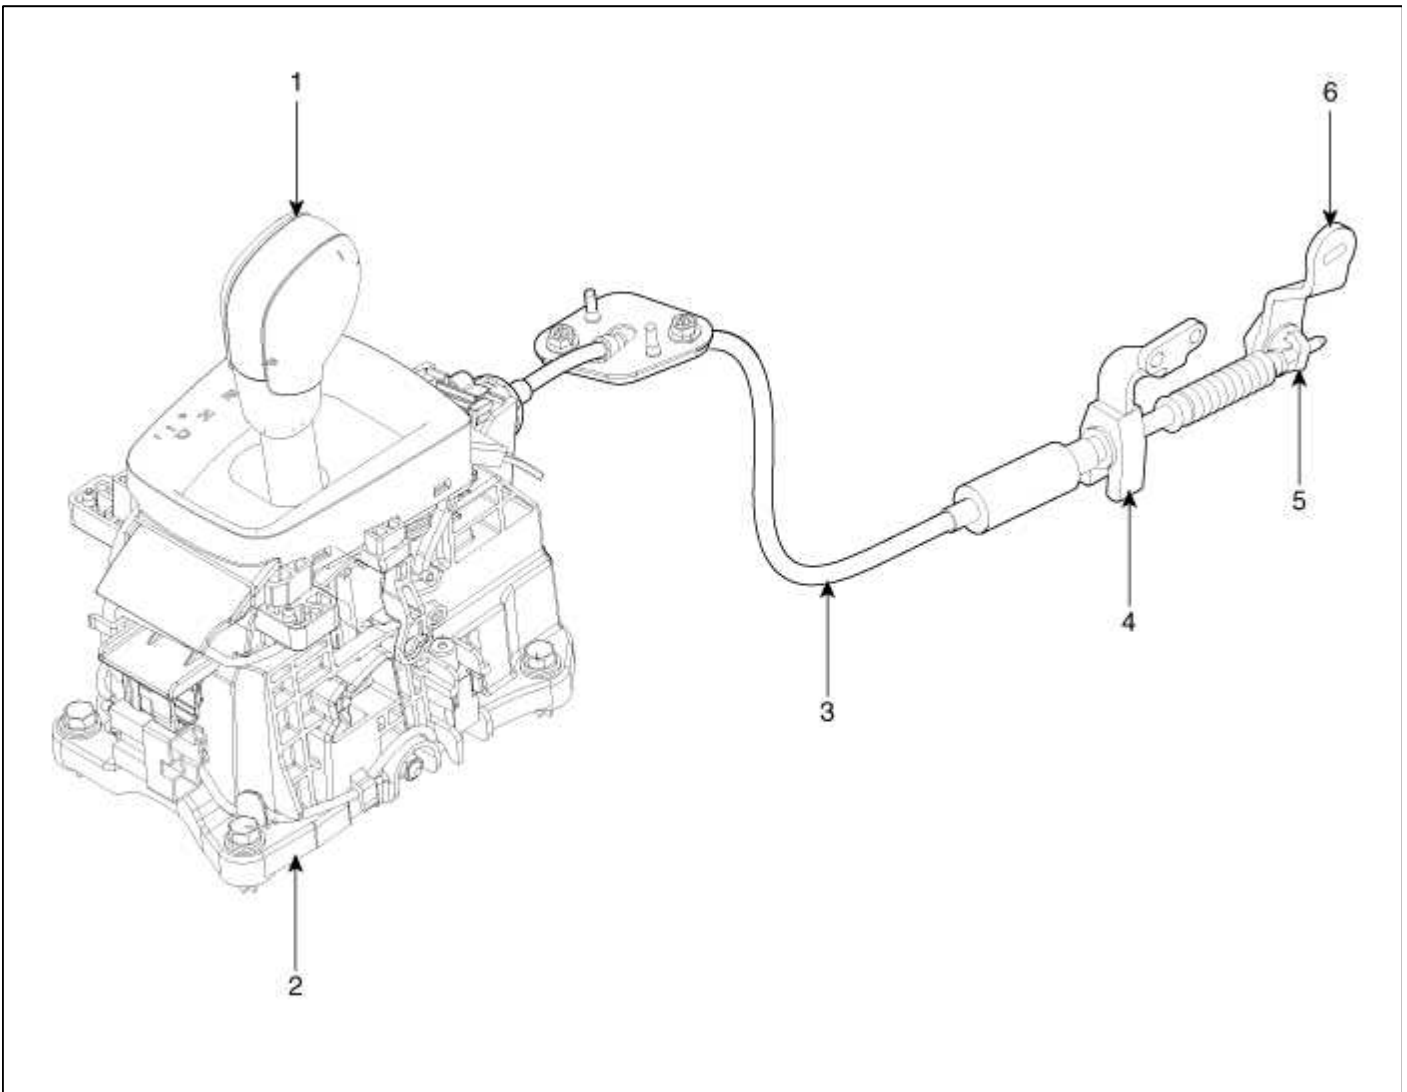

1. Shift lever knob	4. Bracket
2. Shift lever assembly	5. Special bolt assembly
3. Shift cable	6. Manual lever

Automatic Transaxle System > Automatic Transaxle Control System > Shift Cable > Repair procedures


Inspection

1. Check the damage and operation of the control cable.
2. Check the damage of the boot.
3. Check the damage and corrosion of the bushing.
4. Check the damage or weakening of the spring.

Removal

1. Disconnect (-) terminal from the battery.


2. Loosen the nut (B) and then remove the shift cable (C) by removing the clip (A).

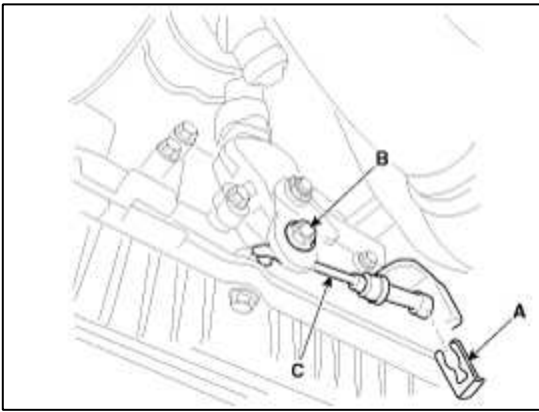


NOTE

Do not reuse the clip (A).

3. Remove the console assembly.
(Refer to Body - "console")
4. Take off the clip (A) and remove the shift cable assembly (C) by pressing the guide (B).

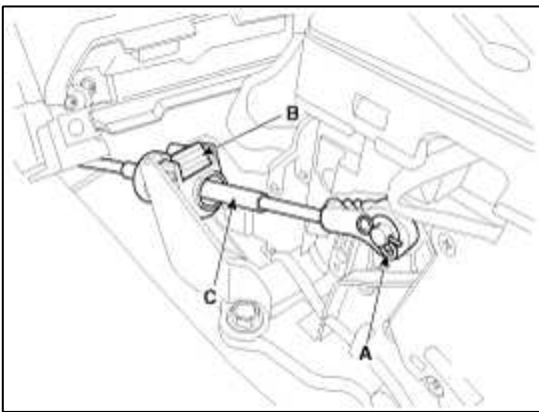

5. Remove the retainer (A).

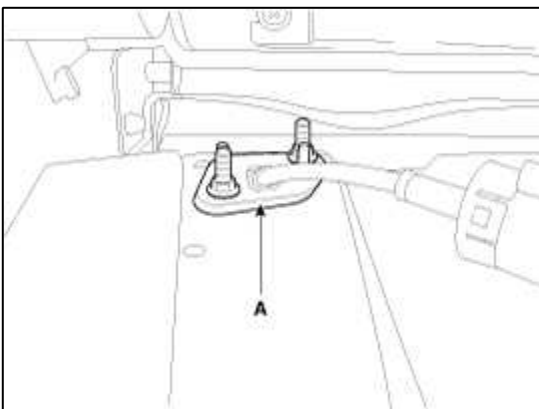

Installation

1. Installation is the reverse order of removal.

CAUTION

- When installing, set room side Shift lever and T/M side manual control lever to N position.
- When installing, adjust the shift cable.
- After installing, check to be sure that this part operates as designed at each range of T/M side corresponding to each position of room lever.


Adjustment

How To Adjust Shift Cable

1. Set room side Shift lever and T/M side manual control lever to N position.
2. Insert the shift cable to the bracket and hold it with a new clip.
3. Push cable to "F" direction shown to eliminate FREE PLAY.
4. Firmly hold the special bolt with a spanner and tighten the nut with the specified torque.

Tightening torque :

13.7 ~ 17.7 N.m (1.4 ~ 1.8 kgf.m, 10.1 ~ 13.0 lb-ft)

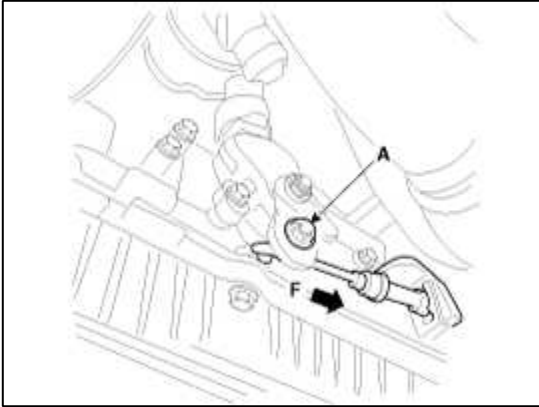

GENESIS COUPE(BK) > 2013 > G 3.8 GDI > Body (Interior and Exterior)**Body (Interior and Exterior) > General Information > Specifications**

Specifications

Item		Specification
Hood	Type	Rear hinged, gas lifter type
Front Door	Construction	Front hinged, full door construction
	Regulator system	Wire drum type
	Locking system	Pin-fork system
Trunk Lid	Type	Torsion bar type
Seat Belts	Front	3 point type with Emergency Locking Retractor (E.L.R)
	Rear	2 point type with Emergency Locking Retractor (E.L.R)



Tightening Torques






Items		N.m	Kgf.m	lb-ft
Front door	Door hinge to body	33.3 ~ 41.2	3.4 ~ 4.2	24.6~ 30.4
	Door hinge to door	21.6 ~ 26.5	2.2 ~ 2.7	15.9 ~ 19.5
	Door checker to door	6.9 ~ 10.8	0.7 ~ 1.1	5.1 ~ 8.0
	Door checker to body	16.7 ~ 21.6	1.7 ~ 2.2	12.3 ~ 15.9
	Door glass mounting bolt	3.9 ~ 2.9	0.4 ~ 1.2	11.8 ~ 8.7
	Outside handle cover mounting bolt	6.9 ~ 10.8	0.7 ~ 1.1	5.1 ~ 8.0
	Latch mounting bolts	6.9 ~ 10.8	0.7 ~ 1.1	5.1 ~ 8.0
	Door channel mounting nuts	3.9 ~ 5.9	0.4 ~ 0.6	2.9 ~ 4.3
	Door module mounting bolts	6.9 ~ 10.8	0.7 ~ 1.1	5.1 ~ 8.0
	Door striker mounting bolts	16.7 ~ 21.6	1.7 ~ 2.2	12.3 ~ 15.9
Trunk lid	Trunk lid hinge to body	6.9 ~ 8.8	0.7 ~ 0.9	5.1 ~ 6.5
	Trunk lid hinge to trunk lid	6.9 ~ 8.8	0.7 ~ 0.9	5.1 ~ 6.5
	Trunk lid latch mounting bolts	6.9 ~ 10.8	0.7 ~ 1.1	5.1 ~ 8.0
	Trunk lid striker mounting bolts	6.9 ~ 10.8	0.7 ~ 1.1	5.1 ~ 8.0
Hood	Hood hinge to body	21.6 ~ 26.5	2.2 ~ 2.7	15.9 ~ 19.5
	Hood hinge to hood	21.6 ~ 26.5	2.2 ~ 2.7	15.9 ~ 19.5
	Hood latch to body	7.8 ~ 11.8	0.8 ~ 1.2	5.8 ~ 8.7
Seat	Front seat mounting bolts	49.0 ~ 63.7	5.0 ~ 6.5	36.2 ~ 47.0
	Front seat frame mounting bolts	49.0 ~ 63.7	5.0 ~ 6.5	36.2 ~ 47.0
	Rear seat cushion mounting bolts	34.3 ~ 53.9	3.5 ~ 5.5	25.3 ~ 39.8

	Rear seat back mounting bolts	34.3 ~ 53.9	3.5 ~ 5.5	25.3 ~ 39.8
	Rear seat latch mounting bolts	19.6 ~ 29.4	2.0 ~ 3.0	14.5 ~ 21.7
Seat belt	Height adjuster mounting bolts	39.2 ~ 53.9	4.0 ~ 5.5	28.9 ~ 39.8
	Front seat belt upper anchor mounting bolt	39.2 ~ 53.9	4.0 ~ 5.5	28.9 ~ 39.8
	Front seat belt lower anchor mounting bolt	39.2 ~ 53.9	4.0 ~ 5.5	28.9 ~ 39.8
	Front seat belt retractor mounting bolt	39.2 ~ 53.9	4.0 ~ 5.5	28.9 ~ 39.8
	Rear seat belt lower anchor mounting bolt	39.2 ~ 53.9	4.0 ~ 5.5	28.9 ~ 39.8
	Rear seat belt retractor mounting bolt	39.2 ~ 53.9	4.0 ~ 5.5	28.9 ~ 39.8
	Seat belt buckle mounting bolt	39.2 ~ 53.9	4.0 ~ 5.5	28.9 ~ 39.8
	Outside rearview mirror	Outside rearview mirror mounting nuts	6.9 ~ 10.8	0.7 ~ 1.1
Wiper arm	Wiper arm mounting nuts	22.6 ~ 26.5	2.3 ~ 2.7	16.6 ~ 19.5
Sunroof	Sunroof mounting nuts	3.9 ~ 5.9	0.4 ~ 0.6	2.9 ~ 4.3
	Sunroof mounting bolts	6.9 ~ 10.8	0.7 ~ 1.1	5.1 ~ 8.0

Body (Interior and Exterior) > General Information > Special Service Tools

Special Service Tools

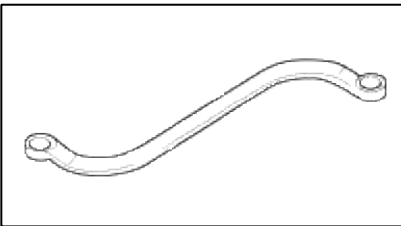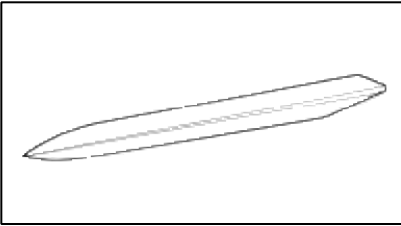Tool (Number and name)	Illustration	Use
09793-21000 Door hinge adjusting wrench		Adjustment, removal and installation of the door hinge
09800-21000 Ornament remover		Trim removal
09853-31000		Headliner clip removal

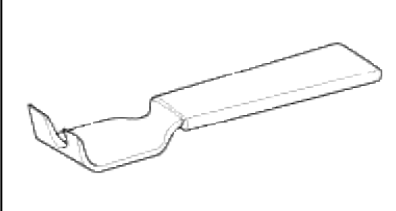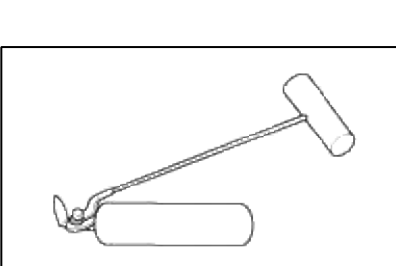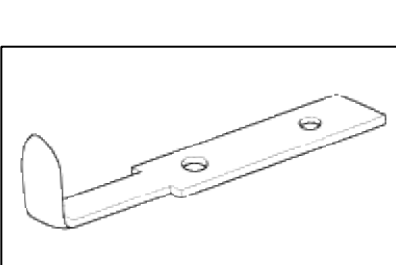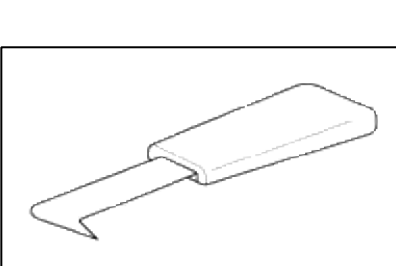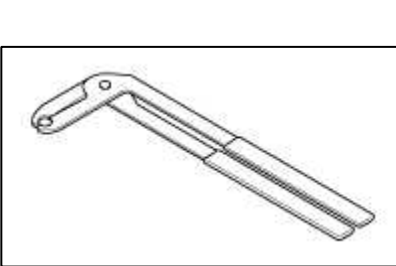Headliner clip remover		
09861-31100 Sealant cut-out tool		Cutting windshield sealant (use with 09861-31200)
09861-31200 Sealant cutting blade		Cutting windshield sealant (use with 09861-31100)
09861-31000 Windshield molding remover		Windshield molding removal
09880-4F000 Hog ring clip installer		Hog ring clip installation

Body (Interior and Exterior) > General Information > Troubleshooting

Troubleshooting

Symptom	Suspect Area	Remedy (Refer to page)
Water leaks from sunroof	Dirt accumulation in drain tube	Remove dirt from drain
	Clogged drain tube	Blow air into drain to remove dirt
	Broken or dislocated drain tube, defective or cracked clip	Check tube installation and flange contact
	Deteriorated roof lid weatherstrip	Replace
	Excessive roof lid-to-body clearance and improperly fitted weatherstrip	Adjust
Wind noise around sunroof	Loose or deformed deflector, gaps in body work	Retighten adjust or replace
Noise heard when opening, closing sunroof	Foreign particles lodged in guide rail	Check drive cable and guide rails for foreign particles
	Loose guide rails and lid	Retighten
Motor runs but sunroof does not move or moves only partially	Foreign particles lodged in guide rail	Adjust or replace
	Incorrect engagement of motor pinion with drive cable	
	Decrease in motor's clutch slipping force	
	Increased sunroof sliding resistance or interference of sunroof with drive cables, weatherstrip, etc. due to mal adjustment of sunroof	
Noise in motor (clutch slipping noise from motor when sunroof is fully opened or closed is not an unusual noise)	Incorrect engagement of motor pinion with drive cable	Check pinion installation and retighten motor
	Worn out or damaged motor pinion bearing	Replace motor assembly
	Worn out or deformed drive cable	Replace
Door glass fails to operate up and down	Incorrect window glass installation	Adjust position
	Damaged or faulty regulator arm or regulator	Correct or replace
Door does not open or close completely	Incorrect door installation	Adjust position
	Defective door check assembly	Correct or replace
	Door hinge requires grease	Apply grease
Hood does not open or close completely	Striker and latch not properly aligned	Adjust
	Incorrectly installed hood	Adjust
	Incorrect hood bumper height	Adjust
Water leak through windshield end rear window	Defective seal	Fill with sealant
	Defective flange	Correct

Body (Interior and Exterior) > Body Dimensions > General Information


General

1. Basically, all measurements in this manual are taken with a tracking gauge.
2. When a measuring tape is used, check to be sure there is no elongation, twisting or bending.
3. For measuring dimensions, both projected dimension and actual-measurement dimension are used in this manual.

Measurement Method

Projected Dimensions

1. These are the dimensions measured when the measurement points are projected into the reference plane, and are the reference dimensions used for body alterations.
2. If the length of the tracking gauge probes are adjustable, make the measurement by lengthening one probe by the amount equivalent to the difference in height of the two surfaces.

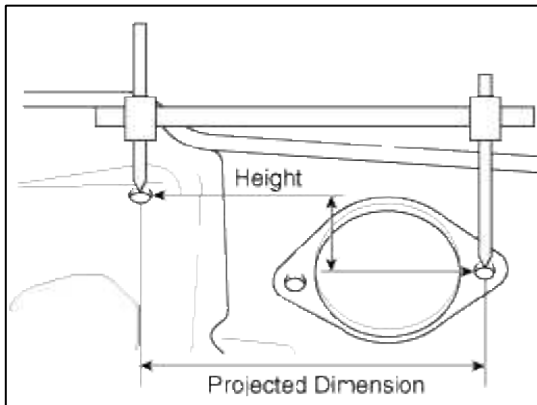


Actual-Measurement Dimensions

1. These dimensions indicate the actual linear distance between measurement points, and are the reference dimensions for use if a tracking gauge is used for measurement.
2. Measure by first adjusting both probes to the same length ($A=A'$).


CAUTION

Check the probes and gauge itself to make sure there is no free play.

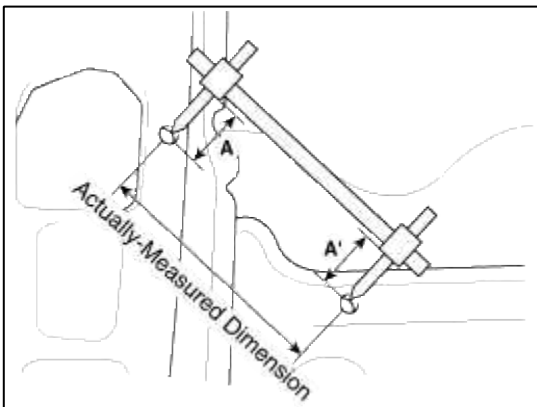


Measurement Point

1. Measurements should be taken at the hole center.

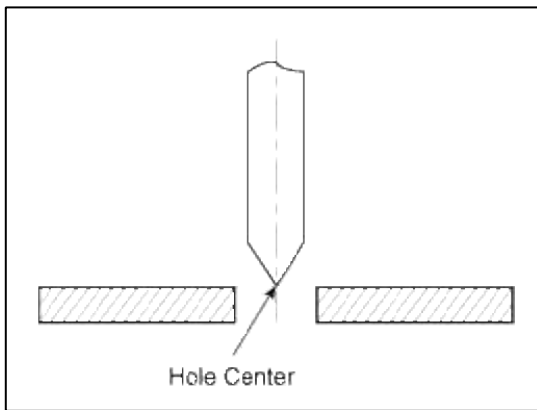


Body (Interior and Exterior) > Body Dimensions > Front Body > Body Repair

Front Body A

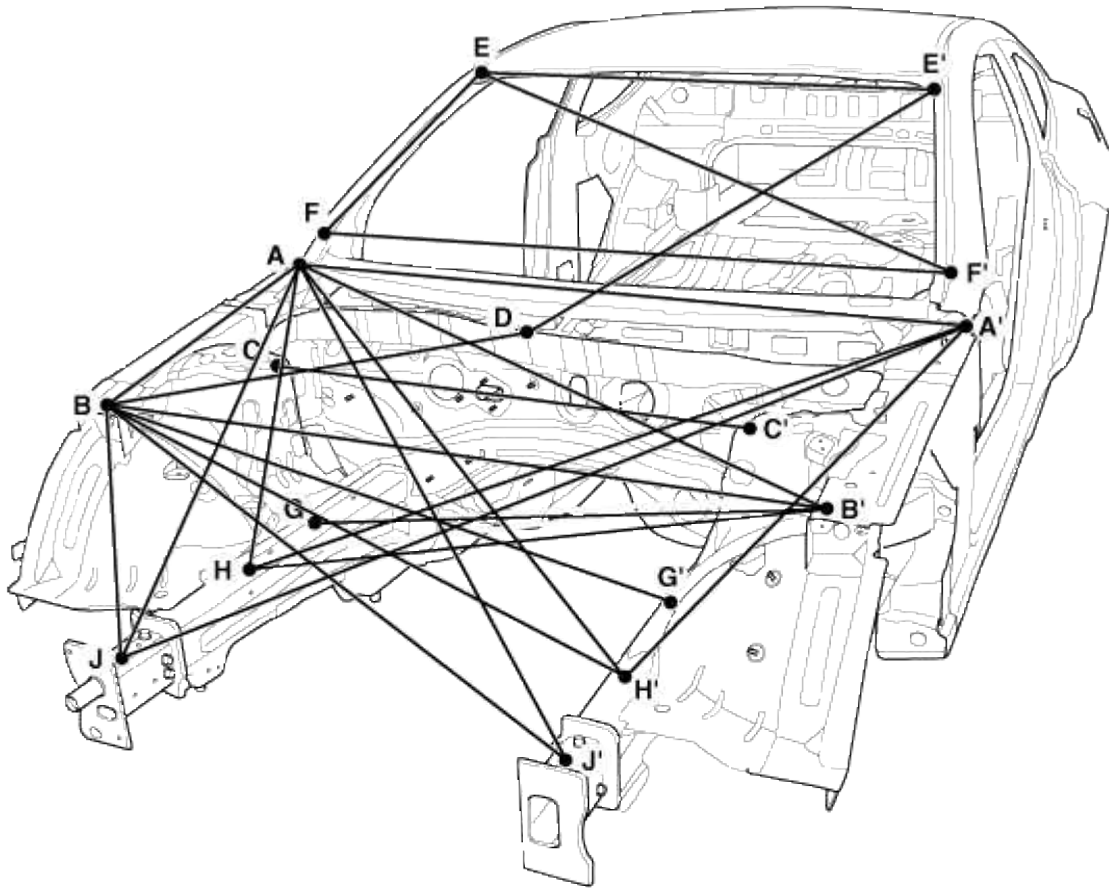


* These dimensions indicated in this figure are actual-measurement dimensions.


Point symbol	A-A'	A-B A'-B'	A-B' A'-B	A-H	A'-H'	A-H'	A'-H	A-J A'-J'
Length(mm)	1596	719	1683	940	942	1525	1513	1248
Point symbol	A-J' A'-J	B-B'	B-D B'-D	B-G'	B'-G	B-H'	B'-H	B-J B'-J'
Length(mm)	1711	1450	850	1213	1210	1217	1206	595
Point symbol	B-J' B'-J	C-C'	D-E D-E'	E-E'	E-F E'-F'	E'-F E-F'	F-F'	
Length(mm)	1265	1087	1222	1209	695	1527	1528	

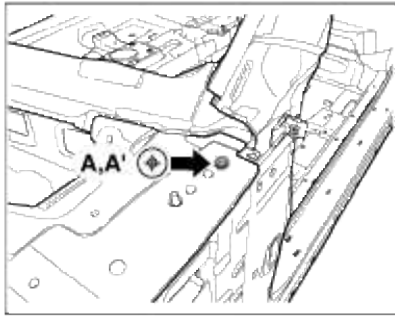


Hood hinge mounting hole
(ø13)

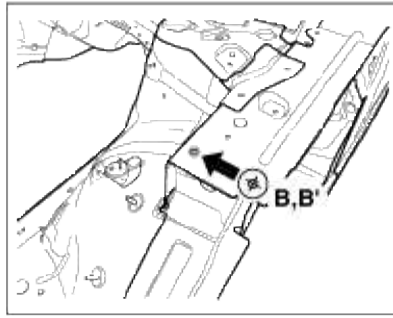


Front end module mounting hole
(ø9)

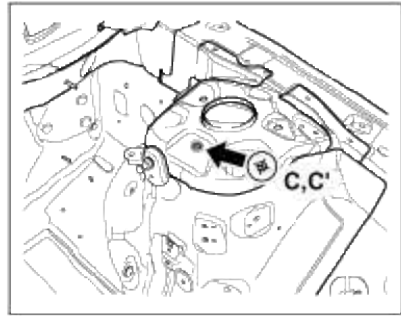


Front suspension mounting hole
(ø11)

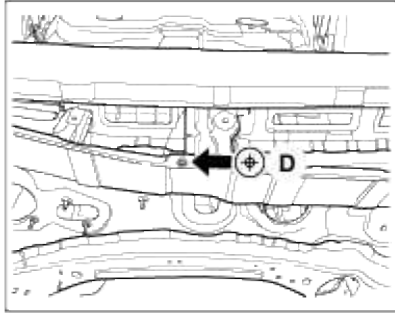


Cowl top cover mounting hole
(ø7)

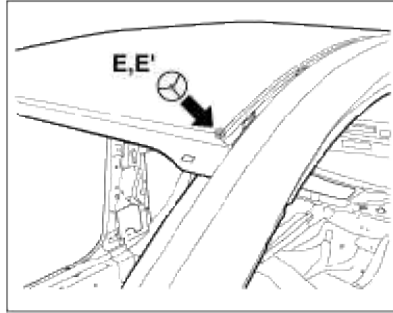


Roof panel front corner

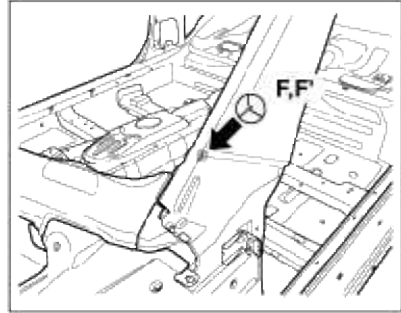


Front pillar outer corner

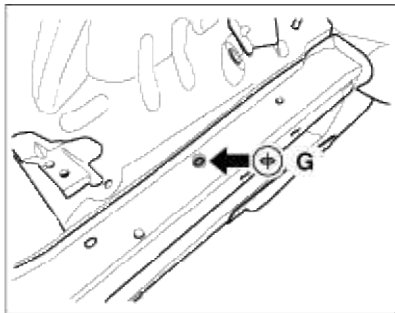


Wiring harness mounting hole
(7X12)

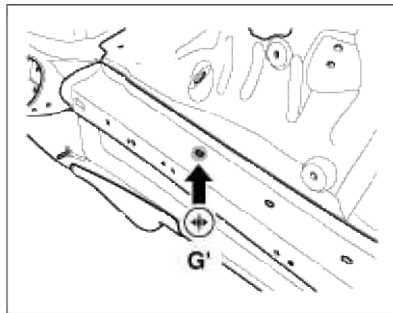


Wiring harness mounting hole
(7X12)

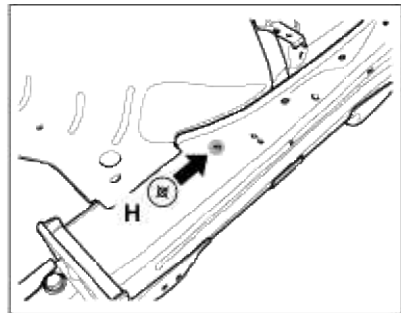


Front side member tooling hole
(ø7)

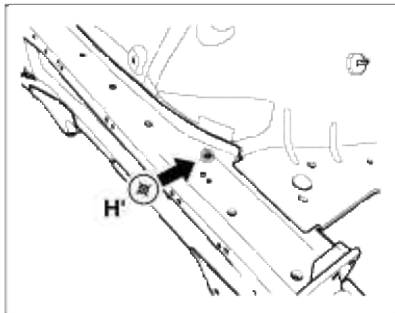

Front side member tooling hole
(ø7)

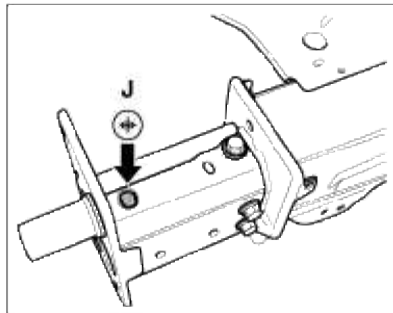


Front crash member tooling hole
(12X16)

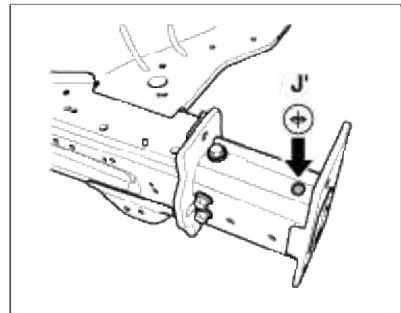


Front crash member tooling hole
(12X16)

Front Body B

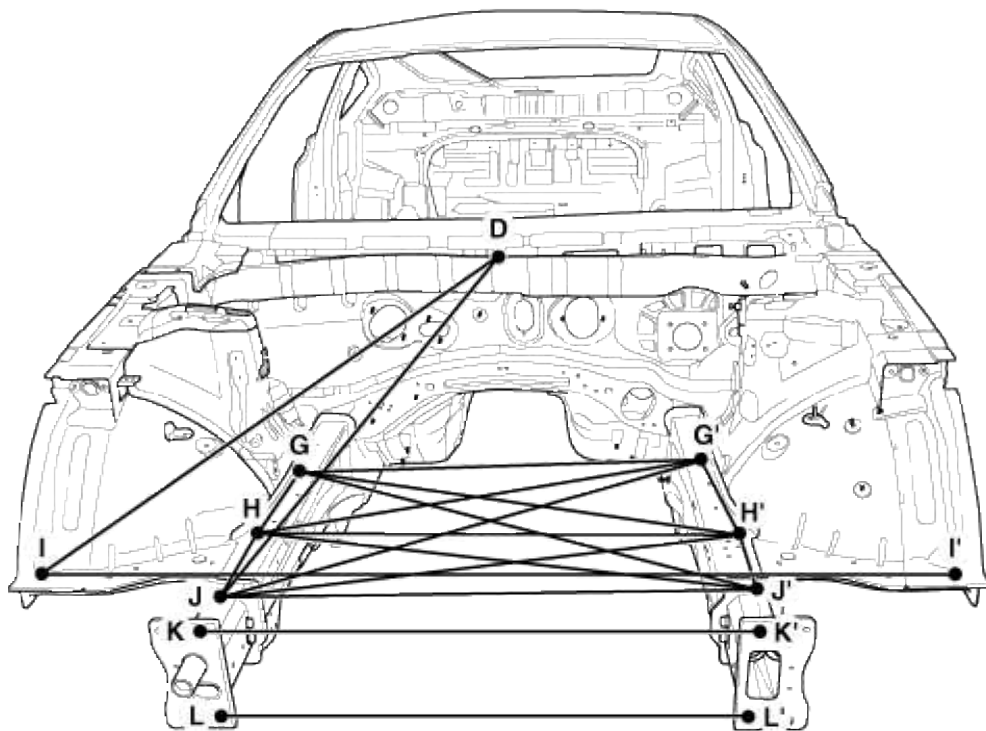


* These dimensions indicated in this figure are actual-measurement dimensions.


Point symbol	D-I	D-I'	D-J	D-J'	G-G'	G-H	G'-H'	G-H'	G'-H	G-J'
Length(mm)	1096		1034		848	282	331	923	919	1063
Point symbol	G'-J		H-H'	H-J	H-J'	H-J'	H'-J	I-I'	J-J'	
Length(mm)	1083		891	349	341	938	944	1544	860	
Point symbol	K-K'		L-L'							
Length(mm)	851		832							

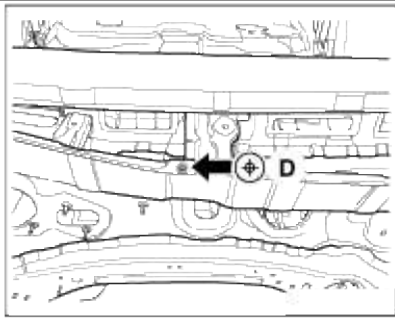


Cowli top cover mounting hole (ø7)

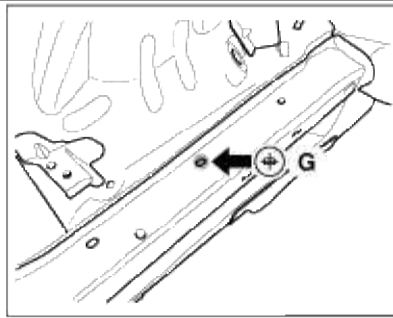


Wiring harness mounting hole (7X12)

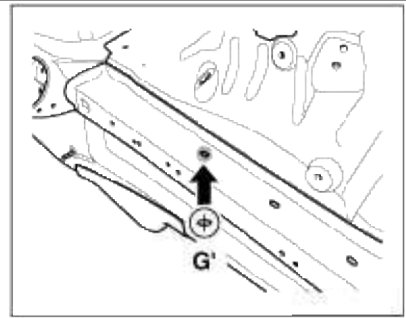


Wiring harness mounting hole (7X12)

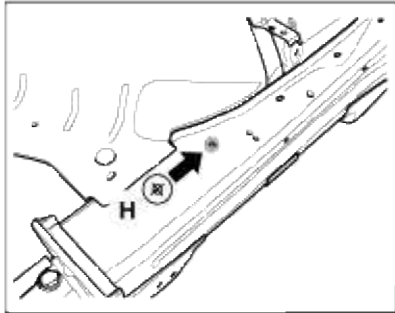


Front side member tooling hole (ø7)

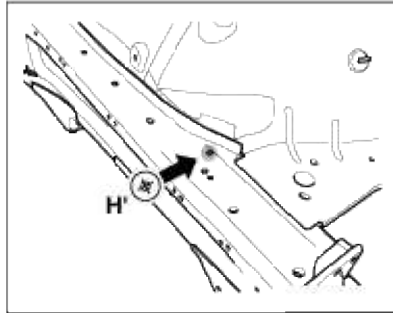


Front side member tooling hole (ø7)

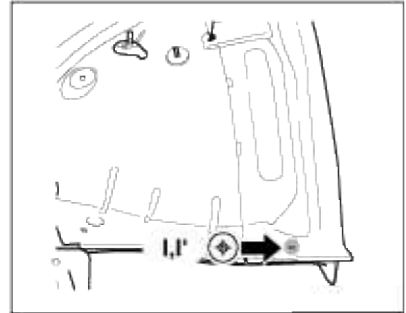


Fender apron panel tooling hole (ø7)

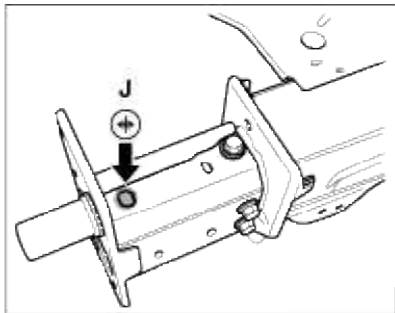


Front crash member tooling hole (7X12)

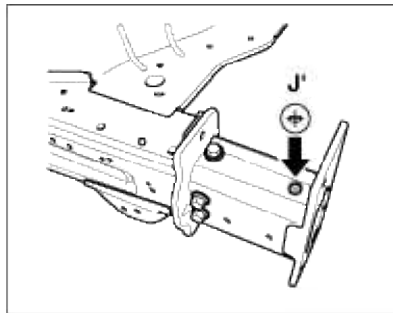

Front crash member tooling hole (7X12)

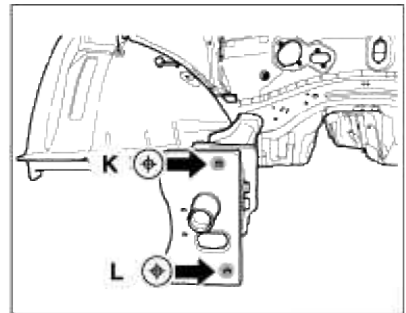


Front end module mounting hole (ø9)

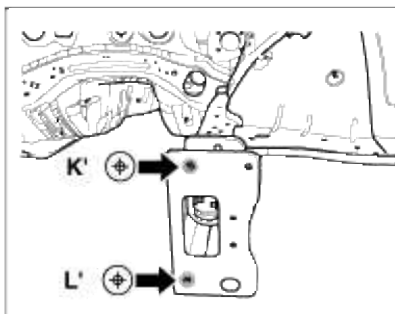

Front end module mounting hole (ø9)


Body (Interior and Exterior) > Body Dimensions > Side Body > Body Repair

Side Body A

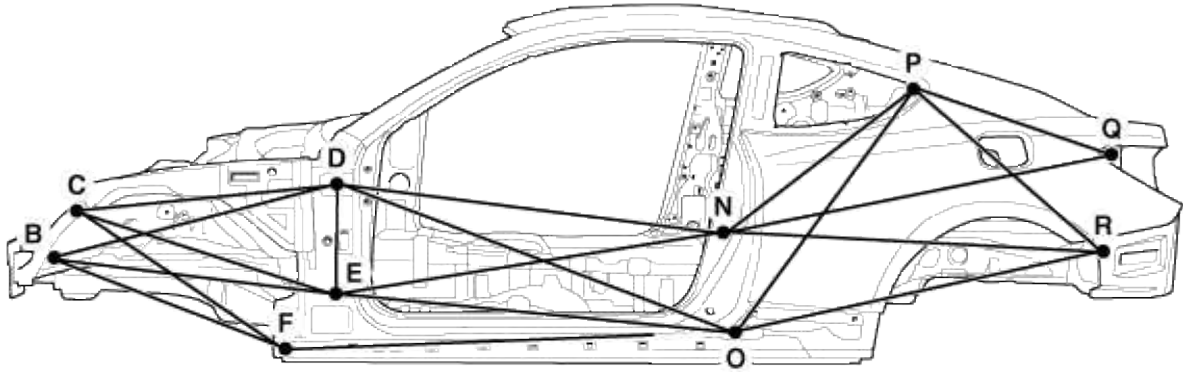


* These dimensions indicated in this figure are actual-measurement dimensions.


Point symbol	B-D	B-E	B-F	C-D	C-E	C-F	D-E	D-N
Length(mm)	1080	1037	917	836	885	838	365	1322
Point symbol	D-O	E-N	E-O	F-O	N-P	N-Q	N-R	O-P
Length(mm)	1430	1318	1346	1493	832	1350	1285	1027
Point symbol	O-R	P-Q	P-R					
Length(mm)	1268	694	841					

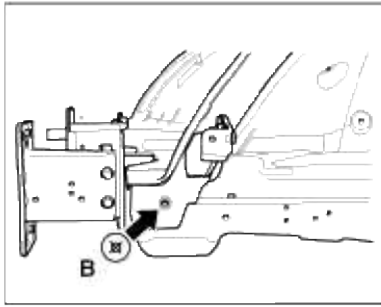


Fender apron panel tooling hole
(ø7)

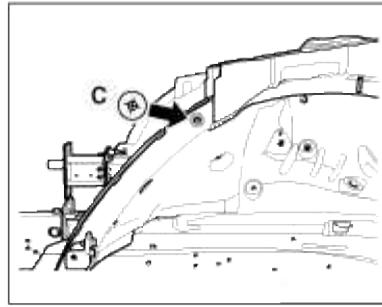


Fender apron panel tooling hole
(ø7)

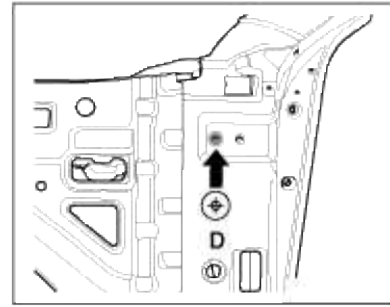


Front door hinge upper mounting hole
(ø13)

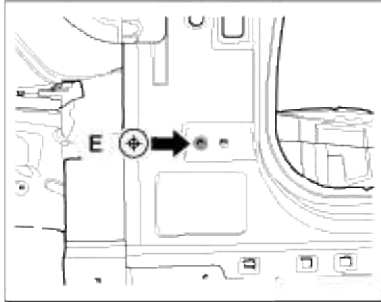


Front door hinge lower mounting hole
(ø13)

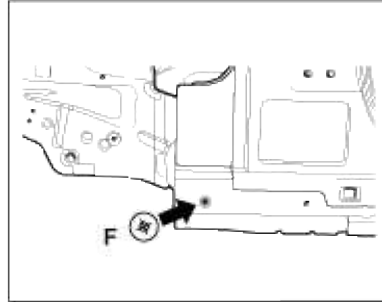


Fender mounting hole
(ø6.6)

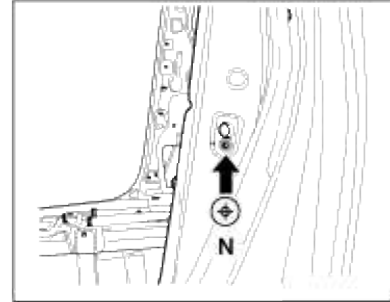


Front door switch mounting hole
(ø8)

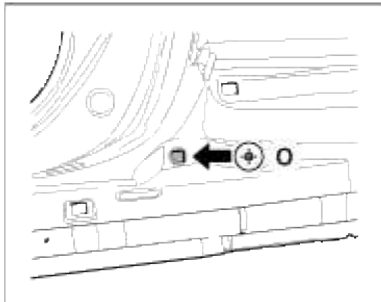


Side garnish mounting hole
(12X12)

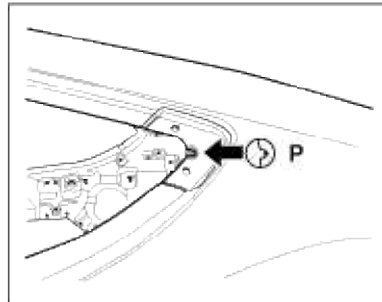

Quarter fixed glass mounting notch

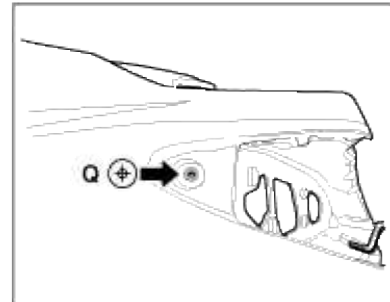


Rear combination lamp mounting hole
(ø5)

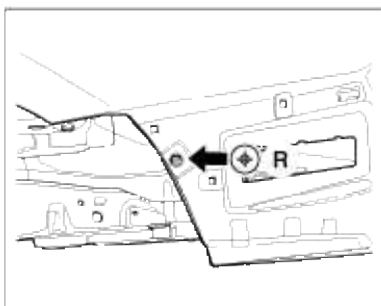


Rear bumper mounting hole
(ø13)

Side Body B

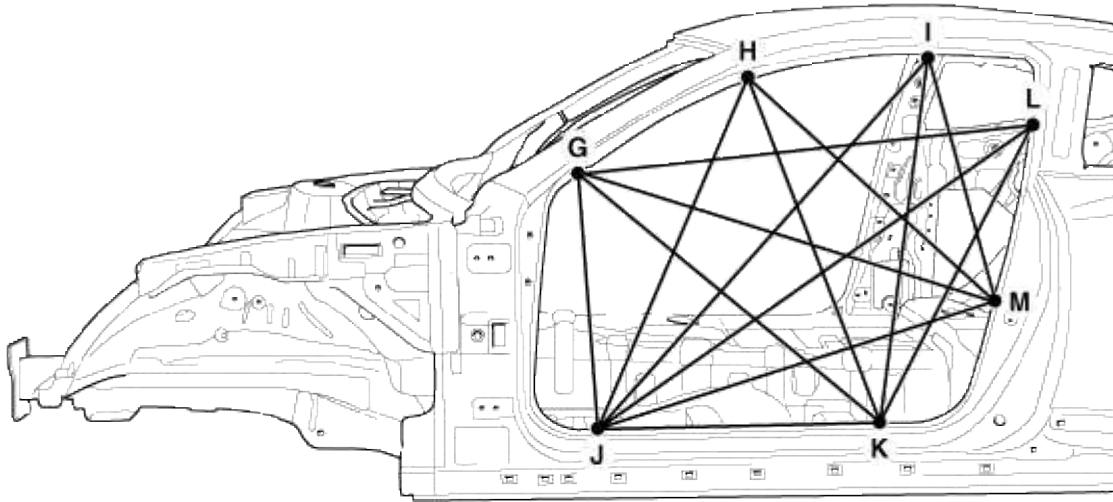


* These dimensions indicated in this figure are actual-measurement dimensions.


Point symbol	G-J	G-K	G-L	G-M	H-J	H-K	H-M	I-J
Length(mm)	646	982	1127	1078	945	924	824	1259
Point symbol	I-K	I-M	J-K	J-L	J-M	K-L		
Length(mm)	941	638	700	1321	1031	851		

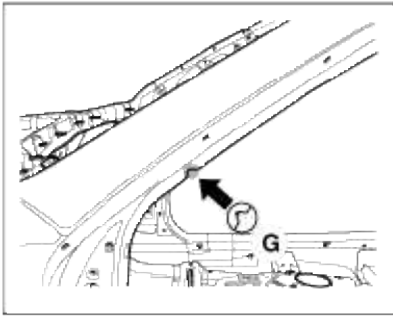


Side outer panel notch

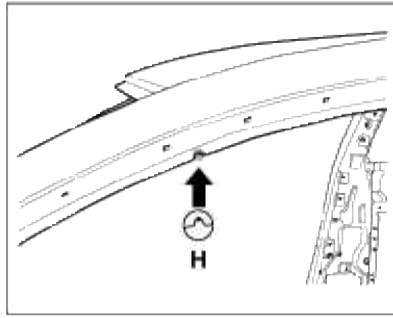


Side outer panel notch

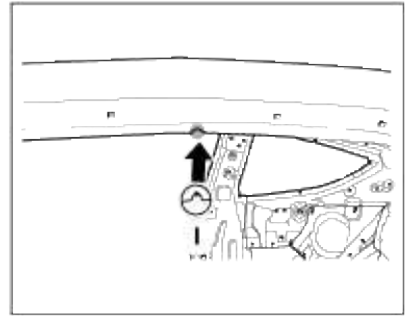


Side outer panel notch

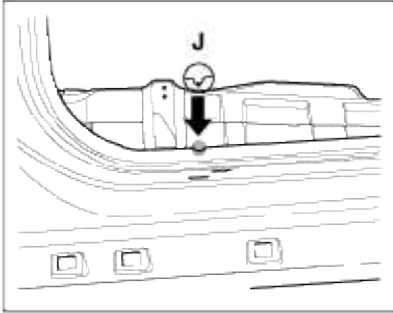


Side outer panel notch

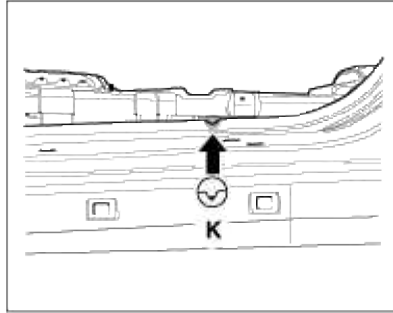

Side outer panel notch

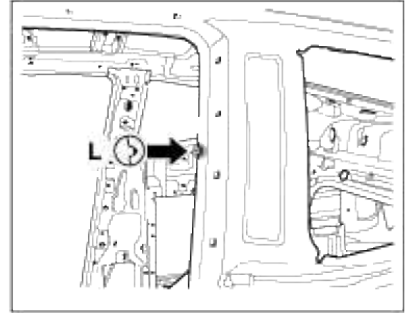


Side outer panel notch

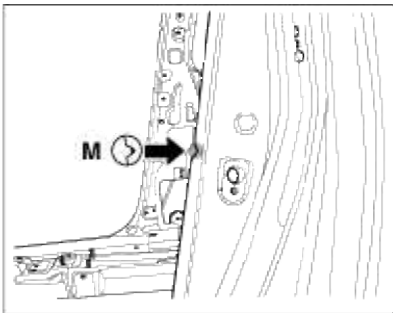

Side outer panel notch


Body (Interior and Exterior) > Body Dimensions > Interior > Body Repair

Interior A

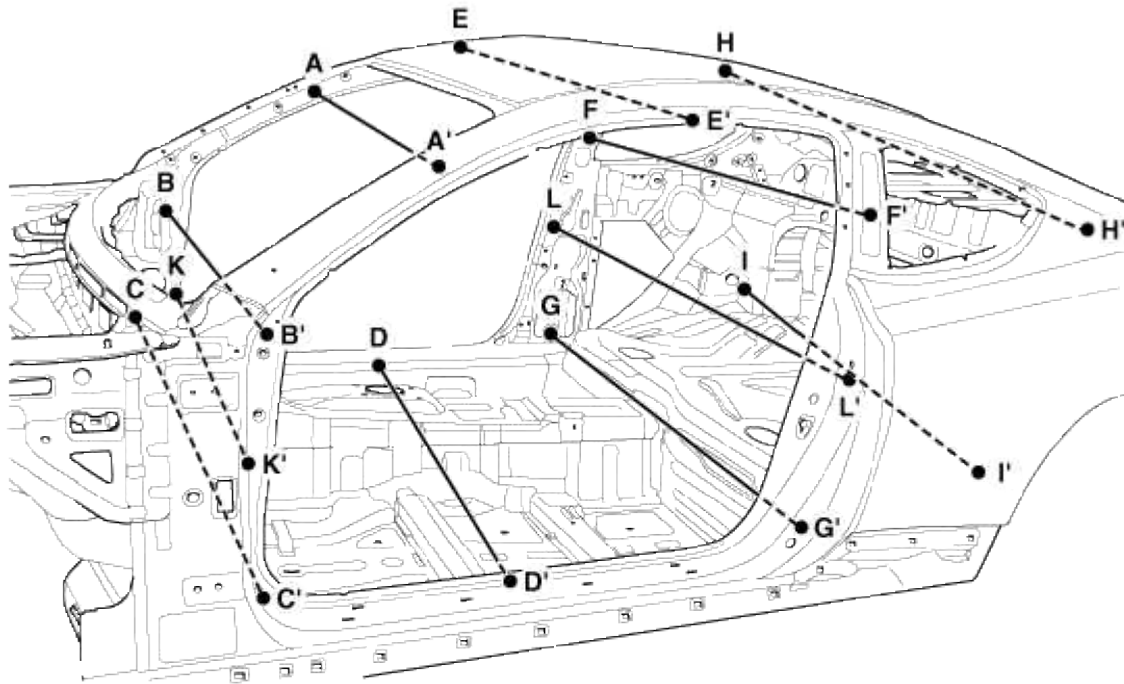


* These dimensions indicated in this figure are actual-measurement dimensions.


Point symbol	A-A'	B-B'	C-C'	D-D'	E-E'	F-F'	G-G'	H-H'
Length(mm)	1325	1418	1483	1433	1194	1373	1476	1150
Point symbol	I-I'	K-K'	L-L'					
Length(mm)	1109	1558	1604					

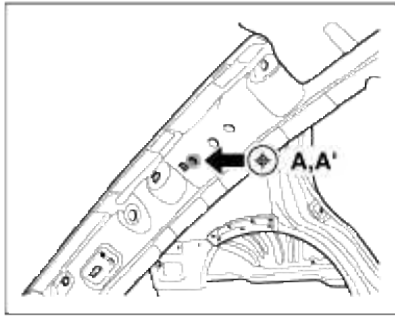


Curtain airbag mounting hole
(ø6.6)

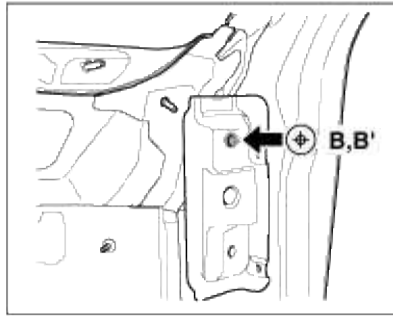


Cowl crossbar mounting hole
(ø9)

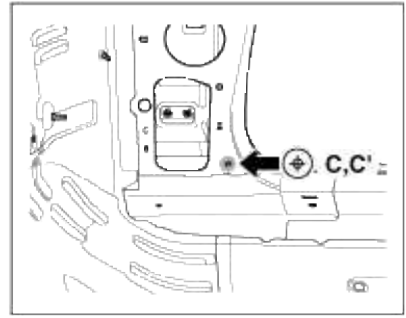


Cowl side trim mounting hole
(ø8.5)

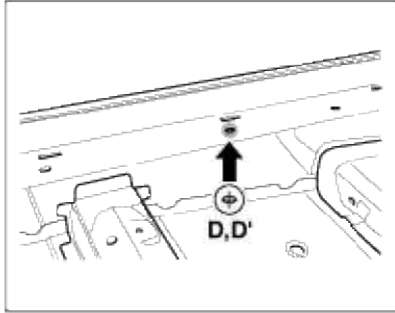


Side sill inner panel tooling hole
(7X12)

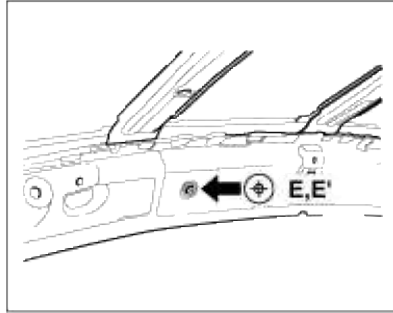


Side inner panel tooling hole
(ø10)

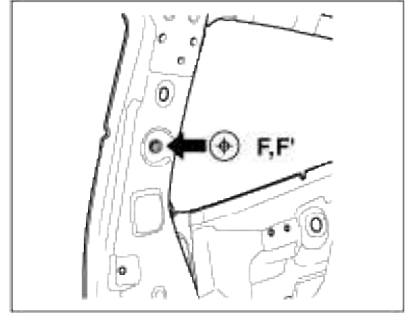


Front seatbelt anchor mounting hole
(ø15)

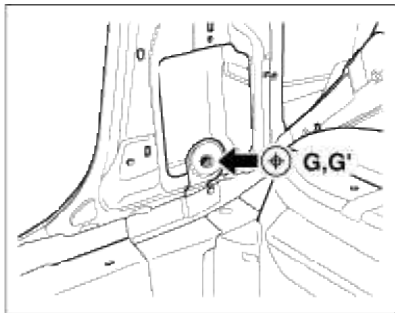


Front seatbelt retractor mounting hole
(ø12)

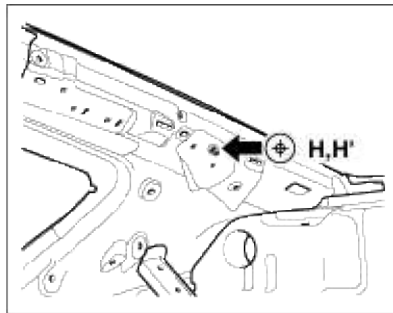


Quarter inner panel tooling hole
(ø6.6)

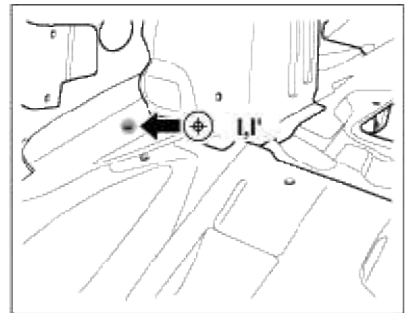

Rear floor panel tooling hole
(ø8)

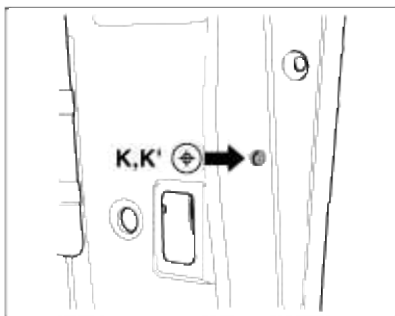


Front door checker mounting hole
(ø13)

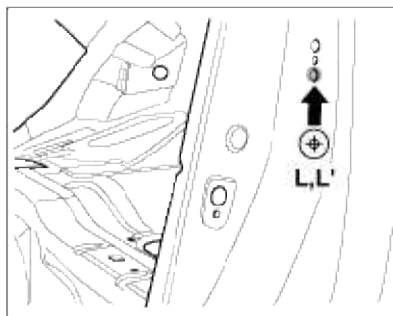


Front door striker mounting hole
(ø11)

Interior B

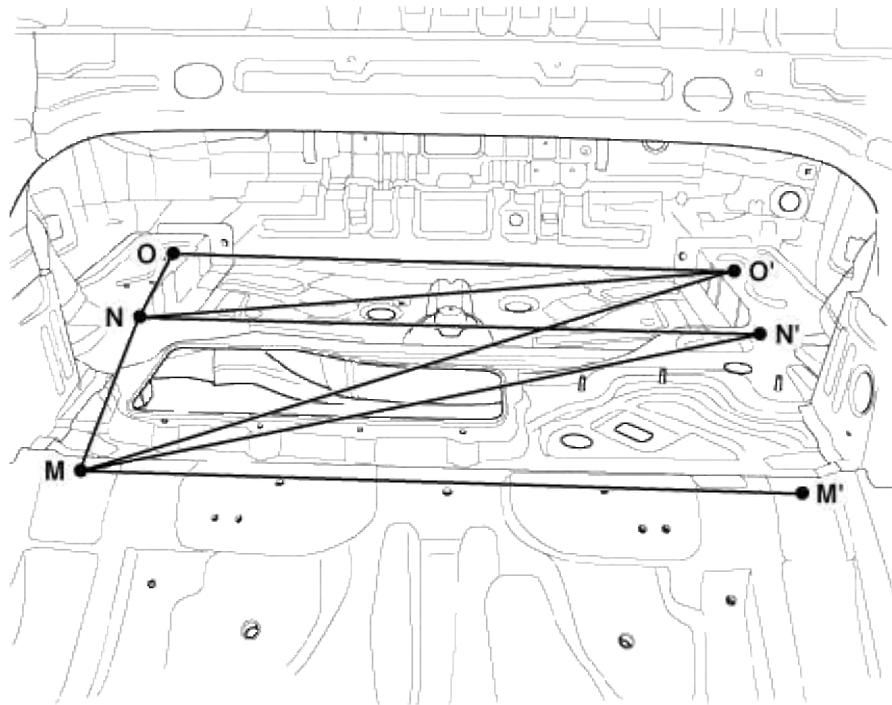


* These dimensions indicated in this figure are actual-measurement dimensions.


Point symbol	M-M'	M'-N'	M-N	M'-N	M-N'	M'-O	M-O'	N-N'	N-O	N'-O'	N'-O	N-O'	O-O'
Length(mm)	770	454		956		1219		920	371		1049		1046

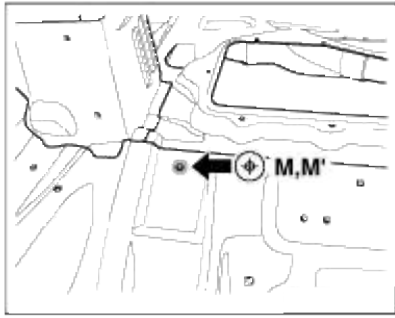

Rear floor panel tooling hole
(ø9)

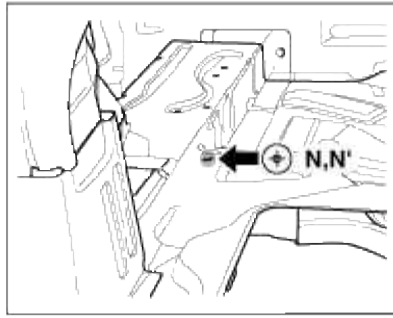


Rear floor panel tooling hole
(8.5X8.5)

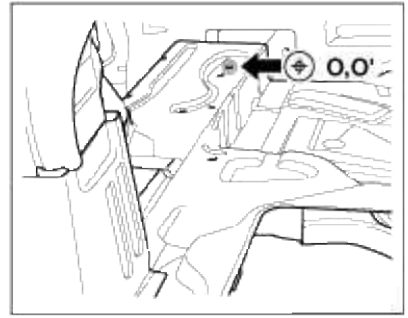


Spair tire well tooling hole
(ø10)

Interior C

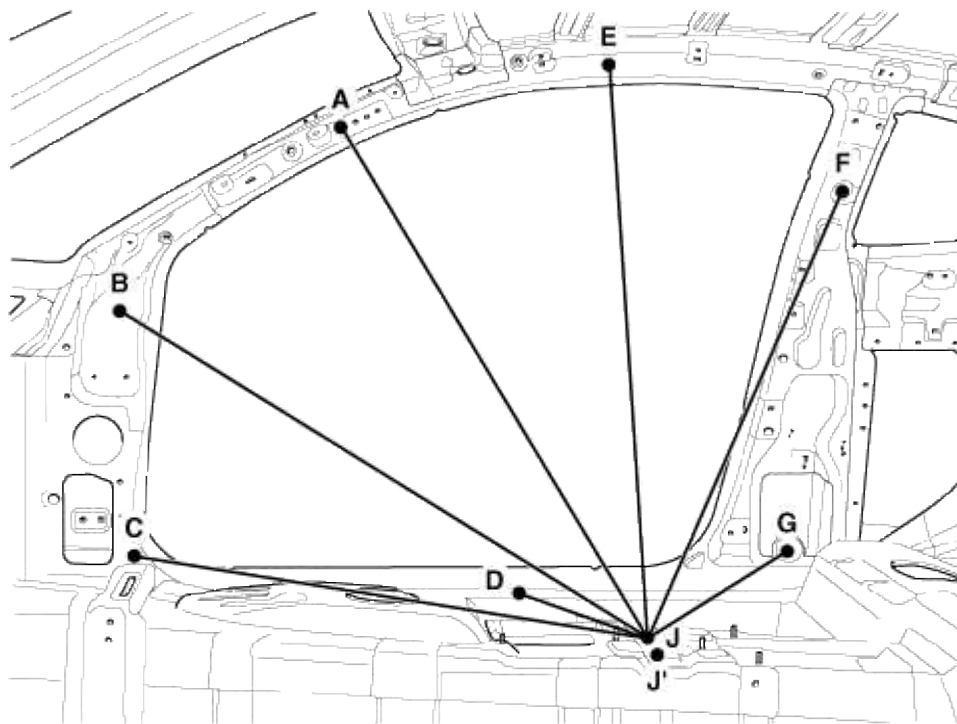


* These dimensions indicated in this figure are actual-measurement dimensions.


Point symbol	J-A J'-A'	J-B	J'-B'	J-C J'-C'	J-D J'-D'	J-E J'-E'	J-F J'-F'	J-G J'-G'
Length(mm)	1093	1156	1146	1105	717	1051	1057	825

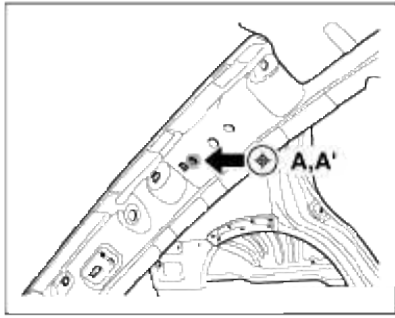


Curtain airbag mounting hole
(ø6.6)

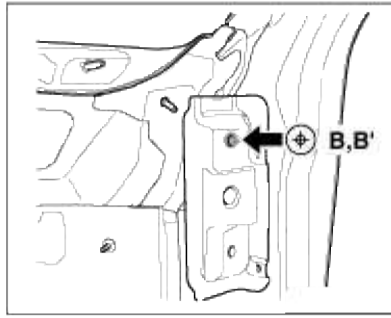


Cowl crossbar mounting hole
(ø9)

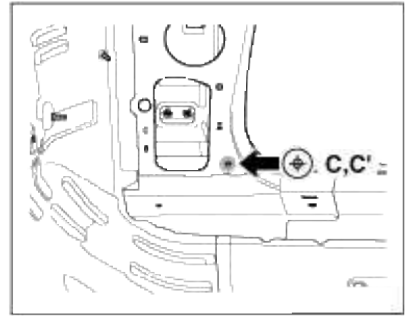


Cowl side trim mounting hole
(ø8.5)

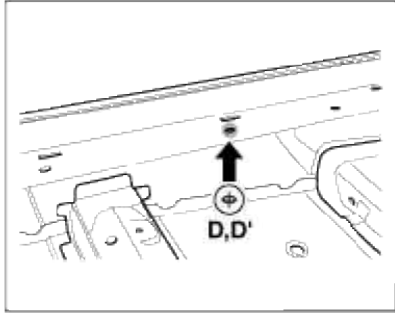


Side sill inner panel tooling hole
(ø6)

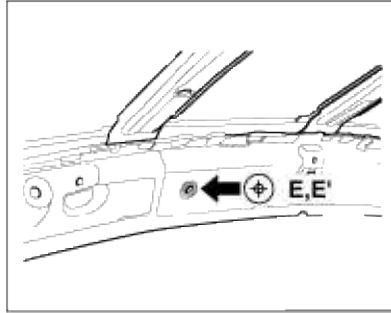


Side inner panel tooling hole
(ø10)

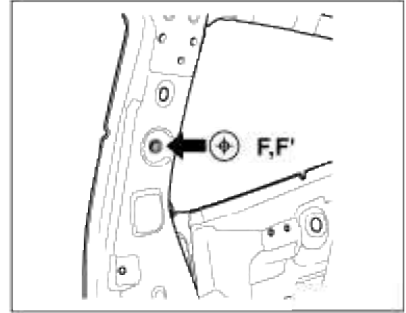

Front seatbelt anchor mounting hole
(ø15)

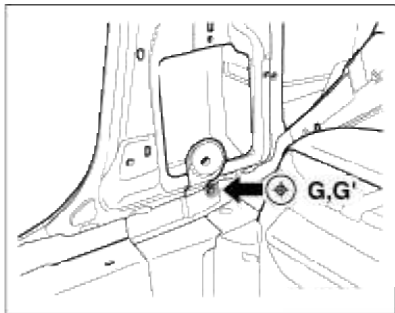


Front seatbelt retractor mounting hole
(ø12)

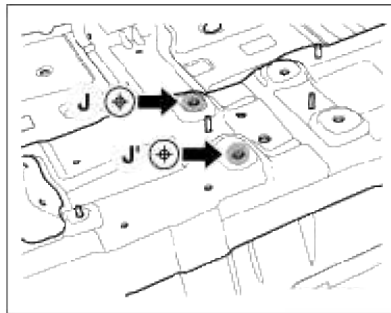


Parking brake lever mounting hole
(ø10)

Interior D

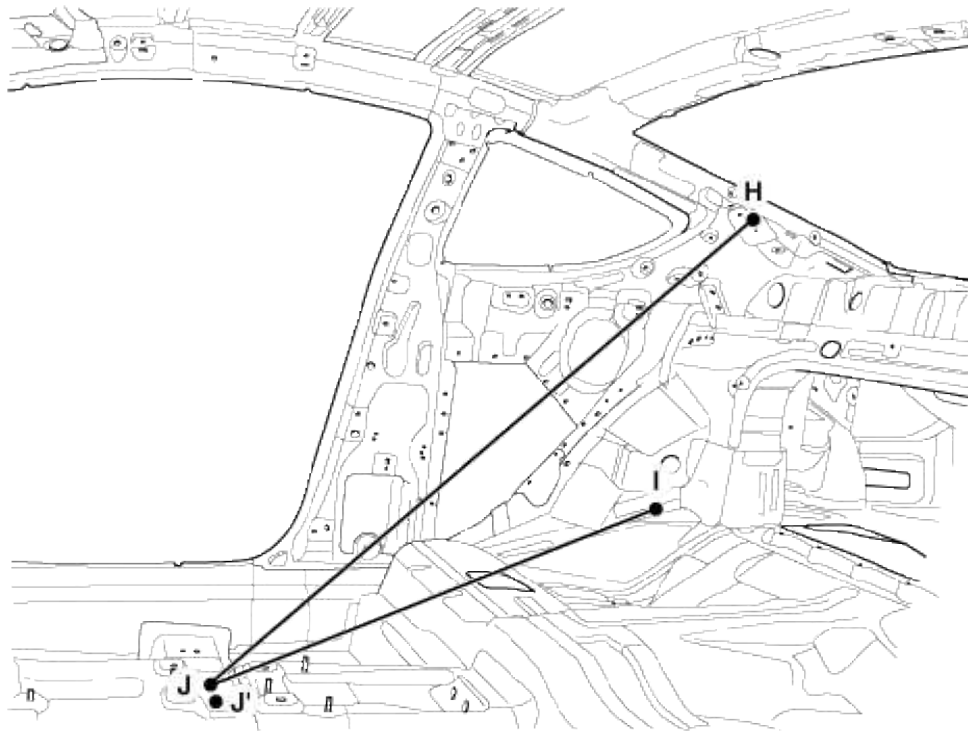


* These dimensions indicated in this figure are actual-measurement dimensions.


Point symbol	J-H	J'-H'	J-I	J'-I'					
	J-H		J-I						
Length(mm)	1475		1138						

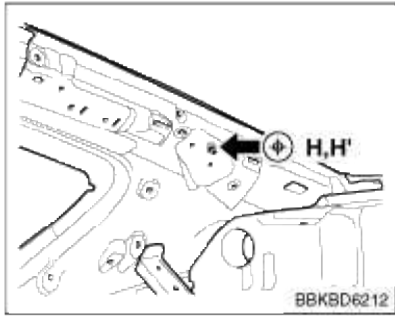


Quarter pillar inner panel tooling hole (ø6.6)

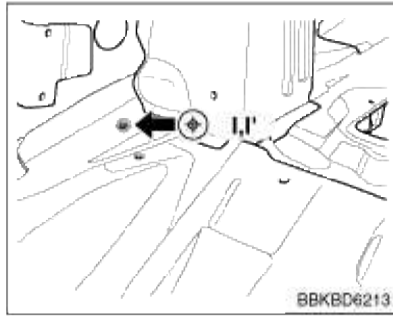

Rear floor panel tooling hole (ø8)

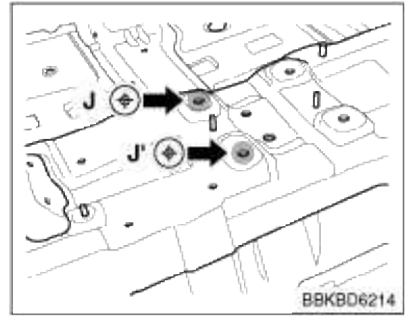

Parking brake lever mounting hole (ø9)

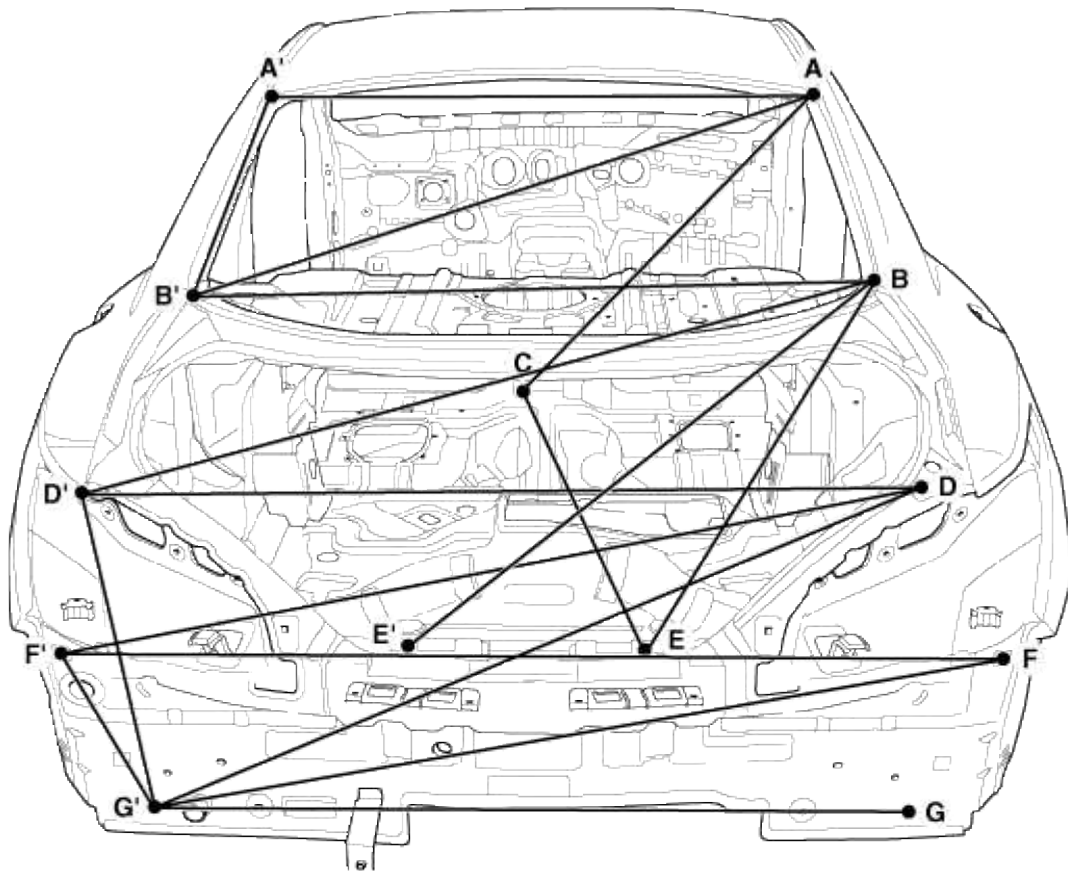


* These dimensions indicated in this figure are actual-measurement dimensions.


Point symbol	A-A'	A-B A'-B'	A-B' A'-B	A-C A'-C	B-B'	B'-D B-D'	B'-E' B-E	B-E' B'-E
Length(mm)	1099	787	1360	1180	1119	1273	732	968
Point symbol	C-E C-E'	D-D'	D-F' D'-F'	D-G D'-G'	D-G' D'-G	F-F'	F-G F'-G'	F-G' F'-G
Length(mm)	448	1259	1336	512	1305	1367	283	1282
Point symbol	G-G'							
Length(mm)	1144							




Roof panel rear corner

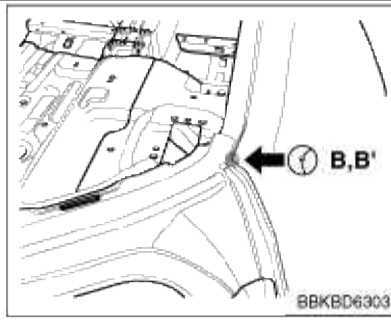


Side outer panel rear corner

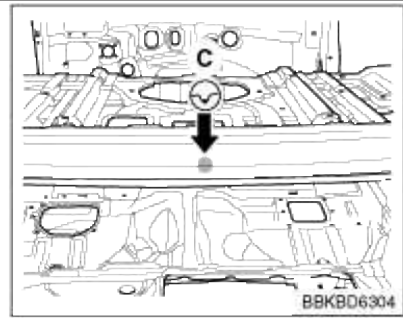


Rear package tray panel notch

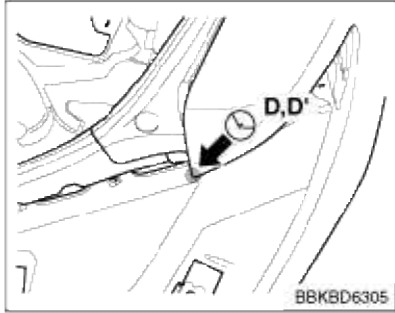


Side outer rear corner

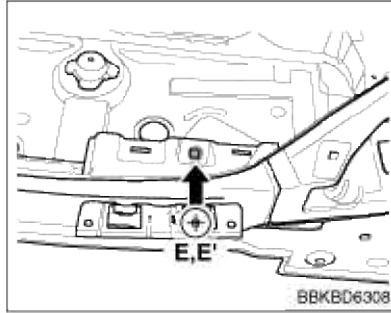

Transverse rear trim mounting hole
(10X10)

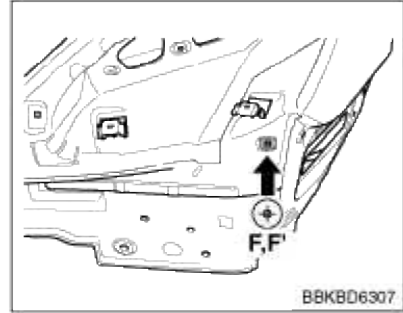


Rear bumper mounting hole
(8.5X8.5)

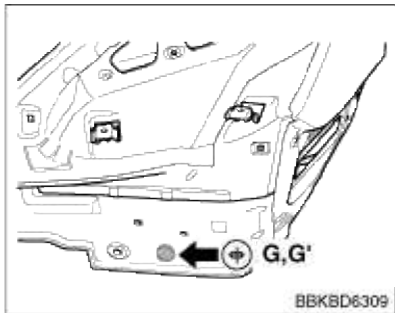

Back panel tooling hole
(18X16)


Body (Interior and Exterior) > Body Dimensions > Under Body > Body Repair

Projected Dimensions

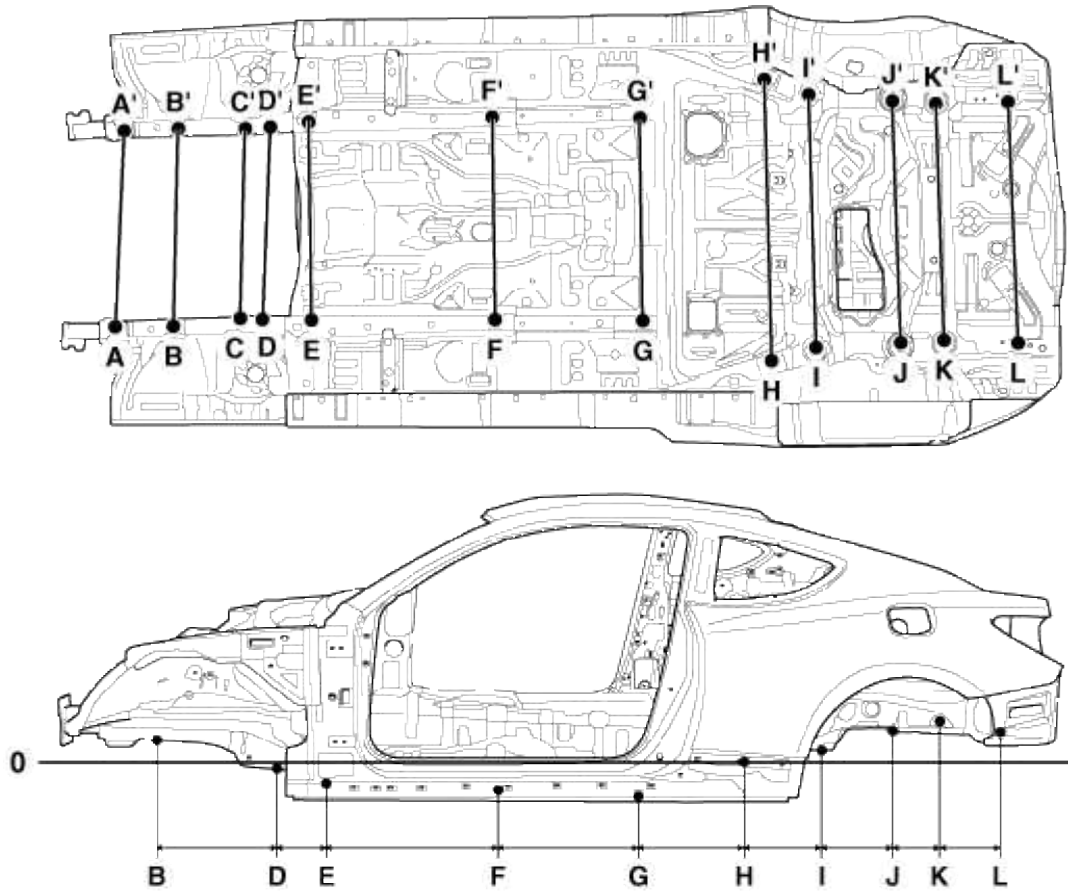


* These dimensions indicated in this figure are actual-measurement dimensions.


Point symbol	A-A'	B-B'	C-C'	D-D'	E-E'	F-F'	G-G'	H-H'
Length(mm)	868	860	818	830	848	859	860	1206
Point symbol	H-I'	J-J'	K-K'	L-L'	O-B	O-D	O-E	O-F
Length(mm)	1076	1038	1014	1046	62.5	-50	-119.7	-147.2
Point symbol	O-G	O-H	O-I	O-J	O-K	O-L	B-D	D-E
Length(mm)	-151.4	16.7	57.2	104.2	123.2	129.4	425	210
Point symbol	E-F	F-G	G-H	H-I	I-J	J-K	K-L	
Length(mm)	786	595	504	193	351	181	304	

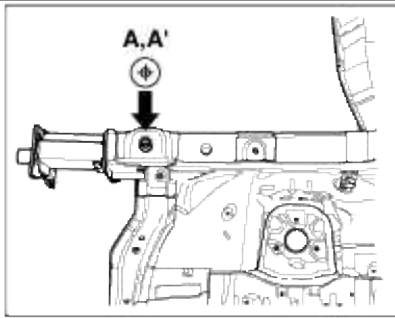


Front sub frame mounting pipe
(ø25)

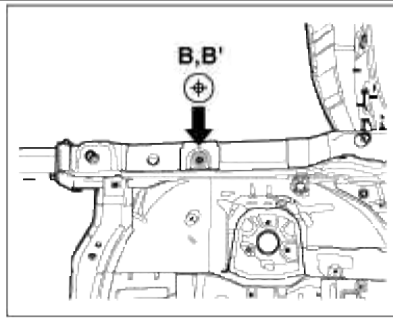


Front sub frame mounting hole
(ø16)

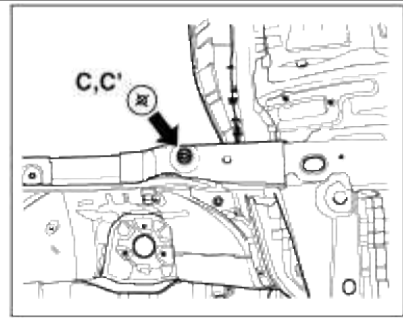


Front sub frame mounting pipe
(ø27)

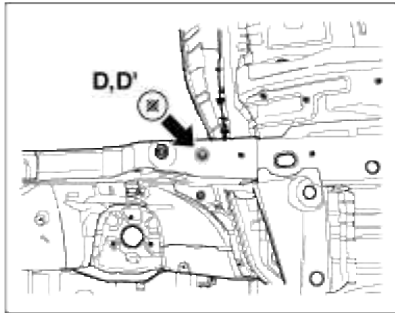


Tooling hole
(ø15)

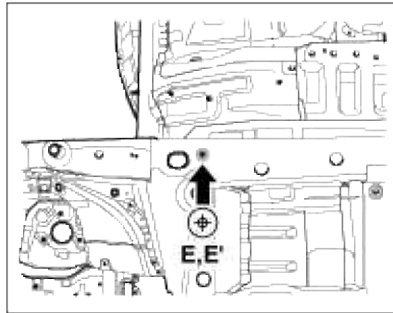


Tooling hole
(ø8)

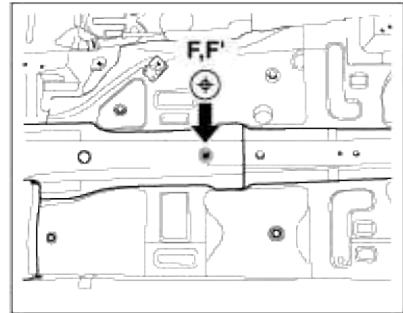


Tooling hole
(ø14)

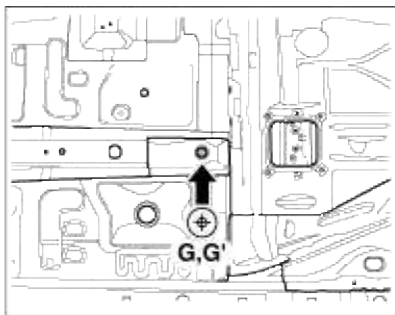


Tooling & paint drain hole
(ø20)

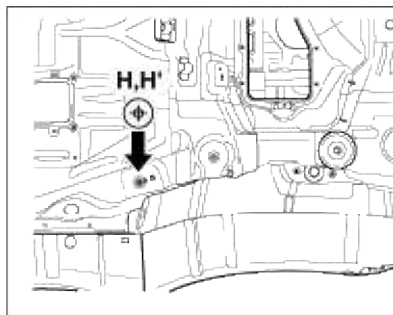


Trailing arm mounting hole
(ø13)

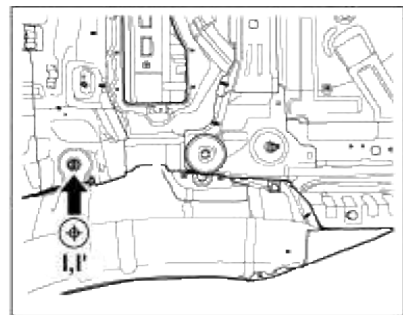


Rear sub frame mounting pipe
(ø28)

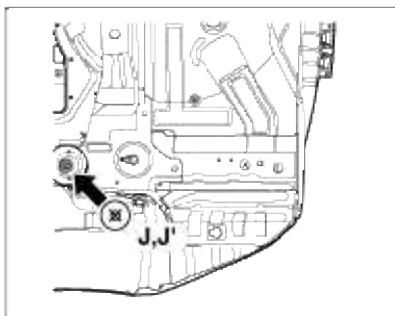

Spring mounting hole
(ø20)

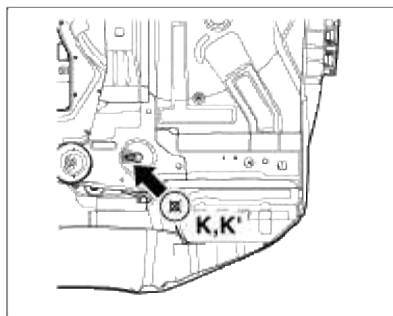


Rear sub frame mounting bolt

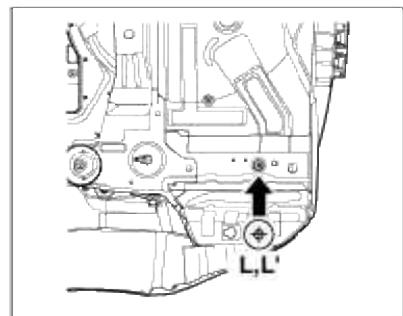


Tooling hole
(ø25)

Actual-Measurement Dimensions

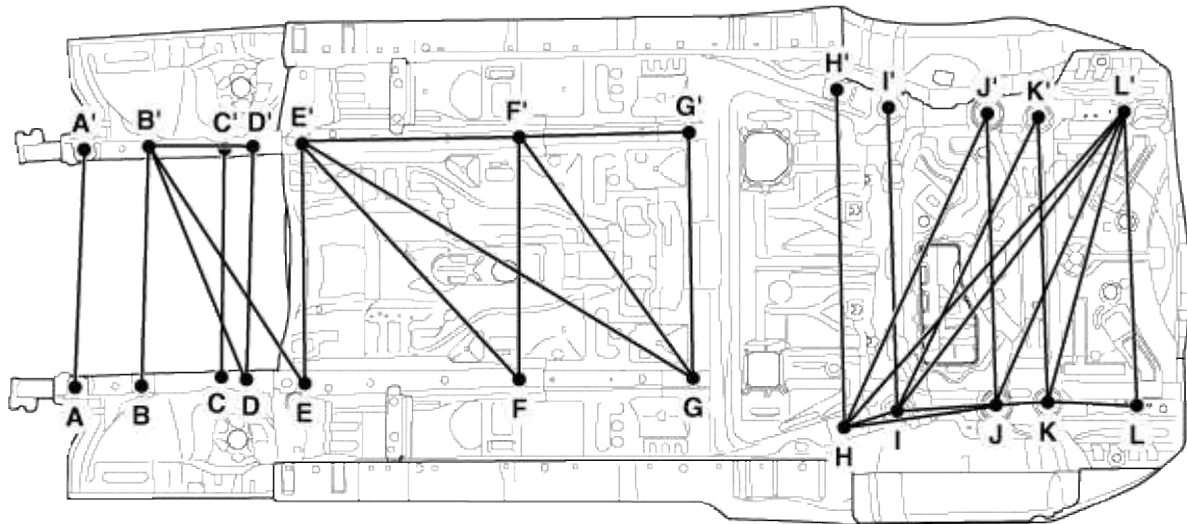


* These dimensions indicated in this figure are actual-measurement dimensions.


Point symbol	A-A'	B-B'	C-C'	B-D B'-D'	B-D' B'-D	B-E' B'-E	D-D'	E-E'
Length(mm)	868	860	818	440	953	1080	830	848
Point symbol	E-F E'-F'	E-F' E'-F	E-G' E'-G	F-F'	F-G F'-G'	F-G' F'-G	G-G'	H-H'
Length(mm)	786	1161	1624	859	595	1046	860	1206
Point symbol	H-J H'-J'	H-J' H'-J	H-L' H'-L	I-I'	I-J I'-J'	I-K' I'-K	I-L' I'-L	J-J'
Length(mm)	558	1251	1530	1076	355	1175	1353	1038
Point symbol	J-K J'-K'	J-L J'-L'	J-L' J'-L	K-K'	K-L K'-L'	K-L' K'-L	L-L'	
Length(mm)	182	486	1150	1014	305	1074	1046	

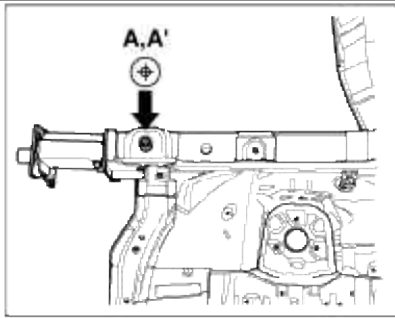


Front sub frame mounting pipe
(ø25)

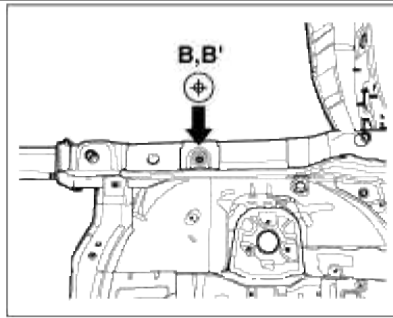


Front sub frame mounting hole
(ø16)

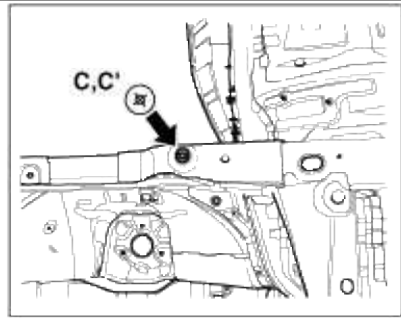


Front sub frame mounting pipe
(ø27)

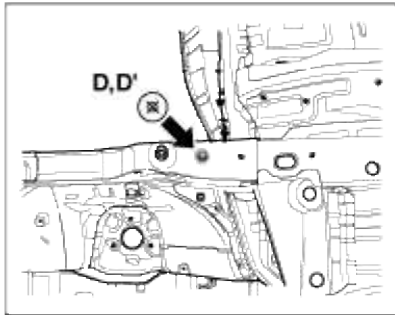


Tooling hole
(ø15)

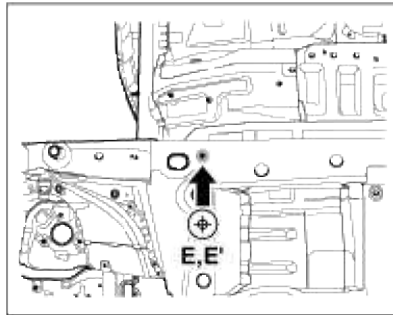


Tooling hole
(ø8)

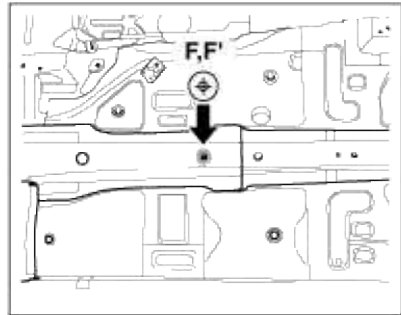


Tooling hole
(ø14)

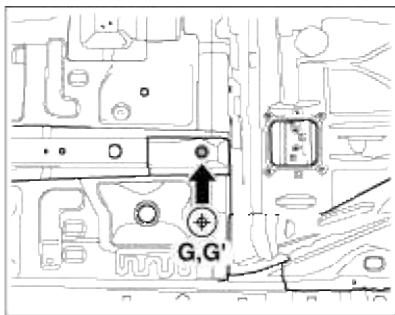


Tooling & paint drain hole
(ø20)

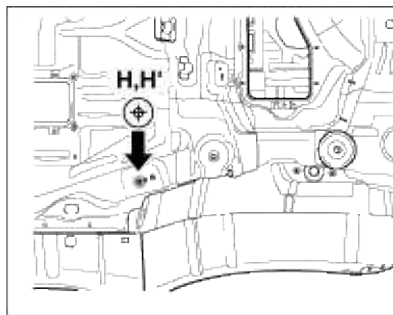


Trailing arm mounting hole
(ø13)

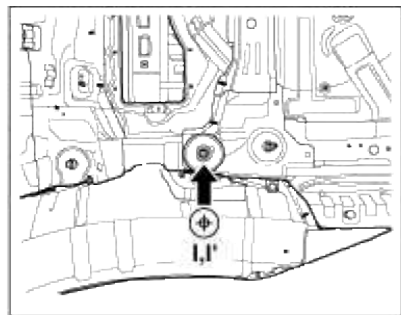


Rear sub frame mounting pipe
(ø28)

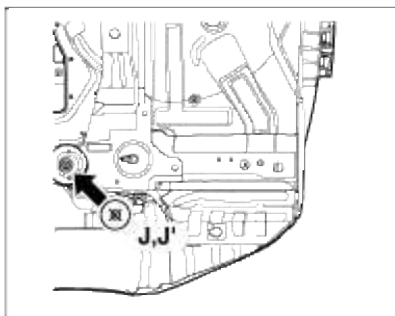

Spring mounting hole
(ø20)

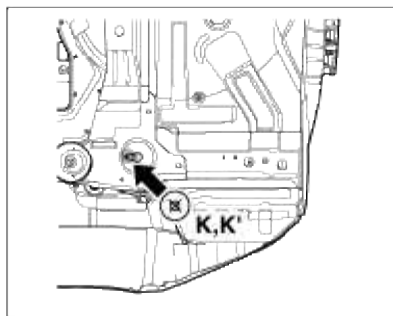

Rear sub frame mounting bolt

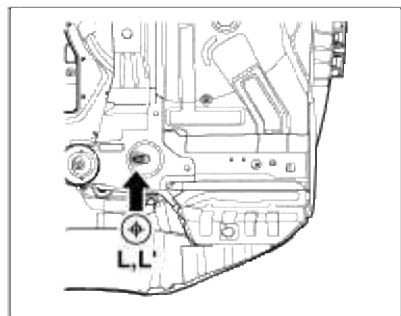

Tooling hole
(ø25)


Body (Interior and Exterior) > Exterior > Fender > Repair procedures

Replacement


NOTE

- Be careful not to damage the hood and body.
- When removing the clips, use a clip remover.


1. Remove the front bumper.
(Refer to the BD group - "Front Bumper")
2. Remove the head lamps.
(Refer to the BE group - "Head Lamps")
3. Remove the side sill molding (A).
4. Loosening the wheel guard mounting screws.

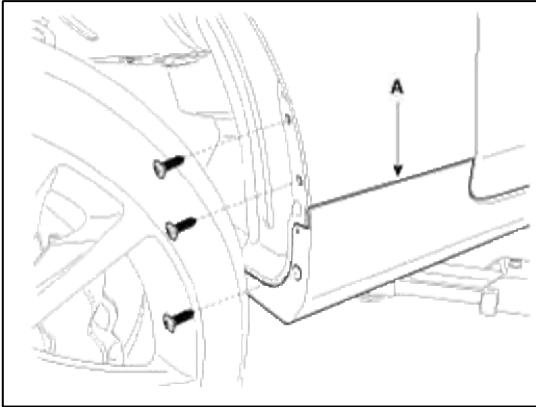

5. Remove the front bumper mounting screw (A).

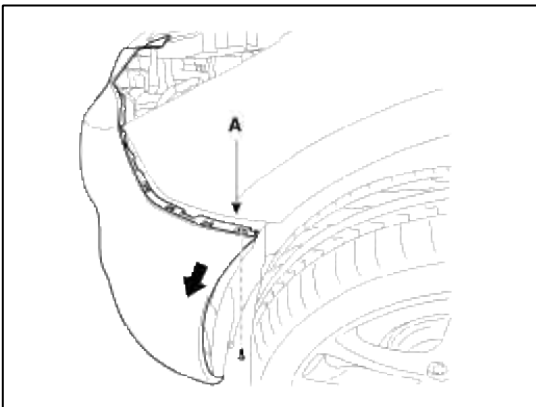

6. After loosening the fender mounting bolts, remove the fender (A).

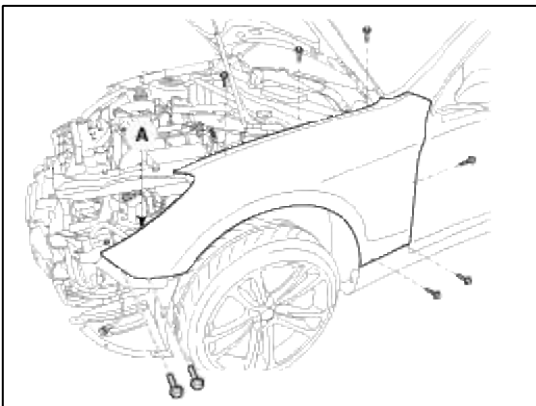

7. Installation is the reverse of removal.

Body (Interior and Exterior) > Exterior > Hood > Repair procedures


Replacement

Hood Assembly Replacement

NOTE

- When removing and installing the hood, an assistant is necessary.
- Be careful not to damage the hood and body.
- When removing the clips, use a clip remover.


- Using a screwdriver, slightly lift the socket clips (A) of both ends on the lifter (B), and then remove the lifter from the bracket (C).

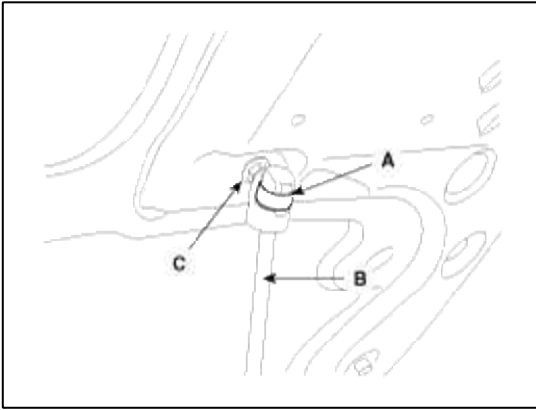

- After loosening the hood hinge (B) mounting bolts, remove the hood panel (A).

Tightening torque :

21.6~26.5 N.m (2.2~2.7 kgf.m, 15.9~19.5 lb-ft)

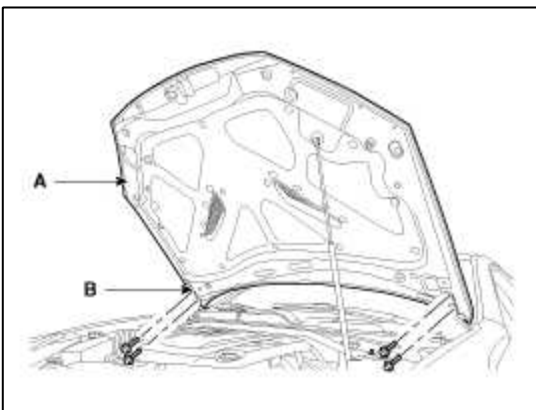

- Installation is the reverse of removal.

NOTE


- Make sure the hood opens properly and locks securely.
- Adjust the hood alignment.

Hood Insulator Pad Replacement

- Using a clip remover, detach the clips, and remove the hood insulator pad (A).

CAUTION

- Be careful not to scratch the hood panel.

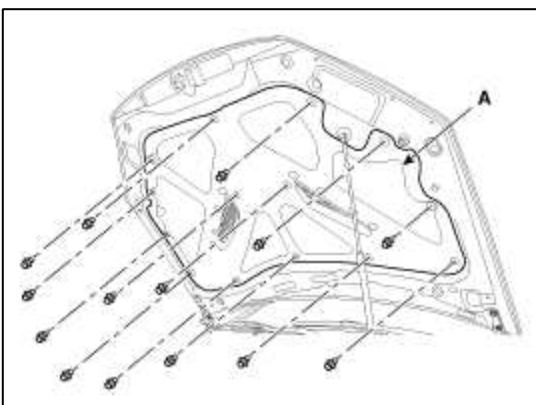

2. Installation is the reverse of removal.

NOTE


- Replace any damaged clips.

Hood Weatherstrip Replacement

1. Remove the hood weatherstrip (A).

CAUTION

- Take care not to scratch the hood weatherstrip.

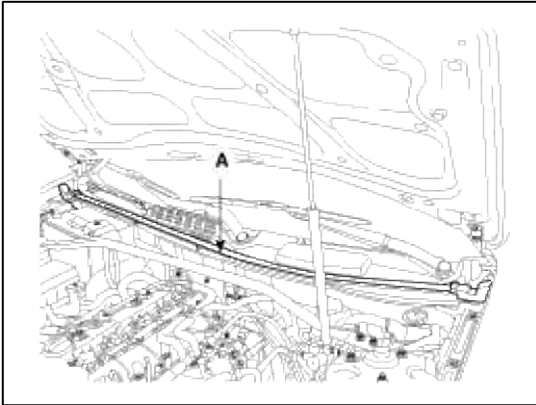


2. Installation is the reverse of removal.

NOTE

- Replace any damaged clips.

Hood Latch Release Handle Replacement

1. Remove the hood latch release handle (A).

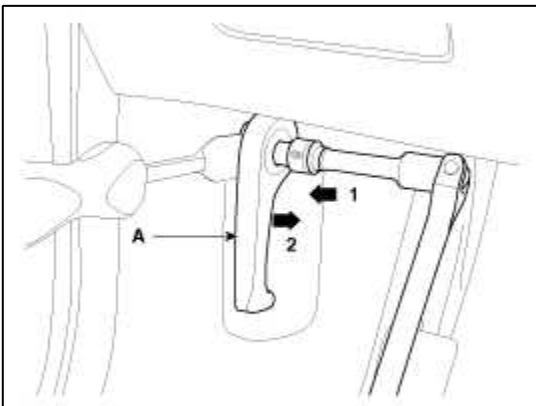

2. Installation is the reverse of removal.

NOTE


- Make sure the hood latch cable is connected properly.
- Make sure the hood locks securely.

Hood Latch Replacement

1. Remove the front bumper cover.

(Refer to the BD group - "Front Bumper")


2. Detach the clips, then remove the hood latch cover (A).

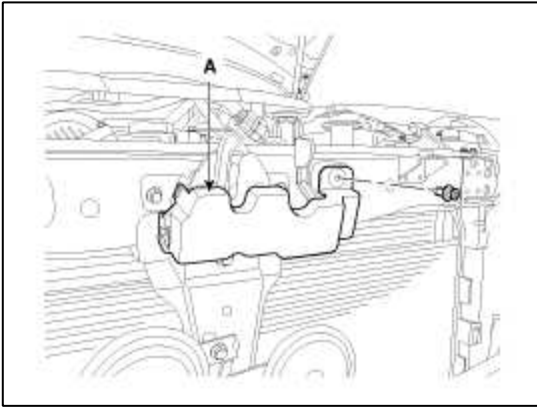


3. Remove the hood latch (A) mounting bolts.

Tightening torque :

7.8~11.8 N.m (0.8~1.2 kgf.m, 5.8~8.7 lb-ft)

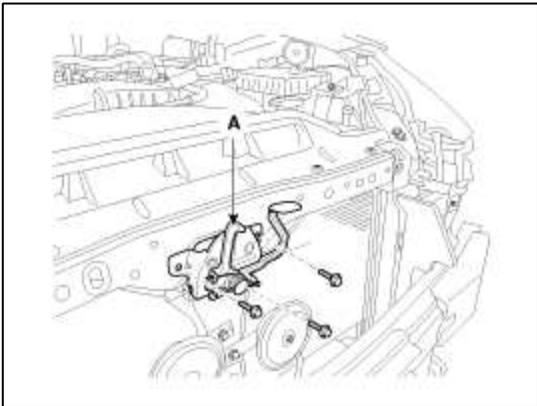

4. Disconnect the hood latch cable (A) and remove the latch (B).

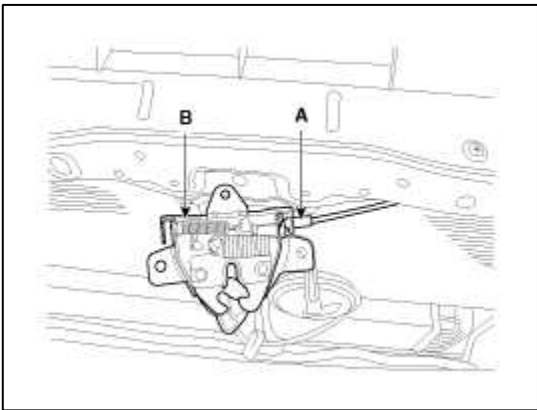


5. Installation is the reverse of removal.

NOTE

- Make sure the hood latch cable is connected properly.
- Make sure the hood locks securely.

Hood Lift Replacement


1. Using a screwdriver (A), lift up slightly the socket clips (B) of both ends on the lifter (D), and then remove the lifter from the bracket (C).

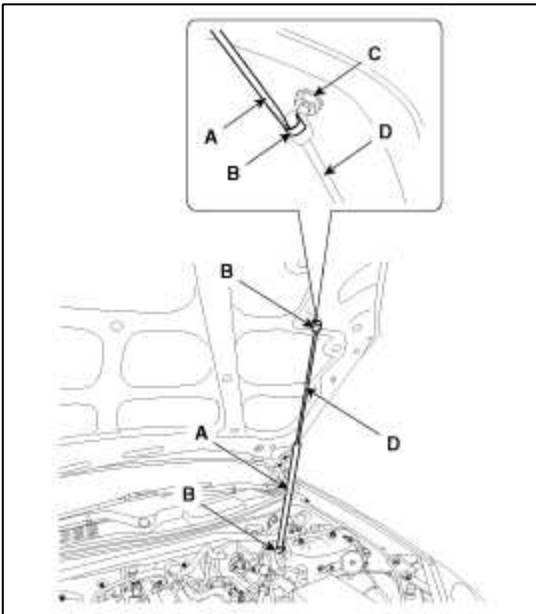

2. Installation is the reverse of removal.

Adjustment

1. After loosening the hinge (A) mounting bolt, adjust the hood (B) by moving it up or down, or right or left.
2. Adjust the hood height by turning the hood overslam bumpers (C).
3. After loosening the hood latch (D) mounting bolts, adjust the latch by moving it up or down, or right or left.

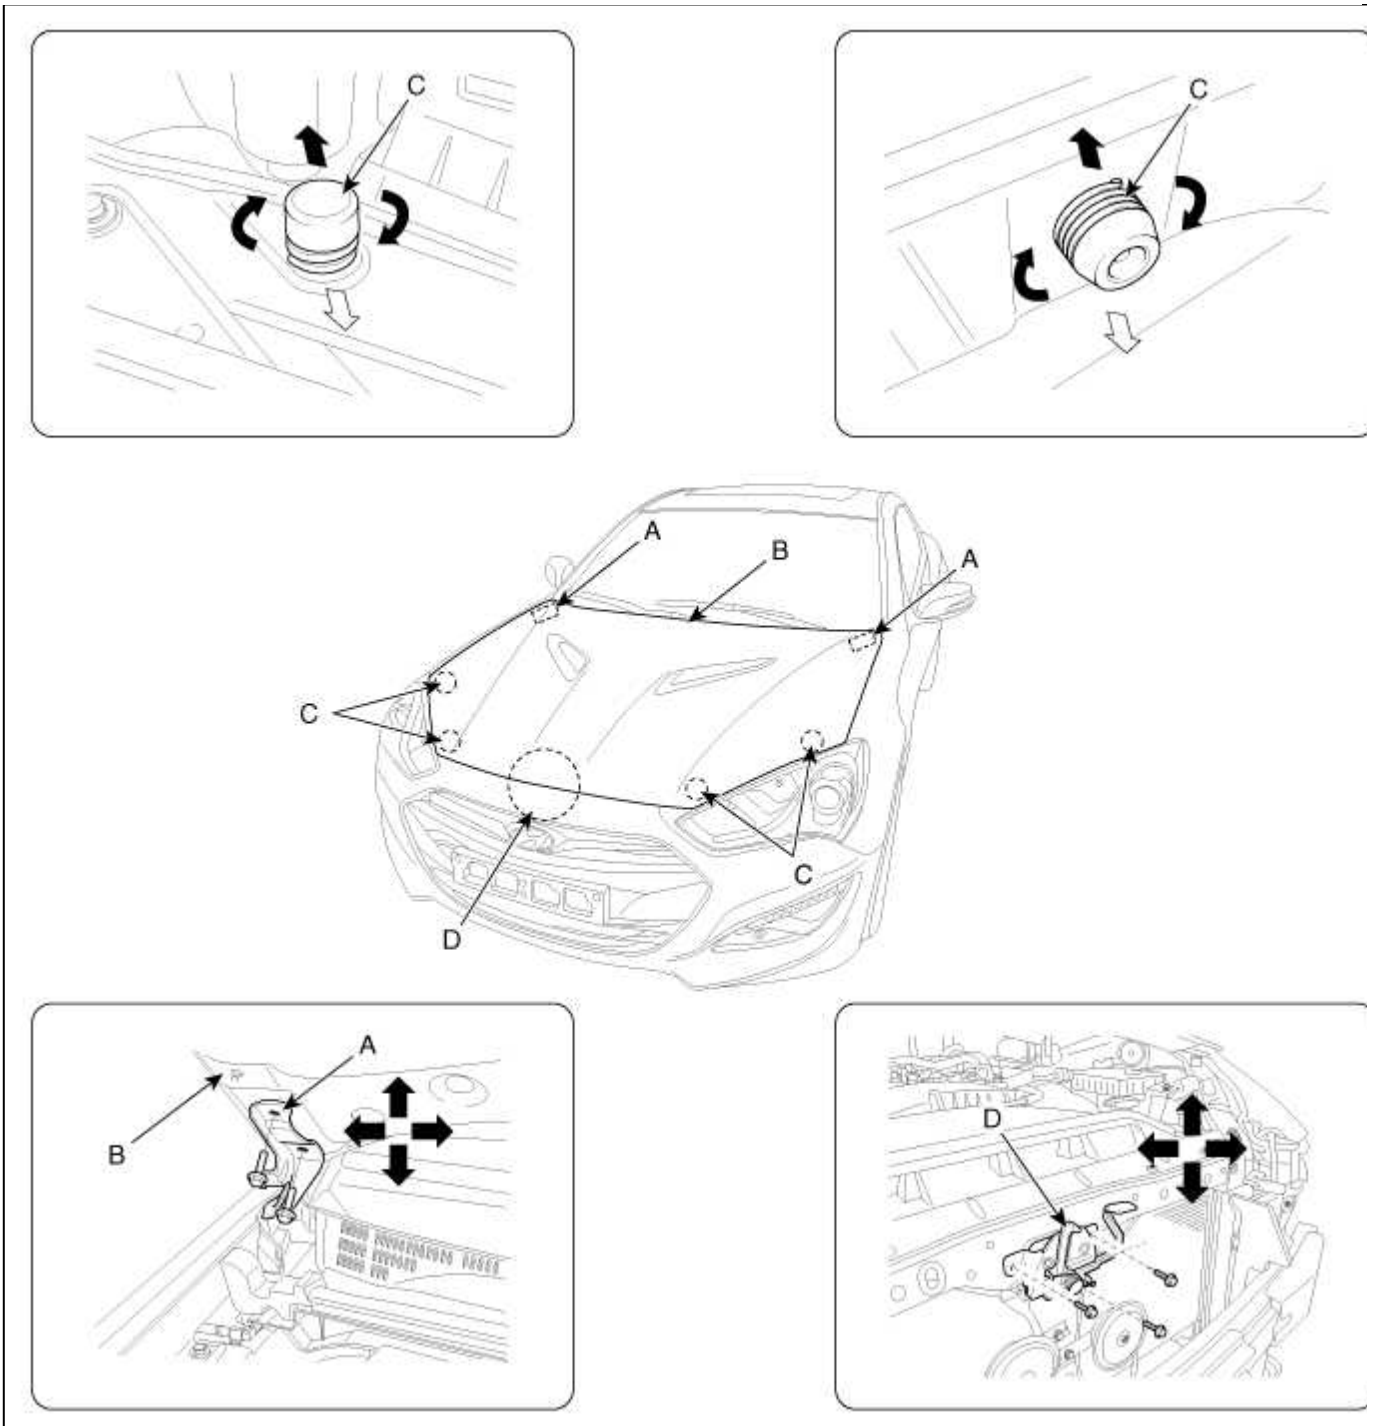

Body (Interior and Exterior) > Exterior > Trunk Lid > Repair procedures


Replacement

Trunk Lid Replacement


NOTE

- When removing and installing the trunk lid, an assistant is necessary.
- Wear gloves to protect hands from injury.

1. After loosening the mounting screws, then remove the trunk lid full handle (A).

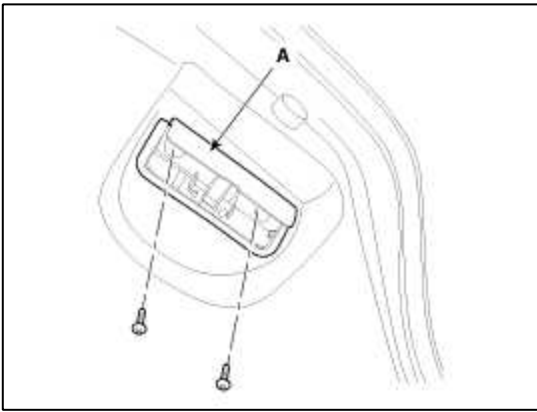


2. Detach the clips, then remove the trunk lid trim (A).

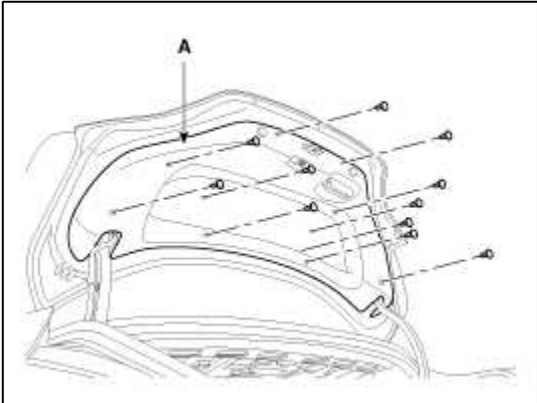

3. Disconnect the wiring harness (A) and connectors.
4. After loosening the mounting bolts, then remove the trunk lid (B).

Tightening torque :

6.9~8.8 N.m (0.7~0.9 kgf.m, 5.1~6.5 lb-ft)

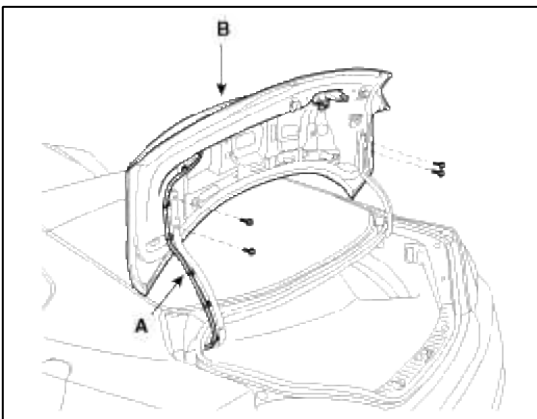

5. Installation is the reverse of removal.

NOTE


- Replace any damaged clips.

Trunk lid weatherstrip replacement

1. Remove the trunk lid weatherstrip (A).

CAUTION

- Do not apply sealant to the body.

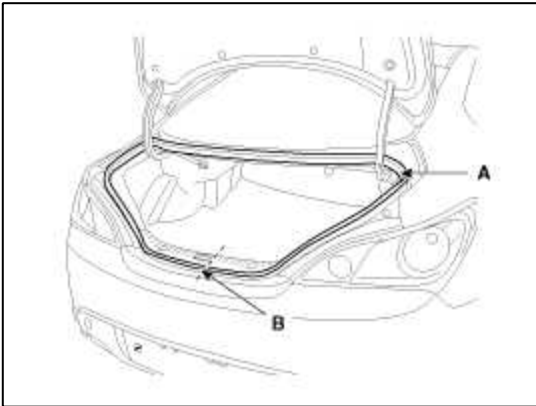

2. Installation is the reverse of removal.

NOTE


- Install the weatherstrip aligned with center line (B).

Trunk lid latch replacement

1. Remove the trunk lid trim.
2. Disconnect the connector (A).
3. After loosening the mounting bolts, then remove the trunk lid latch assembly (B).

Tightening torque :

6.9~10.8 N.m (0.7~1.1 kgf.m, 5.1~8.0 lb-ft)

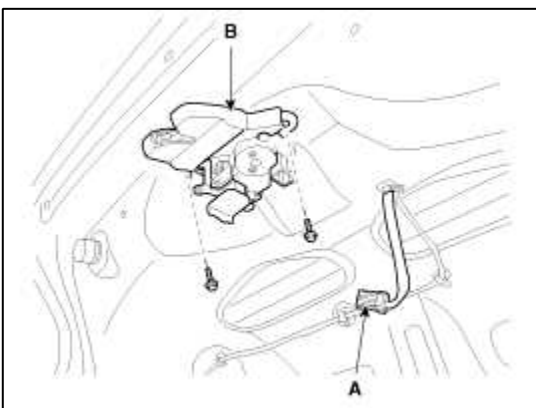

4. Installation is the reverse of removal.


NOTE

- Make sure trunk lid looks/unlocks and opens/closes properly.

Adjustment


1. After loosening the trunk lid hinge (A) mounting bolt, adjust the trunk lid by moving it up or down, or right or left.
2. Adjust the trunk lid height by turning the trunk lid overslam bumpers (B).

3. After loosening the striker (C) mounting bolts, adjust the striker by moving it up or down, or right or left.

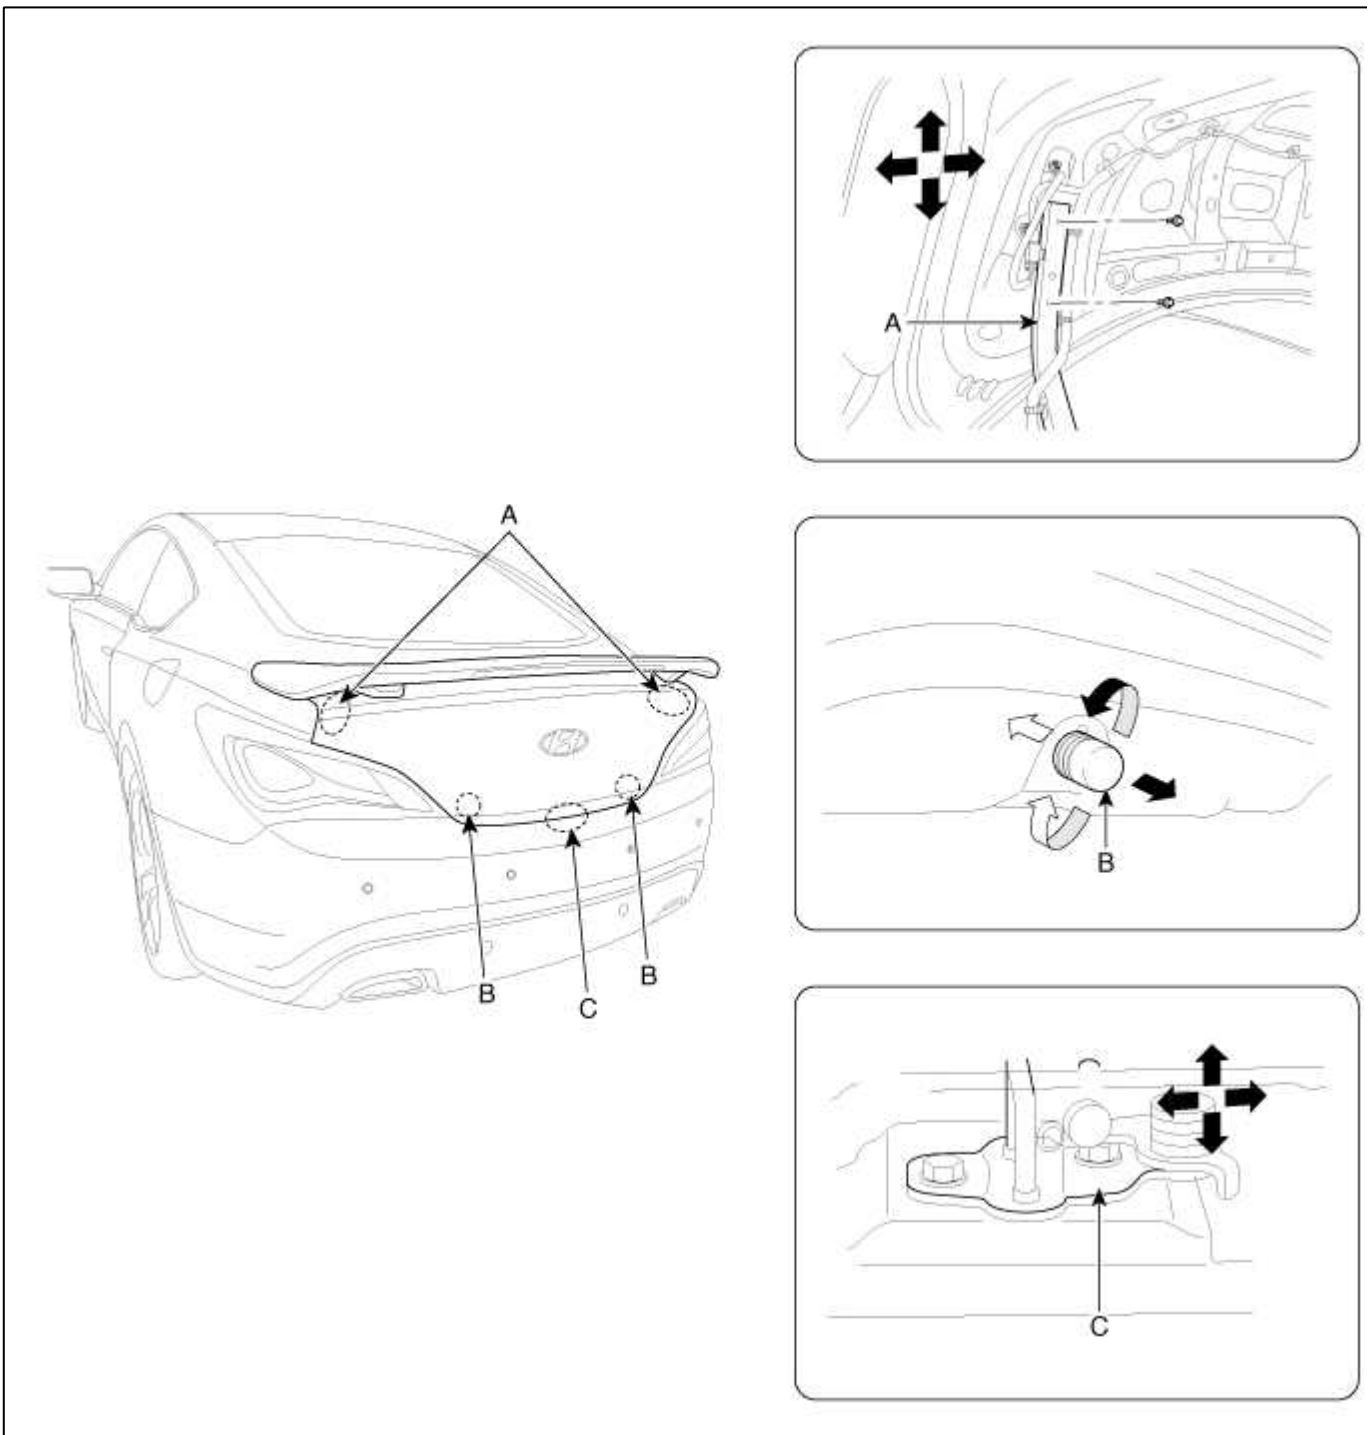

Body (Interior and Exterior) > Exterior > Front Door > Components and Components Location

Components

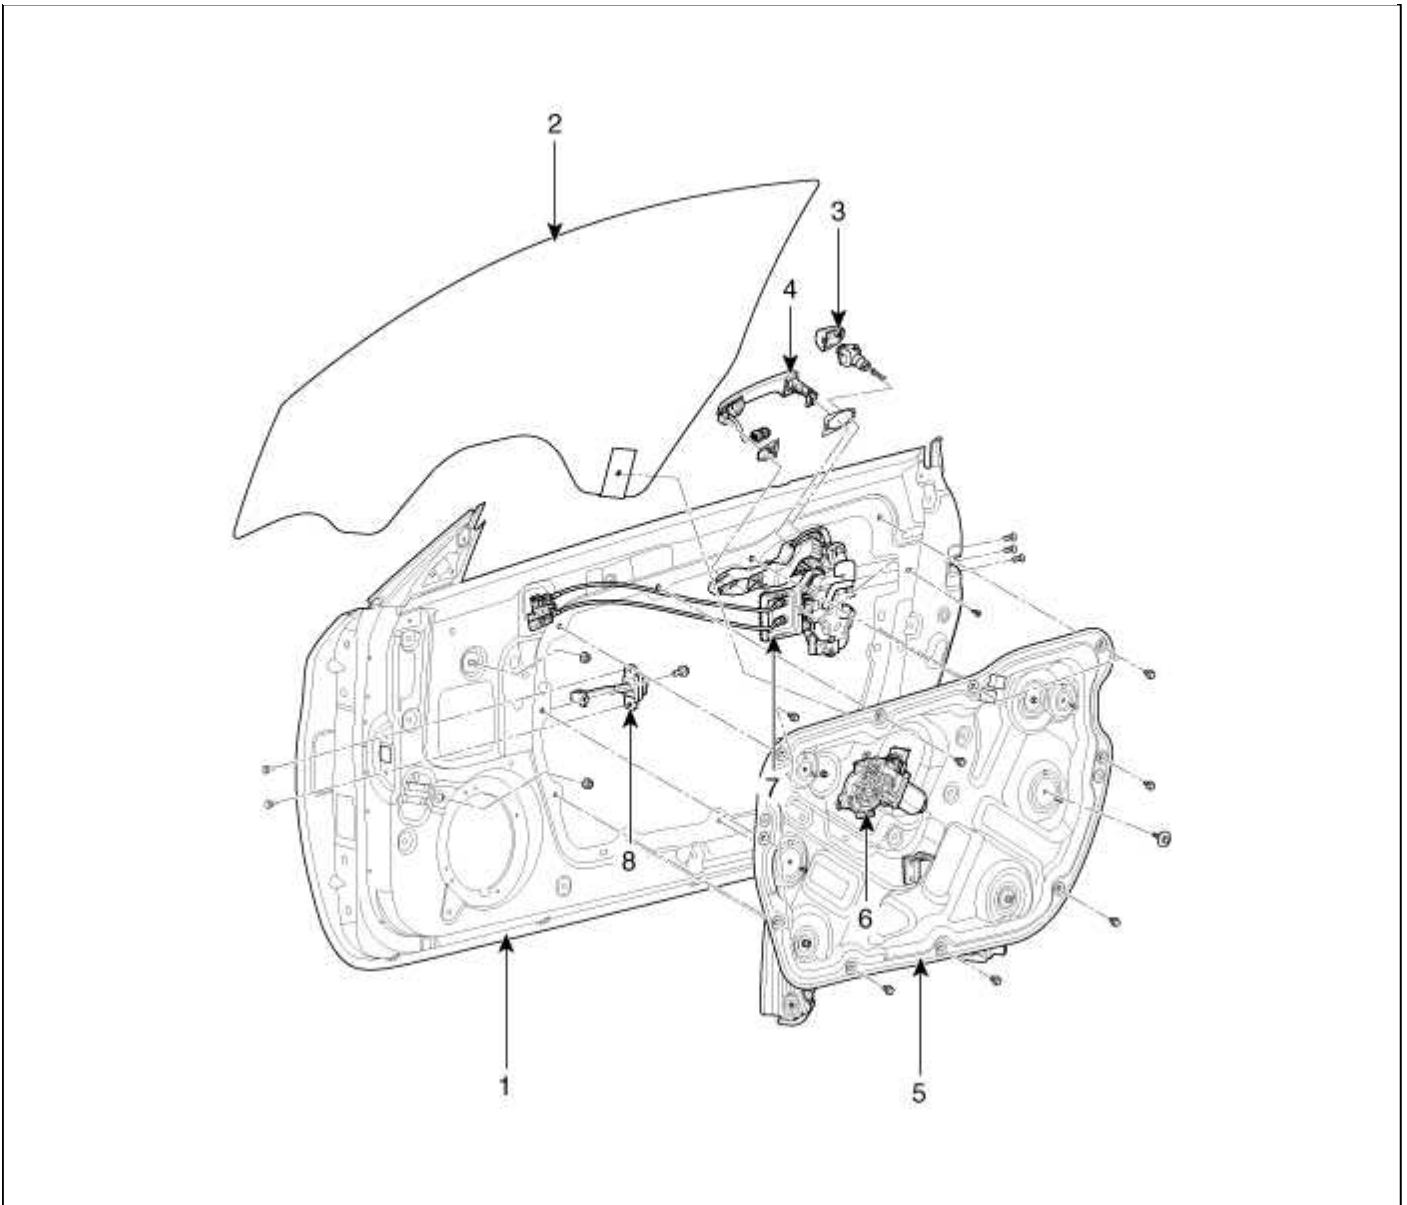

- | | |
|------------------------------------|----------------------------------|
| 1. Front door panel | 5. Front door module |
| 2. Front door window glass | 6. Front door power window motor |
| 3. Front door outside handle cover | 7. Front door latch |
| 4. Front door outside handle | 8. Front door checker |

Body (Interior and Exterior) > Exterior > Front Door > Repair procedures


Replacements

Front Door Trim Replacement


CAUTION

- Take care not to scratch the door trim and other parts.
- Put on gloves to protect your hands.


1. Using a screwdriver or remover, remove the front door quadrant inner cover (A).

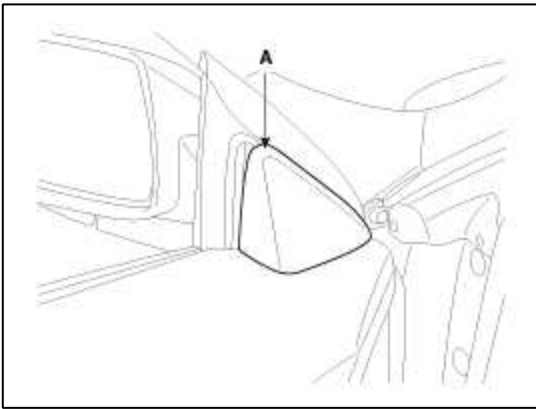


2. Remove the front door inside handle cover (A) and front door trim pad (B).

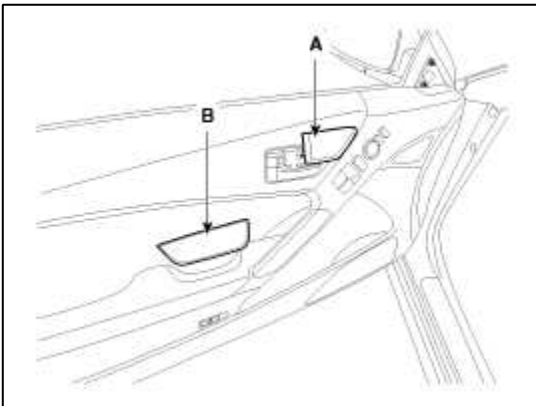


3. After loosening the mounting screws, then remove the front door trim (A).

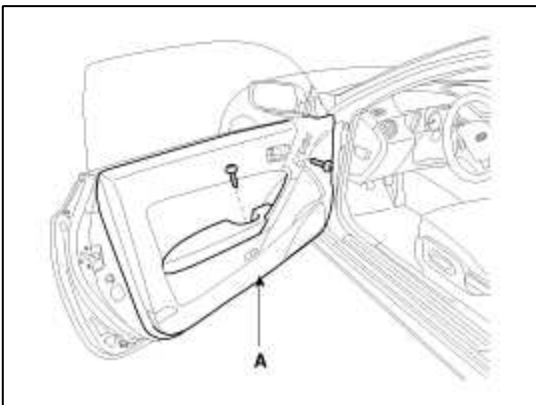

4. Disconnect the front door inside handle cage (A).

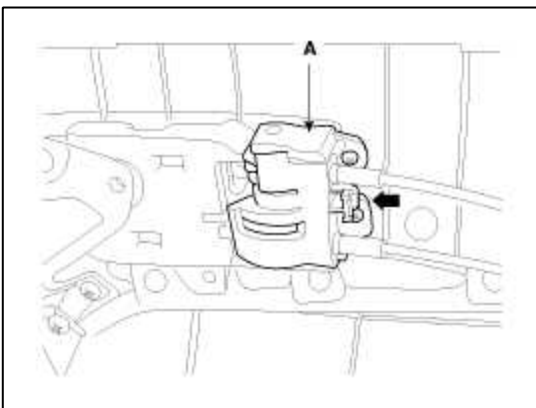

5. Disconnect the twitter speaker connector (A), outside rear view mirror switch connector (B), power window switch connector (C).

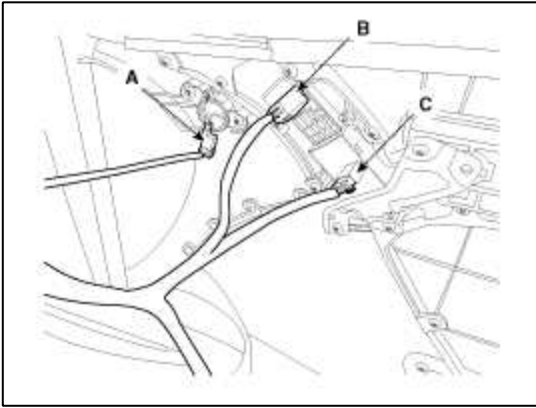


6. Installation is the reverse of removal.

NOTE

- Make sure of connectors is plugged in properly and each rod is connected securely.
- Make sure the door locks/unlocks and opens/closes properly.
- Replace any damaged clips.

Inside Handle Replacement

1. Remove the front door trim.
2. After loosening the mounting screws, then remove the front door inside handle (A).

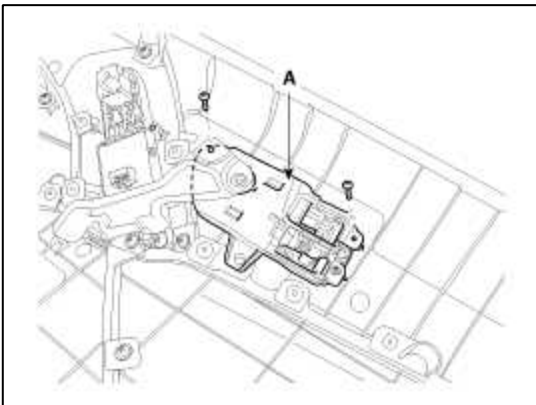

3. Installation is the reverse of removal.

NOTE

- Replace any damaged clips.
- Make sure the door locks/unlocks and opens/closes properly.

Glass Replacement

1. Remove the front door trim.
2. Remove the glass mounting hole plug.


NOTE

- Use the door switch to align the mounting hole/bolt with the hole in the door.
- If unable to operate the window motor, remove the motor and align the hole by hand.
- Be careful not to drop the glass and/or scratch the glass surface.

- Carefully move the glass (B) until you can see the bolts, then loosen them. Separate the glass from the glass run and carefully pull the glass out through the window slot.

Tightening torque :

3.9 ~ 2.9 N.m (0.4 ~ 1.2 kgf.m, 11.8 ~ 8.7 lb-ft)

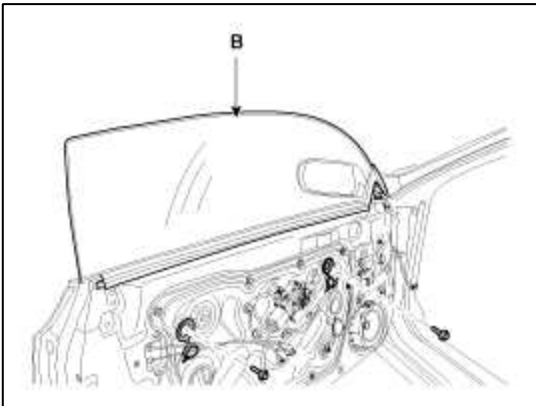


- Installation is the reverse of removal.

NOTE

- Roll the glass up and down to see if it moves freely without binding.
- Adjust glass position as needed.
- Make sure the door locks/unlocks and opens/closes properly.
- Replace any damaged clips.

Speaker Replacement

- Remove the front door trim.
- Disconnect the speaker connector (A).
- Drill out the rivets to remove the speaker (B).

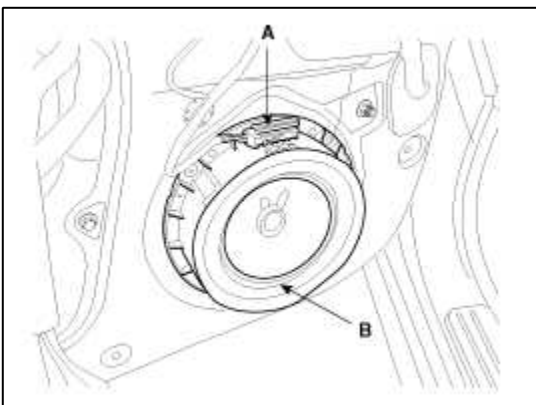


- Installation is the reverse of removal.

NOTE

- Use sheet metal screws to secure the speaker.
- Make sure connectors are connected properly and each rod is connected securely.
- Make sure the door locks/unlocks and opens/closes properly.
- Replace any damaged clips.

Power Window Motor Replacement

1. Remove the front door trim.
2. Disconnect the power window motor connector (A).
3. After loosening the mounting screws, then remove the power window motor (B).

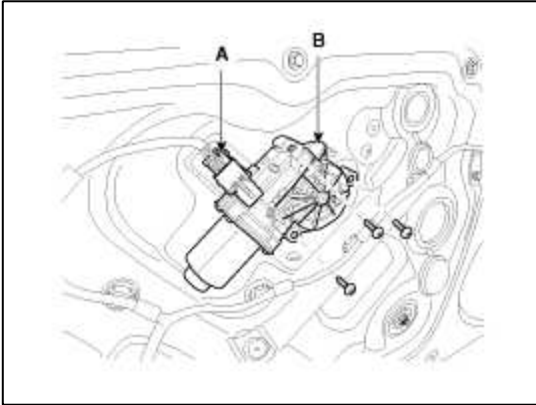

4. Installation is the reverse of removal.

NOTE


- The area of rotational parts and springs should be applied with sufficient grease.
- Roll the glass up down to see if it move freely without binding.
- Make sure the door locks/unlocks and opens/closes properly.
- Replace any damaged clips.

Door Module Replacement

1. Remove the front door trim.
2. Remove the front door window glass.
3. Loosen the door latch mounting screws.
4. After loosening the mounting bolts, then remove the front door module (A).


Tightening torque :

6.9 ~ 10.8 N.m (0.7 ~ 1.1 kgf.m, 5.1 ~ 8.0 lb-ft)

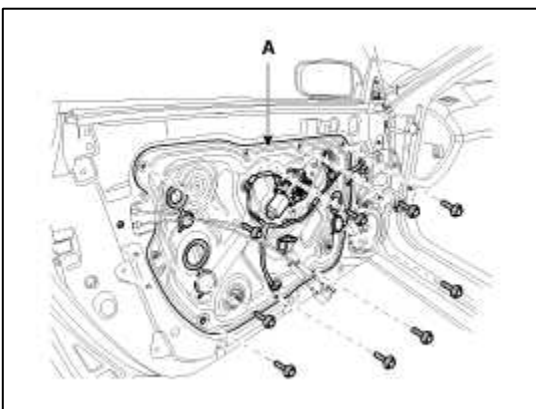

5. Disconnect the front door module wiring harness.

6. Remove the front door module (A).

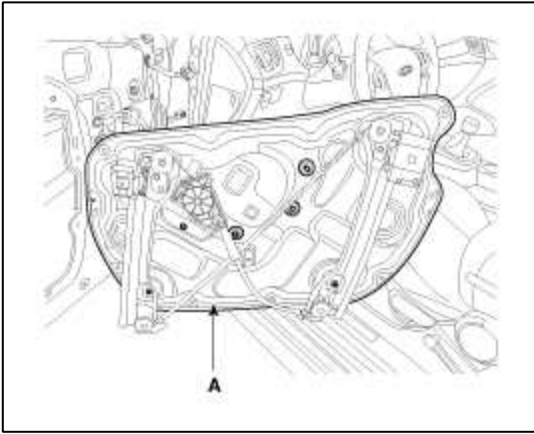

7. Installation is the reverse of removal.

NOTE


- The area of whole parts should be applied with sufficient grease.
- Make sure the connector is plugged in properly and each rod is connected securely.
- Make sure the door locks/unlocks and opens/closes properly.
- Replace any damaged clips.

Outside Handle Replacement


1. Remove the front door trim.
2. After loosening the mounting bolt, then remove the outside handle cover (A).

Tightening torque :

6.9 ~ 10.8 N.m (0.7 ~ 1.1 kgf.m, 5.1 ~ 8.0 lb-ft)

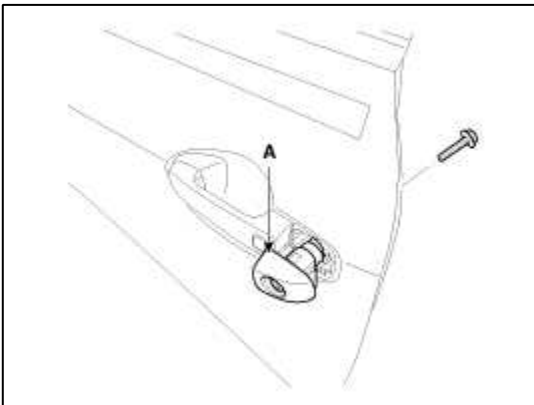


3. Remove the outside handle (A) by sliding it rearward.

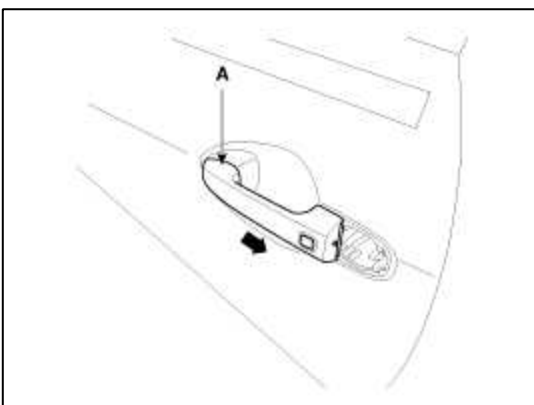

4. Disconnect the outside handle connector (A).



5. Remove the outside handle bushing (A).

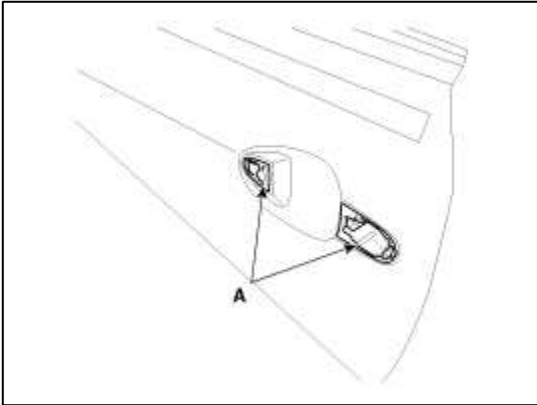


6. Installation is the reverse the removal.

NOTE

- Make sure the door locks/unlocks and opens/closes properly.
- Make sure the connector is plugged in properly and each rod is connected securely.

Door Latch Replacement


1. Remove the front door trim.
2. Remove the front door window glass.
3. Remove the front door module.
4. Reomove the outside handle.
5. Loosen the mounting screw (A).

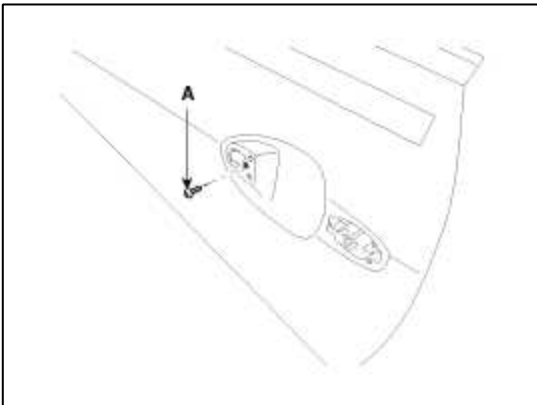


6. After loosening the mounting screws, then remove the front door latch (A).

Tightening torque :

6.9 ~ 10.8 N.m (0.7 ~ 1.1 kgf.m, 5.1 ~ 8.0 lb-ft)

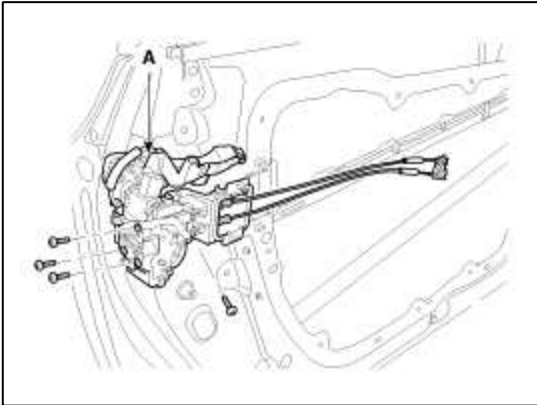

7. Disconnect the front door latch connector (A).

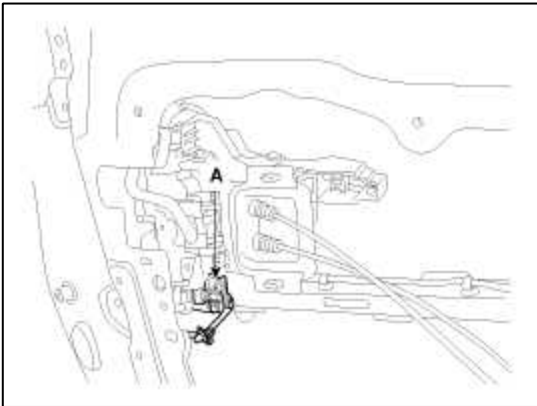

8. Installation is the reverse of removal.

NOTE

- Make sure the door locks/unlocks and opens/closes properly.
- Make sure the connector is plugged in properly and each rod is connected securely.


Door Channel Replacement

1. Remove the front door trim.
2. Remove the front door window glass.
3. Remove the front door module.

4. After loosening the mounting nuts, then remove the door channel (A).

Tightening torque :

3.9 ~ 5.9 N.m (0.4 ~ 0.6 kgf.m, 2.9 ~ 4.3 lb-ft)

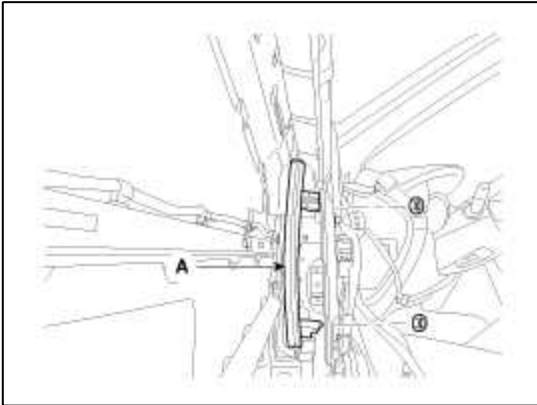

5. Installation is the reverse of removal.


Adjustment

Glass Adjustment

NOTE

- Check the glass run channel for damage or deterioration, and replace them as needed.


1. Remove the front door trim.
2. Remove the glass mounting hole plug.
3. Carefully move the glass (A) until the glass mounting bolts are visible, then loosen them.

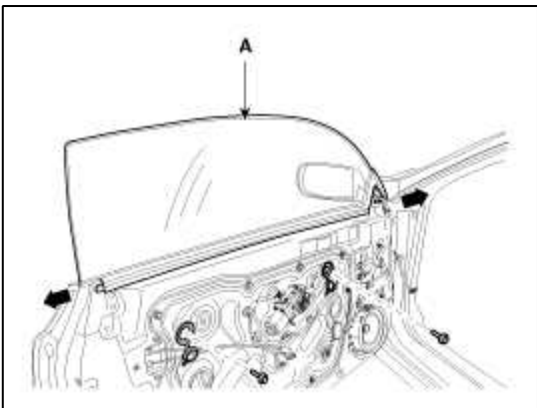

4. Check that the glass moves smoothly.
5. Raise the glass fully, and check for gaps. Check that the glass contacts the glass run channel evenly.

6. Check for water leaks. Run water over the roof and on the sealing area as shown, and note these items:

- A. Use a 12mm (1/2in.) diameter hose (A).
- B. Adjust the rate of water flow as shown (B).
- C. Do not use a nozzle.
- D. Hold the hose about 300mm(12in.) away from the door.

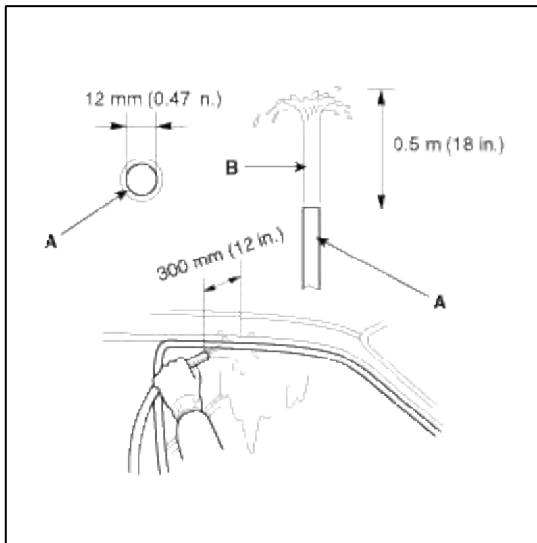


Door Striker Adjustment

Make sure the door latches securely without slamming it. If necessary adjust the striker (A): The striker nuts are fixed. The striker can be adjusted up or down, and in or out.

1. Loosen the screws (B) just enough for the striker to move.

Tightening torque :

(B) : 16.7 ~ 21.6 N.m (1.7 ~ 2.2 kgf.m, 12.3 ~ 15.9 lb-ft)

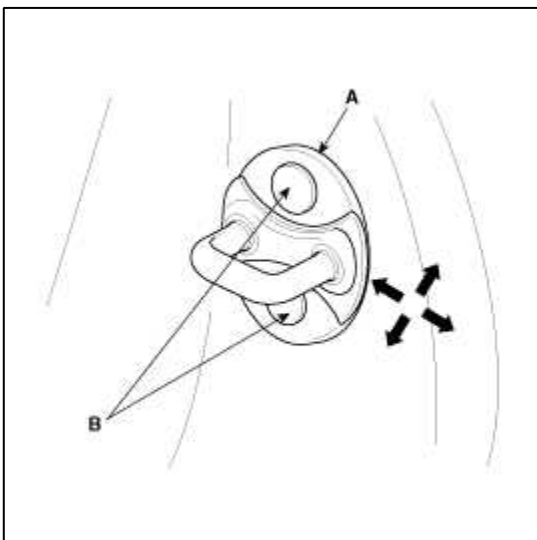


2. Tap on the striker with a plastic hammer to adjust the striker. The striker will not move much, but will give some adjustment.
3. Hold the outer handle out, and push the door against the body to be sure the striker allows a flush fit. If the door latches properly, tighten the screws and recheck.

Door Position Adjustment

NOTE

- After installing the door, check for a flush fit with the Body, then check for equal gaps between the front, rear, and bottom, door edges and the body. Check that the door and body edges are parallel. Before adjusting, replace the mounting bolts.

1. Check that the door and body edges are parallel.

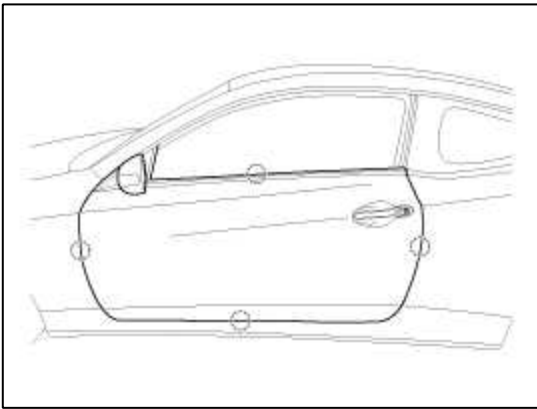


2. Place the vehicle on a firm, level surface when adjusting the doors.
3. Adjust at the hinges (A) :
 - A. Loosen the door mounting bolts slightly, and move the door in or out until it aligns flush with the body.
 - B. Loosen the hinge mounting bolts slightly, and move the door backward or forward, up or down as necessary to equalize the gaps.
 - C. Place a shop towel on the jack to prevent damage to the door when adjusting the door.

Tightening torque :

(B) : 21.6 ~ 26.5 N.m (2.2 ~ 2.7 kgf.m, 15.9 ~ 19.5 lb-ft)

(C) : 33.3 ~ 41.2 N.m (3.4 ~ 4.2 kgf.m, 24.6 ~ 30.4 lb-ft)

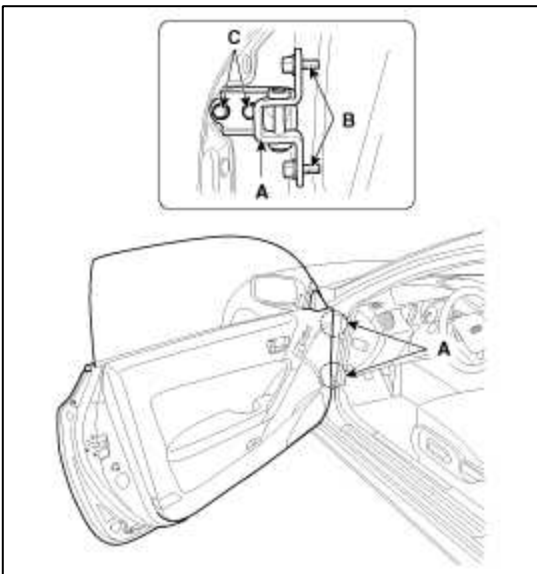

4. Grease the pivot portions of the hinges indicated.
5. Check for water leaks.

Body (Interior and Exterior) > Exterior > Body Side Moldings > Repair procedures


Replacement

Front Wheel Guard Replacement

NOTE

- When prying with a flat-tip screwdriver, wrap with protective tape, and apply protective tape around the related parts, to prevent damaged.
- Put on gloves to protect your hands.
- Take care not to scratch the body surface.

1. Remove the front tire.
2. After loosening the mounting clips and screws, then remove the front wheel guard (A).

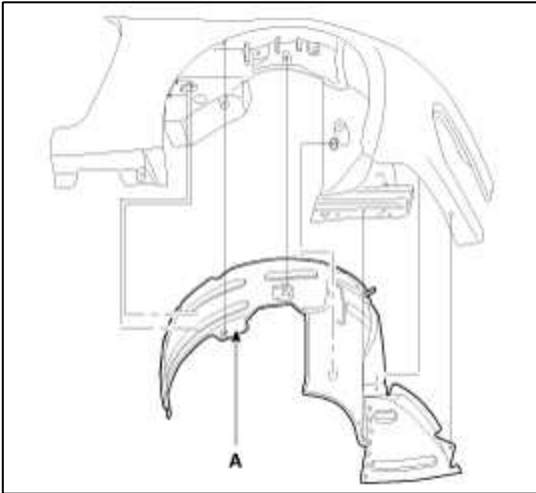

3. Installation is the reverse of removal.

NOTE


- Replace any damage clips.

Rear Spoiler Replacement


NOTE

- When prying with a flat-tip screwdriver, wrap it with protective tape, and apply protective tape around the related parts, to prevent damaged.
- Put on gloves to protect your hands.
- Take care not to scratch the body surface.

1. Remove the trunk lid trim
(Refer to the BD group - "Trunk Lid")
2. Disconnect the high mounted stop lamp connector (A).

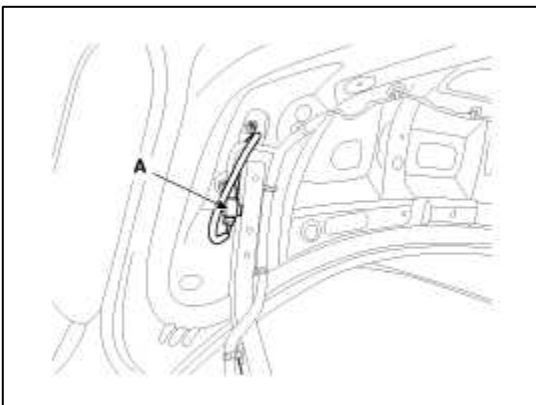

3. After loosening the mounting nuts, then remove the rear spoiler (A).

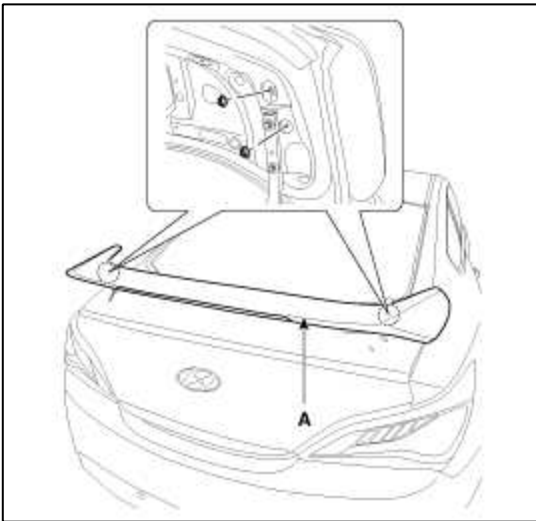

4. Installation is the reverse of removal.

NOTE

- Make sure of connectors is plugged in properly and each rod is connected securely.
- Replace any damaged clips.

Body (Interior and Exterior) > Exterior > Sunroof > Repair procedures

Replacements

Glass Replacement


NOTE

- Put on glove to protect your hands.

1. Remove the glass (A) by lifting it up.

CAUTION

- Do not damage the roof panel.

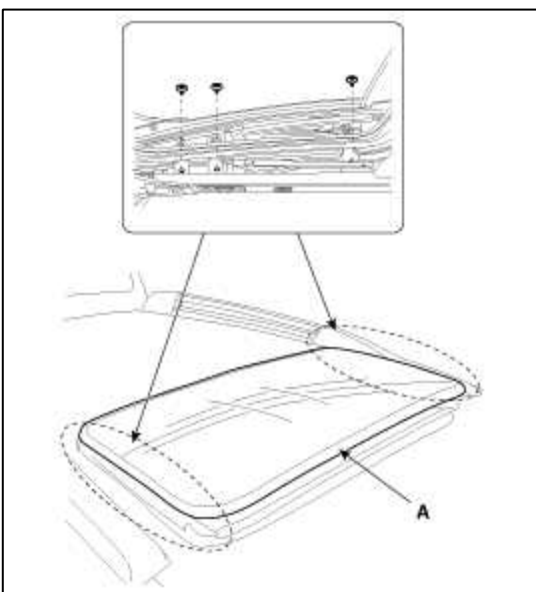


2. Installation is the reverse of removal.

Motor Replacement

CAUTION

- Confirm the position of guide whether it is closed or not when you remove the motor.

1. Remove the overhead console.
(Refer to the BD group - "Roof Trim")
2. Disconnect the motor connector (B), remove the screws and then remove the motor (A).

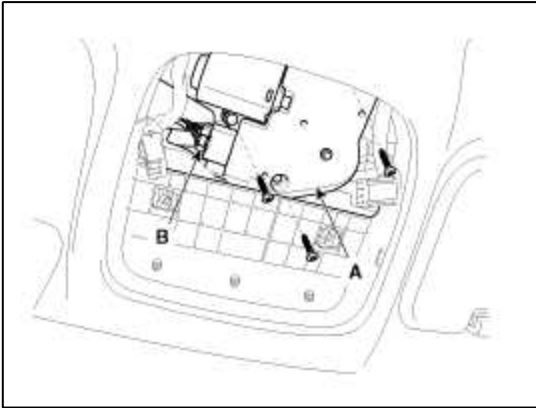


3. Installation is the reverse of removal.

CAUTION

- Make sure to initialize the motor.

Deflector Replacement

1. Open the glass fully.
2. Disconnect the deflector link (A) from the frame (B), and then remove the deflector (C).

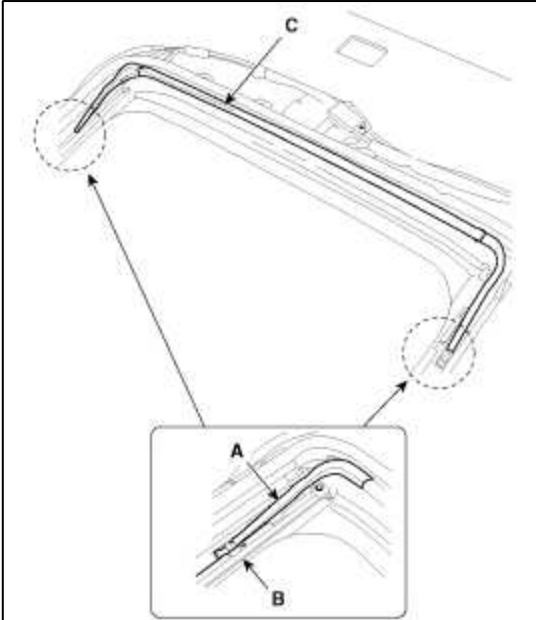

3. Installation is the reverse of removal.

Sunroof Assembly Replacement

1. Remove the front seat assembly.
(Refer to the BD group - "Front Seat")
2. Remove the rear seat assembly.
(Refer to the BD group - "Rear Seat")
3. Remove the Interior trim.
(Refer to the BD group - "Interior Trim")

4. Remove the roof trim.
(Refer to the BD group - "Roof Trim")
5. Remove the sunroof glass.
6. Disconnect the drain tubes (B).
7. After loosening the mounding bolts and nuts, remove the sunroof assembly (A).

Tightening torque :

(C) : 6.9 ~ 10.8 N.m (0.7 ~ 1.1 kgf.m, 5.1 ~ 8.0 lb-ft)

(D) : 3.9 ~ 5.9 N.m (0.4 ~ 0.6 kgf.m, 2.9 ~ 4.3 lb-ft)


CAUTION

- Take care not to scratch the interior trims and other parts.

8. Installation is the reverse of removal.

CAUTION


- Make sure to initialize the motor.

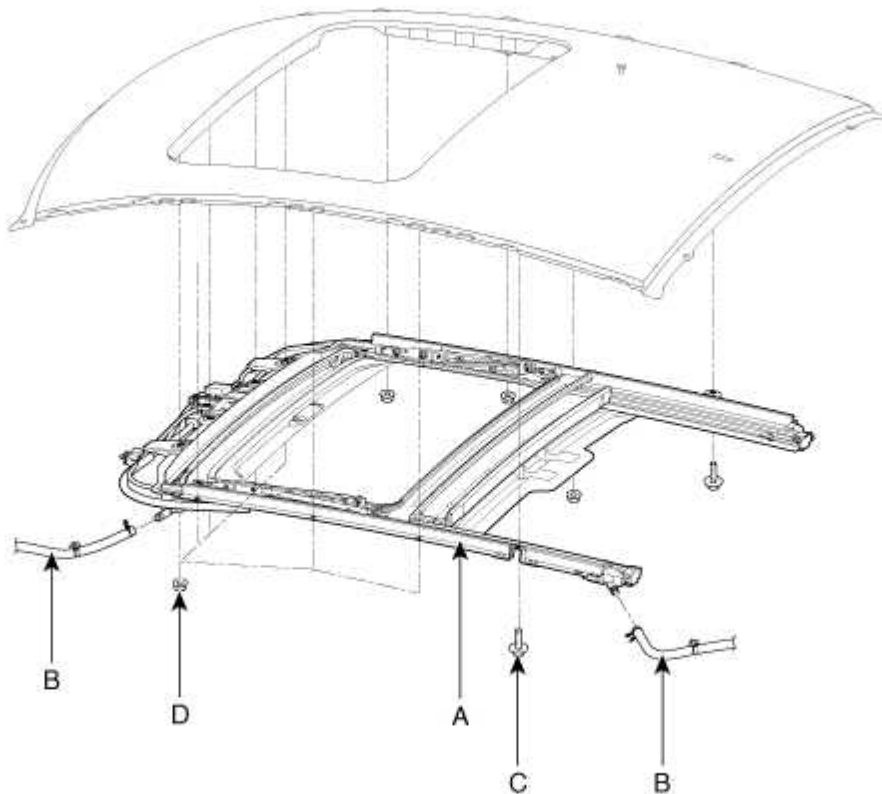

Sunshade And Drip Rail Replacement

1. Remove the sunroof assembly.
2. Remove the drip link (A) and sunshade stopper (B).


3. Remove the sunshade (C) and drip rail (D).

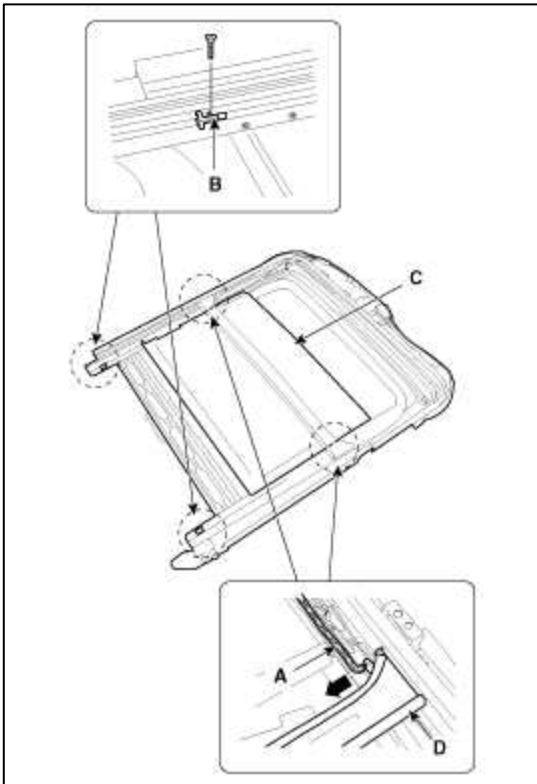


4. Installation is the reverse of removal.

Guide Assembly Replacement

1. Remove the sunroof assembly.
2. Lower and slide the guide assembly (A) to the rear to remove.

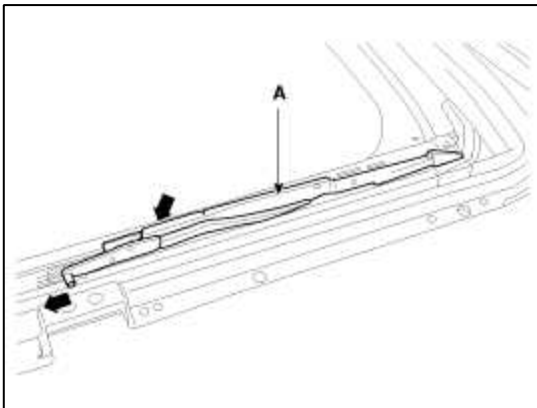


3. Remove the guide (A) and slide (B).

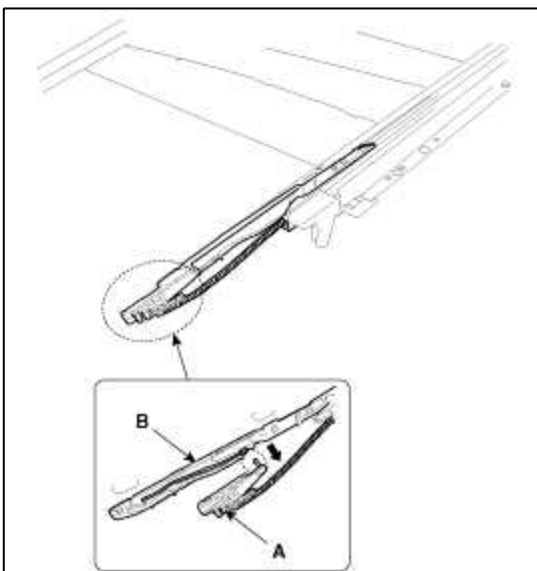

4. Installation is the reverse of removal.

NOTE


- Make sure to align the slide with the center of “A” and “B”
- Make sure to initialize the motor.

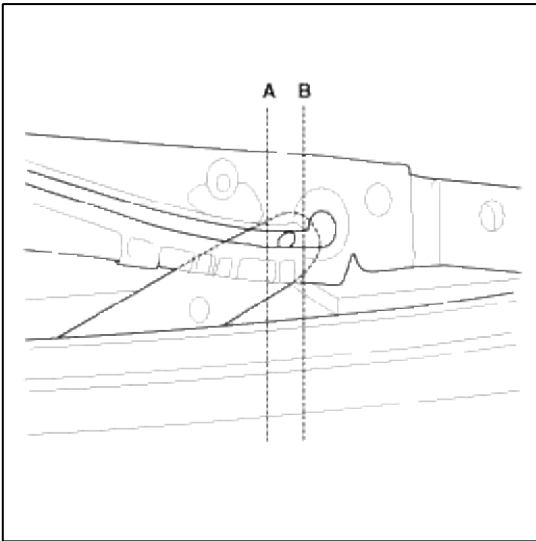

Adjustment

How To Initialize

1. Check that the glass has been installed.
 - A. Finished height adjustment.
2. Push the UP switch. (Keep on pushing the switch)
 - A. Press and hold the UP button for more than 15 seconds until the sunroof moved to tilt up state and hard stop position.

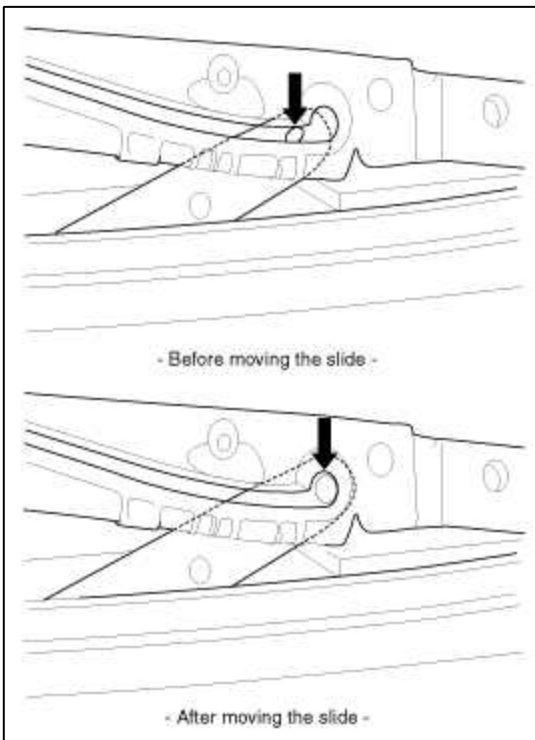

3. Release the sunroof UP button with in 15 seconds. And then press and hold the UP button once again within 15 seconds until the sunroof do as follows.
 - A. Tilt up → Slide Open → Slide Close

4. Then release the lever.
5. When the sunroof is closed completely, turn OFF the UP switch initialize the motor completely.

When To Initialize The Motor


1. After initial vehicle assembly.
2. If the initial value is erased or damaged because of short power electric discharge during operation.
3. After using the manual handle.

Operating The Sunroof Emergency Handle

1. Use the sunroof emergency handle to close or open the sunroof manually if the sunroof cannot be closed electronically due to motor or controller electrical malfunction.
2. Operating method.
 - A. Remove the overhead console.
 - B. Push the emergency handle up into the hexagonal drive (A) of the sunroof motor. You must push hard enough to disengage the motor clutch; otherwise the emergency handle will slip due to incomplete fit in the motor.
 - C. Carefully turn the emergency handle clockwise to close the sunroof.
 - D. After closing the sunroof, wiggle the handle back and forth as you remove the tool from the motor, to ensure the motor clutch reengages.
 - E. A 5mm hex socket may be used in place of the emergency handle, with a "Speeder" type handle.

CAUTION

- Do not use power tools to operate the sunroof.
- Damage to the components may occur.

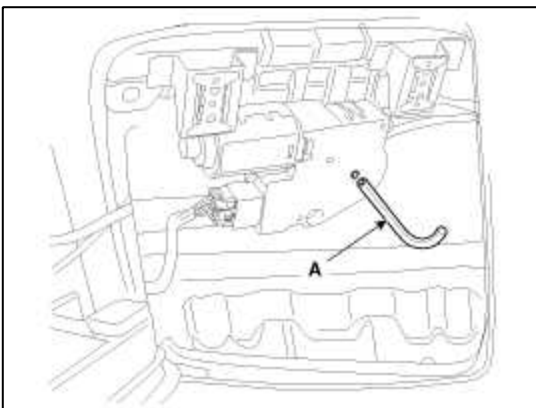

Body (Interior and Exterior) > Exterior > Mirror > Repair procedures


Replacement

Outside Rear View Mirror Replacement

NOTE

- When prying with a flat-up screwdriver, wrap it with protective tape, and apply protective tape around the related parts, to prevent damage.
- Put on gloves to protect your hands.


1. Using a screwdriver or remover, remove the front door quadrant inner cover (A).

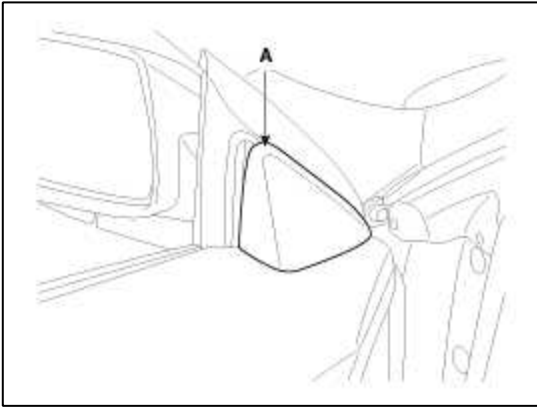

2. Disconnect the outside rear view mirror connector (A).
3. After loosening the mounting nuts, then remove the outside rear view mirror (B).

Tightening torque :


6.9~10.8N.m(0.7~1.1kgf.m, 5.1~8.0 lb-ft)

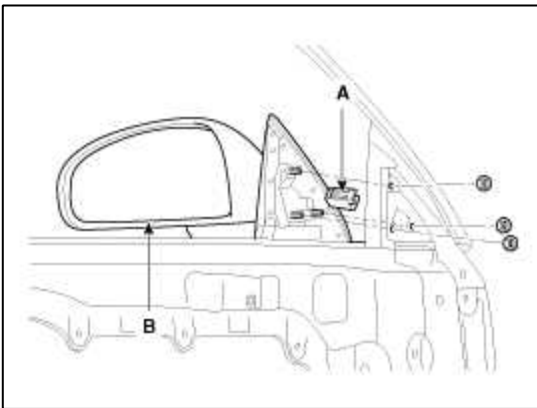

4. Installation is the reverse of removal.

Inside Rear View Mirror Replacement

1. Push the inside rear view mirror base (A) down to remove to inside rear view mirror assembly (B).

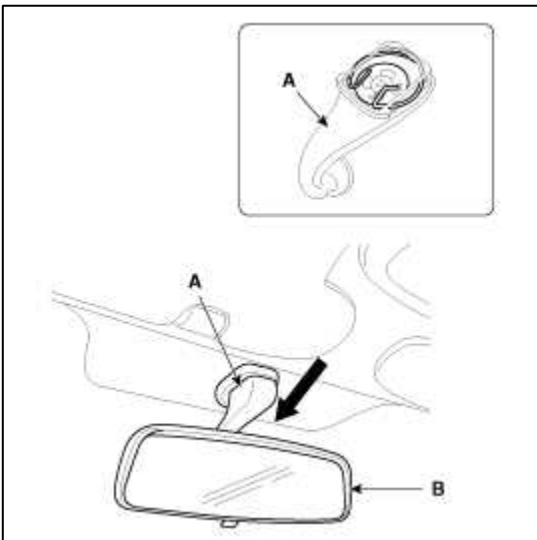


2. Installation is the reverse of removal.


ECM Mirror Replacement

1. Remove the ECM mirror cover (B).

2. Disconnect the ECM mirror connector (A).

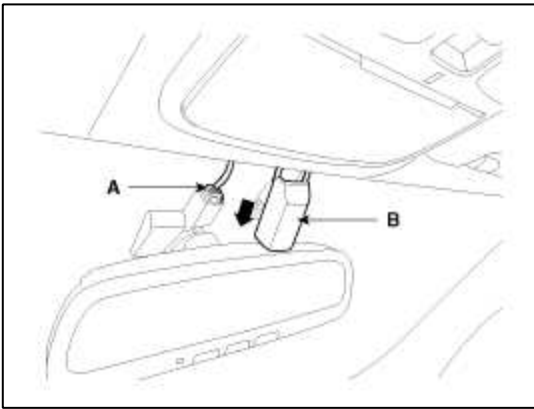

3. Loosen the mounting screw (B), push the ECM mirror base up to remove the ECM mirror assembly (A).

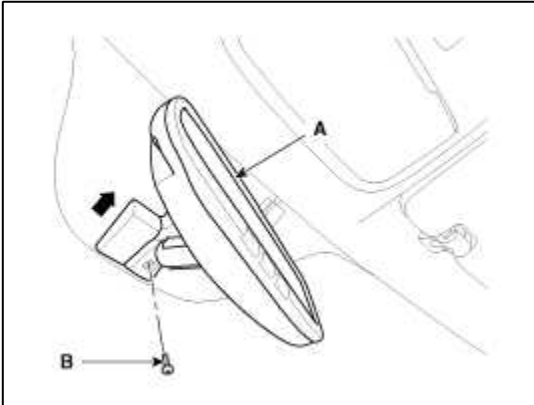

4. Installation is the reverse of removal.

NOTE

- Make sure all connectors are connected in properly.

Body (Interior and Exterior) > Exterior > Cowl Top Cover > Repair procedures


Replacement

Cowl Top Cover Replacement


1. Remove the wiper arm caps.
2. After loosening the mounting nuts, then remove the wiper arm (A).

Tightening torque :

22.6 ~ 26.5 N.m (2.3 ~ 2.7 kgf.m, 16.6 ~ 19.5 lb-ft)

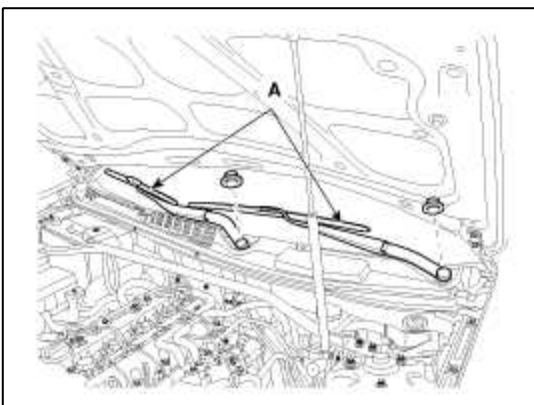

3. Detach the clips, then remove the cowl top cover (A).

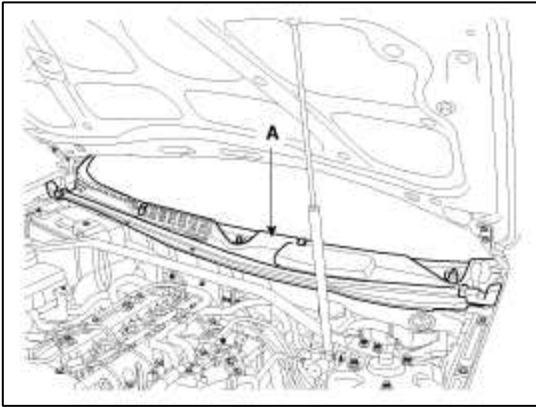

4. Installation is the reverse of removal.


NOTE

- Replace any damage clips.

Body (Interior and Exterior) > Interior > Console > Components and Components Location


Components

[M/T]

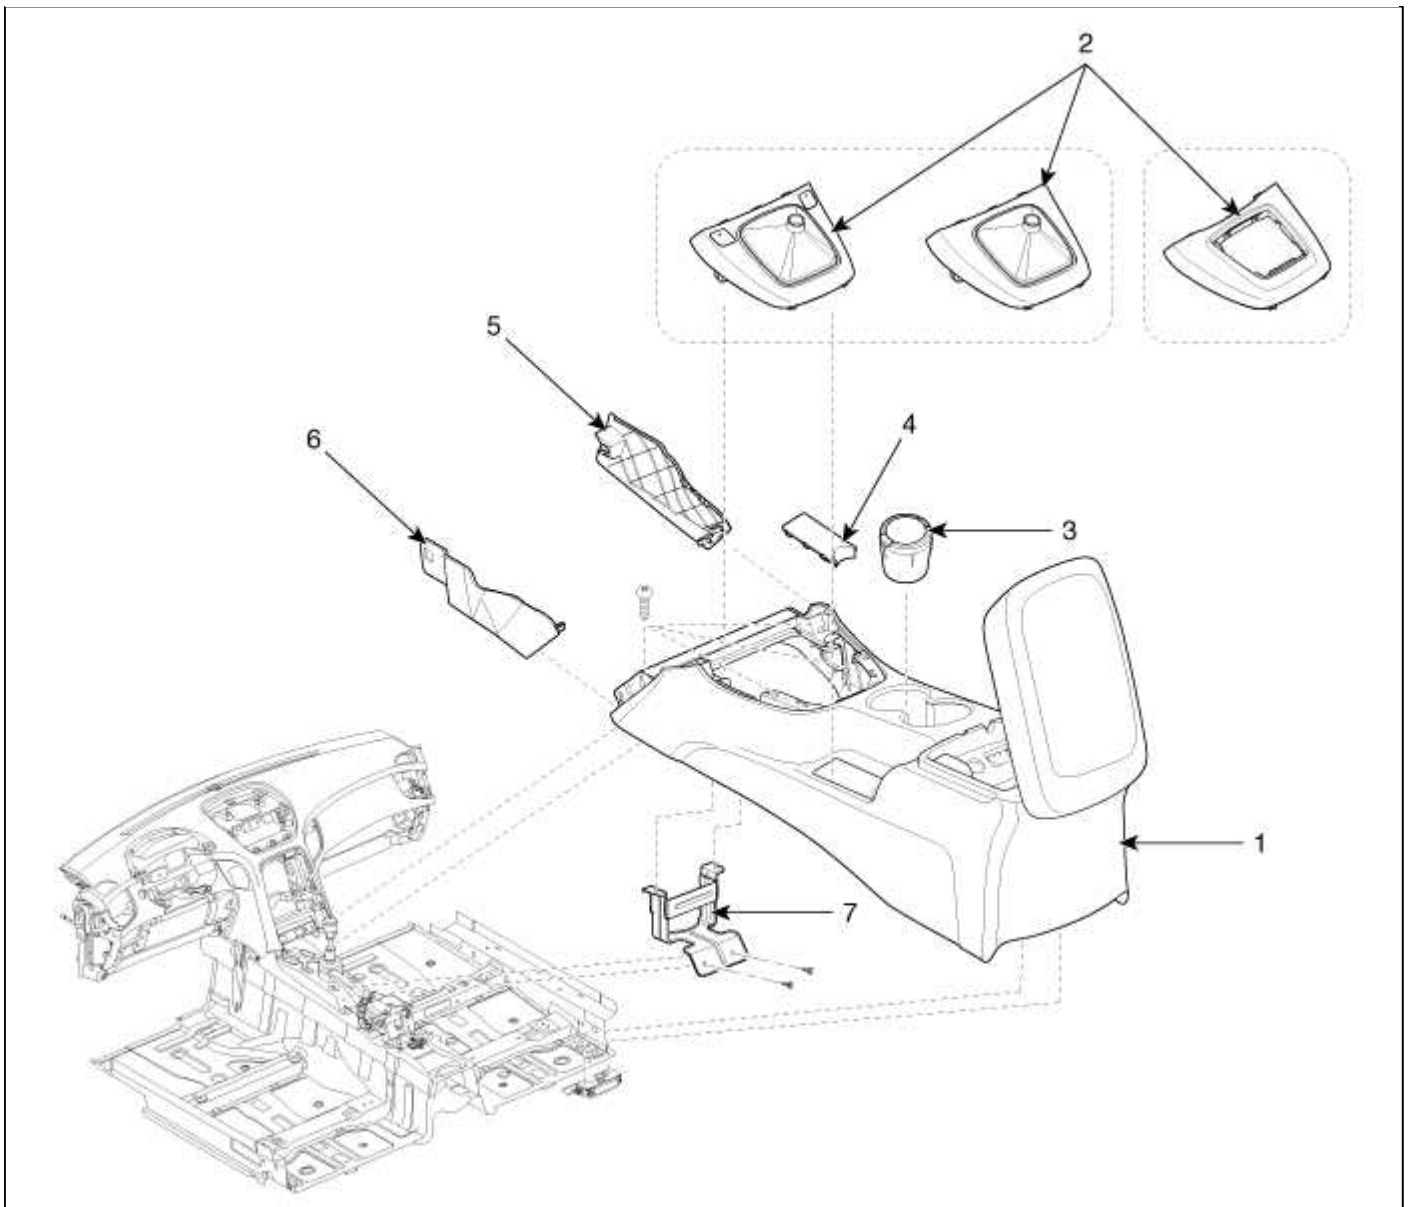

- | | |
|------------------------------|--------------------------------------|
| 1. Floor console assembly | 5. Console extension side cover [RH] |
| 2. Console upper cover [M/T] | 6. Console extension side cover [LH] |
| 3. Ash tray assembly | 7. Console rear mounting bracket |
| 4. Parking brake cover | |

[A/T]

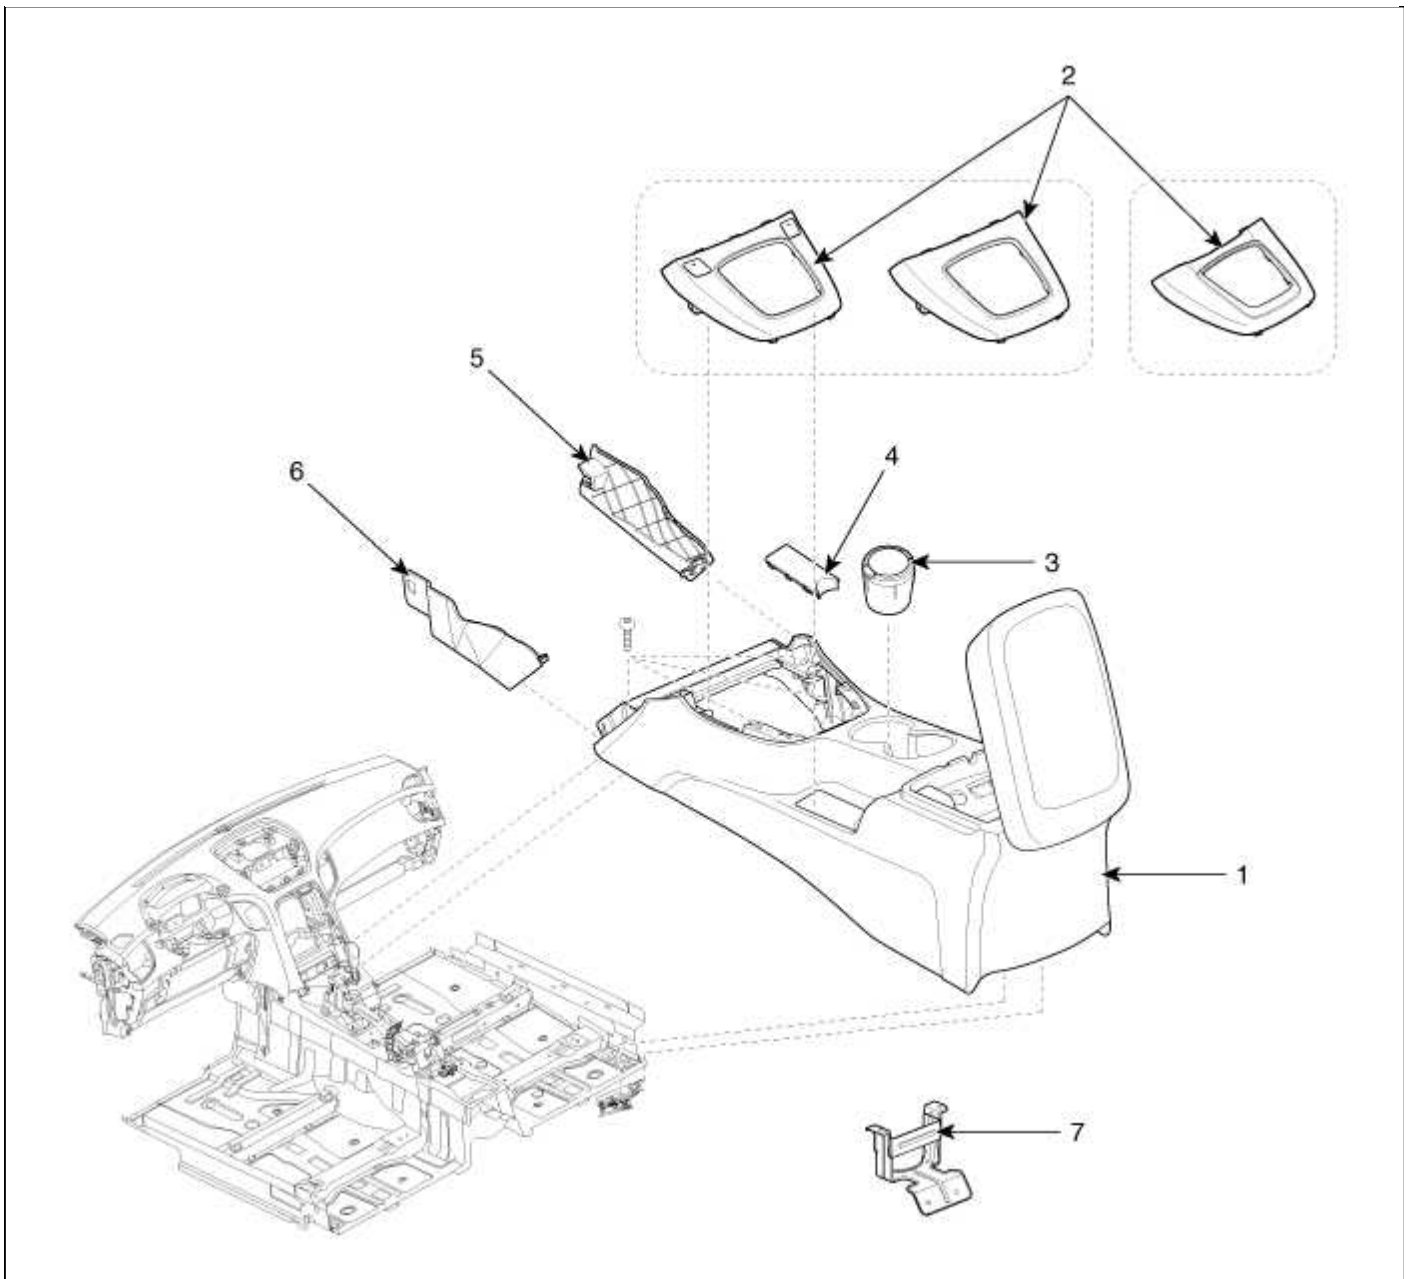

- | | |
|------------------------------|--------------------------------------|
| 1. Floor console assembly | 5. Console extension side cover [RH] |
| 2. Console upper cover [A/T] | 6. Console extension side cover [LH] |
| 3. Ash tray assembly | 7. Console rear mounting bracket |
| 4. Parking brake cover | |

Body (Interior and Exterior) > Interior > Console > Repair procedures


Replacement

Floor Console Replacement


NOTE

- When prying with a flat-tip screwdriver, wrap it with protective tape, and apply protective tape around the related parts, to prevent damage.
- Put on gloves to protect your hands.


1. Using a screwdriver or remover, remove the console upper cover (A).

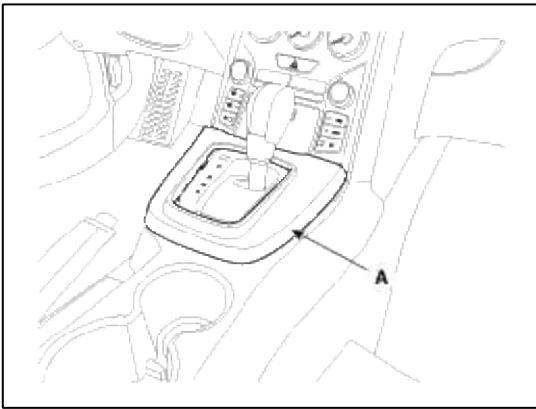

2. Using a screwdriver or remover, remove the parking brake cover (A).

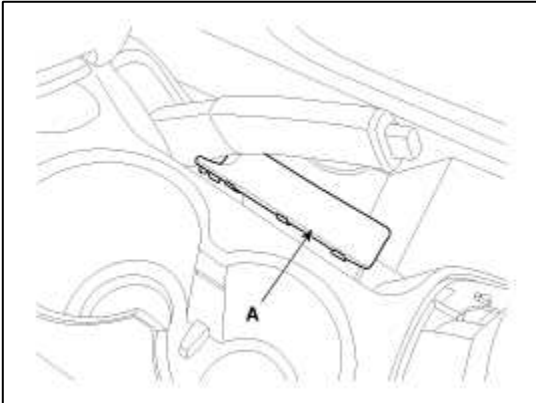


3. Remove the console tray mat (A).

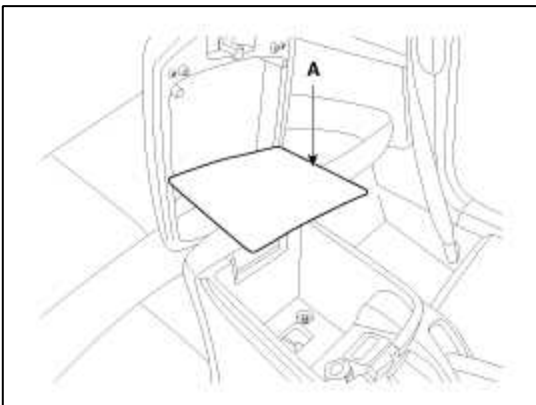


4. Remove the console extension side cover (A).


[LH]

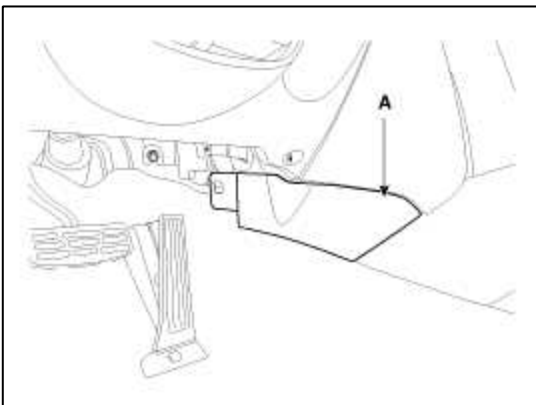


[RH]

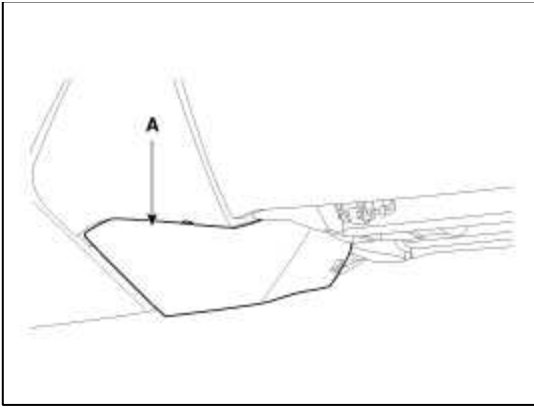

5. After loosening the mounting screws and bolts, then remove the floor console assembly (A).

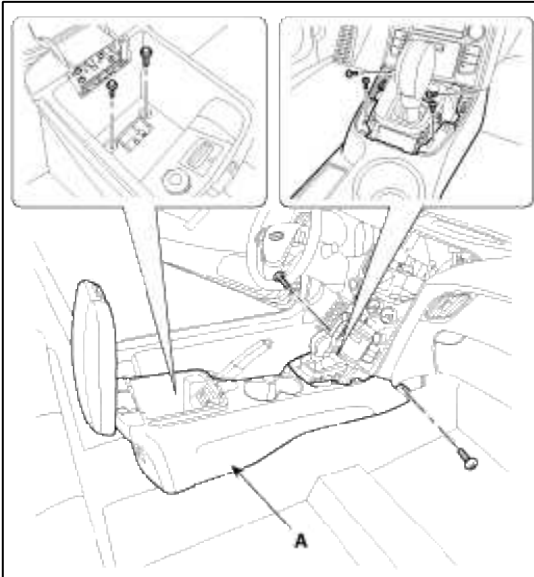

6. Disconnect the floor console main connector (A).

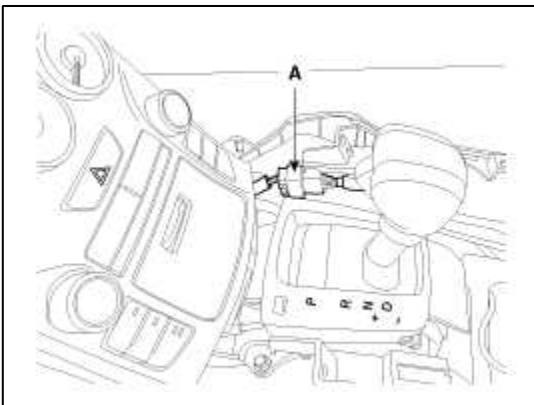


7. Installation is the reverse of removal.

NOTE

- Make sure all connectors are connected in properly.
- Replace any damaged clips.


Body (Interior and Exterior) > Interior > Crash Pad > Components and Components Location

Components (1)

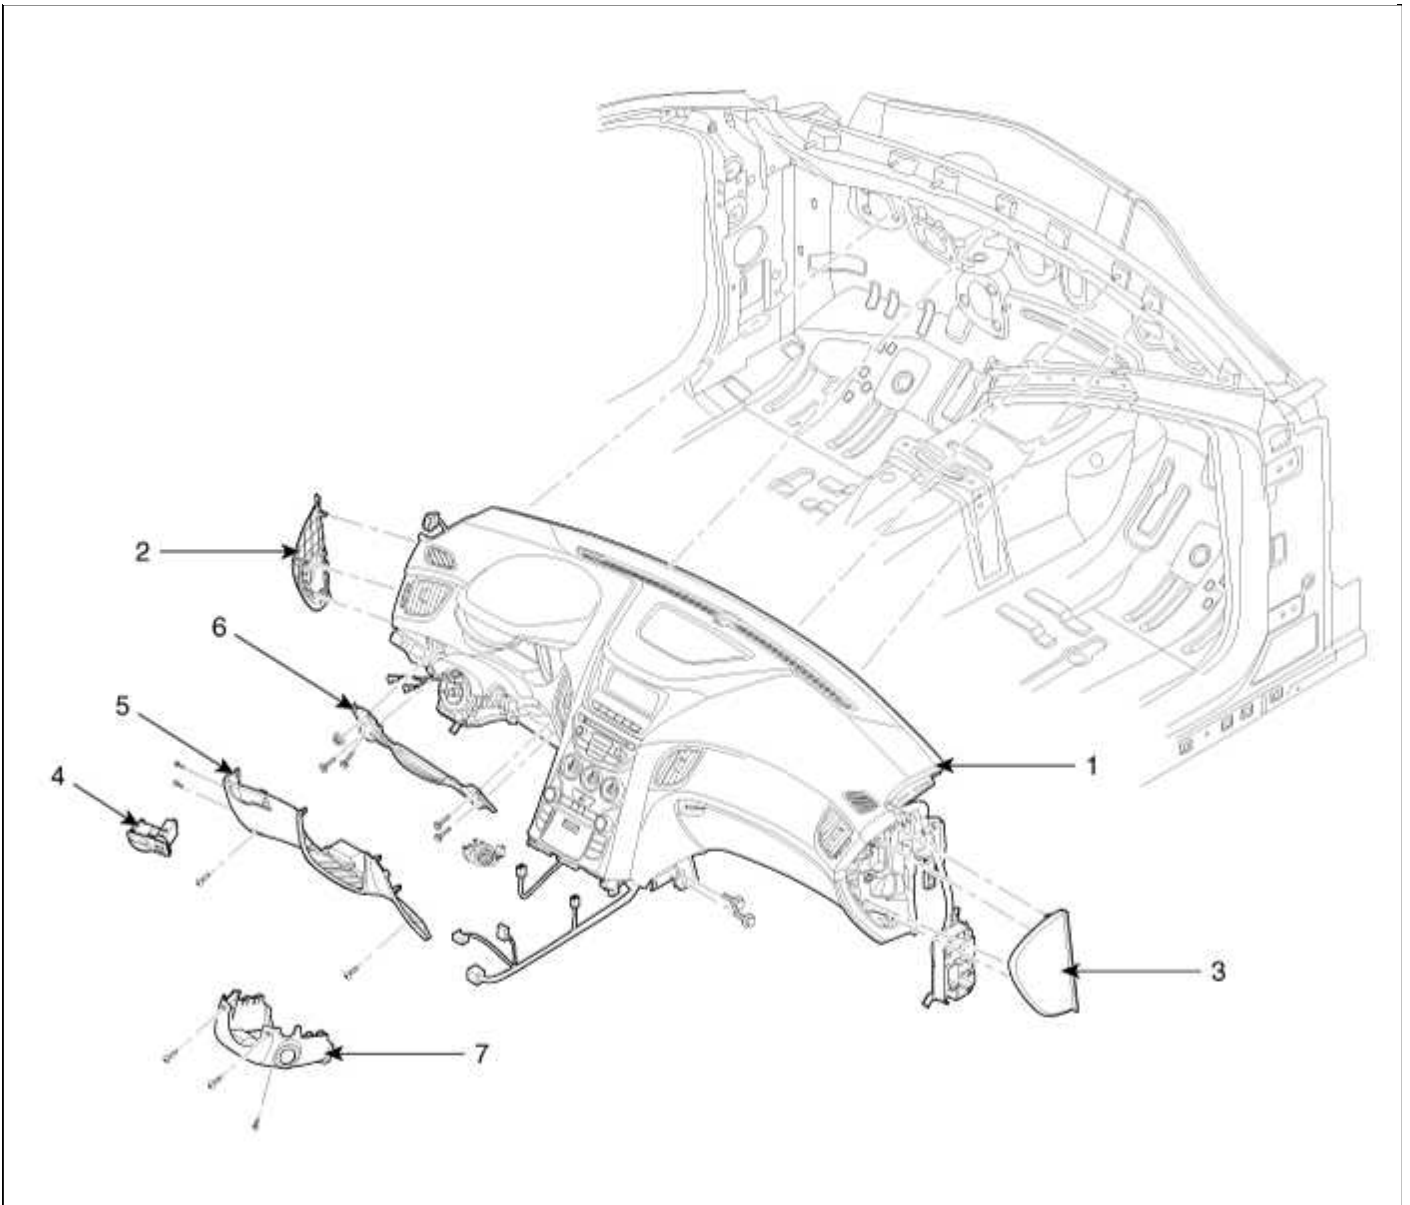

- | | |
|------------------------------|---------------------------------|
| 1. Main crash pad assembly | 5. Crash pad lower panel |
| 2. Crash pad side cover [LH] | 6. Reinforce panel |
| 3. Crash pad side cover [RH] | 7. Steering column lower shroud |
| 4. Crash pad lower switch | |

Components (2)

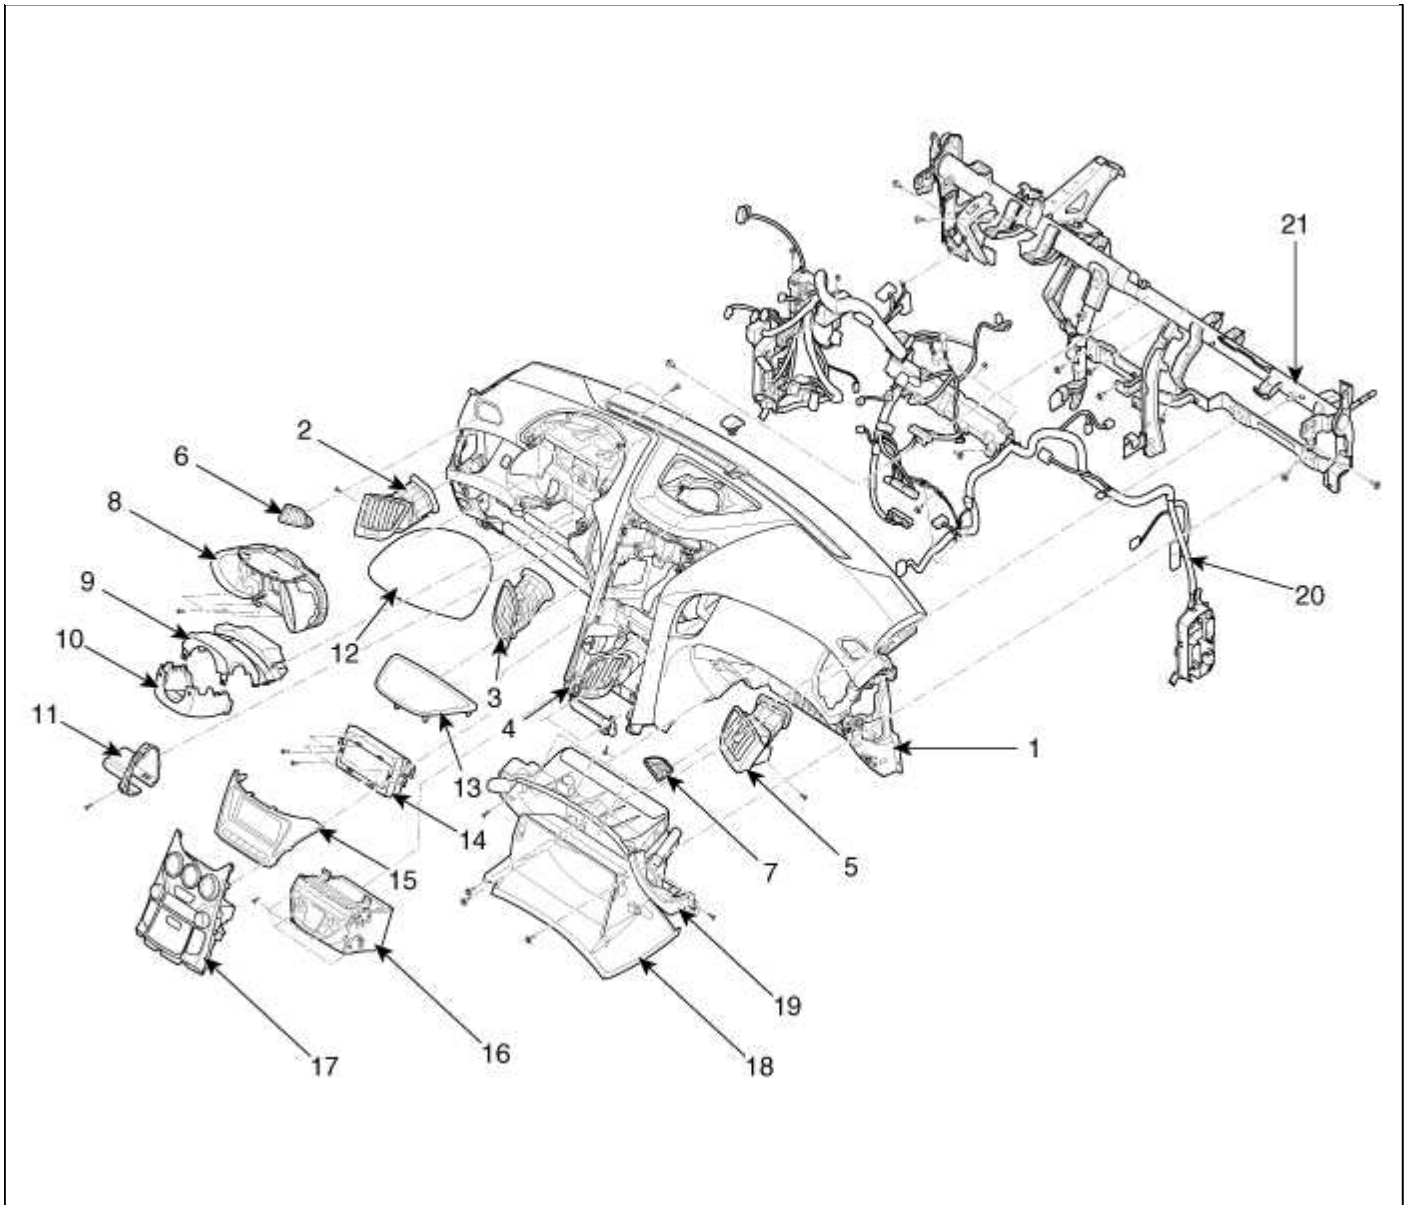

1. Main crash pad assembly	8. Cluster assembly	15. Center fascia upper panel
2. Side airvent duct [LH]	9. Steering column upper shroud	16. Audio unit assembly
3. Center airvent duct [LH]	10. Steering column lower shroud	17. Cluster fascia lower panel
4. Center airvent duct [RH]	11. Shower duct	18. Glove box
5. Side airvent duct [RH]	12. Cluster fascia upper panel	19. Glove box housing
6. Side def nozzle [LH]	13. Center speaker grille	20. Crash pad main wiring harness
7. Side def nozzle [RH]	14. Monitor assembly	21. Cowl cross bar assembly

Body (Interior and Exterior) > Interior > Crash Pad > Repair procedures


Replacement

Cluster Replacement


NOTE

- When prying with a flat-tip screwdriver, wrap it with protective tape, and apply protective tape around the related parts, to prevent damage.
- Take care not to scratch the body surface
- Put on gloves to protect your hands.


1. Using a screwdriver or remover, remove the cluster fascia lower panel (A).

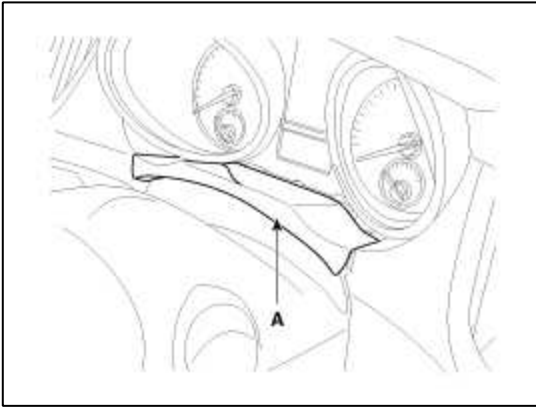

2. After loosening the mounting screws, then remove the cluster assembly (A).

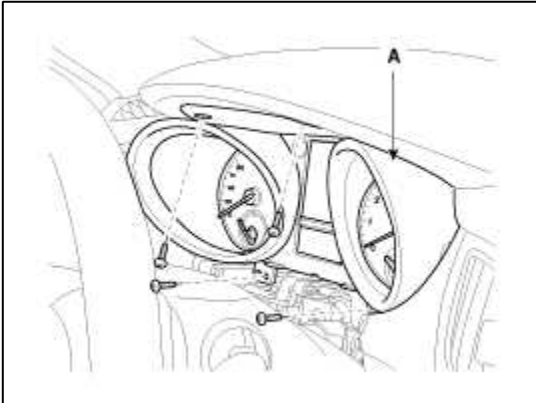

3. Disconnect the connector (A).

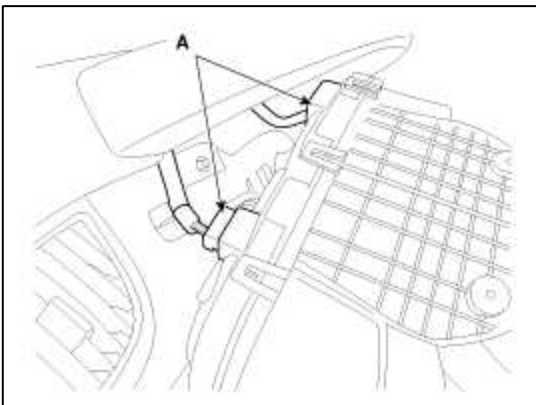

4. Installation is the reverse the removal.

NOTE


- Make sure the connector is connected properly.
- Replace any damaged clips.

Center Fascia Panel Replacement


NOTE

- When prying with a flat-tip screwdriver, wrap it with protective tape, and apply protective tape around the related parts, to prevent damage.
- Take care not to scratch the body surface
- Put on gloves to protect your hands.


1. Using a screwdriver or remover, remove the center fascia upper panel (A).

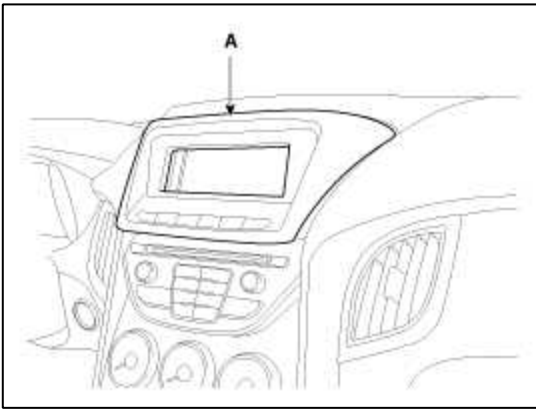


2. Disconnect the connector (A).

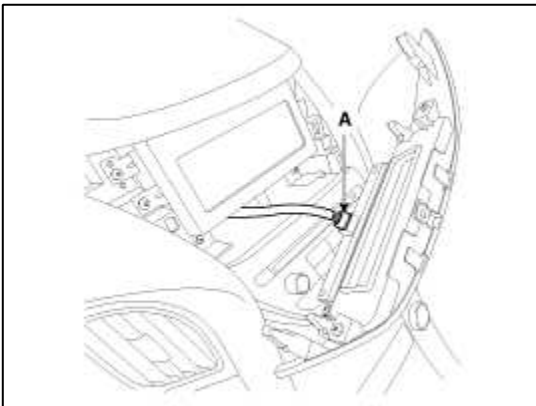

3. Using a screwdriver or remover, remove the console upper cover (A).

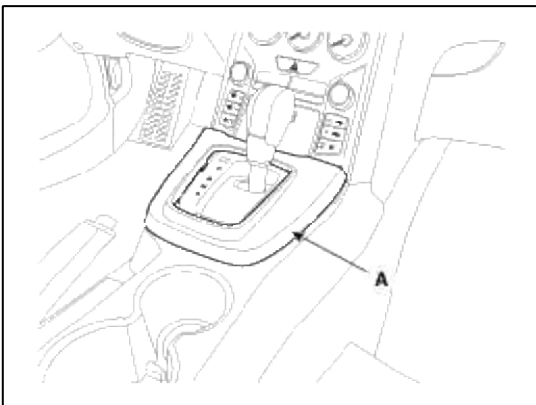


4. Using a screwdriver or remover, remove the center fascia lower panel (A).

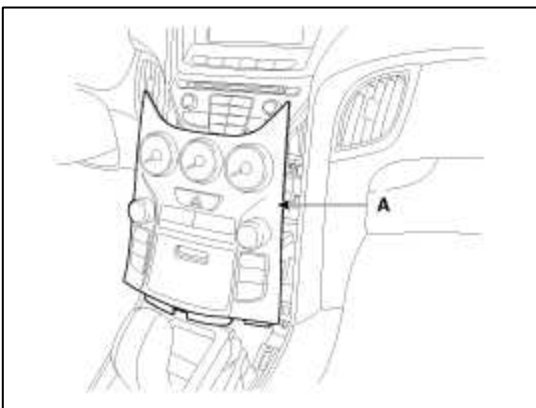


5. Disconnect the connectors (A).

[Upper]

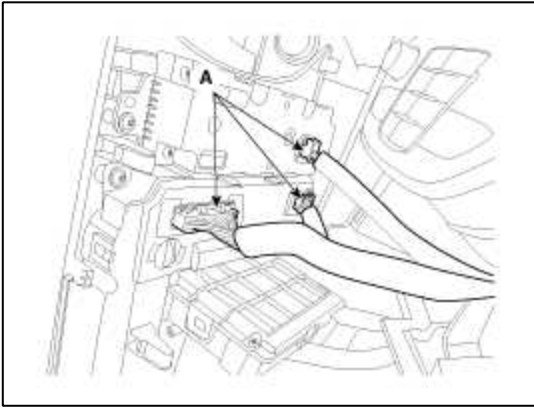

[Lower]

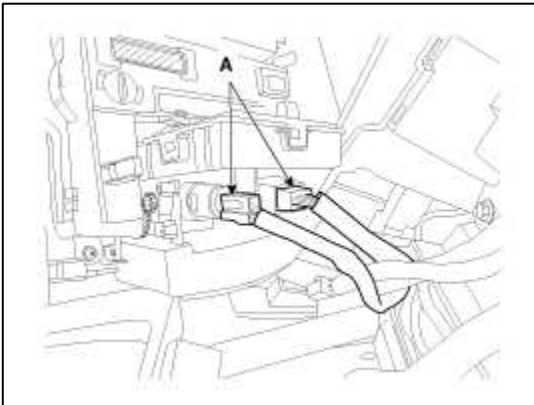

6. Installation is the reverse of removal.

NOTE


- Make sure the connector is connected properly.
- Replace any damaged clips.

Crash Pad Lower Panel Replacement


NOTE

- When prying with a flat-tip screwdriver, wrap it with protective tape, and apply protective tape around the related parts, to prevent damage.
- Take care not to scratch the body surface
- Put on gloves to protect your hands.


1. Using a screwdriver or remover, remove the crash pad side cover (A).

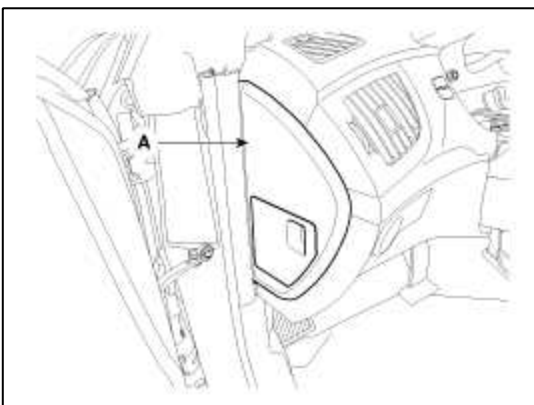


2. After loosening the mounting screws, then remove the crash pad lower panel (A).

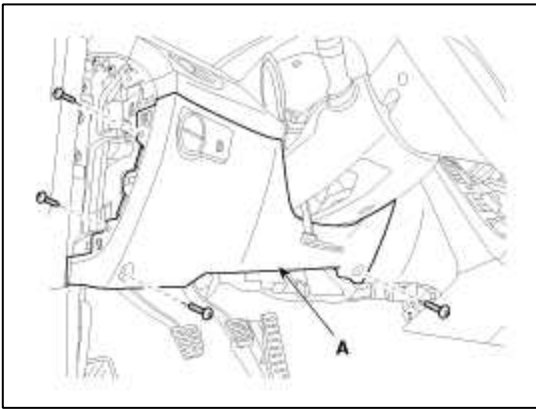


3. Disconnect the crash pad lower switch connectors (A).

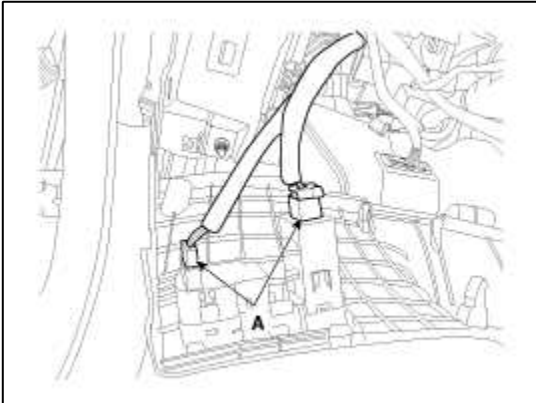

4. Disconnect the start/stop button connector (A).

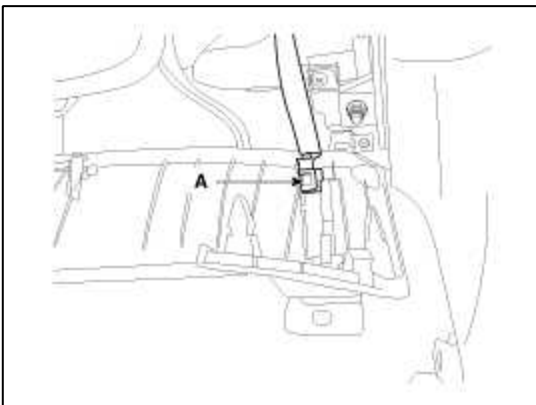

5. Disconnect the diagnosis connector (A).

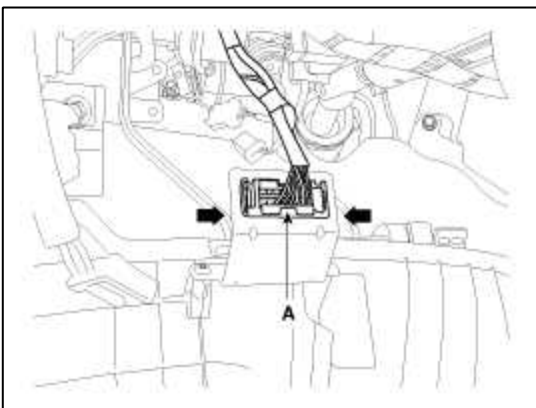

6. Installation is the reverse of removal.


NOTE

- Make sure the connector is connected properly.
- Replace any damaged clips.


Audio Unit Assembly Replacement**NOTE**

- When prying with a flat-tip screwdriver, wrap it with protective tape, and apply protective tape around the related parts, to prevent damage.
- Take care not to scratch the body surface
- Put on gloves to protect your hands.


1. Using a screwdriver or remover, remove the center fascia upper panel (A).

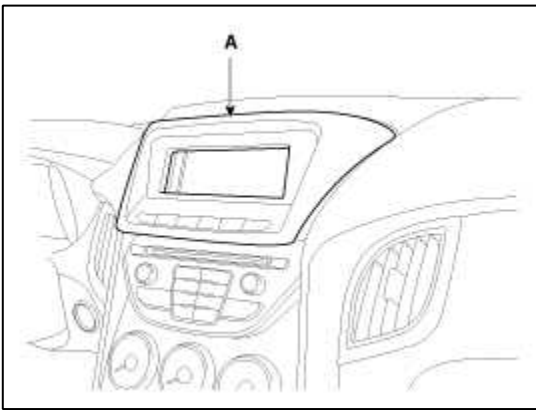


2. Disconnect the connector (A).

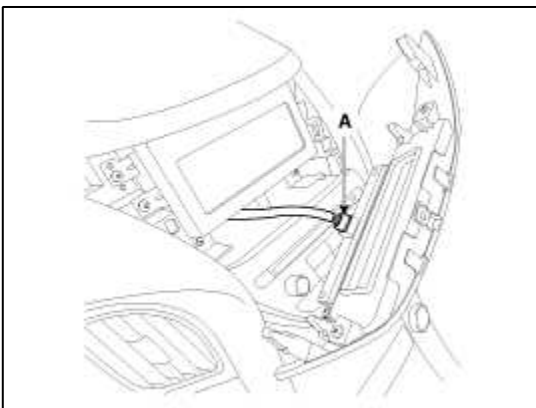

3. Using a screwdriver or remover, remove the console upper cover (A).

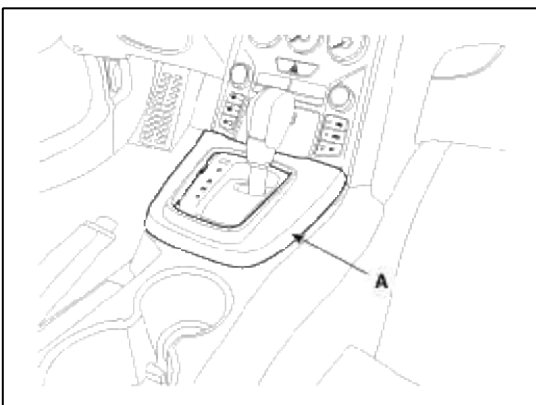


4. Using a screwdriver or remover, remove the center fascia lower panel (A).

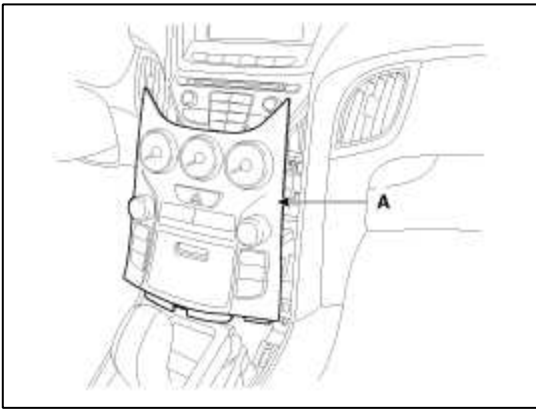


5. Disconnect the connectors (A).


[Upper]

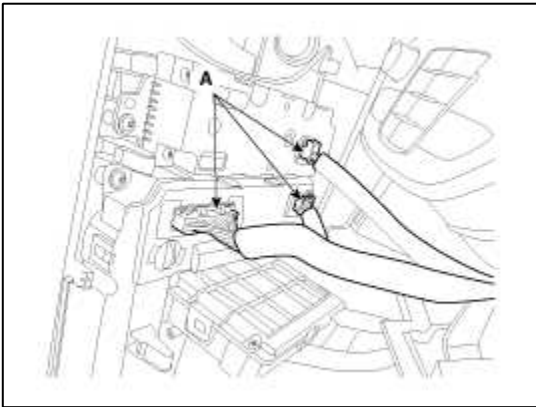


[Lower]

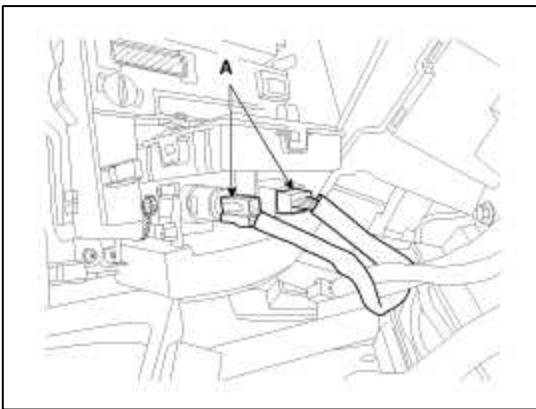

6. After loosening the mounting screws, then remove the audio unit assembly (A).

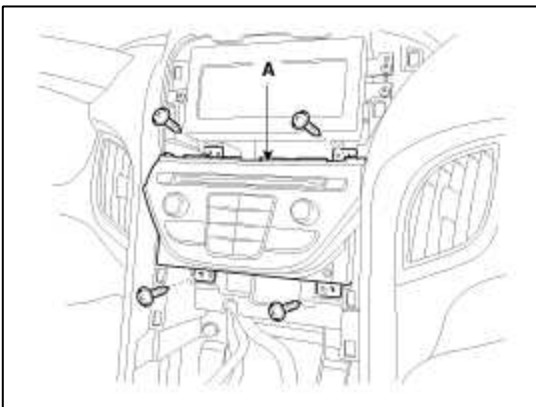

7. Disconnect the audio unit connectors (A).

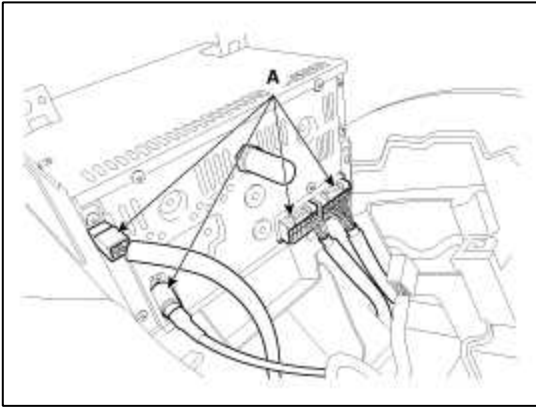

8. Installation is the reverse of removal.

NOTE


- Make sure the connector is connected properly.
- Replace any damaged clips.

Monitor Assembly Replacement


NOTE

- When prying with a flat-tip screwdriver, wrap it with protective tape, and apply protective tape around the related parts, to prevent damage.
- Take care not to scratch the body surface
- Put on gloves to protect your hands.


1. Using a screwdriver or remover, remove the center fascia upper panel (A).

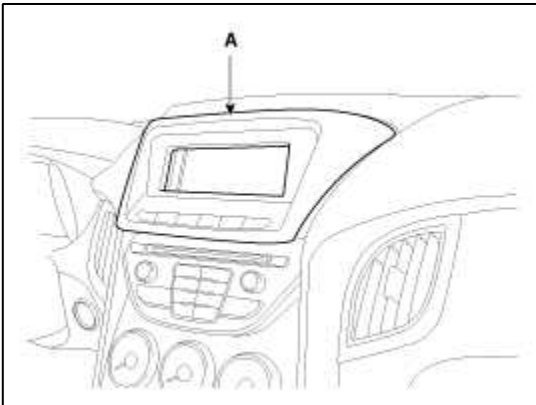


2. Disconnect the connector (A).

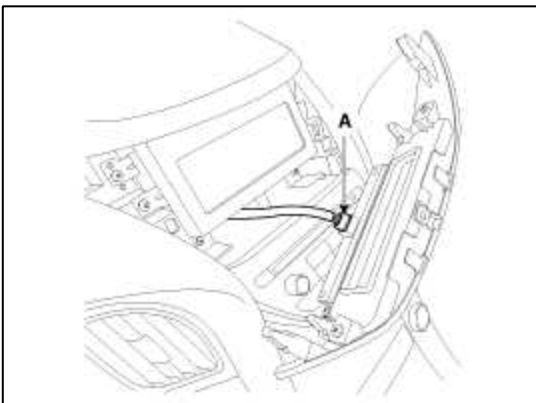

3. After loosening the mounting screws, then remove the monitor assembly (A).

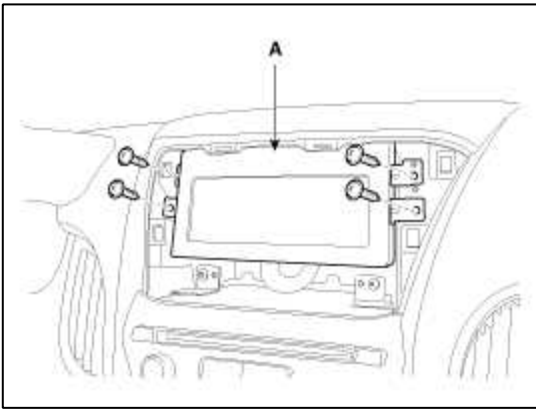

4. Disconnect the monitor connector (A).

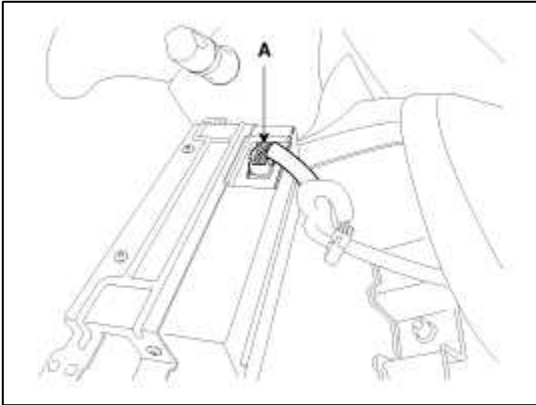

5. Installation is the reverse of removal.

NOTE


- Make sure the connector is connected properly.
- Replace any damaged clips.

Glove Box Housing Replacement


NOTE

- When prying with a flat-tip screwdriver, wrap it with protective tape, and apply protective tape around the related parts, to prevent damage.
- Take care not to scratch the body surface
- Put on gloves to protect your hands.


1. Using a screwdriver or remover, remove the crash pad side cover (A).

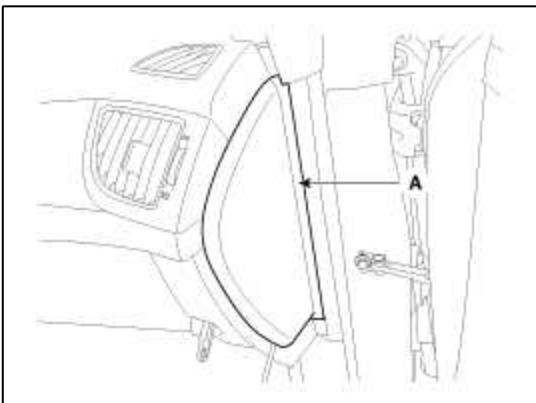


2. Disconnect the stopper (B) from the glove box (A).

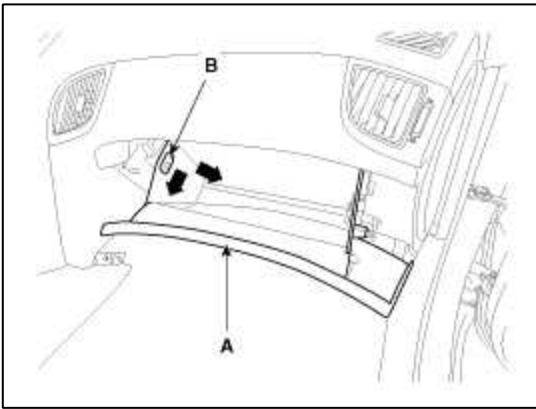


3. Disconnect the air damper (A) from the glove box (B).

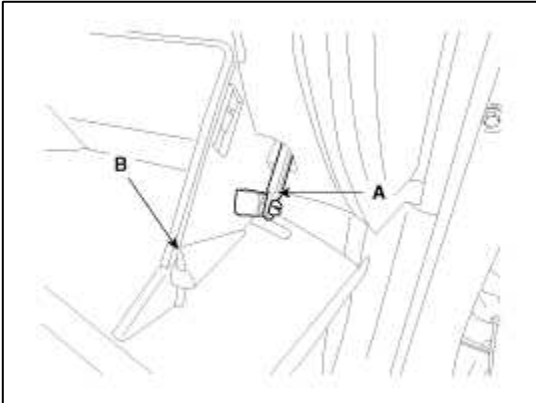

4. Disconnect the pin (A) and then remove the glove box (B).

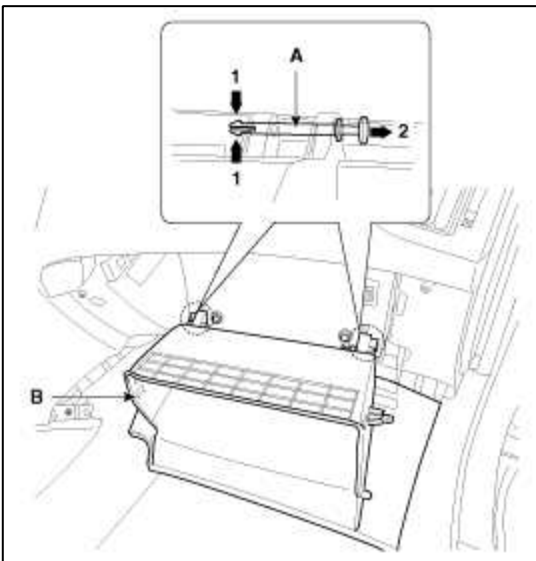

5. After loosening the mounting screws and bolts, then remove the glove box housing (A).

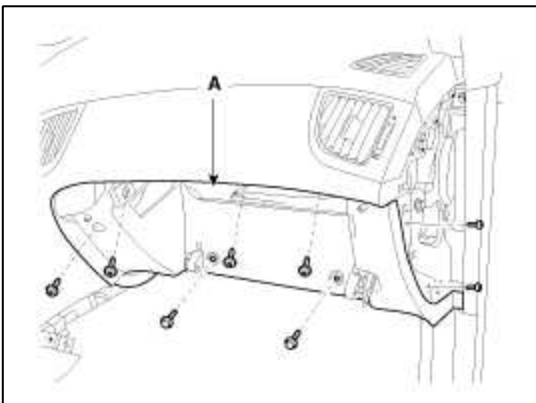

6. Installation is the reverse of removal.

NOTE


- Replace any damaged clips.

Main Crash Pad Replacement


NOTE

- When prying with a flat-tip screwdriver, wrap it with protective tape, and apply protective tape around the related parts, to prevent damage.
- Take care not to scratch the body surface
- Put on gloves to protect your hands.


1. Remove the front seat assembly.
(Refer to the BD group – “Front Seat”)
2. Remove the front pillar trim.
(Refer to the BD group – “Interior Trim”)
3. Remove the floor console assembly
(Refer to the BD group – “Console”)
4. Remove the front door scuff trim.
(Refer to the BD group – “Interior Trim”)
5. Remove the cowl side trim.
(Refer to the BD group - Interior Trim”)
6. Remove the crash pad side cover [LH, RH].
7. Remove the cluster fascia lower panel.
8. Remove the cluster assembly.
9. Remove the crash pad lower panel.
10. Remove the center fascia upper panel.
11. Remove the center fascia lower panel.
12. Remove the monitor assembly.
13. Remove the audio unit assembly.
14. Remove the glove box.
15. Remove the glove box housing.
16. Remove the steering column shroud.
17. Disconnect the steering column connectors.
(Refer to the ST group - "Steering Column and Shaft")
18. Down the steering column after loosening the mounting bolts.
(Refer to the ST group - "Steering Column and Shaft")
19. Disconnect the passenger's airbag connector (A).
20. Loosen the mounting bolts.

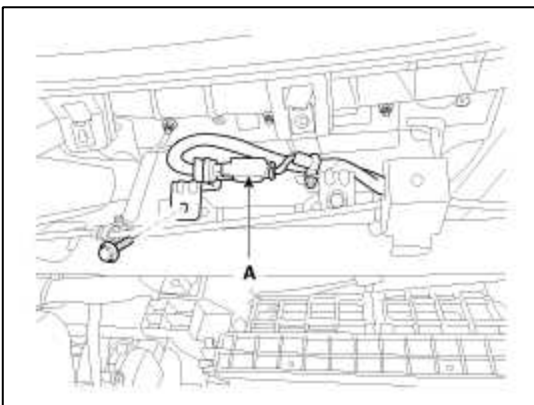

21. Disconnect the center speaker connector (A).

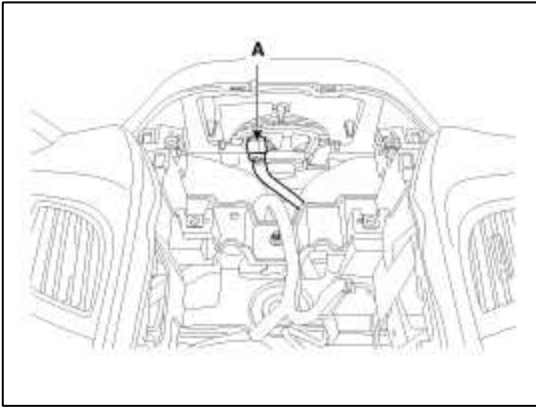


22. Disconnect the trip switch connector (A).

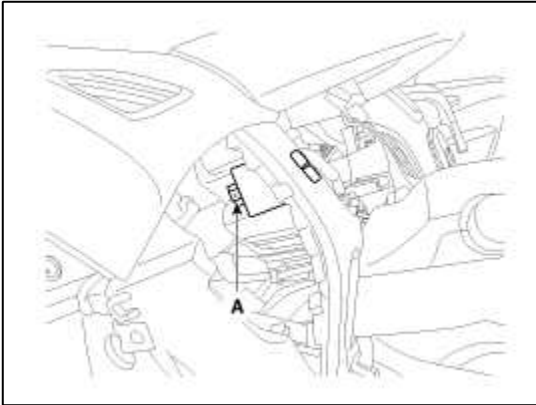


23. Using a screwdriver or remover, remove the photo sensor (A).

24. Disconnect the photo sensor connector (B).

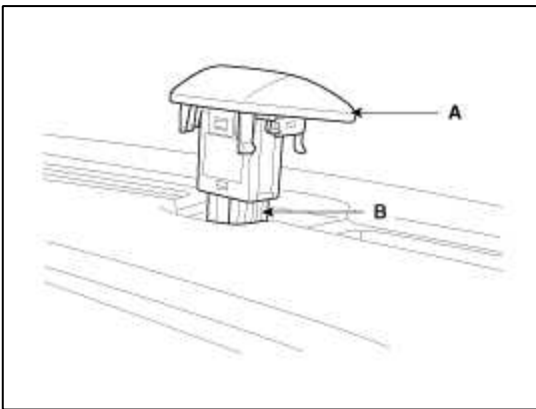

25. After loosening the mounting bolts and nuts, then remove the main crash pad assembly (B).

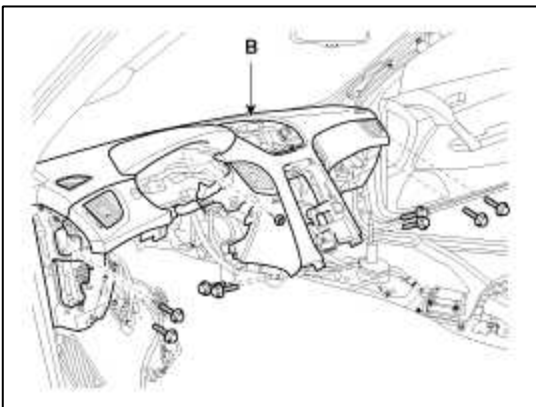

26. Installation is the reverse of removal.

NOTE

- Make sure the crash pad fits onto the guide pins correctly.
- Before tightening the bolts, make sure the crash pad wire harnesses are not pinched.
- Make sure the connectors are plugged in properly, and the antenna lead is connected properly.
- Enter the anti-theft code for the radio, then enter the customer's radio station presets.


Cowl Cross Bar Replacement

NOTE


- When prying with a flat-tip screwdriver, wrap it with protective tape, and apply protective tape around the related parts, to prevent damage.
- Take care not to scratch the body surface
- Put on gloves to protect your hands.

1. Remove the front seat assembly.
(Refer to the BD group – “Front Seat”)
2. Remove the front pillar trim.
(Refer to the BD group – “Interior Trim”)
3. Remove the floor console assembly
(Refer to the BD group – “Console”)
4. Remove the front door scuff trim.
(Refer to the BD group – “Interior Trim”)
5. Remove the cowl side trim.
(Refer to the BD group - Interior Trim”)
6. Remove the cowl top cover.
(Refer to the BD group - Cowl Top Cover”)
7. Remove the main crash pad.
8. Disconnect the blower unit connectors.
(Refer to the HA group - "Air conditioning system, Heater, Blower")
9. Disconnect the multi box connectors (A).


[Driver's]

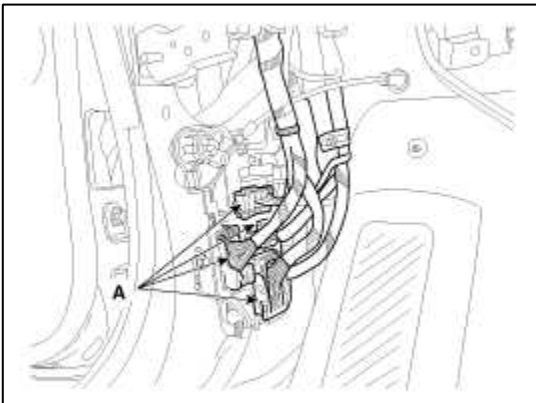

[Passenger's]

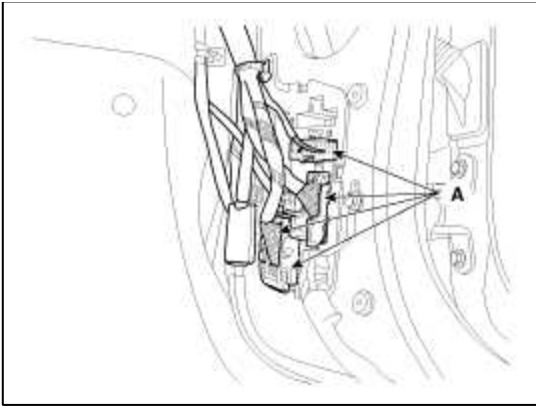


10. Disconnect the passenger compartment junction box connectors (A).

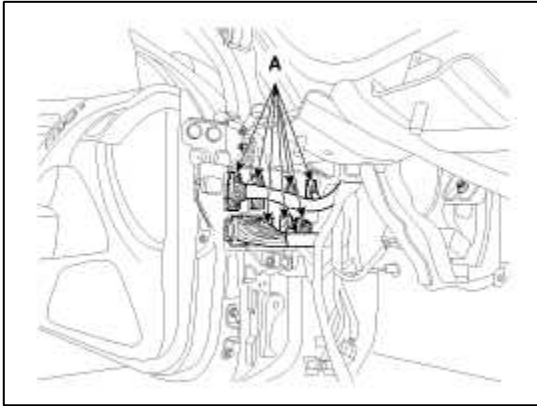


11. Disconnect the airbag control module (SRSCM) connectors (A).

12. Remove the airbag control module wiring mounting clips (B).

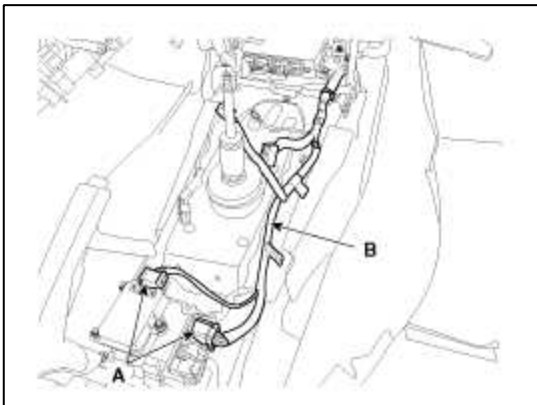

13. After loosening the mounting bolts and nuts, then remove the cowl cross bar assembly (A).

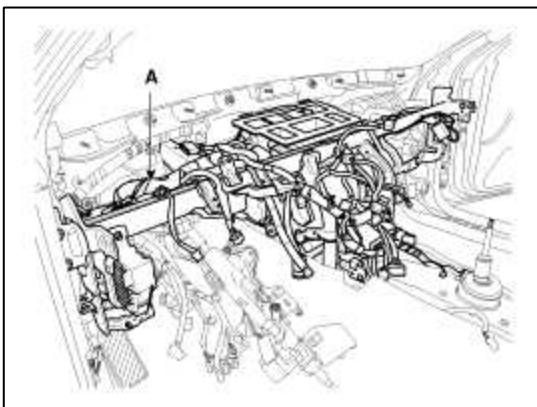


14. Installation is the reverse of removal.

NOTE


- Make sure the cowl cross bar fits onto the guide pins correctly.
- Before tightening the bolts, make sure the crash pad wire harnesses are not pinched.
- Make sure the connectors are plugged in properly, and the antenna lead is connected properly.

Body (Interior and Exterior) > Interior > Roof Trim > Components and Components Location

Components

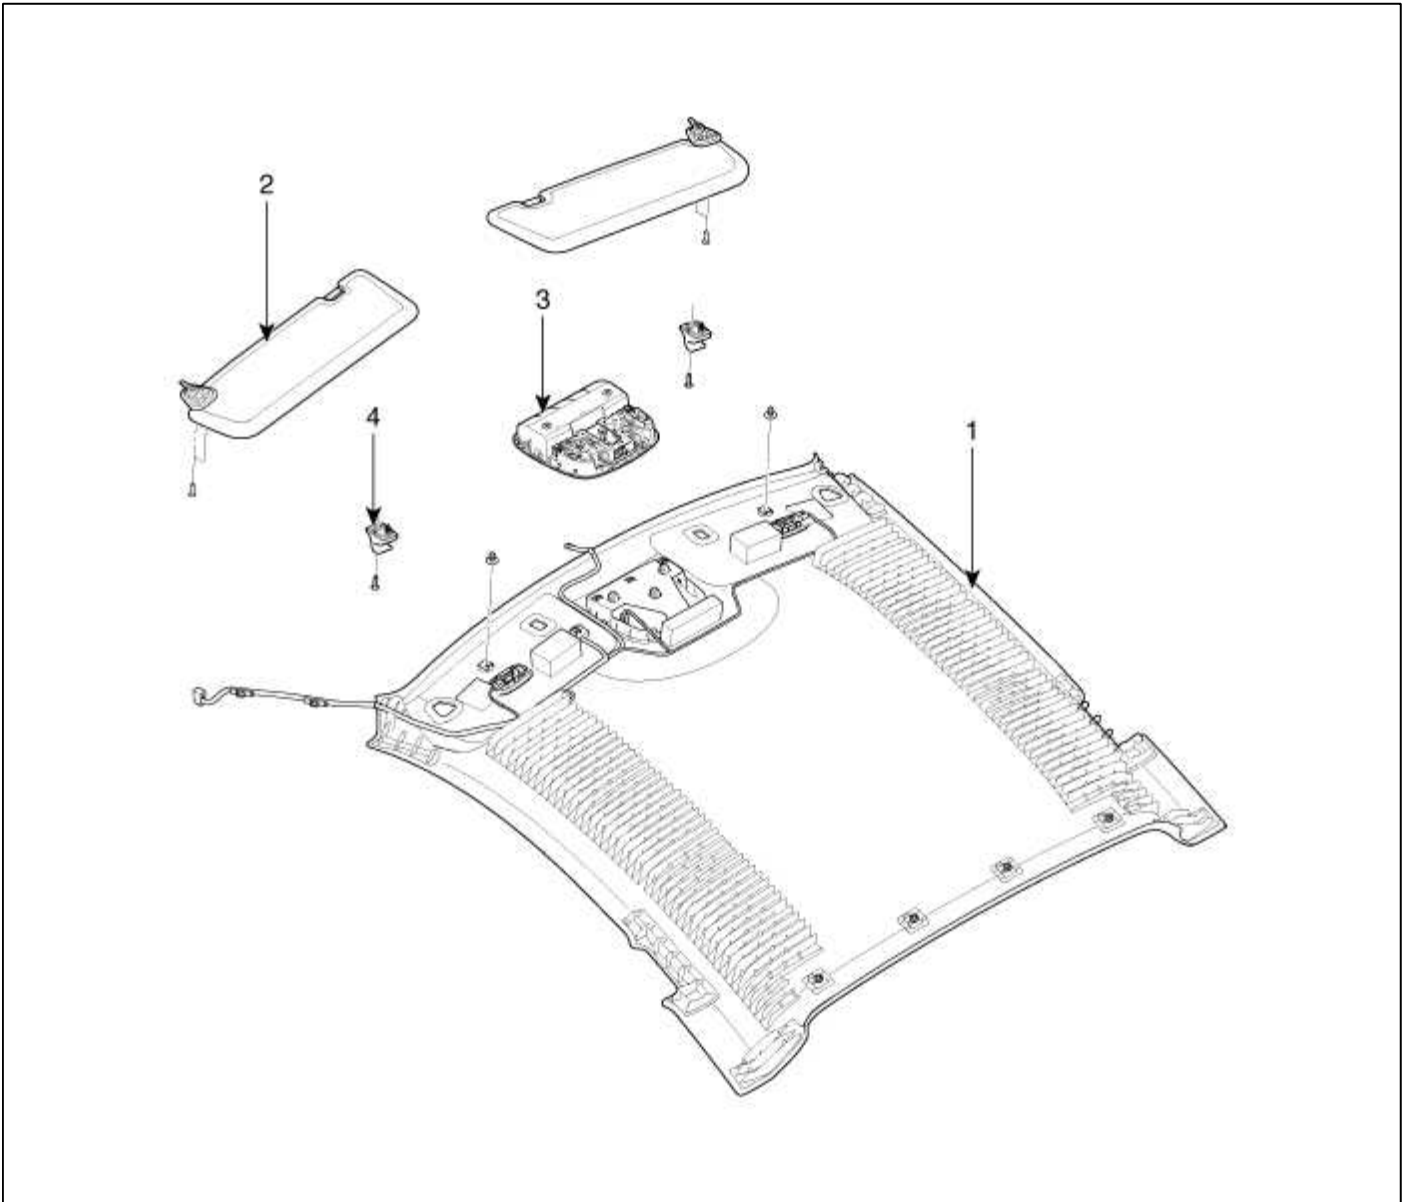

- | | |
|--------------|----------------------|
| 1. Roof trim | 3. Overhead console |
| 2. Sunvisor | 4. Sunvisor retainer |

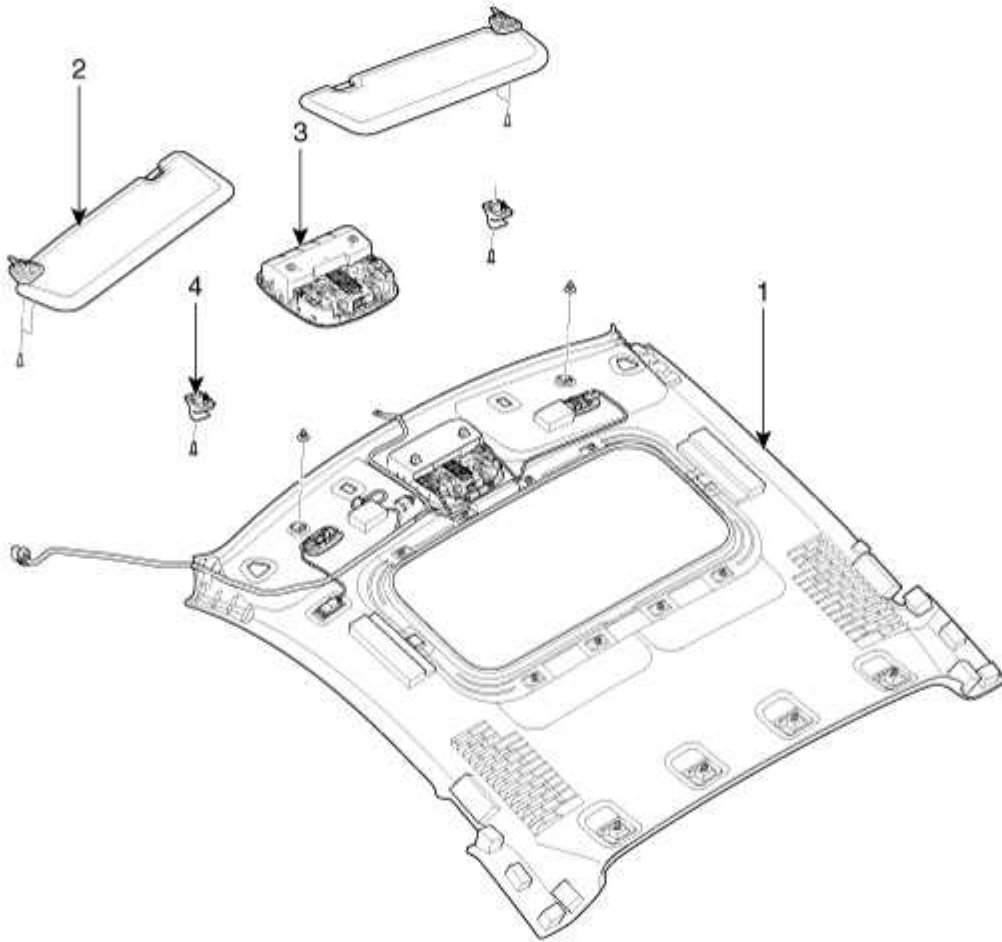

1. Roof trim	3. Overhead console
2. Sunvisor	4. Sunvisor retainer

Body (Interior and Exterior) > Interior > Roof Trim > Repair procedures


Replacement

Sunvisor Replacement

NOTE

- Use a plastic panel removal tool to remove interior trim pieces to protect from marring the surface.
- Put on gloves to protect your hands.

1. Loosen the mounting screws, then remove the sunvisor (A) and retainer (B).

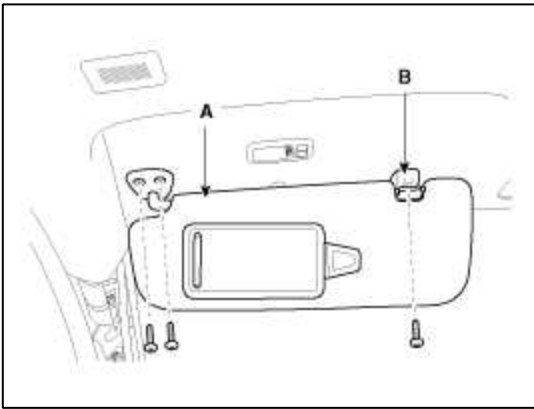


2. Installation is the reverse of removal.

Assist Handle Replacement

NOTE

- Use a plastic panel removal tool to remove interior trim pieces to protect from marring the surface.
- Put on gloves to protect your hands.

1. Remove the covers (A) and screws, then remove the assist handle (B).

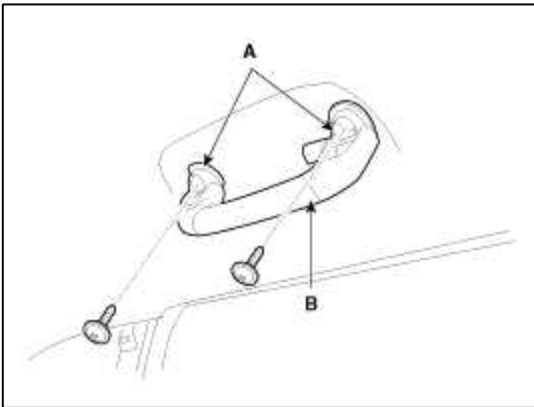


2. Installation is the reverse of removal.

Garment Hook Assembly Replacement

NOTE

- Use a plastic panel removal tool to remove interior trim pieces to protect from marring the surface.
- Put on gloves to protect your hands.

1. Remove the cover (B).
2. After loosening the mounting bolt, then remove the garment hook assembly (A).

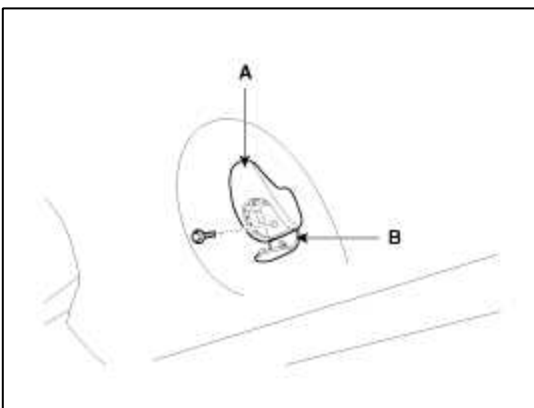


3. Installation is the reverse of removal.

Overhead Console Replacement


NOTE

- Use a plastic panel removal tool to remove interior trim pieces to protect from marring the surface.
- Put on gloves to protect your hands.

1. After loosening the mounting screws, then remove the overhead console assembly (A).

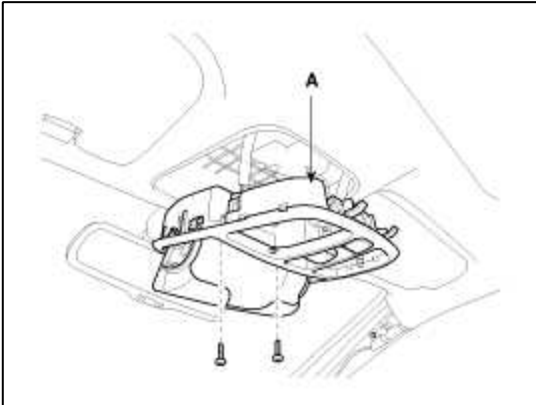

2. Disconnect the connectors (B).

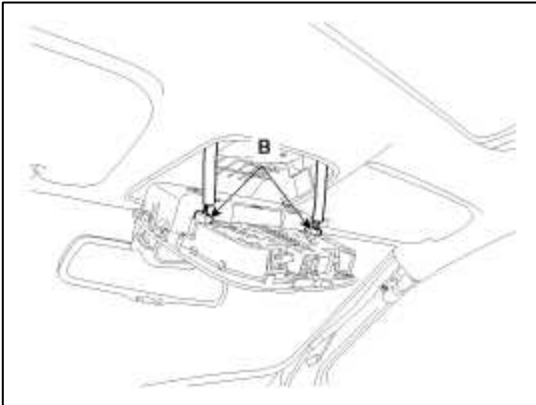

3. Installation is the reverse of removal.

NOTE

- Make sure the connector is connected properly.


Vanity Lamp Replacement

NOTE

- Use a plastic panel removal tool to remove interior trim pieces to protect from marring the surface.
- Put on gloves to protect your hands.

1. Using a screwdriver or remover, remove the vanity lamp (B).

2. Disconnect the vanity lamp connector (A).

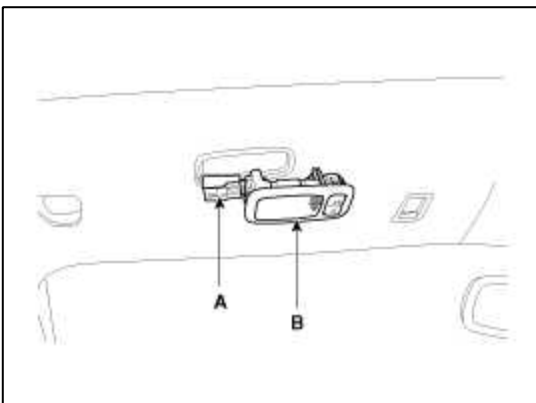

3. Installation is the reverse of removal.

NOTE


- Make sure the connector is connected properly.

Hands Free Mic Replacement

NOTE

- Use a plastic panel removal tool to remove interior trim pieces to protect from marring the surface.
- Put on gloves to protect your hands.

1. Using a screwdriver or remover, remove the hands free mic (A).
2. Disconnect the hands free mic connector (B).

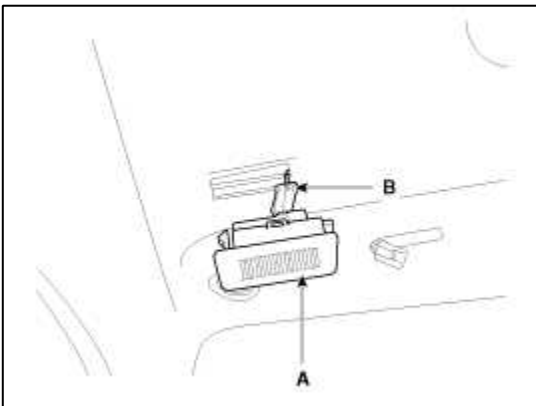

3. Installation is the reverse of removal.

NOTE

- Make sure the connector is connected properly.


Roof Trim Replacement

NOTE


- When prying with a flat-tip screwdriver, wrap it with protective tape, and apply protective tape around the related parts, to prevent damage.
- Put on gloves to protect your hands.

1. Remove the front seat assembly.
(Refer to the BD group – “Front Seat”)
2. Remove the rear seat assembly.
(Refer to the BD group – “Rear Seat”)
3. Remove the sunvisor and retainer.
4. Remove the overhead console.
5. Remove the assist handle.
6. Remove the garment hook assembly.
7. Remove the front pillar trim.
(Refer to the BD group - " Interior Trim")
8. Remove the front door scuff trim.
(Refer to the BD group - " Interior Trim")
9. Remove the rear door scuff trim.
(Refer to the BD group - " Interior Trim")


10. Remove the center pillar lower trim.
(Refer to the BD group - "Interior Trim")
11. Remove the center pillar upper trim.
(Refer to the BD group - "Interior Trim")
12. Remove the rear pillar trim.
(Refer to the BD group - "Interior Trim")
13. Remove the ECM mirror cover (B).
14. Disconnect the ECM mirror connector (A).

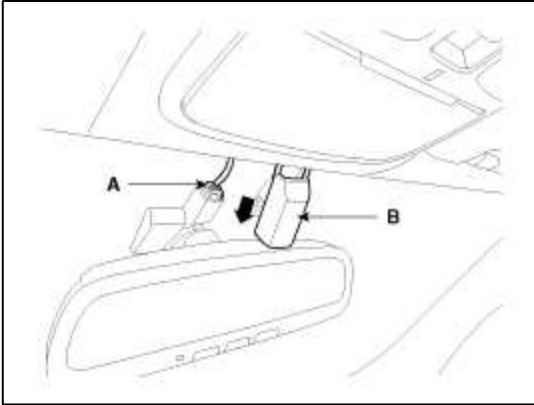


15. Remove the auto defog sensor cover (B).
16. Disconnect the auto defog sensor connector (A).

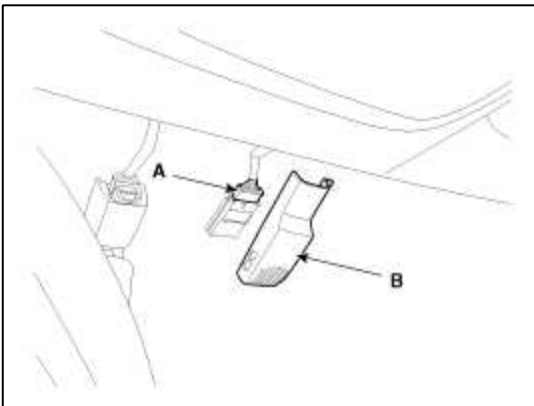


17. Disconnect the connector (A) and the mounting clips in the front pillar.
[Driver's]

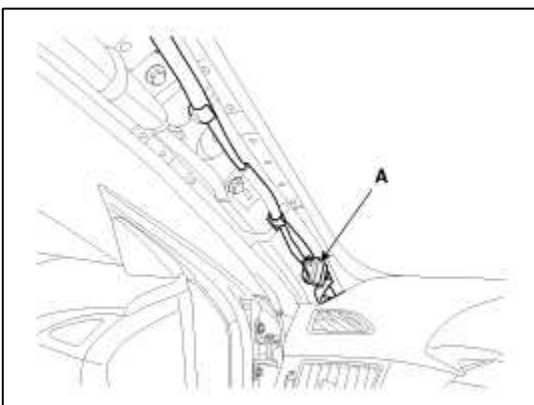

[Passenger's]

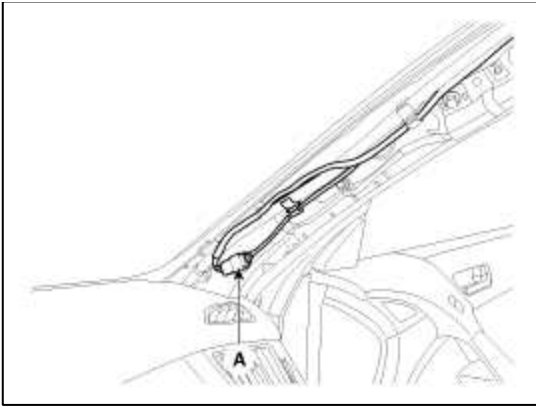

18. Remove the clips and roof trim (A).

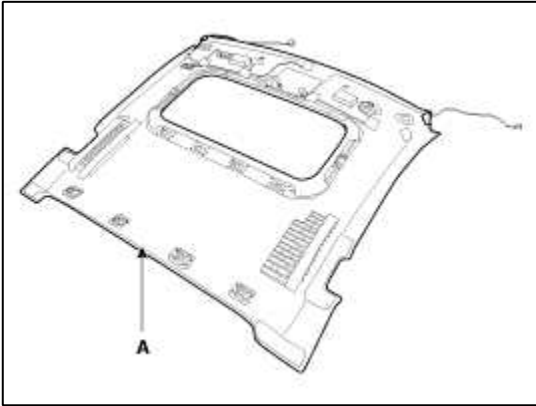


19. Installation is the reverse of removal.

NOTE

- Make sure the connectors are plugged in properly.
- Replace any damage clips.

Body (Interior and Exterior) > Interior > Interior Trim > Components and Components Location

Components

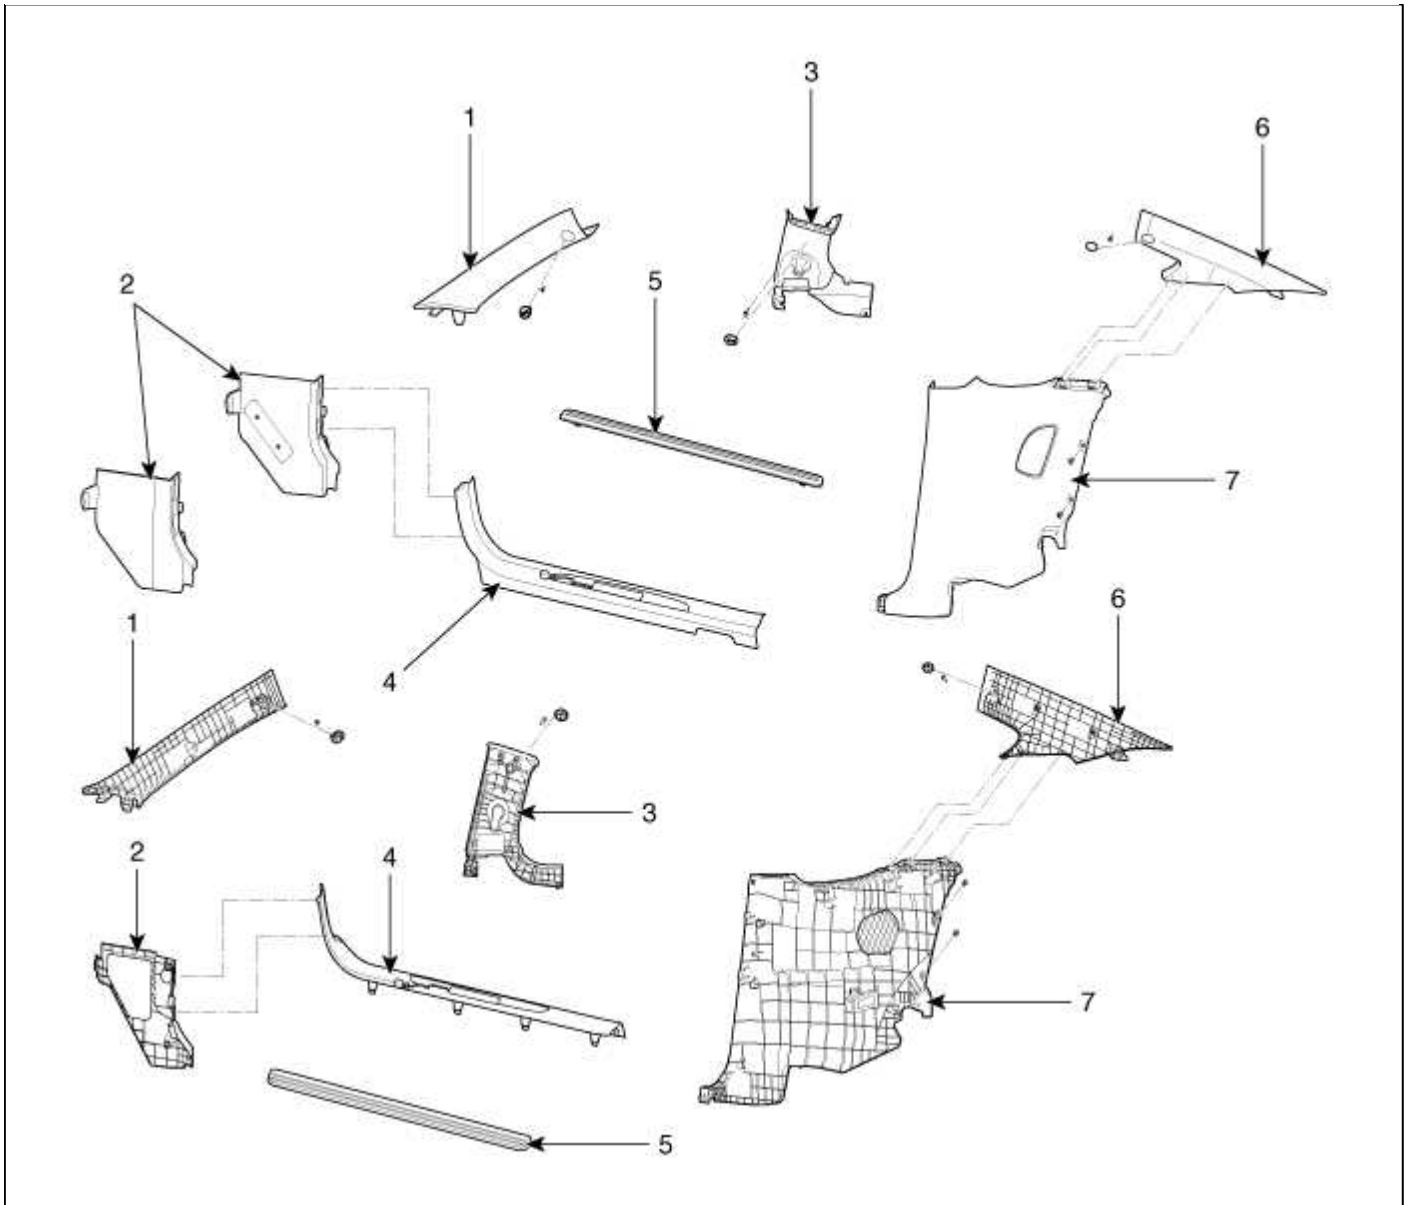

- | | |
|-----------------------------|-----------------------------|
| 1. Front pillar trim | 5. Front door step trim |
| 2. Cowl side trim | 6. Rear pillar trim |
| 3. Center pillar upper trim | 7. Center pillar lower trim |
| 4. Front door scuff trim | |

Body (Interior and Exterior) > Interior > Interior Trim > Repair procedures


Replacement

Door Scuff Trim Replacement


NOTE

- Put on gloves to protect your hands.
- When prying with a flat-tip screwdriver, wrap it with protective tape to prevent damage.
- Take care not to bend or scratch the trim and panels.

1. Using a screwdriver or remover, remove the front door scuff trim (A).

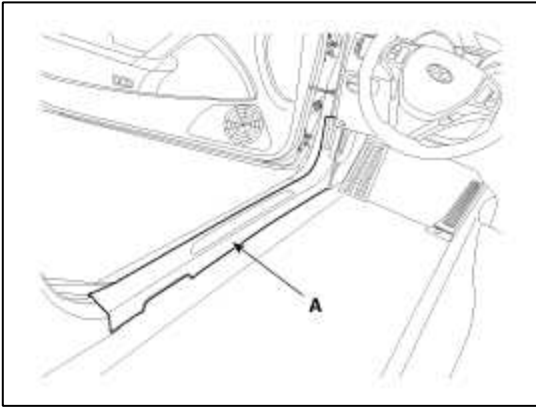

2. Disconnect the connector (A).

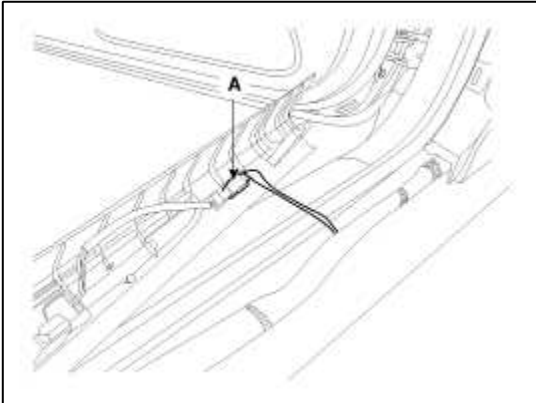

3. Installation is the reverse of removal.

NOTE


- Make sure the connector is connected properly.
- Replace any damaged clips.

Front Pillar Trim Replacement

NOTE

- Put on gloves to protect your hands.
- Use a plastic panel removal tool to remove interior trim pieces to protect from marring the surface.
- Take care not to bend or scratch the trim and panels.

1. After loosening the mounting bolt, then remove the front pillar trim (A).

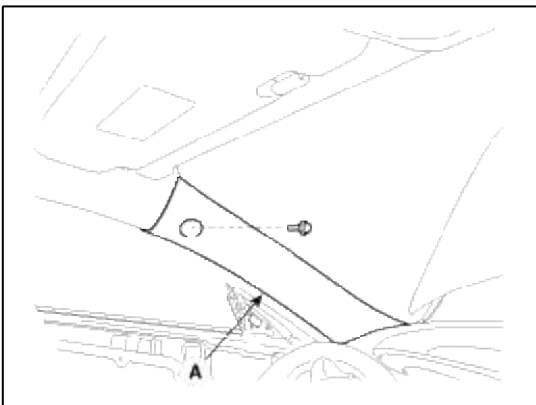

2. Installation is the reverse of removal.

NOTE

- Replace any damaged clips.

Center Pillar Trim Replacement


NOTE

- Put on gloves to protect your hands.
- Use a plastic panel removal tool to remove interior trim pieces to protect from marring the surface.
- Take care not to bend or scratch the trim and panels.


1. Remove the rear seat assembly.
(Refer to the BD group – “Rear Seat”)
2. Remove the front door scuff trim.
3. Remove the front seat belt lower anchor cover (B).
4. After loosening the mounting bolt, then remove the front seat belt lower anchor (A).

Tightening torque :


39.2 ~ 53.9 N.m (4.0 ~ 5.5 kgf.m, 28.8 ~ 39.8 lb-ft)

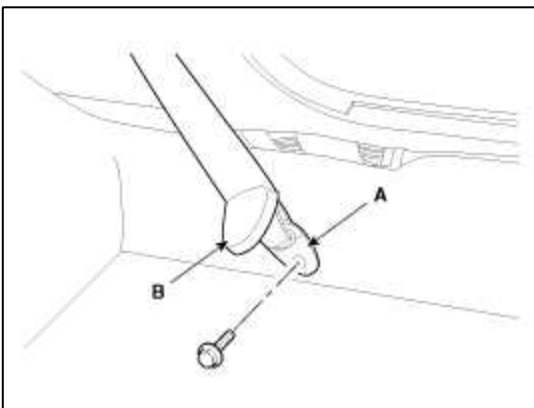

5. Remove the cap (B).
6. After loosening the mounting bolt, then remove the rear pillar trim (A).

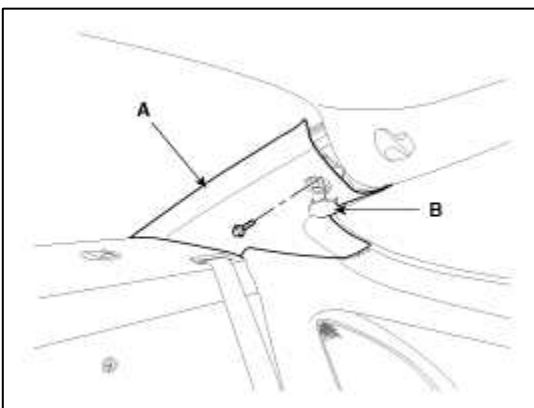


7. Remove the mounting clips and then center pillar lower trim (A).

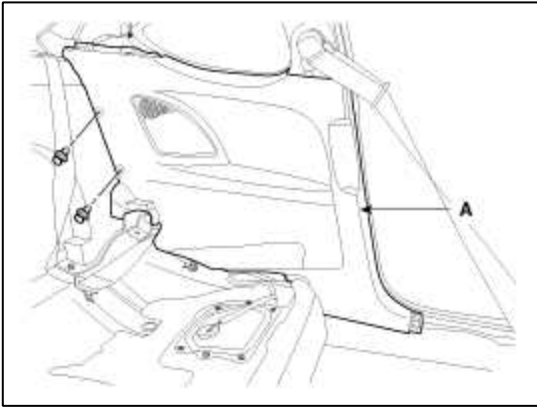


8. Remove the front seat belt upper anchor cover (B).
 9. After loosening the mounting bolt, then remove the front seat belt upper anchor (A).

Tightening torque :

39.2 ~ 53.9 N.m (4.0 ~ 5.5 kgf.m, 28.8 ~ 39.8 lb-ft)

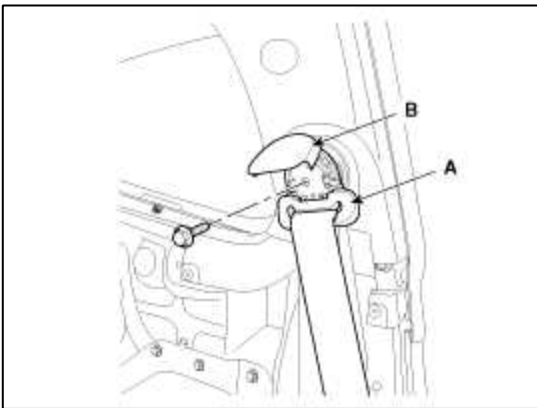

10. Remove the cap (B).
 11. After loosening the mounting bolt, then remove the center pillar upper trim (A).

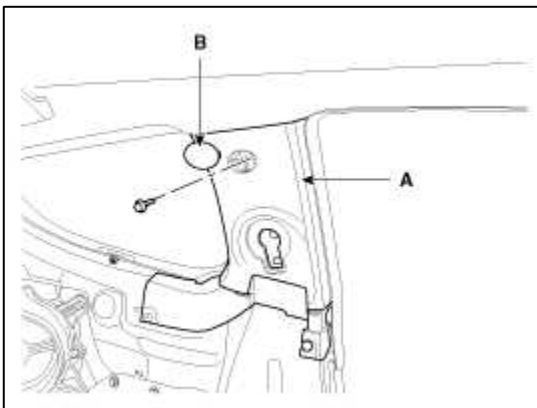

12. Installation is the reverse of removal.

NOTE


- Replace any damaged clips.

Rear Pillar Trim Replacement

NOTE

- Put on gloves to protect your hands.
- Use a plastic panel removal tool to remove interior trim pieces to protect from marring the surface.
- Take care not to bend or scratch the trim and panels.

1. Remove the cap (B).
2. After loosening the mounting bolt, then remove the rear pillar trim (A).

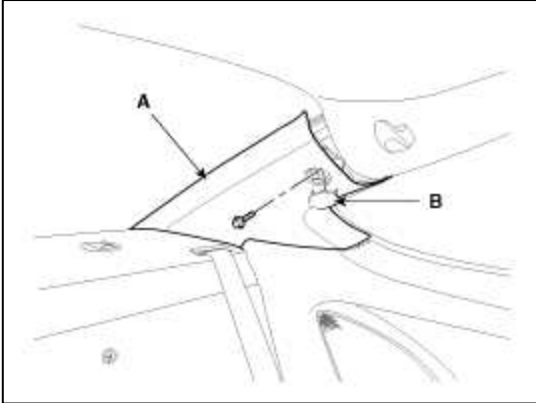

3. Installation is the reverse of removal.

NOTE


- Replace any damaged clips.

Package Tray Trim Replacement


NOTE

- Put on gloves to protect your hands.
- Use a plastic panel removal tool to remove interior trim pieces to protect from marring the surface.
- Take care not to bend or scratch the trim and panels.


1. Remove the rear seat assembly.
(Refer to the BD group – “Rear Seat”)
2. Remove the front door scuff trim.
3. Remove the cap (B).
4. After loosening the mounting bolt, then remove the rear pillar trim (A).

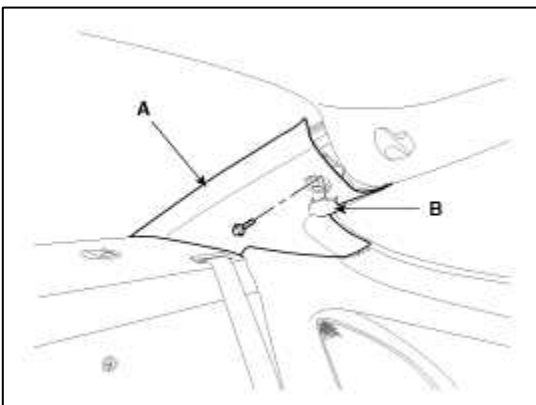

5. Remove the mounting clips and then center pillar lower trim (A).

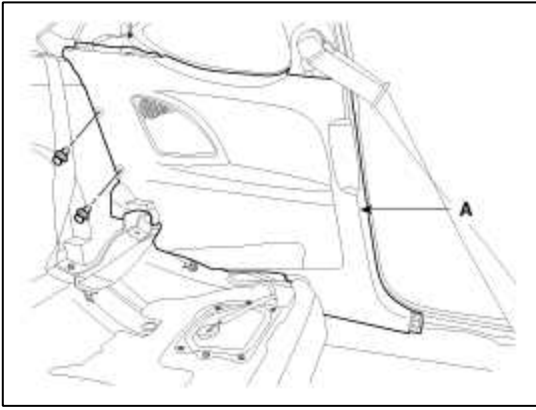


6. After loosening the mounting screws and bolts, then remove the luggage partition tray trim (A).

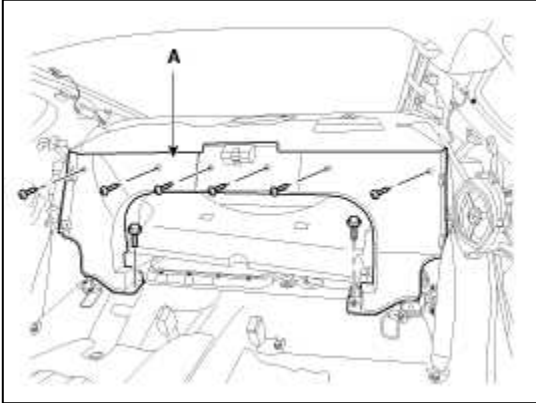


7. After loosening the mounting bolt, then remove the rear seat belt lower anchor (A).

Tightening torque :


39.2 ~ 53.9 N.m (4.0 ~ 5.5 kgf.m, 28.8 ~ 39.8 lb-ft)

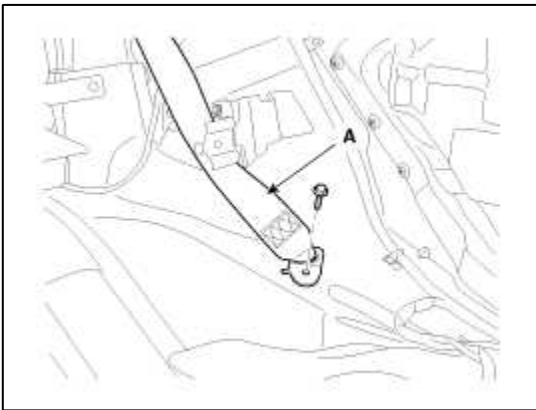

8. Remove the rear seat belt upper anchor cover (A).

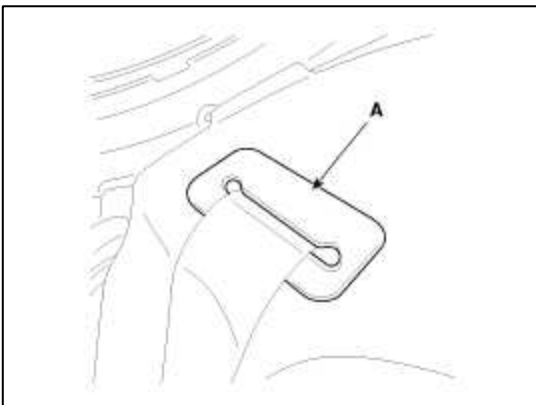

9. Remove the package tray trim (A).

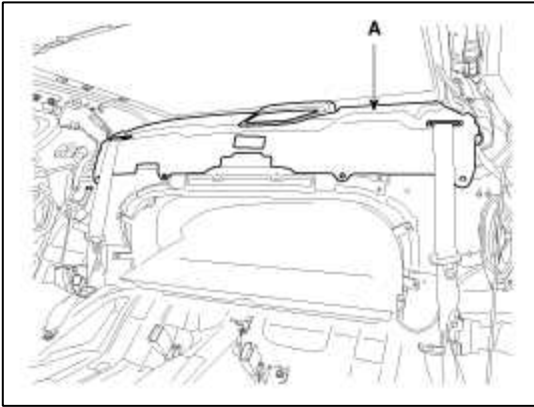

10. Installation is the reverse of removal.

NOTE

- Replace any damaged clips.

Body (Interior and Exterior) > Interior > Trunk Trim > Repair procedures

Replacement


NOTE

- Put on gloves to protect your hands.
- Use a plastic panel removal tool to remove interior trim pieces to protect from marring the surface.
- Take care not to bend or scratch the trim and panels.

1. Remove the trunk trim.
2. Installation is the reverse of removal.

NOTE


- Replace any damaged clips.

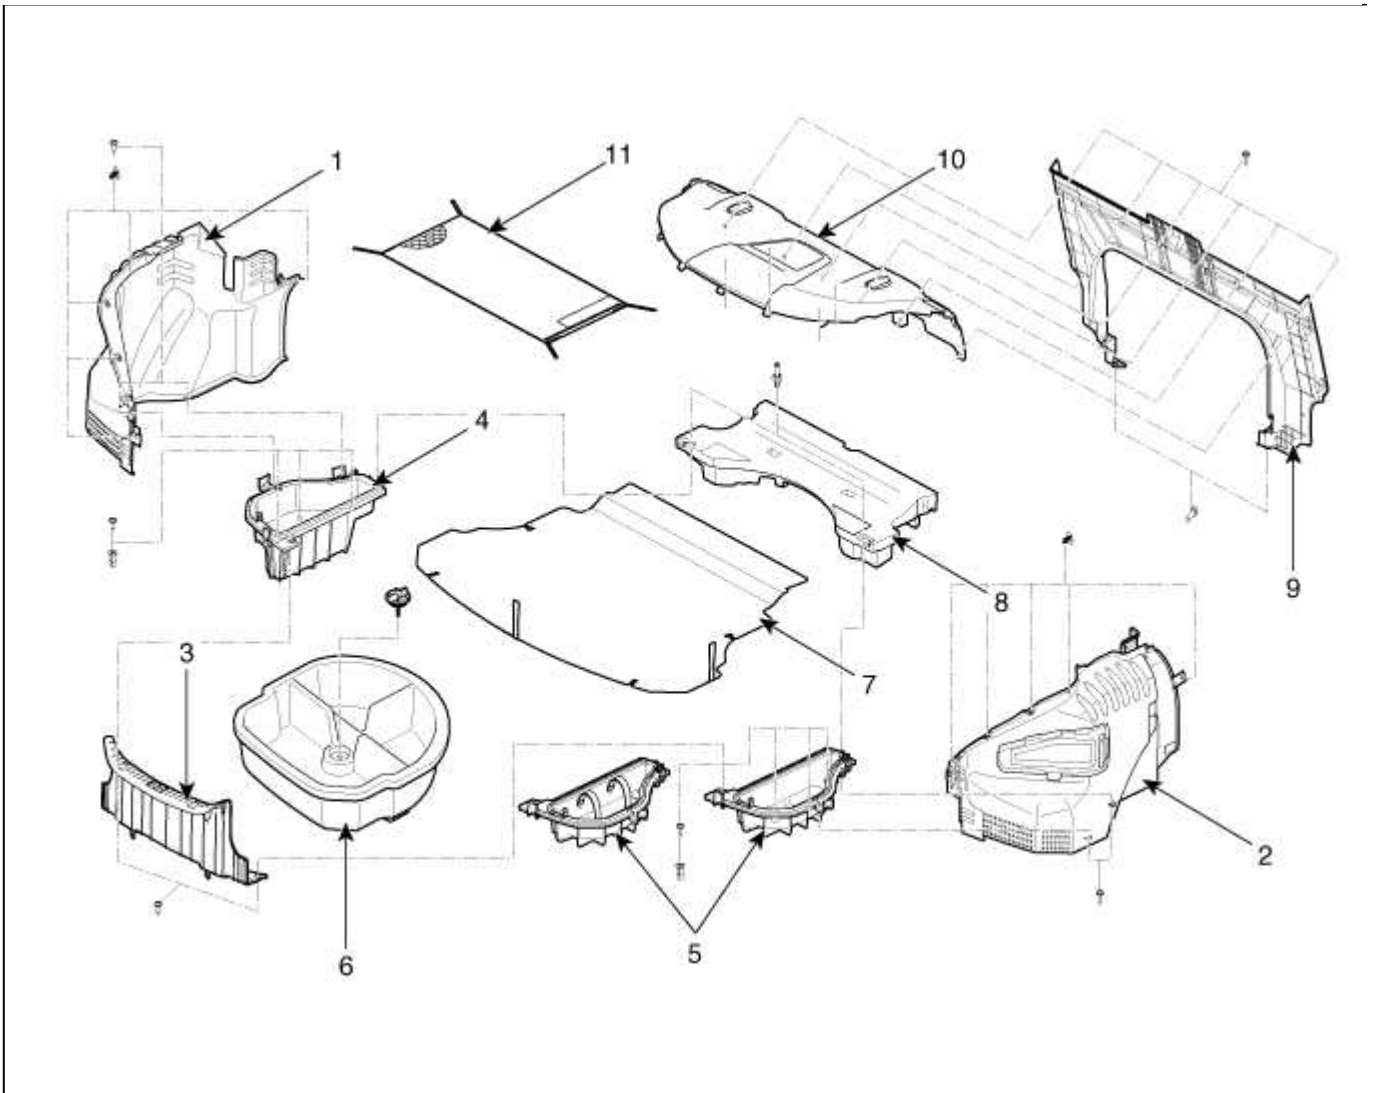

- | | |
|---------------------------|---------------------------------------|
| 1. Luggage side trim [LH] | 7. Luggage covering complete assembly |
| 2. Luggage side trim [RH] | 8. Luggage covering pad |
| 3. Rear transverse trim | 9. Luggage partition tray trim |
| 4. Luggage tray [LH] | 10. Package tray trim |
| 5. Luggage tray [RH] | 11. Luggage net |
| 6. Luggage center tray | |

Body (Interior and Exterior) > Interior > Windshield Glass > Components and Components Location

Components

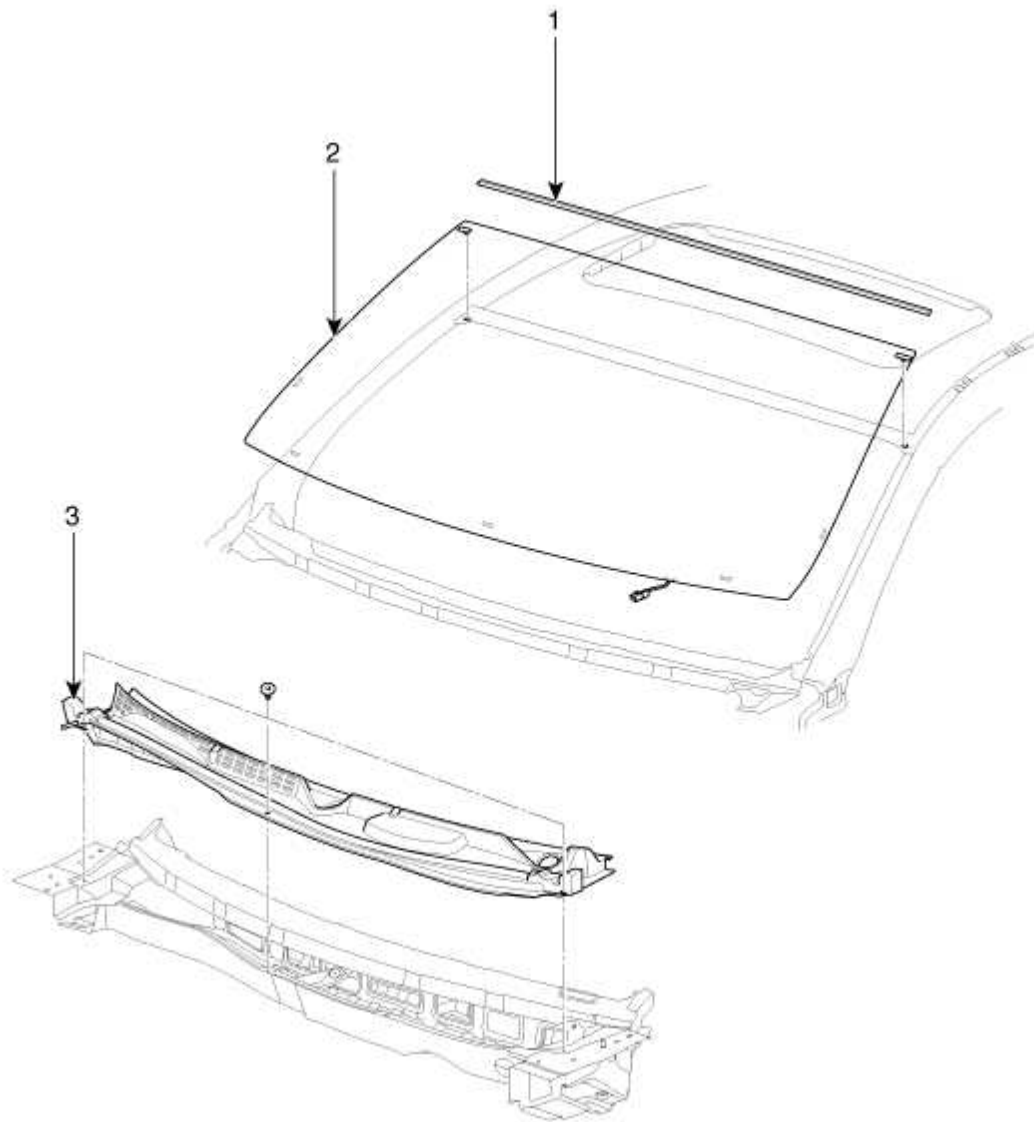

- | | |
|-----------------------|---------------------|
| 1. Windshield molding | 2. Windshield glass |
| | 3. Cowl top cover |

Body (Interior and Exterior) > Interior > Windshield Glass > Repair procedures

Replacement


Removal

NOTE


- Put on gloves to protect your hands.
- Use seat covers to avoid damaging any surfaces.

1. Remove the front pillar trim.
(Refer to the BD group - "Interior Trim")
2. Remove the inside rear view mirror.
(Refer to the BD group - "Mirror")
3. Remove the rain sensor.
(Refer to the BE group - "Rain Sensor")

4. Remove the auto defog sensor.
(Refer to the HA group - "Auto Defog Sensor")
5. Remove the windshield wiper arm.
(Refer to the BD group - "Cowl Top Cover")
6. Remove the cowl top cover.
(Refer to the BD group - "Cowl Top Cover")
7. Disconnect the windshield glass deicer connector.
(Refer to the BE group - "Windshield Deicer")
8. Remove the windshield molding (A) from the edge of the windshield glass (B).
If necessary, cut the windshield molding with a utility knife.

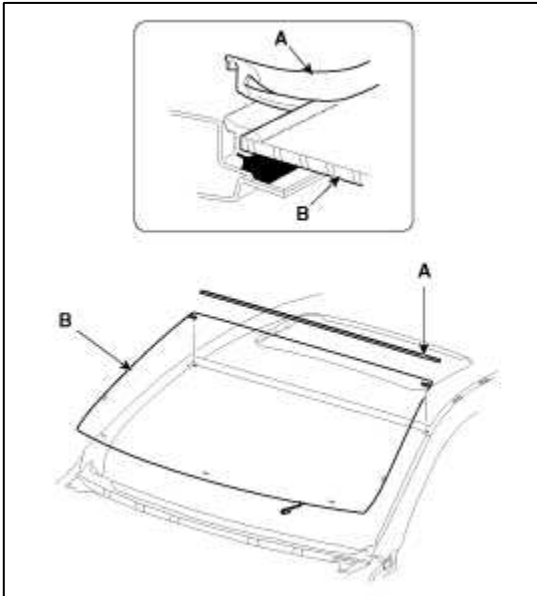


9. Cut out the windshield sealant using the sealant cutting tool (09861-31100).

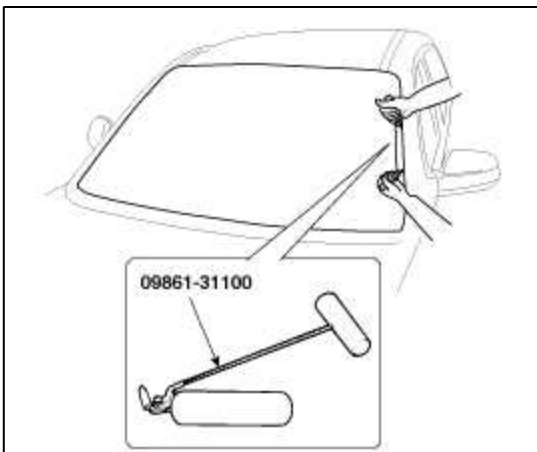

CAUTION


- Do not scrape down to the painted surface of the body; damaged paint will interfere with proper bonding.
- Remove the rubber dam and fasteners from the body.
- Mask off surrounding surfaces before painting.

10. Remove the windshield glass (B) carefully using the glass holder (A).

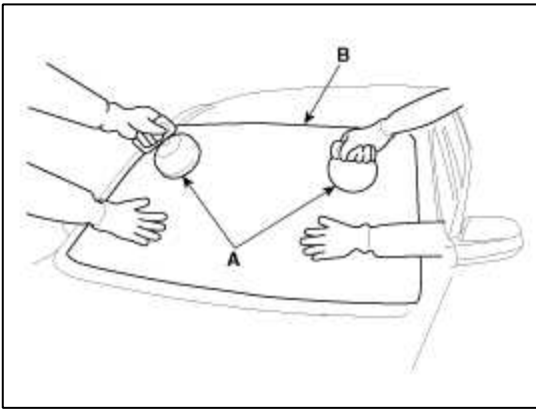


Installation

1. With a knife, scrape the old adhesive smooth to a thickness of about 2mm (0.08 in.) on the bonding surface around the entire windshield opening flange :
 - A. Do not scrape down to the painted surface of the body; damaged paint will interfere with proper bonding.
 - B. Remove the rubber dam and fasteners from the body.
 - C. Mask off surrounding surfaces before painting.
2. Clean the bonding surface with a sponge dampened in alcohol. After cleaning, keep oil, grease and water from getting on the clean surface.
3. Install the windshield glass (A) upper molding (B) and fasteners (C). Do not allow any gaps.

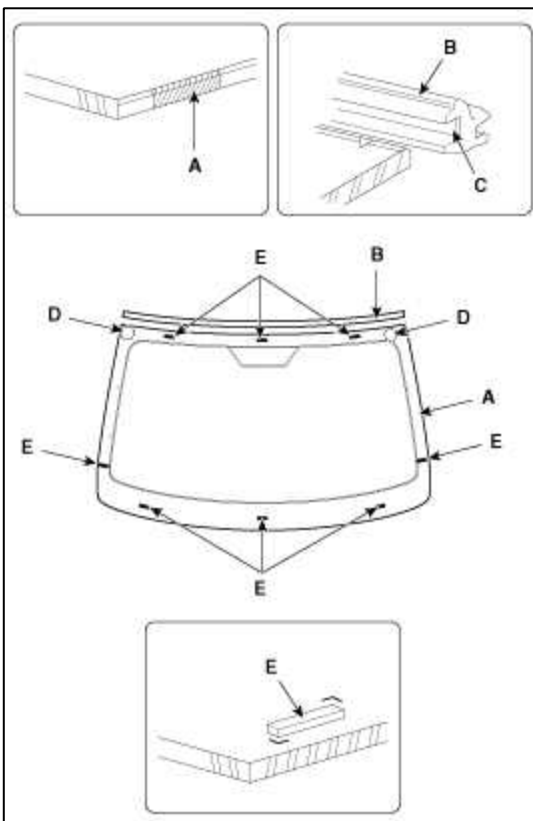


4. Install the spacer (A) install the windshield glass (B) temporarily with marking sure to position them on the center, and then place the alignment mark (C).

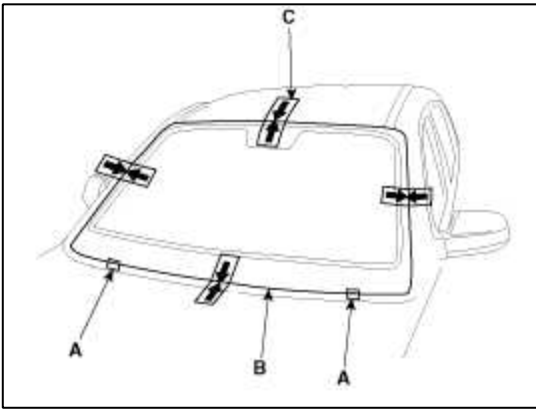

5. With a sponge, apply a light coat of body primer to the original adhesive remaining around the windshield opening flange. Let the body primer dry for at least 10 minutes.

NOTE


- Do not apply glass primer to the body, and be careful not to mix up glass and body primer sponges.
- Never touch the primed surfaces with your hands.
- Mask off the dashboard before painting the flange.

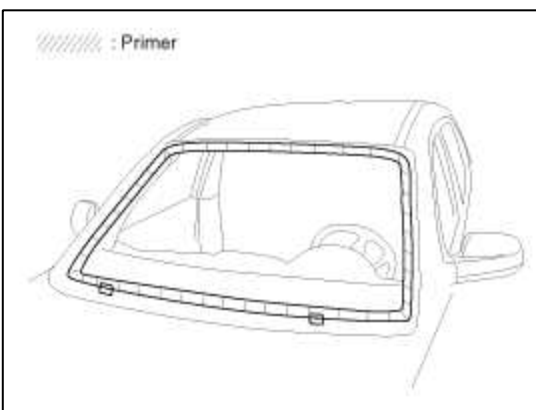


6. Apply a light coat of glass primer to the outside of the fasteners.

NOTE


- Never touch the primed surface with your hand. If you do, the adhesive may not bond to the glass properly, causing a leak after the windshield glass is installed.
- Do not apply body primer to the glass.
- Keep water, dust, and abrasive materials away from the primer.

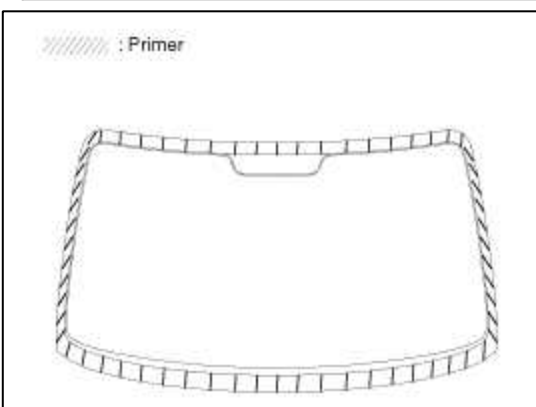

7. Pack adhesive into the cartridge without air pockets to ensure continuous delivery. Put the cartridge in a caulking gun, and run a bead of adhesive (B) around the edge of the windshield glass (A) between the fastener and molding as shown. Apply the adhesive within 30 minutes after applying the glass primer. Make a slightly thicker bead at each corner.

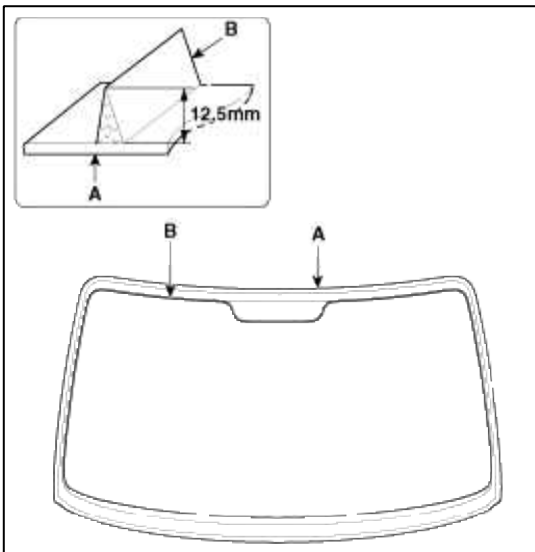

8. Use suction cups (A) to hold the windshield glass (B) over the opening, align it with the alignment marks (C) made in step 15, and set it down on the adhesive. Lightly push on the windshield until its edges are fully seated on the adhesive all the way around. Do not open or close the doors until the adhesive is dry.

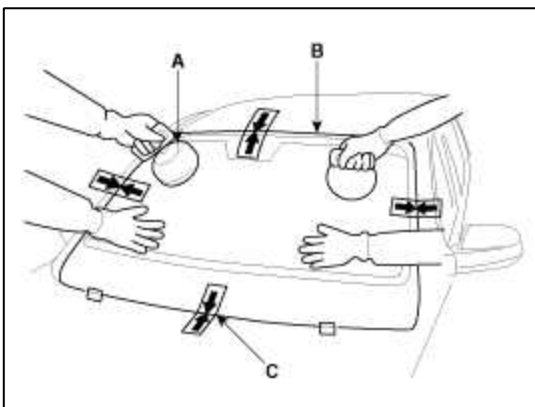


9. Scrape or wipe the excess adhesive off with a putty knife or towel. To remove adhesive from a painted surface or the windshield, wipe with a soft shop towel dampened with alcohol.
10. Let the adhesive dry for at least one hour, then spray water over the roof and check for leaks. If a leak occurs, let it dry, then seal with sealant :
- A. Let the vehicle stand for at least four hours after windshield installation. If the vehicle must be driven within 4 hours, it must be driven slowly.
 - B. Keep the windshield dry for the first hour after installation.
11. Install the windshield glass deicer connector.
(Refer to the BE group - "Windshield Deicer")
12. Install the cowl top cover.
(Refer to the BD group - "Cowl Top Cover")
13. Install the windshield wiper arm.
(Refer to the BD group - "Cowl Top Cover")
14. Install the auto defog sensor.
(Refer to the HA group - "Auto Defog Sensor")
15. Install the rain sensor.
(Refer to the BE group - "Rain Sensor")
16. Install the inside rear view mirror.
(Refer to the BD group - "Mirror")

17. Install the front pillar trim.
(Refer to the BD group - "Interior Trim")

Body (Interior and Exterior) > Bumper > Front Bumper > Components and Components Location

Components

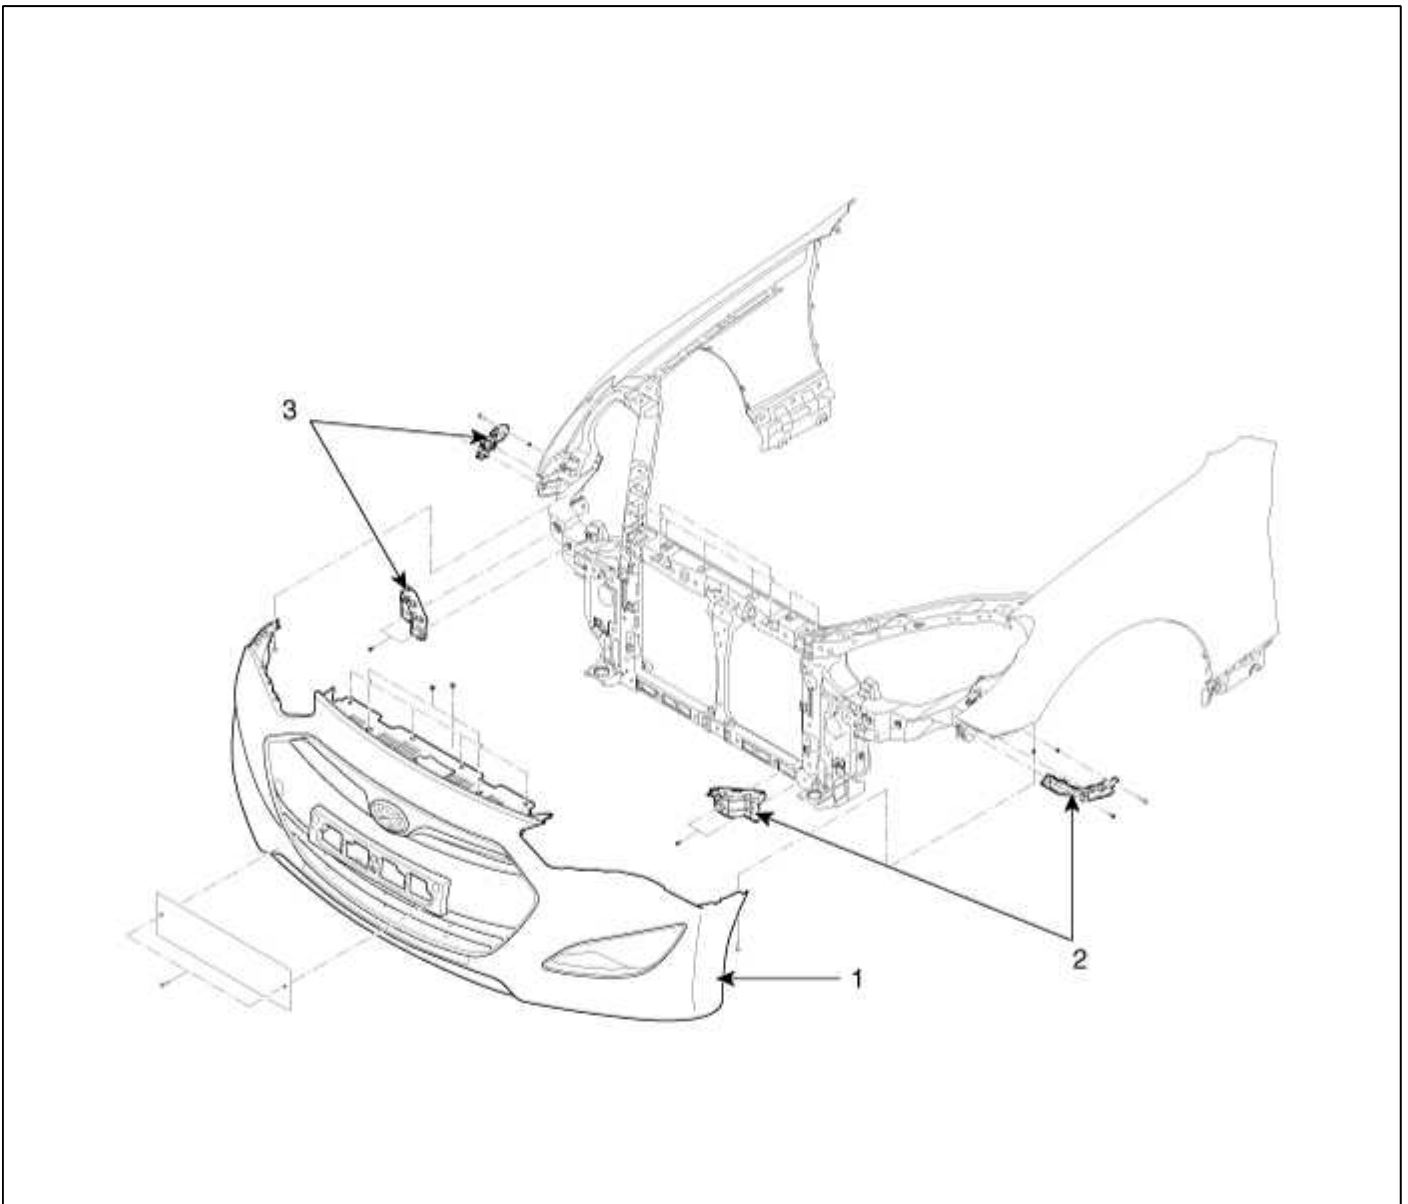

- | | |
|-----------------------------------|------------------------------|
| 1. Front bumper cover | 3. Front bumper side bracket |
| 2. Front bumper side bracket [LH] | [RH] |


Body (Interior and Exterior) > Bumper > Front Bumper > Repair procedures

Replacement


NOTE

- Put on gloves to protect your hands.
- Use a plastic panel removal tool to remove interior trim pieces to without marring the surface.
- Take care not bend or scratch the cover and other parts.


1. Loosen the radiator upper cover (A) mounting clips.

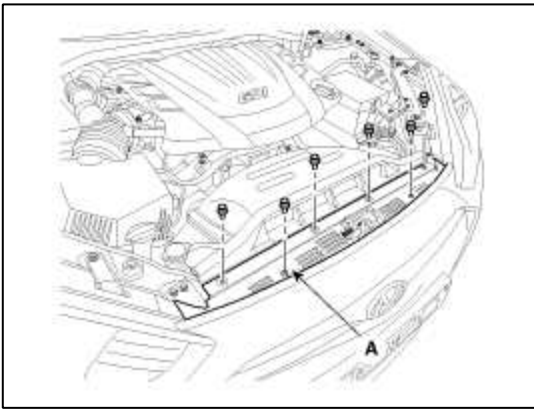


2. Remove the front bumper lower mounting clips.

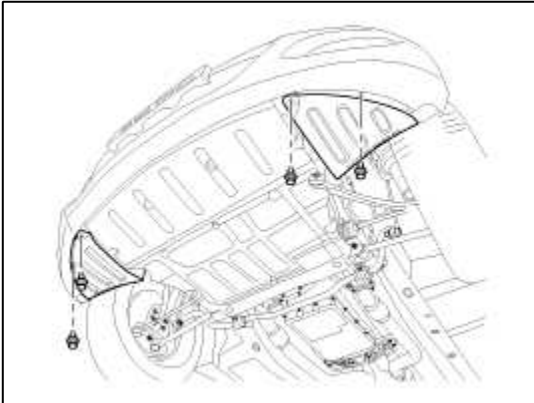


3. After loosening the front bumper side's mounting screw, then disconnect the side's.

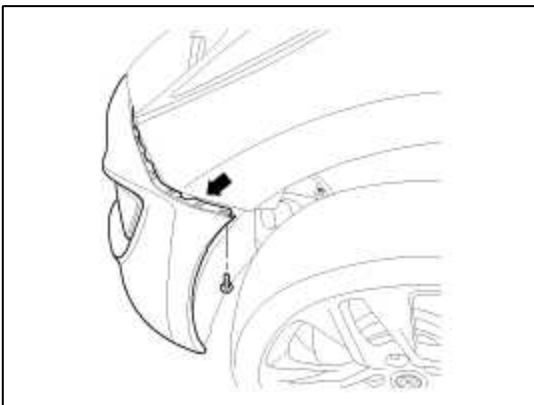

4. Disconnect the fog lamp connectors (A).

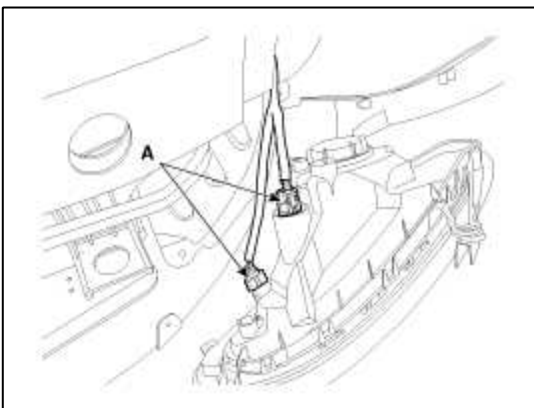

5. Remove the front bumper cover (A).

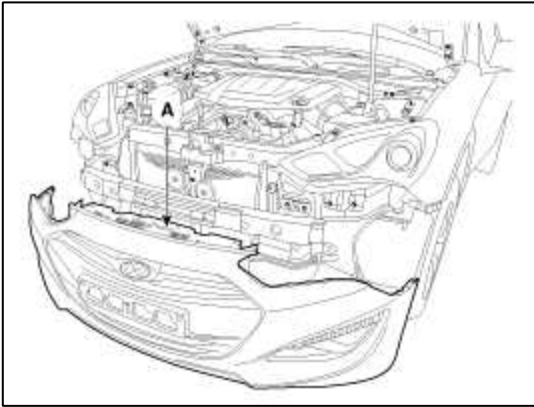


6. Installation is the reverse of removal.

NOTE

- Make sure the connector is plugged in properly.
- Replace any damaged clips.

Body (Interior and Exterior) > Bumper > Rear Bumper > Components and Components Location

Components

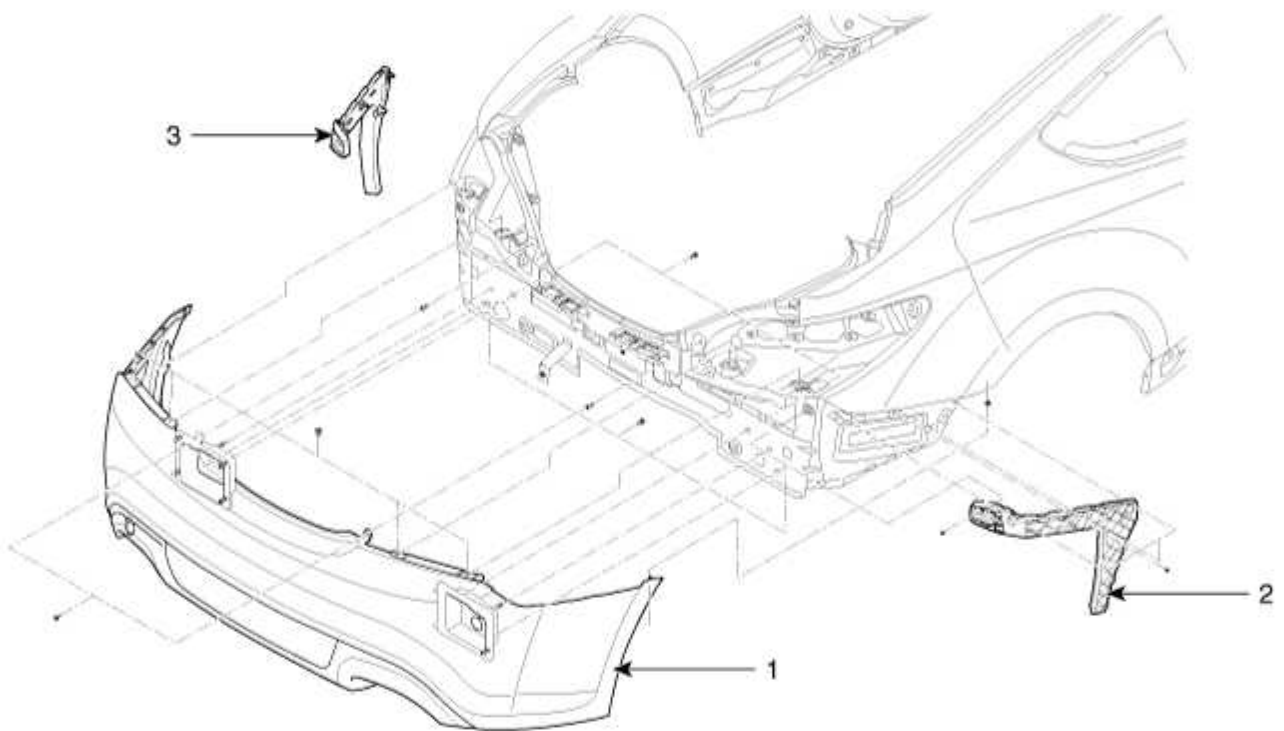

1. Rear bumper cover

2. Rear bumper side bracket [RH]

3. Rear bumper side bracket [LH]

Body (Interior and Exterior) > Bumper > Rear Bumper > Repair procedures


Replacement

NOTE


- Put on gloves to protect your hands.
- Use a plastic panel removal tool to remove interior trim pieces to without marring the surface.
- Take care not bend or scratch the cover and other parts.

1. Remove the rear transverse trim.
(Refer to the BD group - "Trunk Trim")
2. Remove the luggage side trim.
(Refer to the BD group - "Trunk Trim")


3. Disconnect the rear bumper main connector (A).

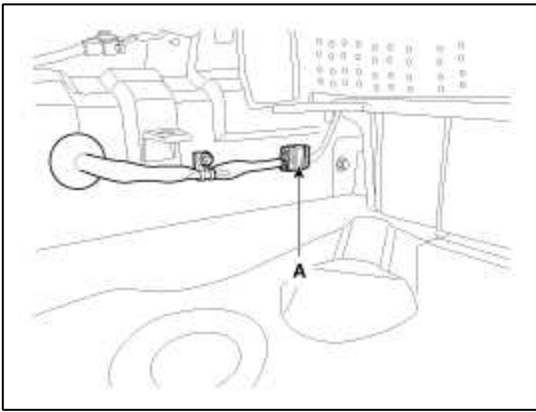


4. Loosen the trunk inner mounting bolt (A).

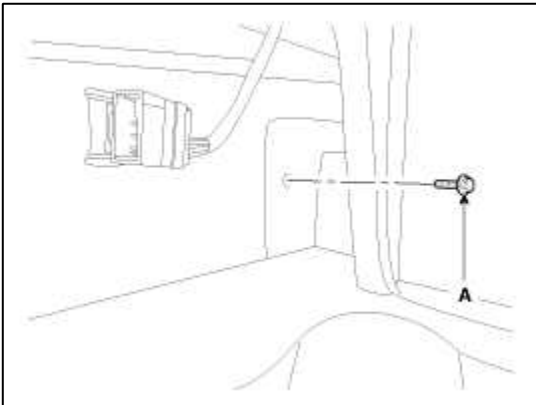


5. Disconnect the connector (A), and then loosen the rear combination lamp mounting nuts.

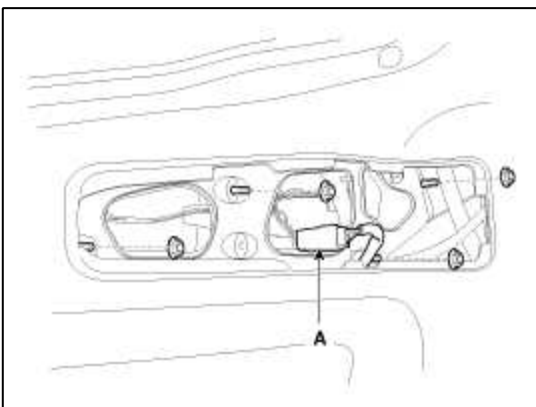


6. Remove the rear combination lamp (A).

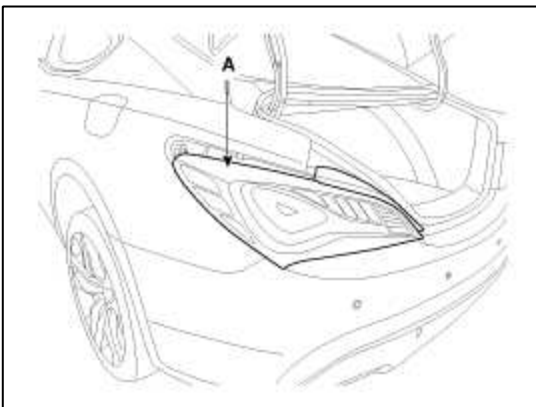


7. Loosen the mounting screw and clips.

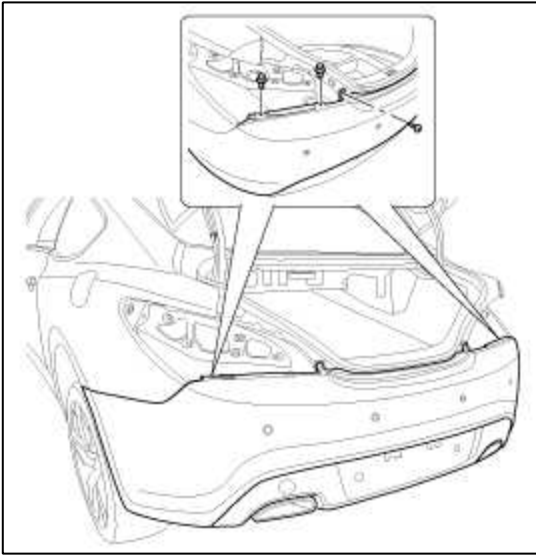


8. After loosening the rear bumper side's mounting screw, then disconnect the side's.

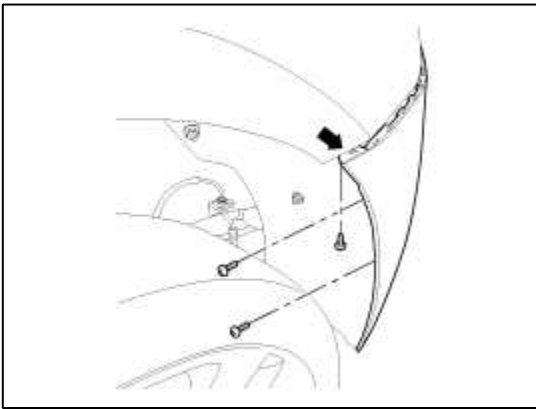


9. Remove the rear bumper lower mounting clips.

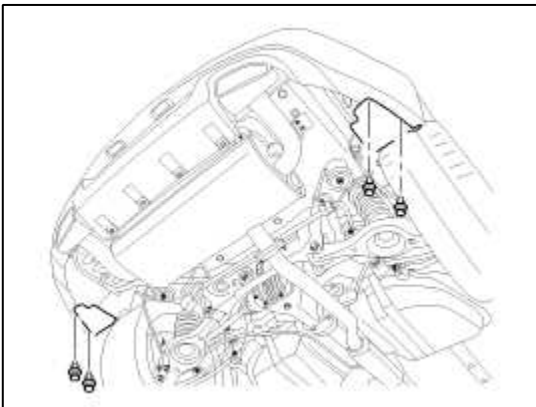

10. Loosen the mounting bolt (A).

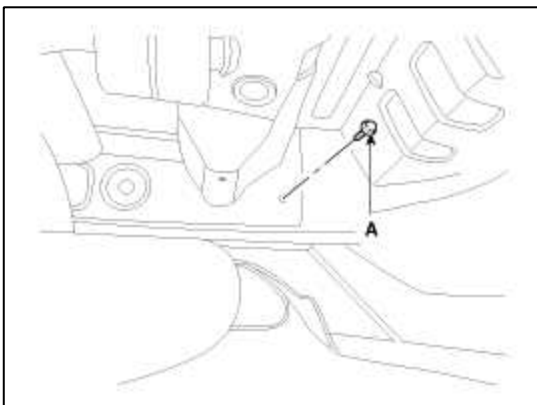

11. Remove the rear bumper cover (A).

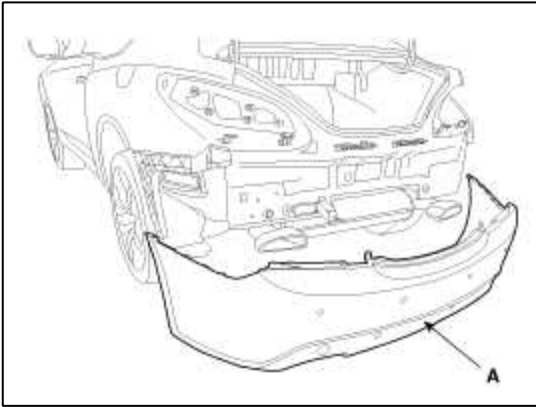

12. Installation is the reverse of removal.

NOTE

- Make sure the connector is plugged in properly.
- Replace any damaged clips.

Body (Interior and Exterior) > Seat & Power Seat > Front Seat > Repair procedures

Replacement

Front Seat Assembly Replacement

1. Remove the front foot cover.
2. After loosening the front seat assembly mounting bolts, remove the front seat assembly (A).


Tightening torque :

49.0 ~ 63.7N.m (5.0 ~ 6.5kgf.m, 36.2~47.0lb-ft)




3. Disconnect the airbag connector (A), seat warmer connector (B), seat buckle connector (C).

[Driver's]

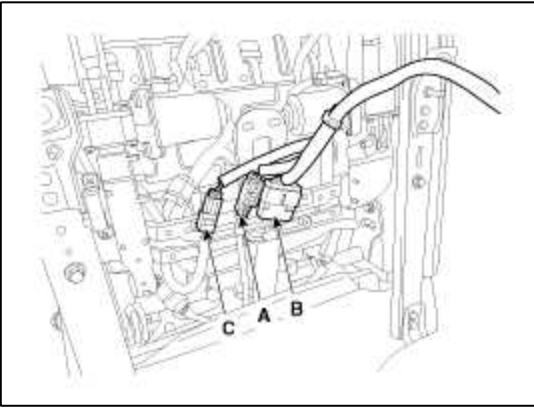

[Passenger's]

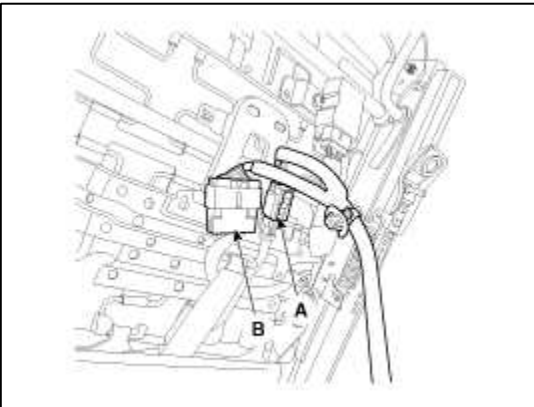

4. Installation is the reverse of removal.

CAUTION

Seat Mounting Bolt Installation Procedure


- Set the into the most rearward position. Check then each slide is locked, and then Tighten the front mounting bolt temporarily.
- Set the seat into most forward position. Check that each slide is locked, and then Tighten the rear mounting bolt completely.
- Set the seat into the most rearward position. Check the front mounting bolt completely.
- Check that the seat operates back and forth smoothly and the locking portion locks properly.

Recliner Cover Replacement


NOTE

- Use a plastic panel removal tool to remove interior trim pieces to protect from marring the surface.
- Take care not to bend or scratch the trim and panels.
- Put on gloves to protect your hands.

1. Remove the recliner lever (A) and height lever (B).

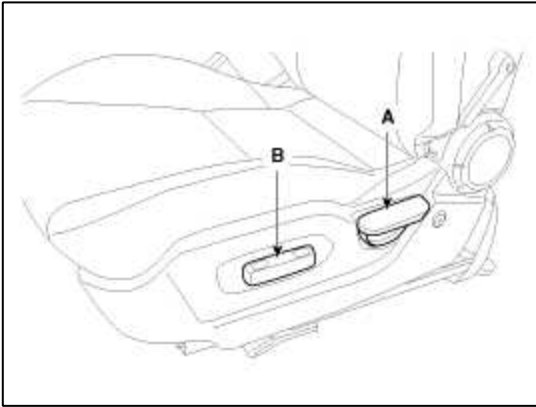

2. After loosening the mounting screws, then remove the recliner cover (A).
3. Disconnect the connector.

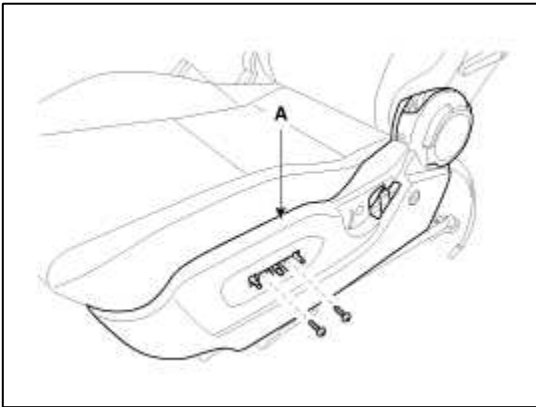

4. Installation is the reverse of removal.

NOTE

- Make sure the connector is plugged in properly.
- Replace any damaged clips.


Front Seat Back Cover Replacement

NOTE


- Use a plastic panel removal tool to remove interior trim pieces to protect from marring the surface.
- Take care not to bend or scratch the trim and panels.
- Put on gloves to protect your hands.

1. Remove the front seat assembly.
2. Remove the recliner cover.
3. Remove the front seat headrest.
4. Remove the lumbar support level.


5. After disconnecting the clips (C) and (B), remove the front seat back board (A).

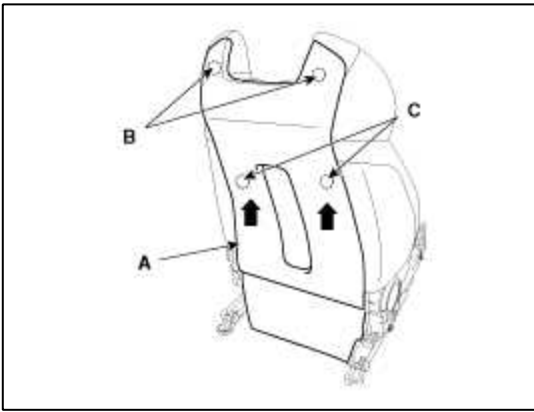


6. Push the protector (A) by the seat back frame.

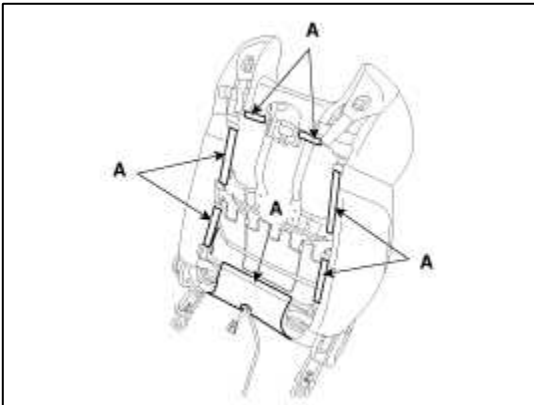

7. Disconnect the airbag connectors (A).

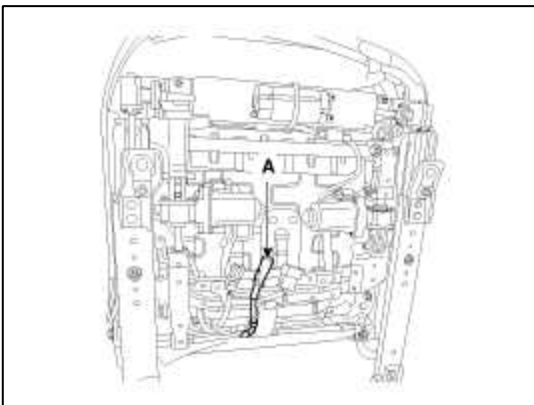


8. Pull out the headrest guides (A) while pinching the end of the guides, and remove them.

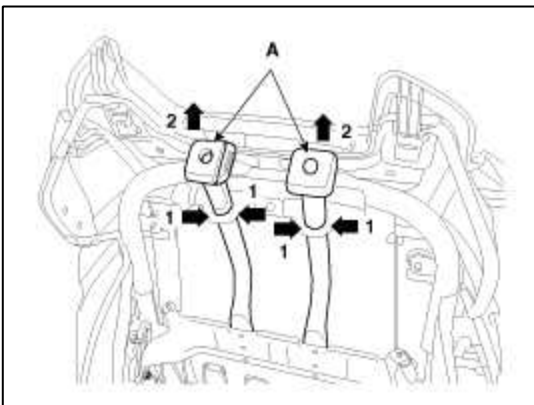

9. Remove the front seat back cover from the frame.


10. After removing the velcro tape (A) and hog-ring clip (B) on the front of seat back and remove the front seat back cover (C).

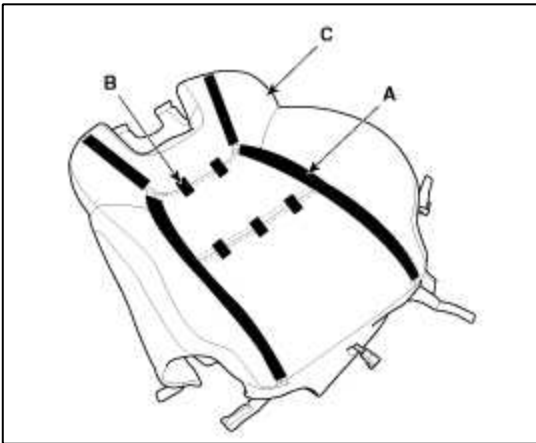

11. Installation is the reverse of removal.

NOTE

- To prevent wrinkles, make sure the material is stretched evenly over the cover (B) before securing the hog-ring clips (A).
- Replace the hog ring clips with new ones using special tool [C (09880-4F000)].

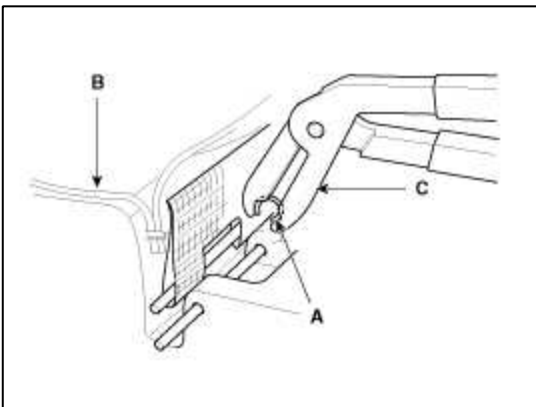


Front Seat Cushion Cover Replacement


NOTE

- Use a plastic panel removal tool to remove interior trim pieces to protect from marring the surface.
- Take care not to bend or scratch the trim and panels.
- Put on gloves to protect your hands.


1. Remove the front seat assembly.
2. Remove the recliner cover.
3. Disconnect the connector (A).

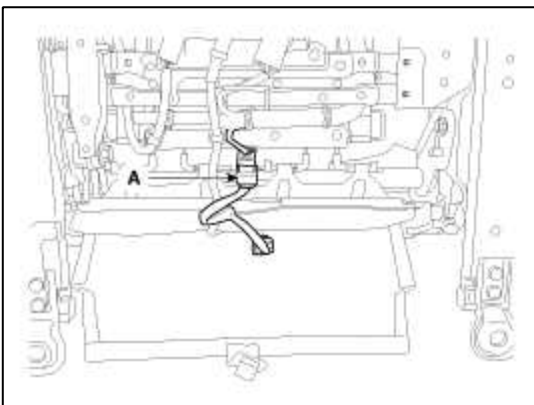

4. Push the protector, and then front seat cushion cover (A) from the frame.

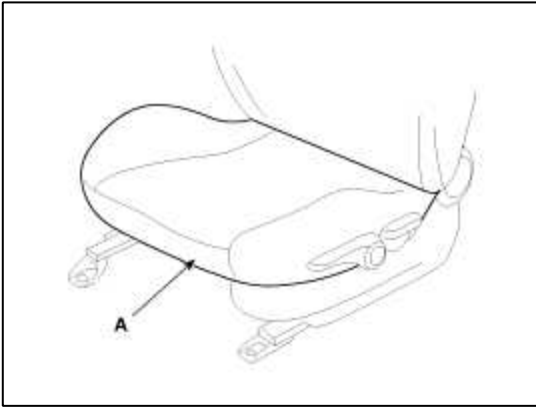

5. After removing the velcro tape (B) on the front of seat cushion and remove the front seat cushion cover (A).

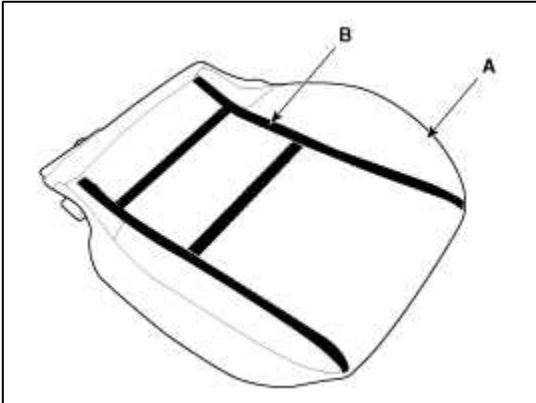

6. Installation is the reverse of removal.

NOTE

- Make sure the connector is plugged in properly.
- Replace any damaged clips.

Front Seat Frame Replacement

NOTE


- Use a plastic panel removal tool to remove interior trim pieces to protect from marring the surface.
- Take care not to bend or scratch the trim and panels.
- Put on gloves to protect your hands.

1. Remove the front seat assembly.
2. Remove the recliner cover.
3. Remove the front seat back cover.
4. Remove the front seat cushion cover.

5. After loosening the mounting bolts, then disconnect the seat back frame (A) and seat cushion frame (B).

Tightening torque :

49.0 ~ 63.7N.m (5.0 ~ 6.5kgf.m, 36.2~47.0lb-ft)

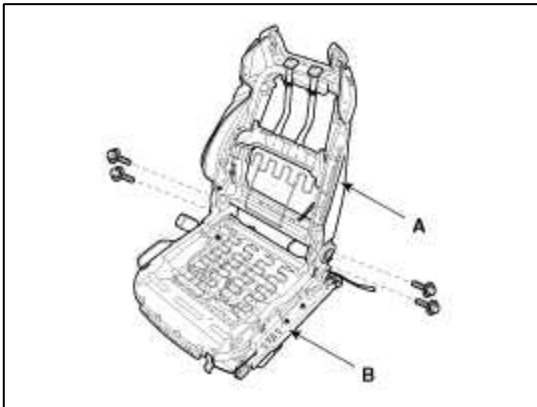

6. Installation is the reverse of removal.

NOTE


- Remove the side air bag for replacing side air bag installation seat.
- Before service, be fully aware of precautions and service procedure relevant to air bag.
(Refer to the RT group - "Airbag")

Front Seat Back Heater Replacement

NOTE

- Use a plastic panel removal tool to remove interior trim pieces to protect from marring the surface.
- Take care not to bend or scratch the trim and panels.
- Put on gloves to protect your hands.

1. Remove the front seat assembly.
2. Remove the front seat back cover.
3. Remove the front seat back heater (A).

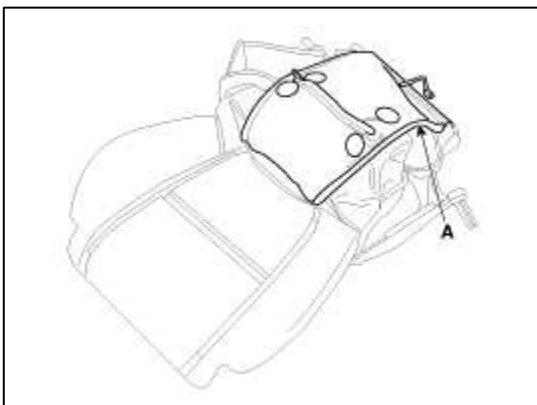


4. Installation is the reverse of removal.

Front Seat Cushion Heater Replacement

NOTE

- Use a plastic panel removal tool to remove interior trim pieces to protect from marring the surface.
- Take care not to bend or scratch the trim and panels.
- Put on gloves to protect your hands.


1. Remove the front seat assembly.
2. Remove the front seat cushion cover.
3. Remove the front seat cushion heater (A).

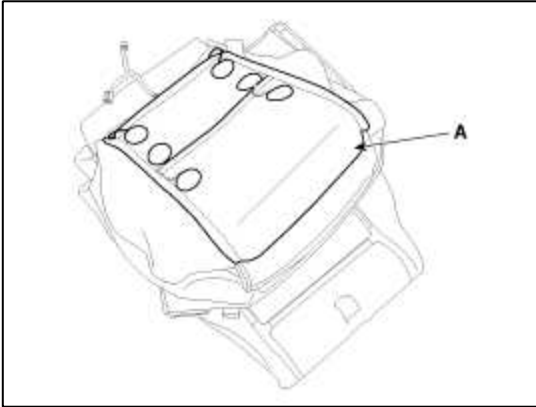

4. Installation is the reverse of removal.

Body (Interior and Exterior) > Seat & Power Seat > Rear Seat > Components and Components Location

Components

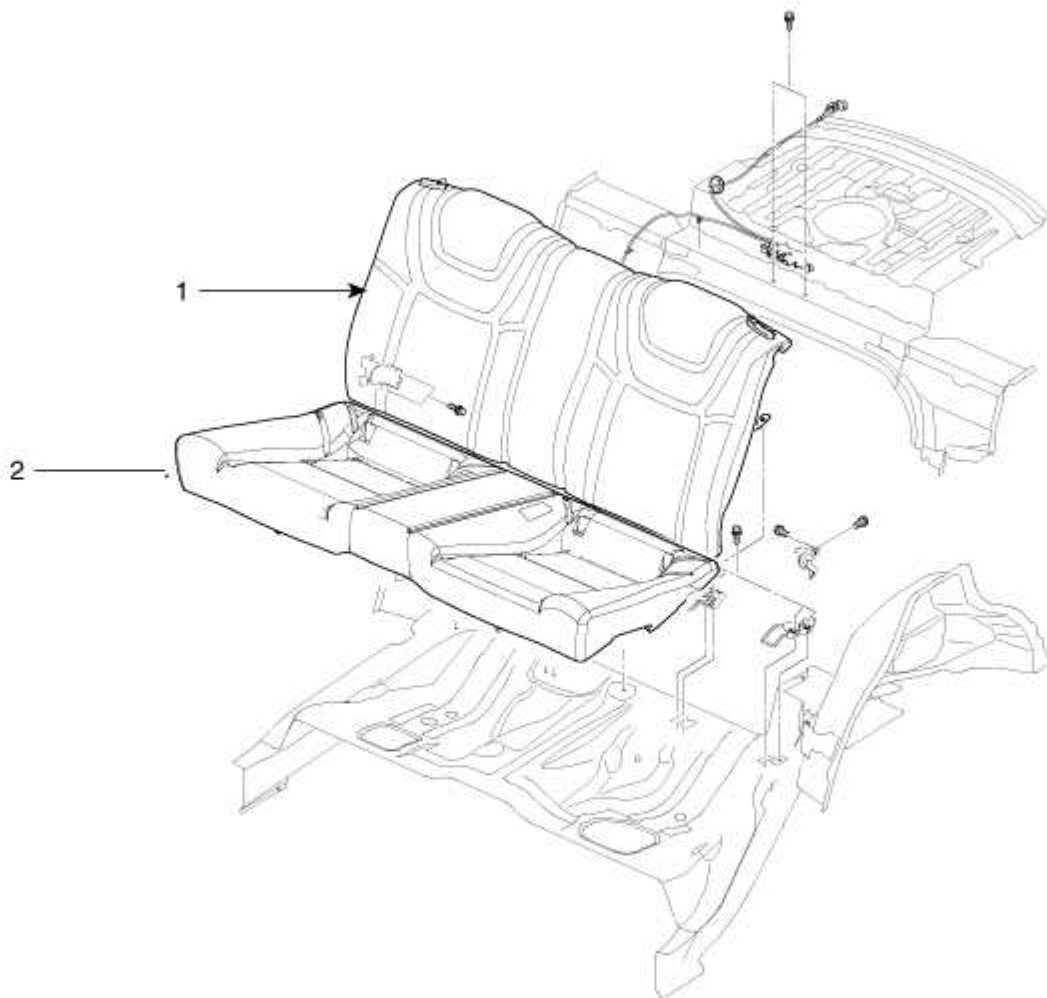

- | | |
|----------------------------|-------------------------------|
| 1. Rear seat back assembly | 2. Rear seat cushion assembly |
|----------------------------|-------------------------------|

Body (Interior and Exterior) > Seat & Power Seat > Rear Seat > Repair procedures


Replacement

Rear Seat Assembly Replacement

1. After loosening the mounting bolts, then remove the rear seat back (A).

Tightening torque :


34.3 ~ 53.9 N.m (3.5 ~ 5.5 kgf.m, 25.3 ~ 39.8 lb-ft)

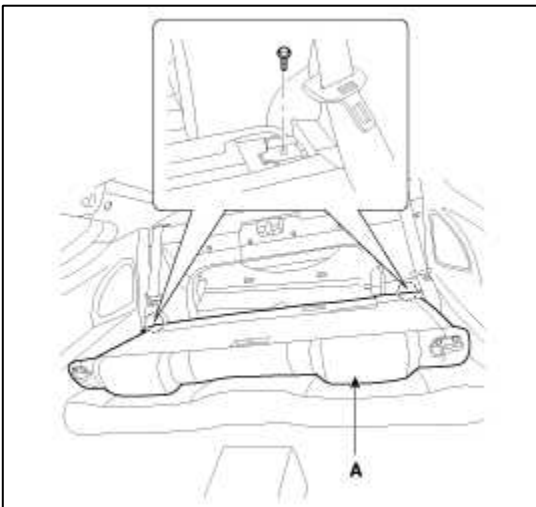

2. After loosening the mounting bolts, then remove the rear seat cushion (A).

Tightening torque :

34.3 ~ 53.9 N.m (3.5 ~ 5.5 kgf.m, 25.3 ~ 39.8 lb-ft)

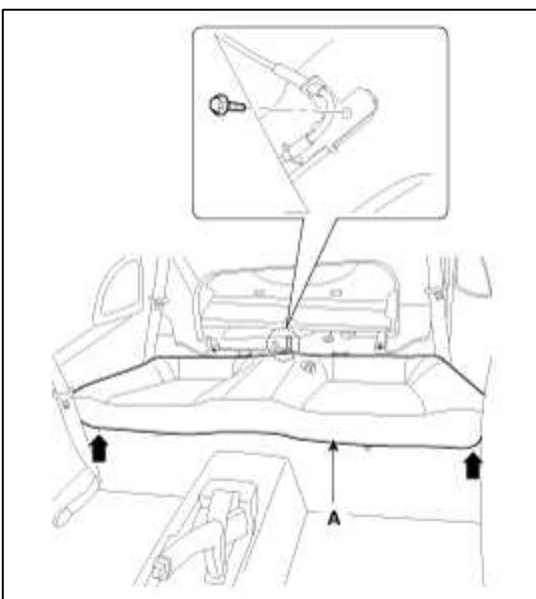

3. Installation is the reverse of removal.

Rear Seat Latch Replacement


NOTE

- Use a plastic panel removal tool to remove interior trim pieces to protect from marring the surface.
- Take care not to bend or scratch the trim and panels.
- Put on gloves to protect your hands.


1. Remove the rear seat back assembly.
2. Remove the front door scuff trim.
(Refer to the BD group – “Interior Trim”)
3. Remove the rear pillar trim.
(Refer to the BD group – “Interior Trim”)
4. Remove the center pillar lower trim.
(Refer to the BD group – “Interior Trim”)
5. Remove the luggage partition tray trim.
(Refer to the BD group – “Interior Trim”)
6. Remove the package tray trim.
(Refer to the BD group – “Interior Trim”)
7. After loosening the mounting bolts, then remove the rear seat latch assembly (A).

Tightening torque :


19.6 ~ 29.4 N.m (2.0 ~ 3.0 kgf.m, 14.5 ~ 21.7 lb-ft)

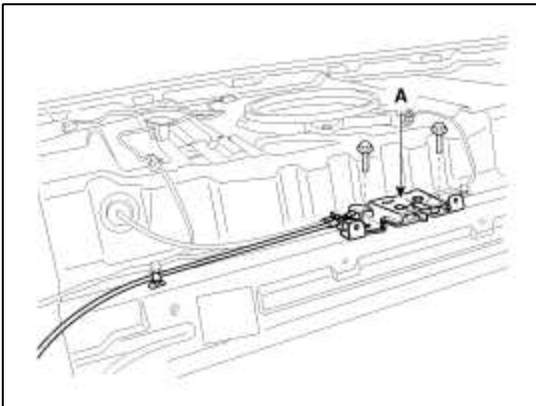

8. Remove the rear seat latch cable (A).

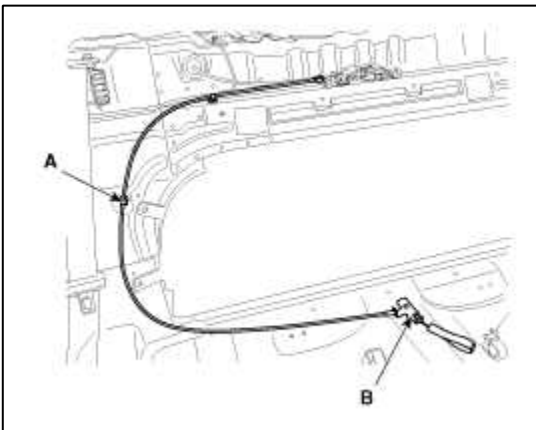


9. Remove the rear seat back folding handle (A).

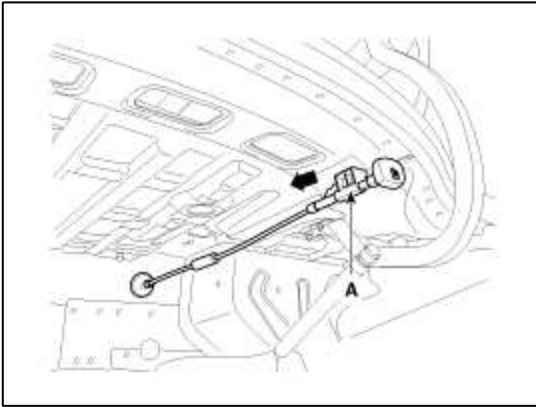

10. Installation is the reverse of removal.

Body (Interior and Exterior) > Seat Belt > Front Seat Belt > Components and Components Location

Components

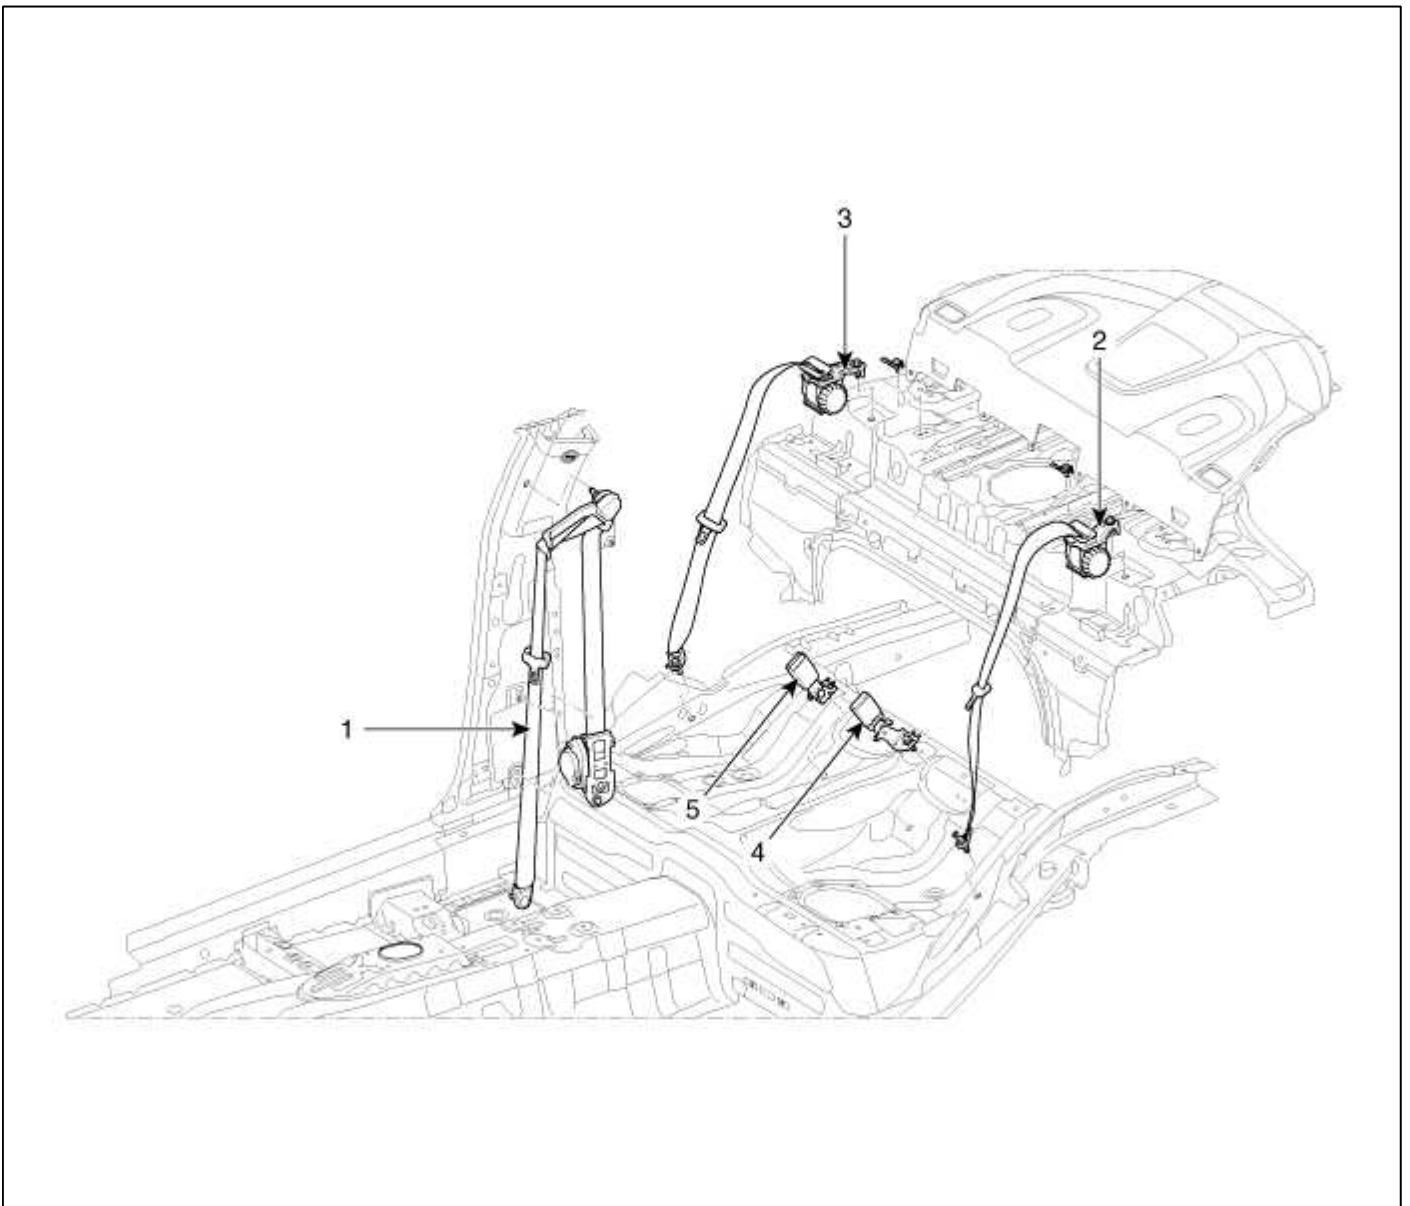

1. Front seat belt	4. Rear seat belt buckle
2. Rear seat belt [LH]	[LH]
3. Rear seat belt [RH]	5. Rear seat belt buckle
	[RH]

Body (Interior and Exterior) > Seat Belt > Front Seat Belt > Repair procedures

Replacement

Front Seat Belt Replacement


CAUTION

- When installing the belt, make sure not to damaged the pretensioner.


1. Remove the front seat assembly.
(Refer to the BD group - "Front Seat")
2. Remove the rear seat assembly.
(Refer to the BD group - "Front Seat")
3. Remove the front door scuff trim
(Refer to the BD group - "Interior Trim")
4. Remove the front seat belt lower anchor cover (B).
5. After loosening the mounting bolt, then remove the front seat belt lower anchor (A).

Tightening torque :


39.2 ~ 53.9 N.m (4.0 ~ 5.5 kgf.m, 28.8 ~ 39.8 lb-ft)

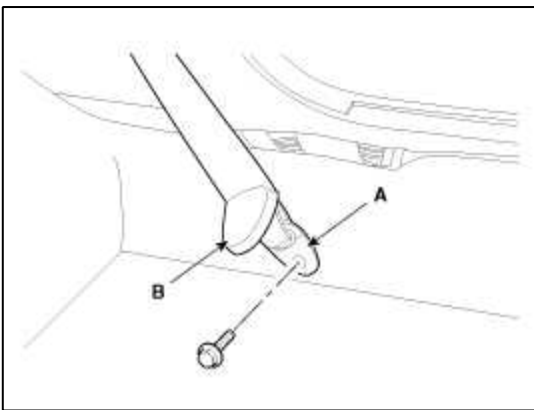

6. Remove the cap (B).
7. After loosening the mounting bolt, then remove the rear pillar trim (A).

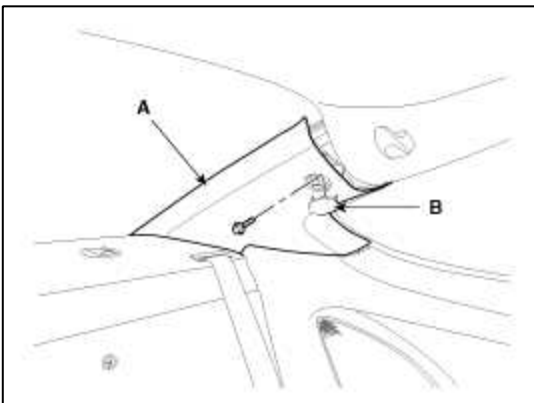

8. Remove the mounting clips and then center pillar lower trim (A).

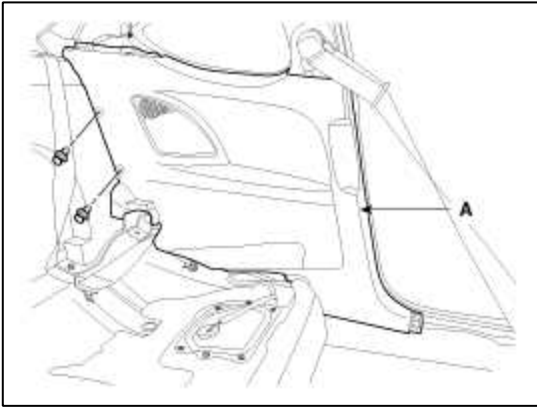


9. Remove the front seat belt upper anchor cover (B).

10. After loosening the mounting bolt, then remove the front seat belt upper anchor (A).

Tightening torque :


39.2 ~ 53.9 N.m (4.0 ~ 5.5 kgf.m, 28.8 ~ 39.8 lb-ft)

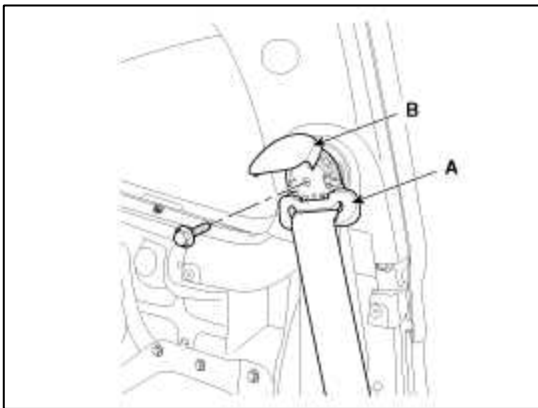

11. After disconnecting the pretensioner connector lock pin, remove the front seat belt pretensioner connector (B), loosen the mounting bolts, then remove the front seat belt pretensioner (A).

Tightening torque :

39.2 ~ 53.9 N.m (4.0 ~ 5.5 kgf.m, 28.8 ~ 39.8 lb-ft)

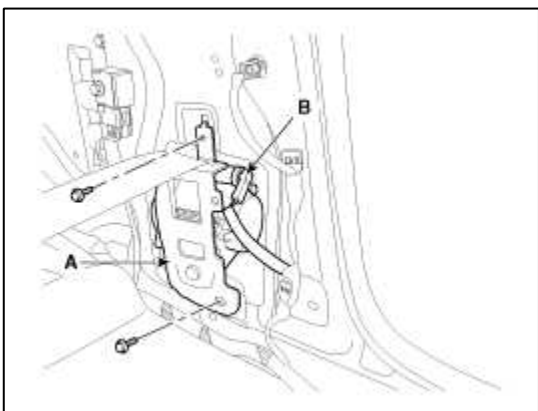

12. Installation is the reverse of removal.

NOTE


- Make sure the connector is plugged in properly.
- Replace any damaged clips.

Front Seat Belt Buckle Replacement

1. Remove the front seat assembly.
(Refer to the BD group - "Front Seat")
2. After loosening the mounting bolt, then remove the front seat belt buckle (A).

Tightening torque :

39.2 ~ 53.9 N.m (4.0 ~ 5.5 kgf.m, 28.9 ~ 39.8 lb-ft)

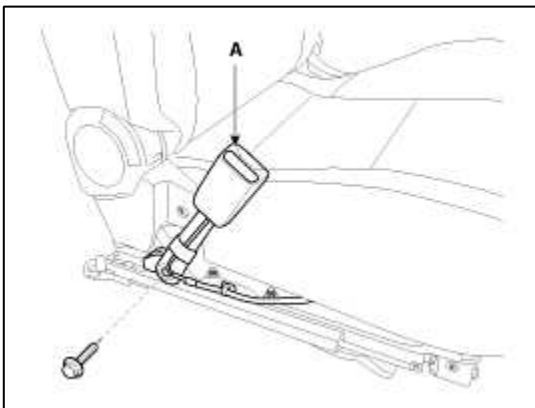

3. Installation is the reverse of removal.

Body (Interior and Exterior) > Seat Belt > Rear Seat Belt > Repair procedures


Replacement

Rear Seat Belt Replacement


CAUTION

- When installing the belt, make sure not to damage the retractor.


1. Remove the rear seat assembly.
(Refer to the BD group – "Rear Seat")
2. Remove the front door scuff trim.
(Refer to the BD group - "Interior Trim")
3. Remove the cap (B).
4. After loosening the mounting bolt, then remove the rear pillar trim (A).

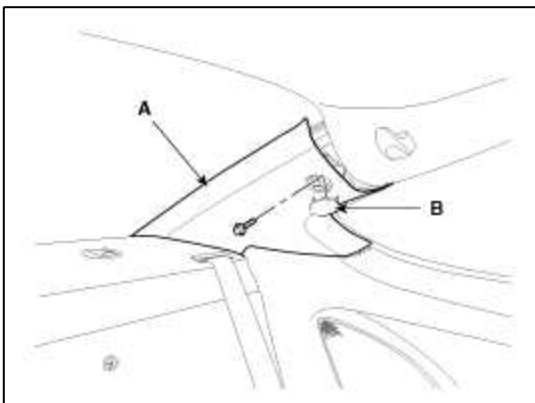

5. Remove the mounting clips and then center pillar lower trim (A).

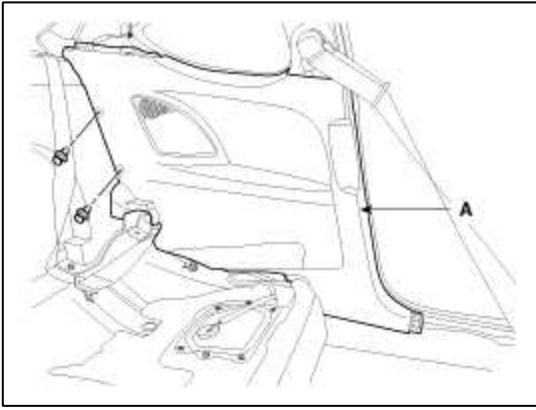


6. After loosening the mounting screws and bolts, then remove the luggage partition tray trim (A).

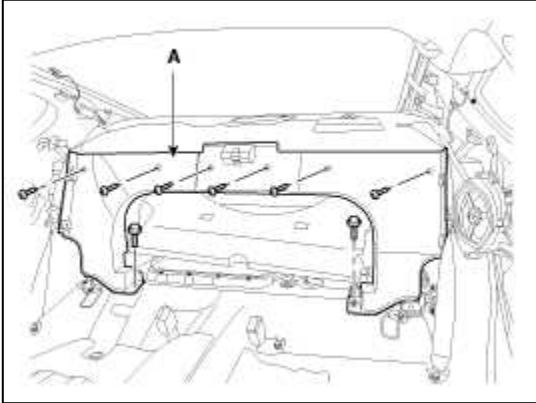


7. After loosening the mounting bolt, then remove the rear seat belt lower anchor (A).

Tightening torque :


39.2 ~ 53.9 N.m (4.0 ~ 5.5 kgf.m, 28.8 ~ 39.8 lb-ft)

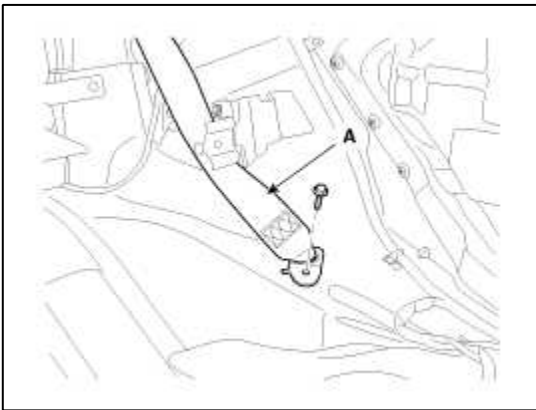

8. Remove the rear seat belt upper anchor cover (A).

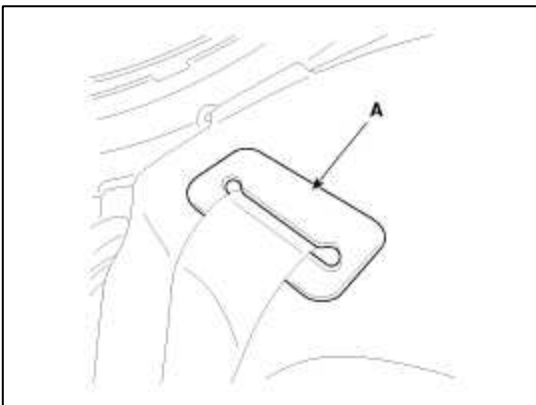


9. Remove the package tray trim (A).

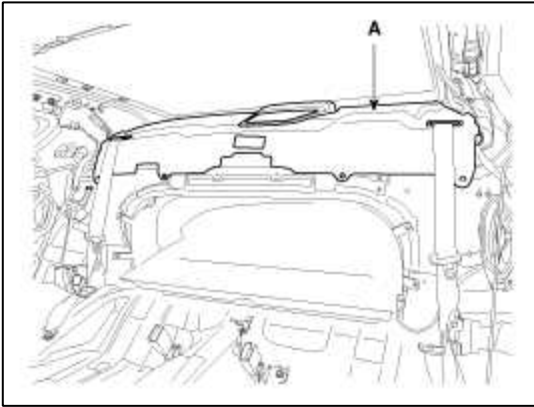

10. After loosening the mounting bolt, then remove the rear seat belt (A) and rear seat belt retractor (B).

Tightening torque :

39.2 ~ 53.9 N.m (4.0 ~ 5.5 kgf.m, 28.8 ~ 39.8 lb-ft)

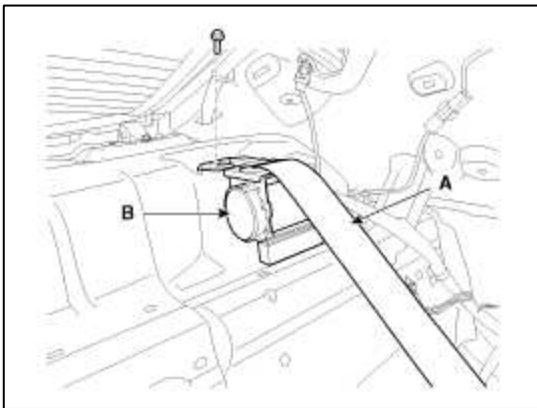

11. Installation is the reverse of removal.

NOTE

- Make sure the connector is plugged in properly.
- Replace any damaged clips.

Rear Seat Belt Buckle Replacement


1. Remove the rear seat cushion assembly.

(Refer to the BD group – “Rear Seat”)

2. After loosening the mounting bolt, then remove the rear seat belt buckle (A).

Tightening torque :

39.2 ~ 53.9 N.m (4.0 ~ 5.5 kgf.m, 28.9 ~ 39.8 lb-ft)

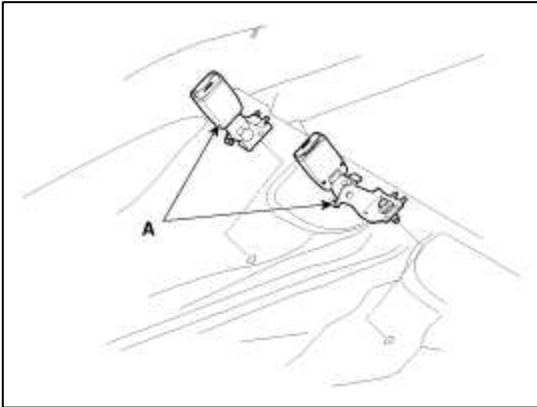

3. Installation is the reverse of removal.

GENESIS COUPE(BK) > 2013 > G 3.8 GDI > Body Electrical System

Body Electrical System > General Information > General Information

General Troubleshooting Information

Before Troubleshooting

1. Check applicable fuses in the appropriate fuse/relay box.
2. Check the battery for damage, state of charge, and clean and tight connections.

(Refer to the Engine Electrical System - Battery)


NOTE

- Do not quick-charge a battery unless the battery ground cable has been disconnected, otherwise you will damage the alternator diodes.
- Do not attempt to crank the engine with the battery ground cable loosely connected or you will severely damage the wiring.


3. Check the alternator belt tension.

Handling Connectors

1. Make sure the connectors are clean and have no loose wire terminals.
2. Make sure multiple cavity connectors are packed with grease (except watertight connectors).
3. All connectors have push-down release type locks (A).

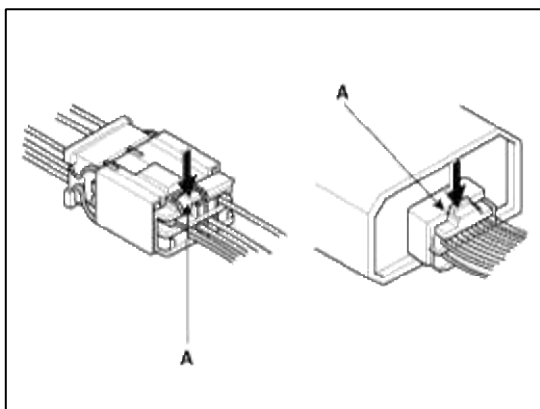


4. Some connectors have a clip on their side used to attach them to a mount bracket on the body or on another component. This clip has a pull type lock.
5. Some mounted connectors cannot be disconnected unless you first release the lock and remove the connector from its mount bracket (A).

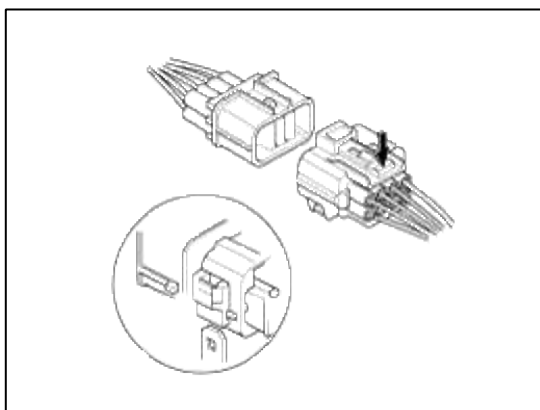


6. Never try to disconnect connectors by pulling on their wires; pull on the connector halves instead.


7. Always reinstall plastic covers.

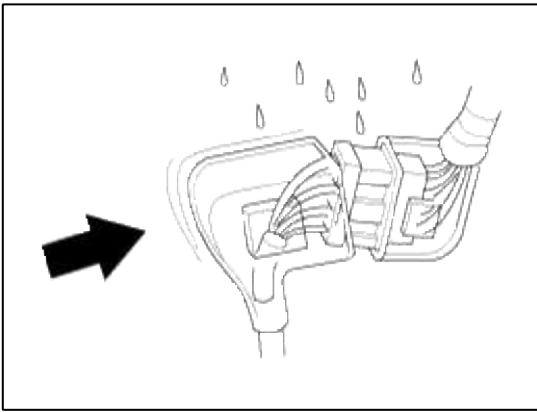


8. Before connecting connectors, make sure the terminals (A) are in place and not bent.

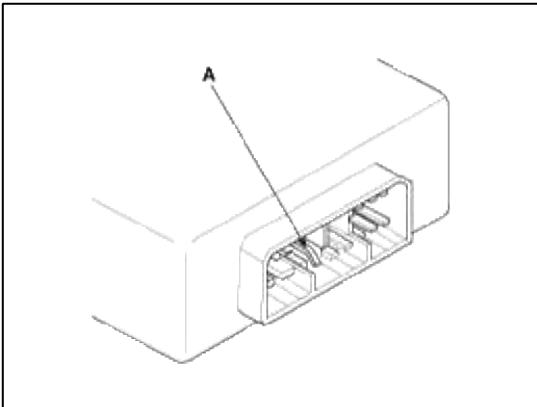

9. Check for loose retainer (A) and rubber seals (B).

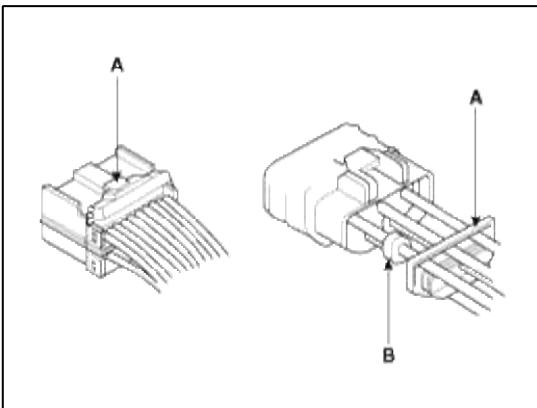


10. The backs of some connectors are packed with grease. Add grease if necessary. If the grease (A) is contaminated, replace it.

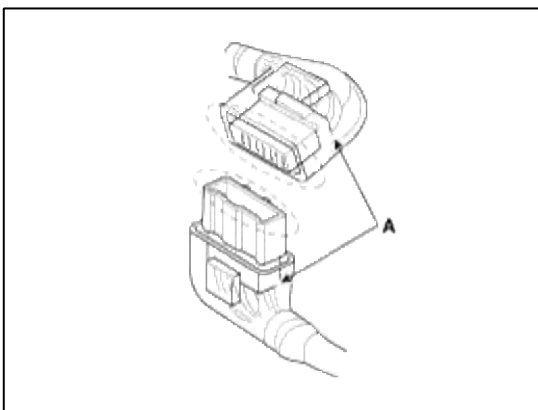


11. Insert the connector all the way and make sure it is securely locked.

12. Position wires so that the open end of the cover faces down.

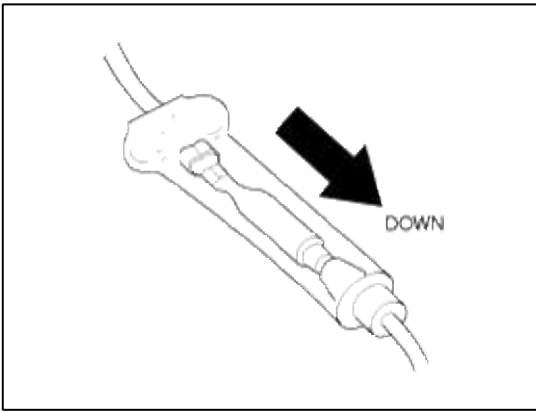


Handling Wires And Harnesses

1. Secure wires and wire harnesses to the frame with their respective wire ties at the designated locations.
2. Remove clips carefully; don't damage their locks (A).

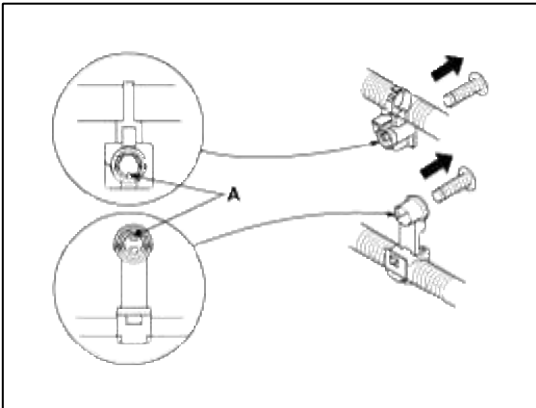


3. Slip pliers (A) under the clip base and through the hole at an angle, and then squeeze the expansion tabs to release the clip.

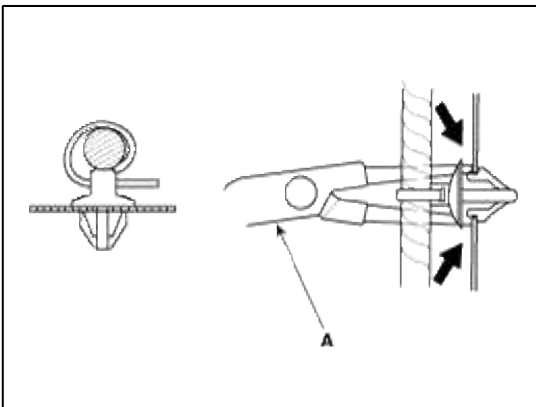


4. After installing harness clips, make sure the harness doesn't interfere with any moving parts.
5. Keep wire harnesses away from exhaust pipes and other hot parts, from sharp edges of brackets and holes, and from exposed screws and bolts.

6. Seat grommets in their grooves properly (A). Do not leave grommets distorted (B).

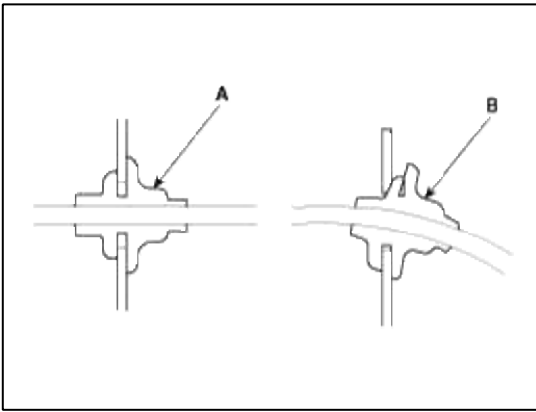


Testing And Repairs

1. Do not use wires or harnesses with broken insulation.
Replace them or repair them by wrapping the break with electrical tape.
2. After installing parts, make sure that no wires are pinched under them.
3. When using electrical test equipment, follow the manufacturer's instructions and those described in this manual.
4. If possible, insert the remover tool from the wire side (except waterproof connector).

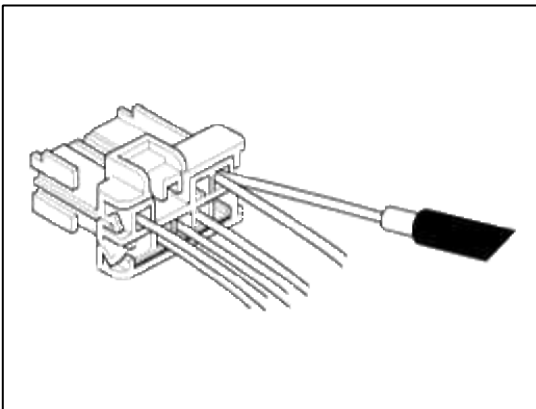

5. Use a remover tool with a tapered tip.

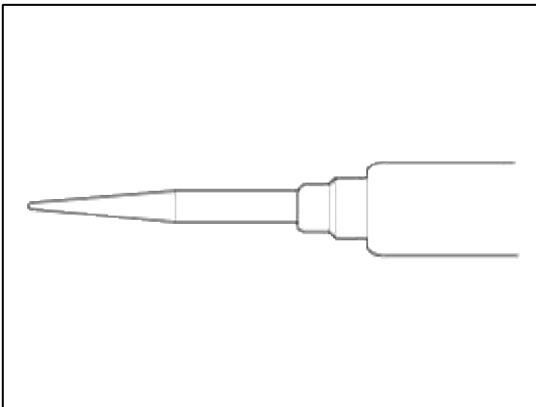

Refer to the user's guide in the wiring repair kit II (Pub. No. : 0K000 003 A05)

Five-step Troubleshooting

1. Verify the complaint
Turn on all the components in the problem circuit to verify the customer complaint. Note the symptoms. Do not begin disassembly or testing until you have narrowed down the problem area.
2. Analyze the schematic
Look up the schematic for the problem circuit.
Determine how the circuit is supposed to work by tracing the current paths from the power feed through the circuit components to ground. If several circuits fail at the same time, the fuse or ground is a likely cause.
Based on the symptoms and your understanding of the circuit operation, identify one or more possible causes of the problem.

3. Isolate the problem by testing the circuit.

Make circuit tests to check the diagnosis you made in step 2. Keep in mind that a logical, simple procedure is the key to efficient troubleshooting.

Test for the most likely cause of failure first. Try to make tests at points that are easily accessible.

4. Fix the problem

Once the specific problem is identified, make the repair. Be sure to use proper tools and safe procedures.

5. Make sure the circuit works

Turn on all components in the repaired circuit in all modes to make sure you've fixed the entire problem. If the problem was a blown fuse, be sure to test all of the circuits on the fuse. Make sure no new problems turn up and the original problem does not recur.

Battery Reset

Description

When reconnecting the battery cable after disconnecting, recharging battery after discharged or installing the memory fuse located on the driver's side panel after removing, be sure to reset systems mentioned on the below table.

In addition, when replacing or reinstalling their fuses after removing, they should be reset according to the below table. Please refer to the below table when servicing.

SYSTEM	RESETTING
Auto up/down window	Whenever the battery is disconnected, discharged or the related fuse is replaced or reinstalled, reset the Auto up/down window system according to the procedure below. 1) Turn the ignition switch to the ON position. 2) Pull up the power window switch in order that the window can close completely, and then keep pulling up the power switch for about 1 second.
Sunroof	Whenever the vehicle battery is disconnected or discharged, or you use the emergency handle to operate the sunroof, you have to reset your sunroof system as follows : 1. Turn the ignition key to the ON position and then close the sunroof completely. 2. Release the sunroof control lever. 3. Press and hold the CLOSE button for more than 10 seconds until the sunroof closed and it has moved slightly. 4. Release the sunroof control lever. 5. Press and hold the CLOSE button once again within 5 seconds until the sunroof do as follows; A. Tilt → Slide Open → Slide Close Then release the lever. 6. Reset procedure of panorama system is finished.
Trip computer	When the battery is disconnected and reconnected, the set functions of the trip computer become initialized. So, you need to explain this information to the customer.
Clock	When the battery is disconnected and reconnected, the clock becomes initialized. So, the clock should be reset.
Audio	When the battery is disconnected and reconnected, the customer's radio stations become initialized. So, you need to record the customer's radio stations prior to service, and after service, set the customer's radio stations into the audio.

Body Electrical System > Audio > Specifications


Specification

Audio

Item		Specification	
Model		RADIO/CD/MP3/XM	RADIO/CDC/MP3/XM
Power supply		DC 14.4 V	DC 14.4 V
Rated output		Max. 43 W x 4	Max. 3.2 Vrms
Antenna		80 PF 75 Ω	
Tuning type		PLL synthesized tuning	
Other		Internal Amplifier	External Amplifier
Frequency range / Channel space	FM	87.5 ~ 107.9 MHz/200 KHz	
	AM	NAS, CAN : 530 ~ 1710 KHz/9 KHz, GUAM : 531~1701 KHz/9 KHz	

Body Electrical System > Audio > Components and Components Location

Component Location

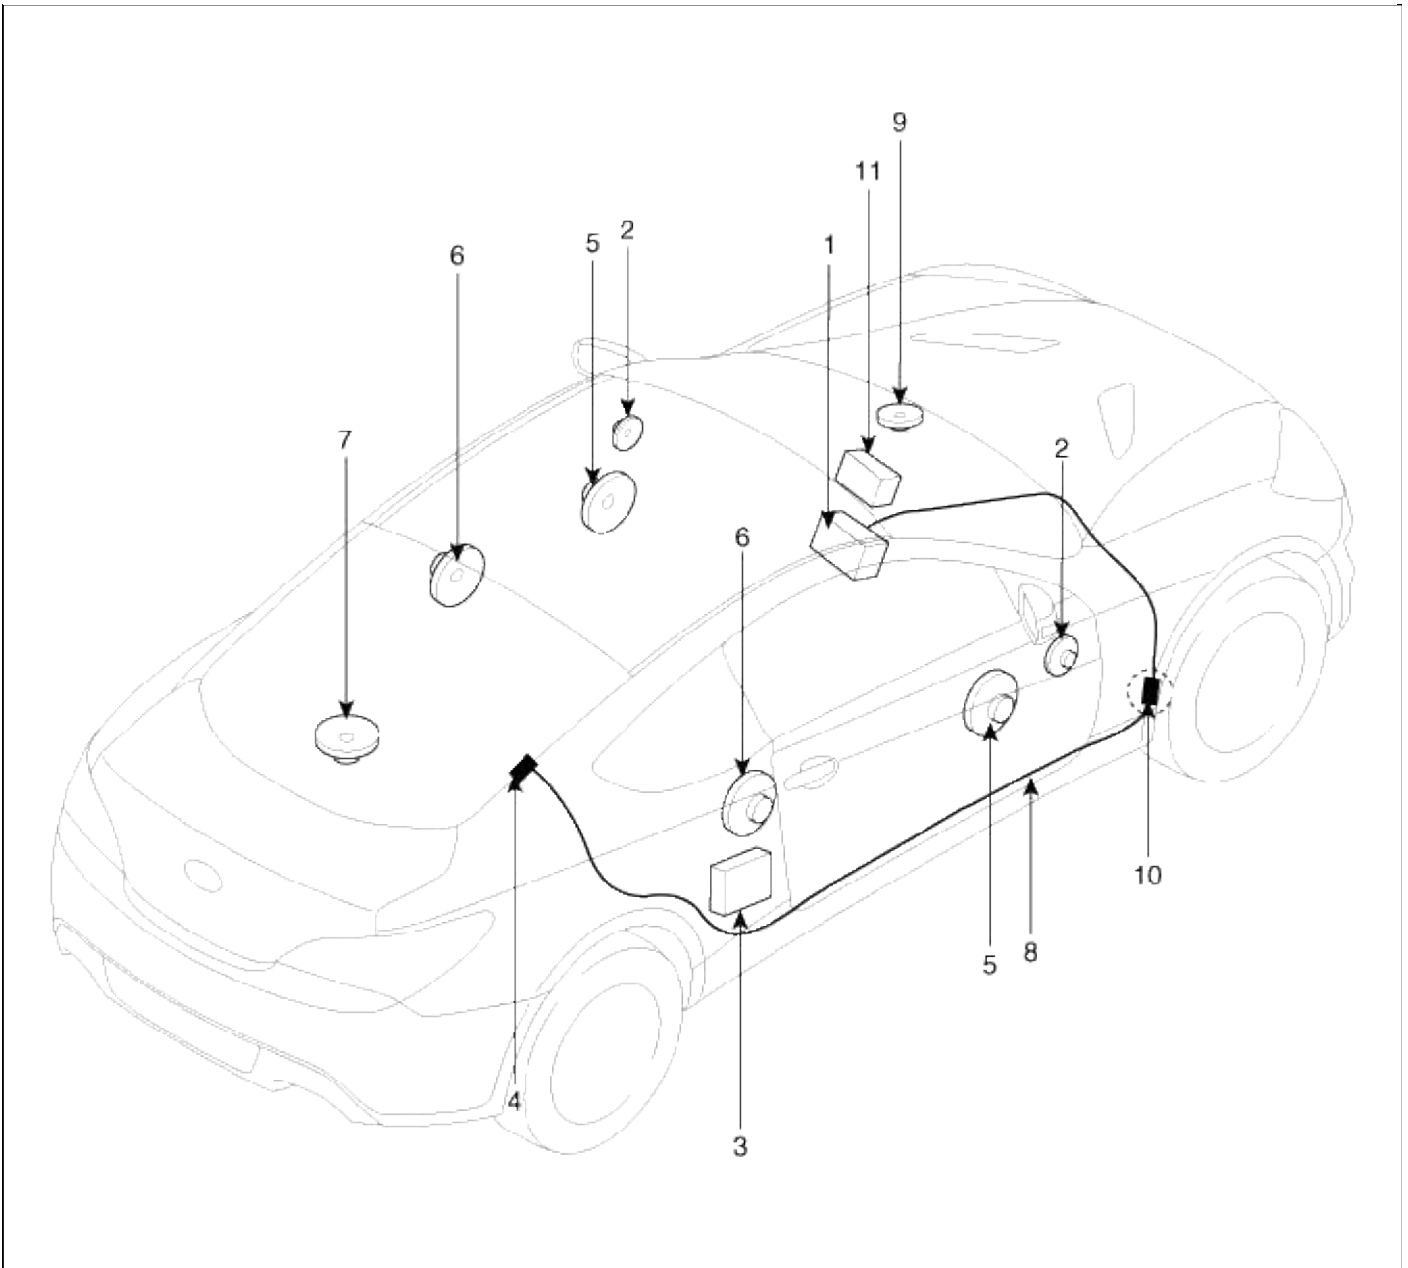


1. Audio unit	7. Woofer speaker
2. Tweeter speaker	8. Antenna feeder cable
3. External amp	9. Crash pad center speaker
4. Glass antenna	10. Feeder cable joint connector
5. Front door speaker	11. Audio monitor
6. Rear speaker	12. Aux jack

Body Electrical System > Audio > Audio Unit > Components and Components Location



Components

[RADIO/CD/MP3 - Internal AMP]

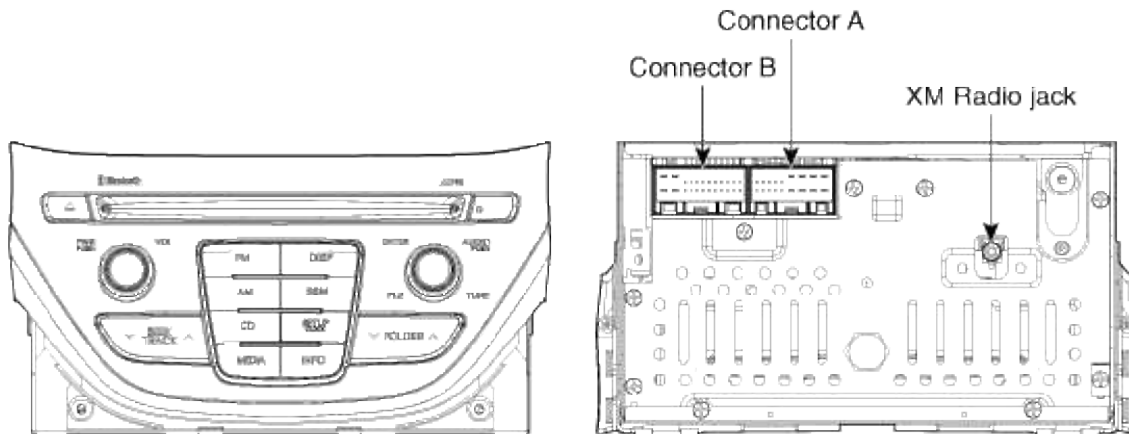


Pin No.	Connector A	Connector B
1	Speaker RL (+)	CAN High
2	Speaker FL (+)	-
3	Speaker FR (+)	Temp
4	Speaker RR (+)	Steering remote
5	-	-
6	-	USB D (+)
7	-	USB/iPod VDD
8	Illumination (+)	AUX R Input
9	-	AUX GND
10	Speaker RL (-)	MIC (+) (Bluetooth)
11	Speaker FL (-)	ACC
12	Speaker FR (-)	B (+)
13	Speaker RR (-)	CAN Low
14	-	-
15	-	-
16	External keyboard	Vehicle speed
17	Illumination (-)	Steering remote GND
18	Remote antenna	USB D (-)
19		USB / iPod GND
20		AUX detect
21		AUX L Input
22		MIC (-) (Bluetooth)
23		-
24		Power GND

[RADIO/CD/MP3 - External AMP]

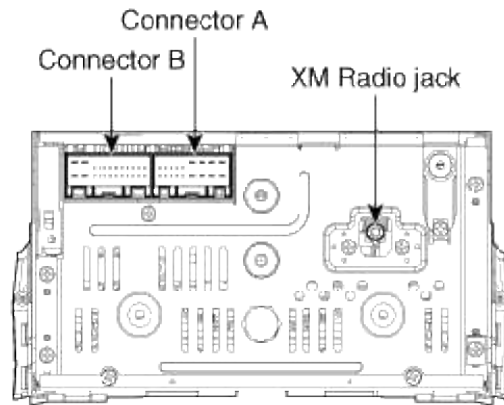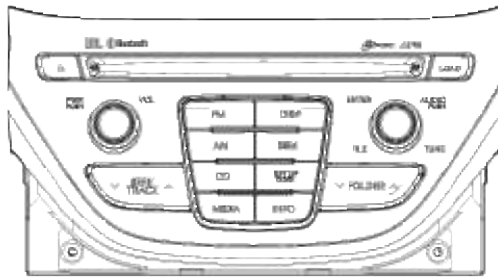


Pin No.	Connector A	Connector B
1	-	CAN High
2	-	-
3	-	Temp
4	-	Steering remote
5	SPDIF GND	-
6	SPDIF DN	USB D (+)
7	-	USB / iPod VDD
8	Illumination (+)	AUX R Input
9	-	AUX GND
10	-	MIC + (Bluetooth)
11	-	ACC
12	-	B+
13	-	CAN Low
14	-	-
15	SPDIF DP	-
16	External keyboard	Vehicle speed
17	Illumination (-)	Steering remote GND
18	Remote antenna	USB D (-)
19		USB / iPod GND
20		AUX DETECT
21		AUX L Input
22		MIC - (Bluetooth)
23		-
24		Power GND

[Audio Monitor]

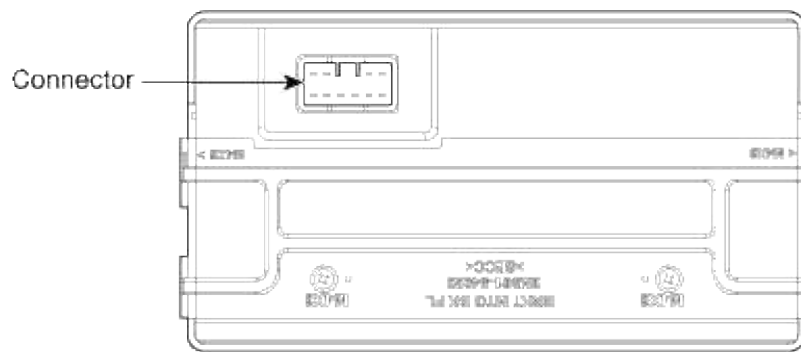


Connector	No.	Name	No.	Name
	1	ILL (-)	6	-
	2	-	7	CAN -
	3	-	8	CAN +
	4	Power ground	9	ACC
	5	IL_ (+)	10	Battery

[External Keyboard]

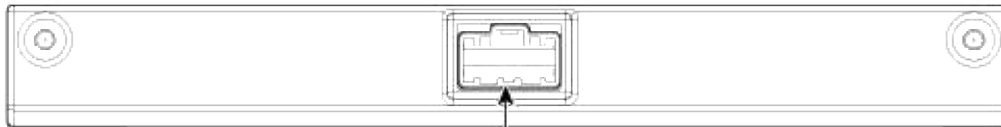


Connector

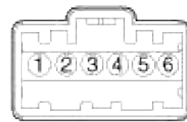

Connector

Pin No.	Description
1	Power GND
2	External keyboard
3	-
4	-
5	Illumination (+)
6	Illumination (-)

[External Amplifier]

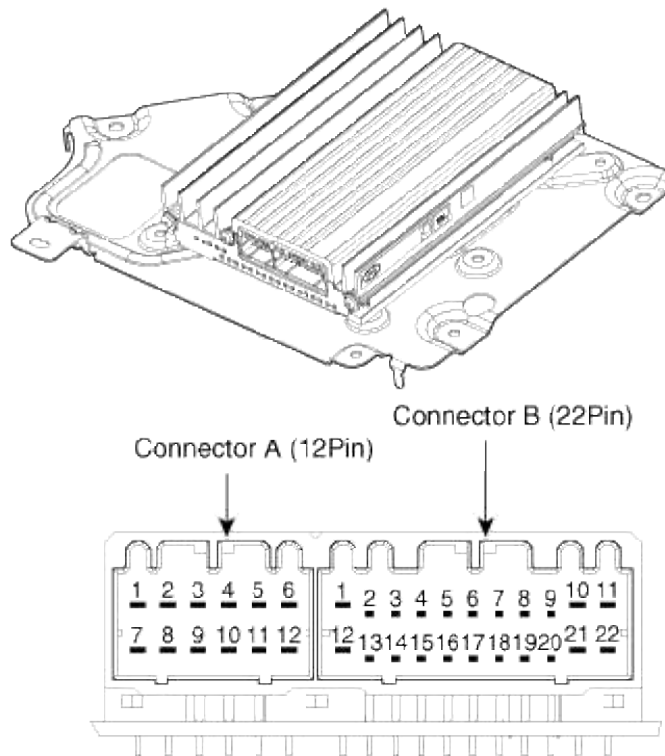

No.	Connector A	Connector B
1	Front left door(+)	Front center(+)
2	Front Right door(+)	-
3	Rear left door(+)	-
4	Rear Right door(+)	-
5	Subwoofer 2(+)	NAVI(+)
6	Subwoofer 1(+)	ACC
7	Front left door(-)	CAN (-)
8	Front Right door(-)	CAN (+)
9	Rear left door(-)	-
10	Rear Right door(-)	Battery
11	Subwoofer 2(-)	Battery
12	Subwoofer 1(-)	Front center(-)
13		-
14		-
15		-
16		NAVI(-)
17		SPDIF Signal
18		SPDIF (-)
19		SPDIF (+)
20		-
21		GND
22		GND


Body Electrical System > Audio > Audio Unit > Repair procedures

Removal


Audio Head Unit

1. Disconnect the negative (-) battery terminal.


2. Remove the console upper cover(A).

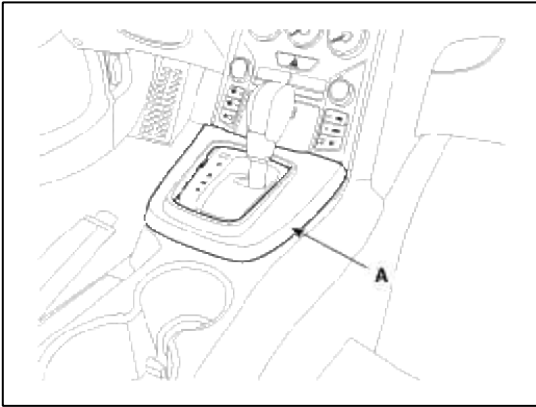


3. Remove the center fascia lower panel(A).
(Refer to the BD group - "Crash pad")

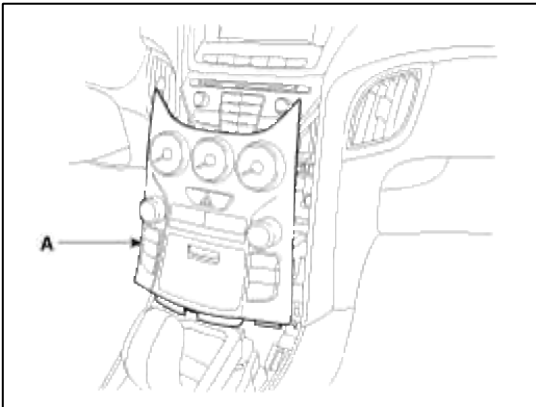


4. Remove the connectors and cables (A).

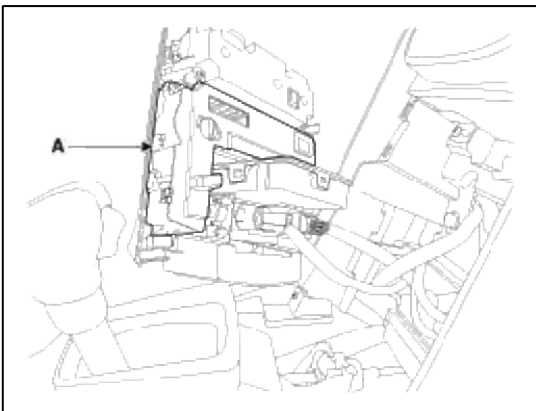

5. Remove the mounting screws then remove the audio head unit(A).

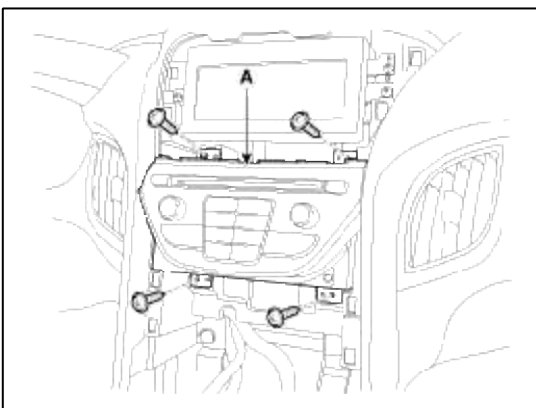


6. Remove the connectors and cable(A).

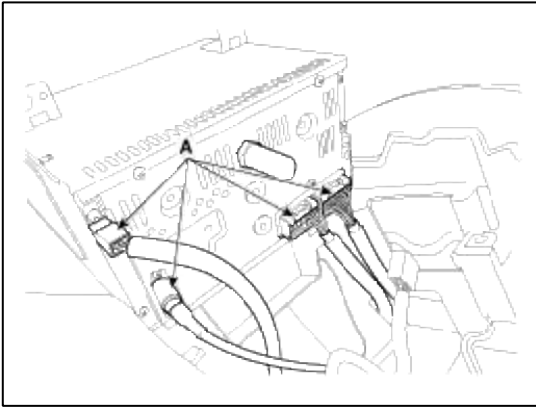


Audio Monitor


1. Disconnect the negative (-) battery terminal.
2. Remove the center fascia upper panel (A).
(Refer to the BD group - "Crash pad")

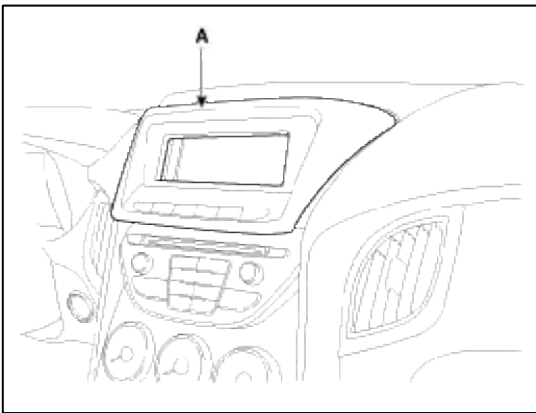


3. Disconnect the connector (A) from external keyboard.

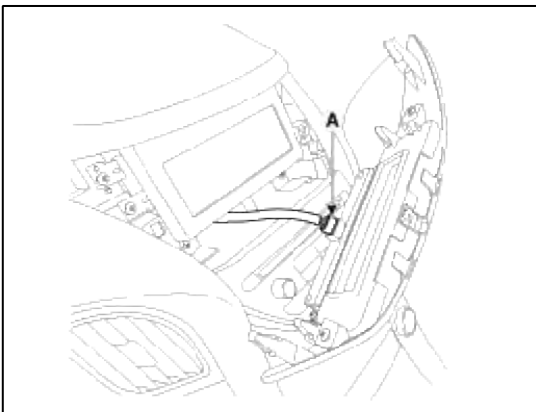


4. Remove the external keyboard (A) after loosening the mounting screws.

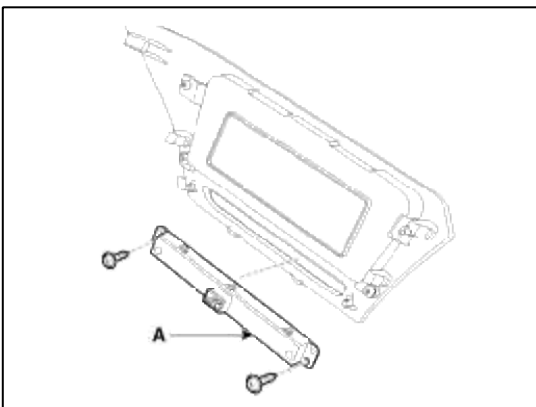

5. Remove the audio monitor (A) after loosening the mounting screws.

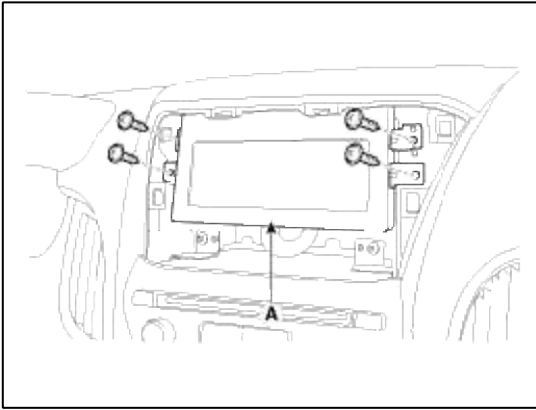


6. Disconnect the connector (A) from audio monitor.

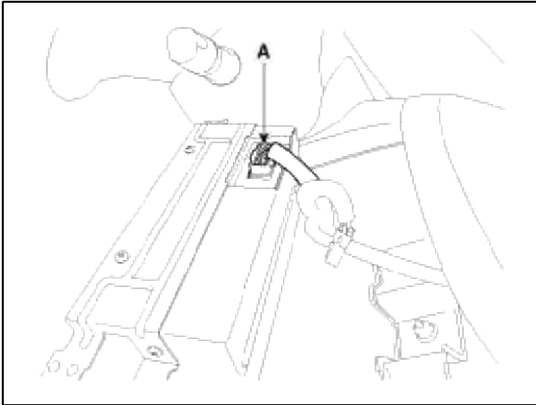


Disassembly


1. Remove the front panel (A) after loosening the mounting screws.

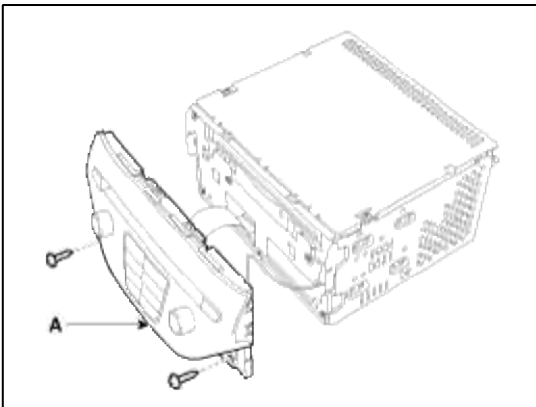

2. Remove the upper cover (A) after loosening the mounting screws.

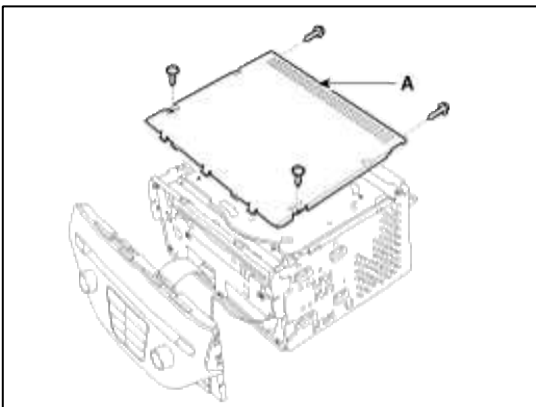

3. Remove the CD deck (A) after loosening the mounting screws.

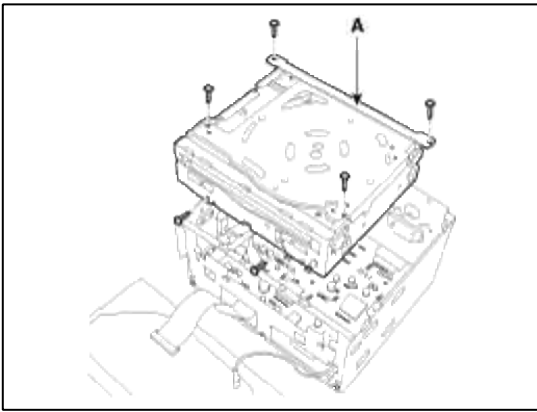

Reassembly

1. Reassemble the deck to the audio unit.
2. Reassemble the upper cover.
3. Reassemble the front panel.
4. Reassemble the audio brackets.

NOTE

Make sure the film connector and cable jack are plugged in properly.

Installation

Audio Head Unit

1. Connect the audio unit connectors and cables.
2. Install the audio unit.
3. Install the center fascia lower panel.
4. Install the console upper cover.
5. Check the audio system.

NOTE

Make sure the audio head unit connectors are plugged in properly and the antenna cable is connected properly.

Audio Monitor

1. Install the audio monitor.
2. Install the upper cover and connect the external keyboard connector.
3. Install the center fascia upper panel.


Body Electrical System > Audio > Speakers > Repair procedures

Inspection


1. Troubleshooting for Speaker

(1) Basic inspection of speaker

Inspect the sound from speaker after verifying that the speaker mounting screws is removed and the wiring connector is connected precisely to remove vibration transmitted from body trims and surrounding parts.

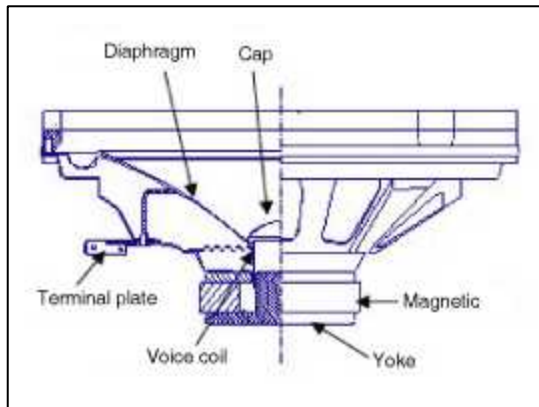

(2) Case Troubleshooting

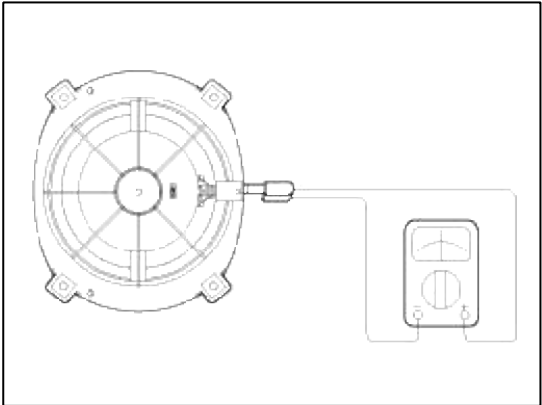No.	Case	Inspection/Remedy
1	Trembling sound	<ol style="list-style-type: none"> 1. Before replacing the speaker, inspect that the mounting screw is installed normally. 2. After re-installing the speaker, verify that no trembling sound is heard. 3. When hearing a trembling sound again, replace the speaker with new one.
2	Noise	<ol style="list-style-type: none"> 1. Check if the wiring connector is connected normally. If not, reconnect the wiring connector. 2. In case of radio static, check if there is a noise from CD. 3. When a noise is heard on turning radio and CD on, replace the speaker with new one. <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> <p style="text-align: center; background-color: #008000; color: white; margin: 0;">NOTE</p> <p>In case there is only radio static, this causes from poor radio reception. Thus the speaker needs no repair and replacement.</p> </div>
3	Poor working	<p>Inspection of the wiring connection between the battery and the speaker</p> <ol style="list-style-type: none"> 1. Before replacing the speaker, inspect the wiring connection between the battery and the speaker is normal. 2. Check the supplying power to the speaker and the resistance, then inspect the sound quality. <ul style="list-style-type: none"> ■ Specified impedance : 2 ~ 4Ω <div style="text-align: center; margin: 10px 0;">  <p>The diagram shows a circular speaker with a terminal on its side. A wire connects this terminal to the red probe of a multimeter. The multimeter is shown in a simplified schematic view with its display and control knobs.</p> </div> <ol style="list-style-type: none"> 3. If the speaker works poorly, replace it with new one.

CAUTION


During handling of speaker

- During dealing of speaker
- Do not damage the speaker with impact as like a drop and a throw.
- Be careful not to spill water and oil over the speaker.
- Caution during handling of speaker because the material of diaphragm is paper which is easy to be torn by impact and external force.
- Modifying audio system can damage the speakers.
- And, in this case the speakers are not covered by the manufacturer's warranty.

Removal


Front Speaker

1. Remove the front door trim panel.
(Refer to the Body group - "Front door")
2. Remove the front speaker (A) after loosening 4 rivets.

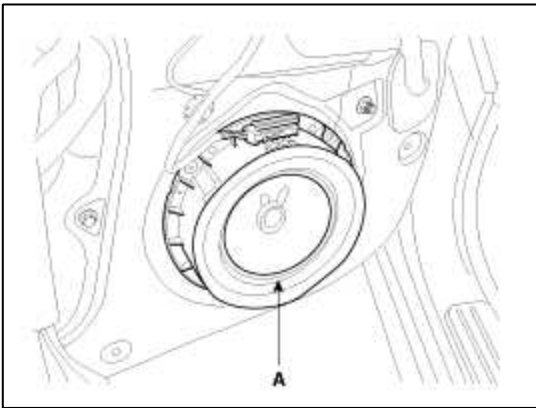


Rear Speaker

1. Remove the rear seat.
(Refer to the Body group - "Rear seat")
2. Remove the rear side trim and then remove the rear speaker (A) after removing 4 bolts.

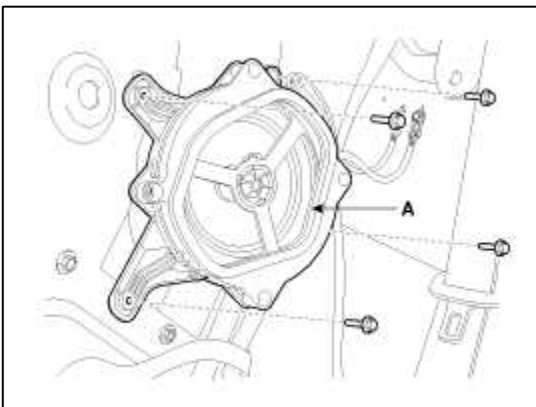


Crash pad center speaker

1. Remove the center speaker cover(A).

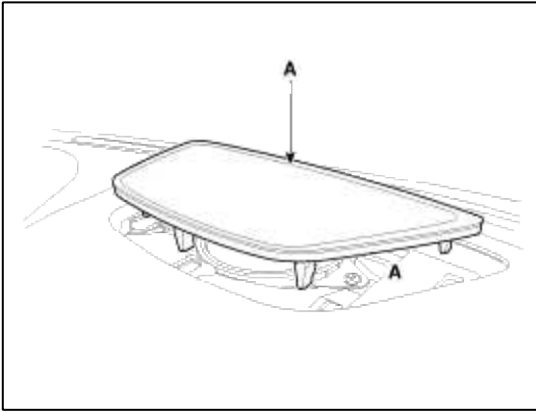


2. Remove the center speaker(A) after loosening the mounting screws.

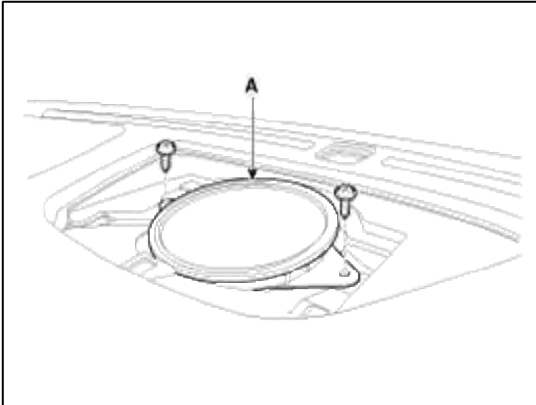

Tweeter Speaker


1. Remove the front door trim(A).
(Refer to the Body group - "Front door")
2. Remove the tweeter speaker(A) from the front door trim after disconnecting the connector.

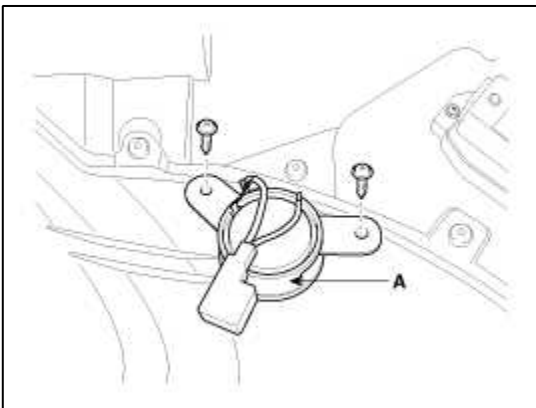

Woofer Speaker


1. Fold the rear seat forward.
(Refer to the Body group - "Rear seat")
2. Remove the rear package tray.
(Refer to the Body group - "Interior trim")

3. Remove the woofer speaker (A) after removing 4 bolts.

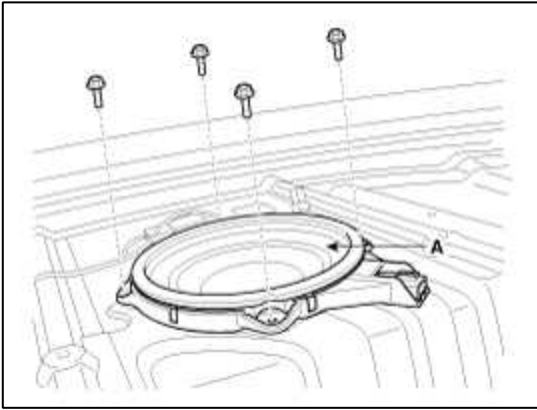


External Amp

1. Remove the rear seat.
(Refer to BD group - "Rear seat")
2. Remove the rear right side trim.
3. Remove the external amplifier connector(A) from the rear right quarter panel.

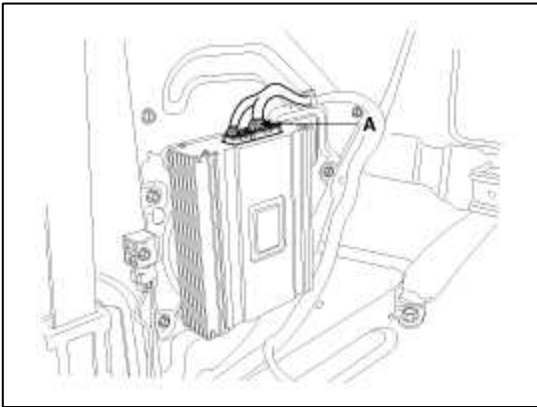

4. Remove the external amplifier(A) after loosening the mounting bolts.

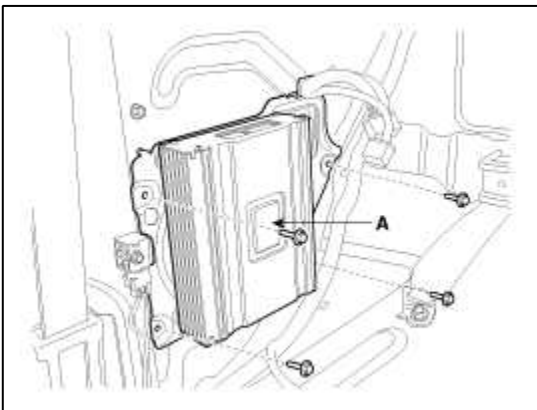

Installation

Front Speaker

1. Install the front speaker with rivets.
2. Install the front door trim.

Rear Speaker

1. Install the rear speaker.
2. Install the rear side trim.
3. Install the rear seat.

Crash pad center speaker

1. Install the center speaker.
2. Install the center speaker cover.

Tweeter Speaker

1. Install the tweeter speaker after connecting the tweeter speaker connector.
2. Install the front door trim.

Woofer Speaker

1. Install the woofer speaker after connecting the connector.
2. Install the rear package tray and rear seat assembly.

External Amp


1. Install the external amplifier after connecting the connector.
2. Install the rear right side trim.

Body Electrical System > Audio > Antenna > Repair procedures


Inspection

Glass Antenna Test

1. Wrap aluminum foil (A) around the tip of the tester probe (B) as shown.

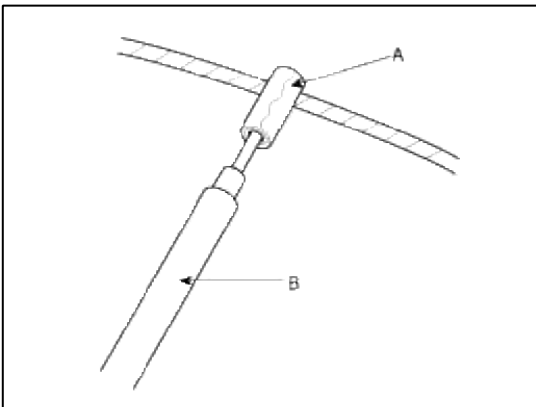

2. Touch one tester probe to the glass antenna terminal (A) and move the other tester probe along the antenna wires to check that continuity exists.

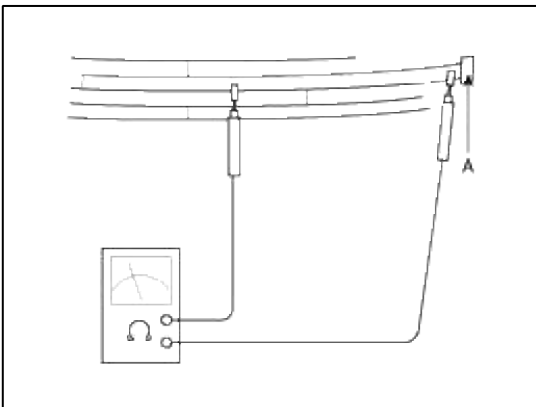


Glass Antenna Repair

NOTE

To make an effective repair, the broken section must be no longer than one inch.


1. Lightly rub the area around the broken section (A) with fine steel wool, and then clean it with alcohol.

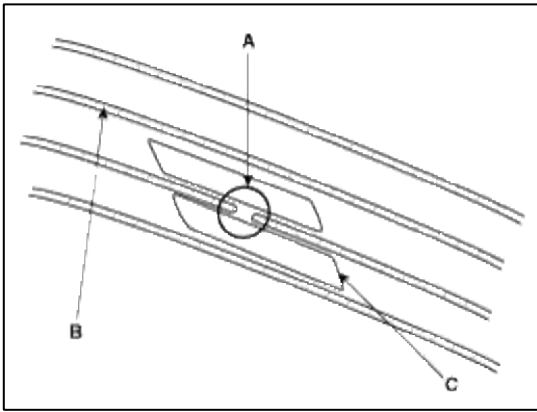

2. Carefully mask above and below the broken portion of the glass antenna wire (B) with cellophane tape (C).
3. Using a small brush, apply a heavy coat of silver conductive paint (A) extending about 1/8" on both sides of the break. Allow 30 minutes to dry.

NOTE


Thoroughly mix the paint before use.

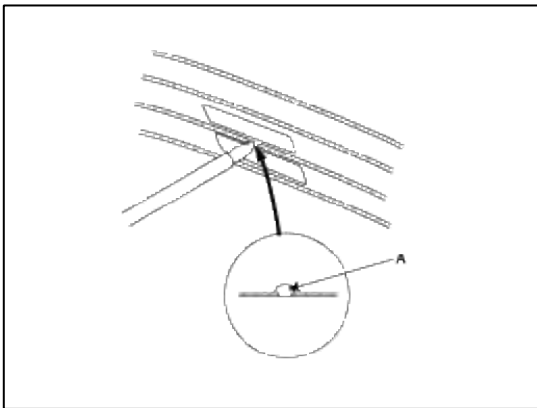

4. Check for continuity in the repaired wire.
5. Apply a second coat of paint in the same way. Let it dry three hours before removing the tape.

Glass Antenna Circuit Inspection


1. Remove the right side rear quarter trim.
Then disconnect the antenna feeder cable(A) from the glass antenna amp.

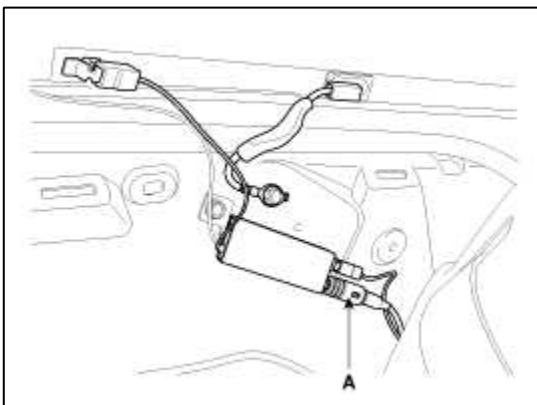

2. Turn the radio ON.


Measure the voltage between terminal 2 of the harness side feeder cable(A) and body ground(B).

OK : approximately 12V (ACC+)

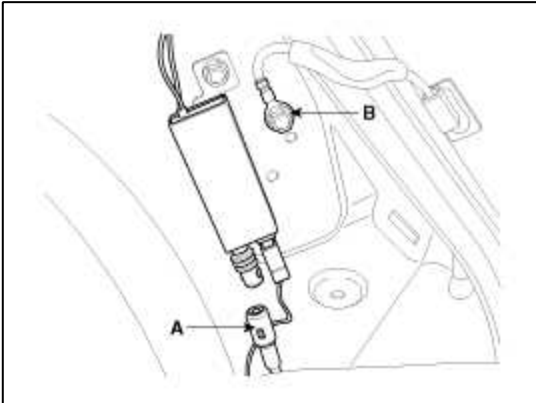

3. Disconnect the 2P connector of radio wiring from the glass antenna amp.

4. Check for continuity between terminals of harness side connector(B) and antenna grid terminals(A).

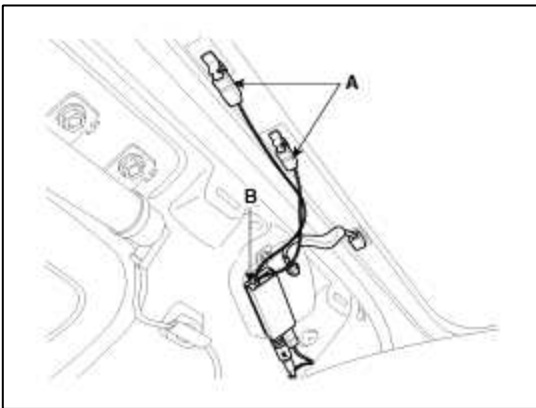

5. Check the grid lines for continuity.


6. When a poor radio reception is not repaired through the above inspection methods, replace the amp.

If the radio reception is still poor, check the radio cable for short and radio head unit for failure.


Antenna Cable

1. Remove the antenna jack from the audio unit and antenna.

2. Check for continuity between the center poles of antenna cable.

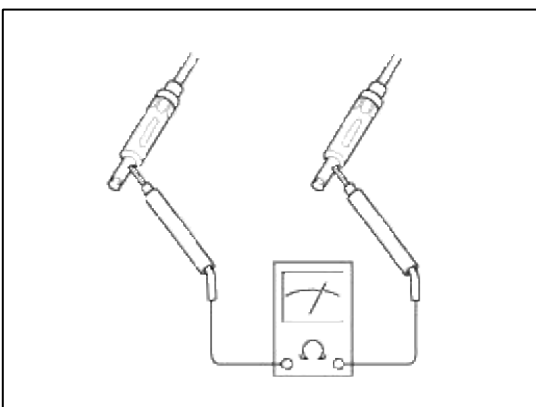


3. Check for continuity between the outer poles of antenna cable. There should be continuity.

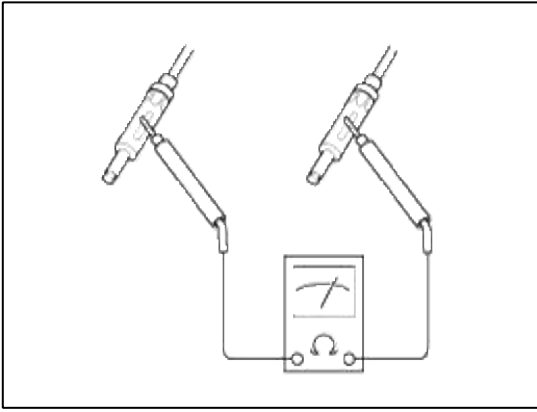

4. If there is no continuity, replace the antenna cable.




5. Check for continuity between the center pole (A) and outer pole (B) of antenna cable. There should be no continuity.

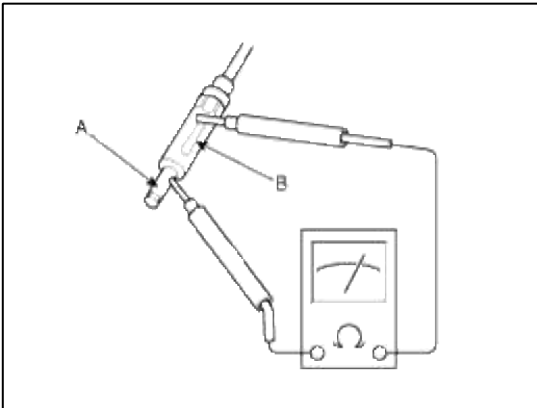

6. If there is continuity, replace the antenna cable.

Body Electrical System > Audio > Audio Remote Control > Schematic Diagrams

Circuit Diagram

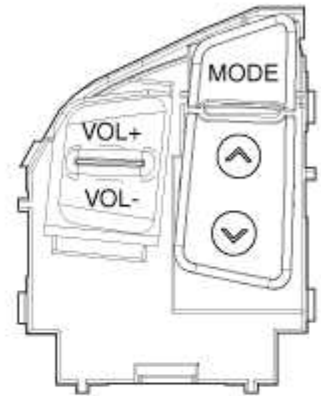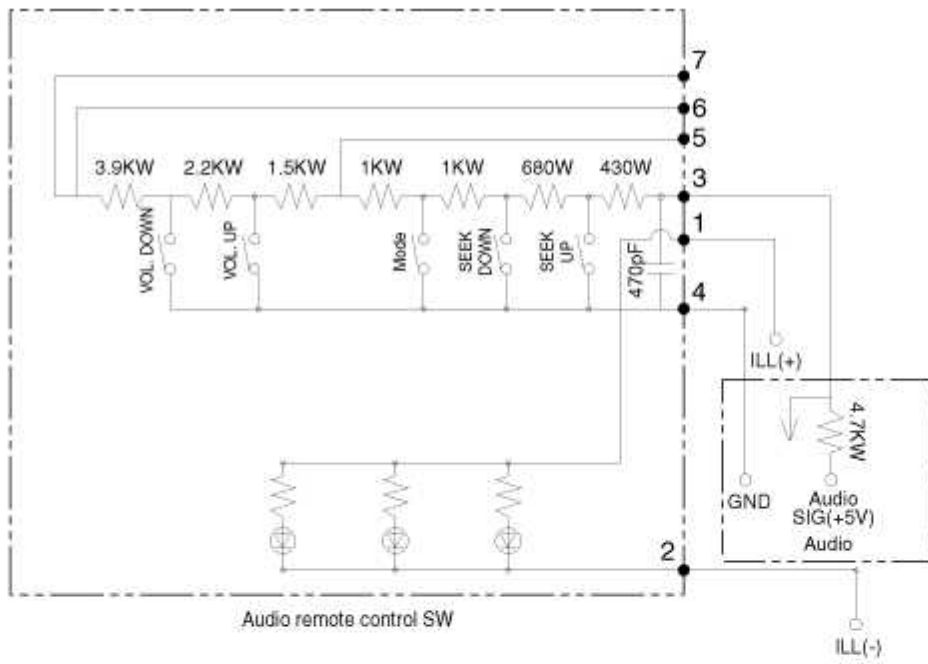


Pin No.	Name
1	ILL (+)
2	ILL (-)
3	Audio (+)
4	Audio (-)
5	Mute Out
6	-
7	-
8	-

Body Electrical System > Audio > Audio Remote Control > Repair procedures

Inspection


1. Check the audio remote control switch(A) for resistance between No.3 and No.4 terminals in each switch position.

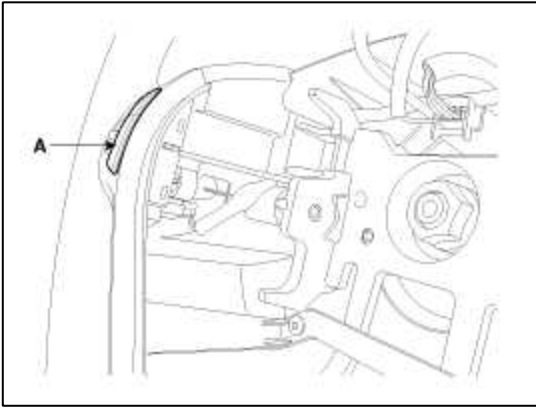


Switch	Connector terminal	Resistance ($\pm 5\%$)
Volume Down	3 - 4	6.81 k Ω
Volume Up	3 - 4	4.61 k Ω
Seek Up	3 - 4	430 Ω
Seek Down	3 - 4	1.11 k Ω
Mode	3 - 4	2.11 k Ω

Removal

1. Disconnect the negative (-) battery terminal.
2. Remove the driver airbag module.
(Refer to the airbag group)
3. Remove the steering wheel.
(Refer to ST group - "Steering column & shaft")
4. Remove the steering wheel cover after loosening the 4 screws.

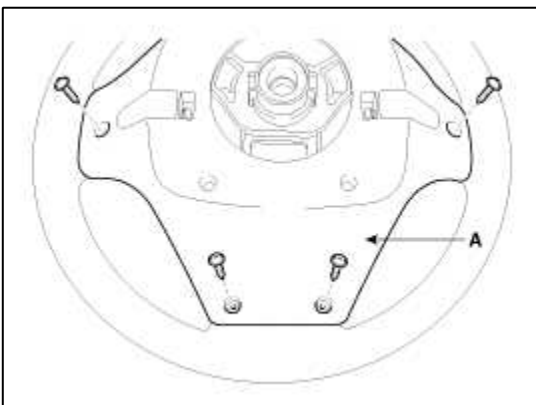

5. Remove the audio remote control switch (A) after removing the steering wheel remote control switch connector and 2 screws.

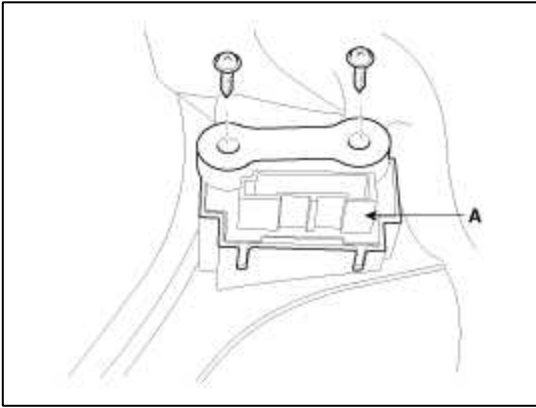

Installation

1. Reassemble the steering wheel remote control switch after connecting the connector.
2. Reassemble the steering wheel.
3. Reassemble the driver airbag module.

NOTE


Make sure the audio remote control switch and the airbag module connectors are plugged in properly.

Body Electrical System > Audio > AUX(Auxiliary) Jack > Description and Operation

Description

The multimedia jack on the console upper cover is for customers who like to listen to external portable music players like the MP3, iPod and etc., through the vehicle's sound system when it is linked to this jack. The customer has this added option.


In case of distortions from media connected to the AUX source, the audio unit may not be defect but the output level of the used media does not match the specification of the AUX input.

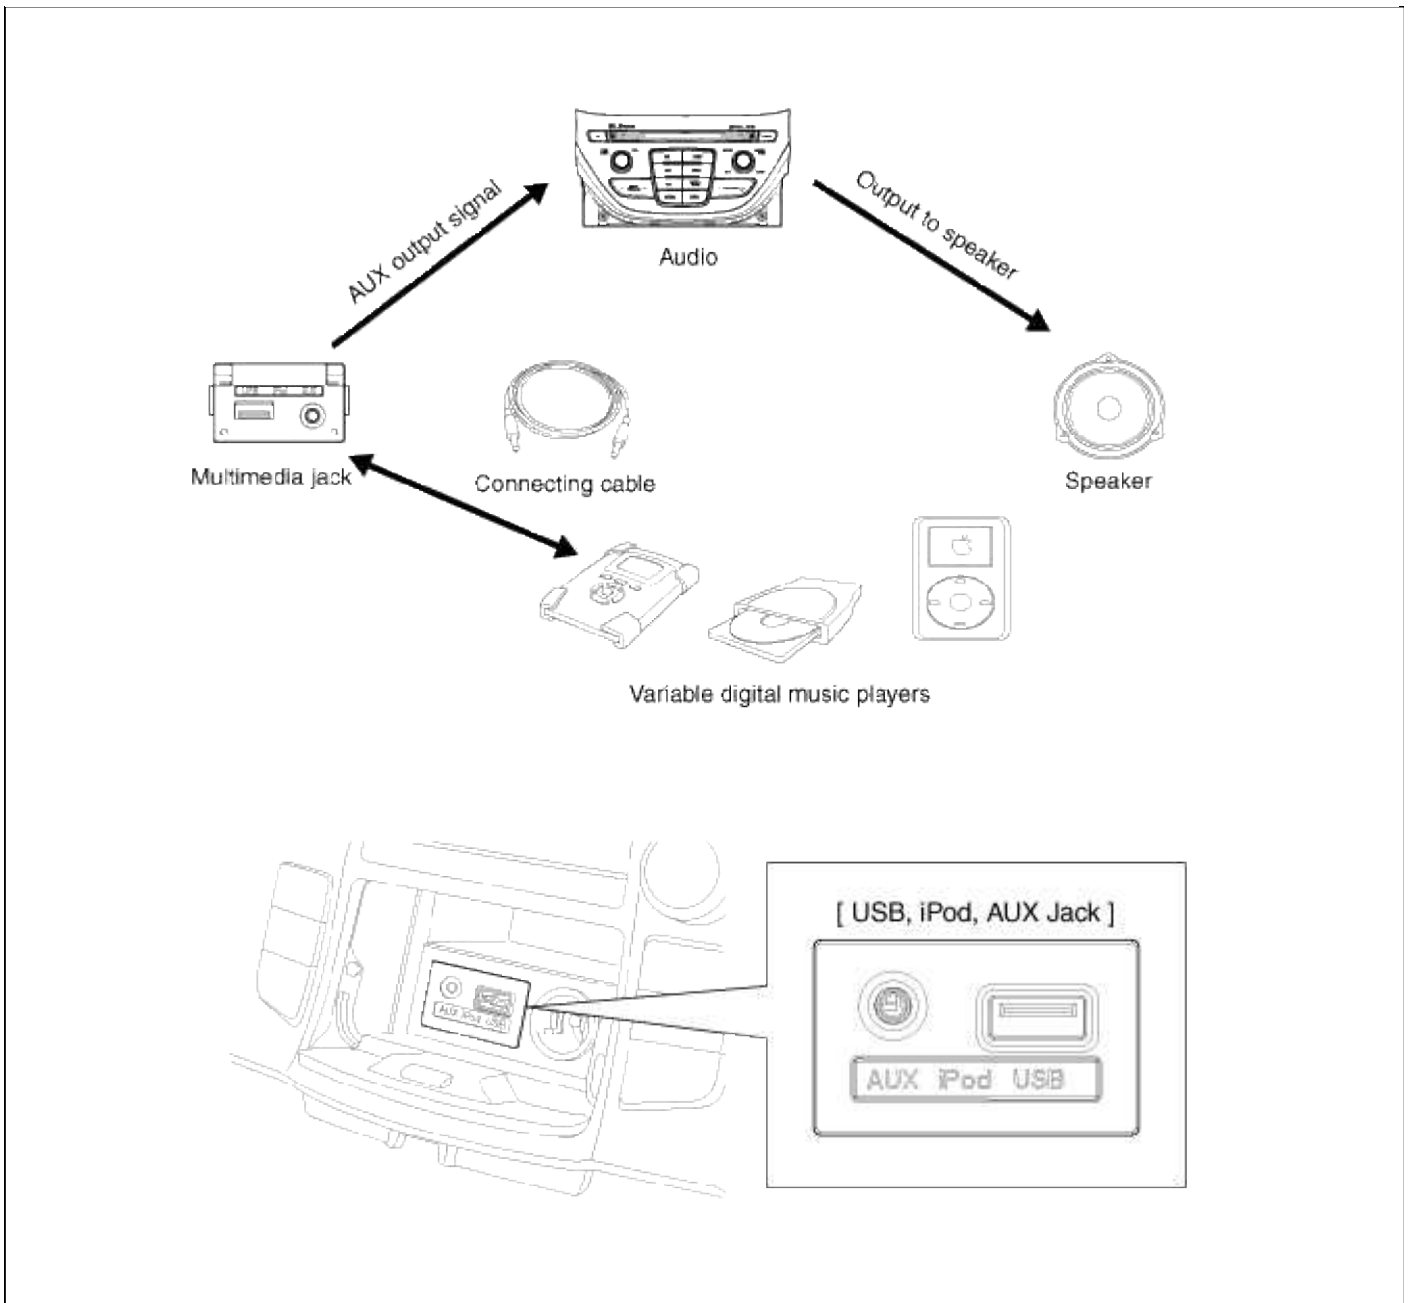


Body Electrical System > Audio > AUX(Auxiliary) Jack > Repair procedures

Removal

1. Disconnect the negative (-) battery terminal.
2. Remove the center fascia lower panner (A).
(Refer to BD group - "Crash pad")

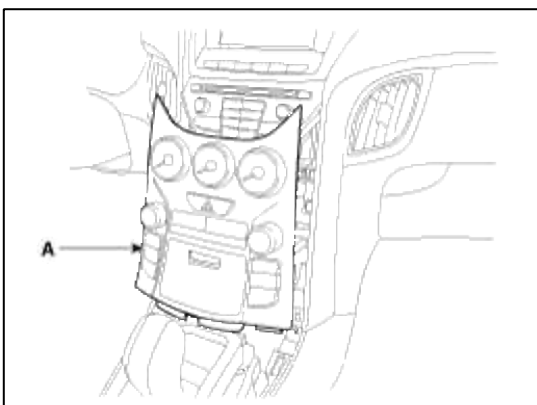

3. Remove the multimedia jack(A) from the center fascia lower panel after disconnecting the connector.

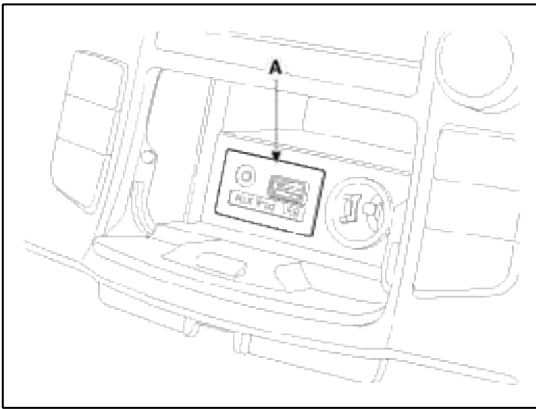

Installation

1. Install the multimedia jack.
2. Connect the AUX jack connector.
3. Install the center fascia lower panel.

NOTE

Make sure the Aux connector and the console connectors are plugged in properly.

Body Electrical System > Audio > Troubleshooting

Troubleshooting

Customer Complaint Analysis Check Sheet

TROUBLE IN	<input type="checkbox"/> ALL <input type="checkbox"/> AM <input type="checkbox"/> FM <input type="checkbox"/> CD <input type="checkbox"/> MP3 <input type="checkbox"/> CD changer <input type="checkbox"/> AMP <input type="checkbox"/> Others
TROUBLE OCCURS	<input type="checkbox"/> Always <input type="checkbox"/> Engine start <input type="checkbox"/> Engine Running <input type="checkbox"/> Cold <input type="checkbox"/> Warm <input type="checkbox"/> Sometimes <input type="checkbox"/> Most of the time <input type="checkbox"/> Engine off
TYPE OF TROUBLE	<input type="checkbox"/> Will not play <input type="checkbox"/> Weak <input type="checkbox"/> Squealing noise <input type="checkbox"/> Display/illumination poor <input type="checkbox"/> CD skips & jumps <input type="checkbox"/> CD will not eject or insert <input type="checkbox"/> Others (Describe) :
OTHERS	▶ Customer complaint contents : ▶ Have you checked customer's defects :
★ Using the customer complaint analysis check sheet for reference, ask the customer for as much detail as possible about the problem.	

There are four areas where a problem can occur: wiring harness, the radio, the CD player, and speaker. Troubleshooting enables you to confine the problem to a particular area.

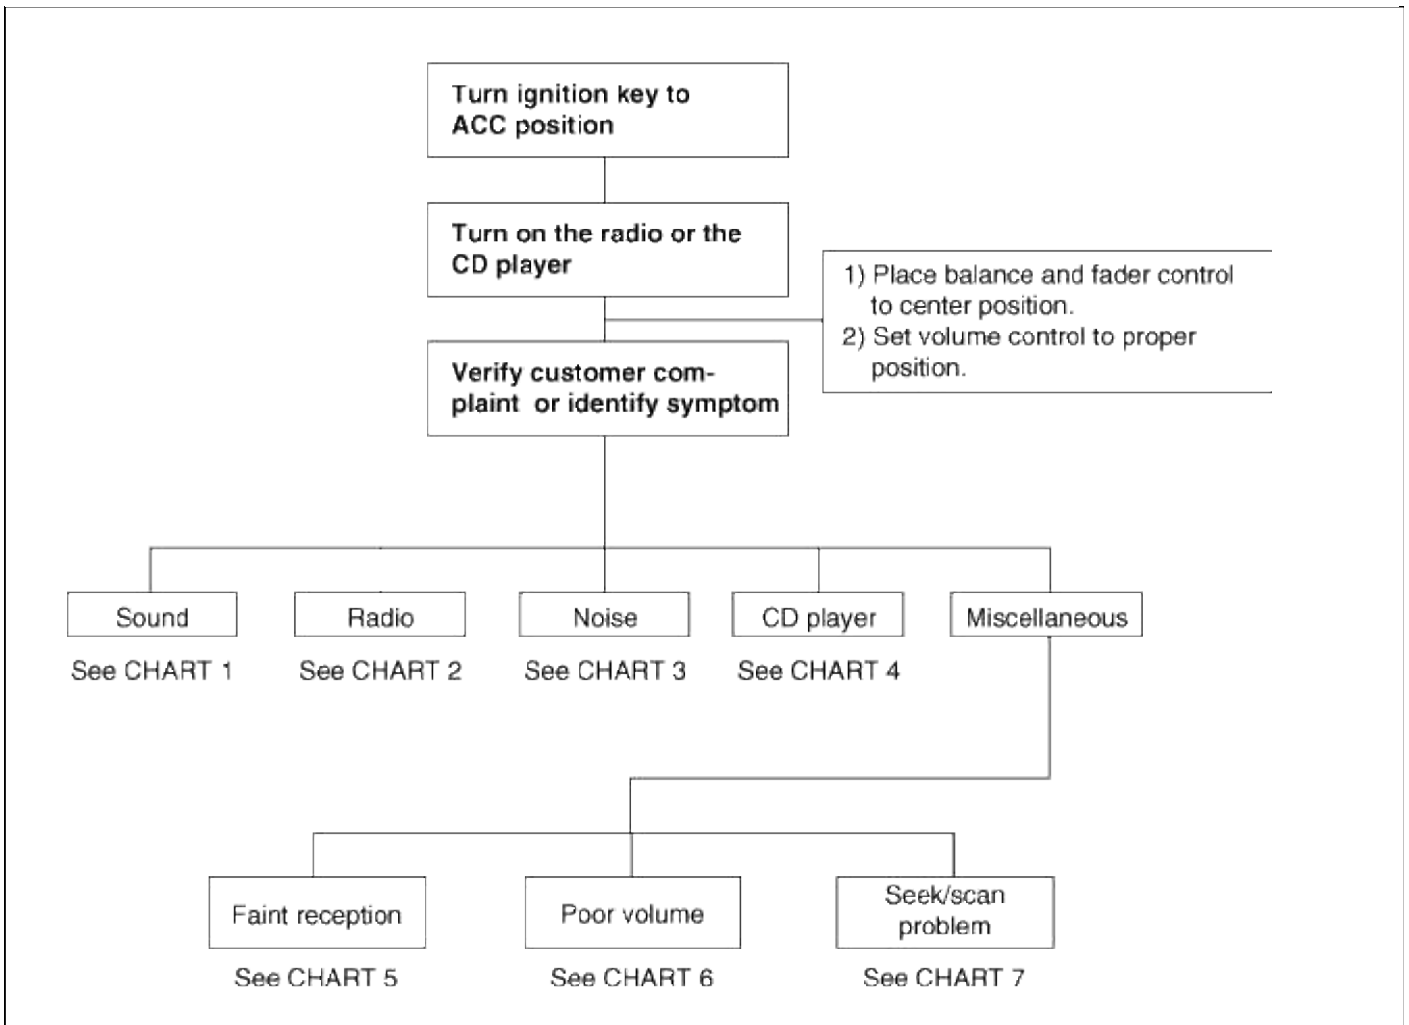
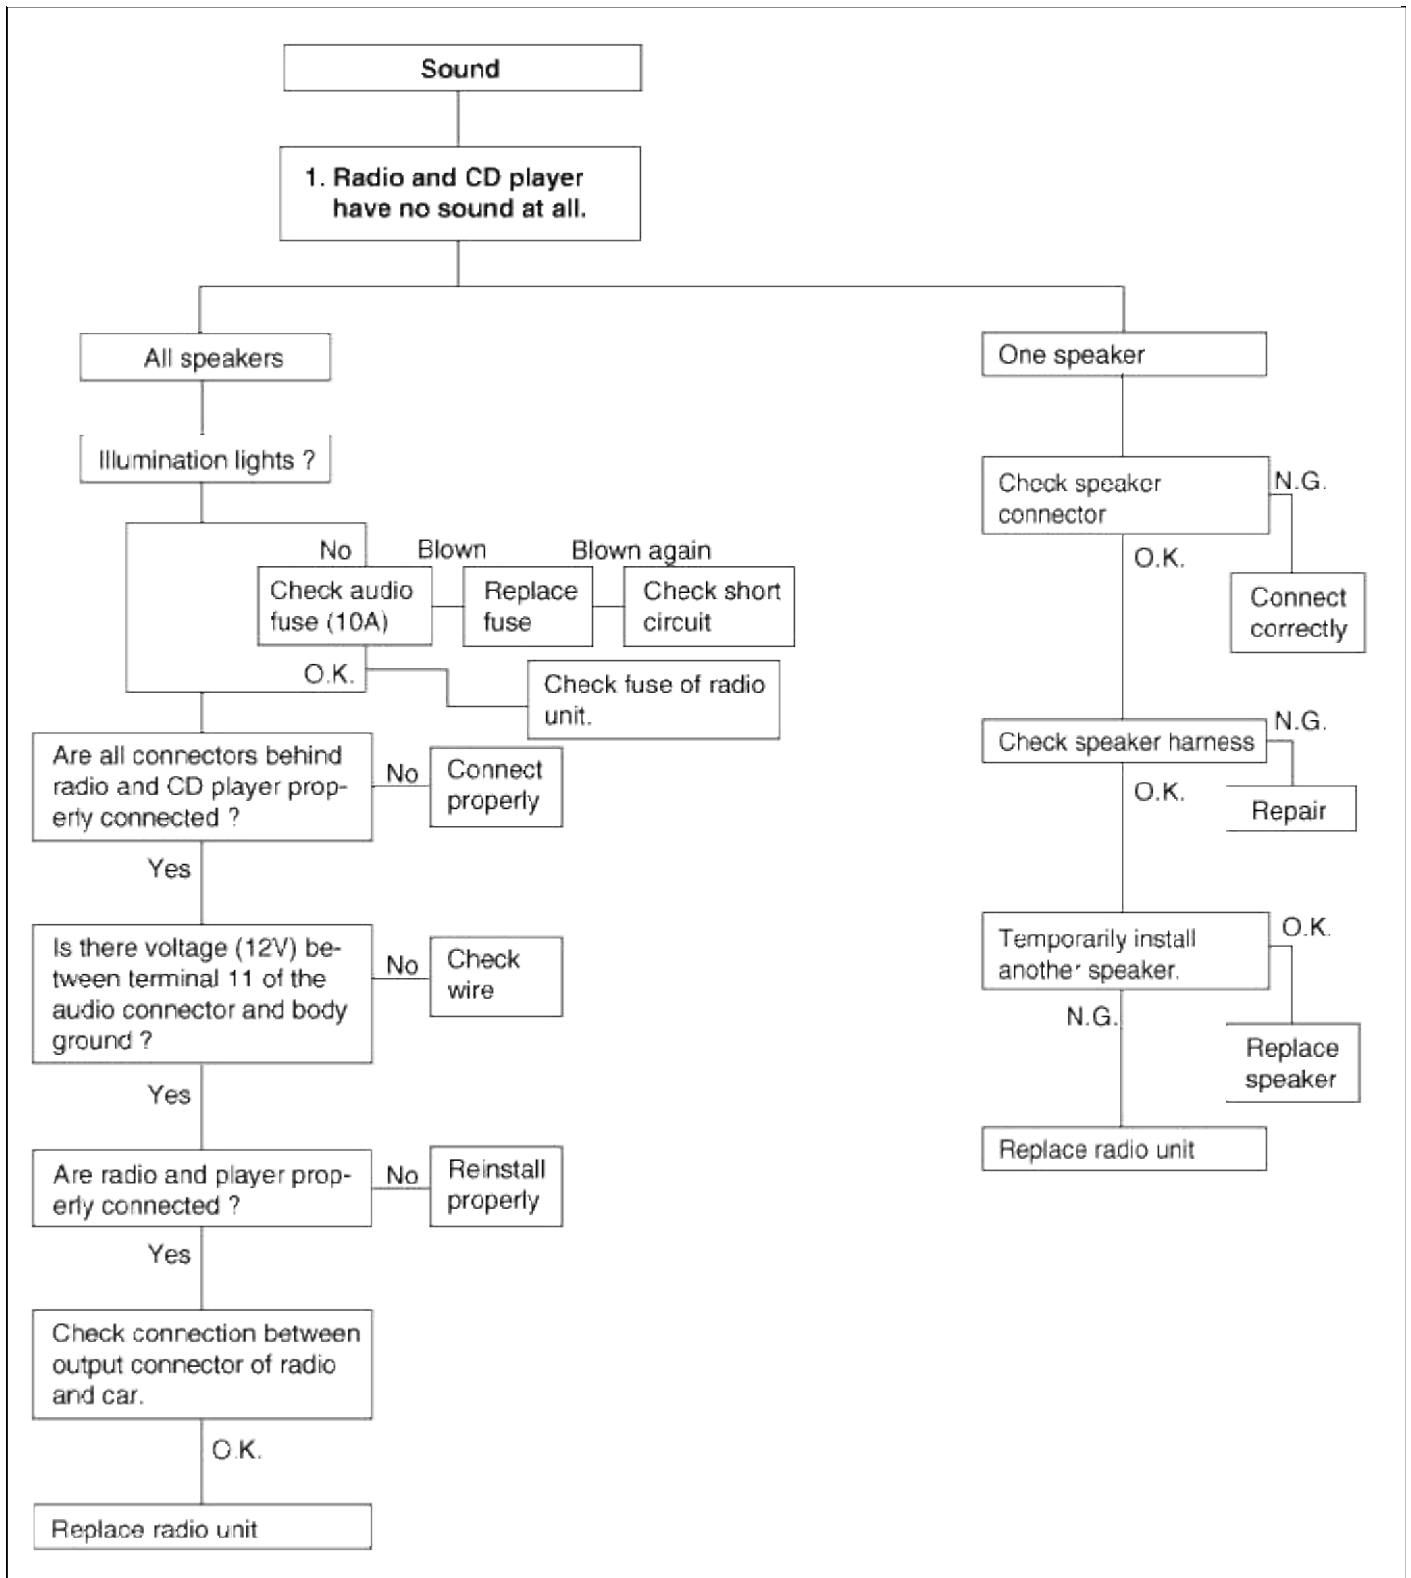


Chart 1



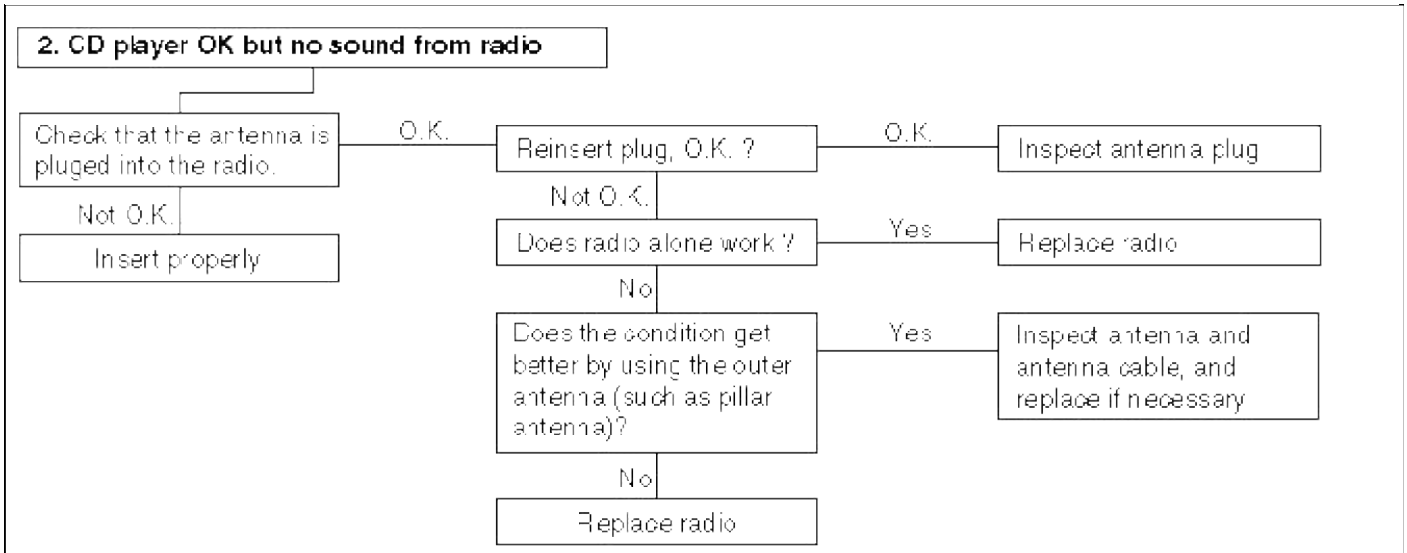


Chart 2

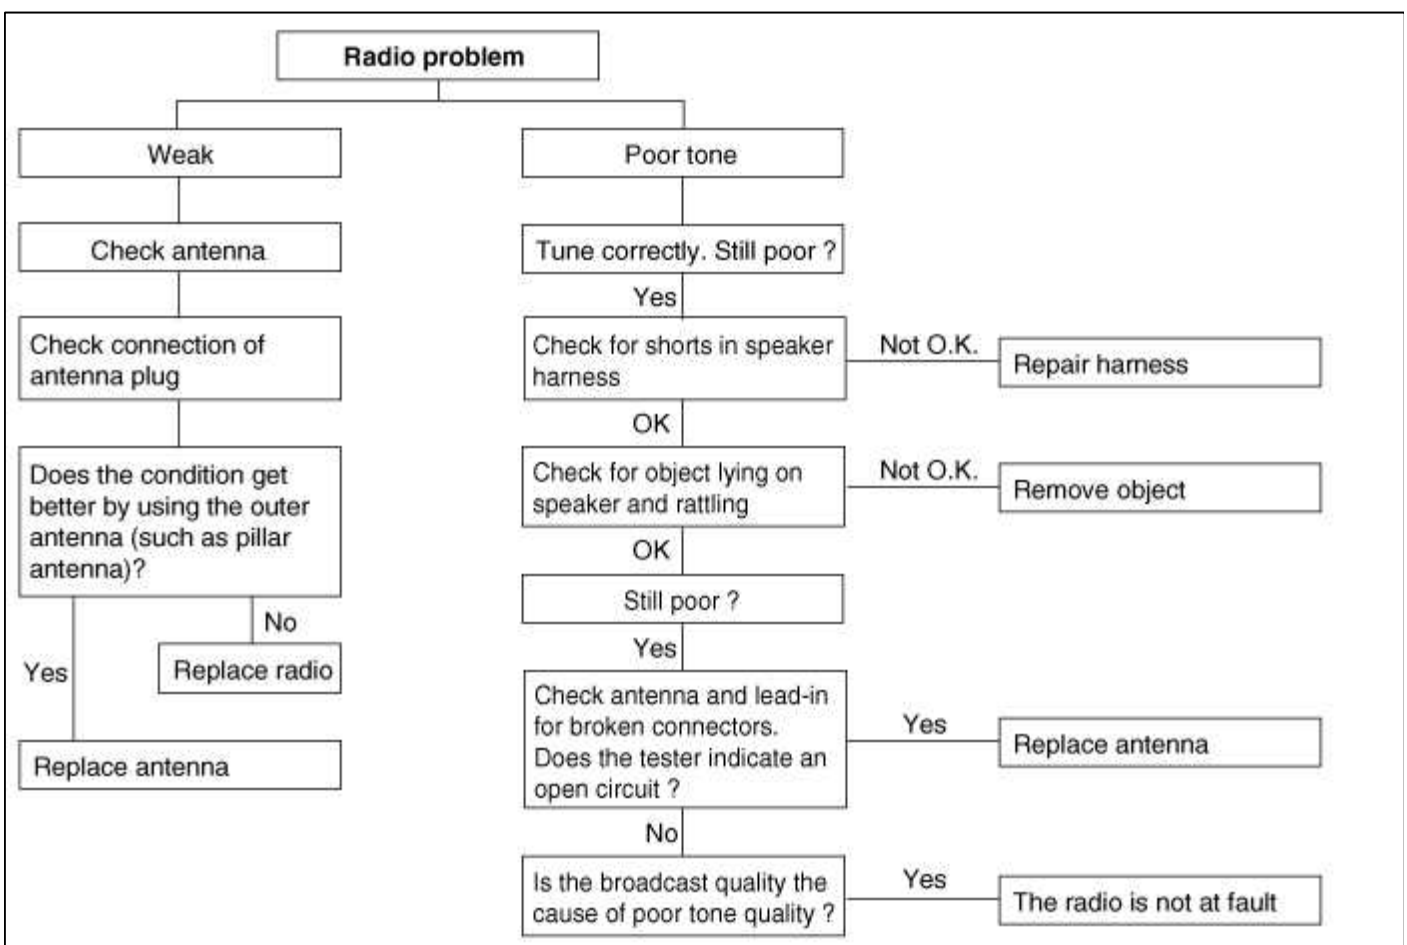


Chart 3

1. RADIO



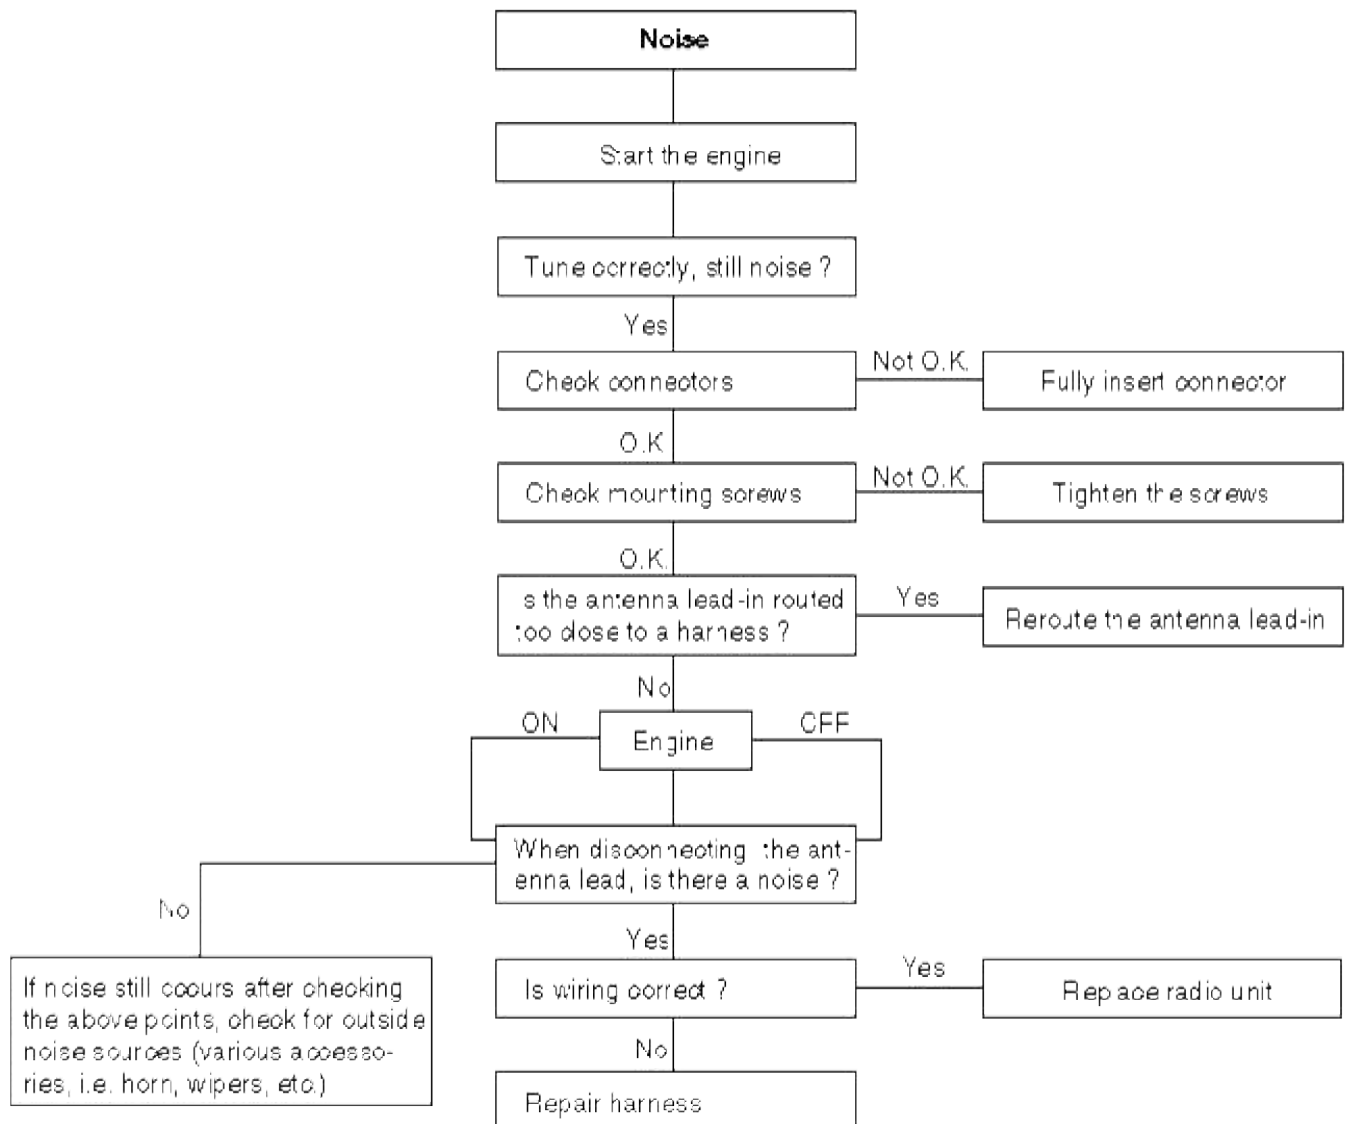


Chart 4

1. CD WILL NOT BE ACCEPTED

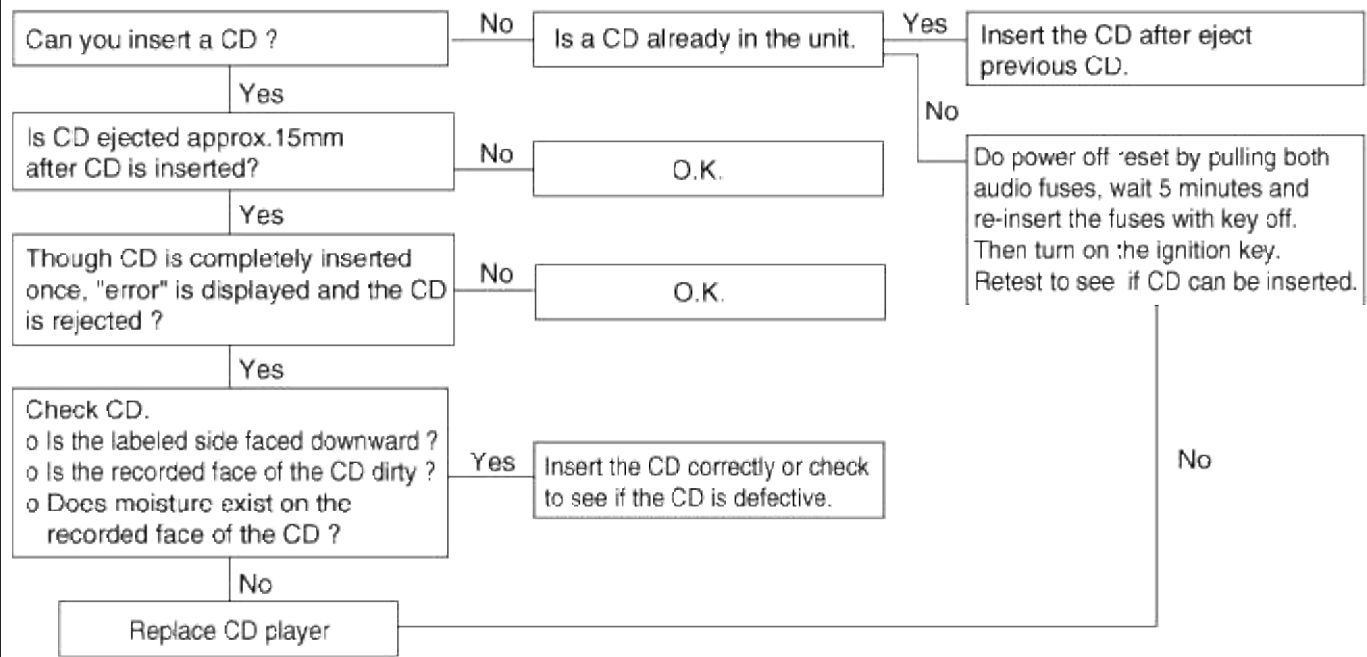


2. NO SOUND

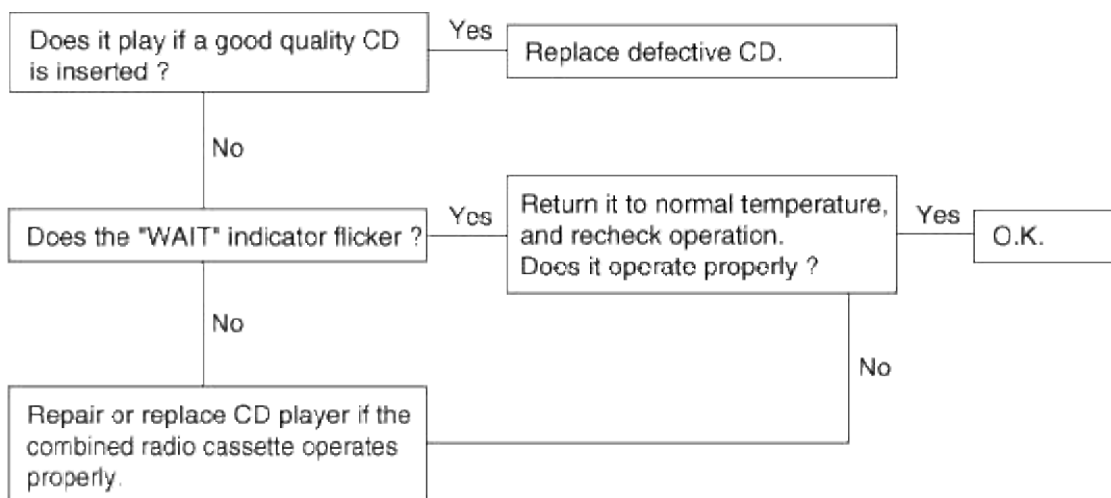

3. CD SOUND SKIPS


1) Sound sometimes skips when parking.

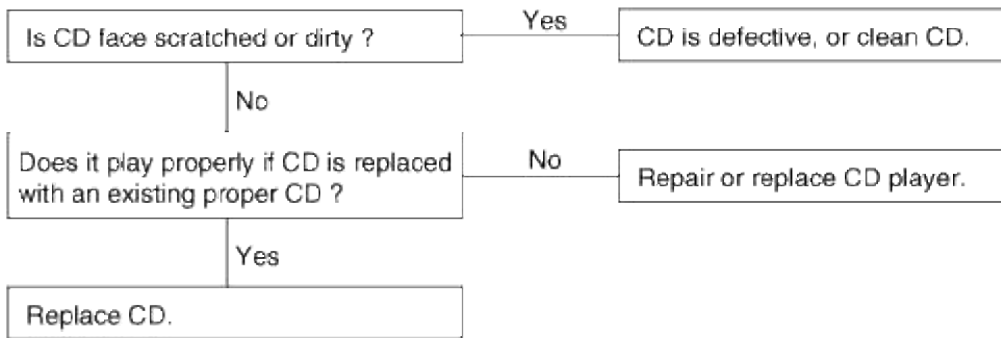


2) Sound sometimes skips when driving.

(Stop vehicle, and check it.)


(Check by using a CD which is free of scratches, dirt or other damage.)

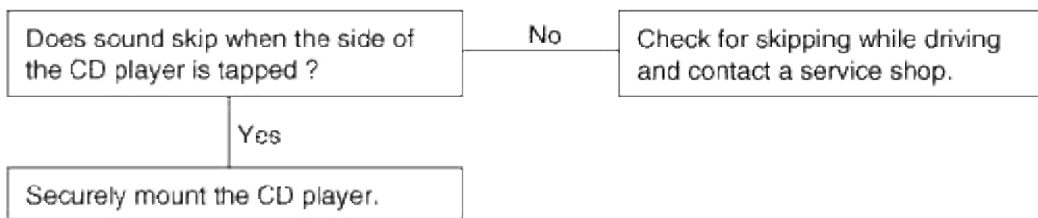

4. SOUND QUALITY IS POOR

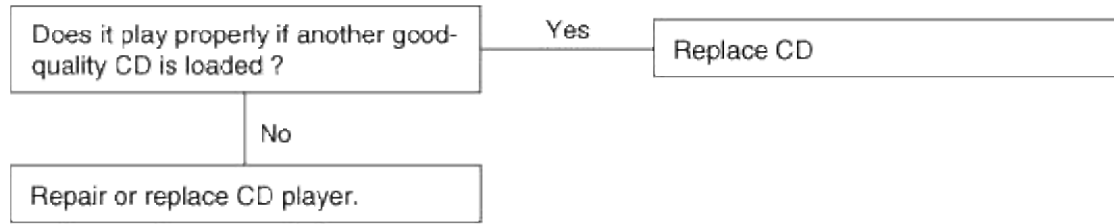

5. CD WILL NOT EJECT

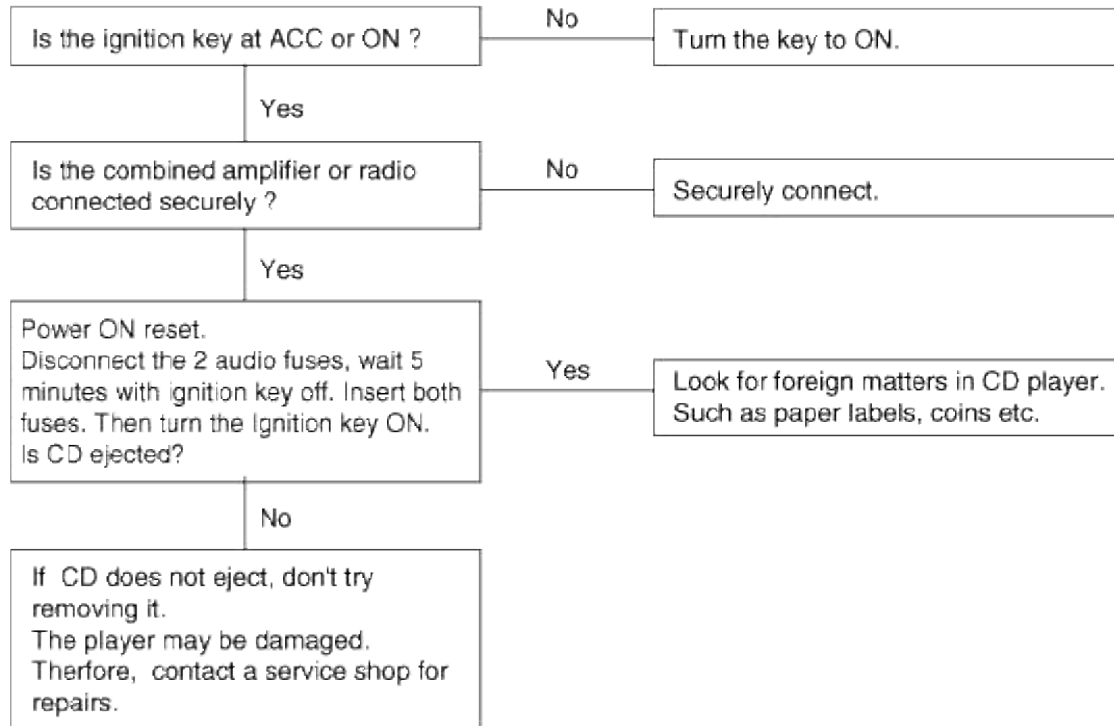

6. NO SOUND FROM ONE SPEAKER

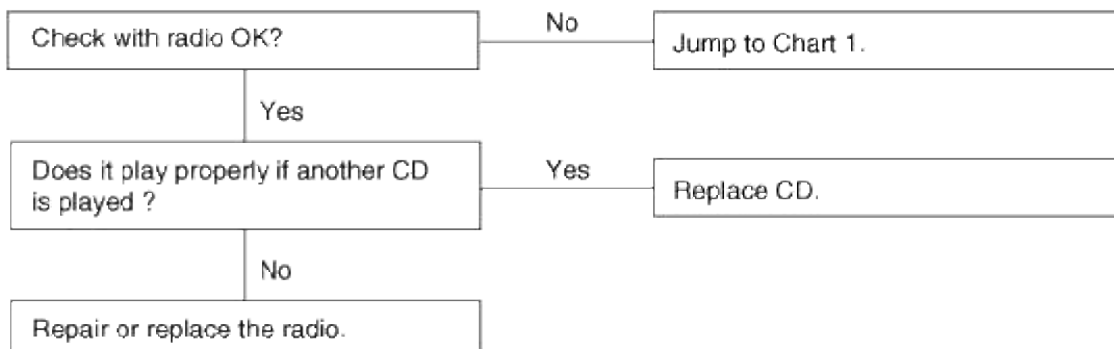


Chart 5

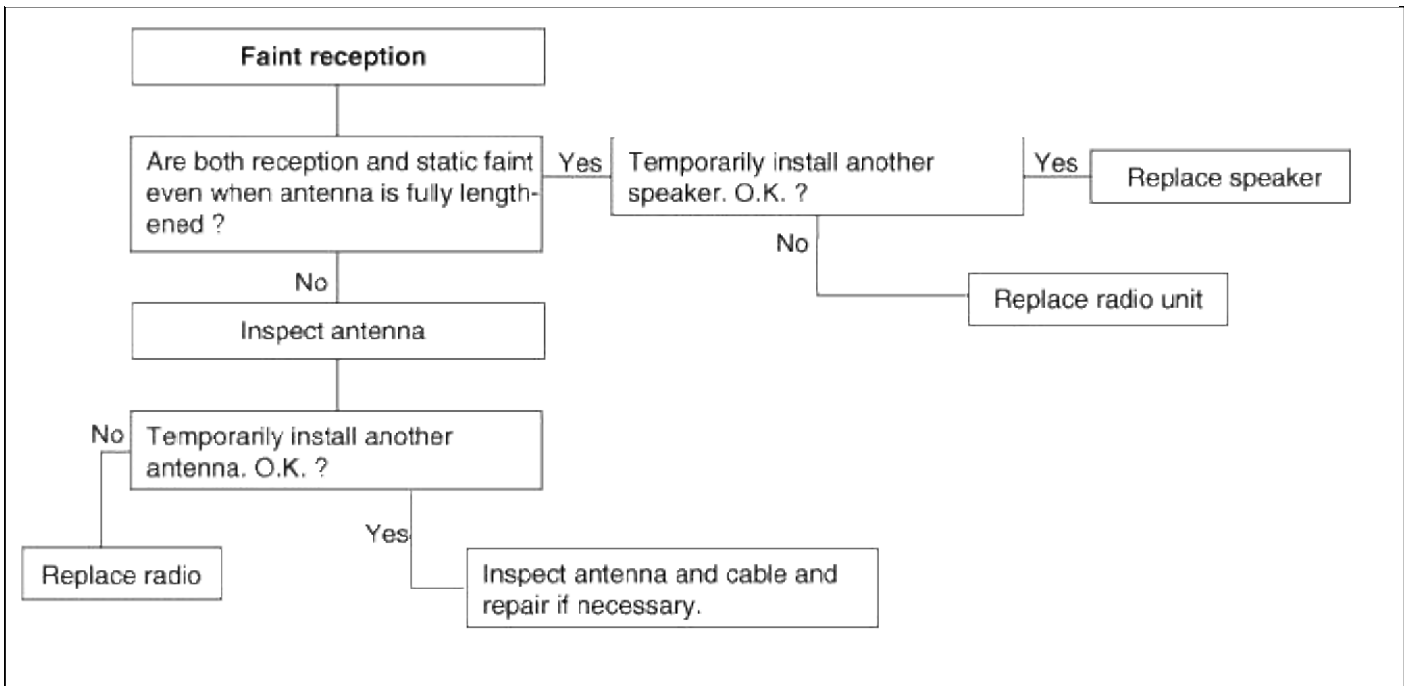


Chart 6


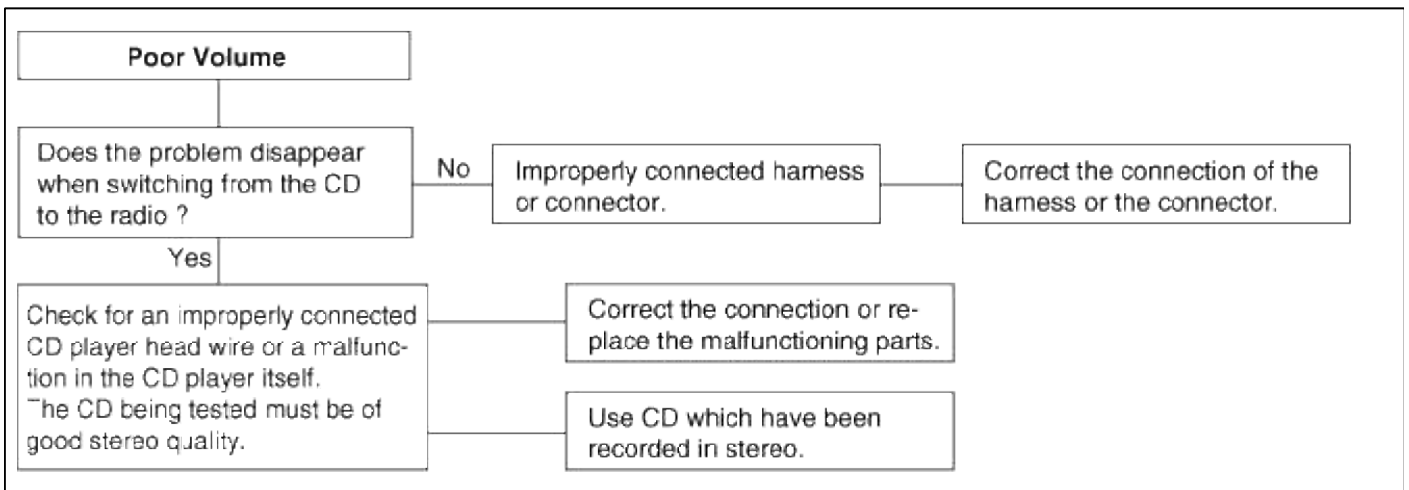


Chart 7

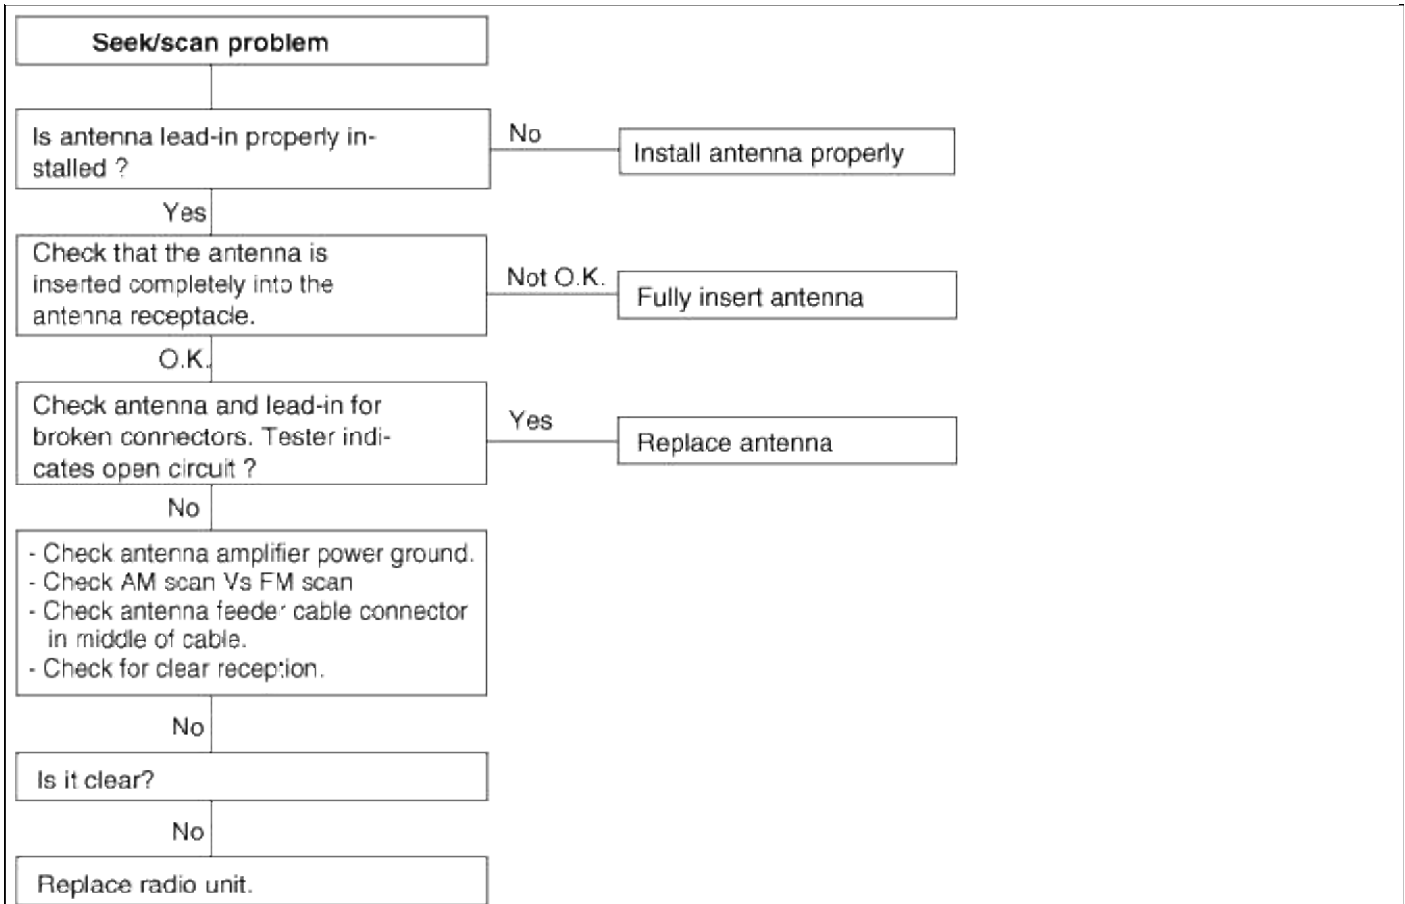


Body Electrical System > Multifunction switch > Specifications

Specifications

Items		Specifications
Rated voltage		DC 12V
Operating temperature range		-30°C ~ +80°C (-22 ~ +176°F)
Rated load	Dimmer & passing switch	High : 0.2A (Relay load) Low : 0.2A (Relay load) Passing : 0.2A (Relay load)
	Lighting switch	Lighting : 0.2A (Relay load)
	Turn signal & lane change switch	6.6 ± 0.5A (Lamp load)
	Front & rear fog lamp switch	0.2A (Relay load)
	Wiper & mist switch	Low, High : 4.5A (Motor load) Intermittent : 0.22 ± 0.5A (Relay load) Lock : Max. 28A (Motor load)
	Washer switch	4A (Motor load)
	Variable intermittent volume switch	Max. 25mA

Body Electrical System > Multifunction switch > Components and Components Location


Component (1)

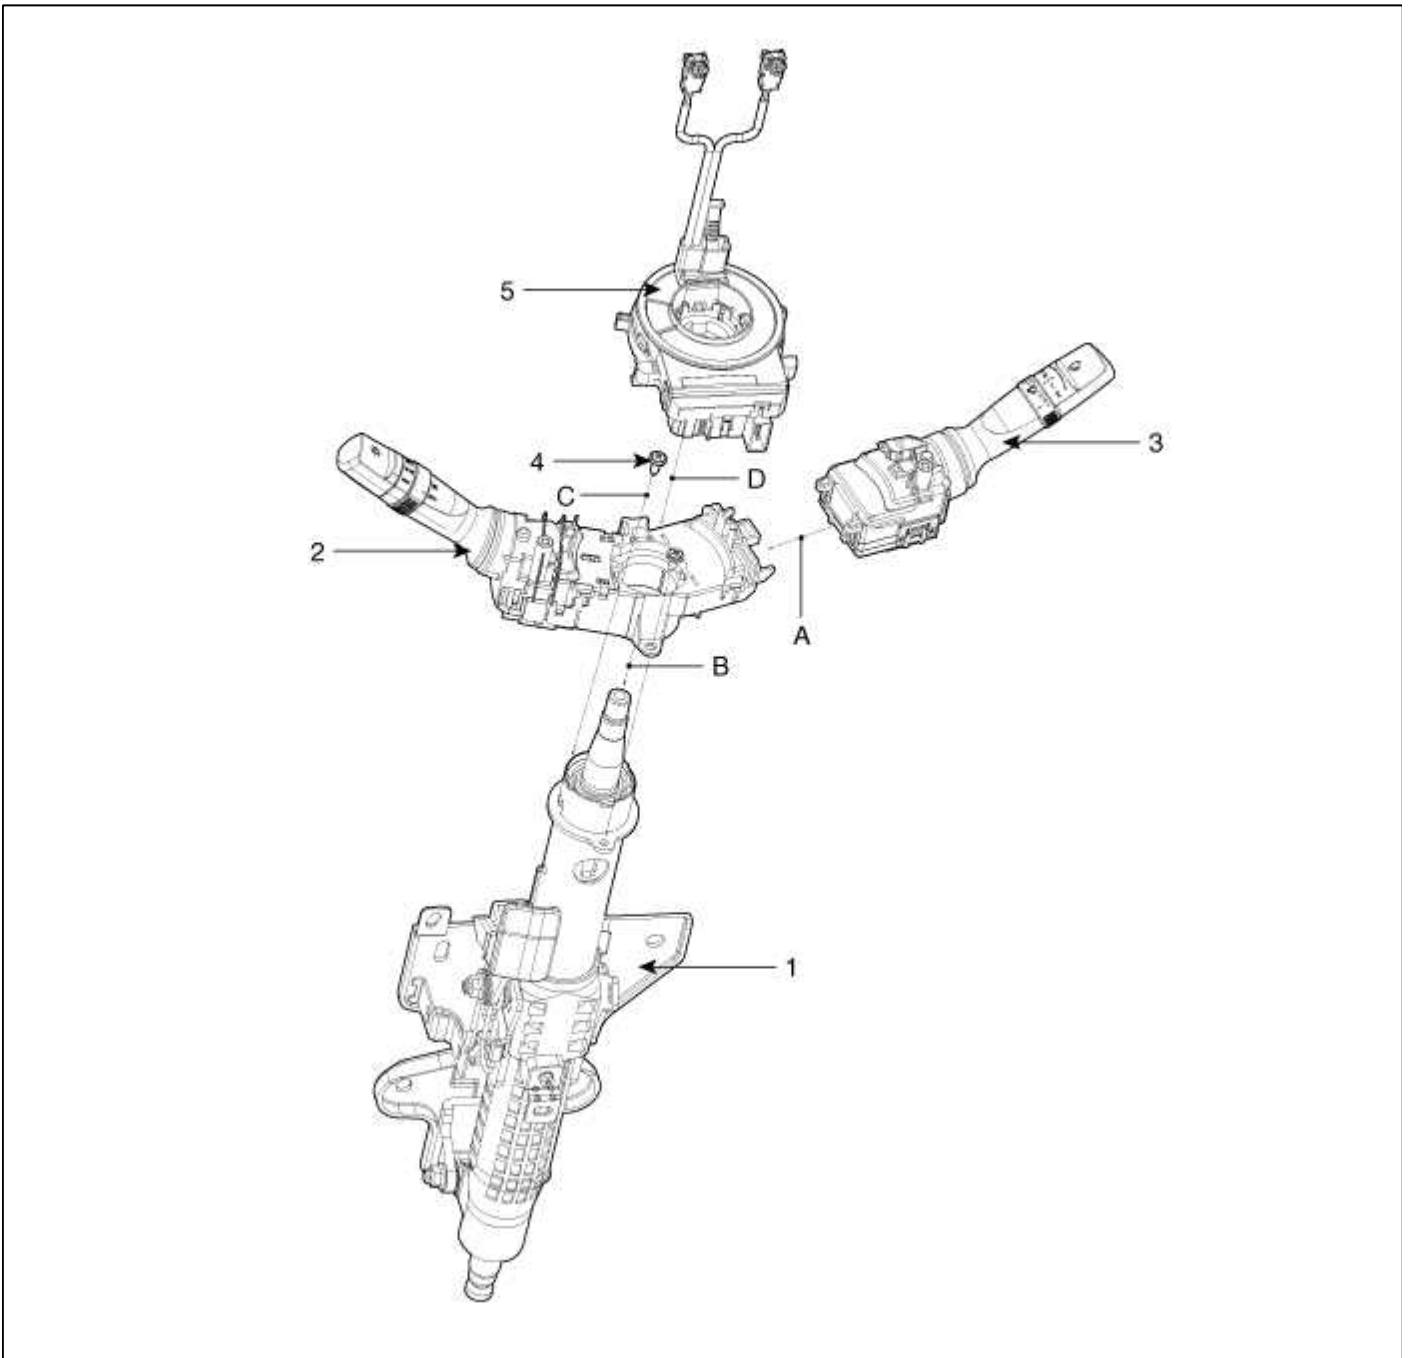

* Installation order : A→B→C→D

1. Steering column shaft	4. Screw
2. Lighting switch	5. Clock spring
3. Wiper and washer switch	

Component (2)

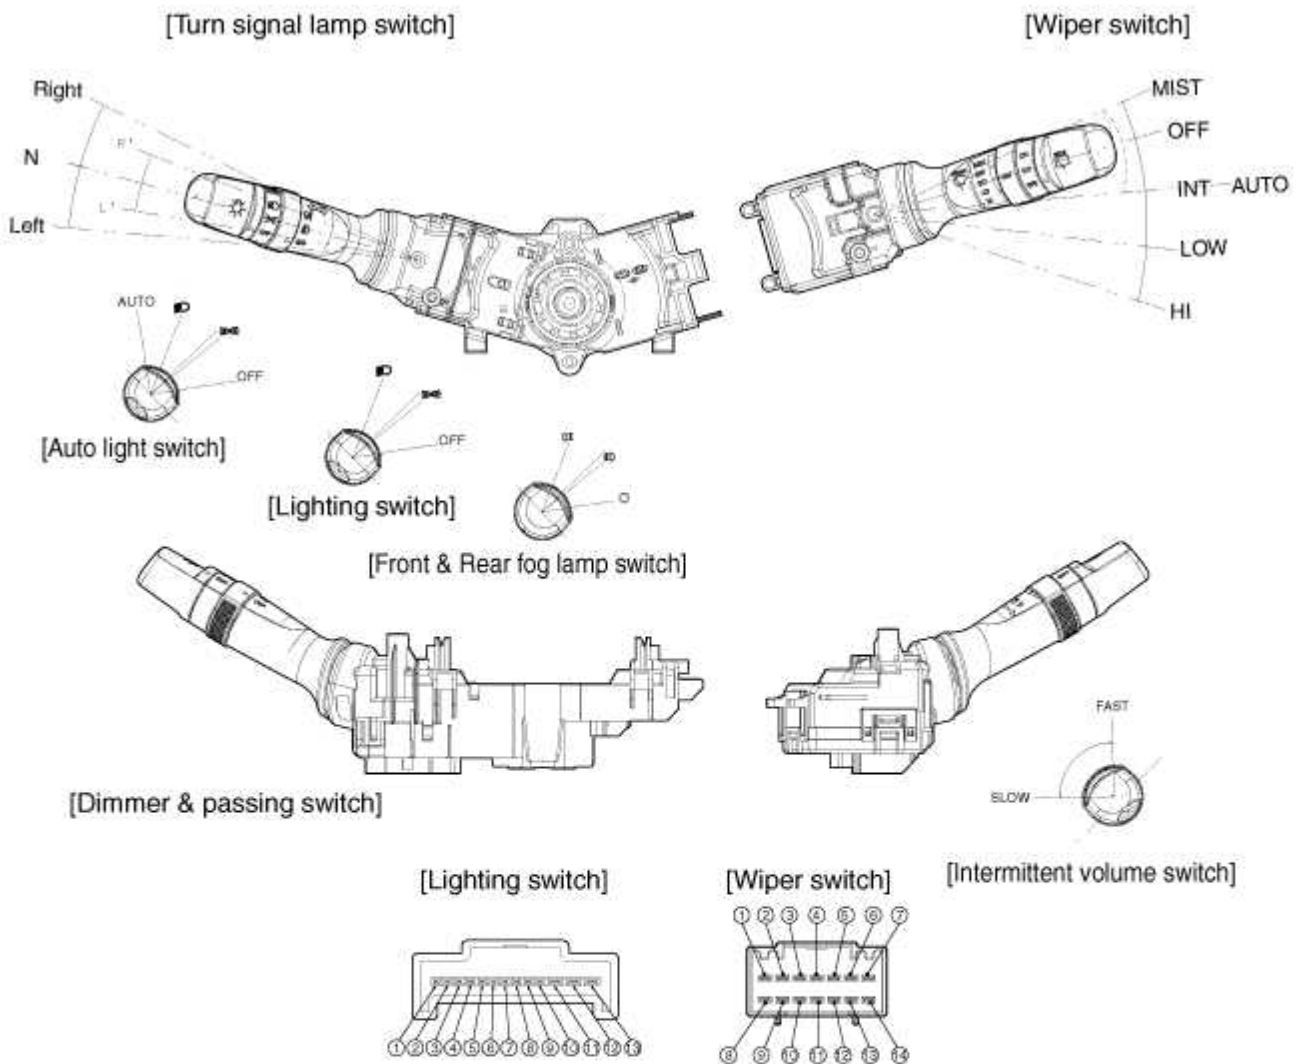


Connector	Pin NO.	Name	Connector	Pin NO.	Name
Lighting SW (13pin)	1	Tail lamp sw	Wiper & washer SW (14pin)	1	Mist sw
	2	Lighting sw ground		2	Wiper parking
	3	Auto light sw		3	Wiper low speed
	4	H/lamp sw		4	Intermittent volume base
	5	Fog sw base		5	Intermittent time base
	6	Front fog sw		6	-
	7	Rear fog sw		7	-
	8	Head lamp low beam		8	Intermittent wiper sw
	9	Head lamp high beam		9	Wiper high speed
	10	Dimmer sw base		10	IGN(2)- Front washer & wiper
	11	Turn signal lamp - left		11	Front washer
	12	Turn signal base		12	-
	13	Turn signal lamp - right		13	-
				14	-

Body Electrical System > Multifunction switch > Repair procedures

Inspection

Lighting Switch Inspection

With the multi function switch in each position, make sure that continuity exists between the terminals below. If continuity is not as specified, replace the multi-function switch.

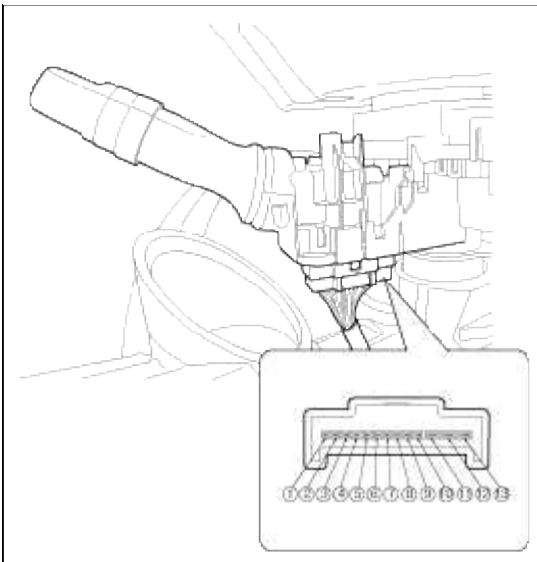

Lighting Switch (Auto Light)

Terminal Position \ Terminal	1	4	3	2
OFF				
I	○	—	—	○
II	○	○	—	○
AUTO			○	○

Lighting Switch

Terminal Position \ Terminal	1	4	2
OFF			
I	○	—	○
II	○	○	○

Dimmer And Passing Switch

Terminal Position \ Terminal	2	9	8	10
HU		○	—	○
HL			○	○
P	○	○	—	○

HU : Head lamp high beam
 HL : Head lamp low beam
 P : Head lamp passing switch

Turn Signal Switch


		Terminal	13	12	11
Hazard switch	Turn signal switch	L		○	○
		N			
		R	○	○	
OFF					

Front & Rear Fog Lamp Switch

Terminal Position	5	6	9
OFF			
Front	○	○	
Rear	○	○	○

Wiper And Washer Switch Inspection

With the multi function switch in each position, make sure that continuity exists between the terminals below. If continuity is not as specified, replace the multi-function switch.

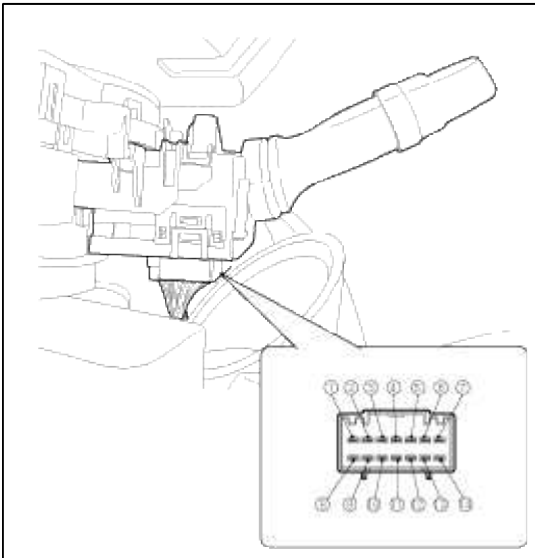

Wiper Switch

Terminal Position	9	3	2	1	10	8	4	5
MIST		○	○	○	○			
OFF		○	○					
INT		○	○		○	○	○	○
LOW		○		○				
HI	○			○				


Washer Switch

Terminal Position	11	10
OFF		
ON	○	○


Removal

1. Disconnect the negative (-) battery terminal.
2. Remove the steering wheel.
(Refer to ST group - "Steering column & shaft")
3. Remove the steering column upper and lower shrouds after removing 3 screws.


4. If necessary of removing the wiper & washer switch, release the lock of wiper switch using tool without removing the steering wheel.

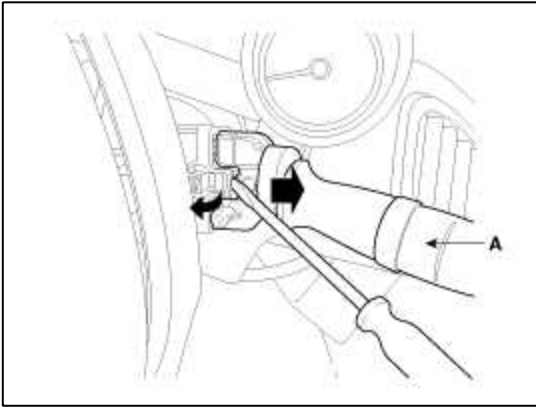

5. Remove the clock spring.
(Refer to RT group - "Airbag Module")
6. Loosen the screws from the multifunction switch assembly.

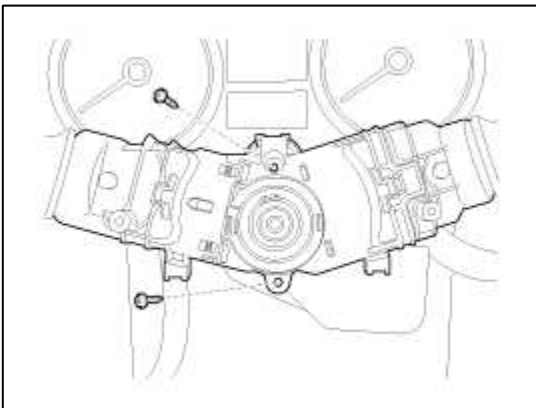

7. Remove the multifunction switch assembly(A) after loosening the connectors.

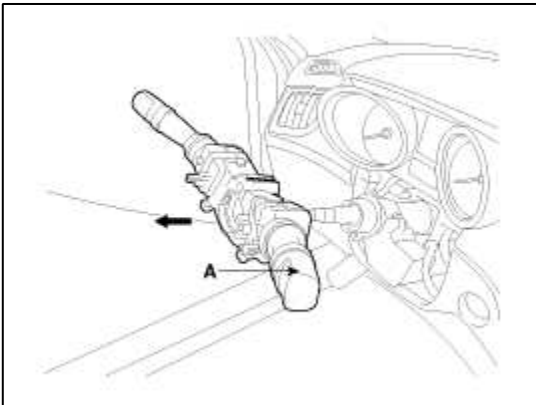


Installation

1. Install the multifunction switch.
2. Install the clock spring.
3. Install the steering column upper and lower shrouds.
4. Install the steering wheel.

NOTE

Make sure the multifunction switch connectors are plugged in properly.

Component Location

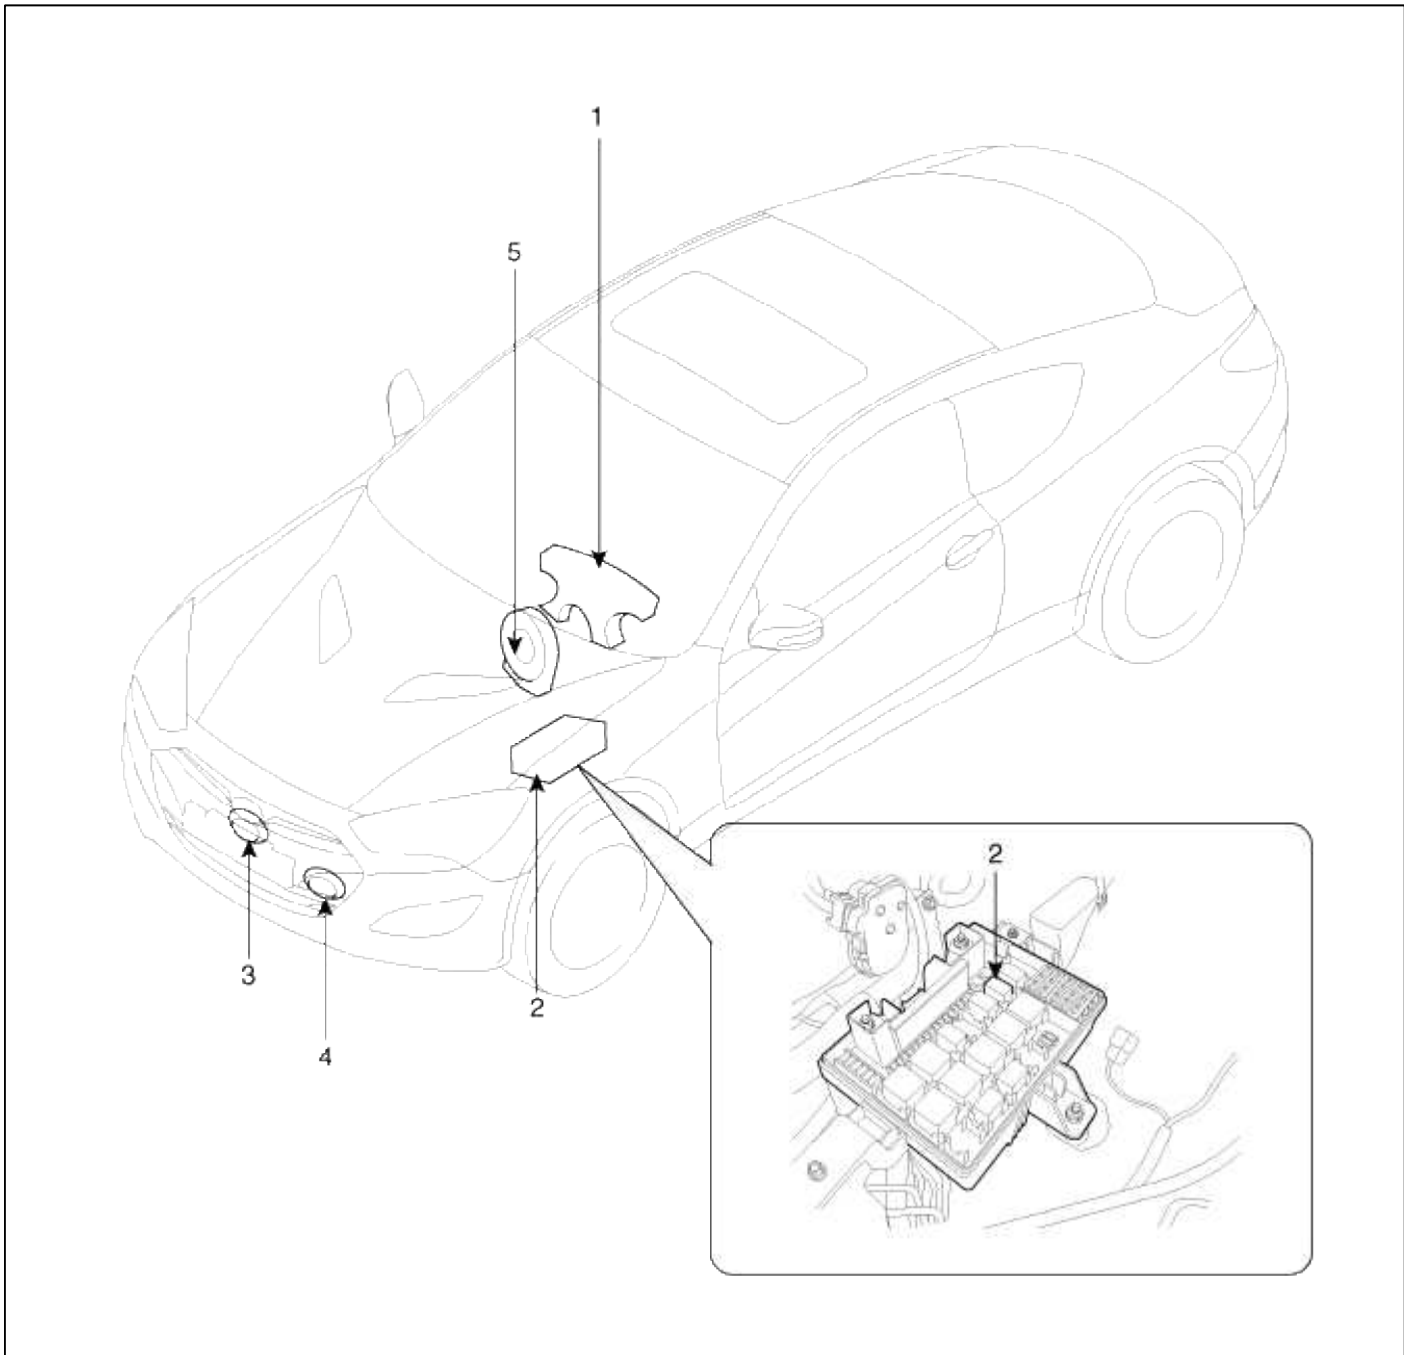

- | | |
|---|----------------------|
| 1. Horn switch | 4. Horn (High pitch) |
| 2. Horn relay (Engine room compartment) | 5. Clock spring |
| 3. Horn (Low pitch) | |


Body Electrical System > Horn > Repair procedures
Inspection

Test the horn by connecting battery voltage to the 1 terminal and ground the 2 terminal. The horn should make a sound. If the horn fails to make a sound, replace it.

Horn Relay Inspection

1. Remove the horn relay (A) from the engine room relay box.


- There should be continuity between the No.30 and No.87 terminals when power and ground are connected to the No.85 and No.86 terminals.
- There should be no continuity between the No.30 and No.87 terminals when power is disconnected.

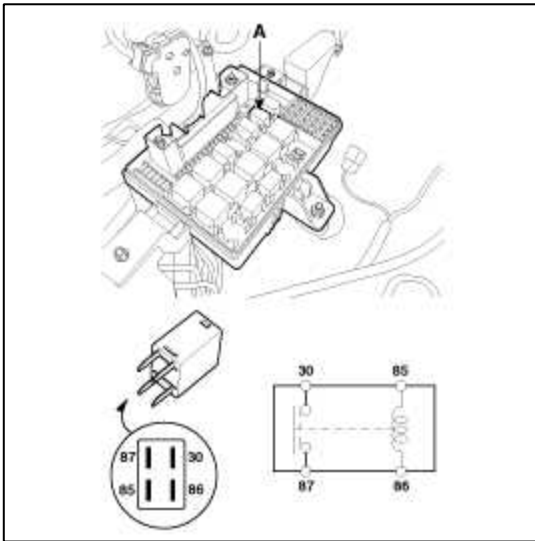

Terminal Position	30	87	85	86
Disconnected			○	○
Connected	○	○	○	+

Removal

- Remove the front bumper.
(Refer to the Body group - "Front bumper")
- Remove the bolt and disconnect the horn connector, then remove the high pitch horn(A) and the low pitch horn(B).

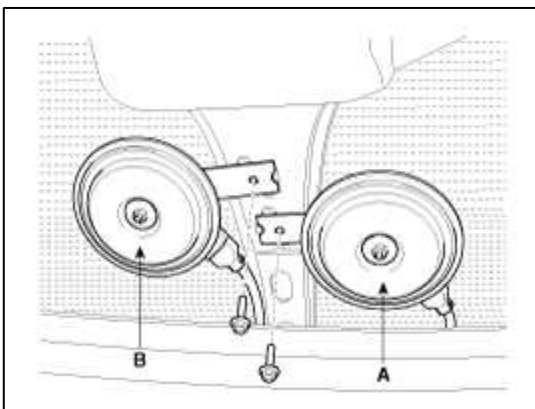

Installation


- Connect the horn connector, then reassemble the high pitch horn and low pitch horn.
- Reassemble the front bumper.

Adjustment

Operate the horn, and adjust the tone to a suitable level by turning the adjusting screw.


NOTE

After adjustment, apply a small amount of paint around the screw head to keep it from loosening.

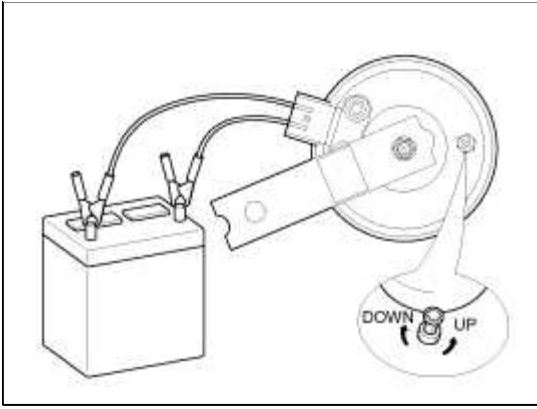

Body Electrical System > AVN System > Components and Components Location


Component Location

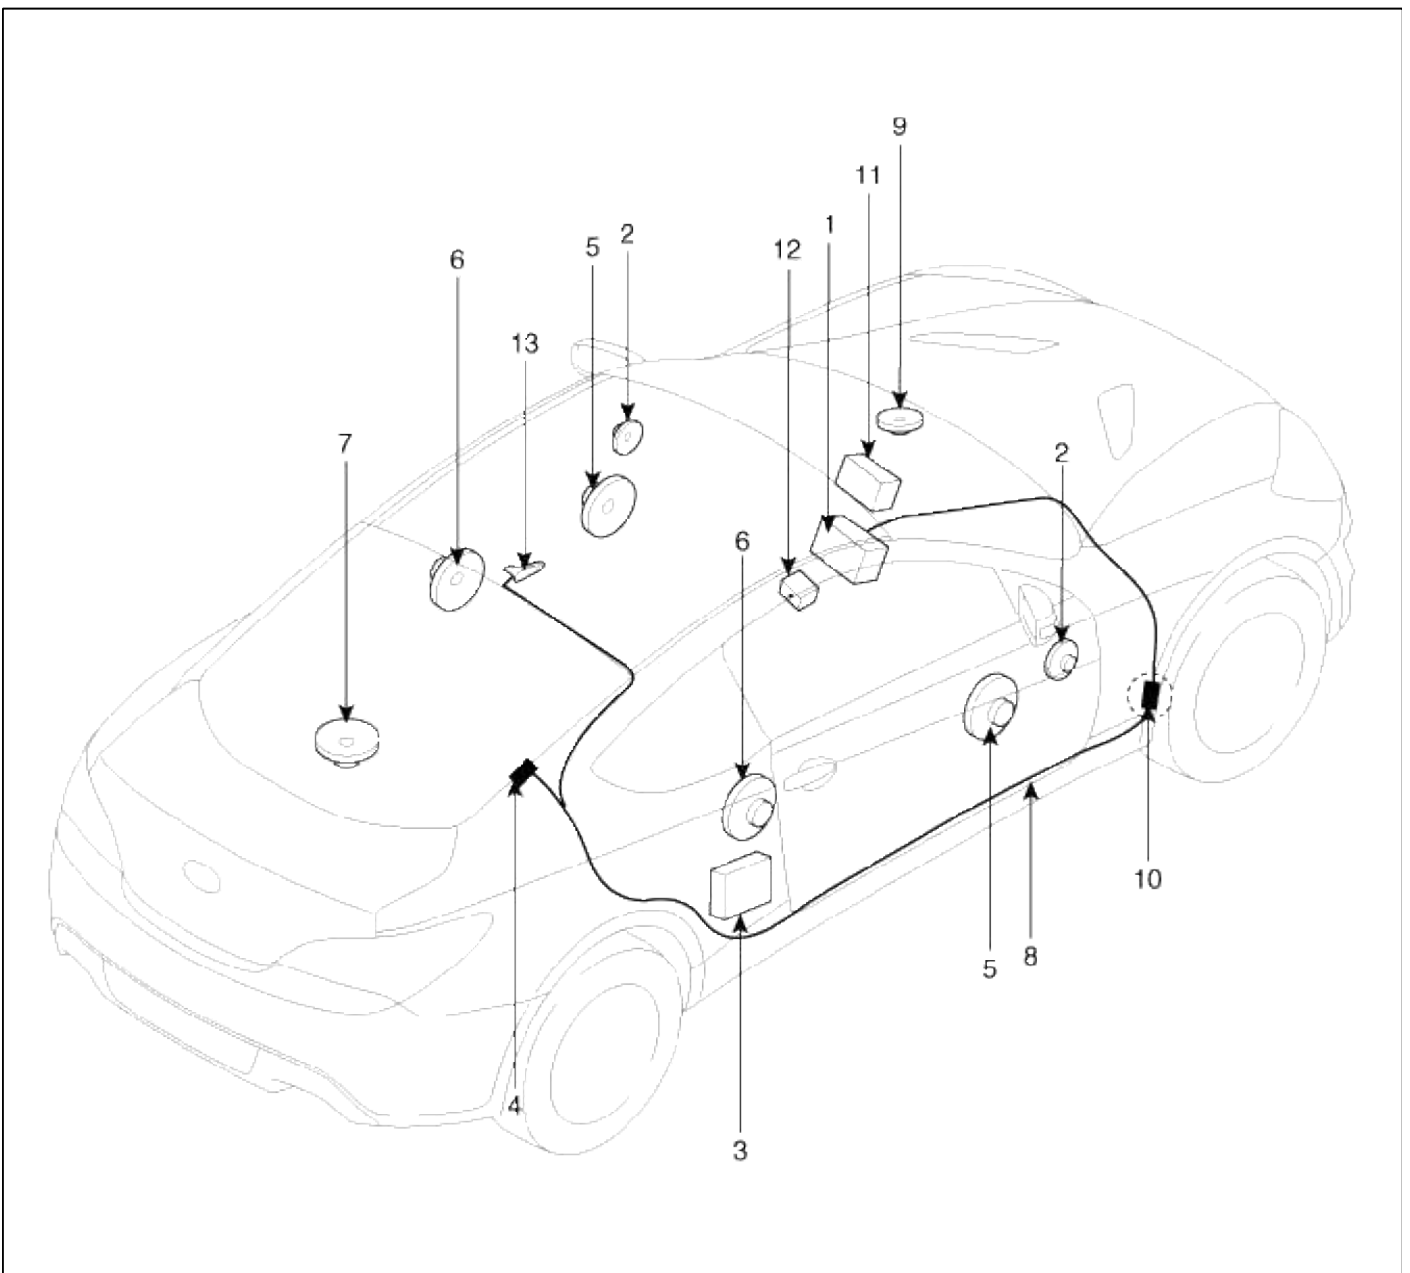

1. AVN (A/V & Navigation) head unit	8. Antenna feeder cable
2. Tweeter speaker	9. Crash pad center speaker
3. External Amplifier	10. Feeder cable joint connector
4. Glass antenna (Radio)	11. Multi display
5. Front door speaker	12. Aux jack
6. Rear door speaker	13. Roof antenna (GPS)
7. Woofer speaker	

Body Electrical System > AVN System > Schematic Diagrams

System Block Diagram

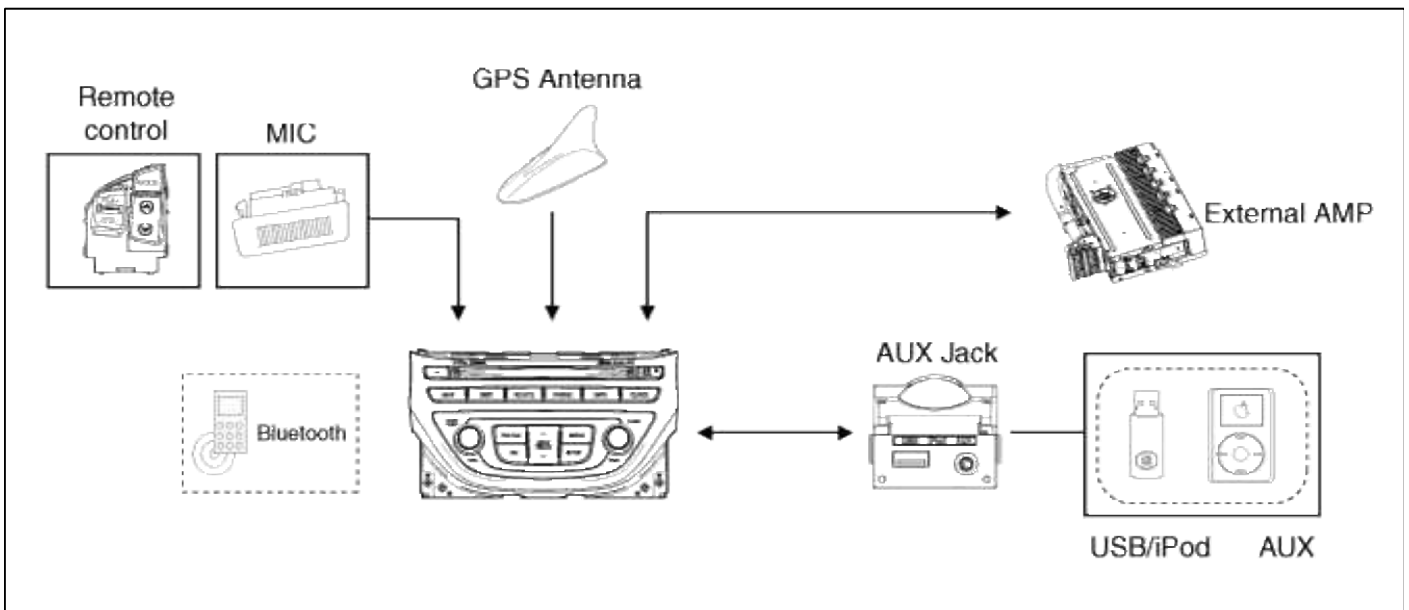

Body Electrical System > AVN System > Description and Operation

Limitations Of The Navigation system

GPS Signal Reception State

As the GPS satellite frequency is received/transmitted in straight lines, reception may not work if hiding devices are placed on or near the GPS antenna or when traveling through the following locations.

- Tunnels



- Basement parking structures



- Underneath an overpass



- Roads within forested areas



- Areas near high rise buildings



- Roads within canyons



Vehicle Position Display

1. If multipass errors occur due to reflections from buildings or related causes, the current position mark on the navigation may differ from the actual position of the vehicle.

2. The position of the vehicle on the navigation may be different from the actual position if the vehicle is under the occur, driving for a short period of time will vehicle through map matching or GPS information (several minutes may be necessary in certain cases).
 - A. When driving on a Y-shaped road with a narrow angle, the current position may be displayed in the opposite direction.
 - B. If the vehicle is loaded onto a car transport vehicle, the current position mark may be stalled on the last position prior to loading.
 - C. When driving on a spiral-shaped road.
 - D. When driving in mountain regions with sharp turns or sudden brakes.
 - E. When entering a road after having been in an underground parking structure, building parking structure, or turnable with many rotations.
 - F. When the tires have recently been replaced (Especially upon use of spare or studless tires)
 - G. If the battery terminal is removed.
 - H. When driving in city streets, the current position may be displayed on the opposite side or on an off-road position.
 - I. When changing the zoom level from the maximum zoom in level to a different zoom level, the current position mark may be displayed on a different road.
 - J. When driving in heavy traffic with frequent go and stops in traffic or intersections.
 - K. When driving under slippery conditions, such as heavy sand, snow, etc.
 - L. When driving with the tire chain in place.
 - M. When using a tire with an incorrect size specification.
 - N. When the tire pressure for the 4 tires are different.
 - O. When the replacement tire is a worn or used tire (Especially studless tires having passed a 2nd seasons, etc.)
 - P. When driving near high-rise buildings
 - Q. If a roof carrier has been installed
 - R. When driving under high speeds or having calculated a long-distance route.

Route Guidance

Unsuitable route guidance situation may caused by the following search conditions or the driving position.

- Guidance to go straight may be given while driving on a straight road.
- Guidance may not be given even when having turned at an intersection.
- There are certain intersections in which guidance may not occur.
- A route guidance signaling entrance into a no enter zone may occur (No enter zone, road under construction, etc.)
- Guidance may be given to a position removed from the actual destination if roads to reach the actual destination do not exist or are too narrow.
- Faulty voice guidance may be given if the vehicle breaks from the designated route (ex : if a turn is made at an intersection while the navigation provided guidance to go straight).
- Map Data may be missing or incorrect causing route guidance to not be given.

Route Re-calculation

The following phenomena may occur after conducting route recalculation.



- Guidance may be given to a position differing from the current position when turning at an intersection.
- Route recalculation may take a longer period of time when driving under high speeds.
- A route guidance signaling for a U-Turn in a No U-Turn location may occur.
- A route guidance signaling entrance into a no enter zone may occur (No enter zone, road under construction, etc).
- Guidance may be given to a position removed from the actual destination do not exist or are too narrow.
- Faulty voice guidance may be given if the vehicle breaks from the designated route (ex : if a turn is made at an intersection while the navigation provided guidance to go straight)


Body Electrical System > AVN System > AVN Head Unit > Components and Components Location

Components






AVN (A/V & Navigation) Head Unit

[AVN Head Unit]

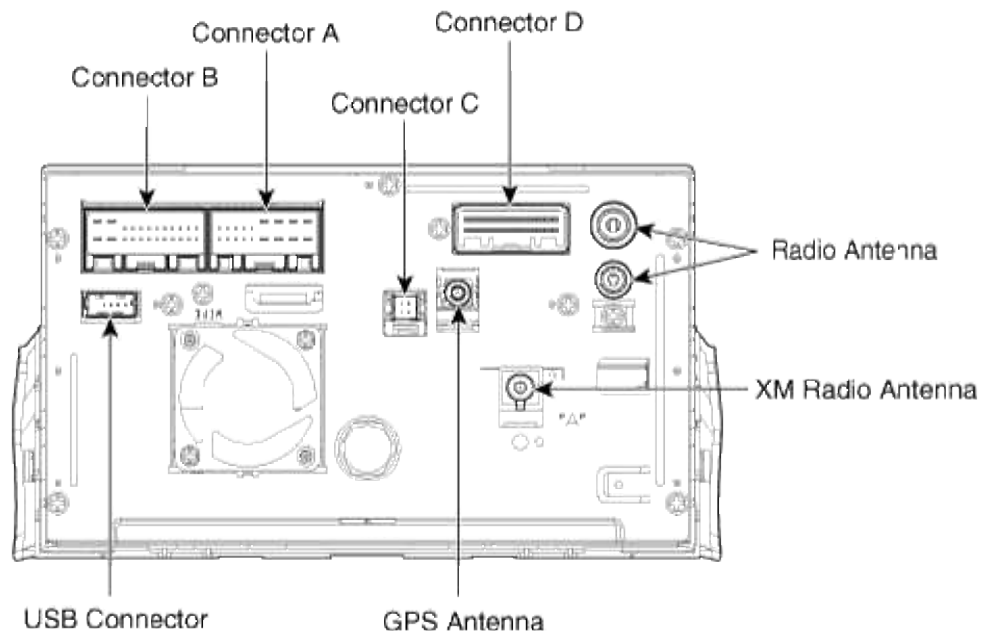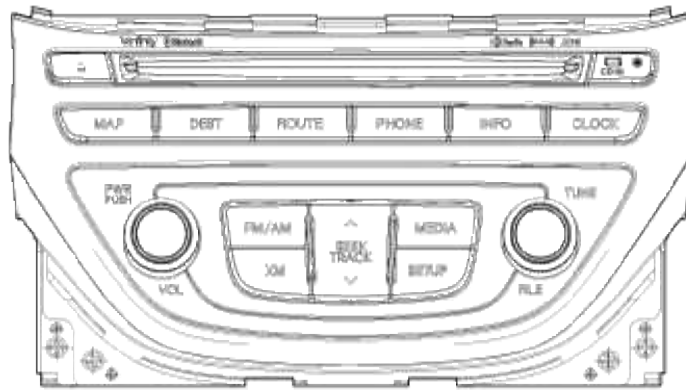


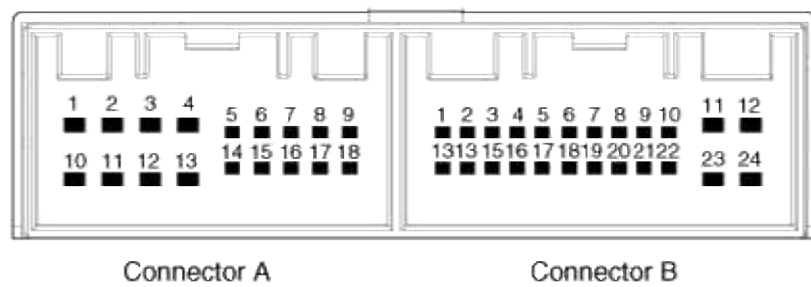

Pin No.	Connector A	Connector B
1	-	MM CAN High
2	-	-
3	-	-
4	-	Steering remote
5	SPDIF GND	-
6	SPDIF (+)	-
7	ALT L	AUX Video
8	Illumination (+)	AUX R IN
9	R Position	AUX GND
10	-	MIC+ (Bluetooth)
11	-	ACC+
12	NAVI Voice (-)	B+
13	NAVI Voice (+)	MM CAN Low
14	-	Auto Light
15	SPDIF (-)	P Position
16	Door key unlock	Vehicle speed
17	Illumination (-)	Remote GND
18	Remote antenna ON	-
19		AUX Video GND
20		AUX DETECT
21		AUX L IN
22		MIC- (Bluetooth)
23		Power GND
24		Power GND

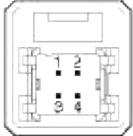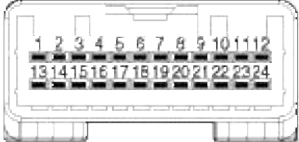USB Connector	NO	Description	NO	Description
	1	USB GND	3	USB D (-)
	2	USB D (+)	4	USB VCC
XM Antenna	NO	Description	NO	Description
	1	XM Signal	2	GND
GPS Antenna	NO	Description	NO	Description
	1	GPS Signal	2	GND
Connector C	NO	Description	NO	Description
	1	LVDS (-)	3	GND
	2	GND	4	LVDS (+)
Connector D	NO	Description	NO	Description
	1	-	13	LVDS LOCK
	2	-	14	BL ON
	3	-	15	RS485 RX(+)
	4	-	16	RS485 RX(-)
	5	-	17	GND
	6	-	18	RS485 TX(+)
	7	-	19	RS485 TX(-)
	8	-	20	-
	9	LVDS _ PDN	21	-
	10	-	22	-
	11	-	23	-
	12	-	24	-

[AVN Monitor]

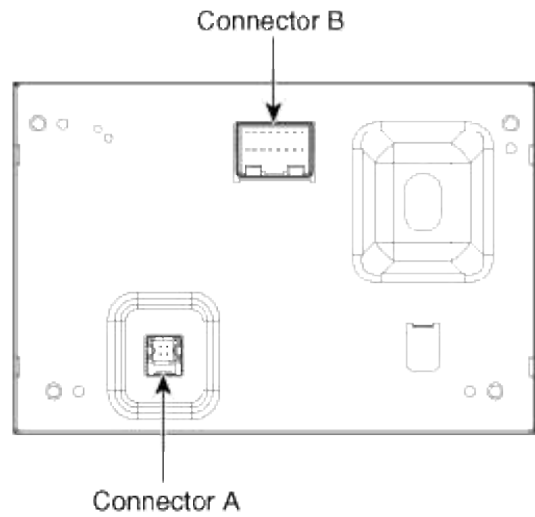



Connector A

Pin No.	Description
1	GND
2	LVDS(-)
3	LVDS(+)
4	GND

Connector B


Pin No.	Description	Pin No.	Description
1	Battery(+)	9	GND
2	Illumination(+)	10	BI ON/OFF
3	Illumination(-)	11	LVDS PDN
4	GND	12	LVDS LOCK
5	ACC	13	RS485 RX(+)
6	-	14	RS485 RX(-)
7	-	15	RS485 TX(+)
8	-	16	RS485 TX(-)



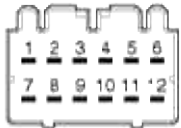
[External AMP]

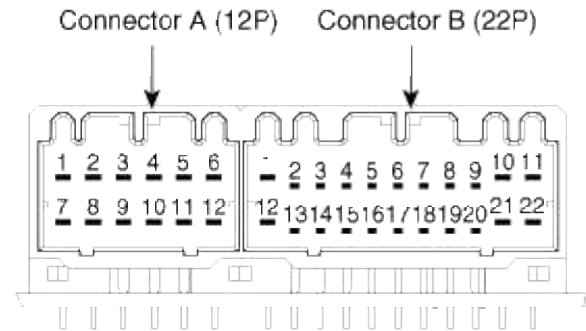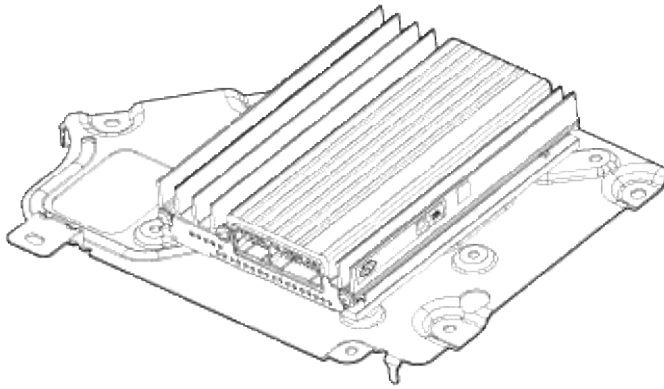

No.	Connector A (12P)	Connector B (22P)
1	Front left door (+)	Center speaker (+)
2	Front right door (+)	-
3	Rear left door (+)	-
4	Rear right door (+)	-
5	SubWoofer 2 (+)	NAVI (+)
6	SubWoofer 1 (+)	ACC
7	Front left door (-)	CAN (-)
8	Front right door (-)	CAN (+)
9	Rear left door (-)	-
10	Rear right door (-)	Battery (+)
11	SubWoofer 2 (-)	Battery (+)
12	SubWoofer 1 (-)	Center speaker (-)
13		-
14		-
15		-
16		NAVI (-)
17		SPDIF Signal
18		SPDIF (-)
19		SPDIF (+)
20		-
21		GND
22		GND

[External AMP]

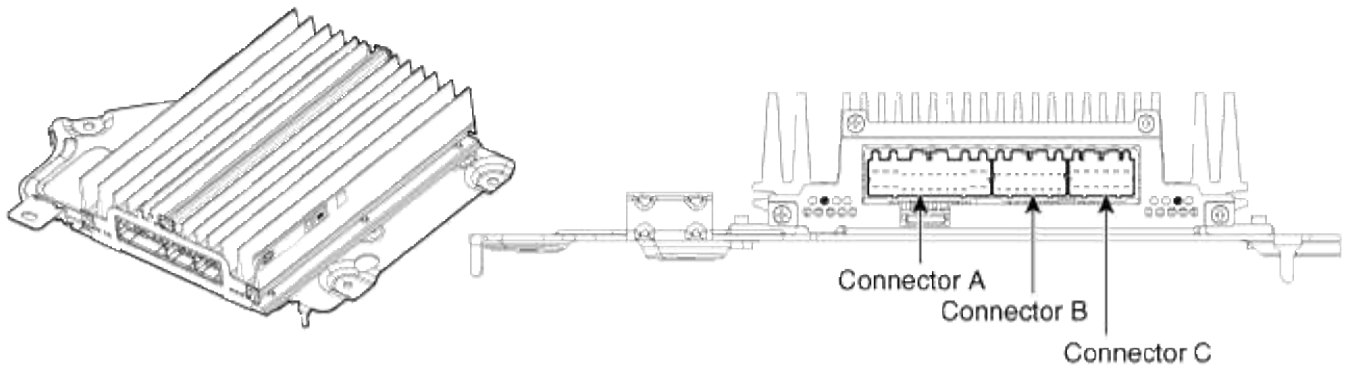

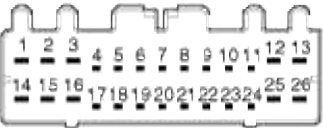No.	Connector A (26P)	Connector B (16P)	Connector C (12P)
			
1	B (+)	-	SubWoofers 2 (+)
2	B (+)	-	SubWoofers 1 (+)
3	-	-	Rear right door (+)
4	-	-	Rear left door (+)
5	CAN (+)	-	Front right door (+)
6	CAN (-)	-	Front left door (+)
7	ACC	Center speaker (+)	SubWoofers 2 (-)
8	-	-	SubWoofers 1 (-)
9	-	-	Rear right door (-)
10	-	-	Rear left door (-)
11	NAVI (+)	-	Front right door (-)
12	-	-	Front left door (-)
13	-	-	
14	GND	-	
15	GND	Center speaker (-)	
16	-	-	
17	-		
18	SPDIF (+)		
19	SPDIF (-)		
20	SPDIF Signal		
21	-		
22	-		
23	-		
24	NAVI (-)		
25	-		
26	-		


Body Electrical System > AVN System > AVN Head Unit > Repair procedures

Removal


AVN Head Unit

1. Disconnect the negative (-) battery terminal.


2. Remove the console upper cover(A).

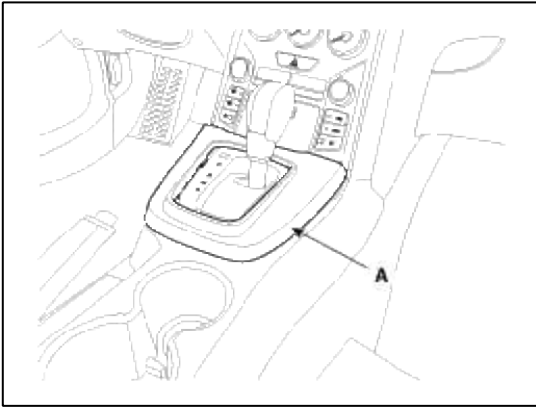


3. Remove the center fascia lower panel(A).
(Refer to the BD group - "Crash pad")

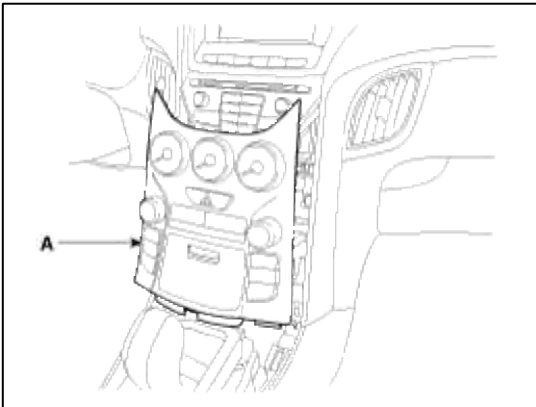


4. Remove the connectors and cables from center fascia lower panel(A).

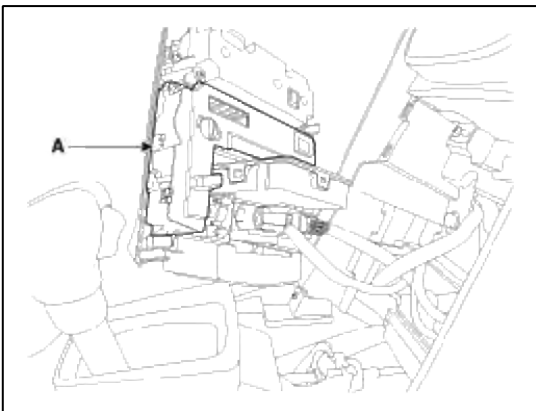

5. Remove the mounting screws then remove the AVN head unit(A).

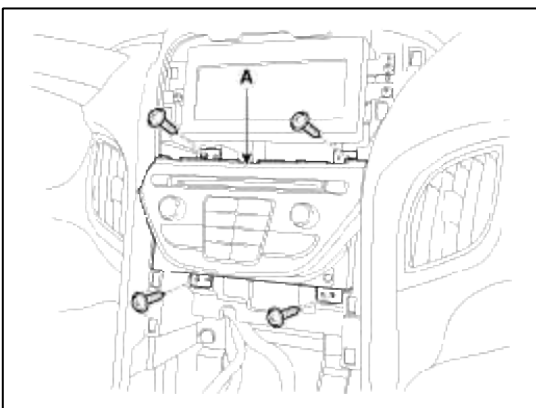


6. Remove the connectors and cable(A).

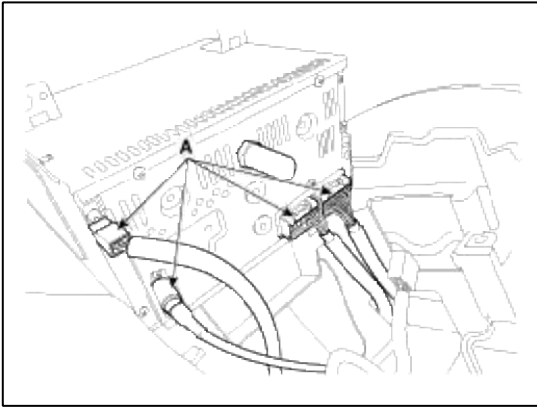


Roof Antenna

1. Remove the rear roof trim.
(Refer to the BD group - "Roof Trim")
2. Disconnect the cable and connector (A) from roof antenna.

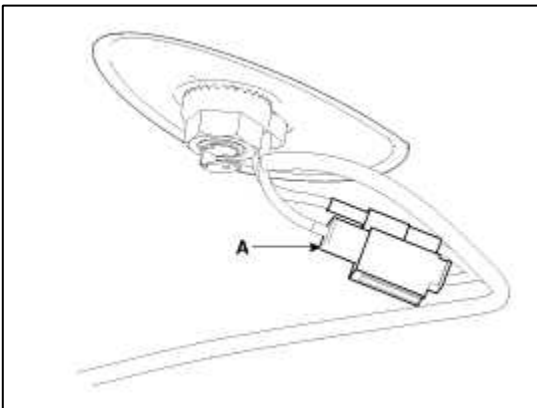

3. Remove the roof antenna after loosening the nut.

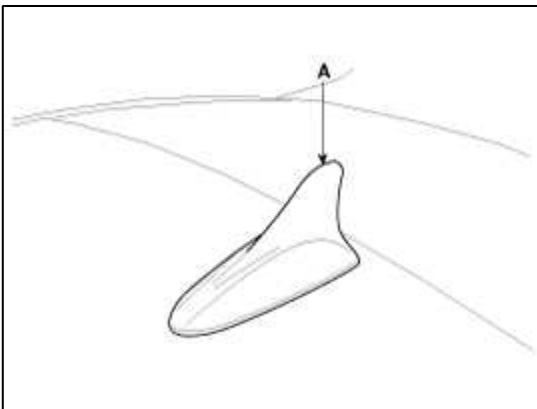

Installation

AVN Head Unit

1. Connect the AVN unit connectors and cables.
2. Install the AVN unit.
3. Install the center fascia lower panel.
4. Install the console upper cover.
5. Check the AVN system.

NOTE

Make sure the AVN head unit connectors are plugged in properly and the antenna cable is connected properly.

Roof Antenna


1. Install the roof antenna and connect the cable and connector.
2. Install the rear roof trim.

Body Electrical System > AVN System > AUX(Auxiliary) Jack > Description and Operation

Description

The multimedia jack on the console upper cover is for customers who like to listen to external portable music players like the MP3, iPod and etc., through the vehicle's sound system when it is linked to this jack. The customer has this added option.


In case of distortions from media connected to the AUX source, the audio unit may not be defect but the output level of the used media does not match the specification of the AUX input.

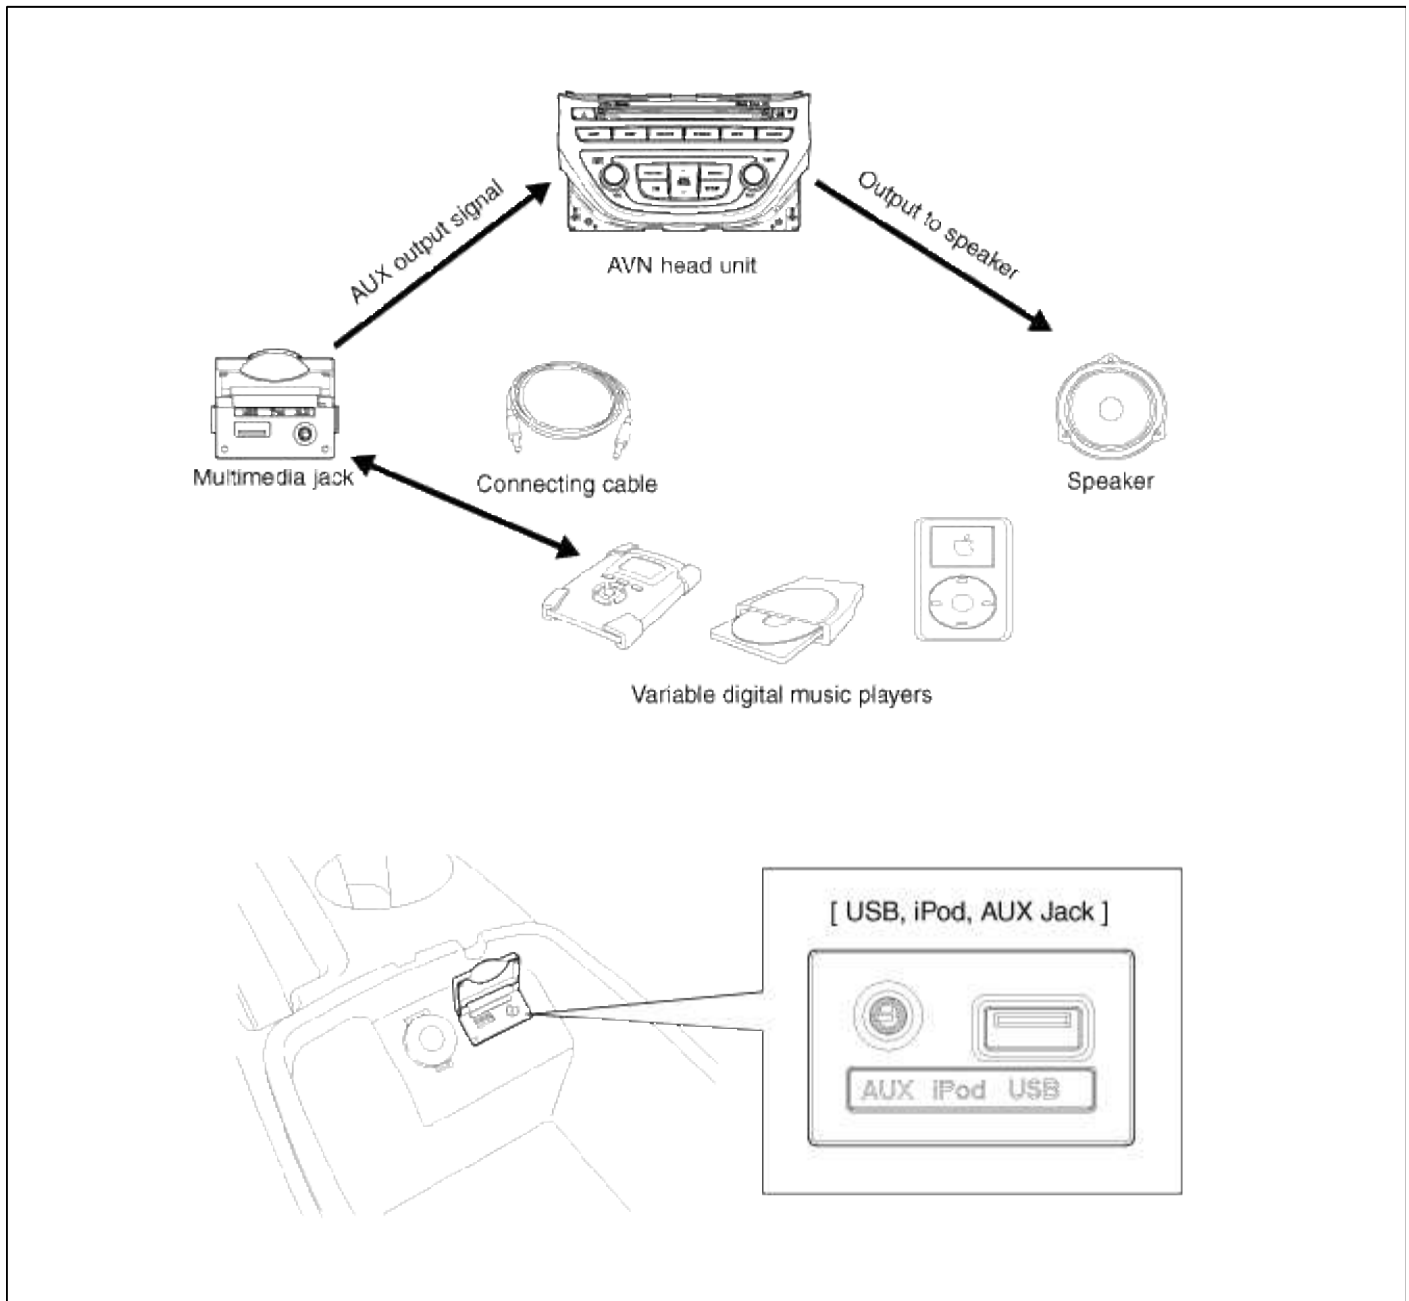

Body Electrical System > AVN System > AUX(Auxiliary) Jack > Schematic Diagrams

Circuit Diagram

[AUX, USB, iPod Jack (AVN)]

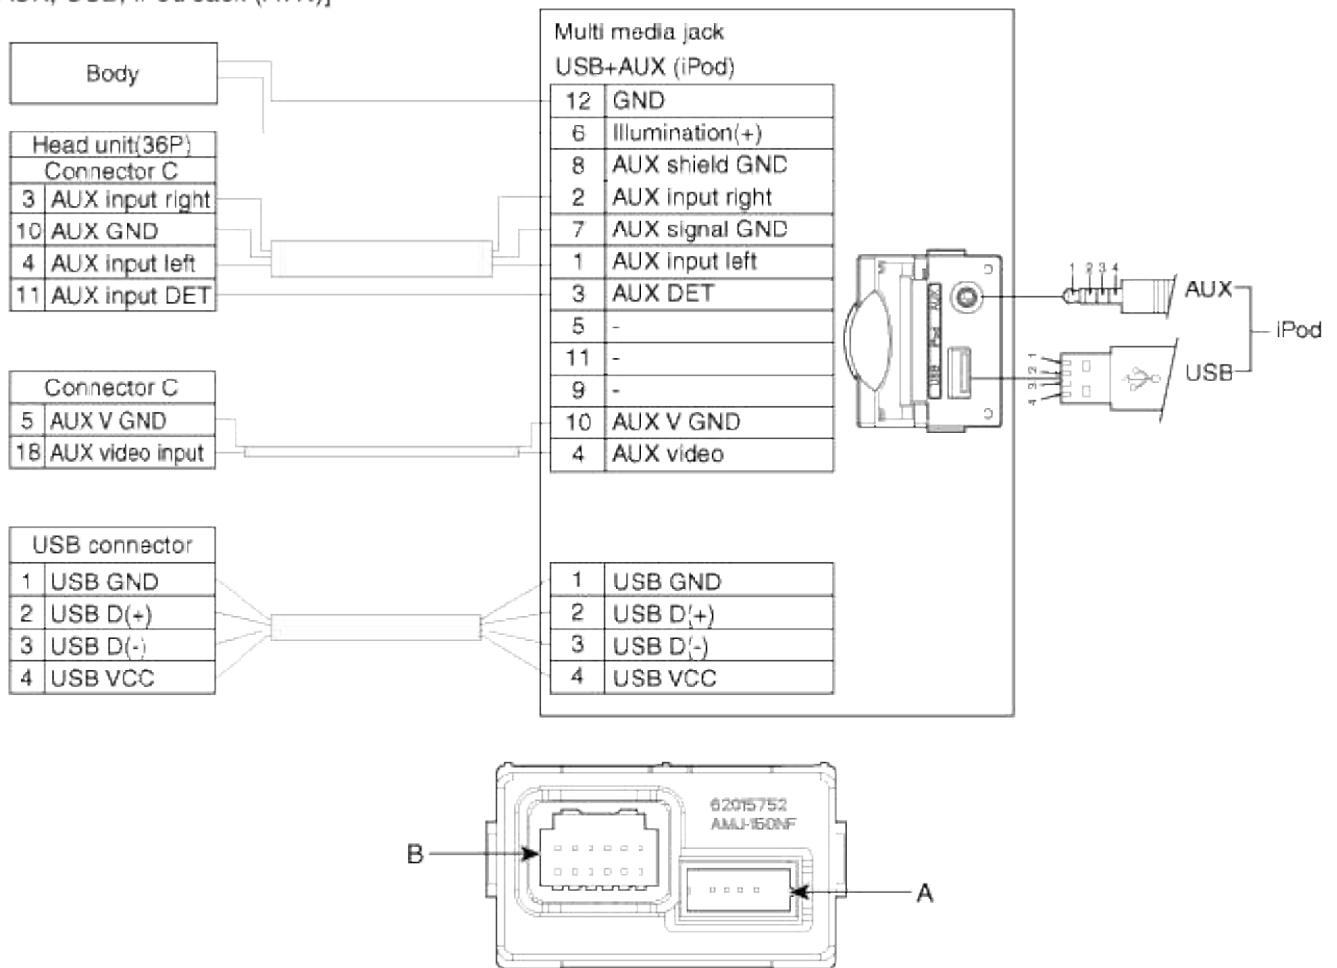

Connector A	No.	USB Connector
	1	USB GND
	2	USB D (+)
	3	USB D (-)
	4	USB VCC


Connector B	No.	AUX(iPod) Connector
	1	AUX input left
	2	AUX input right
	3	AUX DET
	4	AUX video
	5	-
	6	Illumination(+)
	7	AUX signal GND
	8	AUX shield GND
	9	-
	10	AUX V GND
	11	-
	12	GND

Body Electrical System > AVN System > AUX(Auxiliary) Jack > Repair procedures


Removal

1. Disconnect the negative (-) battery terminal.

2. Remove the center fascia lower panner (A).
(Refer to BD group - "Crash pad")

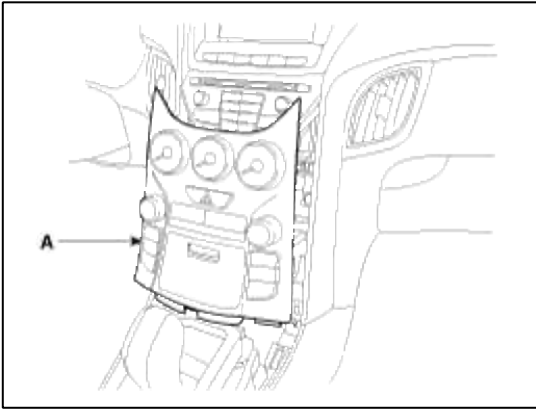

3. Remove the multimedia jack(A) from the center fascia lower pannel after disconnecting the connertor.

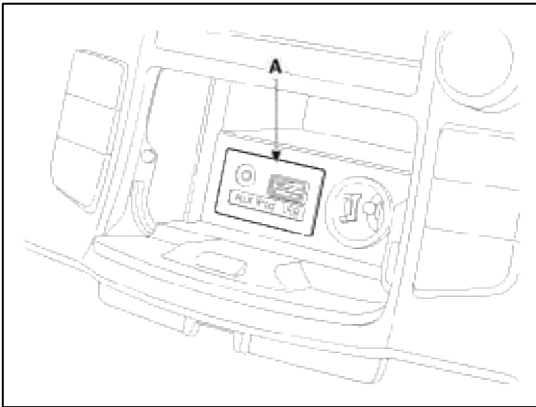

Installation

1. Install the multimedia jack.
2. Connect the AUX jack connector.
3. Install the center fascia lower pannel.

NOTE

Make sure the Aux connector and the console connectors are plugged in properly.

Body Electrical System > AVN System > Troubleshooting

Troubleshooting Guide

Before Thinking The Product Has Malfunctioned

Try the suggestions listed below.

Problem	Function
There are small red, blue, or green dots on the screen	Because the LCD is manufactured with technology requiring high point density, a pixel deficiency or lighting may occur within 0.01% of total pixels.
The sound or image is not working	<ul style="list-style-type: none"> • Has the switch for the vehicle been turned to [ACC] or [ON]? • Has the SYSTEM been turned OFF?
The video is being displayed but sound is not working	<ul style="list-style-type: none"> • Has the volume been set to a low level? • Has the volume been set on mute?
When the power is turned on, the corners of the screen are dark	<ul style="list-style-type: none"> • The display looking somewhat darker after prolonged periods of use is a normal phenomenon with LCD panels. It is not a malfunction. • If the screen is very dark, contact your point of purchase or the nearest service center.
Sound is working from only one speaker	<ul style="list-style-type: none"> • Is the position of FAL/BAL sound controls or volume adjusted to only one side?
Sound and video does not work in AUX mode	Is the audio and video connector jacks fully inserted into the AUX terminal?
The external device is not working	Is the external device connected with a standard connector cable?
The road is missing	Some map data may be missing or incorrect.
The road name is spoken incorrectly	The TTS(Text To Speech) engine speaks the street name based off of the phonetic spelling. This will continuously be update with the map database.

Troubleshooting

Problem	Possible Cause	Solution
The power does not turn on.	The fuse is disconnected.	Replace with a suitable fuse. If the fuse is disconnected again, please contact your point of purchase or service center.
	Device is not properly connected.	Check to see that the device has been properly connected.
XM only goes through one category	The XM mode is in category.	Press the mode button to change to channel mode.
The CD does not play.	The DISC has not been inserted or has been inserted upside down.	Insert the disc properly so that the sides are facing the correct direction.
	The DISC has been contaminated.	Wipe dirt dirt and other foreign substances from the DISC.
	The vehicle battery is low.	Charge the battery. If the problem persists, please contact your point of purchase or service center.
	A disc which is not supported by the device has been inserted.	Insert a disc which is supported for play by the device.
The sound does not	<ul style="list-style-type: none"> • The volume level is set the 	<ul style="list-style-type: none"> • Adjust the volume level.

work.	<p>lowest level.</p> <ul style="list-style-type: none"> • The connector is not properly connected. • The device is currently fast-forwarding, rewinding, scanning, or playing in slow mode. 	<ul style="list-style-type: none"> • Check the connection state. • The sound will not work when the device is fast-forwarding, rewinding, scanning, or playing in slow mode.
The sound or video quality is low.	<ul style="list-style-type: none"> • The DISC is dirty or scratched. • Vibration is occurring from the position in which the conversion switch has been installed. • The color and tone quality of the image is low. 	<ul style="list-style-type: none"> • Wipe off water or dirt from the DISC. Do not use a disc which has been scratched. • The sound may be short-circuited and the image distorted if the device begins to vibrate. The device will return to normal operation once the vibration has stopped. • Aging of the video display and deterioration in performance may cause certain quality degradations.
The USB does not work.	<ul style="list-style-type: none"> • USB memory is damaged. • USB memory has been contaminated. • A separately purchased USB HUB is being used. • A USB extension cable is being used. • A USB which is not a Metal Cover Type USB Memory is being used. • A HDD type, CF, SD Memory is being used. • There are no music files which can be played. 	<ul style="list-style-type: none"> • Please use after formatting the USB into FAT 12/16/32 format. • Remove any foreign substances on the contact surface of the USB memory and multimedia terminal. • Directly connect the USB memory with the multimedia terminal on the vehicle. • Directly connect the USB memory with the multimedia terminal on the vehicle. • Use a standard USB memory. • Use a standard USB memory. • Only MP3, WMA file formats are supported. Please use only the supported music file formats.
The iPod is not recognized even though it has been connected.	<ul style="list-style-type: none"> • There are no titles which can be played. • The iPod firmware version has not been properly updated. • The iPod device does not recognize downloads. 	<ul style="list-style-type: none"> • Use iTunes to download and save MP3 files into the iPod. • Use iTunes to update the firmware version and reconnect the iPod with the device. • Reset the iPod and reconnect with the device.

Body Electrical System > Smart key System > Specifications

Specification

Smart Key Unit

Items	Specification
Rated voltage	DC 12V
Operating voltage	DC 9 ~ 16V
Operating temperature	-30°C ~ 75°C (-22°F ~ 167°F)
Load	Max. 2mA

RF Receiver

Items	Specification
Frequency	315 MHz
Antenna type	FSK (Frequency Shift Keying)

Smart Key FOB


Items	Specification
Battery	Lithium battery 3V 1EA
Distance	30m
Battery life	More than 2years (10 times / a day)
Push buttons	Door lock / unlock, Trunk lid / Panic
Frequency(Rx)	125 kHz
Frequency(Tx)	315 MHz
Numbers	2EA

Antenna

Items	Specification
Rated voltage	DC 12V
Operating voltage	DC 9 ~ 16V
Operating temperature	-30°C ~ 75°C (-22°F ~ 167°F)
Frequency	125kHz
Numbers	Interior(3EA), Door(2EA), Bumper(1EA)


Body Electrical System > Smart key System > Components and Components Location

Component Location (1)

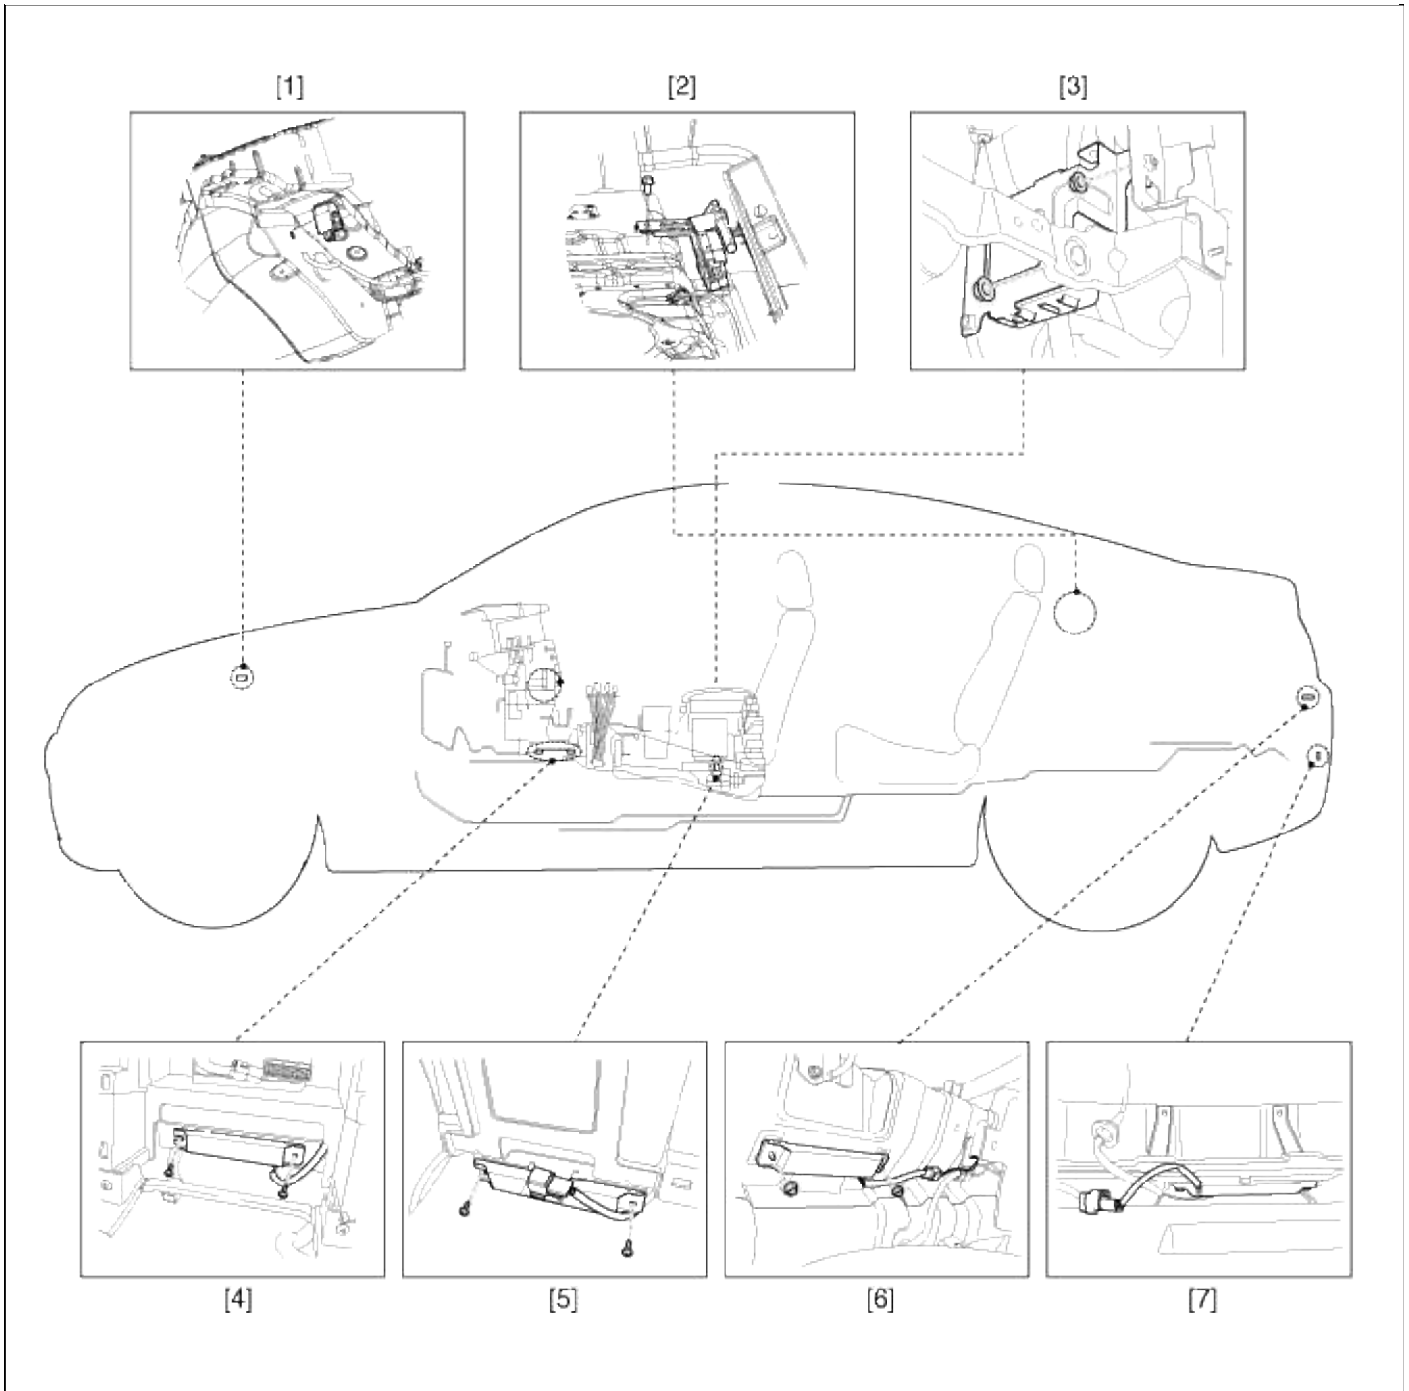

1. Buzzer	5. Interior antenna 2
2. RF receiver	6. Trunk antenna
3. SMART KEY unit	7. Bumper antenna
4. Interior antenna 1	

Component Location (2)

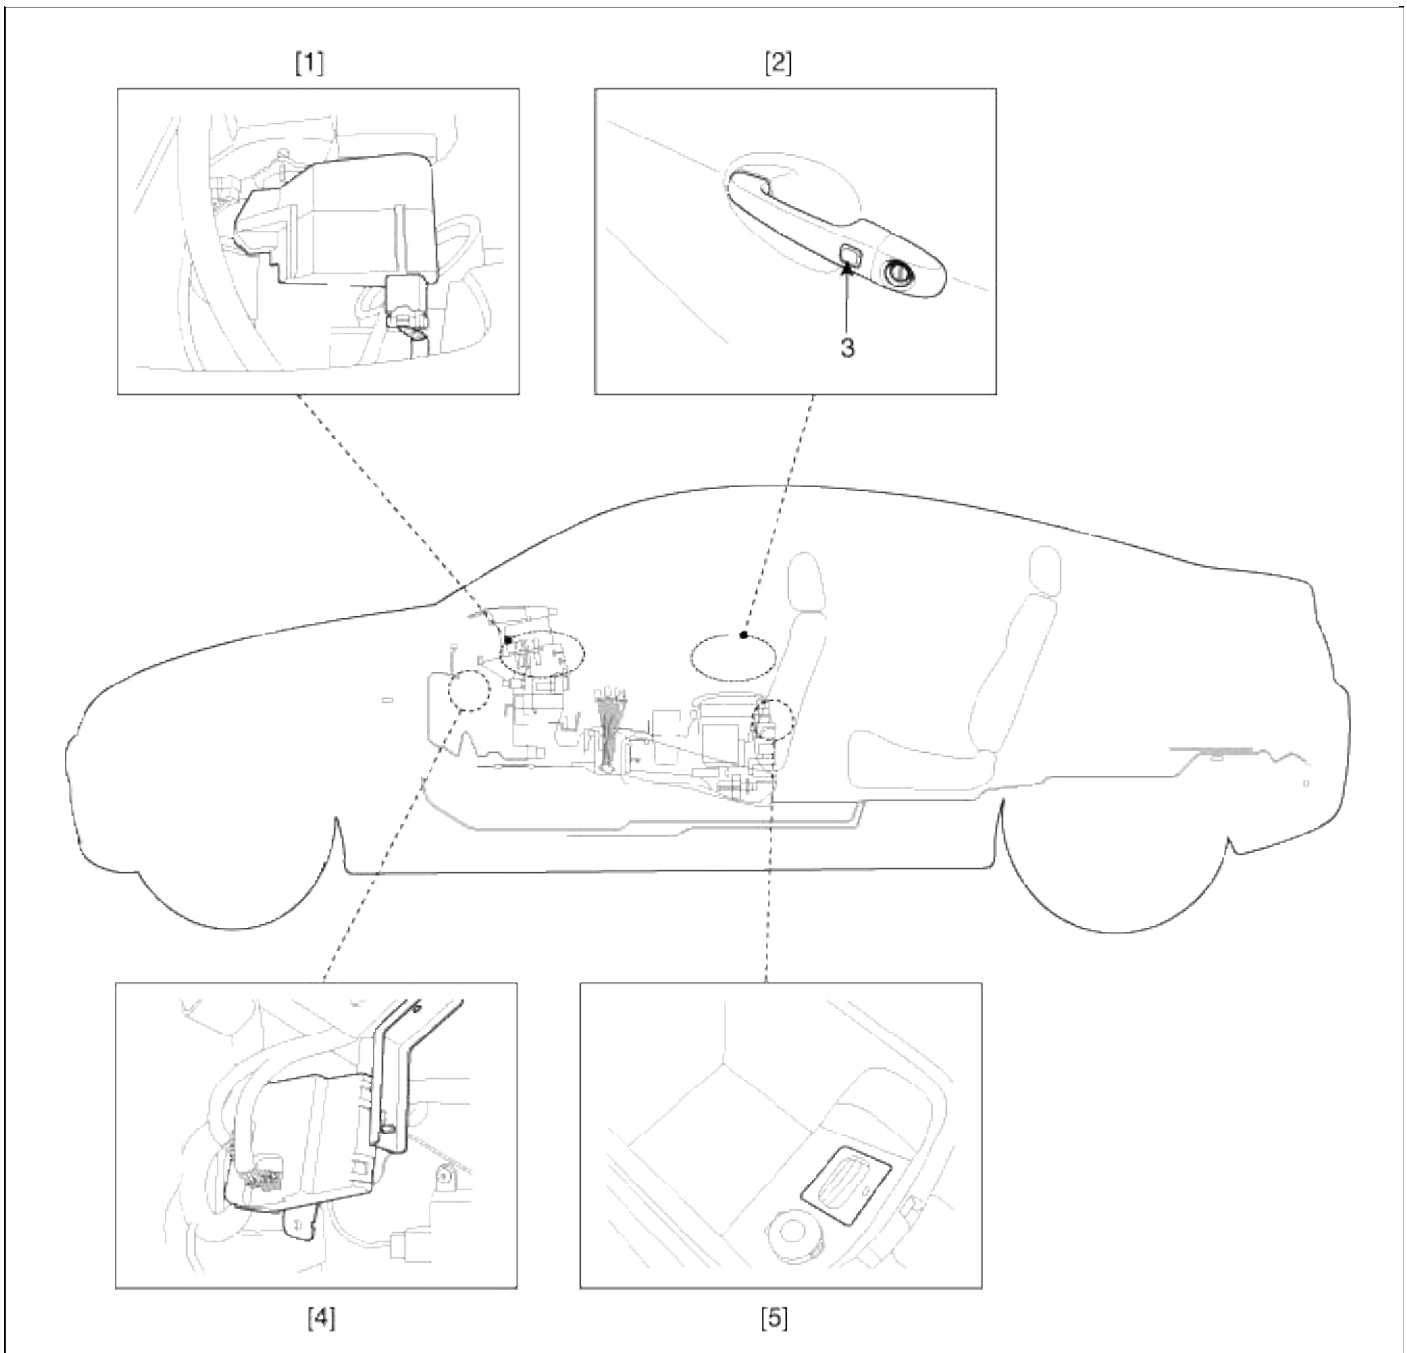

1. Electronic Steering Column Lock (ESCL)	4. PDM
2. Door outside handle	5. FOB holder
3. Door outside handle button	

Body Electrical System > Smart key System > Description and Operation

Description

The SMART KEY system is a system that allows the user to access and operate a vehicle in a very convenient way. To access the vehicle, no traditional key or remote control unit is needed.

The user carries a SMART KEY FOB which does not require any conscious actions by the user (e.g. operate a RKE button). The SMART KEY system is triggered by pressing a push button in the door handle.

After being triggered the vehicle sends out a request in a limited range. If the SMART KEY FOB receives this request, it automatically sends a response to the vehicle. Then the system decides whether to perform a particular

action (unlocking, locking...) or remain inactive.

In a similar manner the vehicle's Electrical Steering Column Lock (ESCL) is released. Again, a communication between the vehicle and the SMART KEY FOB is needed before any actions will be performed.

The System offers the following features :

- passive unlock via door driver side and passenger side
- passive locking via door driver side and passenger side
- passive start
- passive access trunk via the trunk lid switch at the trunk
- passive locking via tailgate
- max. 2 fobs can be handled by the system
- immobilizer backup antenna driver integrated into FOB-HOLDER for TP authentication (i.e. limp home mode)
- communication with engine management system
- communication with SRX
- LF-RF communication

1. Passive unlock

The system allows the user to access (unlock) the vehicle without performing any actions with the SMART KEY FOB. This feature could be different depending on platform as follows:

A. Pressing Push button in door handle

2. Passive locking

The system allows the user to lock the vehicle by pushing a button on door handle with the SMART KEY FOB.

3. Button start

The system allows the user to release ESCL and to switch the power modes (Off, Accessory, Ignition), as well as to start and stop the vehicle's engine without performing any actions with the SMART KEY FOB. See Button Engine Start system specification.

4. LIMP HOME Mode

Additionally, the system offers so called "limp home mode", which is the user can operate all vehicle functions by inserting the key into the FOB HOLDER.

Smart Key ECU (SMK ECU)

The SMK ECU manages all functions related to "Passive Unlock", "Passive Lock" and "Passive Authorization for Engine Start Operation".

It reads the inputs (Push button in door handle, Start Stop Button (SSB), PARK position Switch), controls the outputs (e.g. exterior and interior antennas), and communicates via the CAN/LIN (depends on the vehicle) as well as a single line interface to further devices of the car.

It reads the inputs (Push button in door handle, Start Stop Button (SSB), PARK position Switch), controls the outputs (e.g. exterior and interior antennas), and communicates via the CAN as well as a single line interface to further devices of the car.

For communication with the SMART KEY FOB, SMK ECU generates a request (challenge) as an encoded and modulated 125 kHz signal at the inductive antenna outputs and receives the SMART KEY FOB's response via the external RF receiver.

The main functional blocks of the SMK ECU are:

- Power supply
- Microcontroller with FLASH Memory
- Single Line Interface to SRX
- Single Line Interface to EMS
- Input stage
- LF antenna amplifier/driver
- CAN communication with BCM
- LIN communication with other unit (depending on platform)

The LF antenna amplifier/driver generates a 125 kHz sinusoidal carrier signal which is distributed to the different

antennas.

Smart Key FOB

The system supports up to 2 SMART KEY FOBs.

The main functions of the SMART KEY FOB are:

- Passive functionality: receives LF-challenge and sends automatically RF response.
- Classic RKE function by action up to 6 push buttons.
- Transponder-functionality in case of a flat battery or a disturbed communication.
- LED for operation feedback and battery monitoring.

NOTE

The FOB's LED indicator may continue to light even with a low transmitter battery.
If the performance or range of the FOB is less than expected, check the transmitter battery.

Antennas

1. Emitting LF Antennas:

Inductive antennas in and at the vehicle are used to transform the current, driven by the SMK ECU antenna driver, into a 125 kHz magnetic field, which is the carrier for the SMART KEY challenge.

Three antennas cover the vehicle's exterior: two antennas in the Door Handles (DS and PS) cover the area around the doors; one antenna in the rear bumper covers the area around the trunk.

Up to three antennas cover the vehicle's interior and the trunk interior: two in the passenger compartment and one in the trunk.

2. Bidirectional Immobilizer Antenna (for Limp Home):

The Immobilizer Backup Antenna is used for sending and receiving data: it emits a magnetic field (125 - 135 kHz challenge) and receives changes in the field strength (response of Transponder).

3. External Receiver

The SMART KEY FOB's response is received via the external RF receiver, which is connected to the SMK ECU via a serial communication Line.

The SMK ECU provides a connector pin for the serial communication Line.

Door Handle

The front door handles of the two doors (driver door / passenger door) are equipped with emitting LF-antennas to emit the 125 kHz signals. The front door handles are also equipped with a push button.

Push Button

The push button in door handle serves as a trigger to indicate the user's intent to unlock or lock the vehicle.

The push buttons are installed at front doors, integrated into the door handles.

Another button is installed at the trunk lid.

Operation

Passive Functions

The system allows the user to access the vehicle without having to perform any actions (e.g. RKE button pressing) with the SMART KEY FOB. It is sufficient that a valid SMART KEY FOB is located within a defined and limited range with respect to the vehicle. So the system is capable of detecting and authenticating a SMART KEY FOB in the ranges as specified below.

Operating Range

The SMART KEY FOB receives and interprets a challenge sent from the vehicle via the exterior antennas in a free space range of min. 0.7m measured around the exterior antennas which are integrated in the door handles; refer to the below given picture. The trunk access range is also min. 0.7m measured from the antenna position.

The SMART KEY FOB receives and interprets a challenge sent from the vehicle via the exterior antennas in a free space range of min. 0.7m measured around the exterior antennas which are integrated in the door handles; refer to the below given picture

Passive Access (Passive Entry)

Pressing one of the push buttons in the door handles when all doors locked indicates the operator's intent to access

the vehicle and thus triggers the system for unlock

Passive Locking (Exit)

Pressing one of the push buttons in the door handles when one of the following condition is fulfilled:

- At least one door is unlocked and two_steps timer is not running or
- Two_steps timer is running and one of the push button except Front Left side is triggered

indicates the operator's intent to lock the vehicle and thus triggers the system for a lock.

Passive Open Tailgate

Pressing the Trunk Lid Switch when trunk is closed indicates the operator's intent to open the trunk and thus triggers the system. Subsequently, the SMK ECU sends a LF-challenge to the SMART KEY FOB via the exterior bumper antenna. The SMART KEY FOB answers with a RF-response. If the received response matches the expected answer, SMK ECU sends a "trunk open" message via the CAN network.

Passive Trunk Warning

Whenever the trunk is closed, SMK ECU uses a suitable search strategy to avoid trunk buzzer warning by a fob outside the vehicle. Then SMK searches for a SMART KEY FOB in the interior of the trunk. If a valid SMART KEY FOB is found in the trunk, the SMK ECU activates SMK external buzzer (TBD) to inform the user that the trunk has been closed with a fob inside the trunk.

SMK will send the trunk open command to BCM for trunk reopening if Trunk reopening bit is set(BK)For this functionality, a "valid" SMART KEY FOB means any SMART KEY FOB that belongs to the vehicle, even if it's DEACTIVATED.

NOTE

- A blind spot in the trunk similar to any RF disturbance may lead to no trunk warning. Due to the penetration of the bumper antenna into the trunk area the lid may open without an Identification Device outside.
- A blind spot in the trunk similar to any RF disturbance may lead to no trunk warning

Smart Key Reminder 1

1. Preconditions:

All terminals OFF & at least one door open & locking status is not locked checked by SMK periodically every 100ms, as long as CAN/LIN active.

2. Event:

At least 1 door knob status changed from unlock to lock.

3. SMK actions:

A. IF NO FOB-IN ACTIVE

SMK performs a search for the fobs in the interior of the vehicle. The same LF-strategy has to be used as it is defined for the ID out warning (registering only, no authentication)

B. IF FOB-IN ACTIVE

SMK sends request toward PDM to search valid TP

If no fob or no TP has been found, no action is required.

If any valid fob or valid TP has been found, SMK unlocks the vehicle by sending a CAN Key Reminder unlock message with the fob number.

If any valid fob has been found, SMK unlocks the vehicle by sending a CAN/LIN Key Reminder unlock message with the fob number.

Smart Key Reminder 2

1. Preconditions:

All terminals OFF & any door (including trunk) open & no FOB-IN & no locking status (checked by SMK periodically every 100ms, as long as CAN/LIN active)

2. Vehicle action:

Closing last door or trunk with knobs locked state, or with a locking in progress

3. SMK actions:

Before elapsing 500ms after the closing if all doors are locked then:

A. IF NO FOB-IN ACTIVE

SMK performs a search for the fobs in the interior of the vehicle.

The same LF-strategy has to be used as it is defined for the ID out warning (registering only, no authentication)

B. IF FOB-IN ACTIVE

SMK sends request toward PDM to search valid TP

If no fob has been found, no action is required.

If any valid fob or valid TP has been found, SMK sends unlock command via CAN and activates ext. buzzer warning.

If any valid fob has been found, SMK sends unlock command via CAN/LIN and activates ext. buzzer warning.

Smart Key Door Lock Warning

Door Lock Warning 1

1. Preconditions:

While (at least one door knob is unlocked) & (ACC ON or IGN ON) & (No FOB-IN) :

A. (All doors are closed) & (trunk closed)

2. Event:

A. User presses the push button in door handle or trunk

3. SMK actions:

SMK performs a search for the fobs outside of the vehicle; the same LF-strategy has to be used as it is defined for "Scenario Access with I/O Distinction".

Door Lock Warning 2

1. Preconditions:

Same as passive locking precondition but with at least one door open.

2. Event:

User presses the door handle Push button .

3. SMK actions:

SMK performs a search for the fobs outside of the vehicle; the same LF-strategy has to be used as it is defined for "Scenario Access with I/O Distinction".

If no fob has been found, no action is required.

If the preconditions are no longer valid during buzzer active time (3 seconds), the SMK ECU stops the buzzer immediately.

Door Lock Warning 3

1. Preconditions:

Same as passive locking precondition

2. User action:

A. User presses the door handle Push button

3. SMK ECU actions:

A. If ATWS(Anti Theft Warning System) is in DISARM status, SMK ECU performs a search for the fob inside of the vehicle (use "Door Lock Warning 3" scenario)

If no fob has been found, the passive locking is performed.

If any valid fob has been found, SMK ECU activates the external buzzer.

If the activity timer elapsed or ACC ON or IGN1 ON or NOT All door closed or FOB-IN, the SMK ECU stops the buzzer immediately.

After searching of inside fob, SMK ECU also performs a search for fobs outside of the vehicle.

Smart Key Lamp Warning

1. SMK actions:

As long as the preconditions are valid, the SMK ECU performs a periodical search for the fobs in the interior of the vehicle; the same LF-strategy has to be used as it is defined for the ID out warning (registering only, no authentication); periodical means, the search is done every 3 seconds.

If no fob has been found, the SMK ECU starts Key out indicator lamp activation as all preconditions are valid and will perform another search 3 seconds later.

If any valid fob has been found, the SMK ECU stops the Key out indicator lamp and will (if one door is open) perform another search 3 seconds later; if no door is open then it's only at the next When the preconditions are still valid, the search resumes by opening of one door.

Failsafe Functions (Backup For Limp Home)

In case of a discharged battery of the SMART KEY FOB or disturbed transmission, the following functions are available:

- Unlocking / locking of doors or trunk (or tailgate depending of the vehicle configuration): use of mechanical key

User Information Functions

ID OUT Warning

1. Preconditions:

A. (ACC or IGN1) & (any door open or trunk open)

2. Event:

The last opened door is closed

3. SMK action:

SMK searches for a SMART KEY FOB in the interior.

A. If no valid SMART KEY FOB is found, the SMK activates external buzzer and also sends ID OUT WNG via CAN (exterior buzzer warning and internal buzzer warning).

B. If a door is opened and closed again during terminals on and inside valid fob, SMK re-enables the authentication and stops the warning. If the terminal is in ACC, SMK shall turn on immobilizer lamp.

NOTE

If there is a LF error (LF overheating or LF antenna failure), the system will have the same behavior as it is with no fob found.

Immobilizer Lamp

Removing the PIF from the MSL and reinserting the PIF and pushing the MSL Knob will switch the lamp on again.

Fob Battery Low Voltage Detection

To detect fob low battery condition, certain battery voltage measurement and low voltage detection strategy are implemented into fob. The measurement of the battery voltage will be done if fob button is pressed or if a LF measurement command is received.

If the fob has detected a low battery voltage, the LED will not be switched on at button press.

Learning Description

In this chapter, the learning procedure for SMK, PDM, ESCL and FOBs is described.

For the learning of the SMK, PDM, ESCL and FOBs, it's necessary to have a connection to the diagnostic tool.

Learning MODE

Whatever the mode, the learning procedures are managed by the SMK.

Prior to start learning service, Fob-In signal must be active and the vehicle secret code (called as PIN code) should be known.

Teaching MODE


This mode is used by the dealers in order to replace SMK and/or PDM and/or ESCL and/or the set of keys, or to register additional keys for an existing system. That means the system already has been learnt with certain PIN Code. The PIN Code is fixed for the life time of the vehicle, therefore the same PIN Code must be used in this mode. Otherwise learning will be failed

Teaching MODE Procedure Description (Step By Step)

Objective: Key teaching procedure at service station

Initial state:

- SMK replacement: SMK is not learnt, PDM and ESCL and SMART FOB are already learnt with same PIN code
- PDM replacement: PDM is not learnt, SMK and ESCL and SMART FOB are already learnt with same PIN code
- ESCL replacement: ESCL is not learnt, SMK and PDM and SMART FOB are already learnt with same PIN code
- Additional or new keys teaching: SMK and PDM and ESCL are already learnt with same PIN code

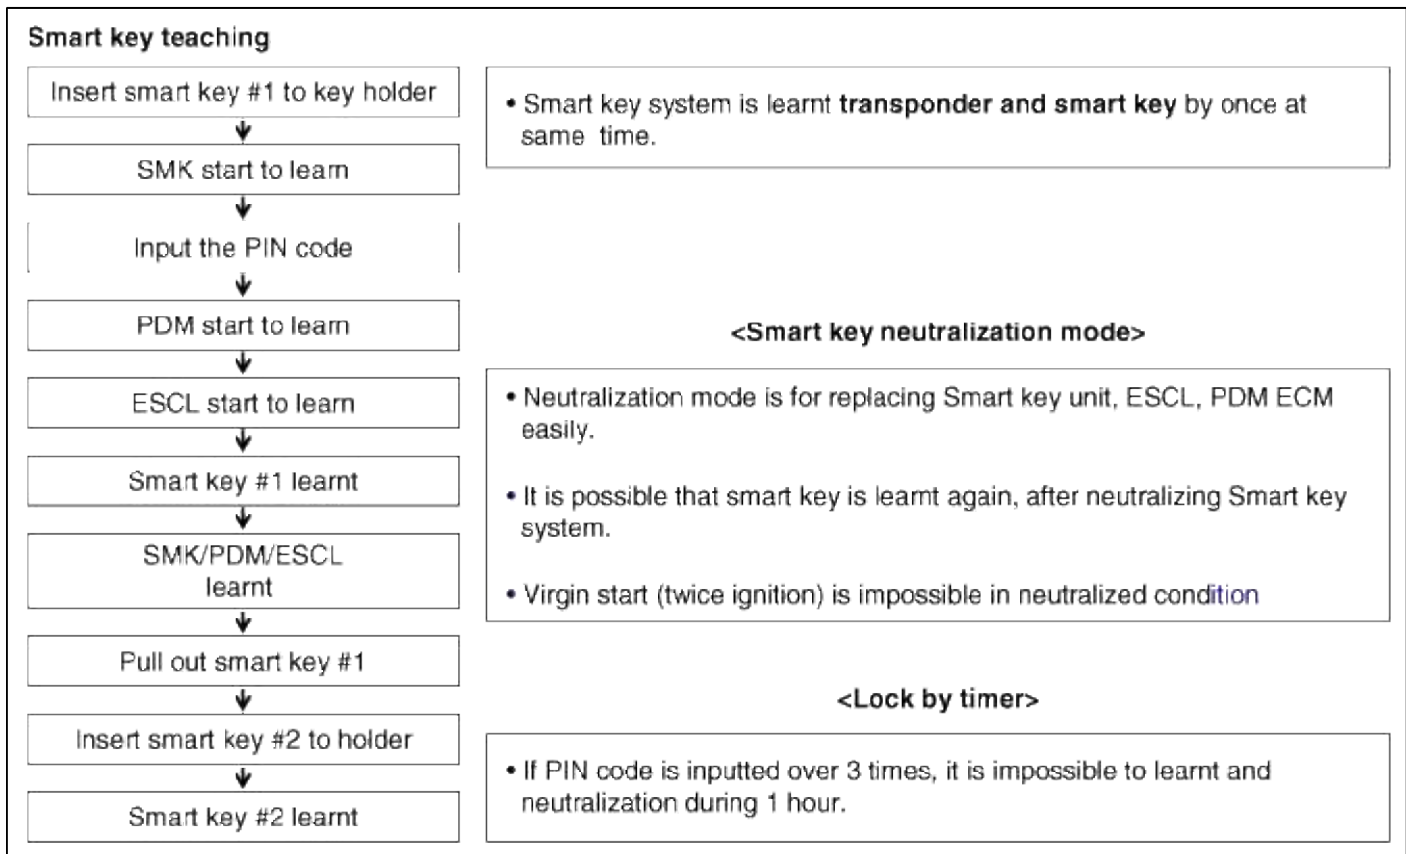

Starting After Replacing (Virgin Start)

Starting is possible by following process after replacing new smart key unit , PDM, FOB key or ESCL.

- It is for starting at virgin condition
- All related parts are virgin condition (Smart key, IPM, PDM, ESCL ECM)
- ESCL is always unlock at virgin
- When virgin smart key is inserted in smart key holder, possible to start, IG ON and ACC position
- Press brake pedal in P or N range
- After inserting virgin smart key to holder, push start button once.



Body Electrical System > Smart key System > Repair procedures

Inspection

Self Diagnosis With GDS

Smart key system defects can be quickly diagnosed with the GDS. GDS operates actuator quickly to monitor, input/output value and self diagnosis.

The following three features will be major problem in SMART KEY system.


1. Problem in SMART KEY unit input.
2. Problem in SMART KEY unit.
3. Problem in SMART KEY unit output.

The following three diagnostic solutions will be the main solution process to a majority of concerns.

1. SMART KEY unit Input problem : switch diagnosis
2. SMART KEY unit problem : communication diagnosis
3. SMART KEY unit Output problem : antenna and switch output diagnosis

Switch Diagnosis

1. Connect the cable of GDS to the data link connector in driver side crash pad lower panel, turn the power on GDS.
2. Select the vehicle model and then SMART KEY system.

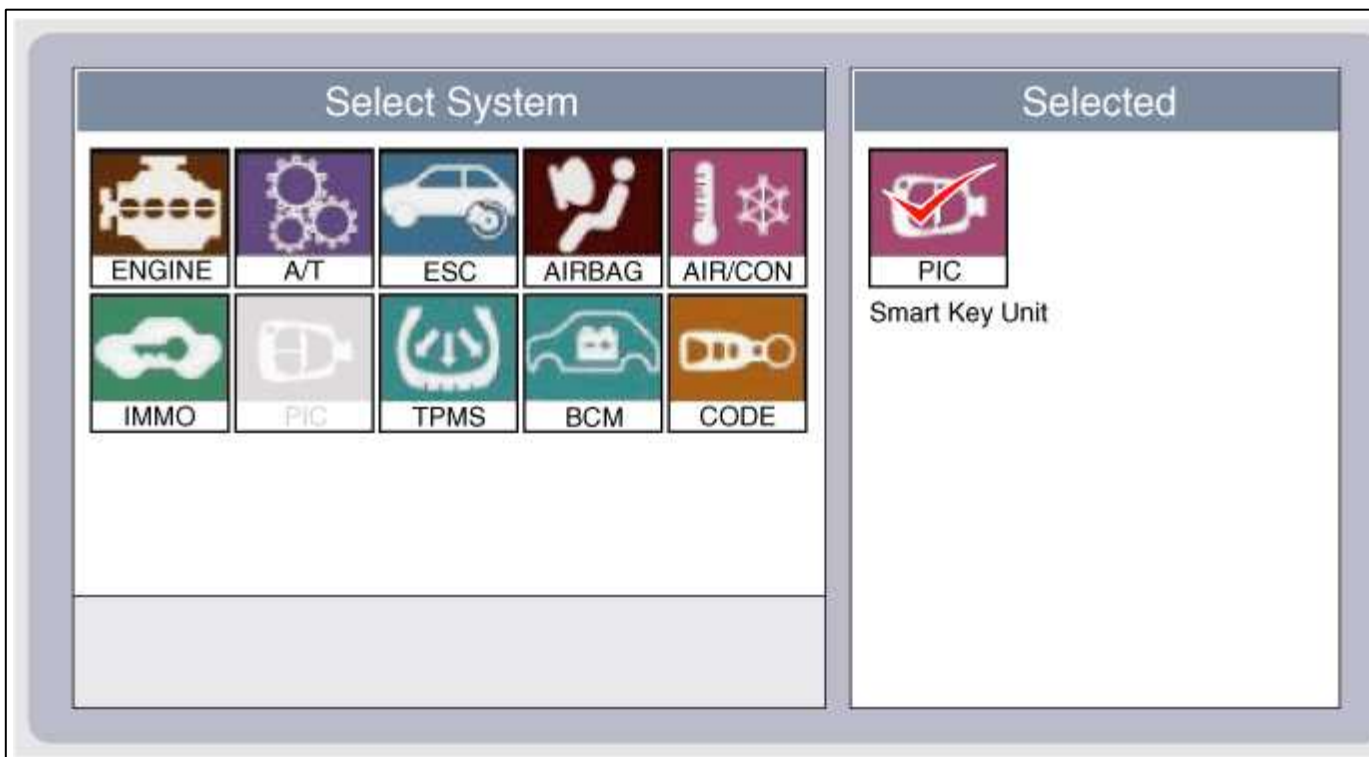

3. Select the "SMART KEY unit".
4. After IG ON, select the "Current data".

The screenshot shows the 'Current Data' interface. At the top, there are buttons for 'Selective Display', 'Full List', 'Graph', 'Item List', 'Reset Min/Max', 'Record', and 'Stop'. Below these buttons is a table with the following columns: Sensor Name, Value, Ref. Min, Ref. Max, Unit, and Test Condition.

Sensor Name	Value	Ref. Min	Ref. Max	Unit	Test Condition
<input type="checkbox"/> SSB SW2	OFF	-	-	-	-
<input type="checkbox"/> ACC	ON	-	-	-	-
<input type="checkbox"/> Gearshift P position[AT]/Clutch[MT]	ON	-	-	-	-
<input type="checkbox"/> Brake SW	OFF	-	-	-	-
<input type="checkbox"/> Driver door lock button	OFF	-	-	-	-
<input type="checkbox"/> Assist door lock button	OFF	-	-	-	-
<input type="checkbox"/> Tail gate state	OFF	-	-	-	-
<input type="checkbox"/> IGN1	ON	-	-	-	-

5. You can see the situation of each switch on scanner after connecting the "current data" process.

Display	Description
FL Toggle switch	ON : Push button is ON in the driver door handle.
FR Toggle switch	ON : Push button is ON in the assist door handle.
Trunk switch	ON : Trunk button is ON.
Gear P Position	ON : Shift lever is P position.
IGN 1	ON : IGN switch is IG position.
ACC	ON : IGN switch is ACC position.
Push Knob switch	ON : Push knob switch is ON.
External Buzzer	ON : Buzzer is ON.


Communication Diagnosis With GDS (Self Diagnosis)

1. Communication diagnosis checks that the each linked components operates normal.
2. Connect the cable of GDS to the data link connector in driver side crash pad lower panel.
3. After IG ON, select the "DTC".



Antenna Actuation Diagnosis

1. Connect the cable of GDS to the data link connector in driver side crash pad lower panel.
2. After IG ON, select the "ACTUATION TEST".

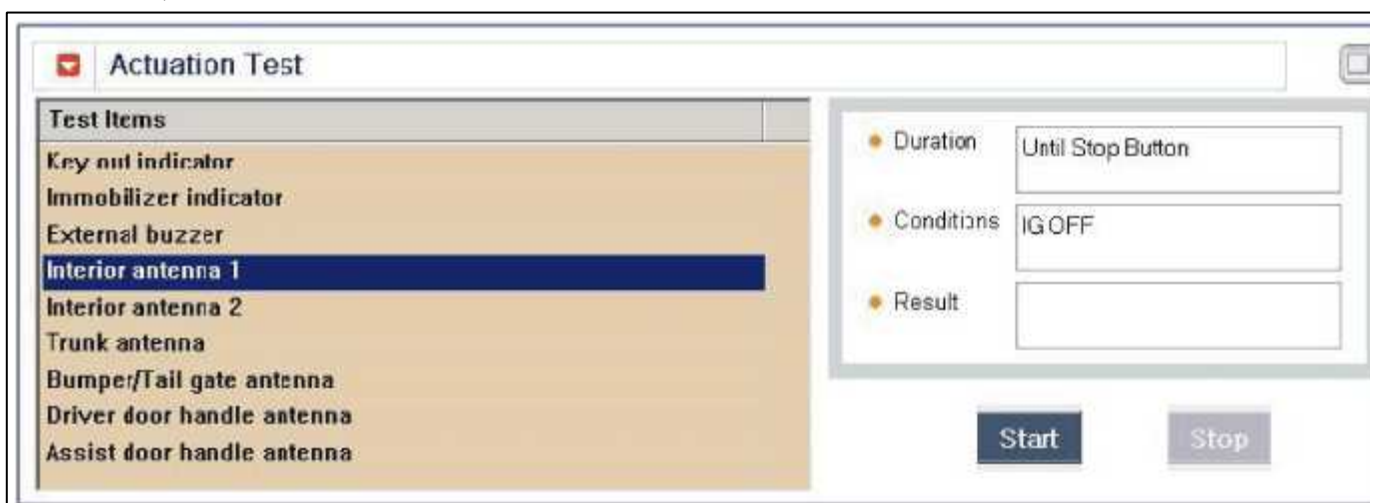

3. Set the smart key near the related antenna and operate it with a GDS.



4. If the LED of smart key is blinking, the smart key is normal.


5. If the LED of smart key is not blinking, check the voltage of smart key battery.

6. Antenna actuation

- A. INTERIOR Antenna 1
- B. INTERIOR Antenna 2
- C. Trunk antenna
- D. BUMPER/Antenna
- E. DRV_DR Antenna
- F. AST_DR Antenna

Antenna Status Check


1. Connect the cable of GDS to the data link connector in driver side crash pad lower panel.
2. Select the "Antenna Status Check".

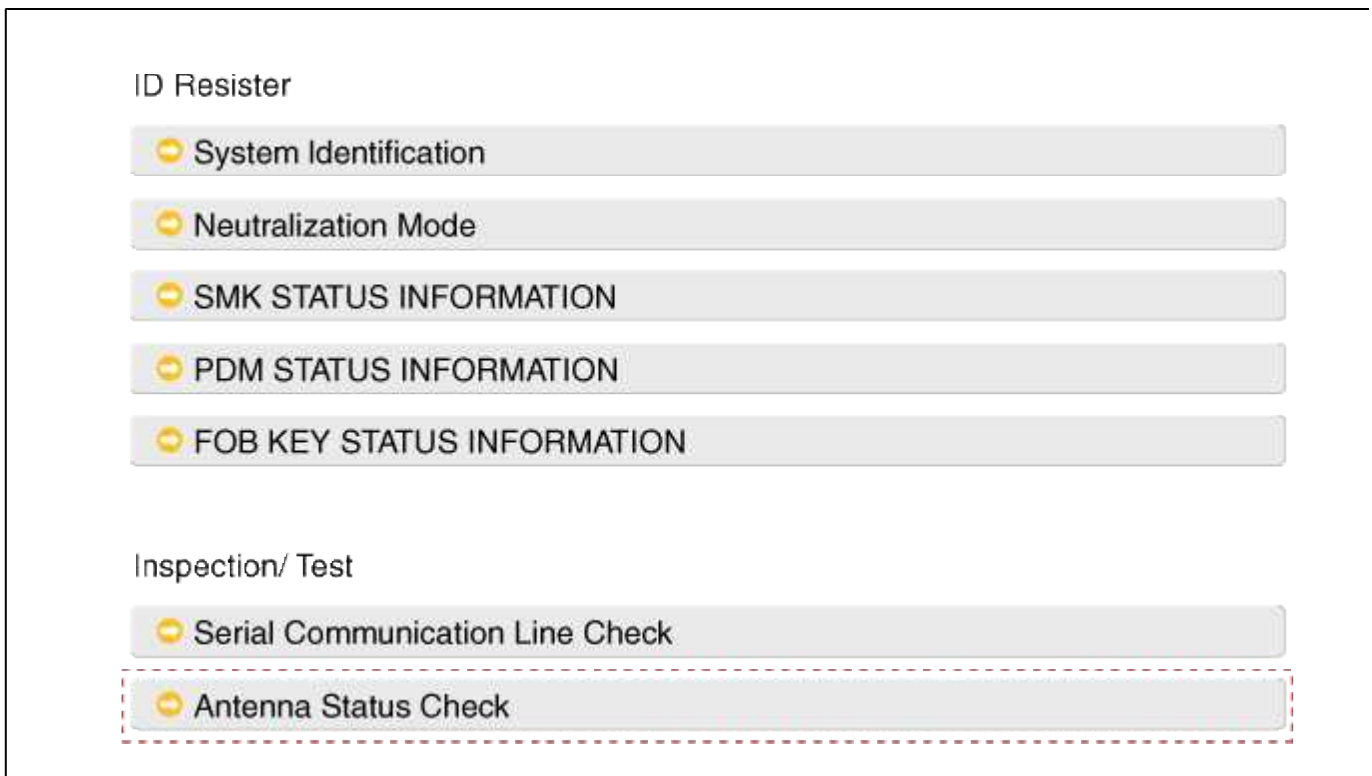


3. After IG ON, select the "Antenna Status Check".



4. Set the smart key near the related antenna and operate it with a GDS.

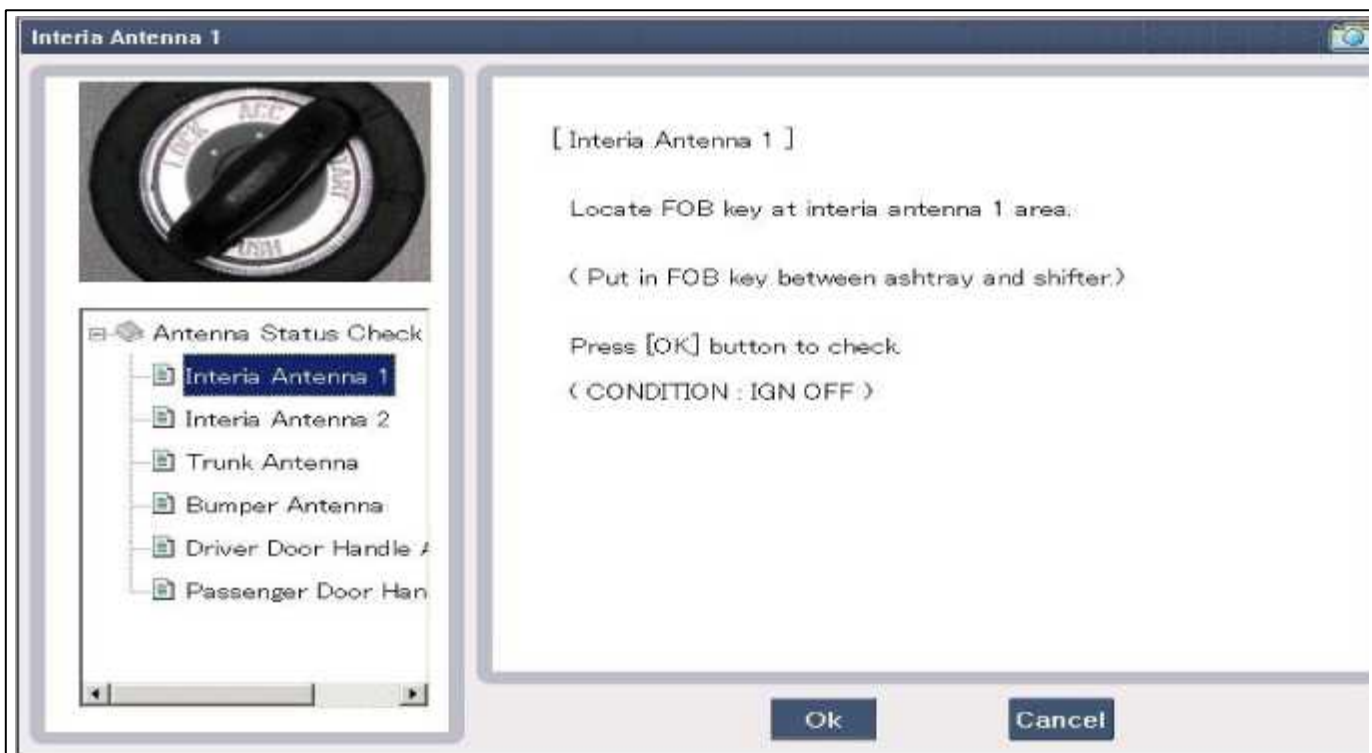

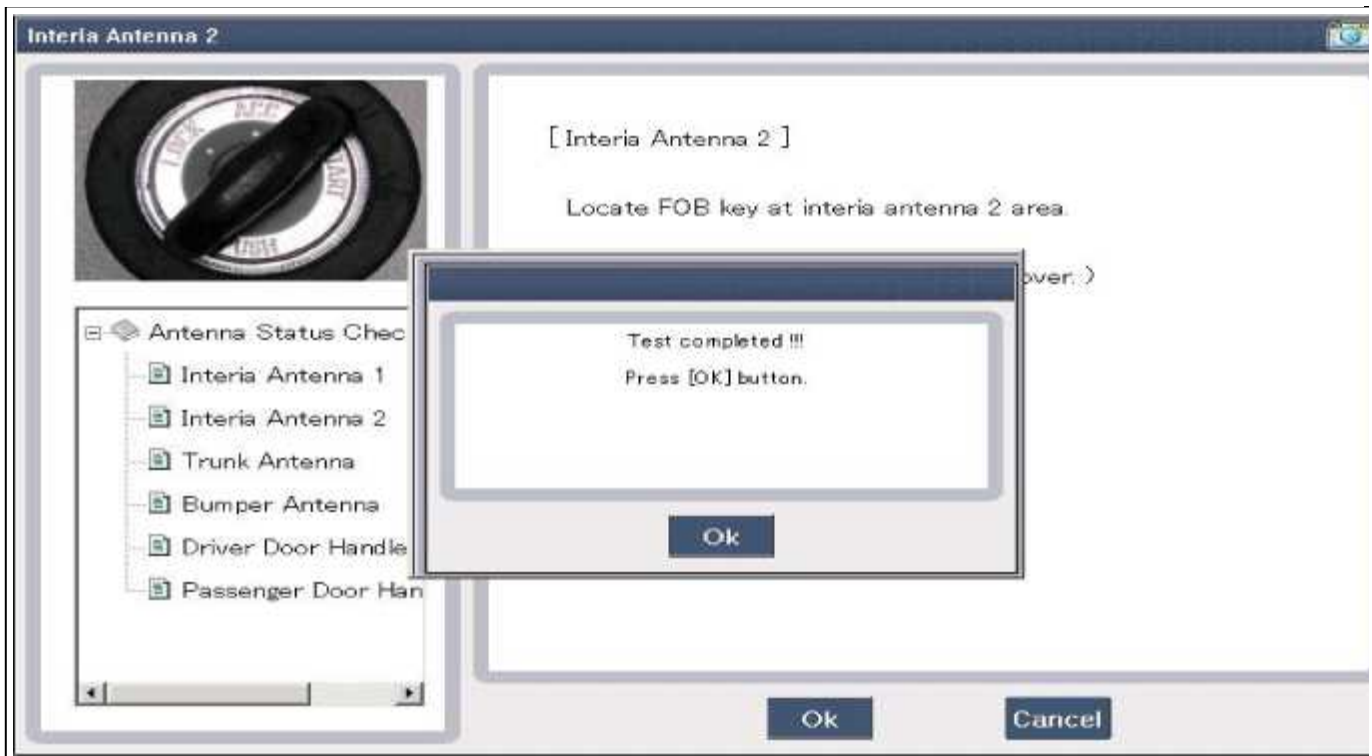

5. If the smart key runs normal , the related antenna, smart key(transmission, reception) and exterior receiver are normal.

6. Antenna status

- A. INTERIOR Antenna 1
- B. INTERIOR Antenna 2
- C. Trunk antenna
- D. BUMPER/Antenna
- E. DRV_DR Antenna
- F. AST_DR Antenna

Serial Communication Status Check

1. Connect the cable of GDS to the data link connector in driver side crash pad lower panel.
2. Select the "Serial Communication Line Check".

ID Resister

System Identification

Neutralization Mode

SMK STATUS INFORMATION

PDM STATUS INFORMATION


FOB KEY STATUS INFORMATION

Inspection/ Test

Serial Communication Line Check

Antenna Status Check

3. After IG ON, select the "Receiver Communication Line Check".

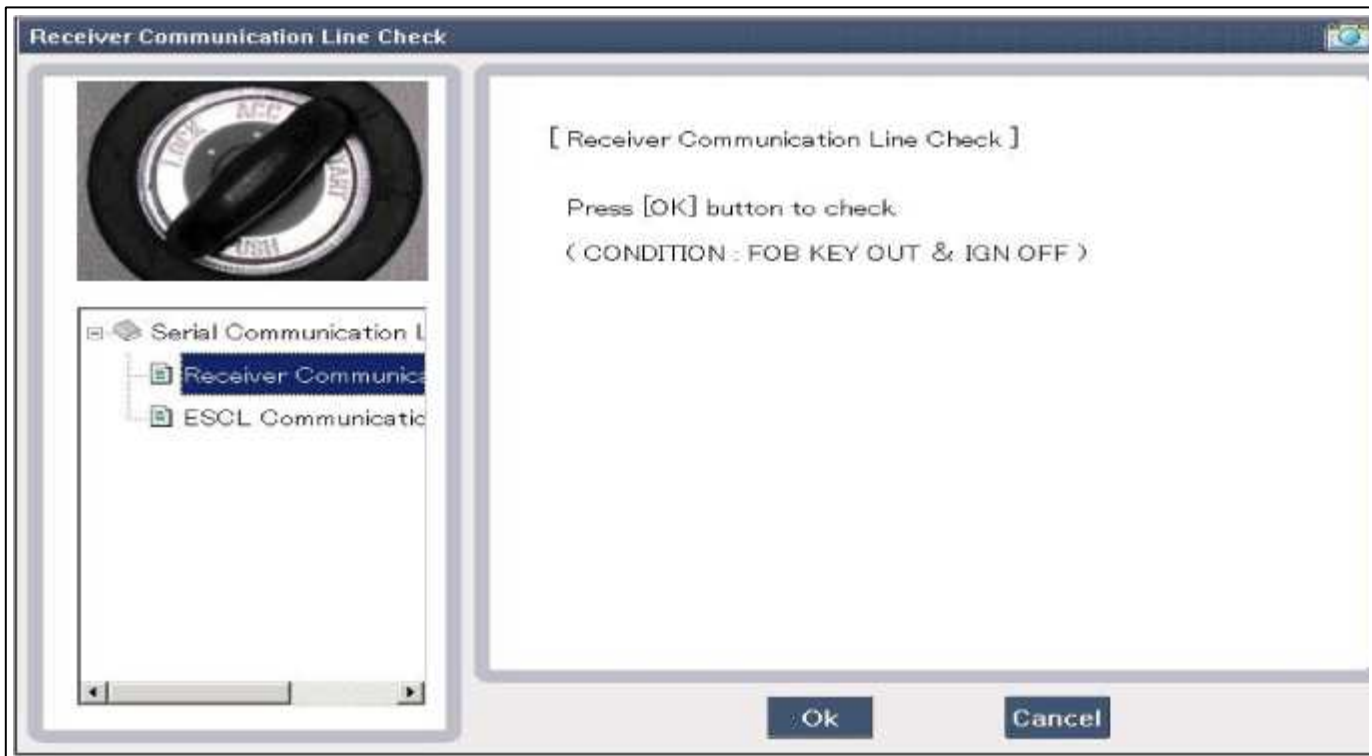

4. Check the serial communication line with a GDS.

5. If the smart key runs normal, the communication of smart key unit, exterior receiver are normal.


6. If the smart key runs abnormal, check the following items.

A. Disconnection or no response of the exterior receiver communication line.

B. The exterior receiver communication line disconnection and ground connection.

Interior Antenna Actuation Check


1. Set the smart key in the following shade area and check the IG ON.

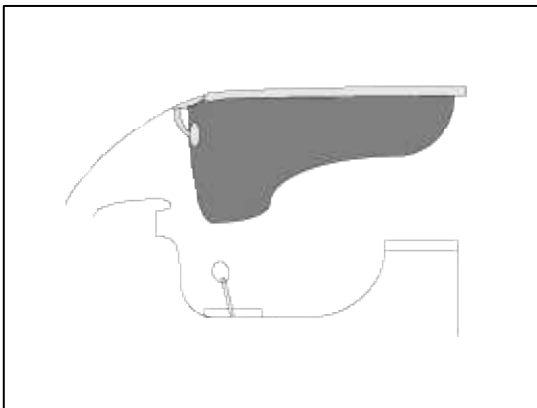


2. If the ignition is ON, the antenna runs normal.

3. Check the interior antenna ignition mode.

4. Set the smart key in the following shade area and actuate the antenna. Check the LED of smart key is blinking.

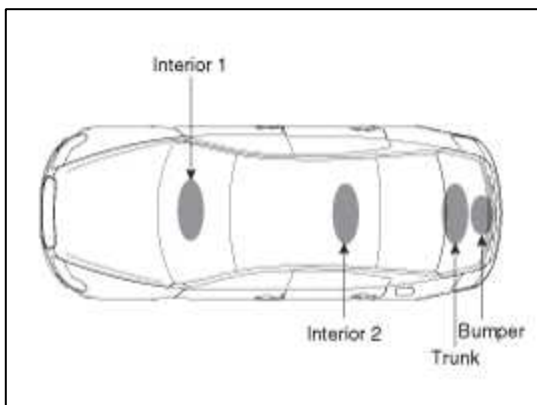

5. If the LED of smart key is not blinking, check the antenna in shade area.

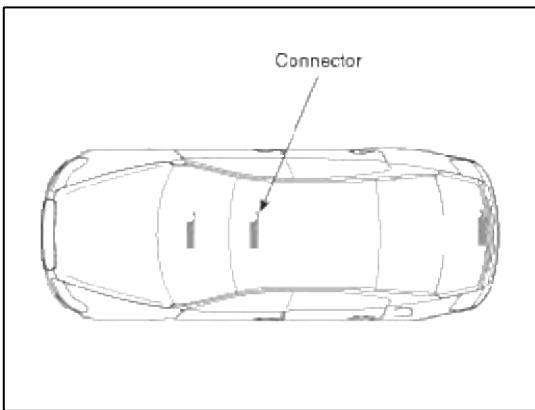

FOB Status Check

1. Connect the cable of GDS to the data link connector in driver side crash pad lower panel.
2. After IG ON, select the "FOB KEY STATUS INFO".

ID Resister

System Identification

Neutralization Mode

SMK STATUS INFORMATION

PDM STATUS INFORMATION

FOB KEY STATUS INFORMATION

Inspection/ Test

Serial Communication Line Check

Antenna Status Check



Smart Key Status Check


1. Connect the cable of GDS to the data link connector in driver side crash pad lower panel.
2. After IG ON, select the "SMK STATUS INFO".

ID Resister

- System Identification
- Neutralization Mode
- SMK STATUS INFORMATION
- PDM STATUS INFORMATION
- FOB KEY STATUS INFORMATION


Inspection/ Test


- Serial Communication Line Check
- Antenna Status Check

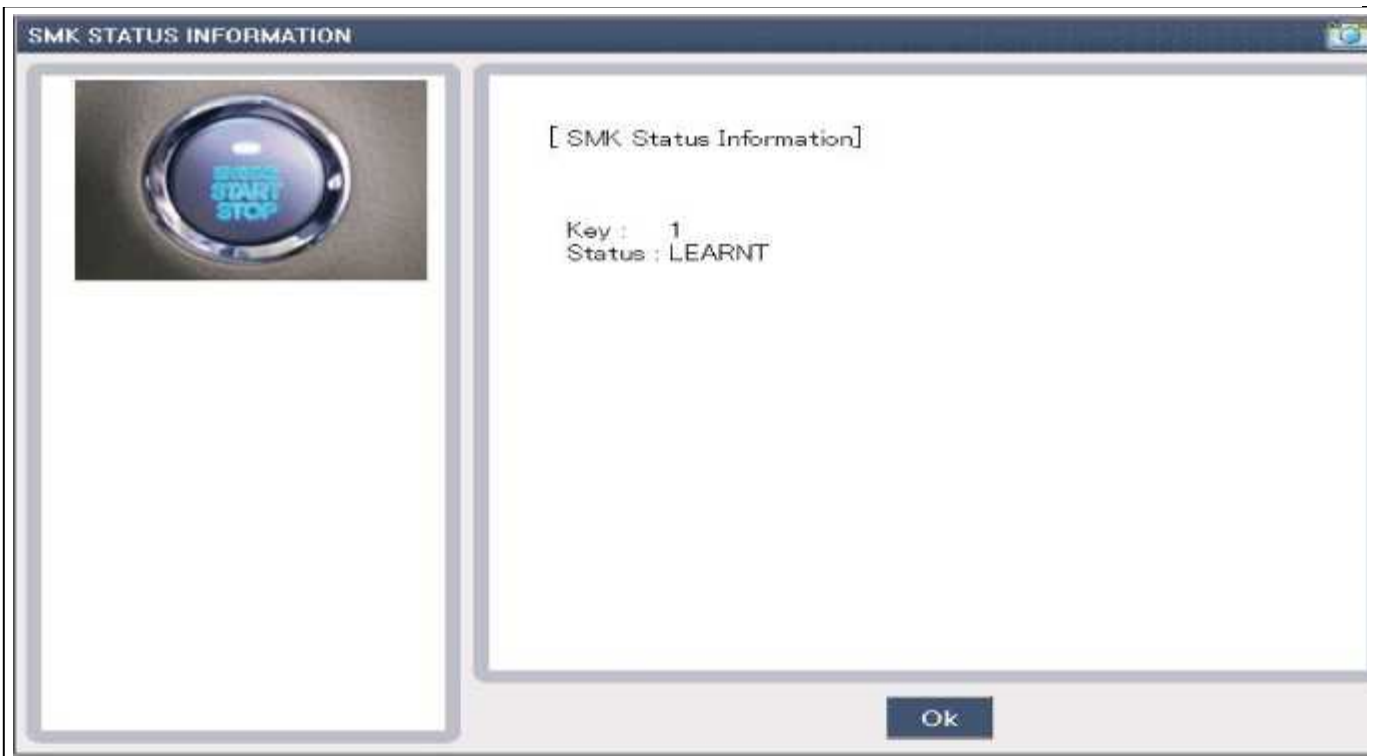

PDM Status Check

1. Connect the cable of GDS to the data link connector in driver side crash pad lower panel.
2. After IG ON, select the "PDM STATUS INFO".

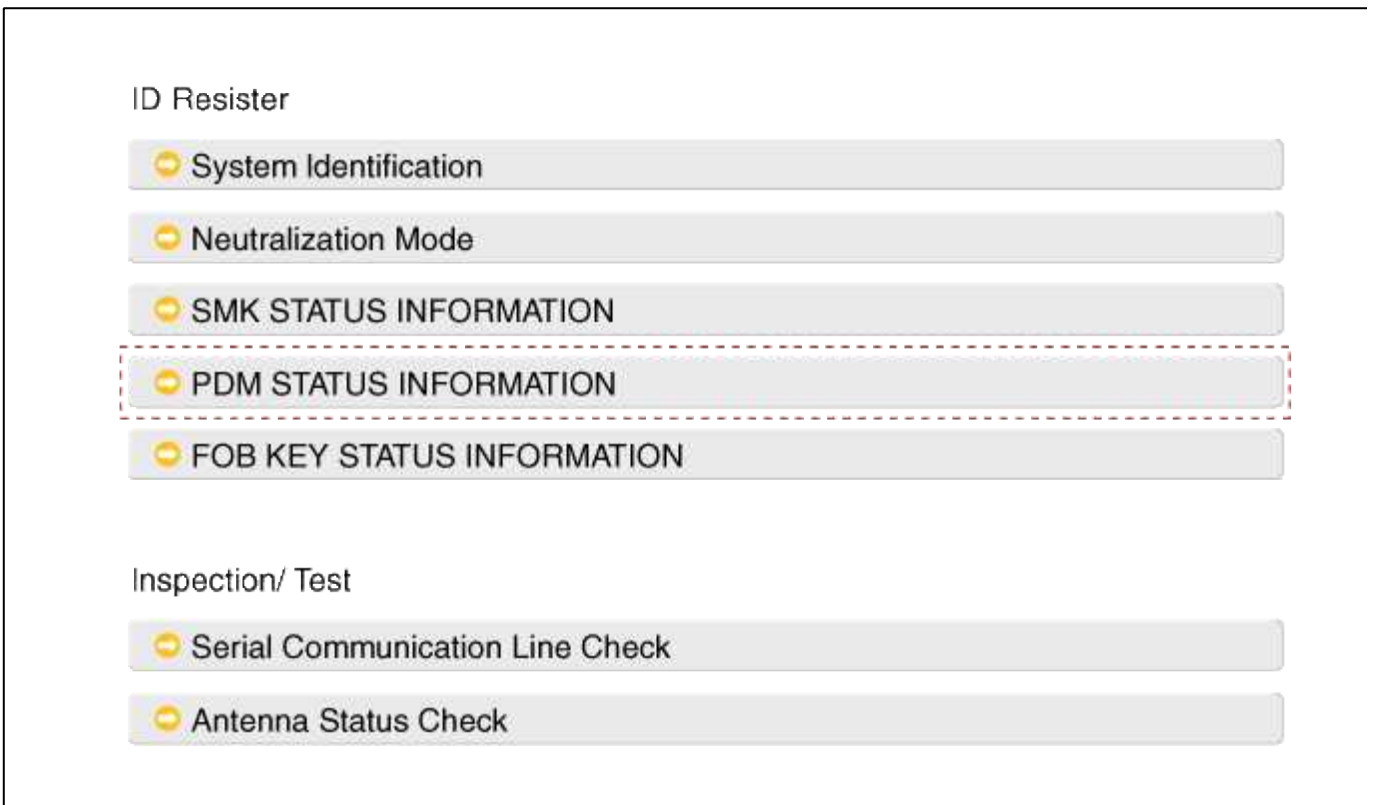

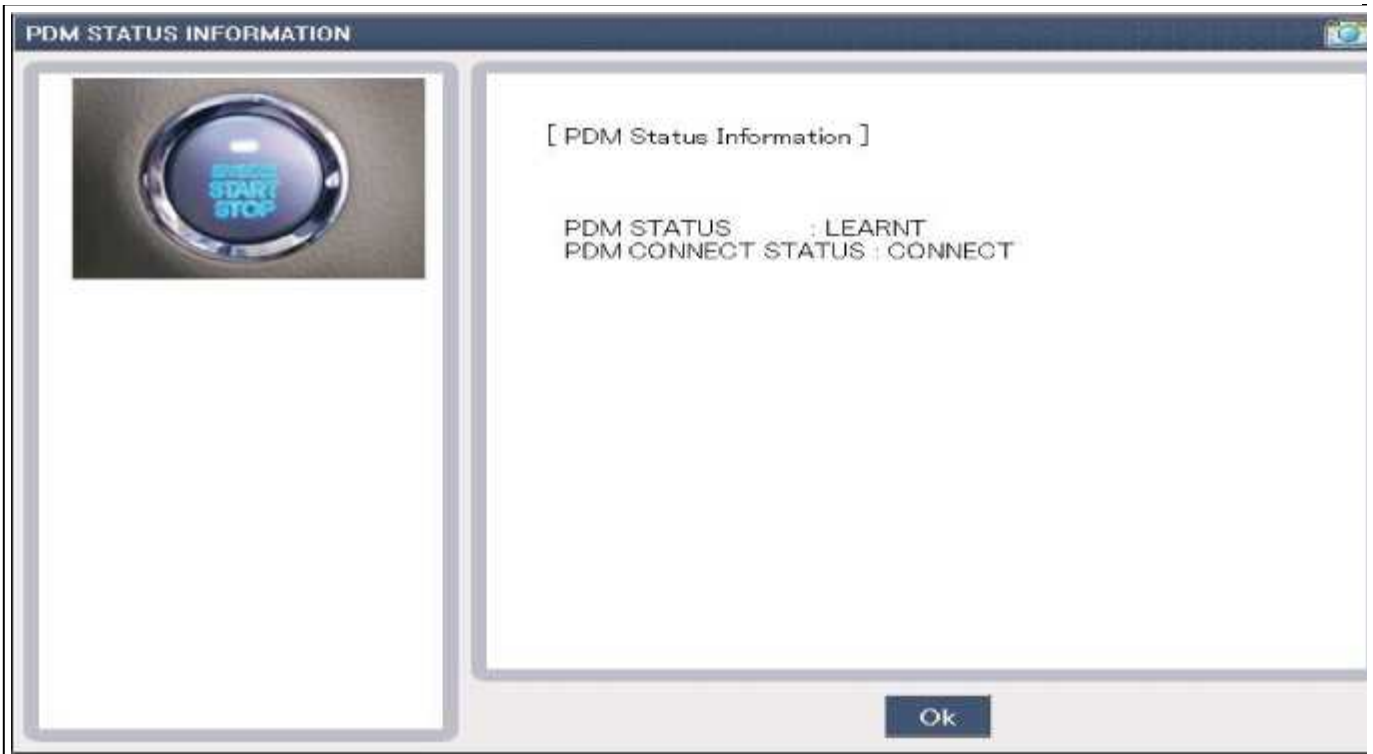

Neutralization Status Check


1. Connect the cable of GDS to the data link connector in driver side crash pad lower panel.
2. After IG ON, select the "Neutralization mode".


ID Resister



- System Identification
- Neutralization Mode
- SMK STATUS INFORMATION
- PDM STATUS INFORMATION
- FOB KEY STATUS INFORMATION



Inspection/ Test


- Serial Communication Line Check
- Antenna Status Check

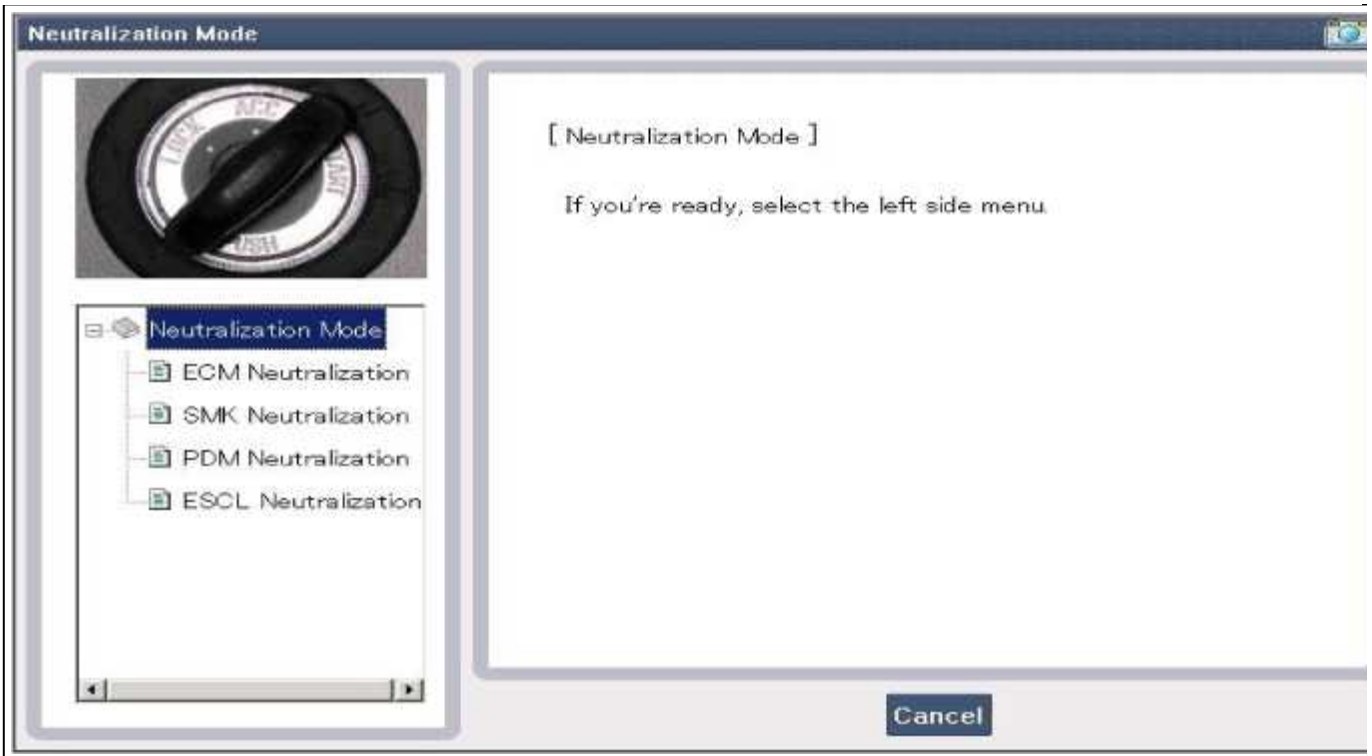

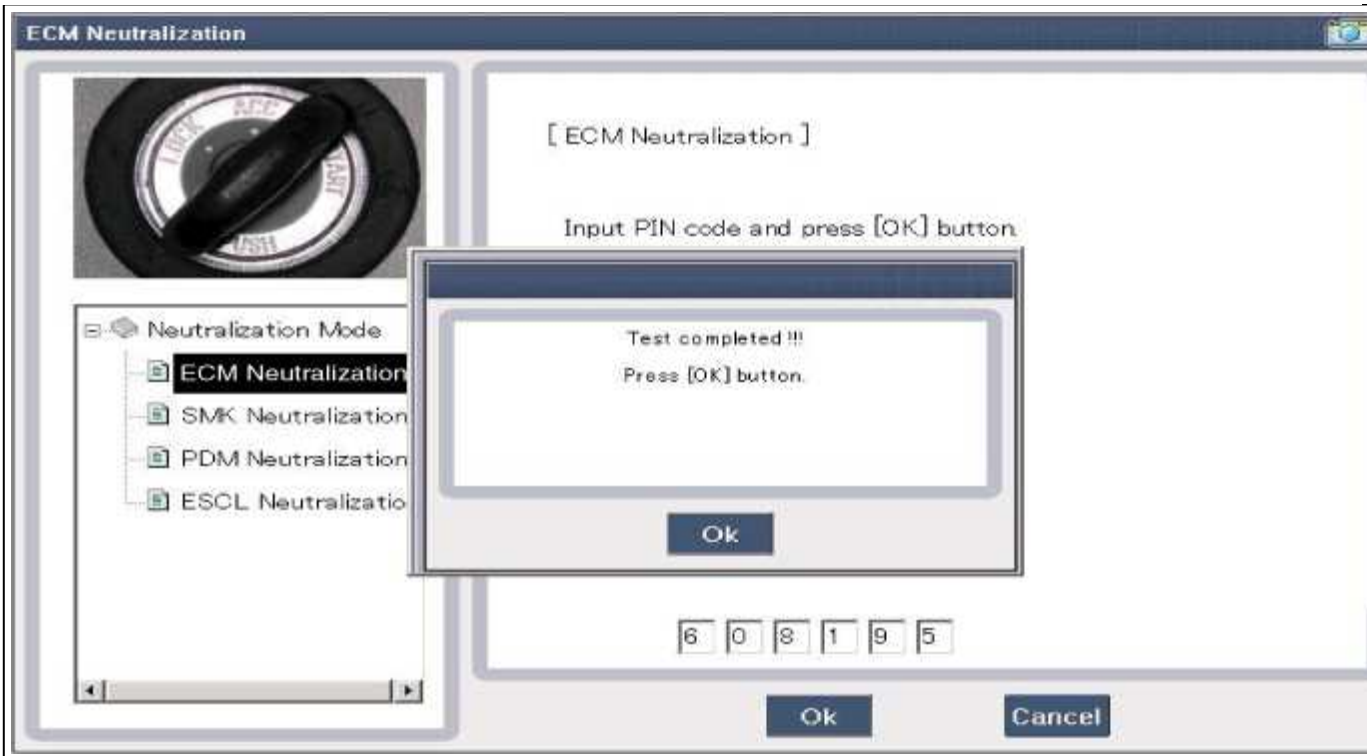

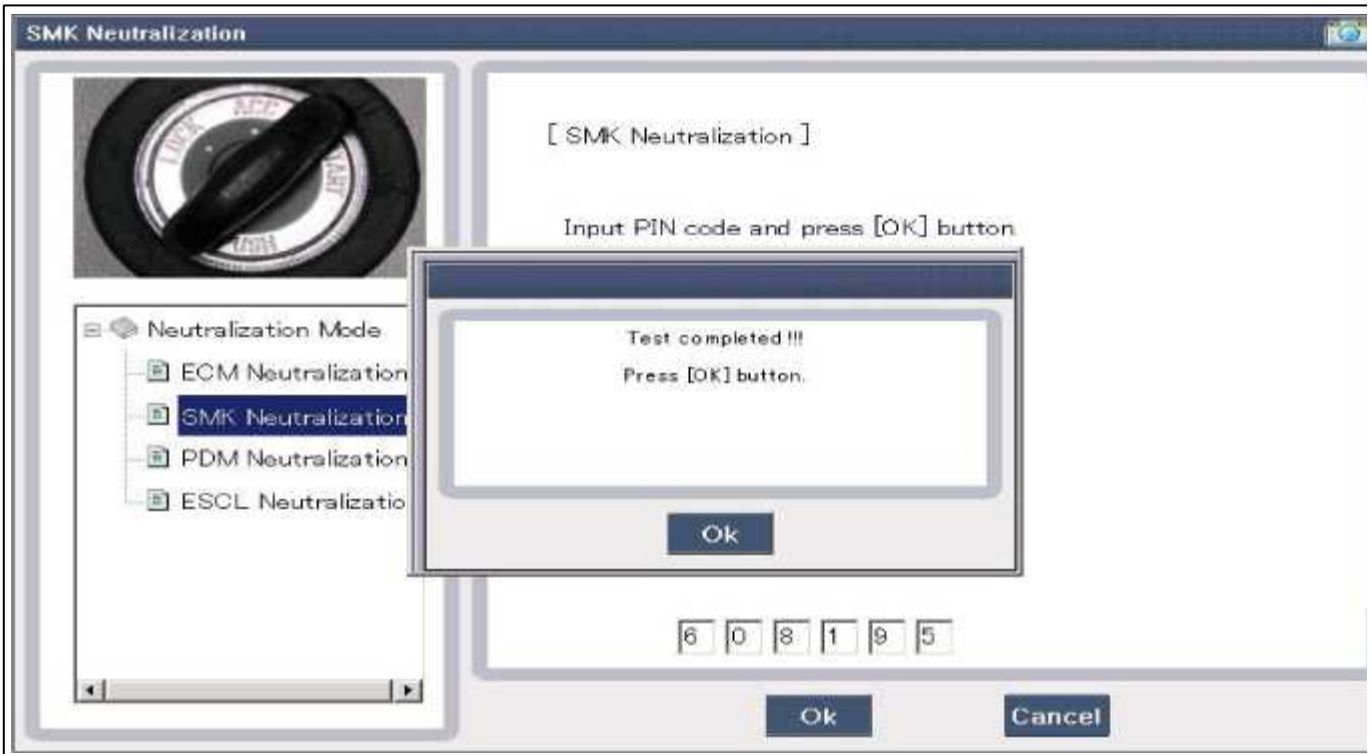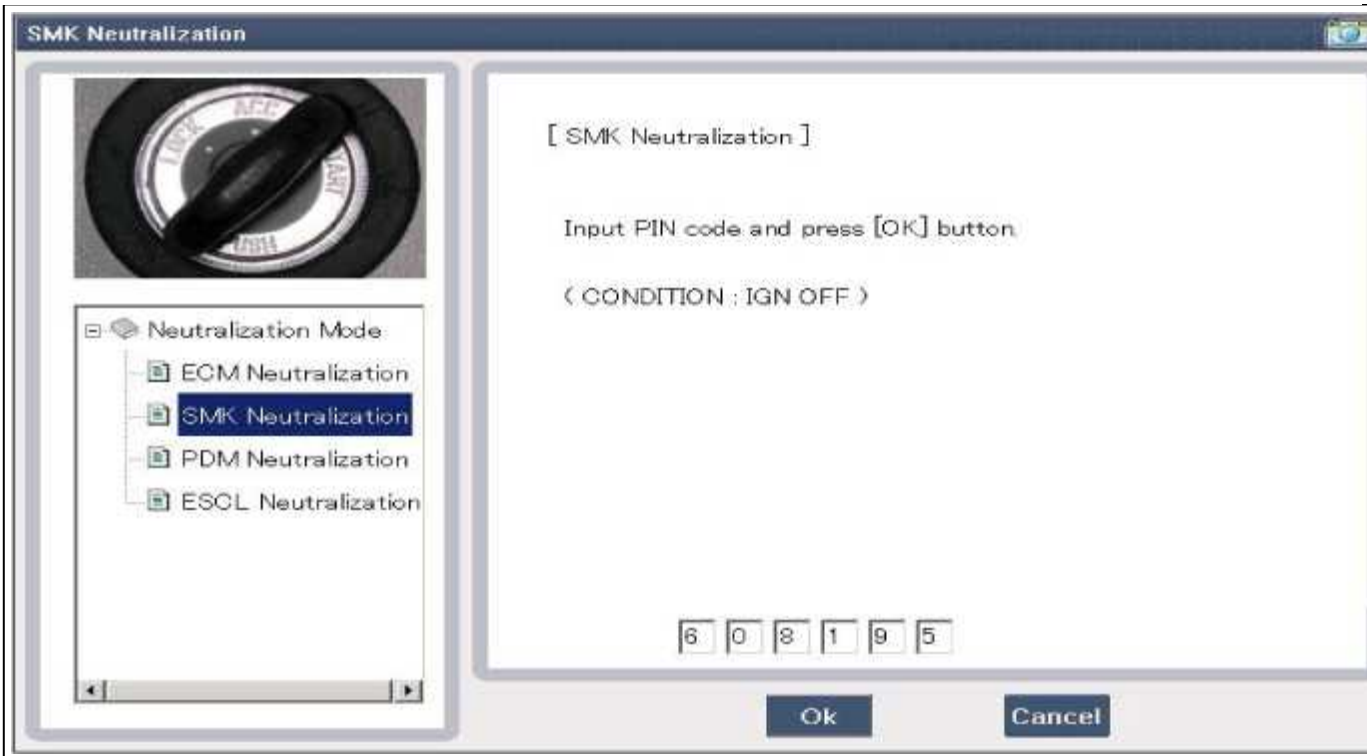

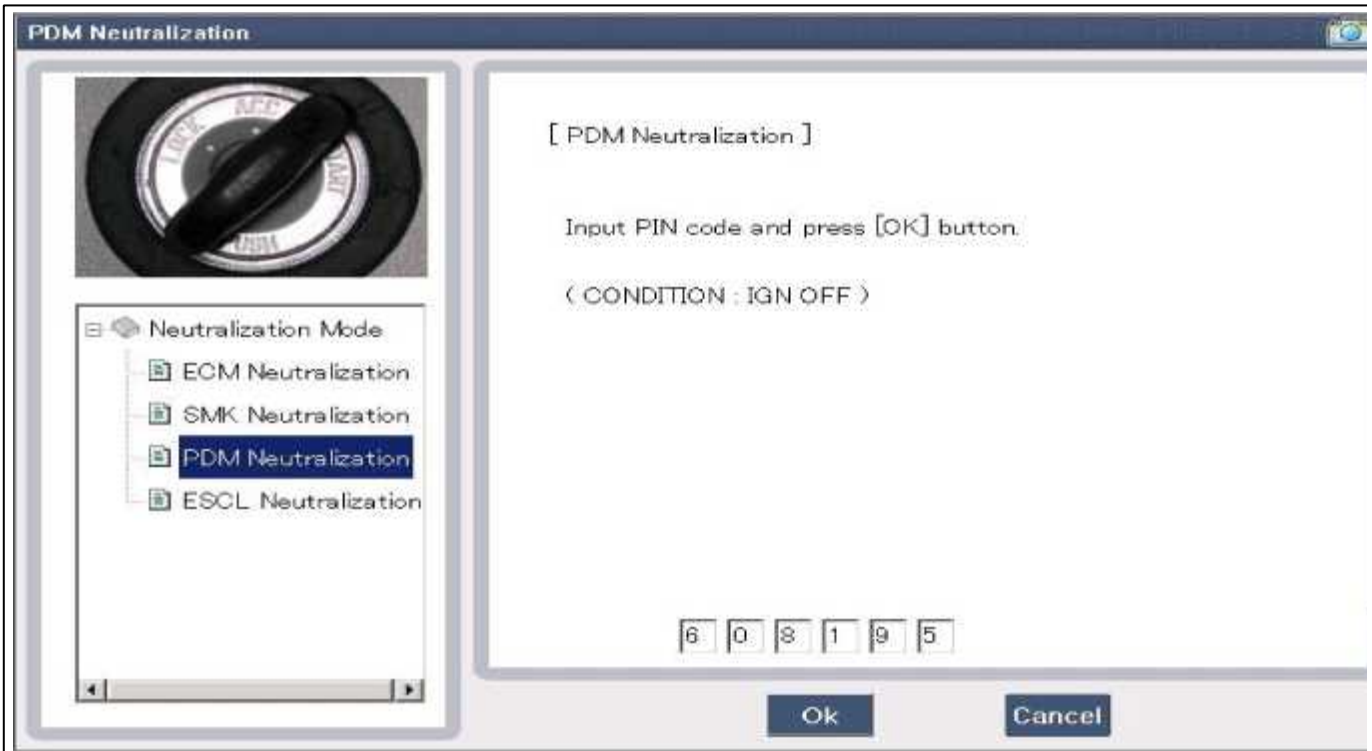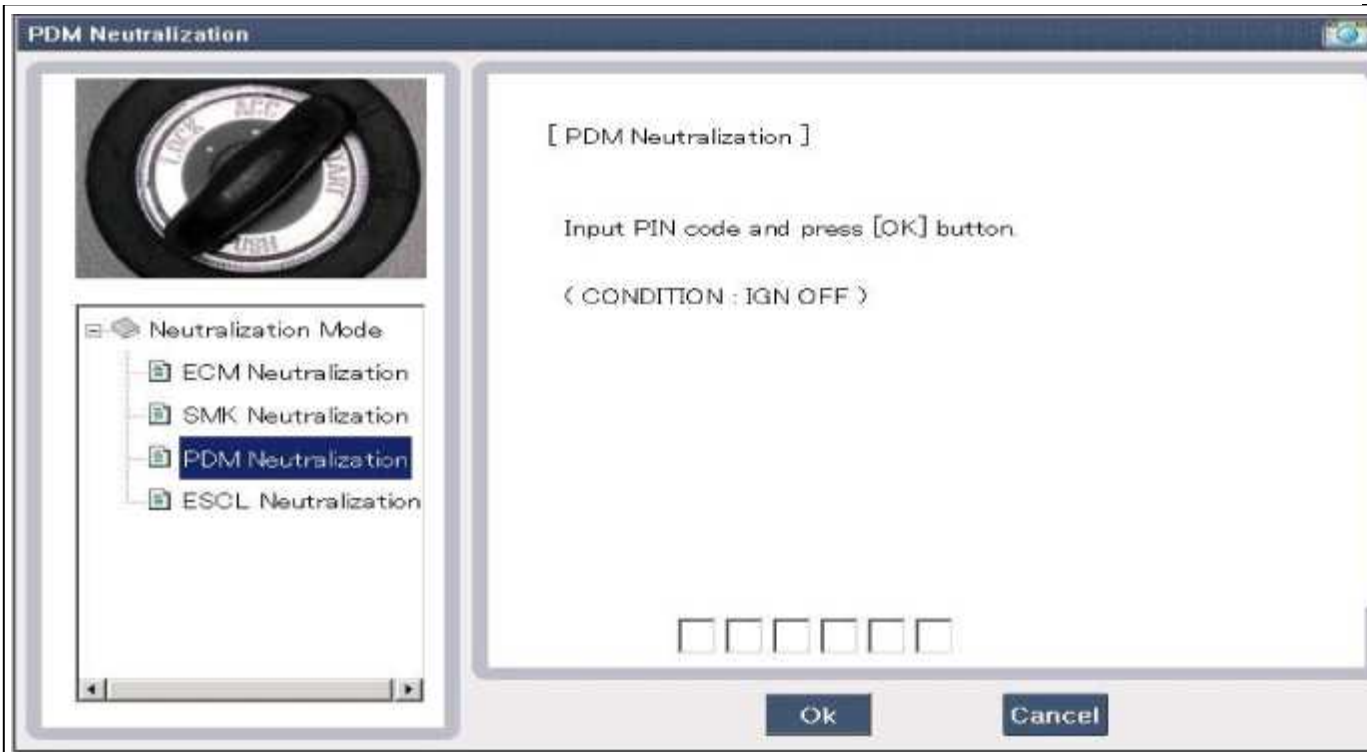

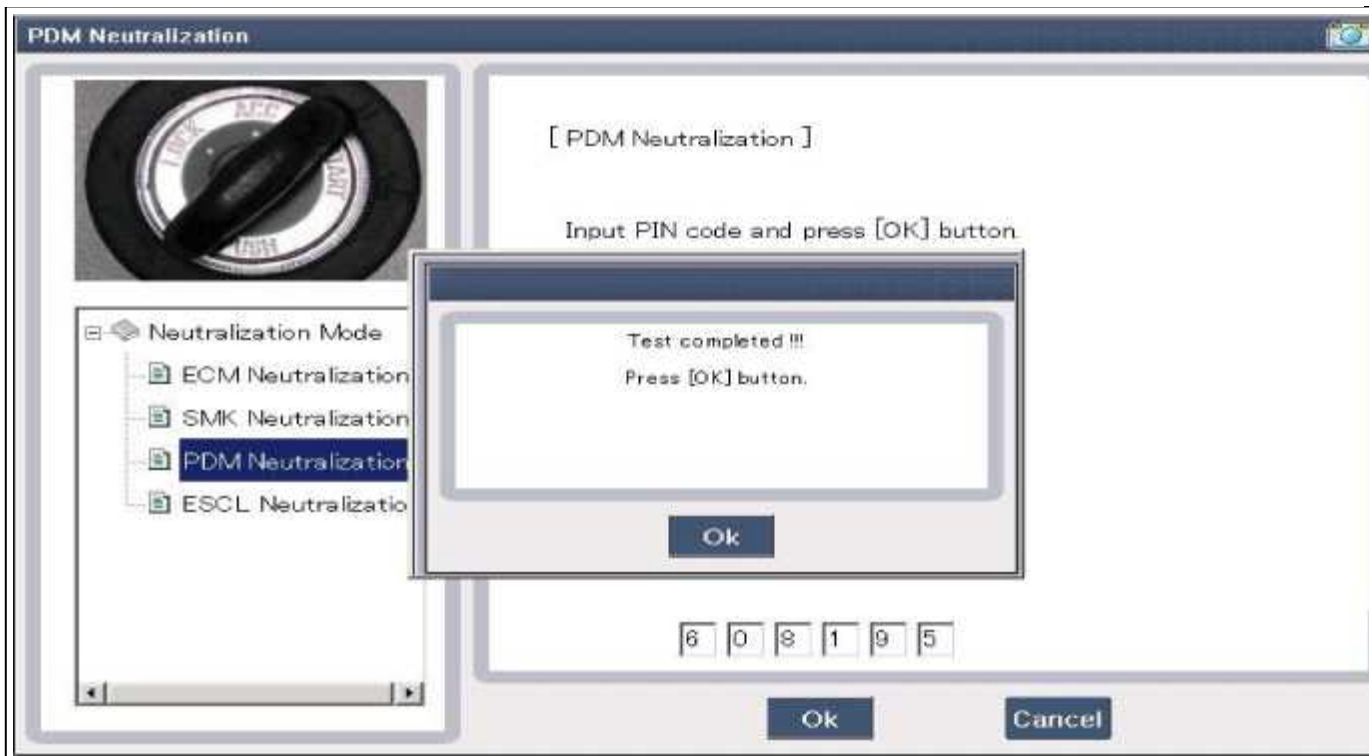

Input Switch List

No	Item name	Unit
1	SSB SW2	-
2	ACC	-
3	IGN1	-
4	Gear 'P' Position	-
5	Brake SW	-
6	FL Door Lock Button	-
7	FR Door Lock Button	-
8	Trunk Lid SW	-
9	Battery Voltage	-
10	Alternator Voltage	-
11	KEY out Indicator Lamp	-
12	Immobilizer Lamp	-
13	External Buzzer	-
14	ESCL Enable	-

Actuator List


No.	Item name	Condition
1	KEY out Indicator Lamp	Ignition switch ON Engine off
2	Immo.indicator Lamp	Ignition switch ON Engine off
3	External Buzzer	Ignition switch ON Engine off
4	Interior Antenna 1 Active	Ignition switch ON Engine off
5	Interior Antenna 2 Active	Ignition switch ON Engine off
6	Interior Antenna 3 Active	Ignition switch ON Engine off
7	Bumper/trunk Antenna Active	Ignition switch ON Engine off
8	DRV_DR Antenna Active	Ignition switch ON Engine off
9	AST_DR Antenna Active	Ignition switch ON Engine off

Body Electrical System > Smart key System > Smart key > Repair procedures


Smart Key

Smart Key Code Saving


1. Connect the DLC cable of scan tool to the data link connector (16 pins) in driver side crash pad lower panel, turn the power on scan tool.

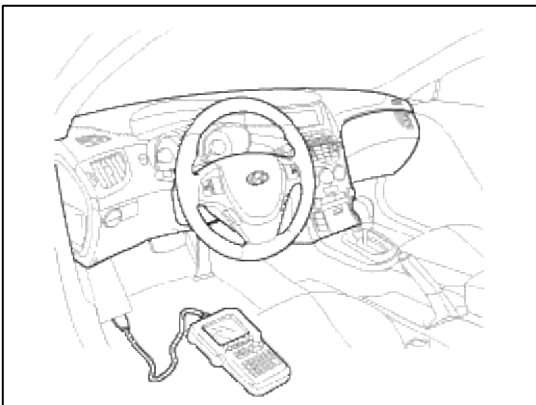

2. Select the vehicle model and then do "Smart key code saving".


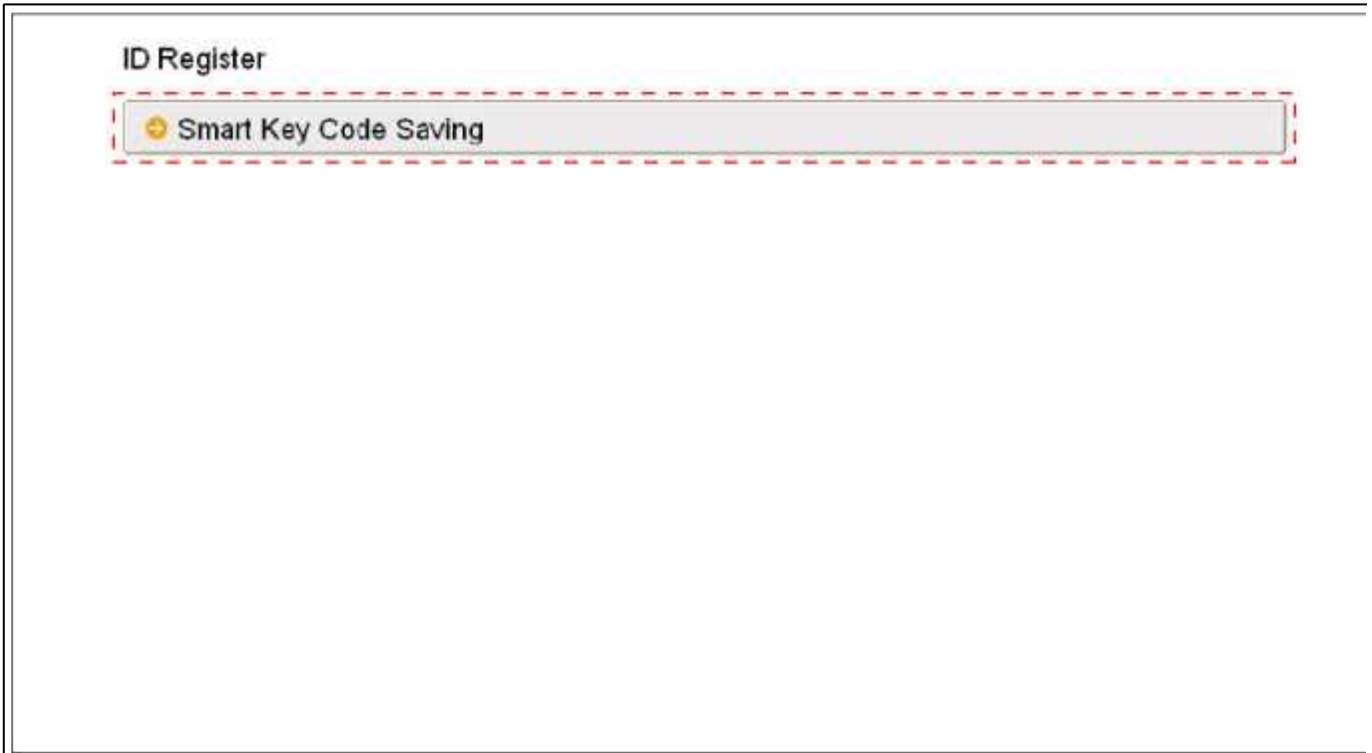


3. After selecting "Smart key teaching" menu, push "Enter" key, then the screen will be shown as below.


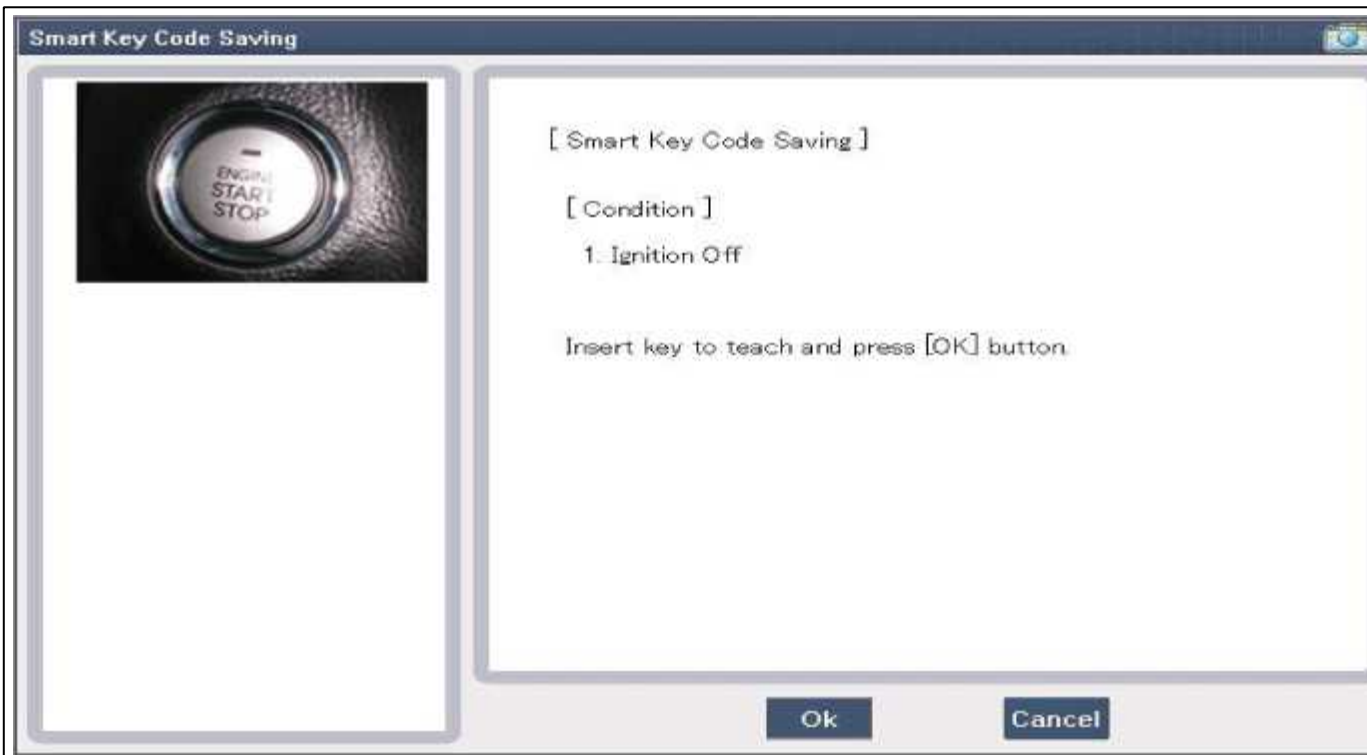


4. After inserting the teaching key, push "ENTER" key.



5. Input the "Pin code" for first key teaching.

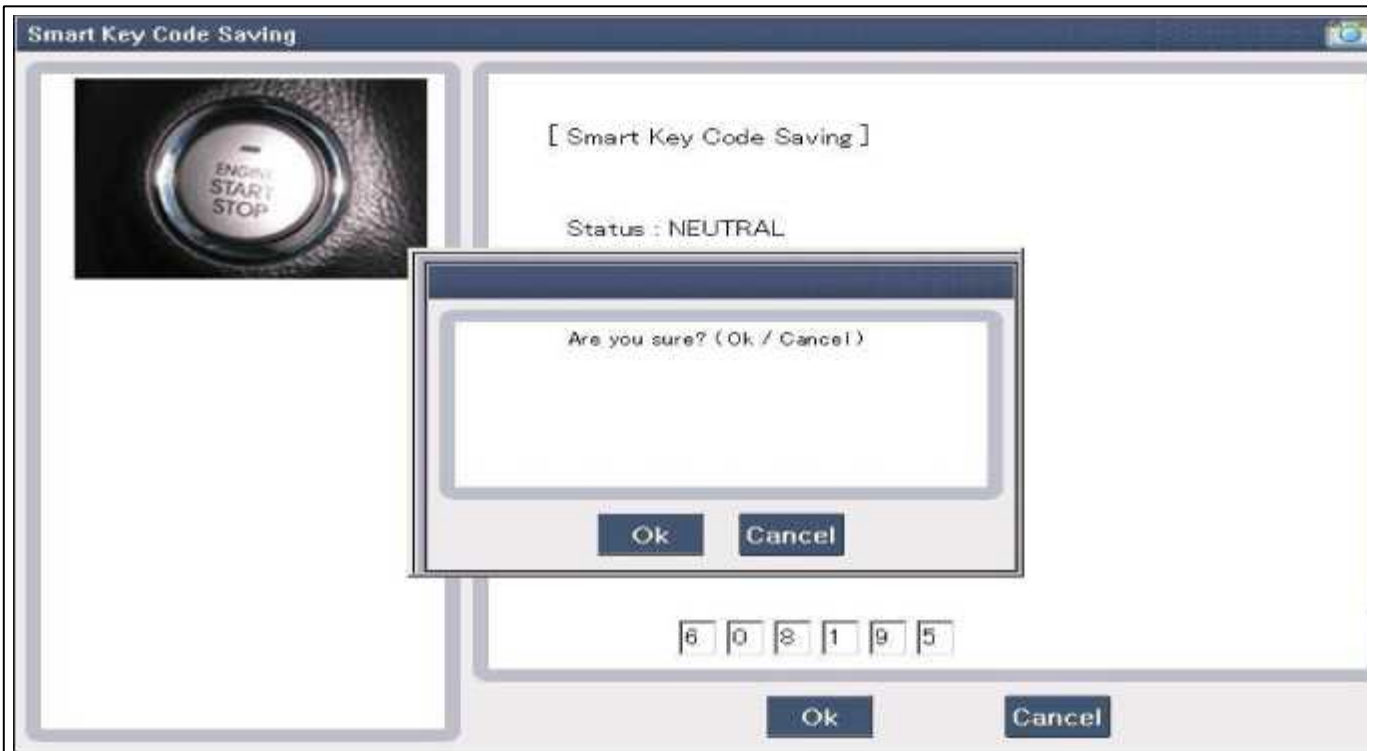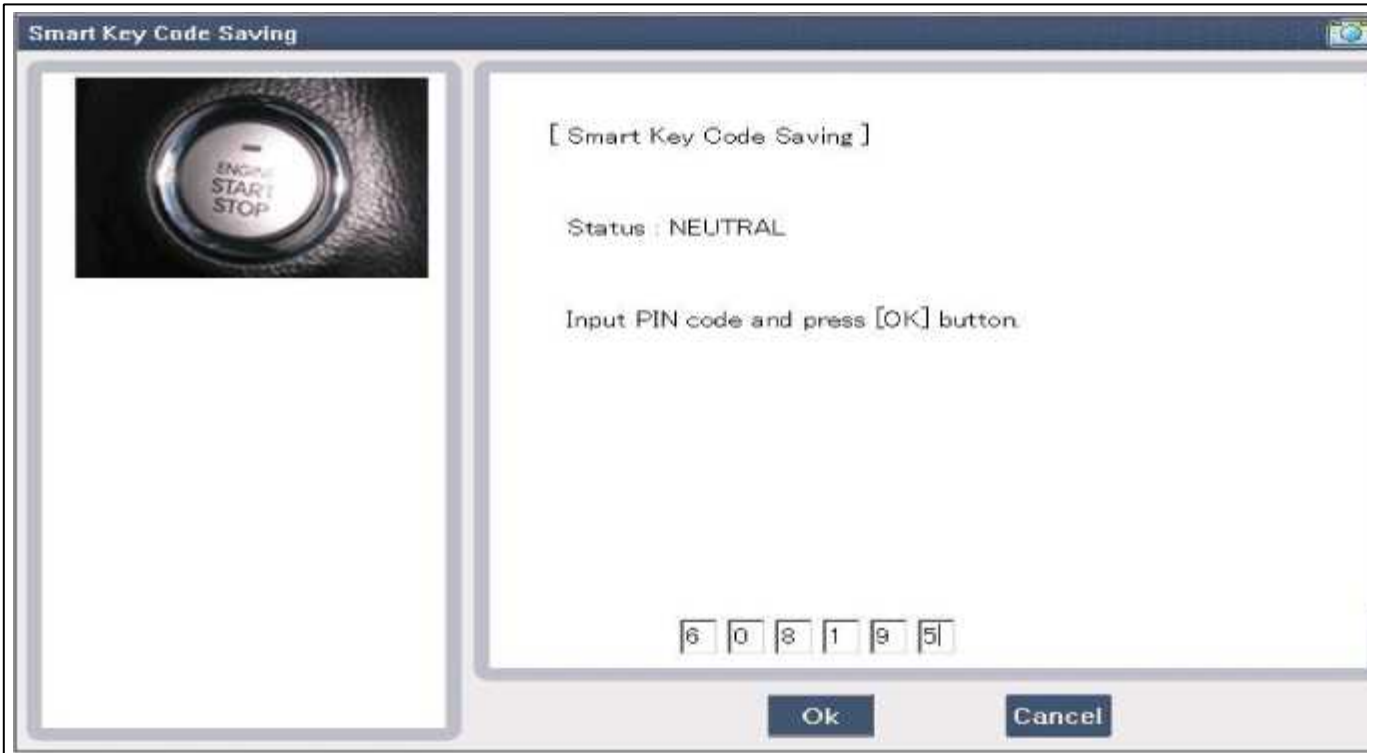


6. Confirm the message "First key teaching completed".

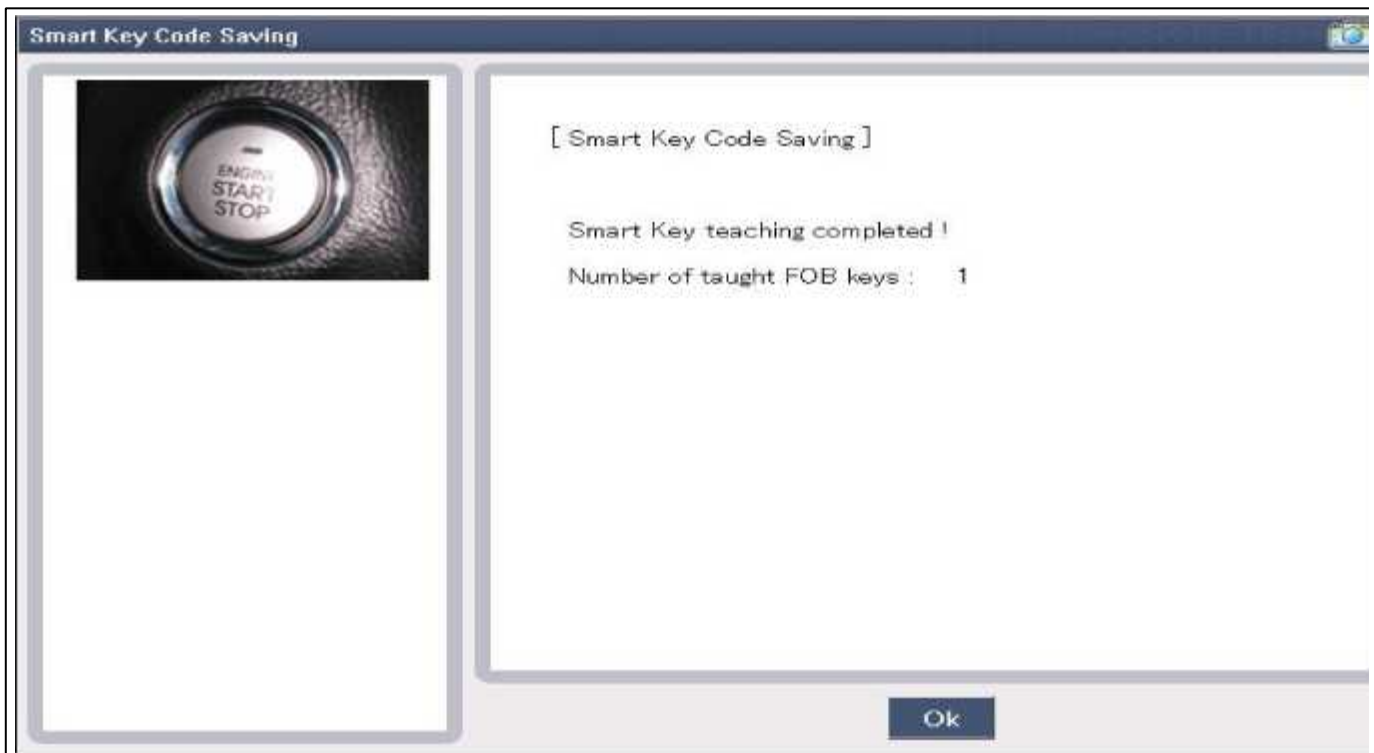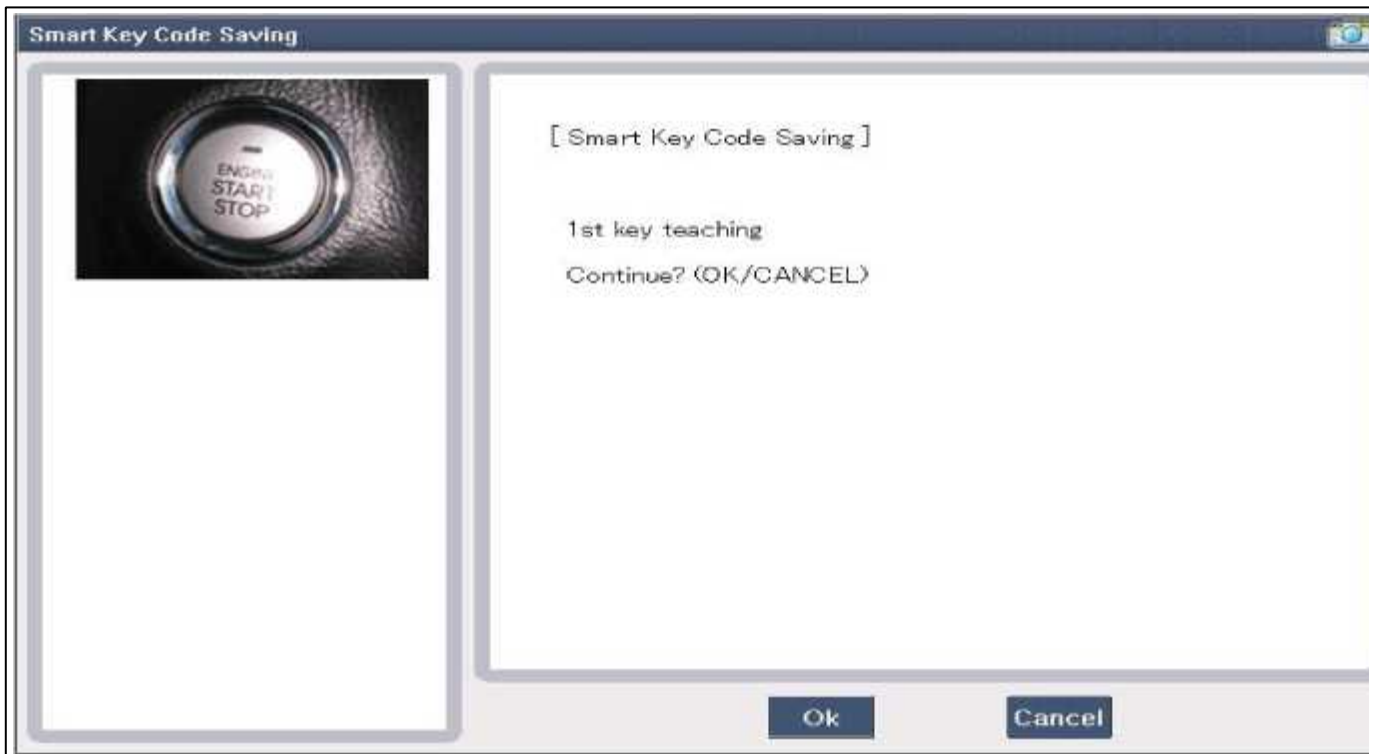

7. Input the "Pin code" for second key teaching.

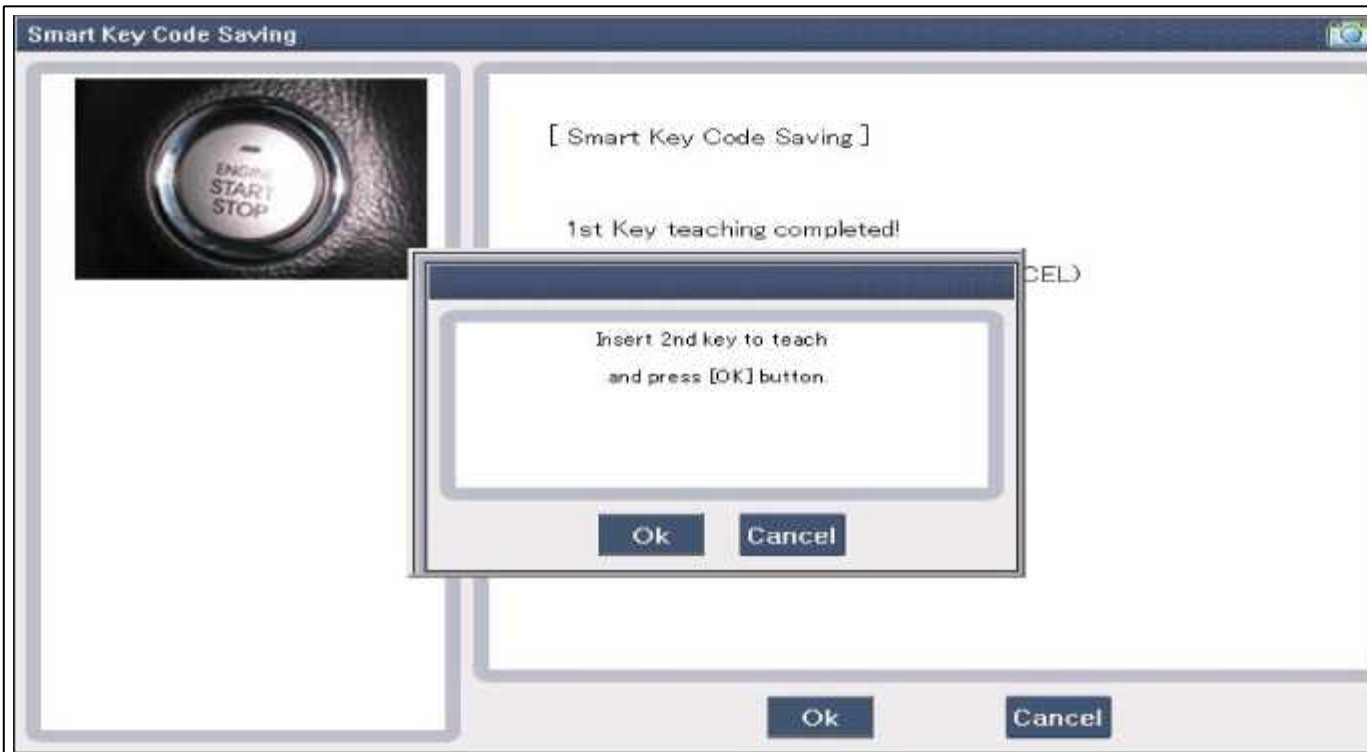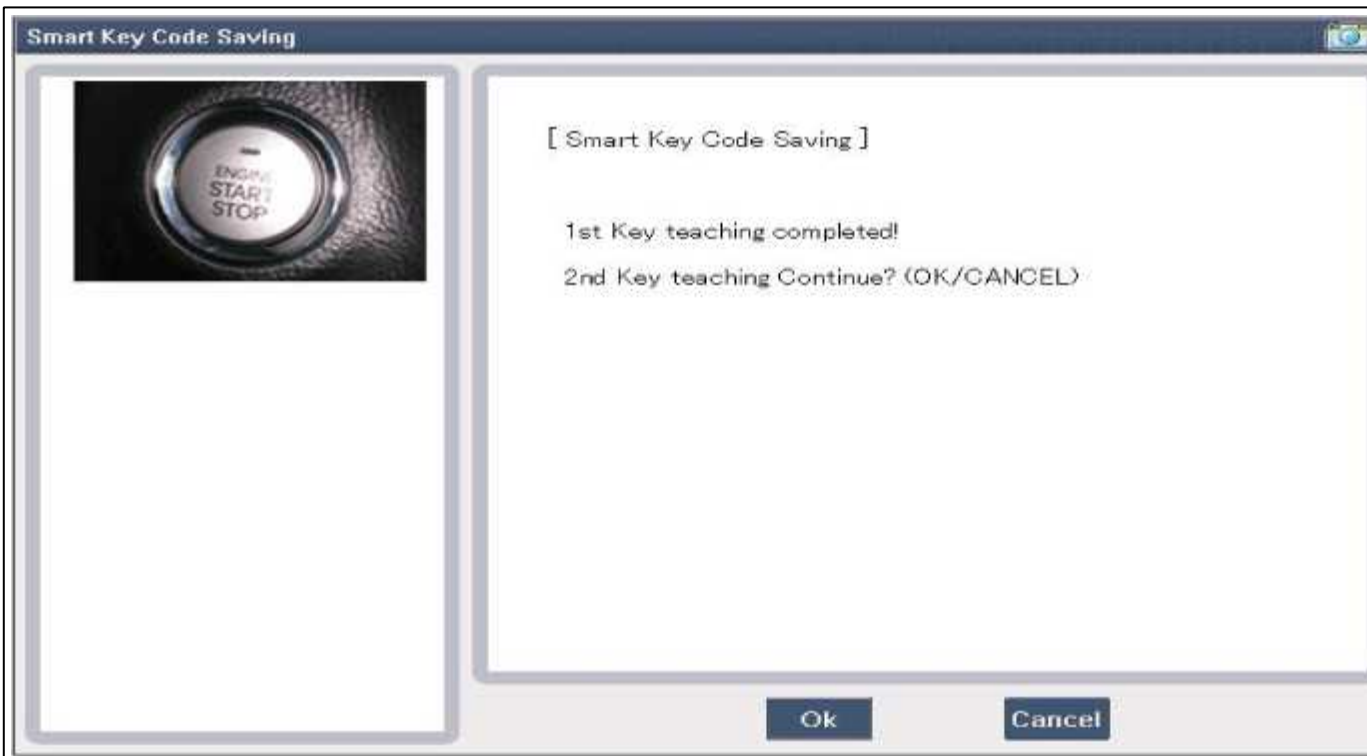




8. Confirm the message "Second key teaching completed".

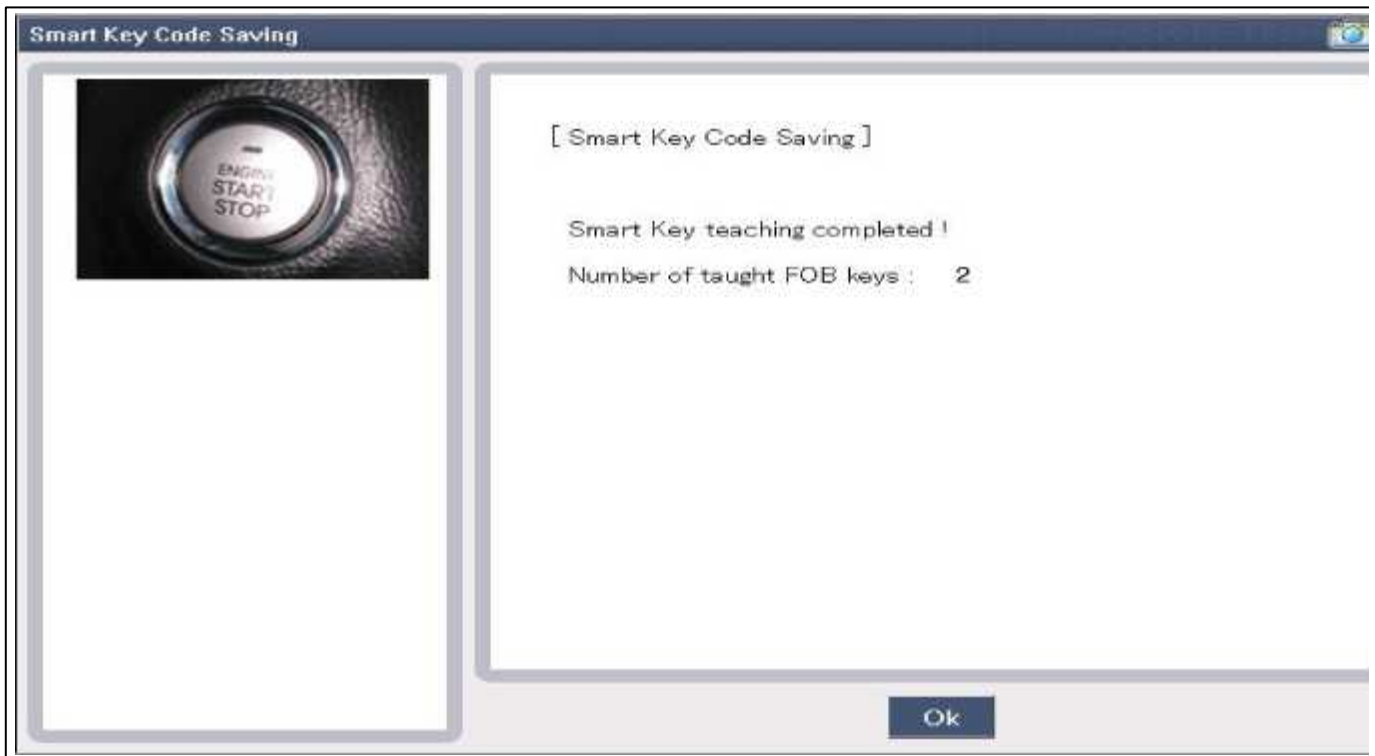

9. Then the screen will be shown as below when key teaching process is completed.

Body Electrical System > Smart key System > Smart key unit > Components and Components Location


Component (1)

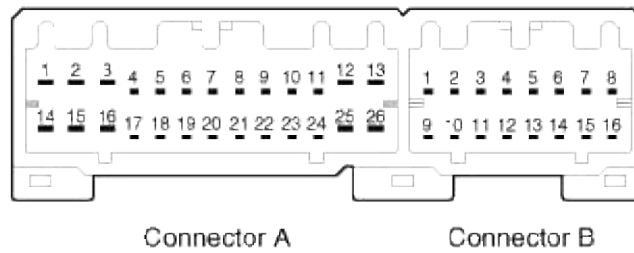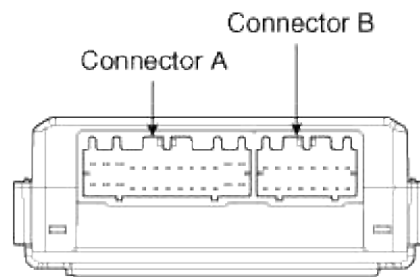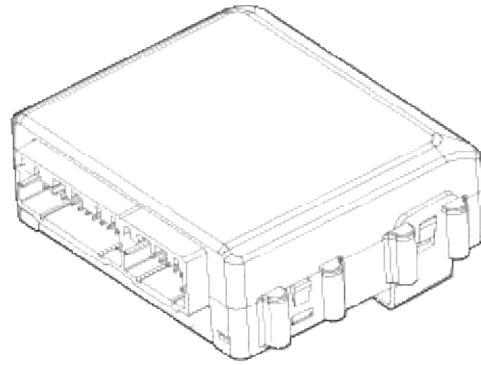

Connector Pin Information

Pin	Connector A	Pin	Connector B
1	Battery	1	Interior 2 antenna 2
2	Immobilizer Indicator	2	Interior 1 antenna 2
3	GND 1	3	-
4	-	4	-
5	Trunk lid	5	Trunk antenna 1
6	Front left door lock / unlock	6	Bumper antenna 1
7	External buzzer	7	Front right side antenna 1
8	-	8	Front left side antenna 1
9	ACC	9	Interior 2 antenna 1
10	CAN high	10	Interior 1 antenna 1
11	CAN low	11	-
12	ESCL Communication	12	-
13	RF Communication	13	Trunk antenna 2
14	IGN 1	14	Bumper antenna 2
15	P position	15	Front right side antenna 2
16	GND 2	16	Front left side antenna 2
17	-		
18	ESCL Enable		
19	-		
20	Front right door lock / unlock		
21	-		
22	Diagnosis		
23	SSB switch		
24	Brake		
25	EMS COM		
26	-		


Component (2)

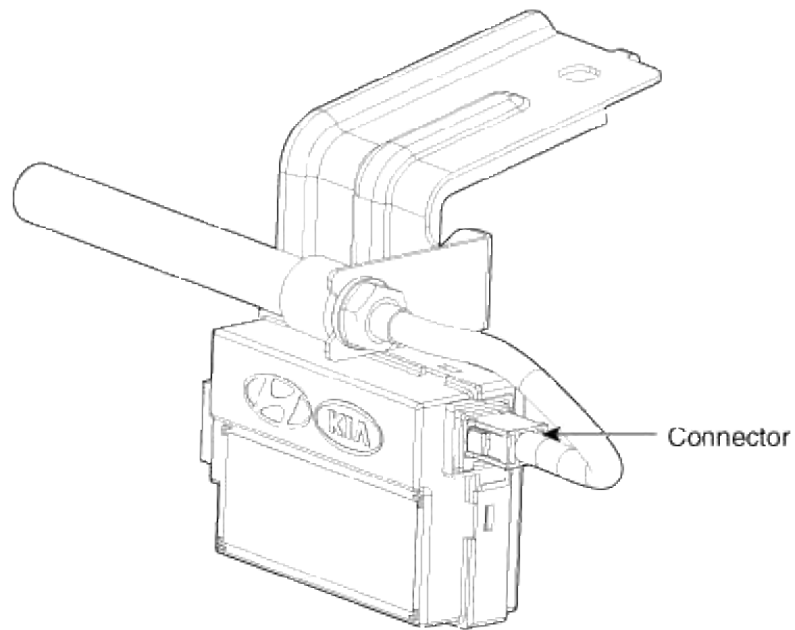

No.	Name
1	Data
2	-
3	Power
4	Ground

Body Electrical System > Smart key System > Smart key unit > Schematic Diagrams

Circuit Diagram

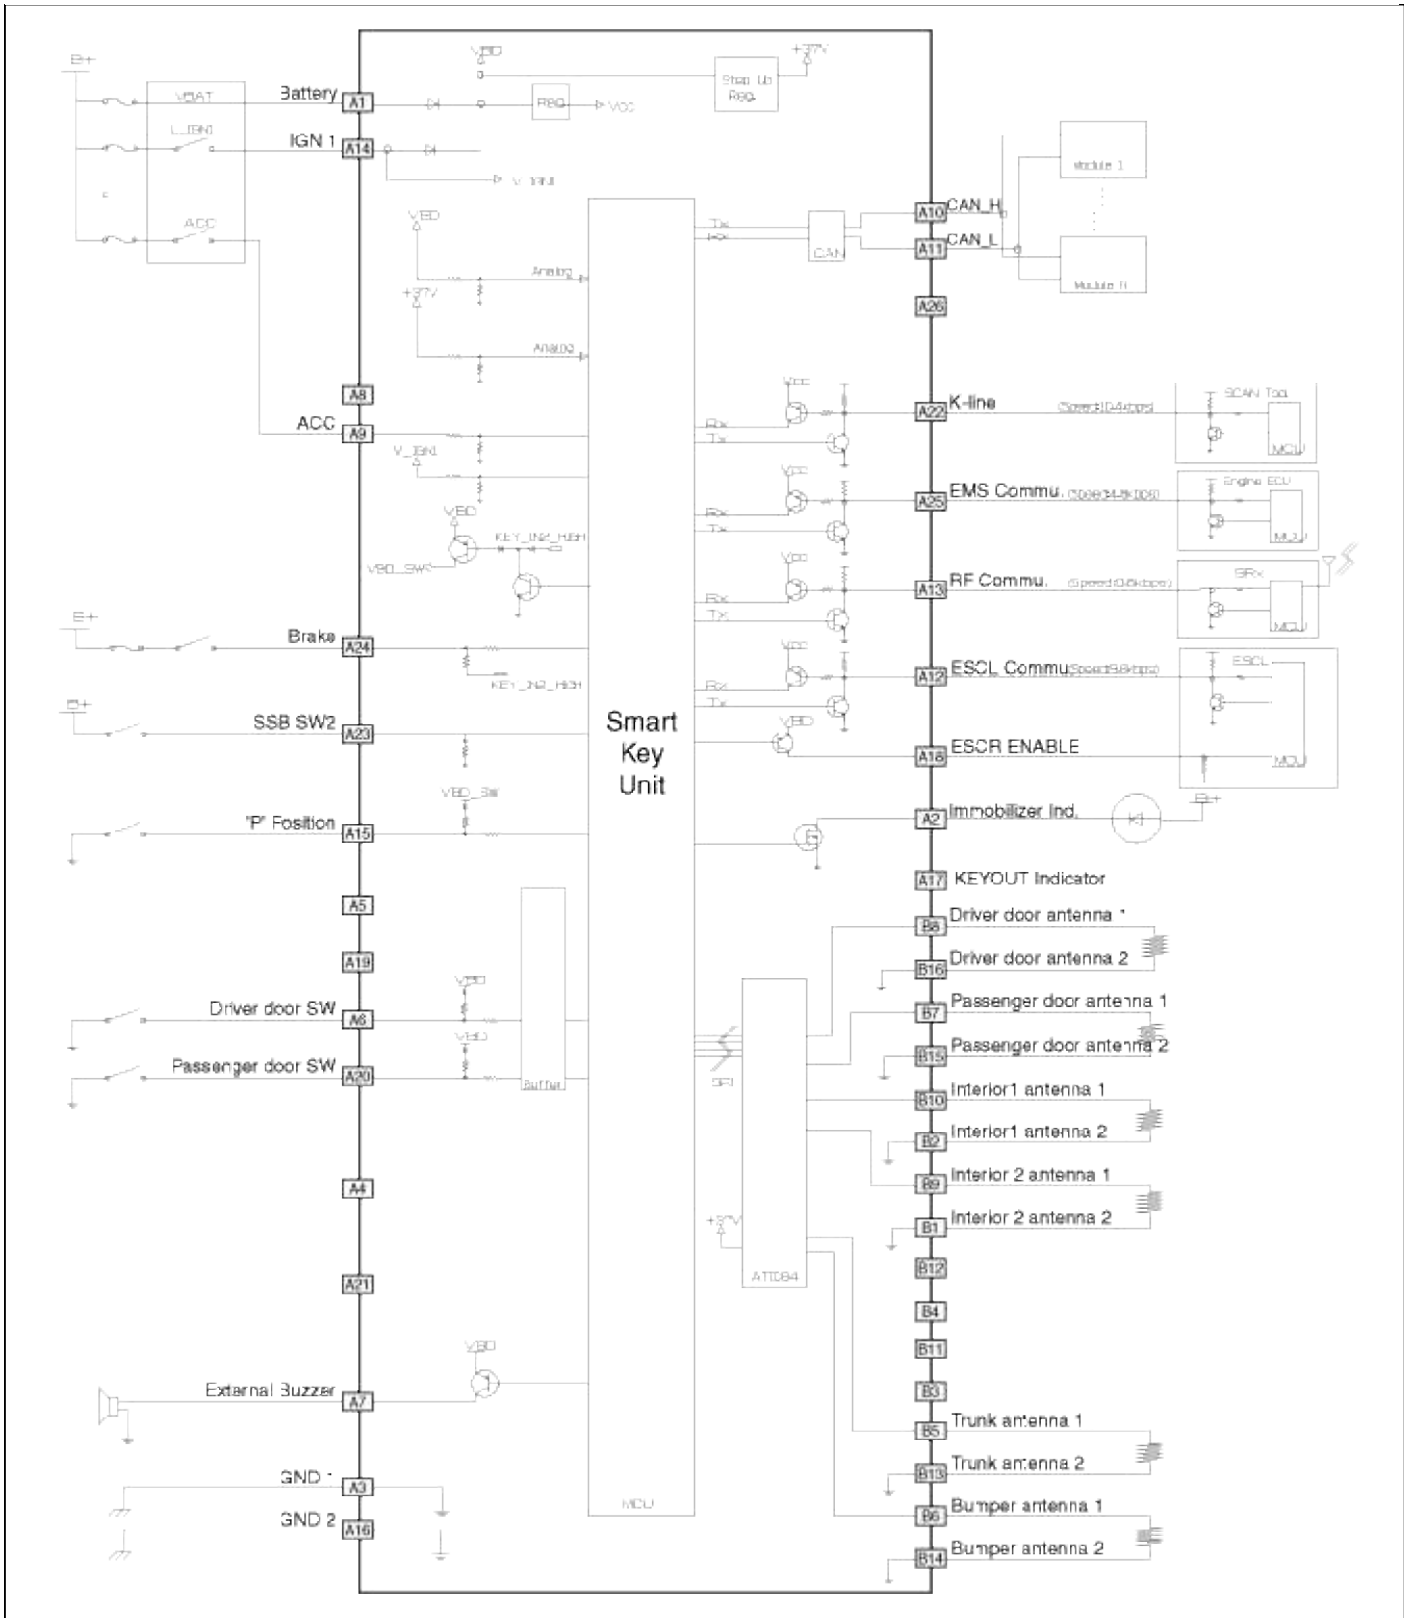

Body Electrical System > Smart key System > Smart key unit > Repair procedures

Inspection

Smart Key Unit

- Refer to the BE group - inspection / self diagnosis with scan tool.

Smart Key Switch


- Refer to the BE group - inspection / self diagnosis with scan tool.

Antenna

- Refer to the BE group - inspection / self diagnosis with scan tool.

Trunk Lid Open Switch

1. Remove the trunk trim.
(Refer to BD group - "Trunk trim")
2. Check for continuity between the Trunk actuator terminals.

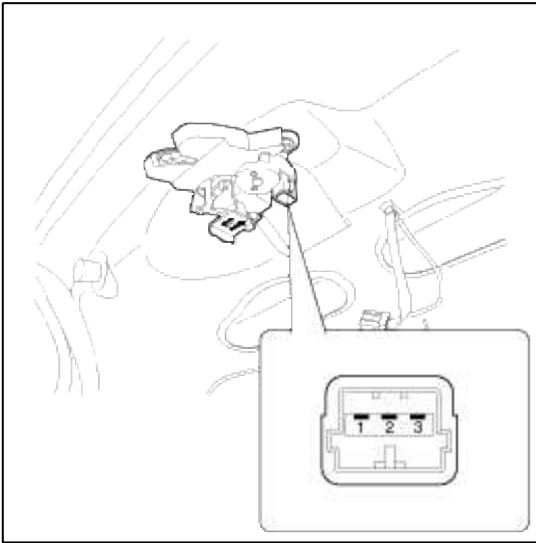


3. If continuity is not specified, inspect the switch

Terminal Position	1	3
Unlock		
Lock	○ ————— ○	


Removal

Smart key unit


1. Disconnect the negative(-) battery terminal.
2. Remove the glove box (A).
(Refer to BD group - "Crash pad")

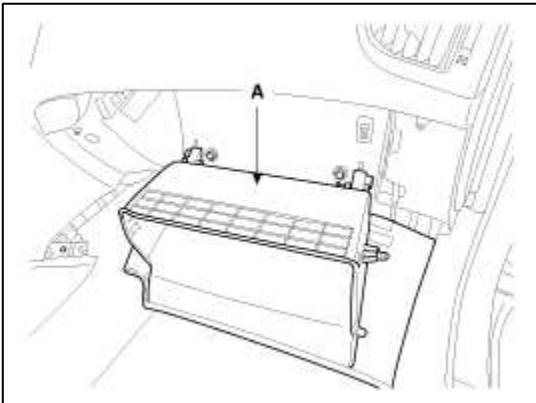

3. Remove the glove box housing (A) after loosening the mounting screws.

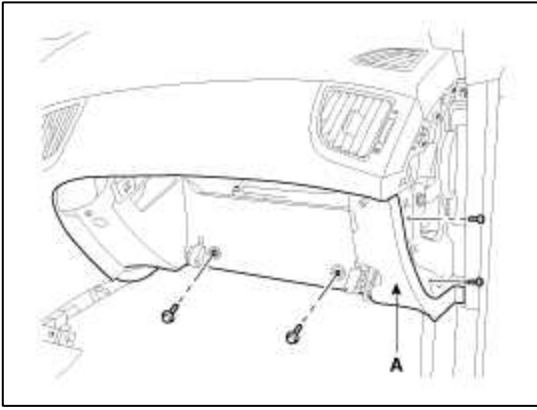


4. Loosen the nuts (2EA) from the smart key unit (A) after disconnecting the connector.

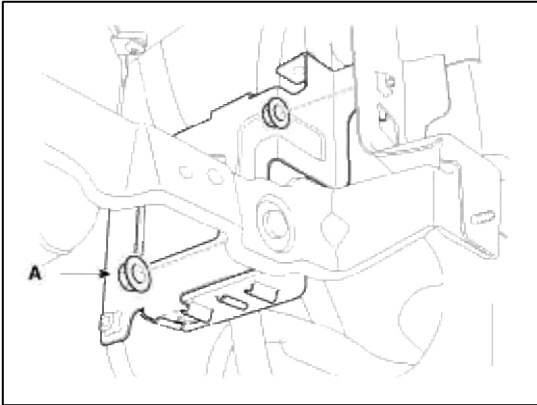

RF Receiver


1. Disconnect the negative(-) battery terminal.
2. Remove the rear seat.
(Refer to BD group - "Rear Seat")
3. Remove the package tray trim.
(Refer to BD group - "Rear Seat")
4. Disconnect the connector after loosening the RF receiver (A) bolt (1EA).

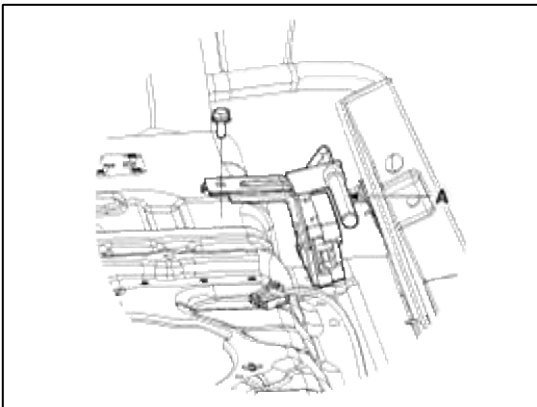


Interior 1 Antenna

1. Disconnect the negative(-) battery terminal.


2. Remove the console upper cover (A).
(Refer to BD group - "Console")

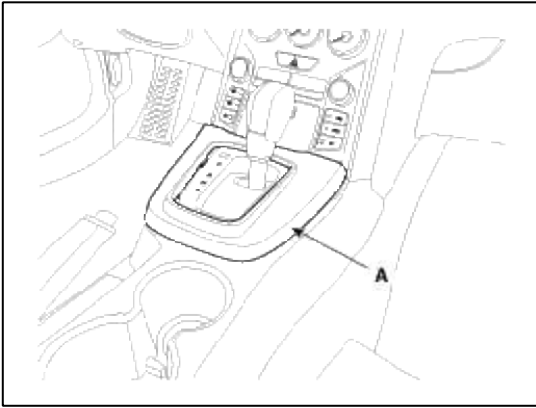


3. Remove the center fascia lower panel (A).
(Refer to BD group - "Crash pad")

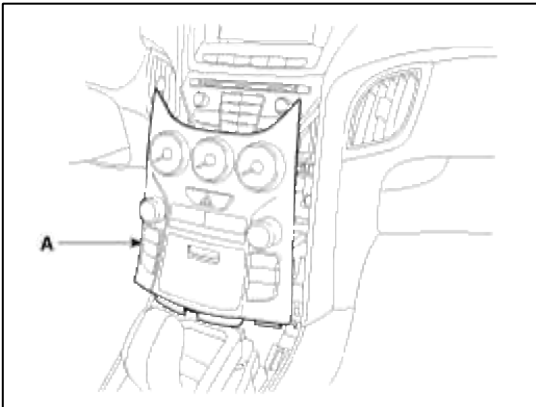

4. Loosen the interior 1 antenna (A) screws (2EA) located in front of the console.

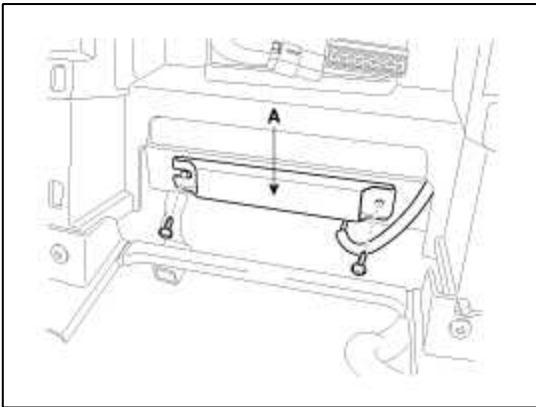


5. Remove the interior 1 antenna (A) after disconnect the connector.

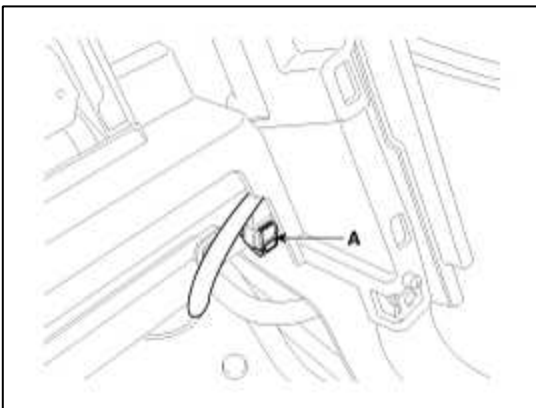


Interior 2 Antenna

1. Disconnect the negative(-) battery terminal.

2. Remove the console rear cover (A).
(Refer to BD group - "Console")

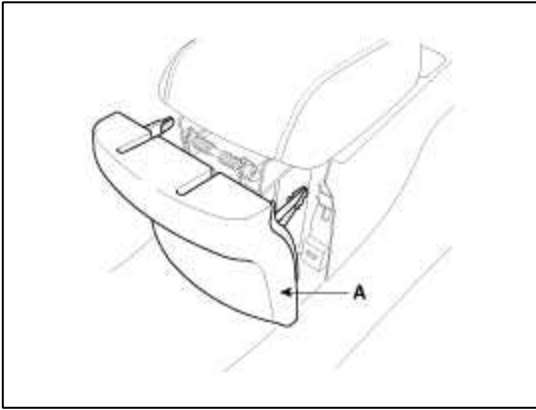


3. Disconnect the interior 2 antenna connector located at the console rear side, then remove the interior 2 antenna (A) after loosening screws (2EA).

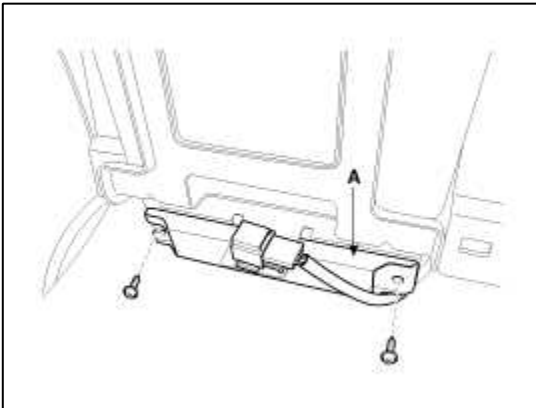


Interior 3 Antenna

1. Disconnect the negative(-) battery terminal.
2. Remove the trunk panel (A) after loosening the mounting screws.

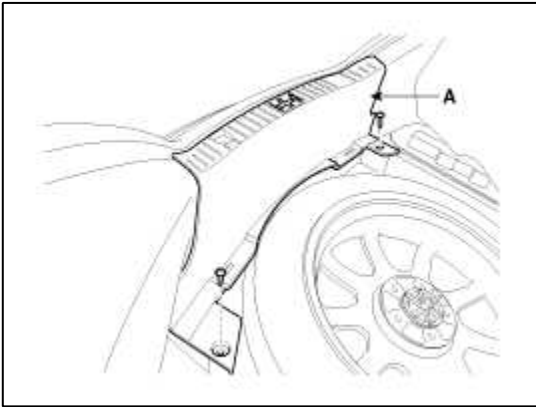


3. Disconnect the interior 2 antenna connector (A) and remove the interior 3 antenna (B) after loosening nut (2EA).

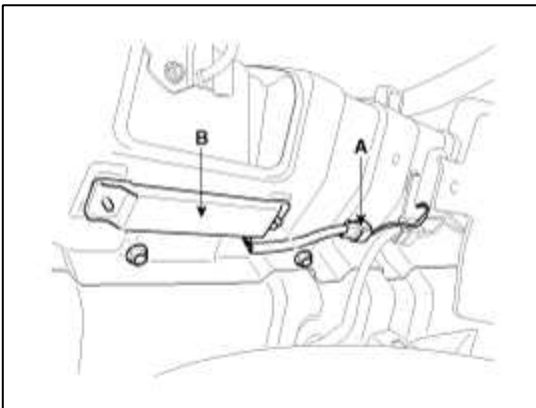


Exterior Bumper Antenna

1. Disconnect the negative(-) battery terminal.
2. Remove the rear bumper.
(Refer to BD group - "Rear bumper")
3. Disconnect the antenna connector (B) and remove the exterior bumper antenna (A) after loosening the nuts (2EA).

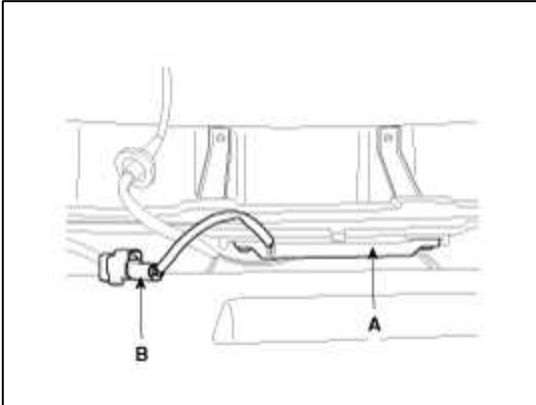


Buzzer

1. Disconnect the negative(-) battery terminal.
2. Remove the left side fender.
(Refer to BD group - "Fender")
3. Remove the external buzzer (A).

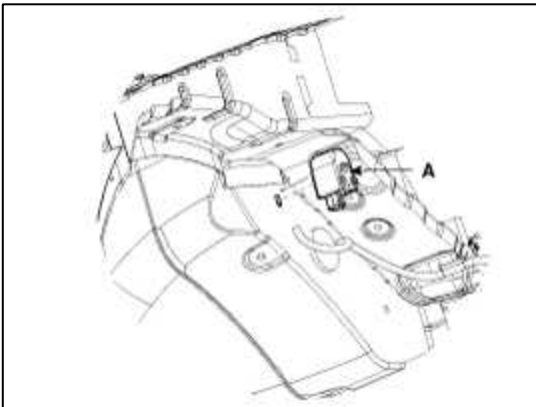


Door Outside Handle

1. Disconnect the negative (-) battery terminal.
2. Disconnect the connector after removing the door trim.
(Refer to the Body group - "Front door")
3. After loosening the mounting bolt, then remove the key holder (A).

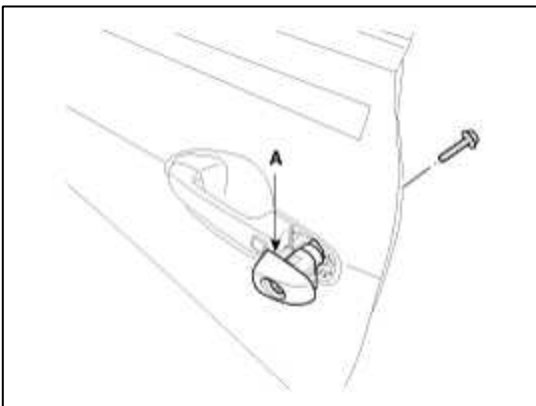

4. Remove the outside handle (A) by sliding it rearward.

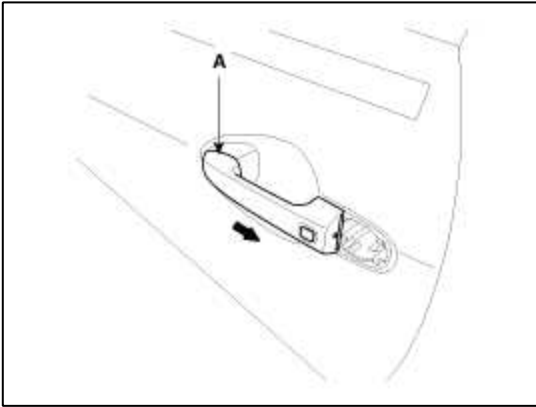

Installation

Smart Key Unit

1. Install the smart key unit.
2. Install the smart key unit mounting nut and connector.
3. Install the glove box housing.
4. Install the glove box.
5. Install the negative (-) battery terminal and check the smart key system.

RF Receiver

1. Install the RF receiver.
2. Install the glove box housing.
3. Install the glove box.
4. Install the negative (-) battery terminal and check the smart key system.

Interior 1 Antenna

1. Install the interior 1 antenna.
2. Install the center fascia lower panel.
3. Install the console upper cover.
4. Install the negative (-) battery terminal and check the smart key system.

Interior 2 Antenna

1. Install the interior 2 antenna.
2. Install the console rear cover after connecting the connector.
3. Install the negative (-) battery terminal and check the smart key system.

Interior 3 Antenna

1. Install the interior 3 antenna.
2. Install the trunk panel.
3. Install the negative (-) battery terminal and check the smart key system.

Exterior Bumper Antenna

1. Install the exterior bumper antenna.
2. Install the rear bumper.
3. Install the negative (-) battery terminal and check the smart key system.

Buzzer


1. Install the buzzer.
2. Install the left side fender.
3. Install the negative (-) battery terminal and check the smart key system.

Door Outside Handle

1. Install the outside handle.
2. Install the door trim.
3. Install the negative (-) battery terminal and check the smart key system.

Body Electrical System > Keyless Entry And Burglar Alarm > Components and Components Location

Component Location

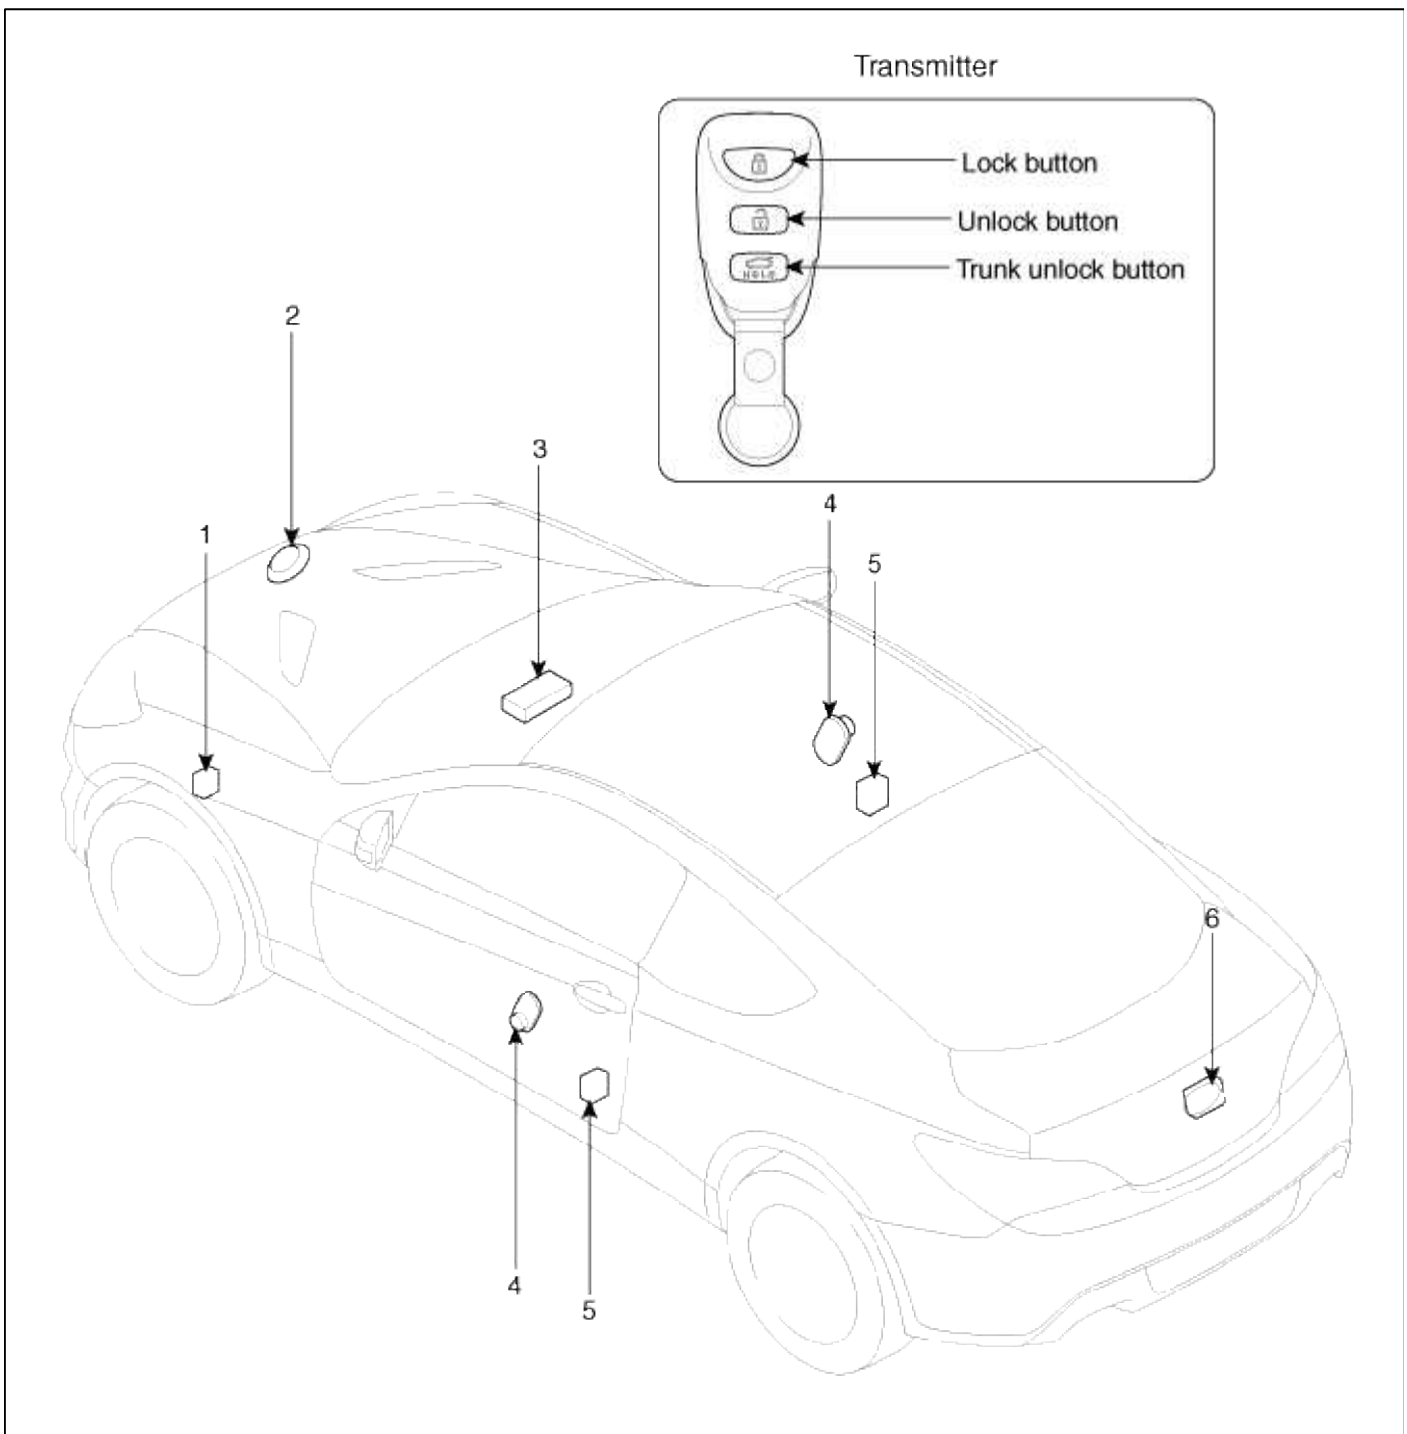

1. Hood switch
2. Horn
3. Body Control Module (BCM)

4. Front door switch
5. Front door lock actuator & switch
6. Trunk lid lock actuator

Body Electrical System > Keyless Entry And Burglar Alarm > Description and Operation

Description

Burglar Alarm System

The burglar alarm system is armed automatically after the doors, hood, and trunk lid are closed and locked.

The system is set off when any of the following things below occurs:

- A door is forced open.
- A door is unlocked without using the transmitter.
- The trunk lid is opened without using the key.
- The hood is opened.
- The engine starter circuit and battery circuit are bypassed by breaking the ignition switch.

When the system is set off, the alarm (horn) sounds and the hazard lamp flash for about two minutes or until the system is disarmed by unlocking the transmitter.

For the system to arm, the ignition switch must be off and the key removed. Then, the body control module must receive signals that the doors, hood, and trunk lid are closed and locked. When everything is closed and locked, none of the control unit inputs are grounded.

The door switches, hood switch and trunk lid switch are all close and lock the doors with the remote transmitter and then the system arms immediately.

If anything is opened or improperly unlocked after the system is armed, the body control module gets a ground signal from that switch, and the system is set off.

If one of the switches is misadjusted or there is a short in the system, the system will not arm. As long as the body control module continues to get a ground signal, it thinks the vehicle is not closed and locked and will not arm.

The receiver is integrated in the body control module.

Keyless Entry System


The burglar alarm system is integrated with the keyless entry system. The keyless entry system allows you to lock and unlock the vehicle with the remote transmitter. When you push the LOCK button, all doors lock. When you push the UNLOCK button all doors unlock.

The room lamp, if its switch is in the center position, will come on when you press the UNLOCK button. If you do not open a door, the light will go off in about 30 seconds, the doors will automatically relock, and the burglar alarm system will rearm. If you relock the doors with the remote transmitter within 30 seconds, the light will go off immediately.

You cannot lock or unlock the doors with the remote transmitter if the key is in the ignition switch.

The system will signal you when the doors lock and unlock by flashing the hazard lamp once when they lock, and twice when they unlock.

Data Flow

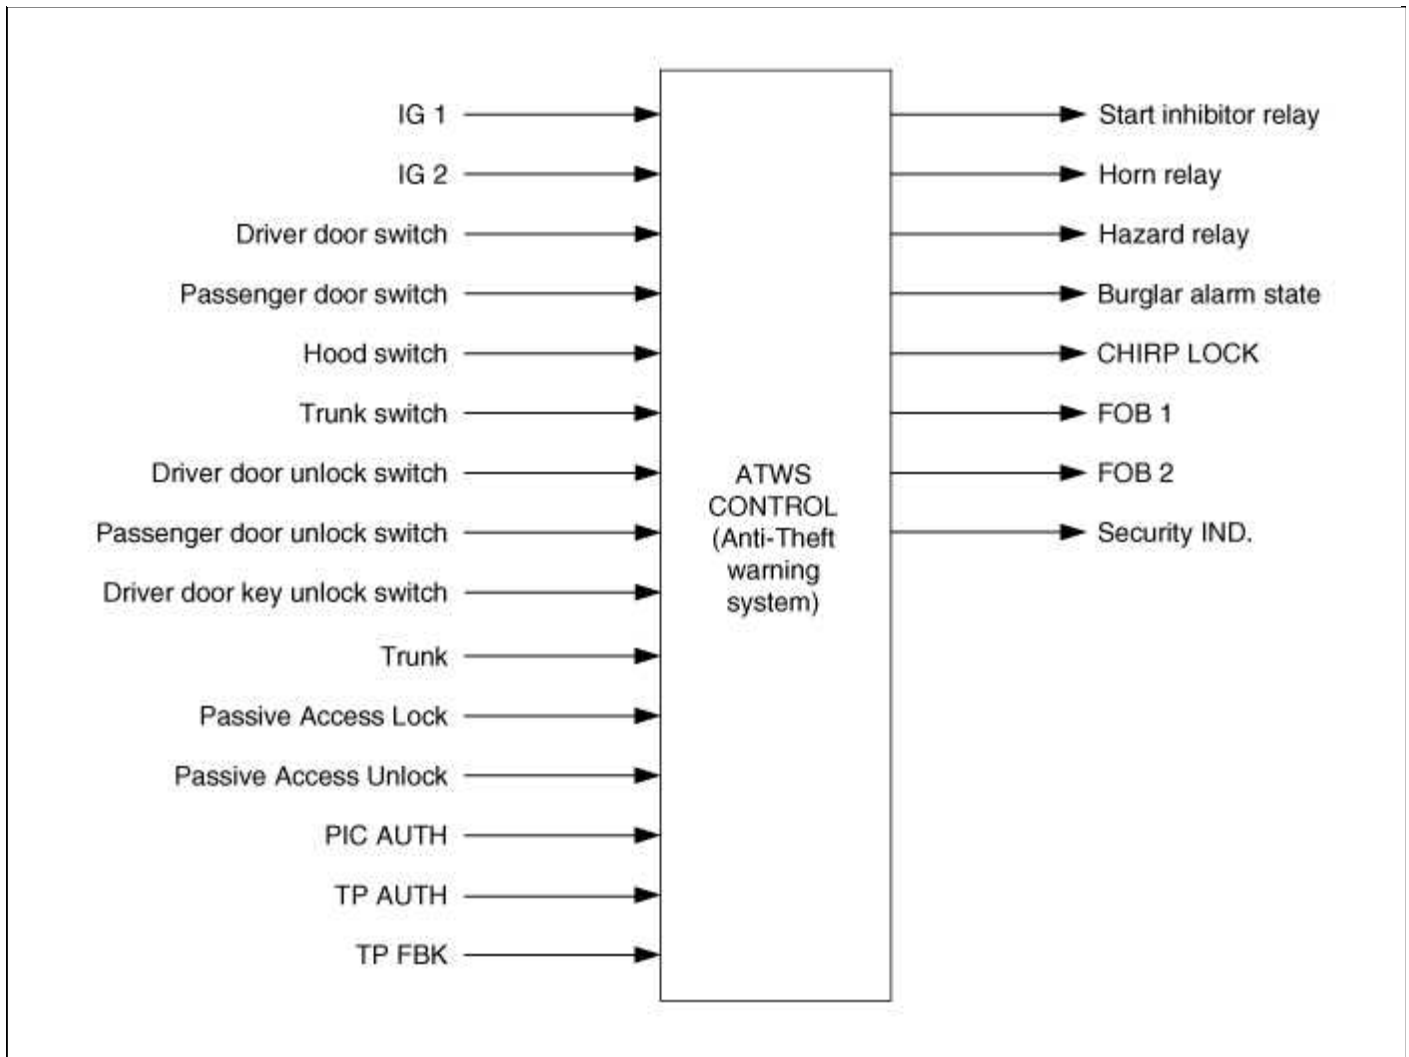

Transmitter(TX) Spec

1. Transmission Distance : 30m or more from outside of the car
2. Registration procedure of the transmitter
 - (1) In registration mode, it shall be possible to register up to Max 4EA.
 - (2) At re-registration, data are registered newly after deleting the previous TX DATA

No.	Saved CODE	CODE to change	Changed CODE
1	A	C	C (A is deleted)
2	A, B, C, D	E	E (A, B, C, D is deleted)
3	A, B	C, D, E	C, D
4	A, B	C, C, D	C

- (3) For the registration procedures by using GDS, refer to "TRANSMITTER CODE REGISTRATION".

3. Transmitter signal & Receiver Spec


- (1) Transmission signal
 - A. Transmit relevant transmission DATA (Transmission frame) twice by pushing TX SW.
 - B. Only LOCK signal is output when pushing TX LOCK SW and UNLOCK SW at the same time.

Functions

1. Disarm


Condition 1

State	Description
Initial Condition	ALARM
Event	- IGN KEY ON during 30sec or ALT" L"=on during 3 sec.
	NON SMK(Smart key) - Any door open&TX UNLOCK - TX TRUNK-TX Lock & Lock confirm Failed
	SMK : - Any door open & RKE CMD=UNLOCK/Passive Access Unlock=1 - RKE_TRUNK=1-TP(Transponder)AUTH=1 / PIC AUTH=1 / TP FBK=X2 (X:Don't care) - RKE CMD=LOCK/Passive Access Lock=1 & Lock confirm Failed
	Mechanical Key OPTION Enable: - Mechanical UNLOCK - Mechanical LOCK&Lock confirm Failed
Action	The state goes to DISARM state - Horn Relay, Hazard Relay, Start Inhibit Relay OFF - TX Unlock →Unlock Relay on for 0.5 sec →Hazard Relay on (twice)

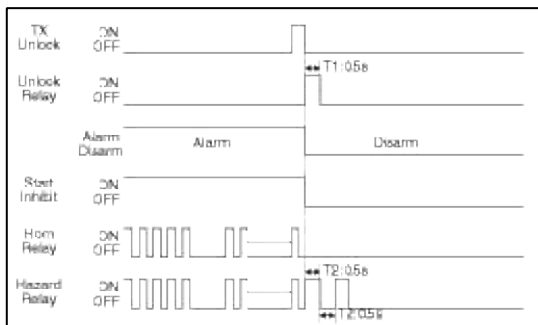

T1 : 0.5s

T2 : 0.5s +/-0.1s

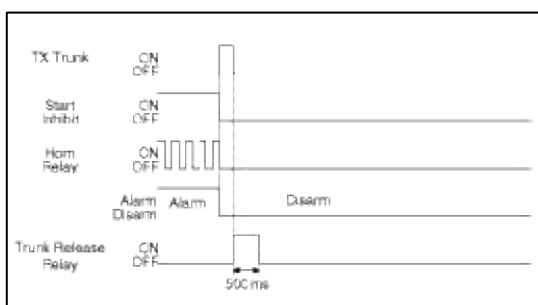

Condition 2

State	Description
Initial Condition	DISARMstate & (IGN KEY OUT) & Any Door open
Event	NON SMK : - Any door open & TX UNLOCK
	SMK : - Any door open & RKE CMD=UNLOCK / Passive Access Unlock=1 / RKE TRUNK=1 / Trunk reopen=1 - TP AUTH=1 / PIC AUTH=1 / TP FBK=X2 (X:Don't care)
Action	No state change - TX UNLOCK, RKE CMD=UNLOCK, Passive Access Unlock=1 →Hazard Relay for 0.5s ON/OFF(twice)

Condition 3

State	Description
Initial Condition	ARM WAIT state
Event	- Any door open or Hood Switch OPEN or Trunk switch OPEN - Any door is unlocked - Key In switch ON
	SMK : TP AUTH=1 / PIC AUTH=1 / TP FBK=X2
	Mechanical Key OPTION Enable: M UNLOCK
Action	The state goes to DISARM state - M-unlock →Hazard relay for 0.5 sec. ON/OFF(twice)

Condition 4

State	Description
Initial Condition	AUTOLOCK TIMER1 STATE
Event	- Any door open or Hood Switche OPEN or Trunk Switch OPEN - Key In Switch ON - AUTO LOCK & Lock confirmation failure
	NON SMK spec: - AUTO LOCK & Lock confirmation failure
	SMK spec: - RKE CMD=LOCK / Passive Access Lock=1& Lock confirmation failure - TP AUTH=1 / PIC AUTH=1 / TP FBK=X2
	Mechanical Key option Enable: - Mechanical LOCK & Lock confirmation failure
Action	The state goes to DISARM state

Condition 5

State	Description
Initial Condition	AUTOLOCK TIMER2 STATE
Event	- Any door open - Key In Switch ON - AUTO LOCK & Lock confirmation failure - Hood Switch Open and Memory Hood was Close - Trunk Switch Open and Memory Trunk was Close
	NON SMK : - TX LOCK& Lock confirmation failure
	SMK : - RKE CMD=LOCK/ Passive Access Lock=1& Lock confirmation failure - TP AUTH=1/ PIC AUTH=1 / TP FBK=X2
	Mechanical Key option Enable: Mechanical LOCK & Lock confirmation failure
Action	The state goes to DISARM state

Condition 6

State	Description
Initial Condition	ARMSTATE
Event	EXCEPT CHINA SPEC: - IGN KEY ON
	SMK : - TP AUTH=1 / PIC AUTH=1 / TP FBK=X2
	Mechanical Key option Enable: - Mechanical UNLOCK
Action	The state goes to DISARM state - M-unlock →Hazard relay for 0.5 sec. ON/OFF(twice)

Condition 7

State	Description
Initial Condition	REARM state
Event	Execpt china spec: - IGN KEY ON during 30sec or ALT "L"=on during 3 sec.
	NON SMK : - TX LOCK & Lock confirmation failure - TX TRUNK
	SMK : - TP AUTH=1 / PIC AUTH=1 / TP FBK=X2 - RKE CMD=LOCK / PassiveAccess Lock=1 & Lock confirmation failure - RKE TRUNK=1 / Trunk reopen=1
	Mechanical Key option Enable: - Mechanical UNLOCK - Hazard relay for 0.5 sec. ON/OFF(twice) - Mechanical LOCK & Lock confirmation failure
Action	The state goes to DISARM state Start Inhibit Relay OFF

Condition 8

State	Description
Initial Condition	PREARM state
	- Key In Switch ON - All entrance closed & Any Door is unlocked - Any Door open & Tx Unlock
	NON SMK: - Any door open & TX UNLOCK
	SMK : - TP AUTH=1 / PIC AUTH=1 / TP FBK=X2 - Any door open & C RKE CMD=UNLOCK/ Passive Access Unlock=1
	Mechanical Key option Enable : - MECHANICAL UNLOCK
Action	The state goes to DISARMECHANICAL state - Hazard Relay for 0.5s ON/OFF(twice)

Condition 9

State	Description
Initial Condition	ARMHOLD
	- IGN KEY ON
	SMK : - TP AUTH=1 / PIC AUTH=1 / TP FBK=X2
	Mechanical Key option Enable: - MECHANICAL UNLOCK
Action	The state goes to DISAR state - M-unlock →Hazard relay for 0.5 sec. ON/OFF(twice)

2. Arm

Condition 1

State	Description
Initial Condition	ARM state
Event	NON SMK : - TX LOCK
	SMK: - RKE CMD=LOCK / Passive Access Lock=1
Action	No state change HazardRly 1Time on(1sec)

Condition 2

State	Description
Initial Condition	ARM WAIT state
Event	- Afte ARM WAIT TIMER finished
Action	The state goes to ARM state

Condition 3


State	Description
Initial Condition	ARMHOLD state
Event	Trunk close for at least Trunk Release Time Out(default 30sec) in ARMWAIT state
Action	The state goes to ARM state

3. Alarm

Condition 1

State	Description
Initial Condition	ARM state
Event	Any door open or Hood Switch open or Trunk Switch open China spec ; Key In Switch ON or IG1 ON or IG2 ON Fob in (SMK Spec.)
Action	The state goes to ALARM state - Engine Start Inhibit is ON - GEN, M/E, CHINA AREA : The horn is ON one time for 27sec(\pm 2sec) - The hazard is driven also (During Horn driving)

Non-middle East Area

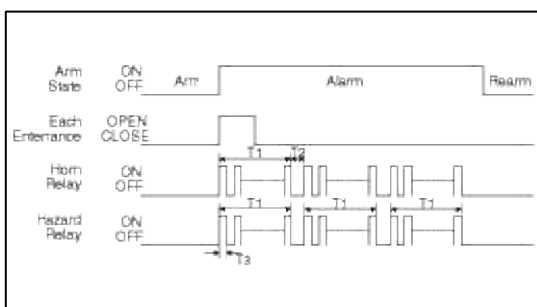


T1 : 27s(\pm 2sec),

T2 : 10s(\pm 2sec),

T3 : 0.5s \pm 0.1sec

Middle East, GEN/EC, CHINA-Area

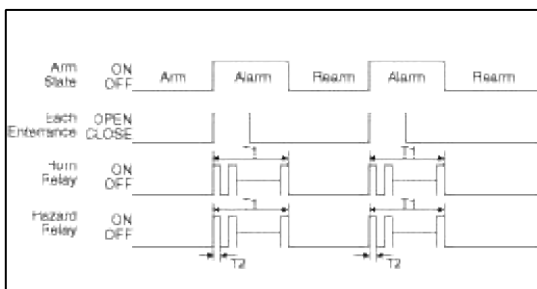

T1 : 27s \pm 2sec


T2 : 0.5s \pm 0.1sec

Condition 2

State	Description
Initial Condition	REARM state
Event	Any door open or Hood Switch OPEN or Trunk Switch OPEN
Action	The state goes to ALARM state GEN, M/E, CHINA AREA : The horn is ON one time for 27sec(\pm 2sec) The hazard is driven also (During Horn driving)

Condition 3

State	Description
Initial Condition	ARMHOLD state
Event	Any door open or Hood Switch OPEN
Action	The state goes to ALARM state GEN, M/E, CHINA AREA : The horn is ON one time for 27sec(±2sec) The hazard is driven also (During Horn driving).

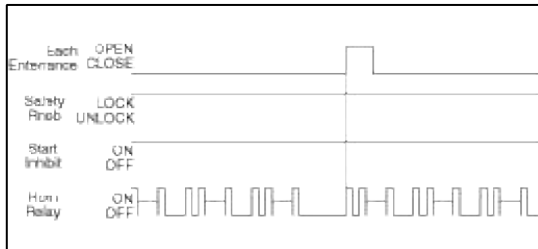

4. Arm Wait Mode

Condition 1

State	Description
Initial Condition	ARMWAIT state
Event	NON SMK : - TX LOCK
	SMK: - RKE CMD = LOCK / Passive Access Lock=1
Action	No state change Hazard Relay 1Time on(1sec)

Condition 2

State	Description
Initial Condition	DISARM state & IGN KEY OUT & All entrances closed(DOORS, HOOD and TRUNK)
Event	NON SMK: - Tx Lock & locked confirmed
	SMK: - RKE CMD=LOCK / Passive Access Lock=1 & locked confirmed
	Mechanical Key option Enable: - MECHANICAL LOCK & locked confirmed - DOOR LOCK state : Any door open → All door closed
Action	- The state goes to ARMWAIT State - Start ARMWAITTIMER - Hazard Relay 1Time on(1sec)

Condition 3

State	Description
Initial Condition	ALARM state & All entrances closed(DOORS, HOOD and TRUNK)
Event	NON SMK: - Tx Lock & locked confirmed
	SMK : - RKE CMD=LOCK / Passive Access Lock=1 & locked confirmed
	Mechanical Key option Enable: - MECHANICAL LOCK & locked confirmed
Action	- The state goes to ARMWAIT State - Horn Relay, Start Inhibit Relay = OFF - Hazard Relay 1Time on(1sec) (MECHANICAL LOCK : Except) - Start ARMWAIT TIMER

Condition 4


State	Description
Initial Condition	AUTOLOCK TIMER1 state
Event	AUTOLOCK & locked confirmed
	NON SMK: - Tx Lock & locked confirmed
	SMK: - RKE CMD=LOCK / Passive Access Lock=1 & locked confirmed
	Mechanical Key option Enable: MECHANICAL LOCK & locked confirmed
Action	- The state goes to ARMWAIT State - Hazard Relay 1Time on(1sec) - Start ARMWAIT TIMER

Condition 5

State	Description
Initial Condition	PREARM state
Event	All door closed and (Trunk Switch CLOSE & TRUNK MARK=CLEAR) & Hood Switch CLOSE & DOOR LOCK
Action	- The state goes to ARMWAIT State - Hazard Relay 1Time on(1sec) - Start ARMWAIT TIMER

Condition 6

State	Description
Initial Condition	REARM state
Event	NON SMK : TX LOCK & locked confirmed
	SMK : - RKE CMD=LOCK/ Passive Access Lock=1 & locked confirmed
	Mechanical Key option Enable: - MECHANICAL LOCK & locked confirmed
Action	- The state goes to ARMWAIT State - Hazard Relay 1Time on(1sec) (MECHANICAL LOCK : Except) - Start Inhibit Relay OFF - Start ARMWAIT TIMER

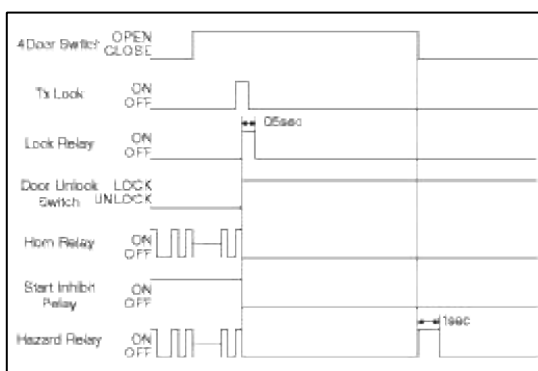

5. Rearm Mode

Condition 1

State	Description
Initial Condition	ALARM state
Event	All entrance is closed & ALARM Patten finished
Action	The state goes to REARM state

6. Autolocktimer1 Mode

Condition 1

State	Description
Initial Condition	ARM state
Event	NON SMK : TX UNLOCK
	SMK : RKE CMD=UNLOCK / Passive Access Unlock=1
Action	- The state goes to AUTO LOCK TIMER1 state - Start AUTO LOCK TIMER1 - Hazard Relay Twice on (0.5s ON/0.5s OFF)

Condition 2

State	Description
Initial Condition	AUTO-LOCK TIMER1 state
Event	AUTOLOCK TIMER1 finished
	NON SMK: TX UNLOCK
	SMK: RKE CMD=UNLOCK / Passive Access Unlock=1
Action	No change state
	CASE1: AUTOLOCK TIMER1 Finished AUTOLOCK
	CASE2: TX UNLOCK, RKE CMD=UNLOCK, Passive Access Unlock=1 Hazard Relay Twice on(0.5s ON/0.5s OFF) Restart AUTOLOCK TIMER1

Condition 3

State	Description
Initial Condition	ARM WAIT state
Event	NON SMK : TX UNLOCK
	SMK: RKE CMD=UNLOCK / Passive Access Unlock=1
Action	- The state goes to AUTO LOCK TIMER1 state - Start AUTO LOCK TIMER1 - Hazard Relay Twice on(0.5s ON/0.5s OFF).

Condition 4

State	Description
Initial Condition	DISARM state & All entrances closed(DOORS, HOOD & TRUNK) & IGN KEY OUT
Event	NON SMK: TX UNLOCK
	SMK: RKE CMD=UNLOCK/ Passive Access Unlock=1
Action	- The state goes to AUTO LOCK TIMER1 state - Start AUTO LOCK TIMER1 - Hazard Relay Twice on(0.5s ON/0.5s OFF).

Condition 5

State	Description
Initial Condition	ALARM state & All door closed and Trunk Switch CLOSE, Hood Switch CLOSE
Event	NON SMK: TX UNLOCK
	SMK: RKE CMD=UNLOCK / Passive Access Unlock=1
Action	<ul style="list-style-type: none"> - The state goes to AUTO LOCK TIMER1 state - Start AUTO LOCK TIMER1 - Hazard Relay Twice on(0.5s ON/0.5s OFF). - Start Inhibit Relay off / Horn Relay off

Condition 6

State	Description
Initial Condition	REARM state
Event	NON SMK: TX UNLOCK
	SMK: RKE CMD=UNLOCK/ Passive Access Unlock=1
Action	<p>The state goes to AUTO LOCK TIMER1 state</p> <ul style="list-style-type: none"> - Start AUTO LOCK TIMER1 - Hazard Relay Twice on(0.5s ON/0.5s OFF). - Start Inhibit Relay off

7. Autolocktimer2 Mode**Condition 1**

State	Description
Initial Condition	AUTO-LOCK TIMER2 state
Event	Finished AUTOLOCK TIMER2
	NON SMK: TX UNLOCK
	SMK: RKE CMD=UNLOCK/ Passive Access Unlock=1
Action	No change state
	CASE1: AUTOLOCK TIMER2 finished AUTOLOCK
	CASE2: TX UNLOCK, RKE CMD=UNLOCK, Passive Access Unlock=1 <ul style="list-style-type: none"> - Start AUTO LOCK TIMER2 - Hazard Relay Twice on(0.5s ON/0.5s OFF).

Condition 2

State	Description
Initial Condition	DISARM state & IGN KEY OUT & (Trunk or Hood Switch OPEN) state
Event	NON SMK : TX UNLOCK
	SMK: RKE CMD=UNLOCK/ Passive Access Unlock=1
Action	<ul style="list-style-type: none"> - The state goes to AUTO LOCK TIMER2 state - Start AUTO LOCK TIMER2 - Hazard Relay Twice on(0.5s ON/0.5s OFF). - Memo Hood/ Trunk state

Condition 3

State	Description
Initial Condition	ALARM state & All door closed & (Trunk or Hood Switch OPEN) state
Event	NON SMK: TX UNLOCK
	SMK: RKE CMD=UNLOCK / Passive Access Unlock=1
Action	<ul style="list-style-type: none"> - The state goes to AUTO LOCK TIMER2 state - Horn Relay, Start Inhibit Relay = OFF - Start AUTO LOCK TIMER2 - Hazard Relay Twice on(0.5s ON/0.5s OFF). - Memo Hood/Trunk state

Condition 4

State	Description
Initial Condition	PREARM state & All door closed & (Trunk Switch or Hood OPEN)state
Event	NON SMK: TX UNLOCK
	SMK: RKE CMD=UNLOCK / Passive Access Unlock=1
Action	<ul style="list-style-type: none"> - The state goes to AUTO LOCK TIMER2 state - Start AUTO LOCK TIMER2 - Hazard Relay Twice on(0.5s ON/0.5s OFF). - Memo Hood/Trunk state

Condition 5

State	Description
Initial Condition	ARMHOLD state
Event	NON SMK: TX UNLOCK
	SMK: RKE CMD=UNLOCK / Passive Access Unlock=1
Action	<ul style="list-style-type: none"> - The state goes to AUTO LOCK TIMER2 state - Start AUTO LOCK TIMER2 - Hazard Relay Twice on(0.5s ON/0.5s OFF). - Memo Hood/Trunk state

8. Prearm Mode

Condition 1

State	Description
Initial Condition	AUTO-LOCK TIMER2 state
Event	AUTO LOCK & locked confirmed
	NON SMK: TX LOCK & locked confirmed
	SMK : RKE CMD=LOCK/ Passive Access Lock=1 & locked confirmed
	Mechanical Key option Enable: MECHANICAL LOCK & locked confirmed
Action	The state goes to PREARM state

Condition 2

State	Description
Initial Condition	DISARM state & IGN KEY OUT
Event	NON SMK: - Any door open or Hood Switch OPEN or Trunk Switch OPEN state & locked confirmed
	SMK : - Any door open or Hood Switch OPEN or Trunk Switch OPEN state RKE CMD=LOCK / Passive Access Lock=1 & locked confirmed
	Mechanical Key option Enable: MECHANICAL LOCK & locked confirmed ALL DOOR LOCK state (Any door open → All doors closed) and (Trunk Switch OPEN or Hood Switch OPEN)
Action	The state goes to PREARM state

Condition 3

State	Description
Initial Condition	ALARM state& IGN KEY OUT and(Any door open or Hood Switch OPEN or TrunkSwitch OPEN)
Event	NON SMK : TX LOCK & locked confirmed
	SMK : RKE CMD=LOCK/ Passive Access Lock=1 & locked confirmed
	Mechanical Key option Enable: MECHANICAL LOCK & locked confirmed
Action	The state goes to PREARM state Horn Relay, Hazard Relay, Start Inhibit Relay → OFF

Condition 4

State	Description
Initial Condition	ARMHOLD state
Event	NON SMK: TX LOCK & locked confirmed
	SMK: RKE CMD=LOCK/ Passive Access Lock=1 & locked confirmed
	Mechanical Key option Enable: MECHANICAL LOCK locked confirmed
Action	The state goes to PREARM state

Condition 5

State	Description
Initial Condition	ARMWAIT state
Event	NON SMK: TX TRUNK
	SMK: RKE TRUNK=1 / Trunk reopen=1
Action	The state goes to PREARM state Start TRUNKTIMER TRUNK MARK = Set


Condition 6

State	Description
Initial Condition	PREARM state
Event	Trunk Switch OPEN TRUNKTIMER expired (Trunk Release Time Out: 30s)
Action	No state change CASE Trunk Switch OPEN : <ul style="list-style-type: none"> • Stop to TRUNKTIMER. • TRUNK MARK = Clear CASE TRUNKTIMER expired <ul style="list-style-type: none"> • TRUNK MARK = Clear

9. Armhold Mode


Condition 1

State	Description
Initial Condition	ARM state
Event	NON SMK: TX TRUNK SMK: RKE TRUNK=1 / Trunk reopen=1
Action	The state goes to ARMHOLD state

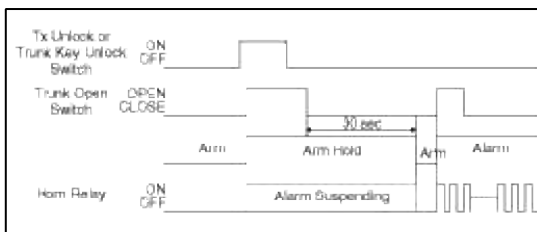

Body Electrical System > Keyless Entry And Burglar Alarm > Repair procedures

Inspection

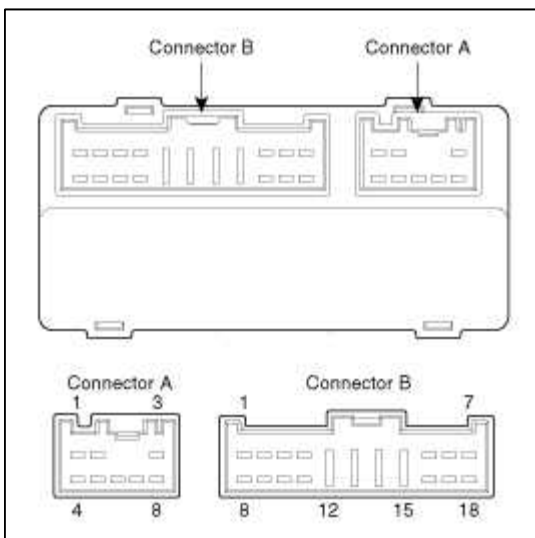


Burglar Alarm

Check for continuity between the terminals.

1. There should be no continuity between the No.11 and No.10 terminals when power and ground are connected to the No.11 and No.4 in the ICM relay B terminals.
2. There should be continuity between the No.11 and No.10 terminals when power is disconnected.

Front Door Lock Actuator Inspection

1. Remove the front door trim.
(Refer to the Body group - "Front door")
2. Remove the front door module.
3. Disconnect the 6P connector from the actuator.

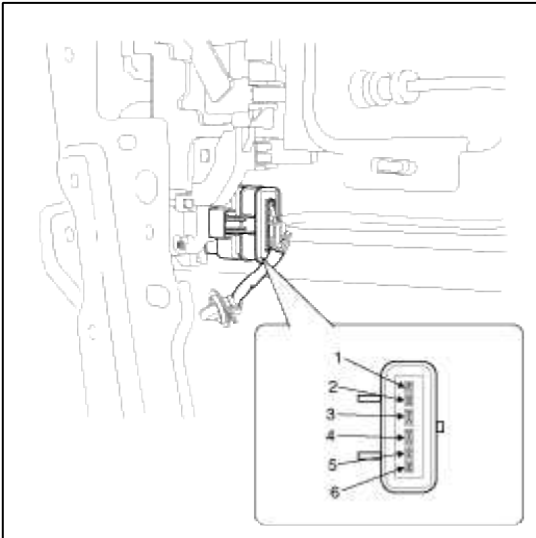


4. Check actuator operation by connecting power and ground according to the table. To prevent damage to the actuator, apply battery voltage only momentarily.

		Terminal	
Position		4	3
Front left	Lock	⊕	⊖
	Unlock	⊖	⊕
Front right	Lock	⊖	⊕
	Unlock	⊕	⊖

Trunk Lid Release Actuator Inspection

1. Remove the trunk lid trim panel.
(Refer to the Body group - "Trunk lid")
2. Disconnect the 3P connector from the actuator.

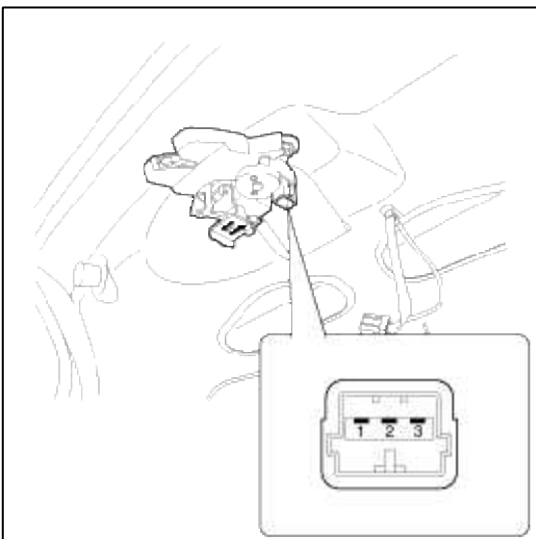


3. Check actuator operation by connecting power and ground according to the table. To prevent damage to the actuator, apply battery voltage only momentarily.

Terminal	1	2
Position		
Lock release(Open)	⊖	⊕

Front Door Lock Switch Inspection

1. Remove the front door trim panel.
(Refer to the Body group - "Front door")
2. Remove the front door module.
3. Disconnect the 6P connector from the actuator.

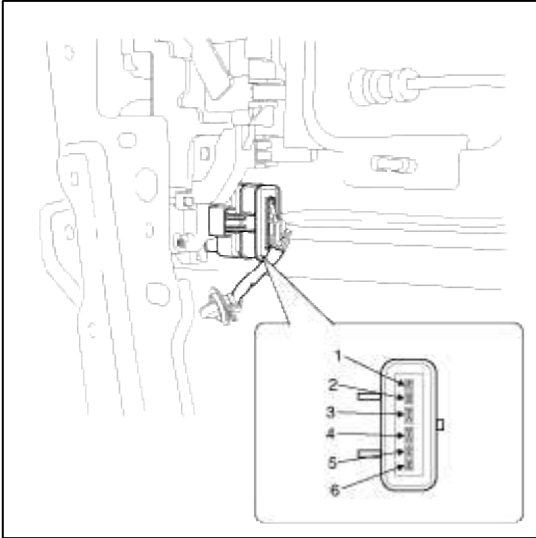


4. Check for continuity between the terminals in each switch position according to the table.

Position	Terminal	5	6	1	2
Front left	Lock				
	Unlock	○	○		
Front right	Lock				
	Unlock			○	○

Trunk Lid Open Switch Inspection

1. Remove the trunk lid trim.
(Refer to the Body group - "Trunk lid")
2. Disconnect the 3P connector from the actuator.

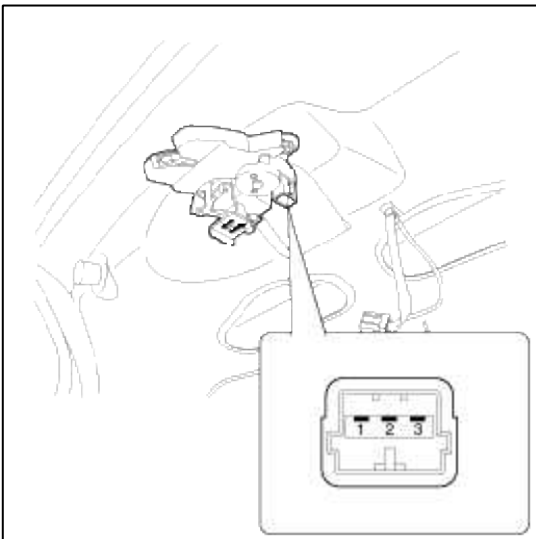


3. Check for continuity between the terminals in each switch position according to the table.

Position \ Terminal	1	3
Lock release(Open)	○ — ○	

Door Switch Inspection


Remove the door switch and check for continuity between the terminals.

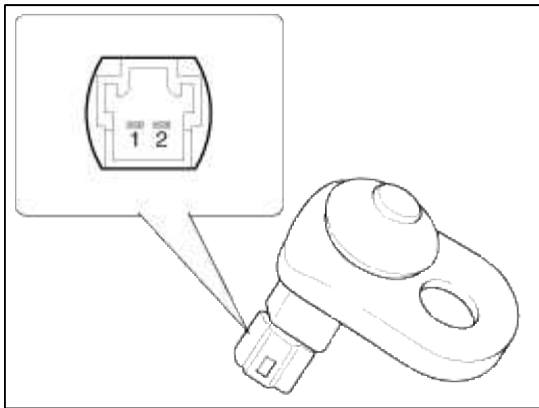

Position \ Terminal	1	2	Body (Ground)
Free(Door open)	○ — ○	○ — ○	○
Push(Door close)			

Hood Switch Inspection

1. Disconnect the 1P connector from the hood switch(A).

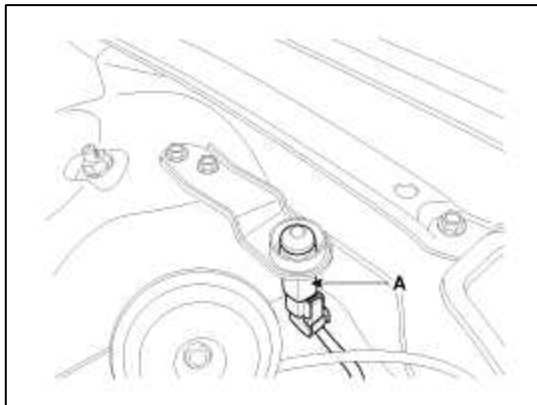

2. Check for continuity between the terminals and ground according to the table.

Position \ Terminal	2	1
Hood open (Free)	○ — ○	
Hood close (Push)		

Body Electrical System > Keyless Entry And Burglar Alarm > Transmitter > Specifications

Specifications


Items	Specifications
Keyless entry transmitter Power source	Lithium 3V battery (1EA, CR2032)
Transmissible distance	10m or more
Life of battery	2 years or more (at 20 times per day)
Button	Door lock Door unlock Trunk lid open Panic
Transmission frequency	315 MHz

Body Electrical System > Keyless Entry And Burglar Alarm > Transmitter > Repair procedures

Inspection

1. Check that the red light flickers when the door lock or unlock button is pressed on the transmitter.
2. Remove the battery and check voltage if the red light doesn't flicker.

Standard voltage : 3V

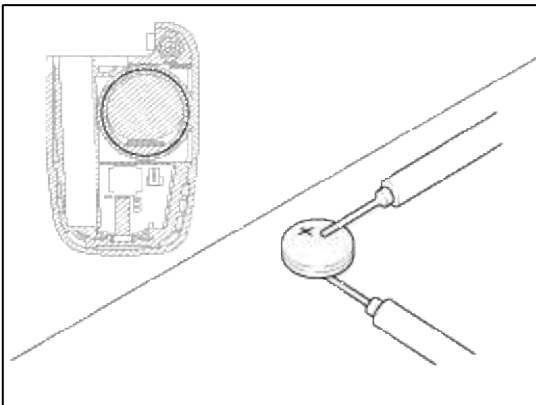

3. Replace the transmitter battery with a new one, if voltage is below 3V then try to lock and unlock the doors with the transmitter by pressing the lock or unlock button five or six times.
4. If the doors lock and unlock, the transmitter is O.K, but if the doors don't lock and unlock, register the transmitter code, then try to lock and unlock the doors.
5. If the doors lock and unlock, the transmitter is O.K, but if the doors don't lock and unlock, replace the transmitter.


Body Electrical System > BCM (Body Control Module) > Body Control Module (BCM) > Specifications

Specifications


Items	Specifications
Rated voltage	DC 12V
Operating voltage	DC 9 ~ 16V
Operating temperature	-22°F~167°F(-30°C~75°C)
Insulation resistance	100MΩ or more
Dark current	Less than 3mA (SMK : 5.5mA)

Body Electrical System > BCM (Body Control Module) > Body Control Module (BCM) > Components and Components Location


Component

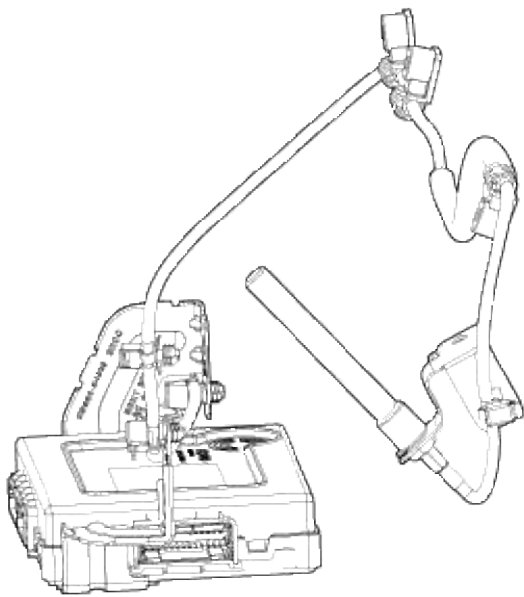


[RKE]

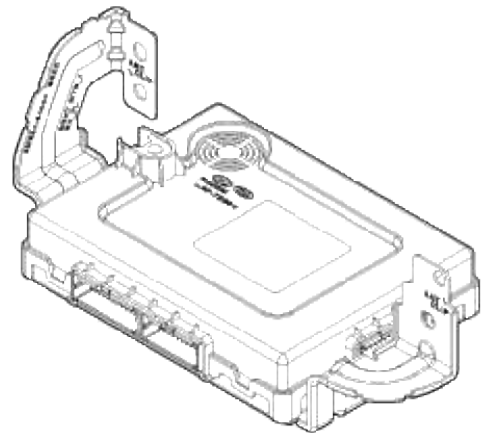


[SMK]

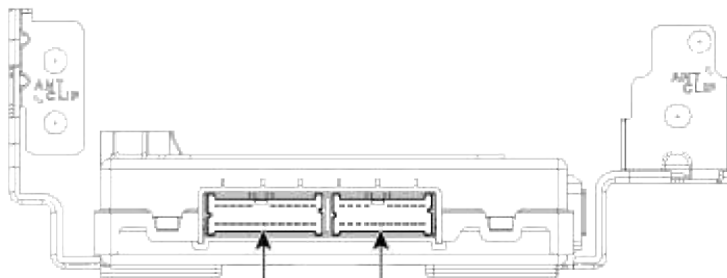


Connector A
Connector B

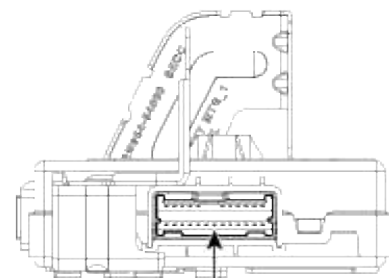


Connector C

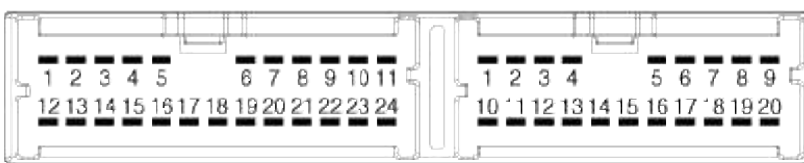

Connector A

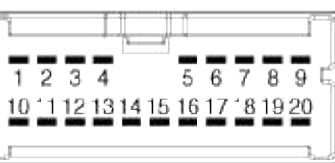

Connector B

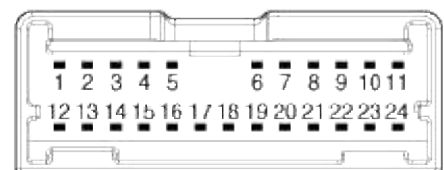

Connector C

Body Electrical System > BCM (Body Control Module) > Body Control Module (BCM) > Schematic Diagrams

BCM Connector Terminals

Function	Input/Output	Connector No	Description	Active	ON/OFF voltage level
	B+	A1	Supply power to BCM	Power	Operating Voltage 9V ~

			DCM		16V
Power	POWER_GND	A24	Ground	GND	
	SIGNAL_GND	A11	Ground	GND	
	V_AutoLightPWR	B8	Auto light sensor power	Power	
	AutoLight_GND	B20	Auto light sensor ground	GND	
Analog Input	A_IGN1	A12	Ignition1 voltage signal input	High	7V above/4V below
	A_IGN2	A2	Ignition2 voltage signal input	High	7V above/4V below
	A_ACC	A13	Accessory voltage signal input	High	7.8V above/7.1V below
	A_WiperIntVolume	B16	Wiper intermittent volume input	AD	
	A_AutoLightSnsr	B9	Auto light sensor signal input	AD	
Logic	L_BreakSW	A14	Break switch signal input	High	7V above/4V below
	L_WasherSW	A4	Front Washer switch signal input	High	7V above/4V below
	L_MistSW	A15	Mist switch signal input	High	7V above/4V below
	L_WiperIntSW	A5	Front Intermittent switch signal input	High	7V above/4V below
	L_KeyInSW	A18	Key In switch signal input	Low	2V below/OPEN (Reference:6V above)
	L_PASSW	A6	PAS ON/OFF switch signal input	Low	2V below/OPEN (Reference:6V above)
	L_PASOpt	A7	PAS Option switch signal input	Low	2V below/OPEN (Reference:6V above)
	L_HeadLampLowSW	A9	Head Lamp Low switch signal input	Low	2V below/OPEN (Reference:6V above)
	L_SideABGOpt	A17	Side Air Bag Option switch signal input	Low	2V below/OPEN (Reference:6V above)
	L_TailSW	A19	Tail Lamp switch signal input	Low	2V below/OPEN (Reference:6V above)


Input	L_HazardSW	A20	Hazard switch signal input	Low	2V below/OPEN (Reference:6V above)
	L_AutoLightSW	A21	Auto Light switch signal input	Low	2V below/OPEN (Reference:6V above)
	L_HeadLampHISW	A22	Head Lamp High Lamp switch signal input	Low	2V below/OPEN (Reference:6V above)
	L_RearFogSW	B1	Rear Fog Lamp switch signal input	Low	2V below/OPEN (Reference:6V above)
	L_TurnSigRHSW	B2	Turn Signal Right switch signal input	Low	2V below/OPEN (Reference:6V above)
	L_DefoggerSW	B3	Defogger switch signal input	Low	2V below/OPEN (Reference:6V above)
	L_KeyInterLockSW	B4	Key Interlock switch signal input	Low	2V below/OPEN (Reference:6V above)
	L_FrontFogSW	B10	Front Fog Lamp switch signal input	Low	2V below/OPEN (Reference:6V above)
	L_TurnSigLHSW	B11	Turn Signal Left switch signal input	Low	2V below/OPEN (Reference:6V above)
PWM Input	P_CrashInput	A8	Crash Input signal	PWM	
	P_MTSRx	B17	MTX Rx Input signal	PWM	
Communication	S_DiagK	A10	Diagnostic Communication line K for Tester	Data	
	CAN_H	B5	Can network communication line (high)	Data	
	CAN_L	B6	Can network communication line (low)	Data	
	LIN_PASData	B7	LIN network communication line	Data	
	O_SafetyPWECU	C5	Safety Power Window ECU output	Low	
	O_HeadLampLowSig	C6	Head Lamp Low signal output	Low	

Output	O_AV_TAIL	C7	Navi wakeup signal output	Low	
	O_KeyHoleILL	C8	Key Hole Illumination output	Low	
	O_ATMSOL	C10	ATM Solenoid Relay output	Low	
	O_KeySol	C11	Key Interlock Solenoid Relay output	Low	
	O_WiperRly	C16	Wiper Relay output	Low	
	O_HeadLampWasher	C17	Head Lamp Washer Relay output	Low	
	O_RearFogRly	C19	Rear Fog Relay output	Low	
	O_MTS_Tx(O_NaviWakeUp)	C21	MTS signal output (Navi Wake UO Signal Output)	Low	
	O_SecurityIND	C22	Security Indicator Relay output	Low	
	O_RoomLamp	C23	Room Lamp output		
	O_TURNSIGFRLH	C1	Turn signal front left signal output	High	
	O_TURNSIGFRRH	C2	Turn signal front right signal output	High	
	O_TURNSIGRRLH	C3	Turn signal rear left signal output	High	
	O_TURNSIGRRRH	C4	Turn signal rear right signal output	High	
	O_PASIND	C9	Turn signal front left signal output	High	
Power	V_Turn	C12	Turn signal IPS power		
		C13			

Body Electrical System > BCM (Body Control Module) > Body Control Module (BCM) > Description and Operation

Description

Body control module (A) receives various input switch signals controlling time and alarm functions for the intermittent wiper timer, washer timer, rear defogger timer, seat belts warning, central door lock, ignition key reminder, power window, door warning, tail lamp, crash door unlock, ignition key hole illumination, rear fog lamp control and keyless entry & burglar alarm.

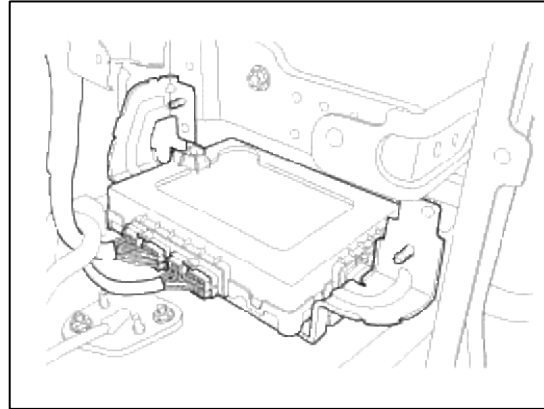

Function

1. Wiper & Washer Control

(1) Front Washer Interlocking Wiper Control

If washer switch (WasherSW) is ON at the status of IGN2 ON, Wiper turn ON. If washer switch is OFF, wiper turn ON for 2.5~3.8 seconds and then turn OFF.

(2) Front Wiper Intermittent Control

If front wiper INT switch is ON at the status of IGN2 ON, wiper turn ON according to INT volume.

(3) Front Wiper MIST Control

If front wiper MIST switch is ON at the status of IGN2 ON, wiper turn ON continually.

(4) Rear Washer Interlocking Rear Wiper Control

If rear washer switch is ON at the status of IGN2 ON, Wiper turn ON. If rear washer switch is OFF, rear wiper turn ON for 2.5~3.8 seconds and then turn OFF.

(5) Rear Wiper Control

If rear wiper switch is ON at the status of IGN2 ON, rear wiper turn ON continually.

(6) Rear Wiper Intermittent Control

If rear wiper INT switch is ON at the status of IGN2 ON, rear wiper turn ON according to INT volume.

2. Warning

(1) Seat Belt Reminder (Front)

IGN1 ON → Indicator ON for 6 sec → Indicator turn ON continually if the seat belt switch is OFF

IGN1 ON → Indicator ON for 7 sec → Indicator turn OFF if the seat belt switch is ON

If the vehicle speed is over 20km/h and seat belt switch is OFF, the warning sound ON and Indicator blink.

If the vehicle speed is over 20km/h and warning sound ON, the warning sound OFF after seat belt switch ON.

If the seat belt switch is ON, the warning sound OFF and Indicator turn OFF.

(2) Seat Belt Reminder (Rear)

IGN1 ON → Indicator turn ON when the seat belt switch is OFF

IGN1 ON → Indicator turn ON when the seat belt switch is OFF → ALT'L ON → Indicator turn OFF after 35 sec

In above situaton, if the vehicle speed is over 9 km/h, indicator turn ON again for 35 sec

If the vehicle speed is over 25 km/h and rear seat belt is OFF, indicator warning ON.

(3) Parking Brake Start Warning

If the vehicle speed is over 10 km/h & parking brake switch ON & IGN ON, the parking brake waring sound is ON.

3. Rear defogger

- (1) If rear defogger switch turns ON after Alt L is ON while IGN1 is ON, turn the defogger relay output ON for 20min.
- (2) If rear defogger switch turns ON again while defogger relay output is ON, turn the defogger relay output OFF.
- (3) Also turn defogger output OFF in case of Alt L OFF or IGN1 OFF while the defogger relay output is ON.

4. Power Window Timer

- (1) Turn the safety and power window ECU output ON when turning IGN1 ON.
- (2) Turn safety power window ECU output OFF after keeping safety power window ECU output for 30sec when IGN1 is OFF.
- (3) Turn safety power window ECU OFF immediately when opening the driver door or assist door within the condition (2) above.

5. Exterior Lamp Control

(1) Tail Lamp Auto Cut

If the key out and driver door is opened while the key or ACC or IGN ON and tail lamp switch ON, turn the tail lamp relay OFF automatically.

When turning tail lamp switch ON again from OFF after the automatic blackout, the tail lamp relay will be turned ON and Tail Lamp Auto Cut function will be cancelled.

(2) Auto Light Control

If the value of Auto Light Signal is input value of LIGHT ON at the status of IGN1 ON and the auto light switch ON, turn the light ON in 2.5sec \pm 100msec.

If the value of Auto Light Signal is LIGHT OFF and the auto light switch ON, turn the light OFF after 5sec.

(3) Front Fog Lamp control

Turn the front fog lamp ON when pressing the front fog lamp switch when IGN2 ON and Tail Lamp Relay turn ON.

(4) Head lamp low control

Turn the head lamp relay ON when turning the head lamp switch ON while IGN1 is ON.

(5) Escort

Turn the head lamp relay ON for 20 sec when turning the key OFF while the head lamp is ON.

The head lamp relay ON for 30 sec when opening the driver door while the head lamp is ON for 20 sec.

The head lamp relay OFF immediately when pressing the door lock button twice with RKE(or FOB) while the head lamp is ON.

(6) Static Bending Light

When the driver turn the steering wheel and IGN1 ON and head lamp ON, the static bending light turn ON.

The opposite side lamp is ON when the prohibit R is ON.

The static bending light turn ON for 2 min at least.

The static bending light turn ON according to the vehicle speed and steering wheel angle.

(7) Head Lamp Welcome Function

The head lamp low and tail lamp ON for 15 sec when pressing the door lock button twice with RKE(or FOB) while all doors are closed, locked, the key out and the head lamp switch (or auto light switch) is ON.

If the lock/unlock with RKE(or FOB) or IGN1 & head lamp switch (or auto light switch) OFF while head lamp low and tail lamp ON, the head lamp is OFF.

(8) Turn Signal Lamp Control

Turn the turn signal lamp ON when turning the turn signal lamp switch ON and IGN2 ON.

Triple turn signal operates when the turn signal switch OFF before signal lamp operating 3 times.

(9) Hazard Lamp Control

Turn the hazard lamp ON when turning the hazard lamp switch ON.

6. Interior Lamp Control

(1) Room Lamp Control

If 4 doors are closed & RKE(or FOB) unlocked or 4 doors are closed & KEY ON → OFF, turn the room lamp ON for 30 sec.

If IGN key OFF and door is open, turn the room lamp ON for 20 min.

If IGN ON while the room lamp ON for 20 min, keep the room lamp ON.

If the door is closed while the room lamp ON for 20 min, keep the room lamp ON for 30 sec.

If the door is locked while the room lamp ON for 30 sec, the room lamp is decaying.

(2) Room Lamp Auto Cut

Room lamp turn ON when the ACC and IGN ON.

If ACC OFF, turn the room lamp ON for 20 min.

If vehicle enter the ARMWAIT, the room lamp ON for 3 sec and OFF.

7. Door Lock/unlock Control

(1) Central Reminder

Turn the central door unlock ON when the lock input while the key OUT and door is opened.

(2) IGN Key Reminder

Turn the door unlock relay output ON when the knob is locked while the key IN and driver (or assist) door is opened.

(3) Passive Reminder

Turn the central door unlock ON when receiving the passive unlock signal.

(4) Crash Door Unlock

Keep the central unlock output for 5 sec when receiving the crash signal while the key IN or ACC ON or IGN ON.

Crash door unlock function has priority to LOCK/UNLOCK control by other functions

(5) Auto Door Lock By Vehicle Speed Change

All door lock signal is output if vehicle speed is 15km/h when the IGN1 ON and Alt L ON.

(6) Auto Door Lock By Shift Lever Change

All door lock signal is output if shift lever is changed from P to R/N/D position while the IGN1 ON and all doors are closed.

(7) Auto Door Unlock By Key In Condition

All door unlock signal is output if the IGN KEY IN→OUT while the door knob is locked.

(8) Auto Door Unlock By Shift Lever Change

All door unlock signal is output if shift lever is changed from R/N/D to P position while the IGN1 ON and all doors are closed.

(9) AVN Wakeup Function

AVN wakeup signal is output if door unlock signal is input by RKE(or FOB) while the KEY OFF.

(10) Tailgate Release

Tailgate release relay is ON if tailgate open switch is ON while all door unlocked.

8. Anti-theft

(1) If all door is locked with RKE(or FOB) and knob is locked while all door lock and key out, the vehicle enter the ARMWAIT for 30 sec.

(2) The vehicle enter the ARM after 30 sec from ARMWAIT mode.

(3) If the door or hood or tailgate is opened in ARM mode, the alarm is ON for 27sec.

9. Head Lamp Washer Function

- (1) If the front wiper and washer switch ON, the head lamp washer operates.
- (2) Head lamp washer operates for 1.5 sec and it need the 15 min for next operation.

10. One Touch Triple Turn Signal

Triple turn signal operates when the turn signal switch OFF before signal lamp operating 3 times.


11. ATM Shift Lock Control

Shift lever can be changed to the another position when IGN1 ON and brake pedal is pressed.


Body Electrical System > BCM (Body Control Module) > Body Control Module (BCM) > Repair procedures

Removal


1. Disconnect the negative (-) battery terminal.
2. Remove the console upper cover(A).

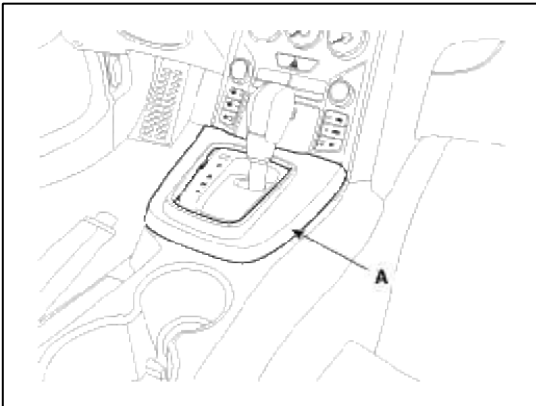

3. Remove the center fascia lower panel(A).

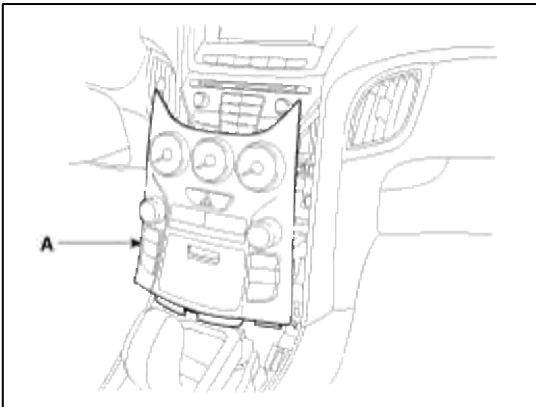

4. Remove the body control module(A) after loosening 2 nuts and disconnecting the connectors.

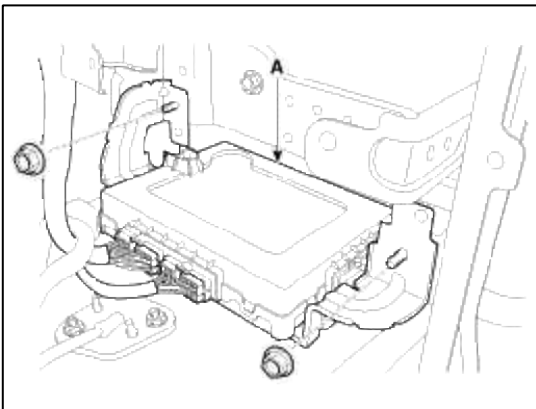


Installation

1. Install the body control module.

2. Install the center fascia lower panel.
3. Install the console upper cover.

Trouble Diagnostics When Using GDS

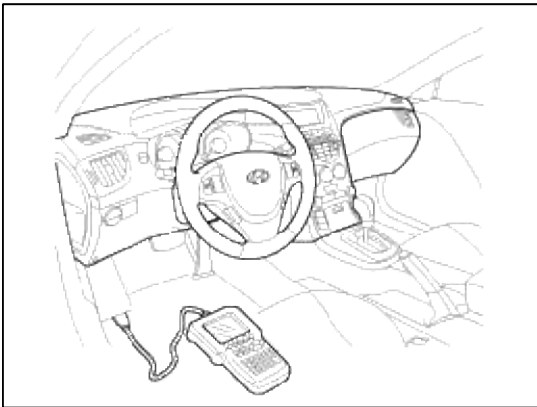

1. The body control module can diagnose by using the GDS more quickly.
The BCM communicates with the GDS and then reads the input/output value and drives the actuator.
 2. To diagnose the BCM function, select the menu of model and body control module.
 3. To consult the present input/output value of BCM, "Current DATA". It provides information of BCM input/output conditions of power supply, turn signal/brake lamp, headlamp, door, locks, outside mirror, wiper, auto-light and transmitters etc.
- A. BCM Service data

Current Data		
Standard Display	Full List	Graph
Items List	Reset Min.Max.	Record
Stop		
Sensor Name	Value	Unit
<input type="checkbox"/> Key in switch[Manual Key Type]	IN	-
<input type="checkbox"/> ACC	ON	-
<input type="checkbox"/> IGN1	ON	-
<input type="checkbox"/> IGN2	ON	-
<input type="checkbox"/> Tail Lamp Switch	OFF	-
<input type="checkbox"/> Head Lamp Switch	OFF	-
<input type="checkbox"/> Auto Light Switch	OFF	-
<input type="checkbox"/> Head Lamp High Switch	OFF	-
<input type="checkbox"/> Front Fog Switch	OFF	-
<input type="checkbox"/> Washer Switch	OFF	-
<input type="checkbox"/> INT Switch	OFF	-
<input type="checkbox"/> Mist Switch	OFF	-
<input type="checkbox"/> Key Inter Lock Switch[Manual Key Type]	ON	-
<input type="checkbox"/> Room Lamp Output	ON	-
<input type="checkbox"/> Foot Lamp Output	ON	-
<input type="checkbox"/> Ignition Key Hole Illumination[Manual Key Type]	OFF	-
<input type="checkbox"/> Auto Light Power	ON	-
<input type="checkbox"/> AV Tail Output	ON	-
<input type="checkbox"/> Key Inter Lock Solenoid[Manual Key Type]	OFF	-
<input type="checkbox"/> Security LED	OFF	-
<input type="checkbox"/> Navigation wakeup signal	OFF	-

Current Data		
Standard Display	Full List	Graph
Items List	Reset Min.Max.	Record
Stop		
Sensor Name	Value	Unit
<input type="checkbox"/> Security LED	OFF	-
<input type="checkbox"/> Navigation wakeup signal	OFF	-
<input type="checkbox"/> Wiper low relay	OFF	-
<input type="checkbox"/> Head lamp low signal output	OFF	-
<input type="checkbox"/> Parking brake switch	PARK	-
<input type="checkbox"/> Defogger SW	OFF	-
<input type="checkbox"/> Glove Box Sw	OFF	-
<input type="checkbox"/> Inhibit R SW	OFF	-
<input type="checkbox"/> Glove Box Lamp Output	OFF	-
<input type="checkbox"/> ATM solenoid(Automatic Transmission)	OFF	-
<input type="checkbox"/> Battery voltage monitoring input	13.20	V
<input type="checkbox"/> Int Volume	2.47	V
<input type="checkbox"/> Auto light sensor	0.00	V
<input type="checkbox"/> RK RX Status	NO RX	-
<input type="checkbox"/> Number of RK(+RK)	1	-
<input type="checkbox"/> Auto Door Lock Status	DISABLE	-
<input type="checkbox"/> Auto door unlock	DR DOOR UNLO...	-
<input type="checkbox"/> 2-Turn Unlock	ENABLE	-
<input type="checkbox"/> Arm/Disarm by door key(+RK)	ENABLE	-
<input type="checkbox"/> Horn answer back(+RK)	DISABLE	-
<input type="checkbox"/> Auto Light Control	ENABLE	-

B. CLU(Cluster) Service data


Current Data		
Standard Display	Full List	Graph
Items List	Reset Min.Max.	Record
Stop		
Sensor Name	Value	Unit
<input type="checkbox"/> Ignition 1	ON	-
<input type="checkbox"/> Ignition 2	ON	-
<input type="checkbox"/> Cruise Main Indicator	OFF	-
<input type="checkbox"/> Front fog Indicator	OFF	-
<input type="checkbox"/> High Beam Indicator	OFF	-
<input type="checkbox"/> Door open Indicator	ON	-
<input type="checkbox"/> P Inhibit output	ON	-
<input type="checkbox"/> R Inhibit output	OFF	-
<input type="checkbox"/> Seat belt indicator	OFF	-
<input type="checkbox"/> N Inhibit ouput	OFF	-
<input type="checkbox"/> D Inhibit output	OFF	-
<input type="checkbox"/> FUEL_INPUT	5.0	L
<input type="checkbox"/> Battery Voltage on CLU	14.4	V

C. SJB(Smart junction box) Service data

Current Data		
Standard Display	Full List	Graph
Items List	Reset Min.Max.	Record
Stop		
Sensor Name	Value	Unit
<input type="checkbox"/> Rear Left Door Open Switch	CLOSE	-
<input type="checkbox"/> Rear Left Door Actuator Position Switch	LOCK	-
<input type="checkbox"/> Rear Right Door Open Switch	CLOSE	-
<input type="checkbox"/> Rear Right Door Actuator Position Switch	LOCK	-
<input type="checkbox"/> Assist Door Open Switch	CLOSE	-
<input type="checkbox"/> Driver Door Open Switch	OPEN	-
<input type="checkbox"/> Tailgate/Trunk Open Switch	CLOSE	-
<input type="checkbox"/> Hood Switch	CLOSE	-
<input type="checkbox"/> Driver Seat Belt Switch	UNBUCKLED	-
<input type="checkbox"/> Tail Gate Release Switch	OFF	-
<input type="checkbox"/> Ignition 2	ON	-
<input type="checkbox"/> Canada DRL Output	OFF	-
<input type="checkbox"/> Front fog lamp relay	OFF	-
<input type="checkbox"/> AV Tail Output	ON	-
<input type="checkbox"/> Tail Lamp Relay	ON	-
<input type="checkbox"/> Head Lamp High Output	OFF	-
<input type="checkbox"/> Head Lamp Low Output	OFF	-
<input type="checkbox"/> Canada DRL Status	NONE	-
<input type="checkbox"/> Front Deicer Relay	OFF	-
<input type="checkbox"/> Rear defogger relay	OFF	-
<input type="checkbox"/> Burglar Alarm Horn Relay	OFF	-

Current Data		
Standard Display	Full List	Graph
Items List	Reset Min.Max.	Record
Stop		
Sensor Name	Value	Unit
<input type="checkbox"/> Canada DRL Status	NONE	-
<input type="checkbox"/> Front Deicer Relay	OFF	-
<input type="checkbox"/> Rear defogger relay	OFF	-
<input type="checkbox"/> Burglar Alarm Horn Relay	OFF	-
<input type="checkbox"/> Start Inhibitor Relay	OFF	-
<input type="checkbox"/> Tailgate/Trunk Release Relay	OFF	-
<input type="checkbox"/> Central door lock switch	OFF	-
<input type="checkbox"/> Power Window Relay	ON	-
<input type="checkbox"/> Assist Door Actuator Position Switch	UNLOCK	-
<input type="checkbox"/> Driver Door Actuator Position Switch	UNLOCK	-
<input type="checkbox"/> Assist Door Key Unlock Switch	OFF	-
<input type="checkbox"/> Driver Door Key Lock Switch	OFF	-
<input type="checkbox"/> Driver Door Key Unlock Switch	OFF	-
<input type="checkbox"/> Turn Left Switch	OFF	-
<input type="checkbox"/> Turn Right Switch	OFF	-
<input type="checkbox"/> Hazard Switch	OFF	-
<input type="checkbox"/> Central door unlock switch	OFF	-
<input type="checkbox"/> Driver door unlock relay	OFF	-
<input type="checkbox"/> Door unlock relay	OFF	-
<input type="checkbox"/> Door lock relay	OFF	-
<input type="checkbox"/> HID Option	OFF	-

4. To perform compulsory operation on BCM input factors, select "ACTUATION TEST".

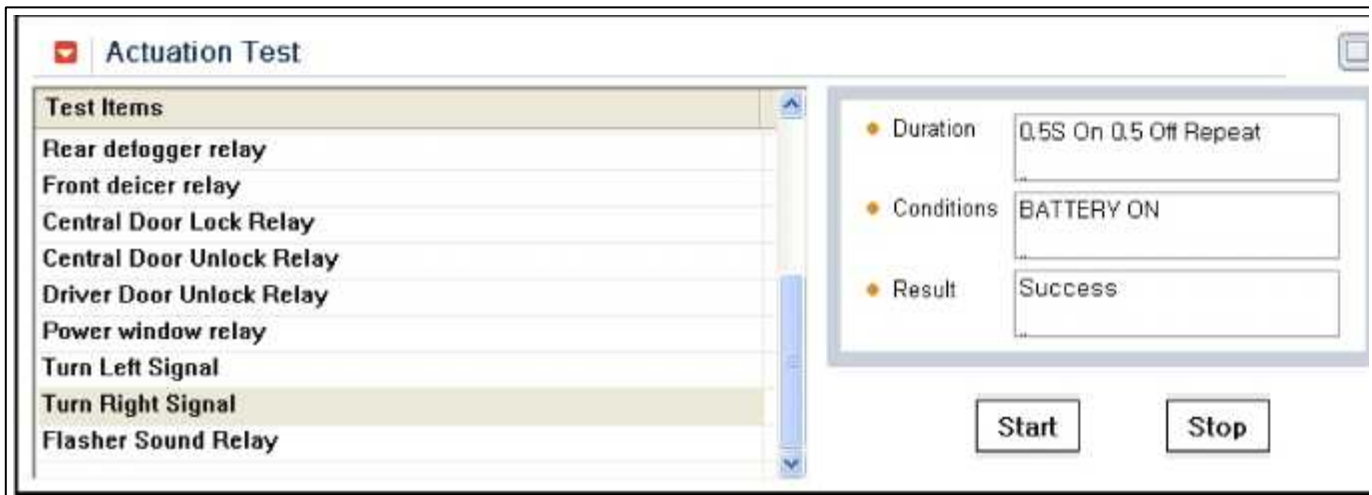

Body Electrical System > Seat Electrical > Components and Components Location

Component Location




1. Slide motor	3. Rear height motor
2. Front height motor	4. Power seat switch

Body Electrical System > Seat Electrical > Power Seat Motor > Repair procedures

Inspection

Slide Motor Limit Switch


1. Disconnect the limit switch (A) and operate the limit switch.
2. Check for continuity between the terminals.
3. Make sure that the seat operation is normal in the reverse after the maximum operation.
4. If there is an abnormality, replace the limit switch.

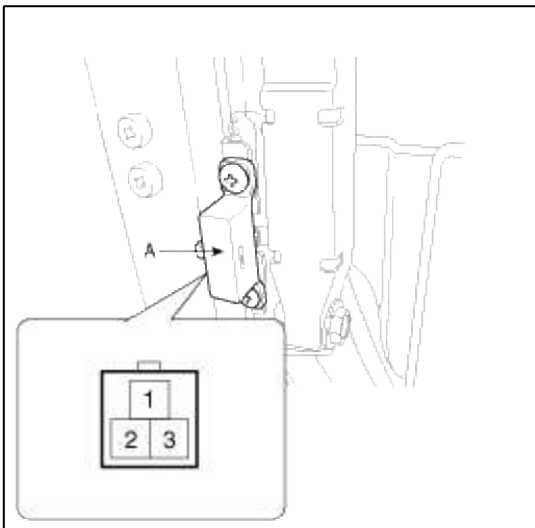

Terminal NO.	1	2	3
Position			
Frontward	○	—	○
Backward	○	—	○

Power Seat Motor

1. Disconnect the connectors(A) for each motor.

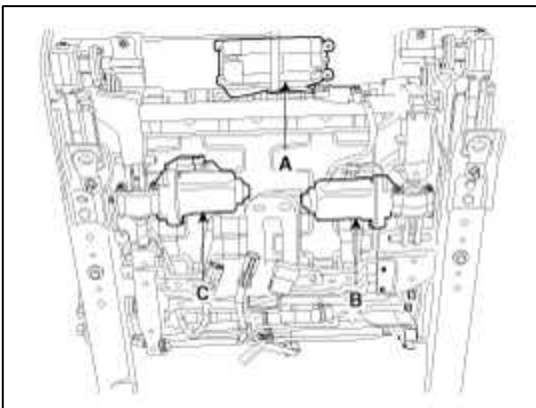


2. With the battery connected directly to the motor terminals, check if the motors run smoothly.
3. Reverse the connections and check that the motor turns in reverse.
4. If there is an abnormality, replace the motors.

Terminal NO.	1	2
Position		
Slide motor A		
Forward	⊕	⊖
Backward	⊖	⊕
Front Height Motor B		
Up	⊖	⊕
Down	⊕	⊖
Rear Height Motor C		
Up	⊕	⊖
Down	⊖	⊕

Inspection

With the power seat switch in each position, make sure that continuity exists between the terminals below. If continuity is not as specified, replace the power seat switch.

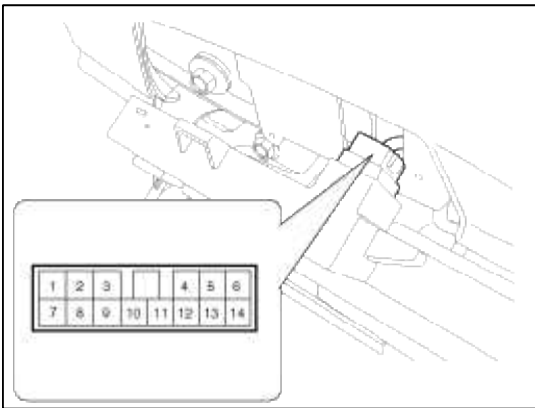


	Front height switch			Slide switch			Rear height switch			Name
	Up	N	Down	Forward	N	Backward	Up	N	Down	
11	○		○	○		○	○		○	B+
12	○		○	○	○	○	○		○	Backward slide motor
14	○		○	○	○		○		○	Forward slide motor
4	○		○		○	○	○		○	Backward slide limit
13	○		○		○		○		○	Forward slide limit
8	○	○	○				○		○	Front height motor (Up)
9		○	○				○		○	Front height motor (Down)
3		○	○				○		○	Front height limit (Up)
10		○	○				○		○	Front height limit (Down)
2							○	○	○	Rear height motor (Up)
5								○	○	Rear height motor (Down)
1								○	○	Rear height limit (Up)
6								○	○	Rear height limit (Down)


Body Electrical System > Seat Electrical > Seat Heater Switch > Repair procedures

Removal


1. Disconnect the negative(-) battery terminal.
2. Remove the console upper cover (A).
(Refer to the BD group - "Console")

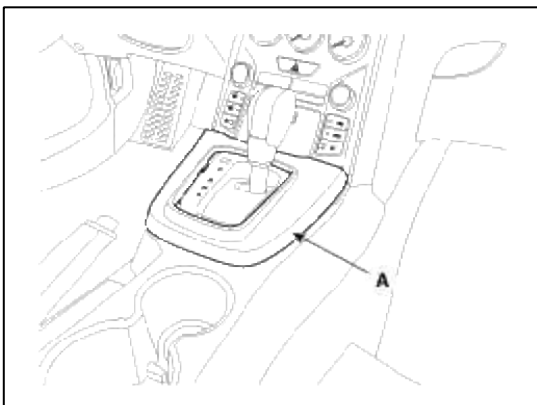

3. Remove the center fascia lower panel (A).
(Refer to the BD group - "Crash pad")

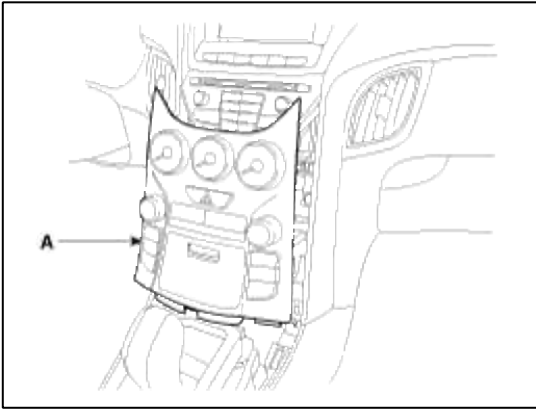

4. Remove the heater control unit (A) after disconnecting the connectors and cables.

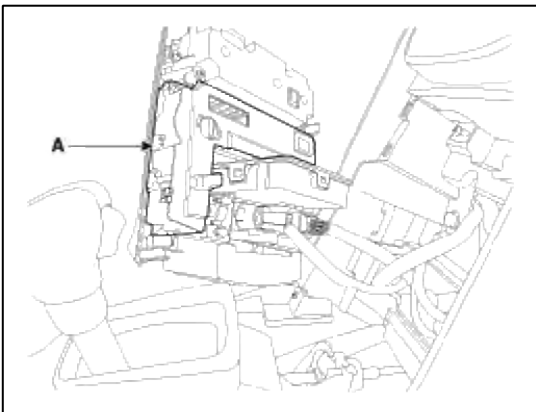


Installation

1. Install the heater control unit.
2. Install the center fascia lower panel and console upper cover.


Body Electrical System > Seat Electrical > Seat Heater > Components and Components Location

Component Location

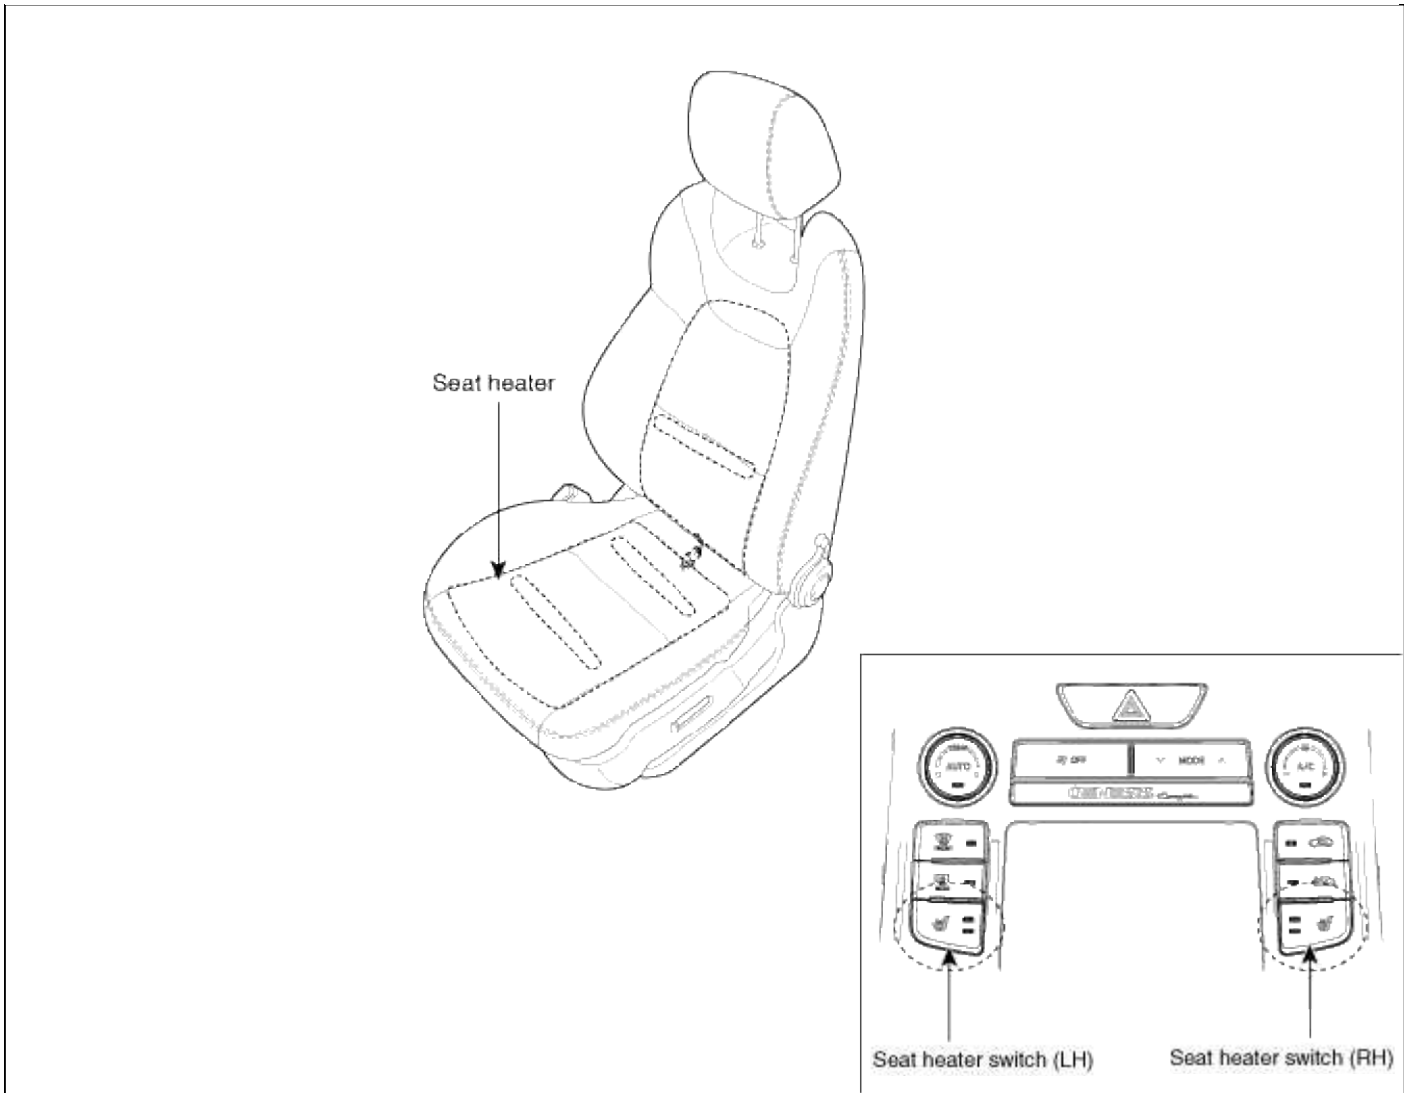

Body Electrical System > Seat Electrical > Seat Heater > Schematic Diagrams


Circuit Diagram

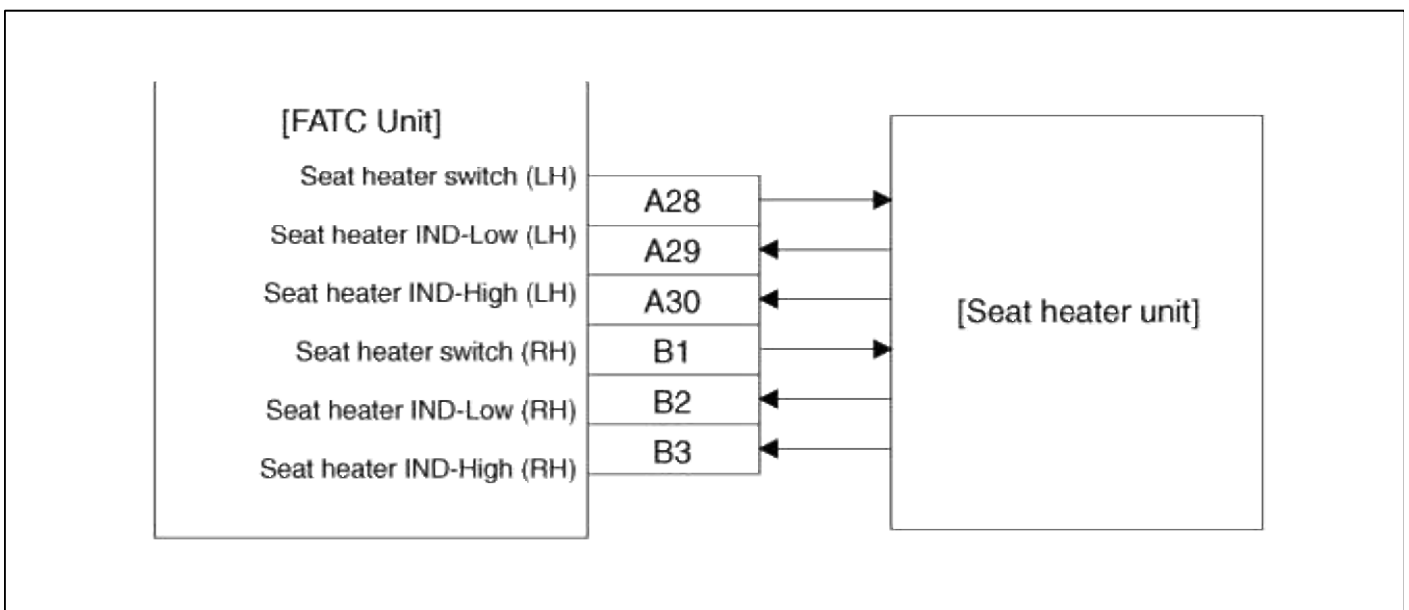

Body Electrical System > Seat Electrical > Seat Heater > Repair procedures

Inspection


1. Check for continuity and measure the resistance between No.1 and NO.2 terminals.

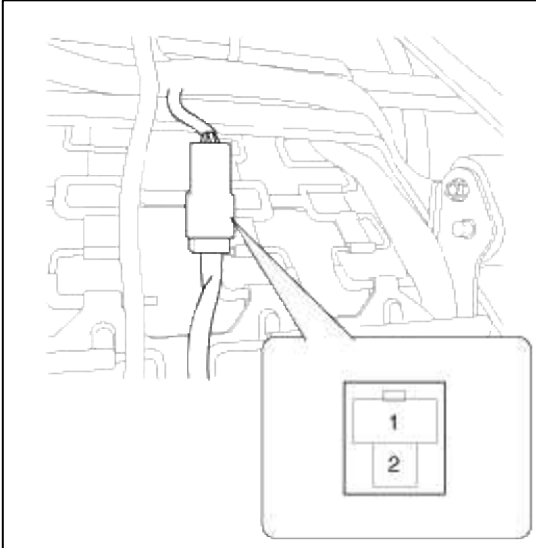

Standard value: $2.43\Omega \pm 10\%$ / SET
(Cushion: $1.22\Omega \pm 10\%$, Back: $1.21\Omega \pm 10\%$)

Body Electrical System > Fuel Filler Door > Components and Components Location

Component Location

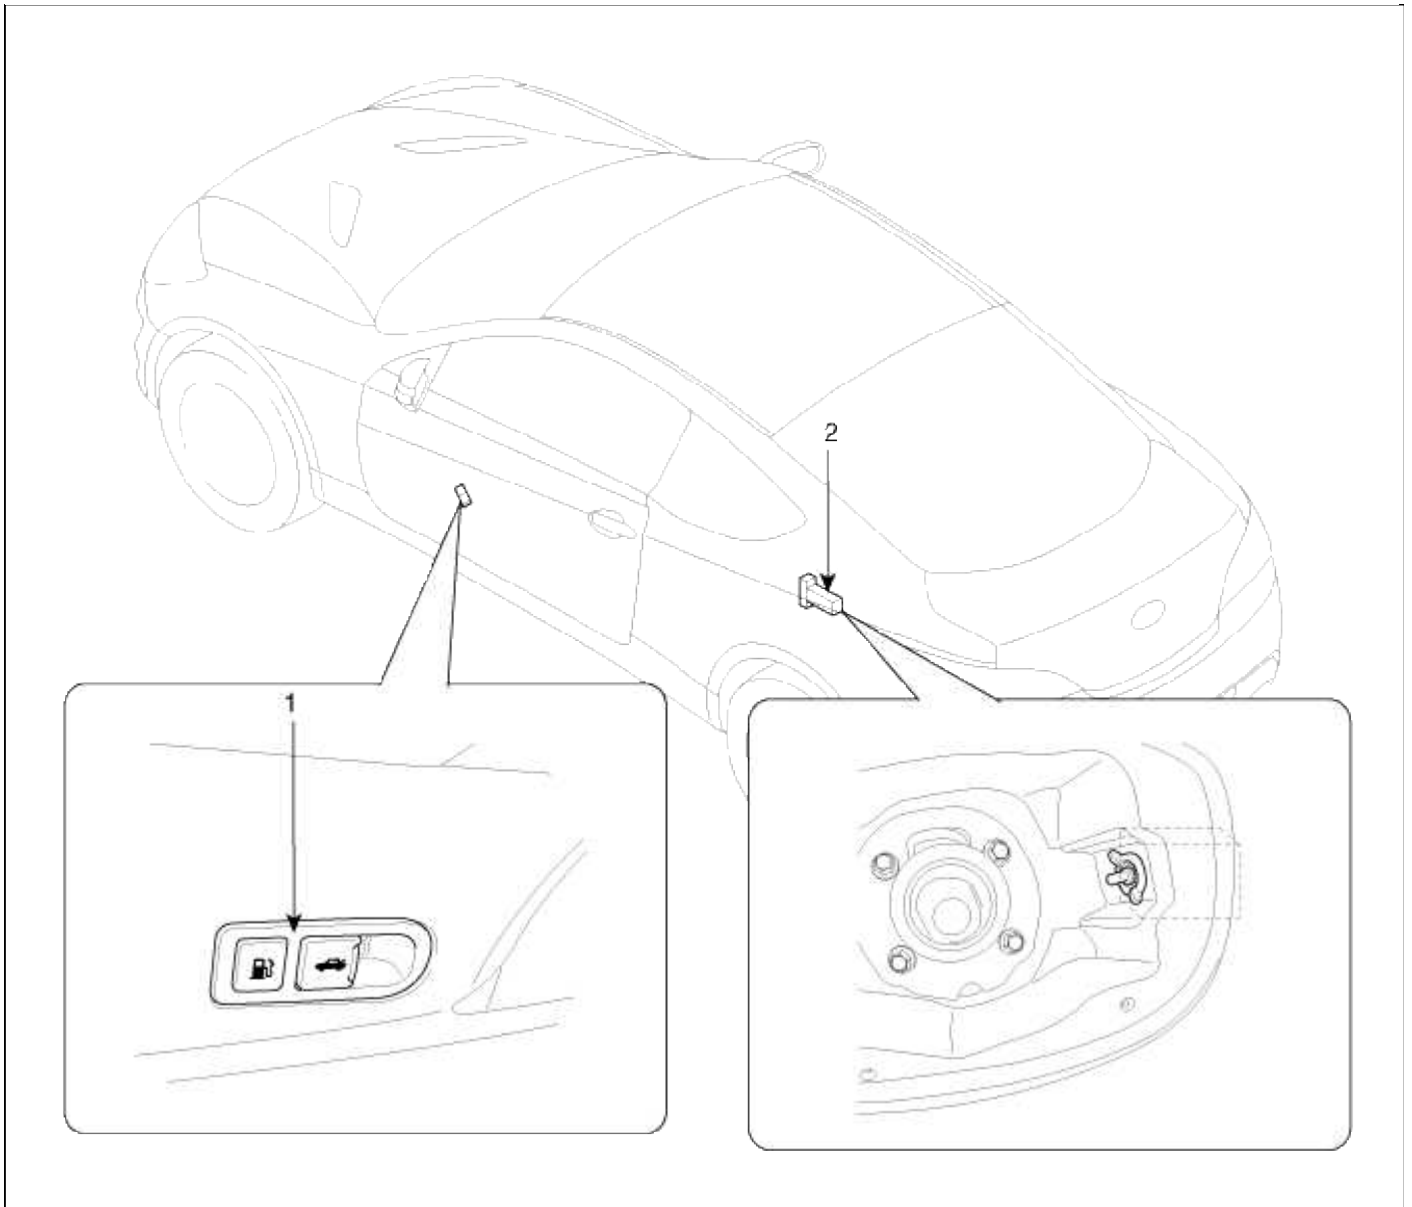


- | | |
|---------------------------------|--------------------------------------|
| 1. Fuel filler door open switch | 2. Fuel filler door release actuator |
|---------------------------------|--------------------------------------|


Body Electrical System > Fuel Filler Door > Fuel Filler Door Release Actuator > Repair procedures**Inspection**

1. Remove the fuel filler door housing.
(Refer to BD group - "Interior trim")


2. Loosen the mounting bolts and remove the fuel filler door release actuator(A).

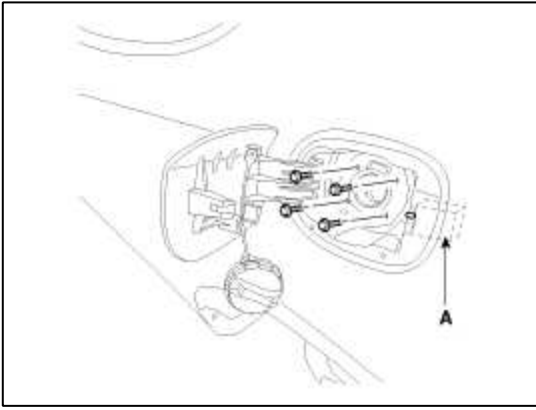

3. Disconnect the fuel filler door connector(A).

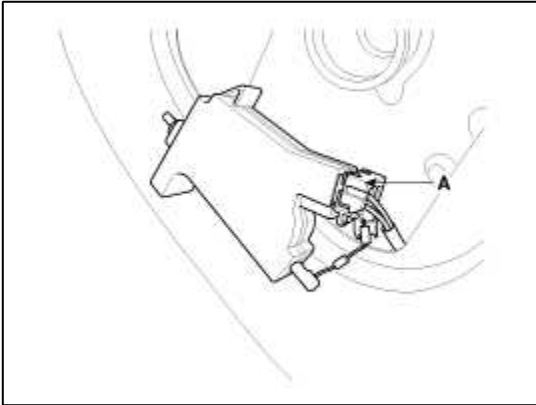

4. Check for continuity between terminal No. 1 and No. 2. If there is no continuity replace the fuel filler door release actuator(A).

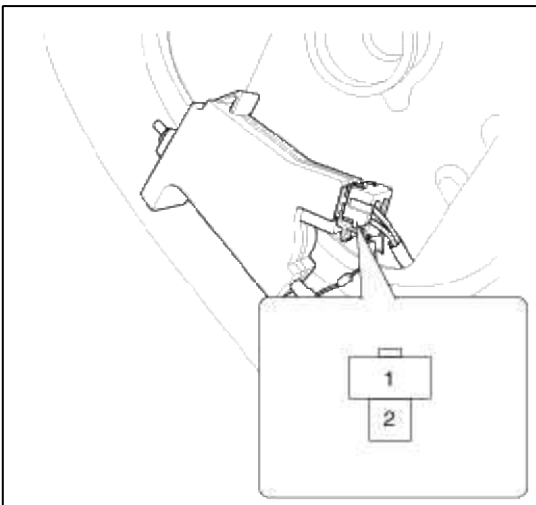


Body Electrical System > Fuel Filler Door > Fuel Filler Door Open Switch > Repair procedures

Inspection


1. Remove the front door trim panel.
(Refer to the Body group - "Front door")
2. Disconnect the switch connector.
3. Check the switch for continuity between the No. 1 and No. 2 terminals.

4. If the continuity is not as specified, replace the switch.

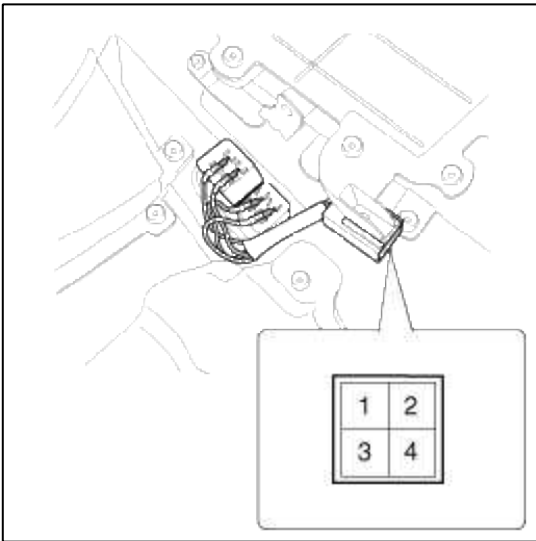

Body Electrical System > Fuses And Relays > Components and Components Location

Component Location

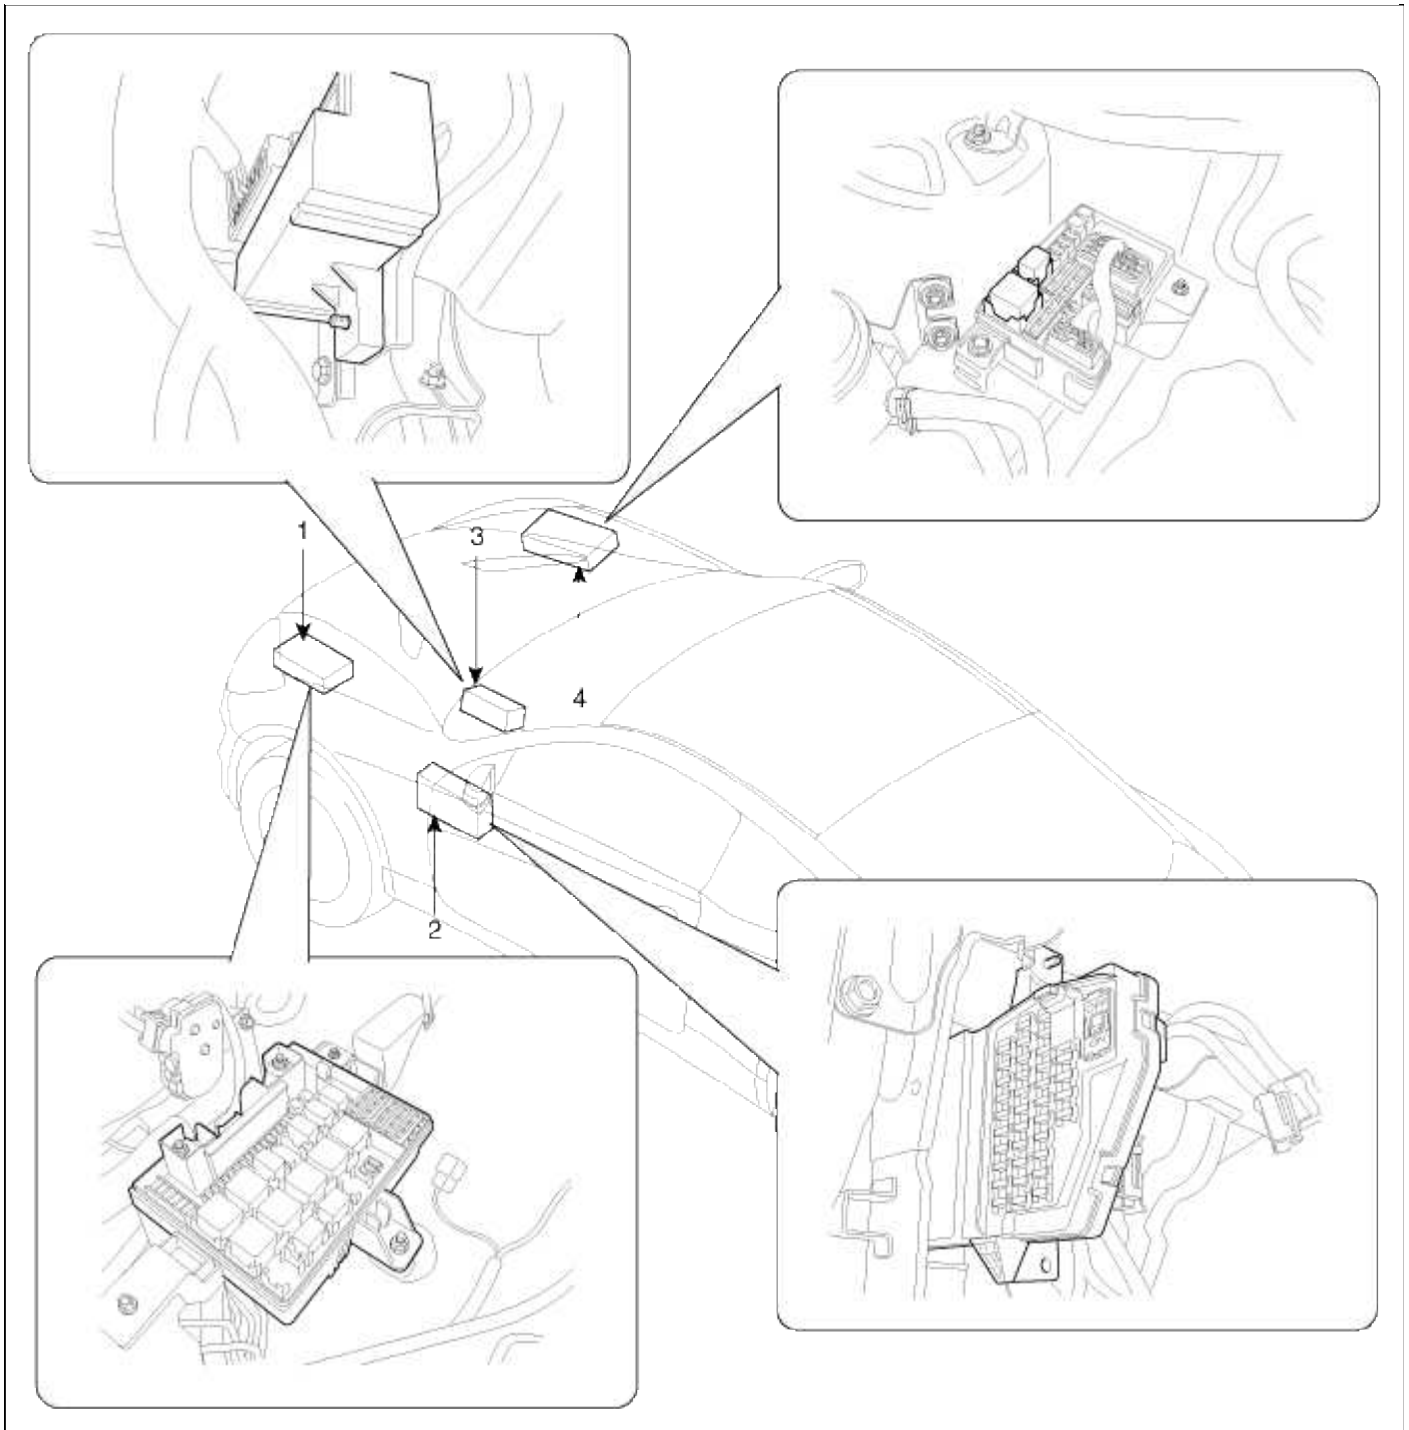


1. Engine room relay box
2. Passenger compartment junction box

3. ICM relay box
4. Engine room sub-box

Body Electrical System > Fuses And Relays > Relay Box (Engine Compartment) > Components and Components Location

Components

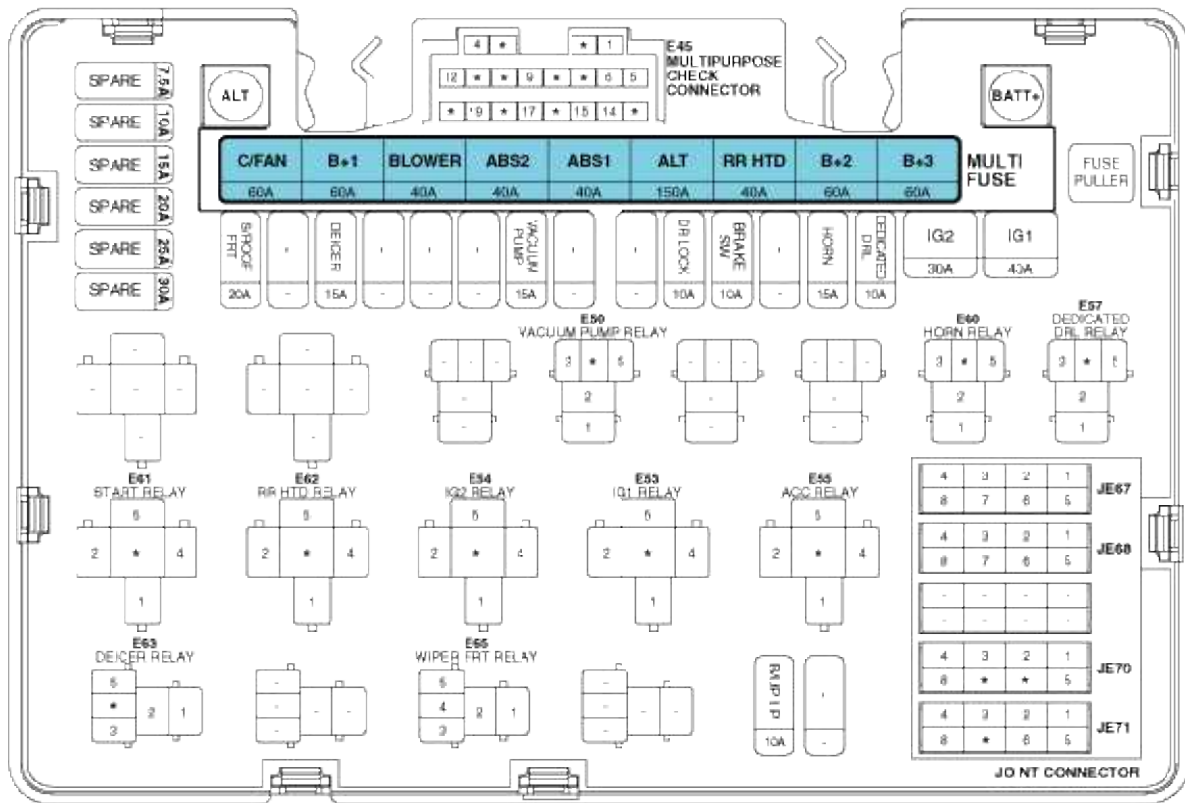

Relay Type

NO.	Name	Type
E50	Vacuum Pump Relay	Plug Micro
E53	IG1 Relay	Plug Mini
E54	IG2 Relay	Plug Mini
E55	ACC Relay	Plug Mini
E57	Dedicated	Plug Micro
E60	DRL Relay, Horn Relay	Plug Micro
E61	Start Relay	Plug Mini
E62	RR HTD Relay	Plug Mini
E63	Deicer Relay	Plug Micro
E65	Wiper FRT Relay	Plug Micro


✘ USE THE DESIGNATED FUSE AND RELAY ONLY

Circuit (E/R Junction Box LH)


	Description	(A)	Circuit Protected
MULTI FUSE	C/FAN	60A	Cooling Fan (High) Relay, Cooling Fan (Low) Relay
	B+1	60A	Smart Junction Box ((Fuse : S/HEATER, AMP, SAFETY POWER WINDOW LH/R-1), IPS 2, IPS Control Module)
	BLOWER	40A	Smart Junction Box (Blower Relay)
	ABS2	40A	Multipurpose Check Connector, ESC Module
	ABS1	40A	Multipurpose Check Connector, ESC Module
	ALT	150A	Alternator, Multi Fuse (ABS1, ABS2, BLOWER, B+1, C/FAN), Fuse (S/ROOF FRT, DEICER, VACUJM P.JMP)
	RR HTD	40A	RR HTD Relay
	D+2	60A	Smart Junction Box ((Fuse : HAZARD, PDM1, MODULE5, STOP LP, TRUNK, PDM2), IPS 1, ARISU 2, IPS Control Module)
FUSE	B+3	60A	Smart Junction Box ((Fuse : AUDIO, DRV P/SEAT, ROOM LP, MEMORY1, MEMORY2), ARISU 1, IPS Control Module, Leak Current Autocut Device Switch, Leak Current Autocut Device Relay)
	IG2	30A	Start Relay, IG2 Relay, Ignition Switch
	IG1	40A	IG1 Relay, ACC Relay, Ignition Switch
	S/ROOF FRT	20A	Sunroof Control Module
	DEICER	15A	Deicer Relay
	VACUUM PUMP	15A	Vacuum Pump Relay (G4KF A/T)
	DF LOCK	10A	Smart Junction Box (Door Lock Relay, Door Unlock Relay), ICM Relay Box (Two Turn Unlock Relay)
	BRAKE SW	10A	Stop Lamp Switch
	HORN	15A	Horn Relay
	DEDICATED DRL	10A	Dedicated DRL Relay
B/UP LP	10A	M/T - Back-Up Lamp Switch A/T - Rear Combination Lamp LH/RH, Electro Chromic Mirror, A/V & Navigation Head Unit	

✘ USE THE DESIGNATED FUSE AND RELAY ONLY

G4KF : THETA 2.0L TCI

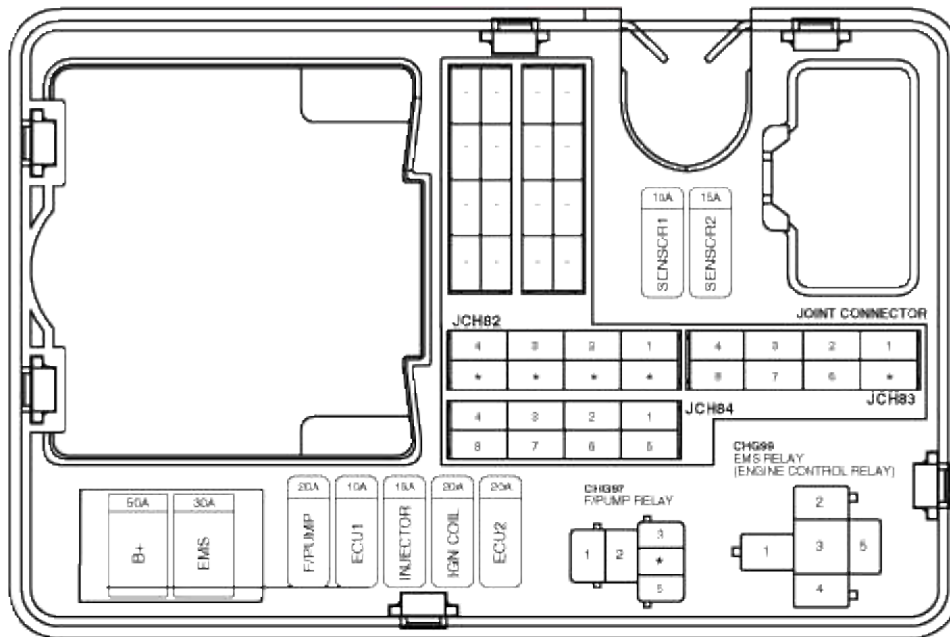

G6DJ : LAMBDA II 3.8L GDI

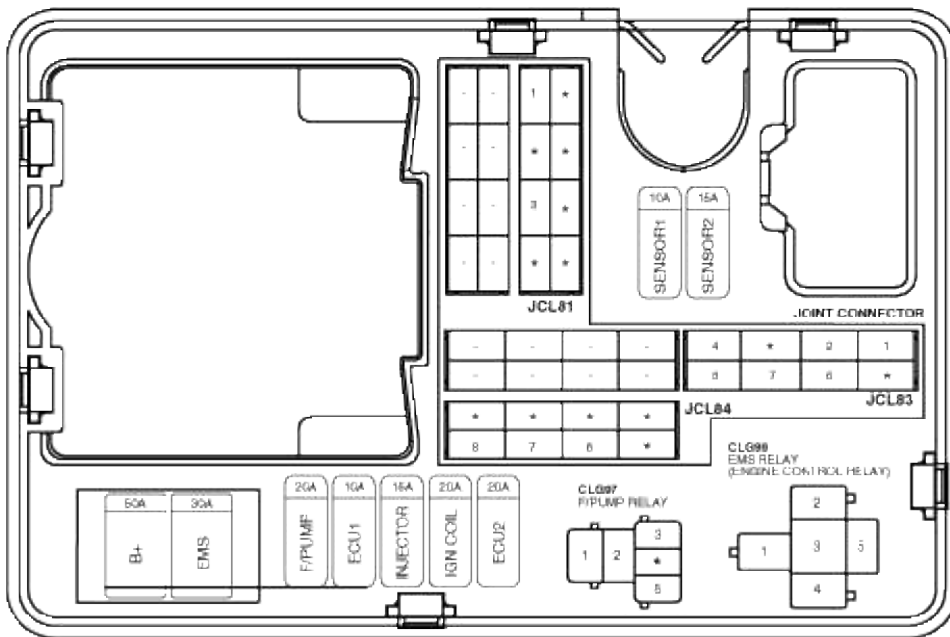

✳ USE THE DESIGNATED FUSE AND RELAY ONLY



Circuit (E/R Junction Box RH)

Fuse Name	(A)	Circuit Protected	
B+	50A	Fuse (EMS 30A, ECU1 10A, F/PUMP 20A)	
EMS	30A	Engine Control Relay	
F/PUMP	20A	F/Pump Relay	
ECU 1	10A	G4KF	ECM, TCM
		G6DJ	ECM, TCM, Injector Drive Box
INJECTOR	15A	G4KF	F/Pump Relay, Injector #1/#2/#3/#4
		G6DJ	F/Pump Relay, Fuel Pump Relay (Low), ECM
IGN COIL	20A	G4KF	Ignition Coil #1/#2/#3/#4, Condenser
		G6DJ	Ignition Coil #1/#2/#3/#4/#5/#6, Condenser #1/#2
ECU 2	20A	G4KF	ECM
		G6DJ	Injector Drive Box
SENSOR 1	10A	G4KF	Cooling Fan (High)/(Low) Relay, Oxygen Sensor (Up)/(Down)
		G6DJ	Cooling Fan (High)/(Low) Relay, ECM, Oxygen Sensor #1/#2/#3/#4
SENSOR 2	15A	G4KF	Camshaft Position Sensor #1/#2, RCV Control Solenoid Valve, Immobilizer Module, Canister Close Valve Purge Control Solenoid Valve, Crankshaft Position Sensor, Oil Control Valve #1/#2
		G6DJ	ECM, Oil Control Valve #1/#2/#3/#4, Purge Control Solenoid Valve, Immobilizer Module, Canister Close Valve

✘ USE THE DESIGNATED FUSE AND RELAY ONLY

Body Electrical System > Fuses And Relays > Relay Box (Engine Compartment) > Repair procedures
Inspection

1: -	11: IG2 relay
2: -	12: Rear heater relay
3: -	13: Start relay
4: Vacuum pump relay	14: Front deicer relay
5: -	15: Head lamp washer relay
6: -	16: Front wiper relay
7: Horn relay	17: -
8: Dedicated DRL relay	18: EMS relay
9: ACC relay	19: Fuel pump relay
10: IG1 relay	

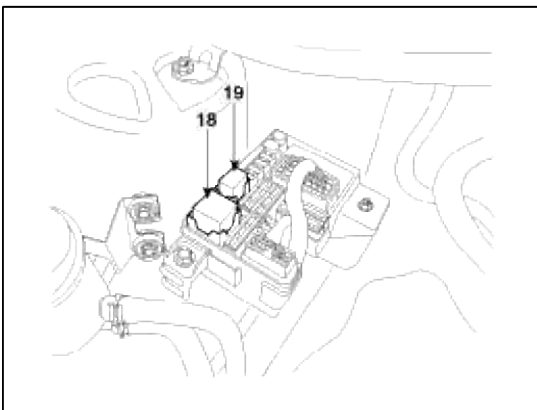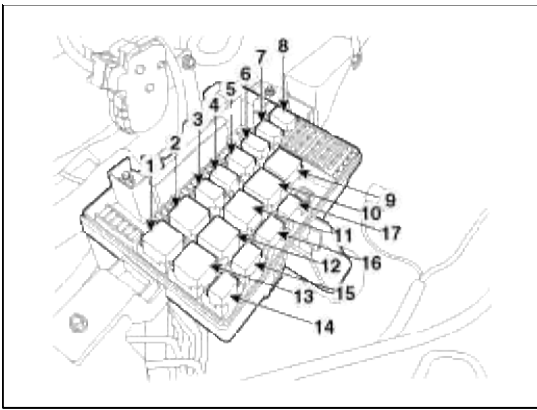


Power Relay Test (Type A)

Check for continuity between the terminals.

1. There should be continuity between the No.30 and No.87 terminals when power and ground are connected to the No.85 and No.86 terminals.
2. There should be no continuity between the No.30 and No.87 terminals when power is disconnected.

[A] Type:	
4: Vacuum pump relay	14: Front deicer relay
7: Horn relay	15: Head lamp washer relay
8: Dedicated DRL relay	19: Fuel pump relay

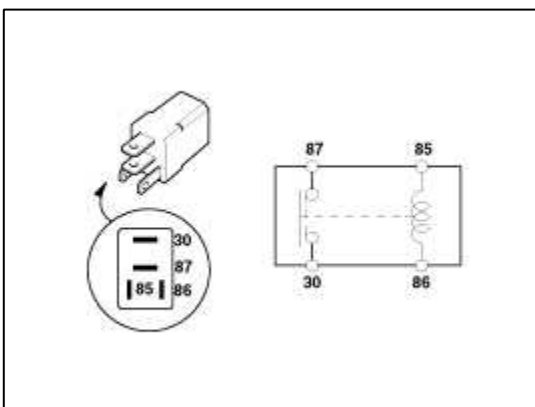


Terminal	85	86	87	30
Power				
Disconnected	○	○		
Connected	⊖	⊕	○	○

Power Relay Test (Type B)

Check for continuity between the terminals.

1. There should be continuity between the No.30 and No.87 terminals when power and ground are connected to the No.85 and No.86 terminals.
2. There should be continuity between the No.30 and No.87a terminals when power is disconnected.

[B] Type:	12: Rear heater relay
9: ACC relay	13: Start relay
10: IG1 relay	
11: IG2 relay	

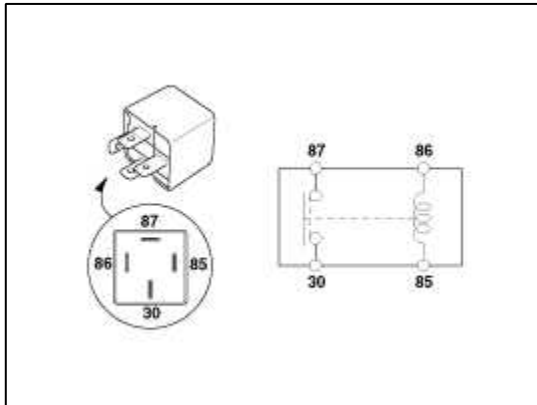

Terminal	86	85	87	30
Power				
Disconnected	○	○		
Connected	⊖	⊕	○	○


Power Relay Test (Type C)

Check for continuity between the terminals.

1. There should be continuity between the No.30, 87a and No.87 terminals when power and ground are connected to the No.85 and No.86 terminals.
2. There should be no continuity between the No.30, 87a and No.87 terminals when power is disconnected.

[C] Type :

18: EMS relay

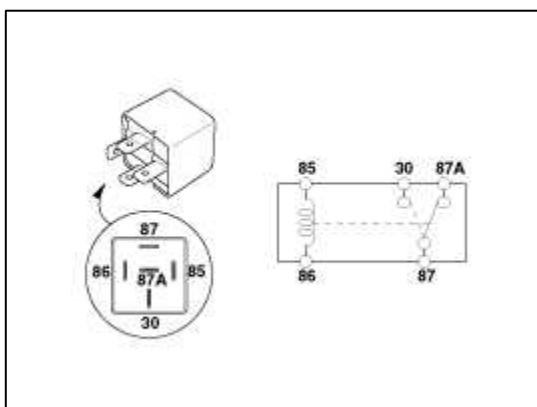

Terminal	86	85	87	87a	30
Power					
Disconnected	○	○			
Connected	⊖	⊕	○	○	○

Power Relay Test (Type D)


Check for continuity between the terminals.

1. There should be continuity between the No.30 and No.87 terminals when power and ground are connected to the No.85 and No.86 terminals.

2. There should be continuity between the No.30 and No.87 terminals when power is disconnected.

[D] Type:

16. Front wiper relay

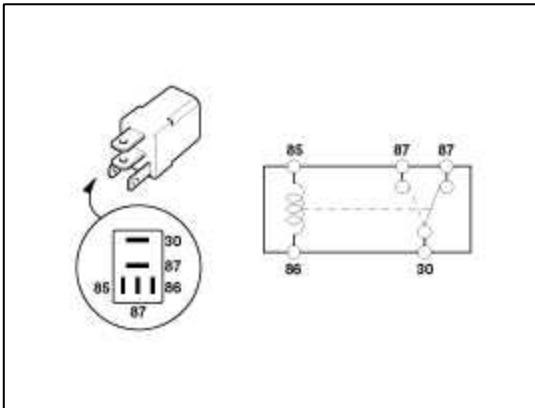

Terminal	85	86	30	87	87
Power					
Disconnected			○	○	○
Connected	⊖	⊕	○	○	

Fuse Inspection


1. Be sure there is no play in the fuse holders, and that the fuses are held securely.
2. Are the fuse capacities for each circuit correct?
3. Are there any blown fuses?

If a fuse is to be replaced, be sure to use a new fuse of the same capacity. Always determine why the fuse blew first and completely eliminate the problem before installing a new fuse.


Body Electrical System > Fuses And Relays > Relay Box (Passenger Compartment) > Components and Components Location

Components

< FRONT >

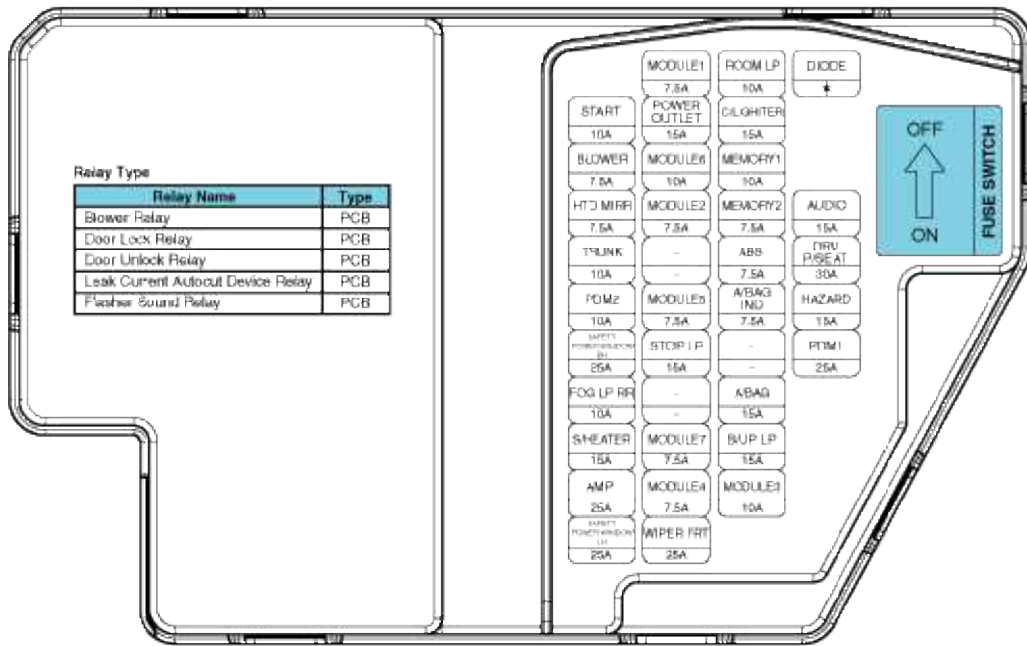

< REAR >

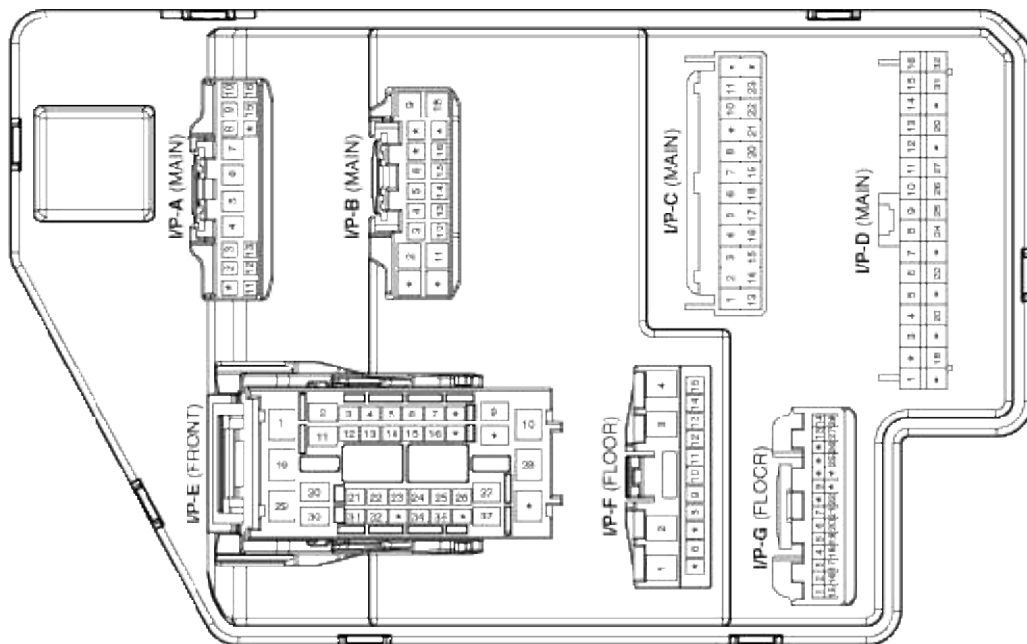

✳ USE THE DESIGNATED FUSE AND RELAY ONLY

Circuit (Smart Junction Box)

Fuse Name	(A)	Circuit Protected
AUDIO	15A	Audio, A/V & Navigator Head Unit, Multi Gauge, Multi Monitor, Front Monitor, MTS Module
DRV R/SEAT	30A	Driver Seat Manual Switch, Driver Lumbar Support Switch
HAZARD	15A	BCM, Flasher Sound Relay
PDM1	25A	PDM
ROOM LP	10A	Driver/Passenger Door Lamp, Trunk Room Lamp, Driver/Passenger Door Scoff Lamp, Vanity Lamp L/R/RH, Map Lamp
CAUGHTER	15A	Front Power Outlet
MEMORY1	10A	BCM, Data Link Connector, Auto Light & Photo Sensor, Ignition Key ILL. & Door Warning Switch, Electro Chromic Mirror, Instrument Cluster (IND, MICOM), A/C Control Module, Tire Pressure Monitoring Module
MEMORY2	7.5A	RF Receiver
ABS	7.5A	E/R Junction Box LH (Multipurpose Check Connector), ESC Module, ESC & PAS Switch, Steering Angle Sensor
A/BAG IND	7.5A	Instrument Cluster (Air Bag IND.)
A/BAG	15A	SRS Control Module, A/C Control Module, PDCS Module
BU/ LP	15A	Back-Up Lamp Switch, TCM, Transaxle Range Switch
MODULE3	10A	ECM, PDM, Smart Key Control Module, Injector Drive Box (G60J)
MODULE1	7.5A	AMP, Audio, A/V & Navigation Head Unit, Multi Monitor, MTS Module, Front Monitor, Map Lamp, Power Outside Mirror Switch
POWER OUTLET	15A	Console Power Outlet
MODULE5	10A	BCM, PDM, Smart Key Control Module

Fuse Name	(A)	Circuit Protected
MODULE F2	7.5A	IPS Control Module, Instrument Cluster (IND, MICOM), BCM, ATM Shift Lever IND., Multifunction Switch (Remote Control), Multi Gauge, Cruise Clutch Pedal Position Switch, A/C Control Module, Auto Head Lamp Levelling Device Unit, Stop Lamp Switch, Driver/Passenger Seat Warmer Module, Electro Chromic Mirror, MTS Module, Tire Pressure Monitoring Module, Head Lamp Levelling Device Actuator L/R/RH, Front Parking Assist Sensor L/R/RH, Rear Parking Assist Sensor Side L/R/RH, Rear Parking Assist Sensor Center L/R/RH
MODULE5	7.5A	Spot Mode Switch (A/T), Key Solenoid
STOP LP	15A	Stop Signal Relay
MODULE7	7.5A	Blower Relay, Sunroof Control Module, A/C Control Module, Cluster Ionizer (Auto A/C)
MODULE4	7.5A	BCM, PDM, IPS Control Module, Vacuum Switch, E/R Junction Box LH (Vacuum Pump Relay)
WIPER FRT	25A	Multifunction Switch (Wiper), Front Wiper Motor, E/R Junction Box LH (Wiper FRT Relay)
START	10A	E/R Junction Box LH (Start Relay), Ignition Lock Switch, PDM, Transaxle Range Switch, ECM (G60J), B/Alarm Relay
BLOWER	7.5A	A/C Control Module
HTD MIRR	7.5A	A/C Control Module, Driver/Passenger Power Outside Mirror
TRUNK	10A	Trunk Lid & Fuel Filler Door Switch, IGM Relay Box (Trunk Lid Relay)
PDM2	10A	PDM, Smart Key Control Module, Start Stop Button Switch, FOB Holder
SAFETY POWER WINDOW RH	25A	Passenger Safety Power Window Module
FOG LP R/R	10A	(Not Used)
SEATER	15A	Driver/Passenger Seat Warmer Module
AMP	25A	AMP (HACQUEL)
SAFETY POWER WINDOW LH	25A	Driver Safety Power Window Module

※ 지정된 퓨즈 및 릴레이를 사용하십시오

Body Electrical System > Fuses And Relays > Relay Box (Passenger Compartment) > Repair procedures

Fuse Inspection

1. Be sure there is no play in the fuse holders, and that the fuses are held securely.
2. Are the fuse capacities for each circuit correct?
3. Are there any blown fuses?


If a fuse is to be replaced, be sure to use a new fuse of the same capacity. Always determine why the fuse blew first and completely eliminate the problem before installing a new fuse.

Replacement



Passenger Compartment Junction Box

1. Disconnect the negative(-) battery terminal.

2. Remove the crash pad lower panel (A).
(Refer to BD group - "Crash pad")

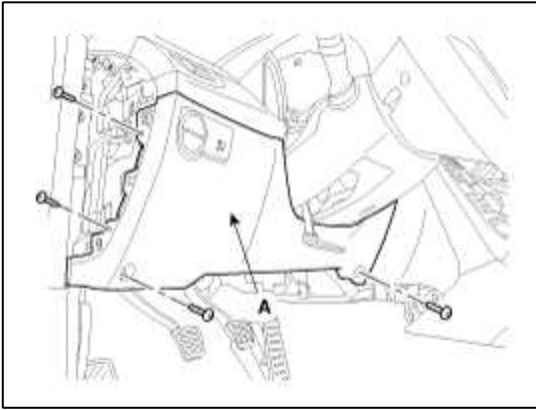




3. Remove the passenger compartment junction box (A) after loosening the mounting nut and bolt and disconnecting the connectors.

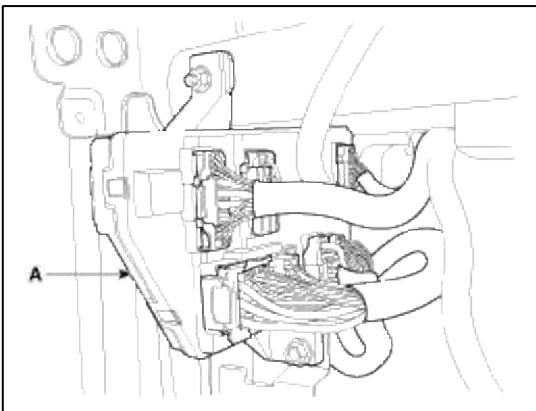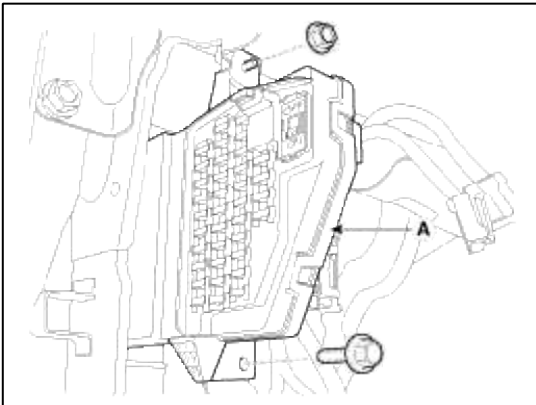

4. Installation is the reverse of removal.

Body Electrical System > Fuses And Relays > ICM (Integrated Circuit Module) Relay Box > Components and Components Location


Component

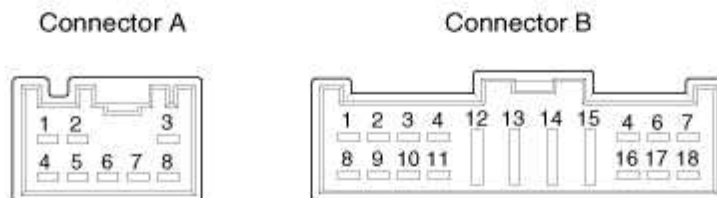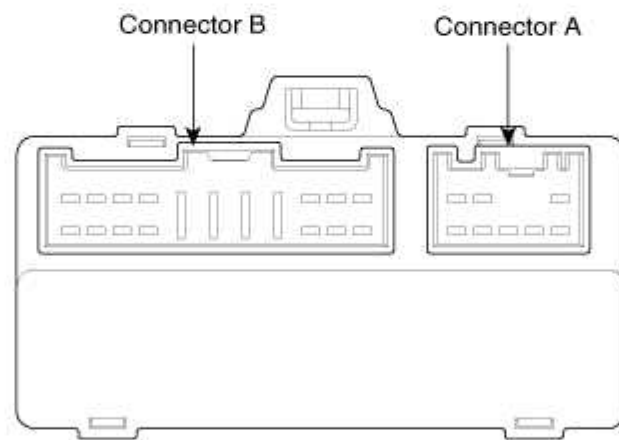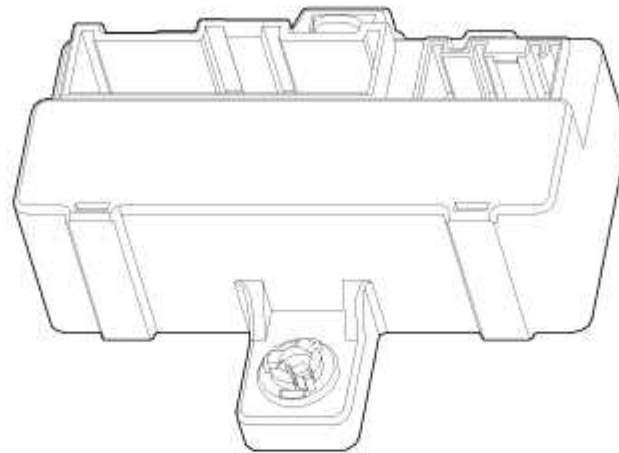

Body Electrical System > Fuses And Relays > ICM (Integrated Circuit Module) Relay Box > Description and Operation

Description

The ICM is united with many kinds of relay and installed inside the driver crash pad lower panel.

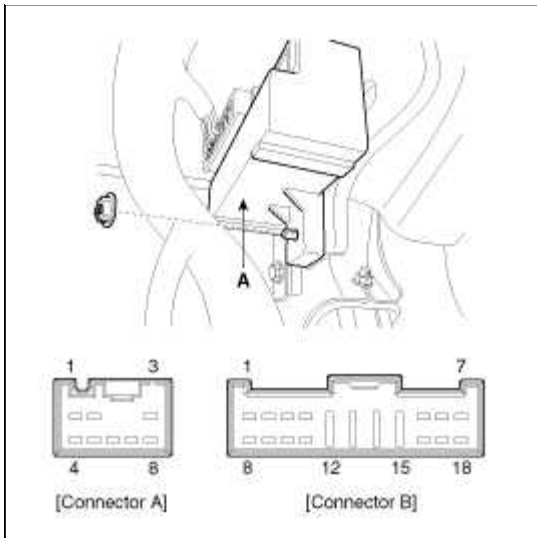

Body Electrical System > Fuses And Relays > ICM (Integrated Circuit Module) Relay Box > Repair procedures

Inspection

Trunk Lid Relay

Check for continuity between the terminals.

1. There should be continuity between the No.13 and No.12 terminals when power and ground are connected to the No.13 and No.3 in the ICM relay B terminals.
2. There should be no continuity between the No.13 and No.12 terminals when power is disconnected.

Burglar Alarm Horn

Check for continuity between the terminals.

1. There should be continuity between the No.8 and No.9 terminals when power and ground are connected to the No.8 and No.1 in the ICM relay B terminals.
2. There should be no continuity between the No.8 and No.9 terminals when power is disconnected.


Burglar Alarm

Check for continuity between the terminals.


1. There should be no continuity between the No.11 and No.10 terminals when power and ground are connected to the No.11 and No.4 in the ICM relay B terminals.
2. There should be continuity between the No.11 and No.10 terminals when power is disconnected.

Removal

1. Disconnect the negative(-) battery terminal.
2. Remove the crash pad lower panel(A).
(Refer to BD group - "Crash pad")

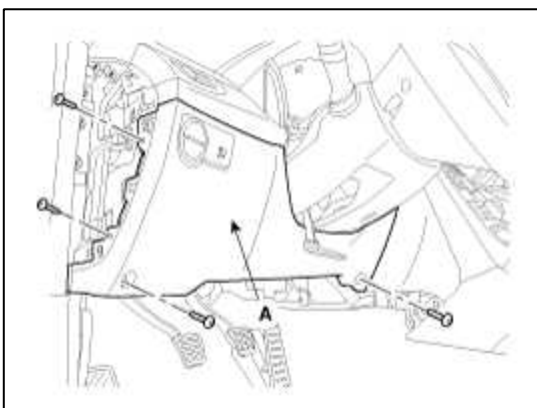

3. Remove the ICM relay box(A) after disconnecting the connector and removing the mounting nut.

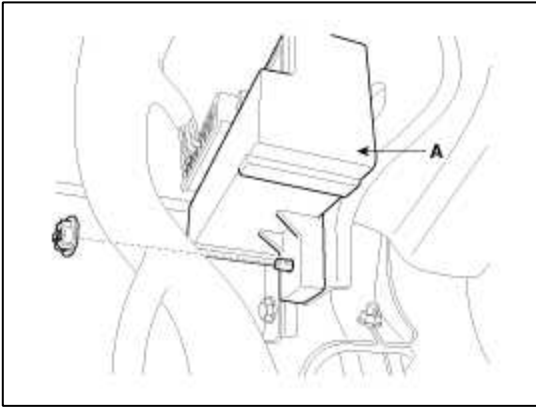


Installation

1. Install the ICM relay box.
2. Install the crash pad lower panel.

Body Electrical System > Indicators And Gauges > Components and Components Location

Component Location

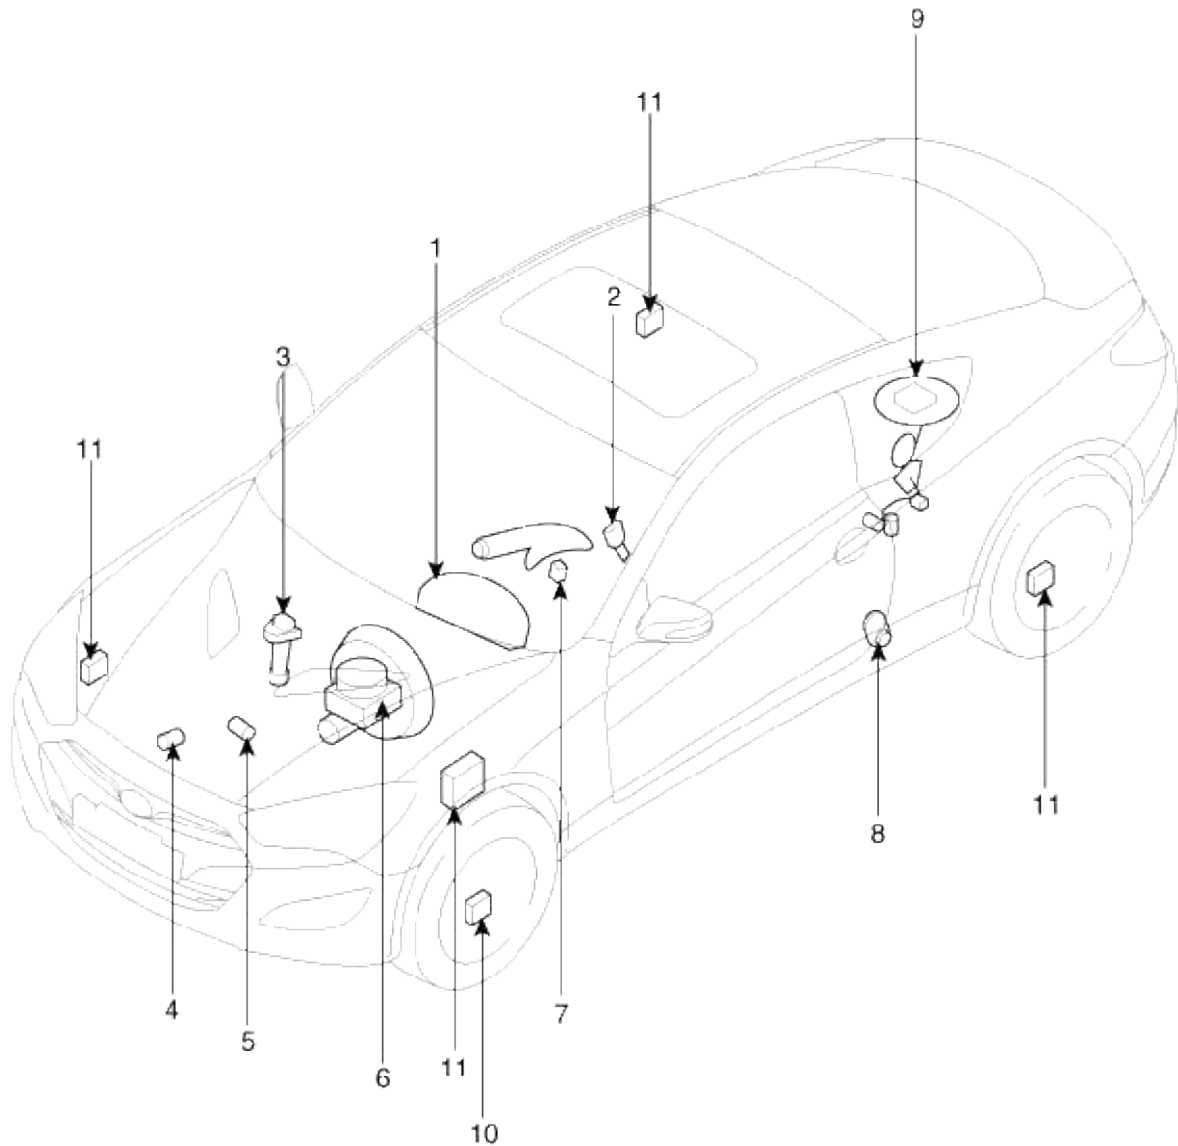


- | | |
|--------------------------------------|-------------------------|
| 1. Cluster assembly | 7. Parking brake switch |
| 2. Seat belt switch | 8. Door switch |
| 3. Vehicle speed sensor | 9. Fuel gauge sender |
| 4. Engine coolant temperature sender | 10. Wheel speed sensor |
| 5. Oil pressure switch | 11. ABS ECU |
| 6. Brake fluid level warning switch | |

Body Electrical System > Indicators And Gauges > Instrument Cluster > Components and Components Location


Components

[Supervision]

[Front]

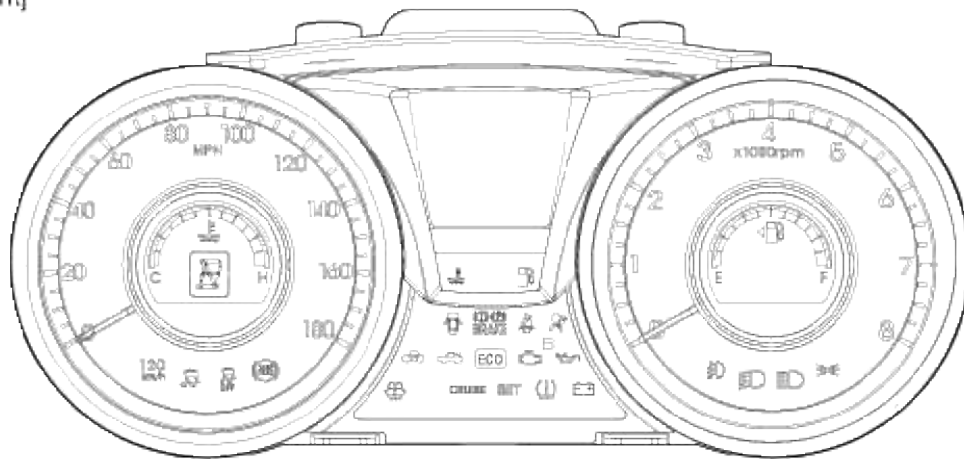


[Rear]

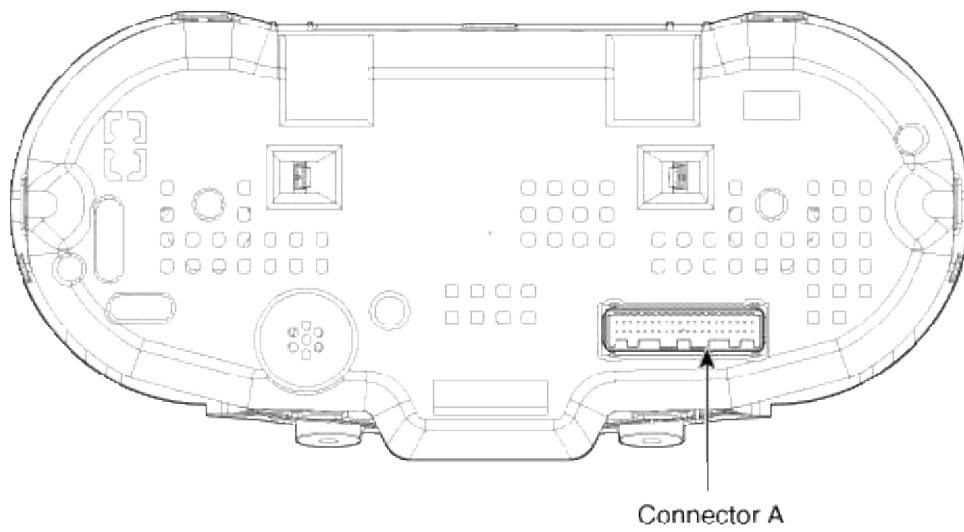



Connector A

[General]

[Front]

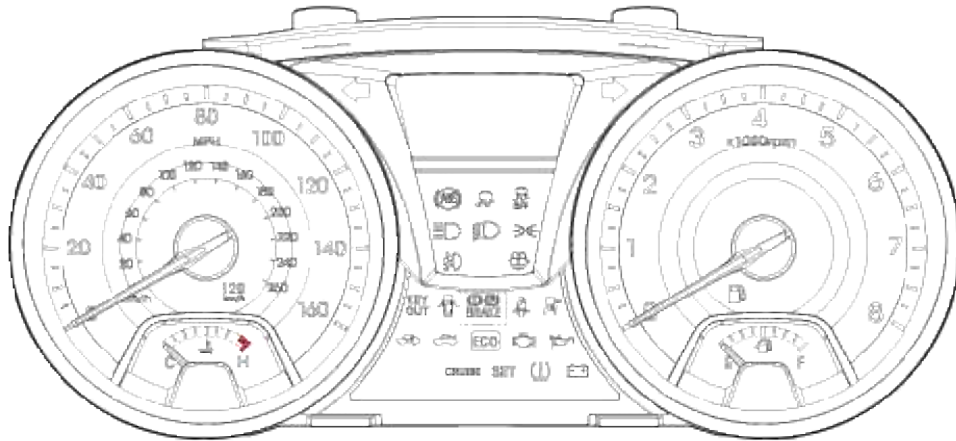

[Rear]

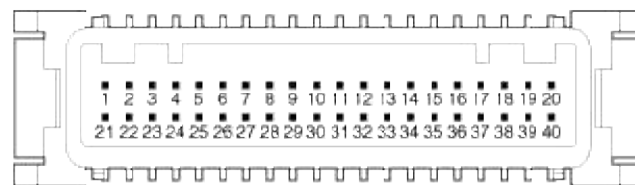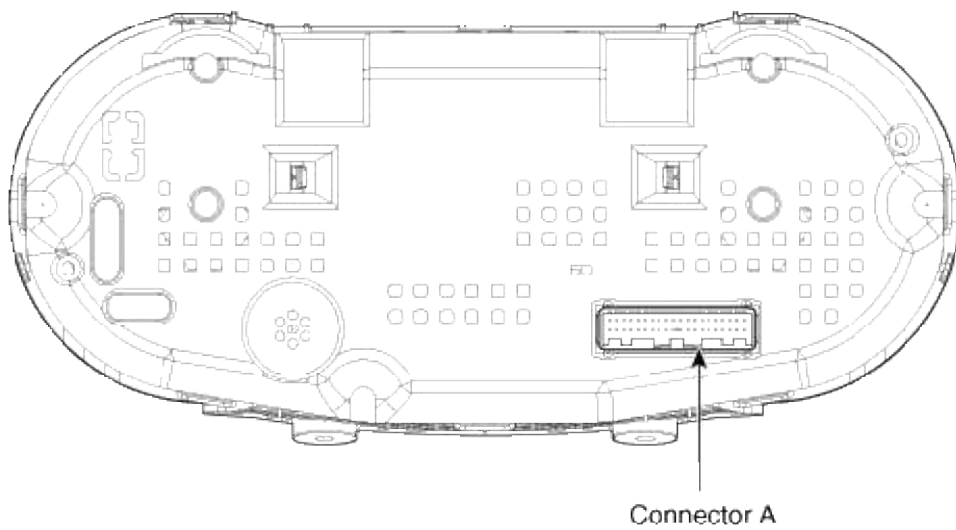



Connector A

No	Description	Remarks	No	Description	Remarks
1	-		21	-	
2	Immobilizer	Input	22	-	
3	Airbag +	Input	23	Fuel +	Input
4	Airbag -	Input	24	AT position S	Output
5	Oil pressure	Input	25	Fuel -	Input
6	Battery charge	Input	26	Signal GND	Input
7	-		27	-	
8	-		28	Battery +	Input
9	Washer fluid	Input	29	Ignition +	Input
10	-		30	-	
11	Signal GND2	Input	31	C CAN High	Input/Output
12	Illumination -	Input	32	C CAN Low	Input/Output
13	-		33	-	
14	Illumination +	Input	34	B CAN High	Input/Output
15	4P Out	Output	35	B CAN Low	Input/Output
16	-		36		Input
17	AT position P	Output	37		Input
18	AT position R	Output	38	-	
19	AT position N	Output	39	-	
20	AT position D	Output	40	-	

Body Electrical System > Indicators And Gauges > Instrument Cluster > Schematic Diagrams

Circuit Diagram

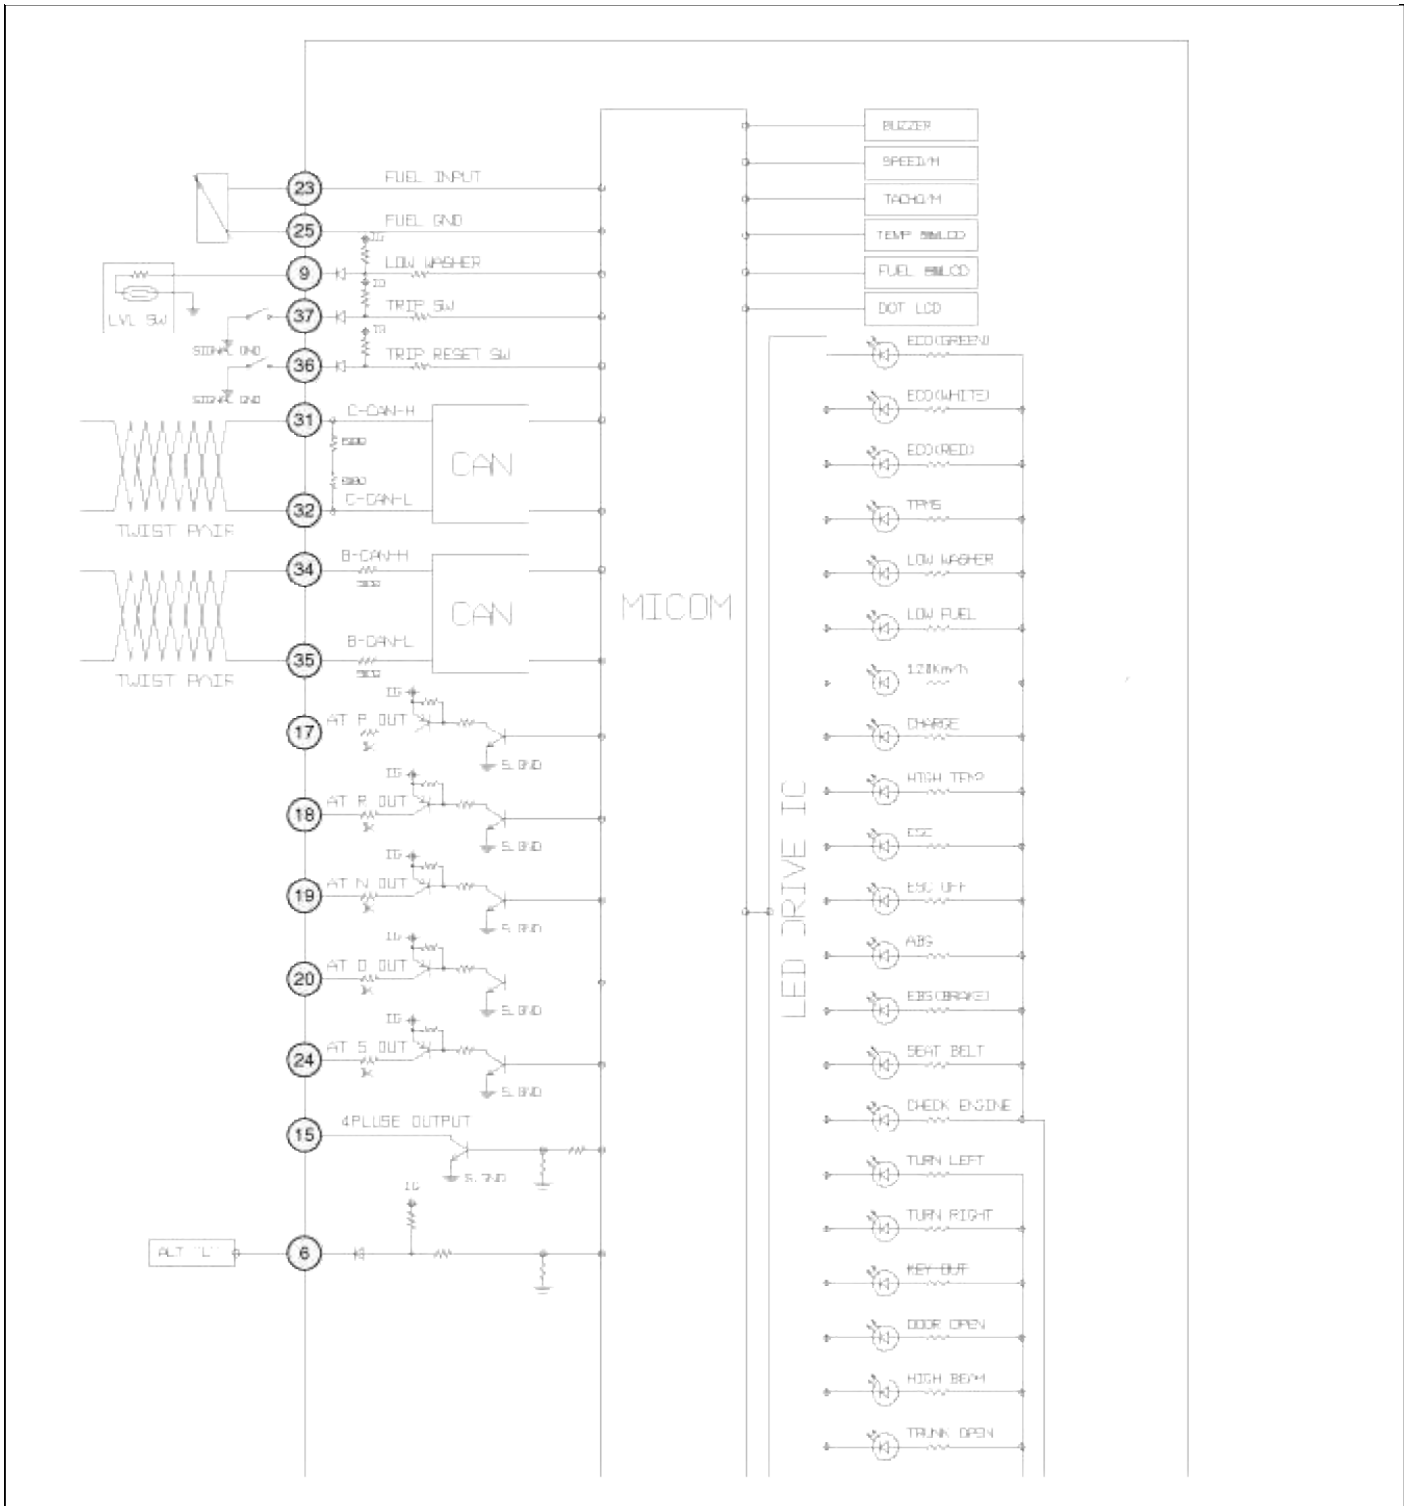

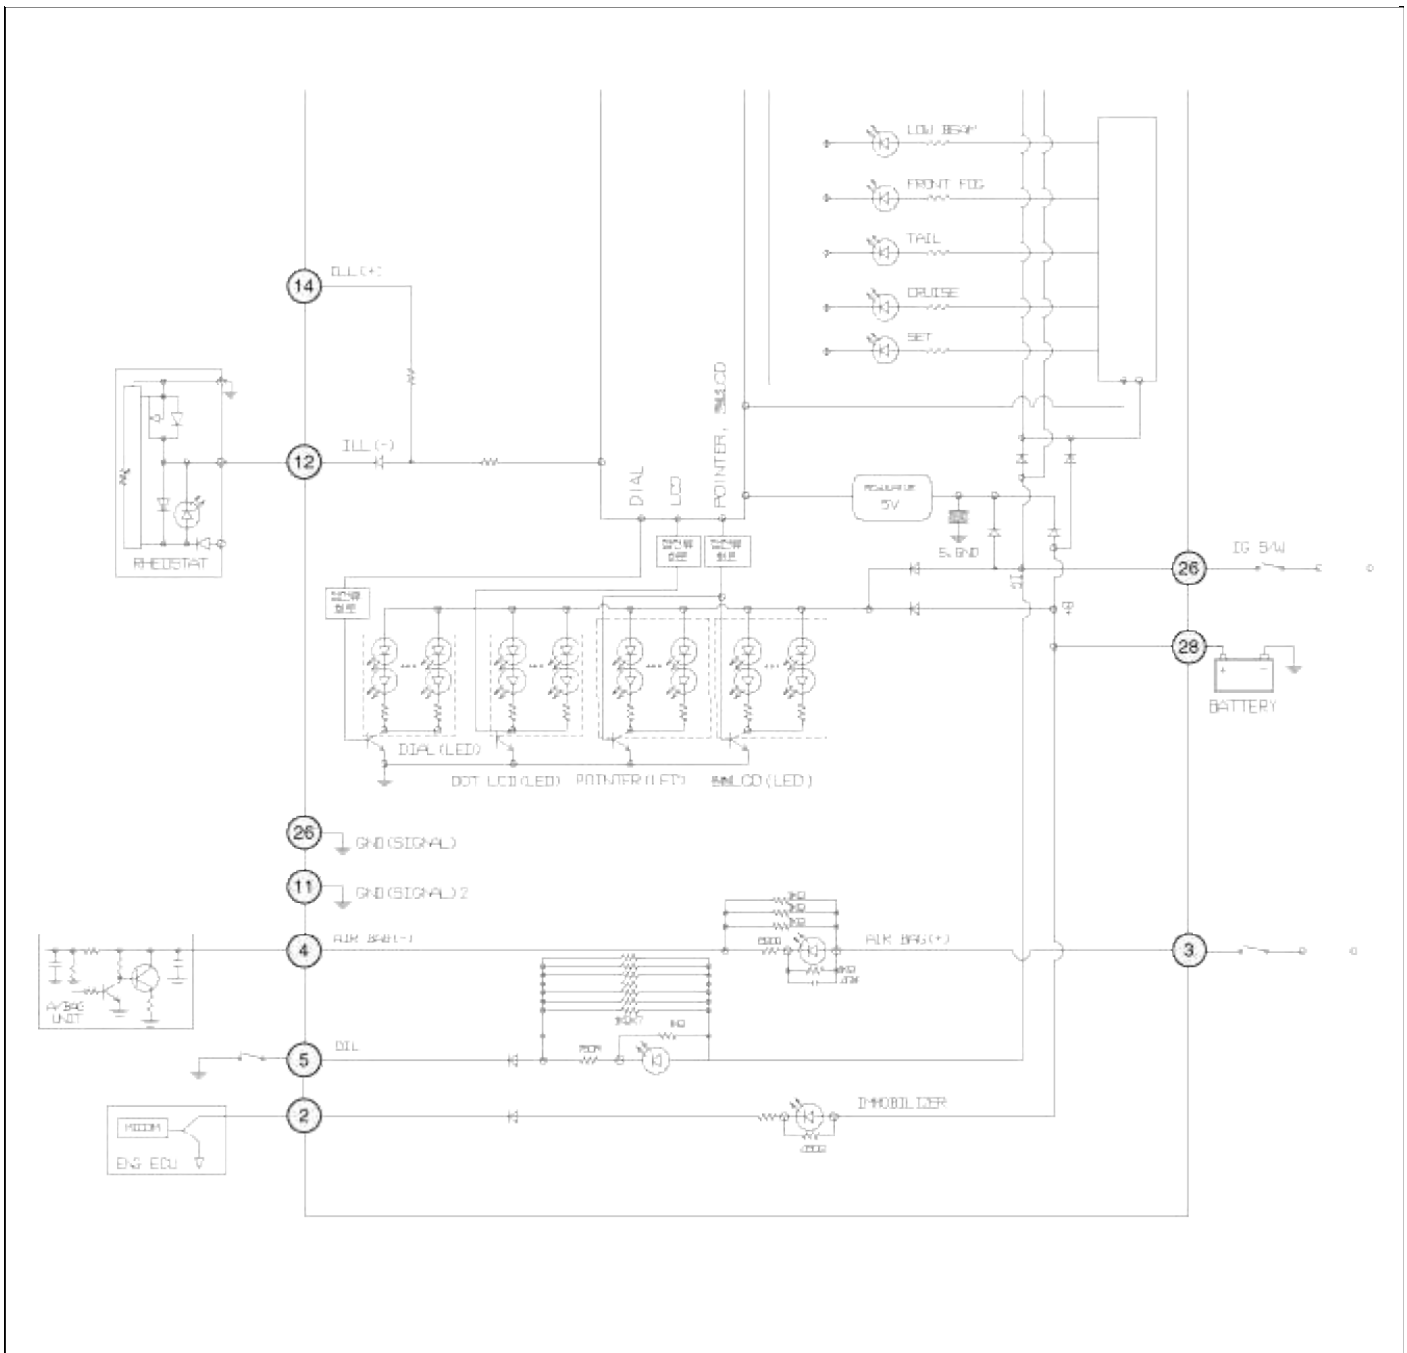

Body Electrical System > Indicators And Gauges > Instrument Cluster > Repair procedures

Inspection

Speedometer

1. Adjust the pressure of the tires to the specified level.
2. Drive the vehicle onto a speedometer tester. Use wheel chocks(A) as appropriate.


3. Check if the speedometer indicator range is within the standard values.

CAUTION

Do not operate the clutch suddenly or increase/ decrease speed rapidly while testing.

NOTE

Tire wear and tire over or under inflation will increase the indication error.

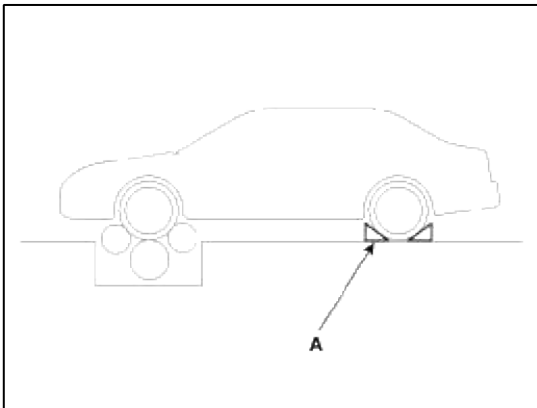

[km/h-CANADA]

Velocity (km/h)	20	40	60	80	100	120	140
Tolerance (km/h)	+3.0 0	+3.3 0	+3.4 0	+3.8 0	+4.1 0	+4.9 0	+5.2 0
Velocity (km/h)	160	180	200	220	240	260	280
Tolerance (km/h)	+5.7 0	+6.2 0	+6.5 0	+6.7 0	+6.9 0	+7.1 0	- -


[MPH-USA]

Velocity (MPH)	10	20	40	60	80
Tolerance (MPH)	+2.3 0	+2.4 0	+2.5 0	+2.6 0	+2.7 0
Velocity (MPH)	100	120	140	160	
Tolerance (MPH)	+2.8 0	+2.9 0	+3.0 0	+3.3 0	

Vehicle Speed Sensor

1. Connect the positive (+) lead from battery to terminal 1 and negative (-) lead to terminal 2.
2. Connect the positive (+) lead from tester to terminal 3 and the negative (-) lead to terminal 2.
3. Rotate the shaft.
4. Check that there is voltage change from approx. 0V to 11V or more between terminals 3 and 2.

5. The voltage change should be 4 times for every revolution of the speed sensor shaft.
If operation is not as specified, replace the sensor.

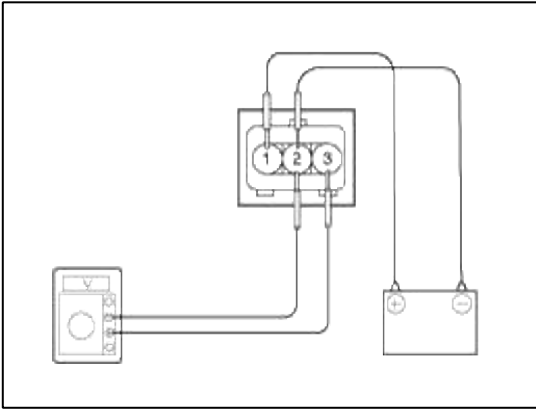

Tachometer

1. Connect the scan tool to the diagnostic link connector or install a tachometer.
2. With the engine started, compare the readings of the tester with that of the tachometer. Replace the tachometer if the tolerance is exceeded.


CAUTION

1. Reversing the connections of the tachometer will damage the transistor and diodes inside.
2. When removing or installing the tachometer, be careful not to drop it or subject it to severe shock.

Revolution(rpm)	1,000	2,000	3,000	4,000
Tolerance(rpm)	±100	±100	±100	±100
Revolution(rpm)	5,000	6,000	7,000	8,000
Tolerance(rpm)	±100	±100	±100	±100


Fuel Gauge

1. Disconnect the fuel sender connector from the fuel sender.
2. Connect a 3.4 watt, 12V test bulb to terminals 1 and 3 on the wire harness side connector.
3. Turn the ignition switch to the ON, and then check that the bulb lights up and the fuel gauge needle moves to full.

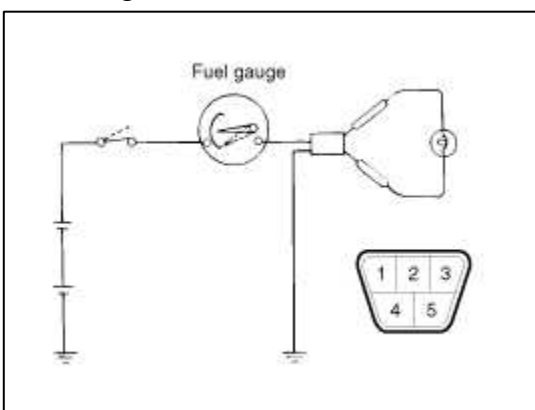

Main Fuel Gauge Sender

- Using an ohmmeter, measure the resistance between terminals 1 and 3 of sender connector (A) at each float level.

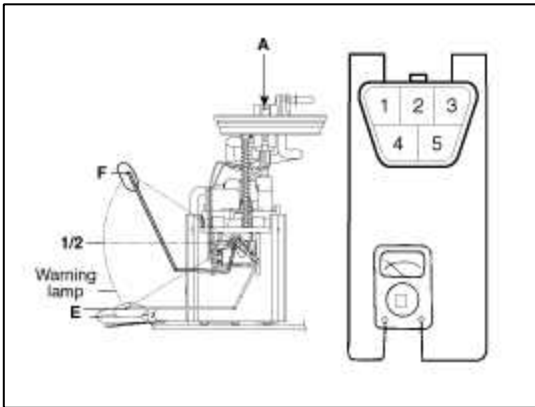

- Also check that the resistance changes smoothly when the float is moved from "E" to "F"

Position	Resistance(Ω)
SEG 1	193.4 ± 2
Warning lamp	186.8 ± 2
SEG 6	112.1 ± 2
SEG 12	13.5 ± 2

- If the height resistance is unsatisfied, replace the fuel sender as an assembly.


CAUTION

After completing this test, wipe the sender dry and reinstall it in the fuel tank.

Engine Coolant Temperature Gauge


- Disconnect the wiring connector (A) from the engine coolant temperature sender in the engine compartment.
- Turn the ignition switch ON. Check that the gauge needle indicates cool. Turn the ignition switch OFF.
- Connect a 12V, 3.4 watt test bulb between the harness side connector and ground.
- Turn the ignition switch ON.
- Verify that the test bulb flashes and that the indicator moves to HOT.

If operation is not as specified, replace the engine coolant temperature gauge. Then recheck the system.

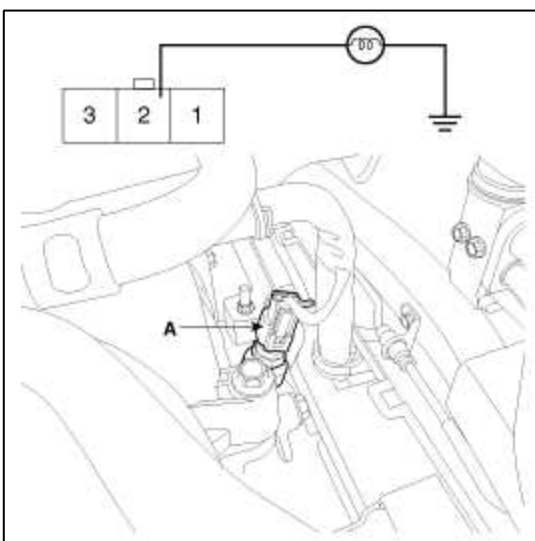

Engine Coolant Temperature Sender

- Using an ohmmeter, measure the resistance between the terminal 2 and ground.

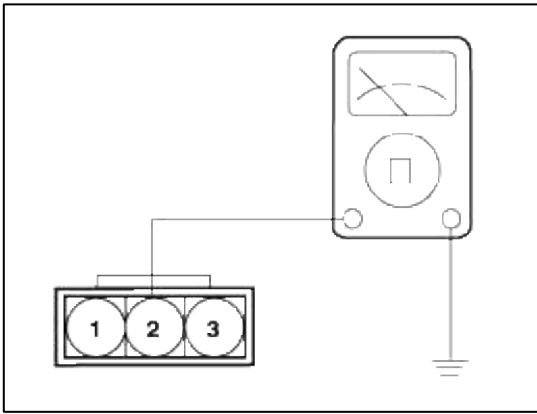


- If the resistance value is not as shown in the table, replace the temperature sender.

Temperature [°F(°C)]	131(55)	160(71) ~ 230(110)	257(125)
Gauge angle (°)	-45	-70 ± 25	+35


Oil Pressure Switch

- Check that there is continuity between the oil press switch terminal (A) and ground with the engine off.
- Check that there is no continuity between the terminal and ground with the engine running.
- If operation is not as specified, replace the switch.

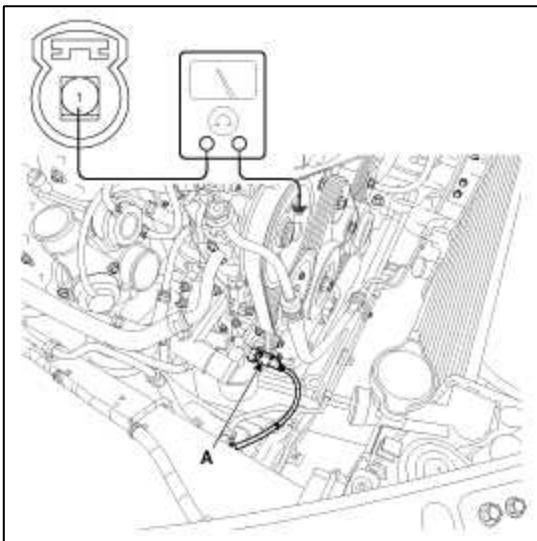


Oil Pressure Warning Lamp

- Disconnect the connector (A) from the warning switch and ground the terminal on the wire harness side connector.
- Turn the ignition switch ON. Check that the warning lamp lights up. If the warning lamp doesn't light, test the bulb or inspect the wire harness.

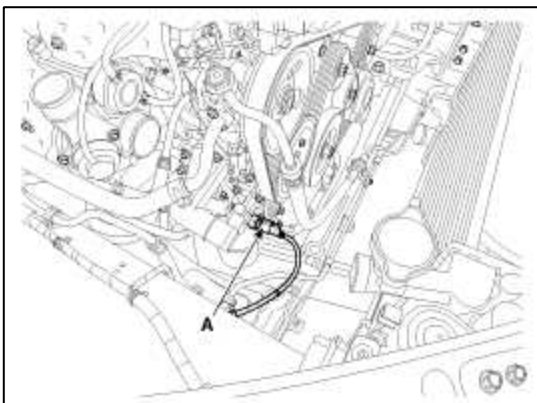

Brake Fluid Level Warning Switch

1. Remove the connector(A) from the switch located at the brake fluid reservoir.
2. Verify that continuity exists between switch terminals 1 and 2 while pressing the switch (float) down with a rod.

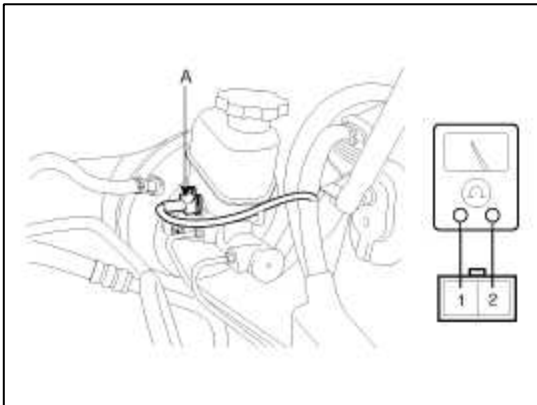


Brake Fluid Level Warning Lamp

1. Ignition "ON"
2. Release the parking brake.
3. Remove the connector from the brake fluid level warning switch.
4. Ground the connector at the harness side.
5. Verify that the warning lamp lights.

Parking Brake Switch


The parking brake switch (A) is a pulling type. It is located under the parking brake lever. To adjust, move the switch mount up and down with the parking brake lever released all the way.

1. Check that there is continuity between the terminal and switch body with the switch ON (Lever is pulled).
 2. Check that there is no continuity between the terminal and switch body with the switch OFF (Lever is released).
- If continuity is not as specified, replace the switch or inspect its ground connection.

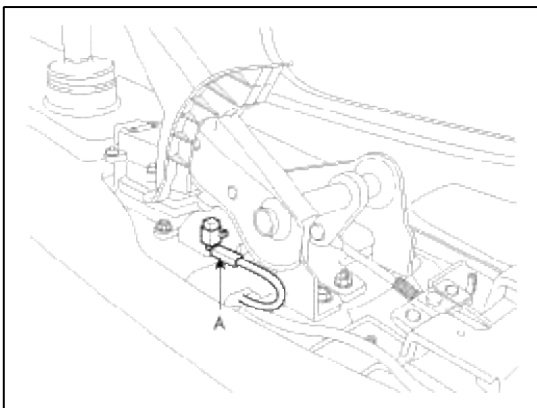

Door Switch

Remove the door switch and check for continuity between the terminals.

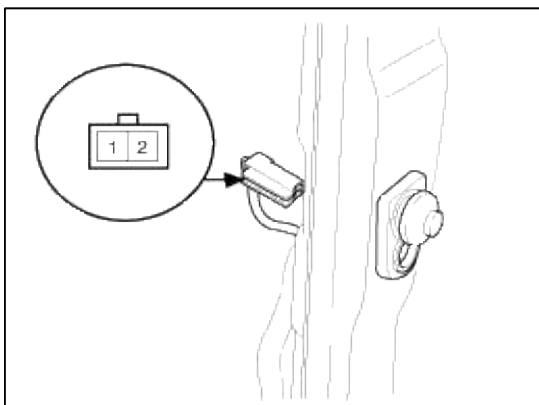


[Front Door Switch]

Terminal Position	1	2	Body (Ground)
Free(Door open)	○	○	○
Push(Door close)			

Seat Belt Switch

1. Remove the connector from the switch.
2. Check for continuity between terminals.

Seat belt condition	Continuity
Fastened	Non-conductive ($\infty\Omega$)
Not fastened	Conductive (Ω)

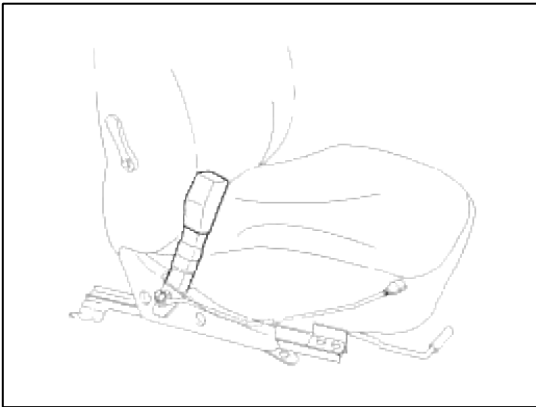


Seat Belt Warning Lamp

With the ignition switch turned ON, verify that the lamp glows.


Seat belt condition	Warning lamp
Fastened	OFF
Not fastened	ON

Removal


1. Disconnect the negative (-) battery terminal.
2. Tilt the steering column down.
3. Remove the cluster fascia lower panel(A).

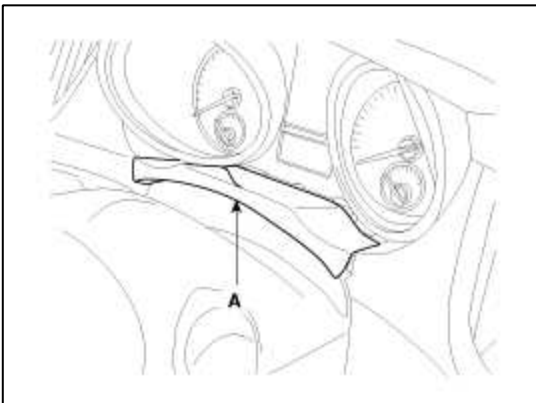

4. Remove the cluster(A) after loosening the screws.

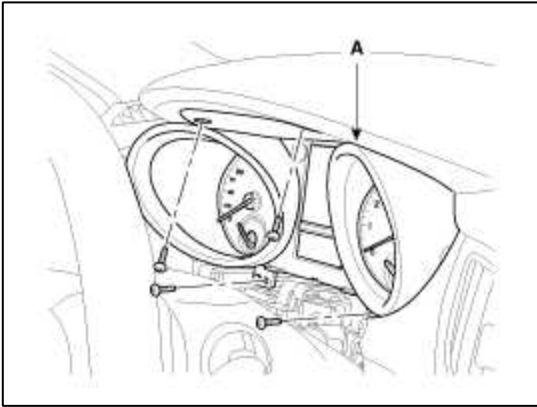

5. Disconnect the cluster connector (A), then remove the cluster.

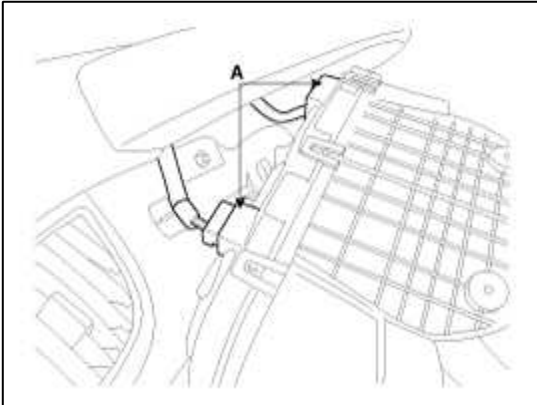

Installation

1. Install the cluster to the cluster housing.
2. Install the cluster fascia lower panel.

Body Electrical System > Indicators And Gauges > Troubleshooting


Troubleshooting

Symptom	Possible cause	Remedy
Speedometer does not operate	Cluster fuse (10A) blown	Check for short and replace fuse
	Speedometer faulty	Check speedometer
	Vehicle speed sensor faulty	Check vehicle speed sensor
	Wiring or ground faulty	Repair if necessary
Tachometer does not operate	Cluster fuse (10A) blown	Check for short and replace fuse
	Tachometer faulty	Check tachometer
	Wiring or ground faulty	Repair if necessary
Fuel gauge does not operate	Cluster fuse (10A) blown	Check for short and replace fuse
	Fuel gauge faulty	Check gauge
	Fuel sender faulty	Check fuel sender

	Wiring or ground faulty	Repair if necessary
Low fuel warning lamp does not light up	Cluster fuse (10A) blown	Check for short and replace fuse
	Bulb burned out	Replace bulb
	Fuel sender faulty	Check fuel sender
	Wiring or ground faulty	Repair if necessary
Water temperature gauge does not operate	Cluster fuse (10A) blown	Check for short and replace fuse
	Water temperature gauge faulty	Check gauge
	Water temperature sender faulty	Check sender
	Wiring or ground faulty	Repair if necessary
Oil pressure warning lamp does not light up	Cluster fuse (10A) blown	Check for short and replace fuse
	Oil pressure switch faulty	Check switch
	Wiring or ground faulty	Repair if necessary
Parking brake warning lamp does not light up	Cluster fuse (10A) blown	Check for short and replace fuse
	Brake fluid level warning switch faulty	Check switch
	Parking brake switch faulty	Check switch
	Wiring or ground faulty	Repair if necessary
Open door warning lamp and trunk lid warning lamp do not light up	Memory fuse (15A) blown	Check for short and replace fuse
	Door switch faulty	Check switch
	Wiring or ground faulty	Repair if necessary
Seat belt warning lamp does not light up	Cluster fuse (10A) blown	Check for short and replace fuse
	Seat belt switch faulty	Check switch
	Wiring or ground faulty	Repair if necessary

Body Electrical System > Power Door Locks > Components and Components Location

Component Location

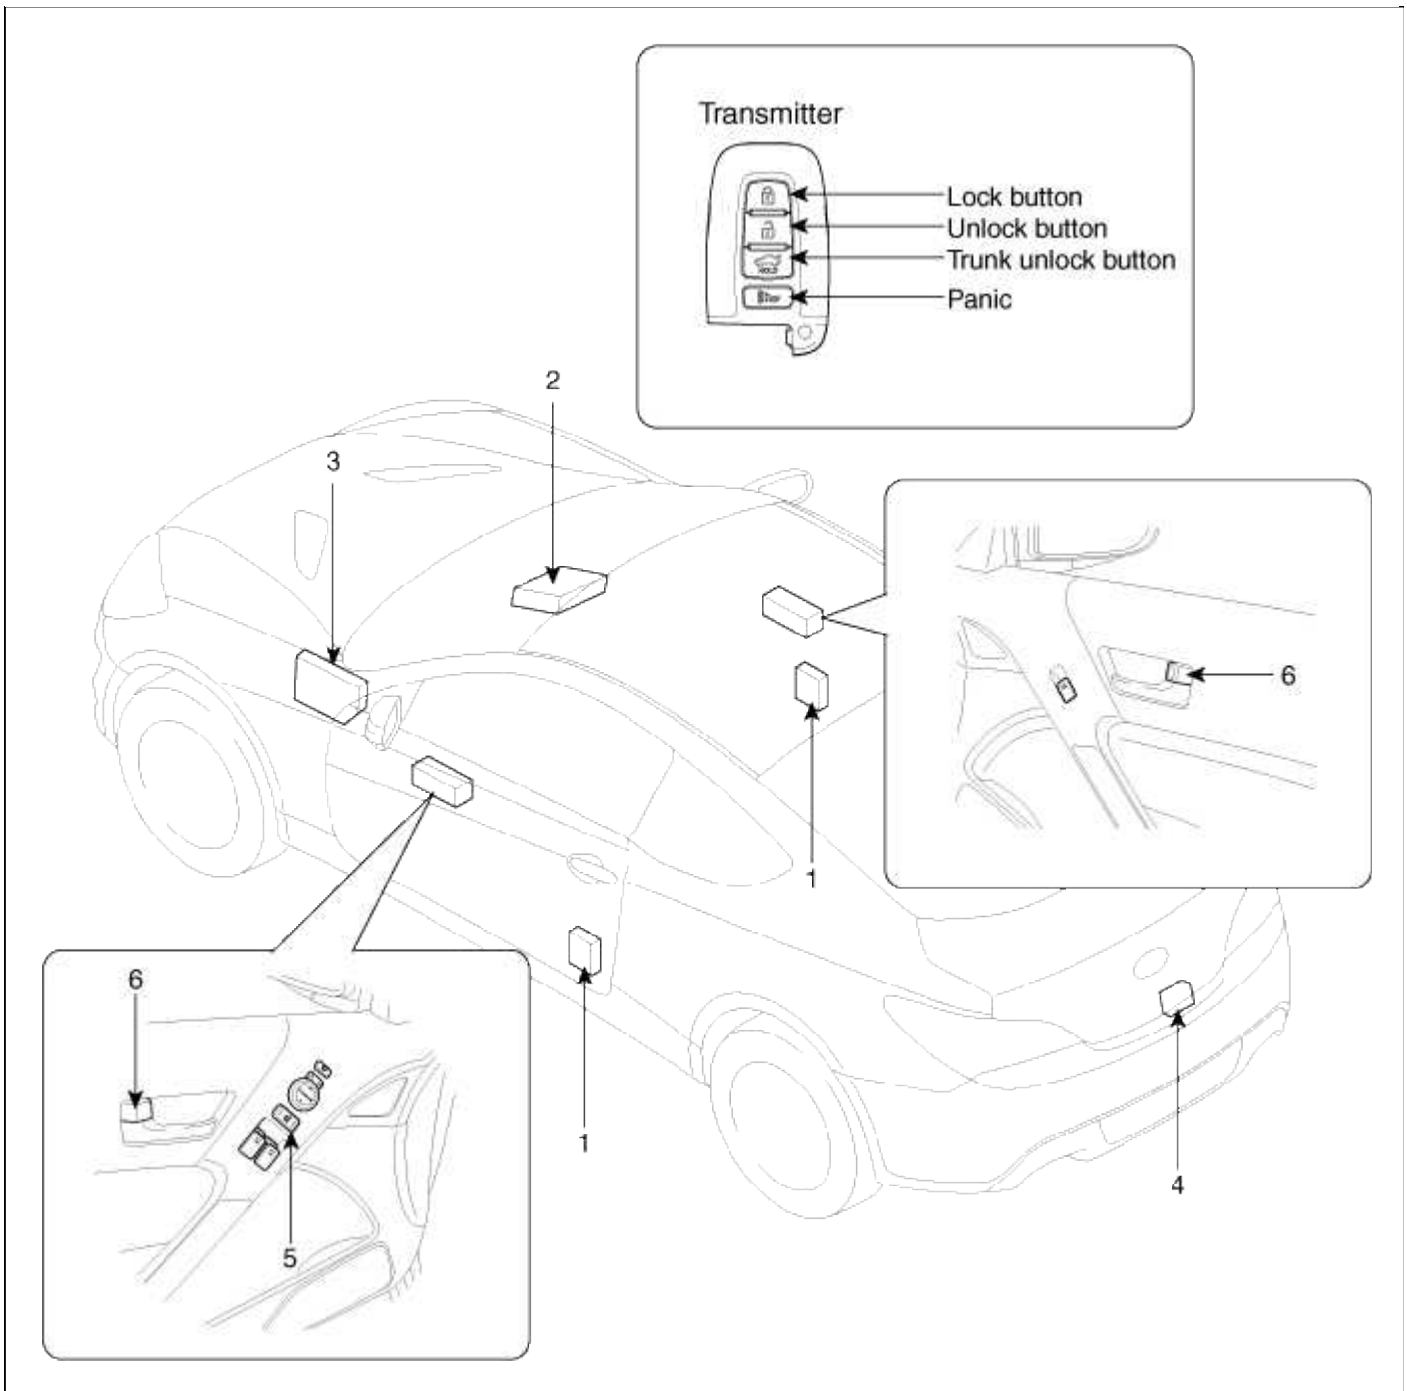

- | | |
|--|-------------------------------|
| 1. Front door lock actuator & switch | 4. Trunk lid release actuator |
| 2. Body control module | 5. Door lock switch |
| 3. Junction box (Door lock/unlock relay) | 6. Door lock knob |


Body Electrical System > Power Door Locks > Power Door Lock Actuators > Repair procedures

Inspection

Front Door Lock Actuator Inspection

1. Remove the front door trim.
(Refer to the Body group - front door)
2. Remove the front door module.

3. Disconnect the 6P connector from the actuator.

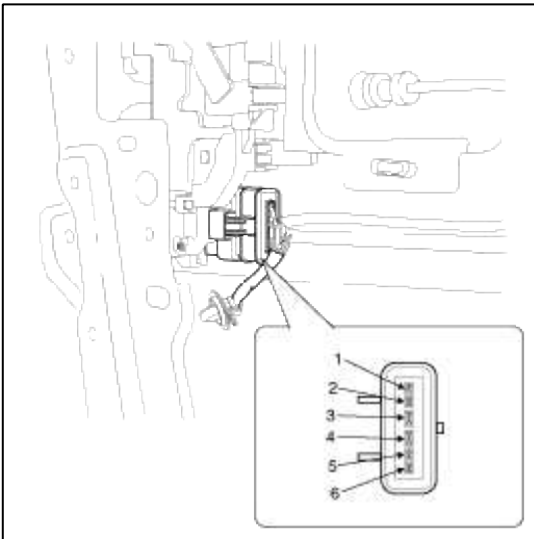


4. Check actuator operation by connecting power and ground according to the table. To prevent damage to the actuator, apply battery voltage only momentarily.

Position \ Terminal		Terminal	
		3	4
Front left	Lock	⊖	⊕
	Unlock	⊕	⊖
Front right	Lock	⊕	⊖
	Unlock	⊖	⊕

Trunk Lid Release Actuator Inspection

1. Remove the trunk lid trim panel.
(Refer to the Body group - trunk lid)
2. Disconnect the 3P connector from the actuator.

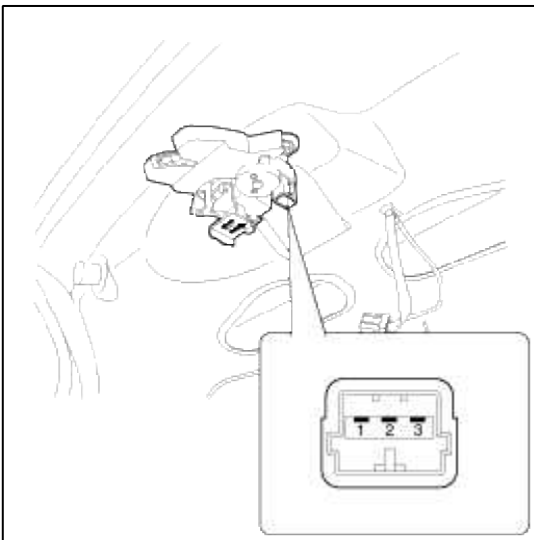


3. Check actuator operation by connecting power and ground according to the table. To prevent damage to the actuator, apply battery voltage only momentarily.

Position \ Terminal		Terminal	
		1	2
Lock release(Open)		⊖	⊕

Front Door Lock Switch Inspection

1. Remove the front door trim panel.
(Refer to the Body group - front door)
2. Remove the front door module.

3. Disconnect the 6P connector from the actuator.

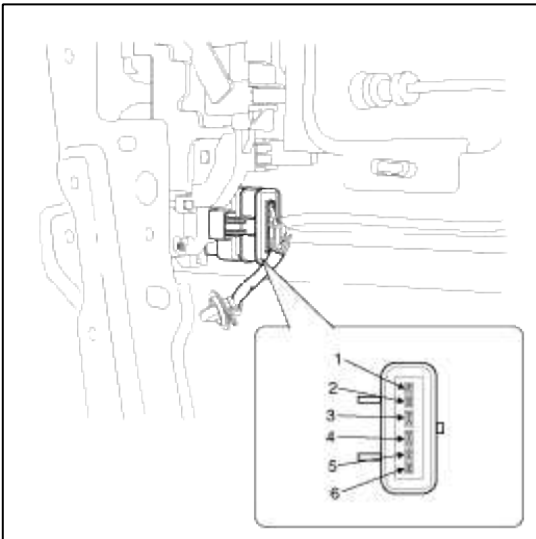


4. Check for continuity between the terminals in each switch position according to the table.

Position		Terminal			
		5	6	1	2
Front left	Lock				
	Unlock	○	○		
Front right	Lock				
	Unlock			○	○

Trunk Lid Open Switch Inspection

1. Remove the trunk lid trim panel. (Refer to the Body group - trunk lid)
2. Disconnect the 3P connector from the actuator.

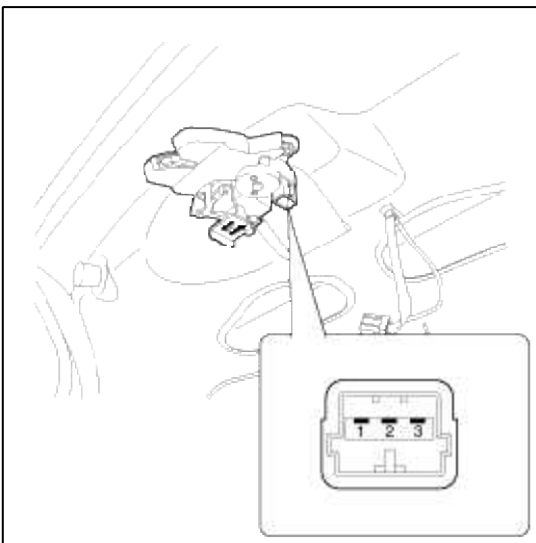

3. Check for continuity between the terminals in each switch position according to the table.

Position		Terminal	
		1	3
Lock			
Lock release(Open)		○	○

Body Electrical System > Power Door Locks > Power Door Lock Relay > Repair procedures

Inspection

1. Disconnect the negative (-) battery terminal.
2. Remove the junction box.
3. Check for continuity between the terminals.

Door Lock

1. There should be continuity between the No.2 terminal in the I/P-F and No.2 terminal in the I/P-E when power and ground are connected to the No.14 terminal in the I/P-E and No.1 terminal in the I/P-K.
2. There should be no continuity between the No.2 terminal in the I/P-F and No.2 terminal in the I/P-E when power is disconnected.



Terminal	I/P-F (2 or 8)	I/P-E (2)	I/P-E (14)	I/P-K (1)
Power				
Disconnected			○ — ○	
Connected	○ — ○		○ — ⊕	

Door Unlock

1. There should be continuity between the No.3 terminal in the I/P-F and No.2 terminal in the I/P-E when power and ground are connected to the No.3 terminal in the I/P-E and No.1 terminal in the I/P-E.
2. There should be no continuity between the No.3 terminal in the I/P-F and No.2 terminal in the I/P-E when power is disconnected.



Terminal	I/P-F (3 or 9)	I/P-E (2)	I/P-E (3)	I/P-K (1)
Power				
Disconnected			○ — ○	
Connected	○ — ○		○ — ⊕	


Body Electrical System > Power Door Locks > Power Door Lock Switch > Repair procedures

Replacement


Front Door Lock Switch

1. Disconnect the negative(-) battery terminal.

2. Remove the front door trim panel.
(Refer to Body group - "Front door")
3. Disconnect the module connector(A) from the wiring harness.

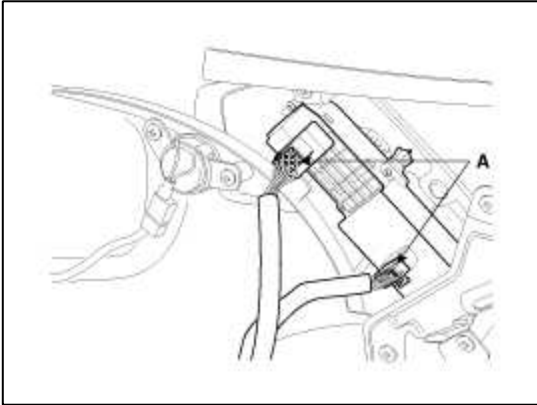


A. Loosen the screw(1EA).

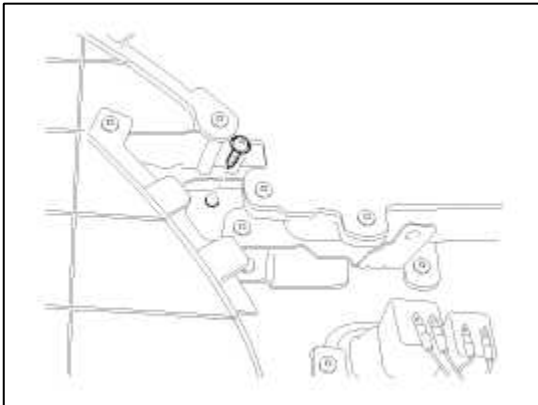

B. Remove the grip handle cover then loosen the upper screw.


C. Loosen the screws(3EA).

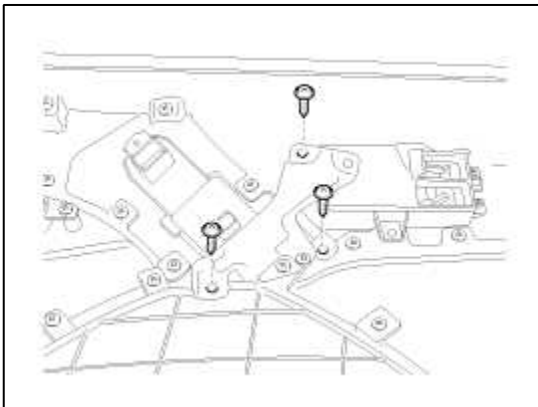

D. Remove the power window switch bracket.


E. Loosen the screws from the bracket.

4. Remove the power window switch module(A) from the front door trim panel.

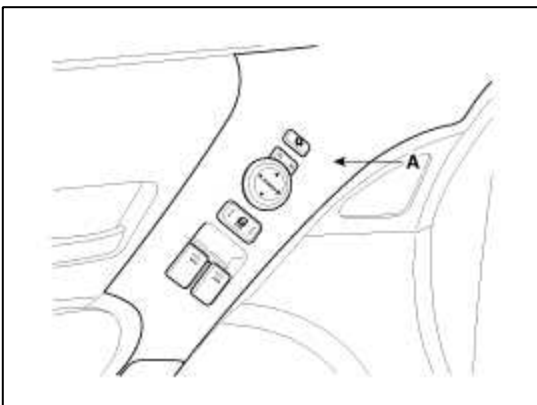


Passenger Door Lock Switch

1. Disconnect the negative(-) battery terminal.
2. Remove the door trim panel.
(Refer to Body group - "Front door")
3. Disconnect the module connector(A).

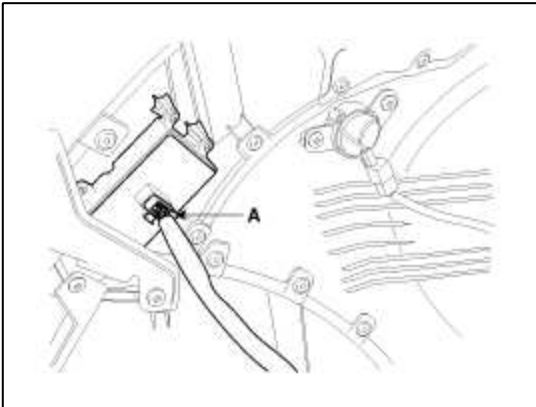


- A. Loosen the screw(1EA).

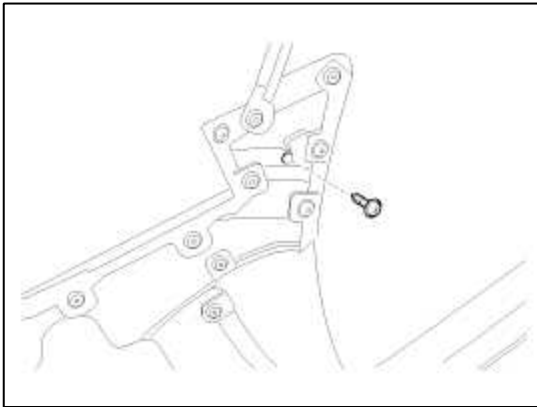

- B. Remove the grip handle cover then loosen the upper screw.


- C. Loosen the screws(3EA).

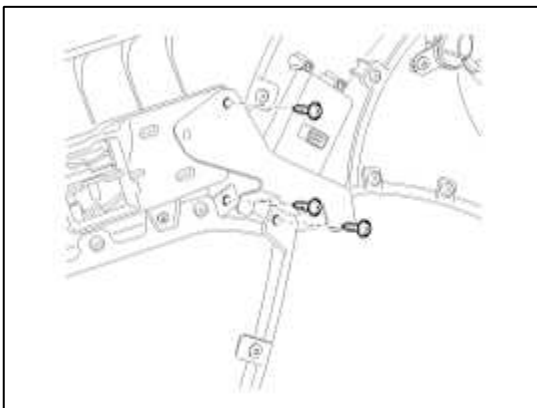

- D. Remove the power window switch bracket.


- E. Loosen the screws from the bracket.

4. Remove the power window switch module(A) from the front door trim panel.

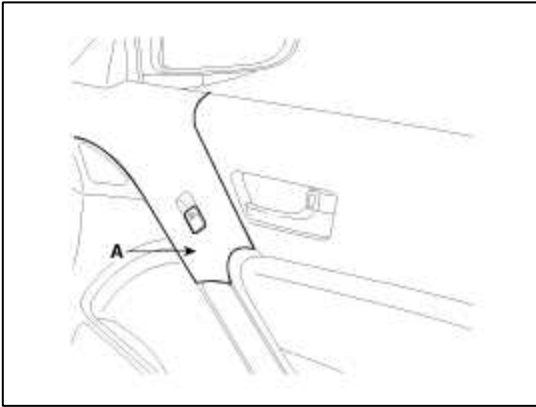

Body Electrical System > Power Door Mirrors > Components and Components Location

Component Location

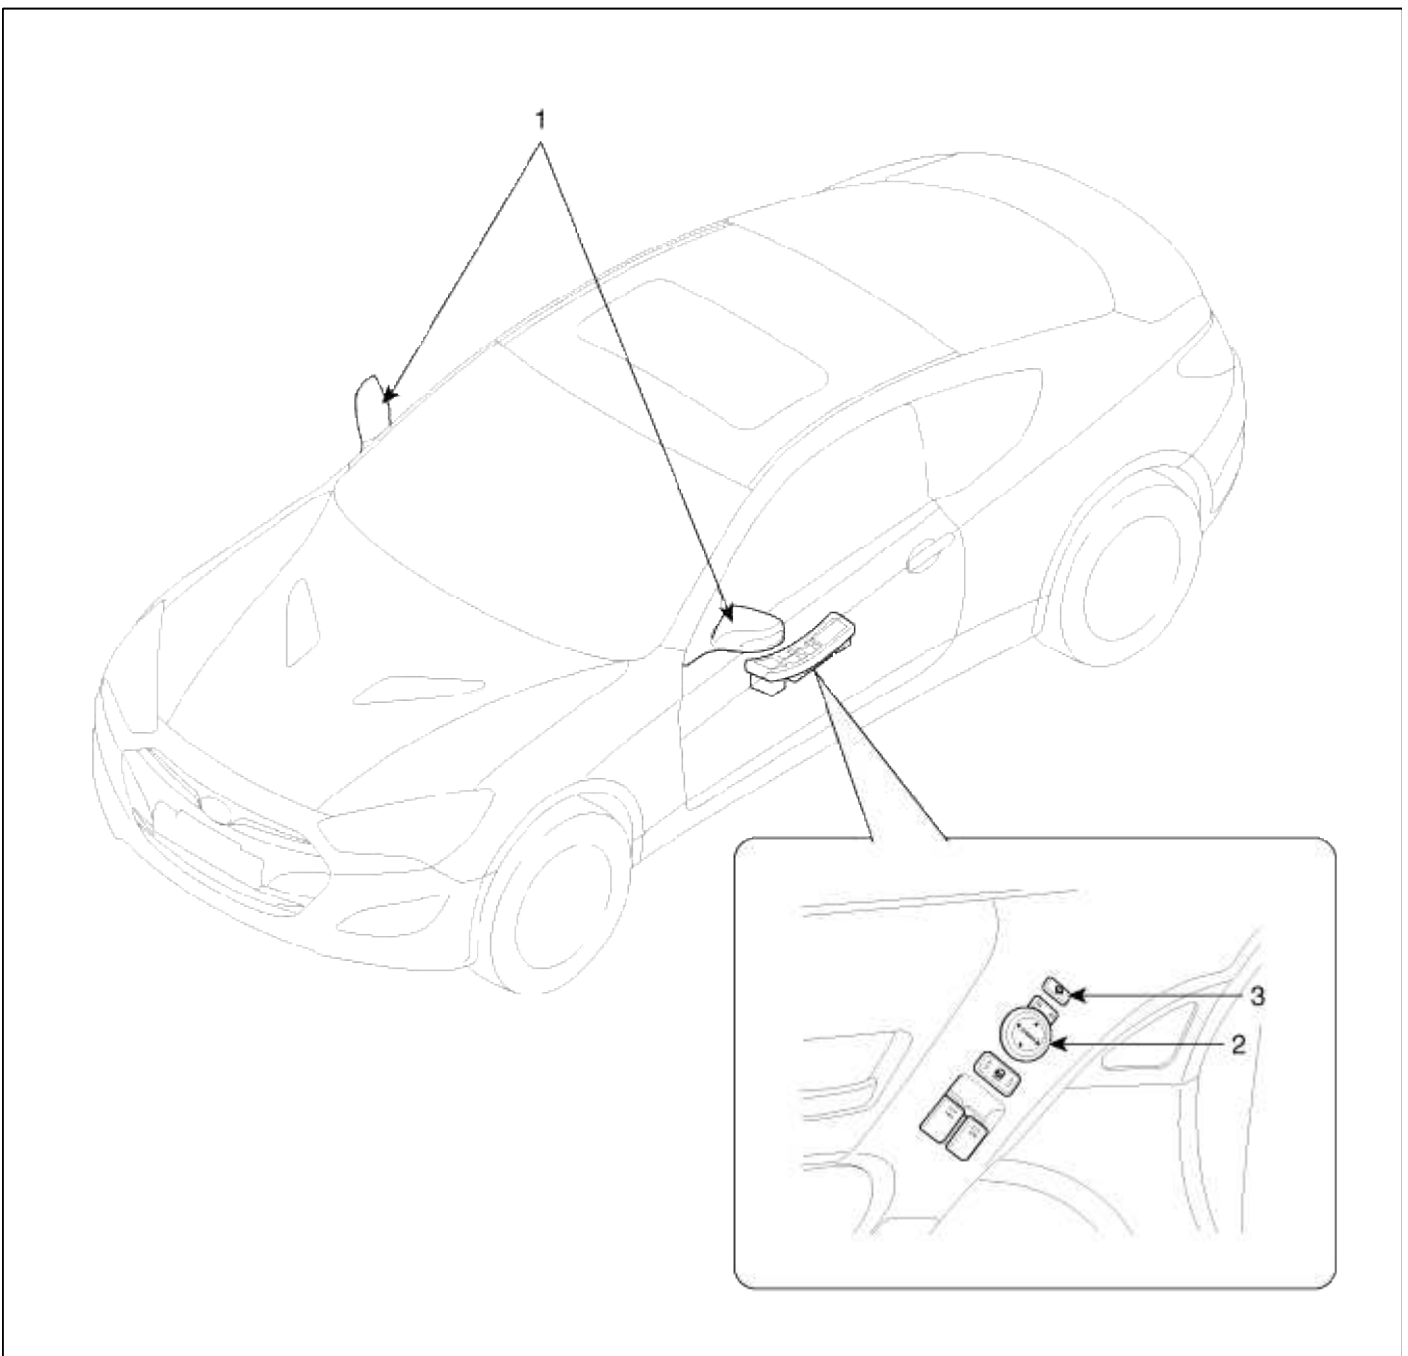


1. Power door mirror




2. Power door mirror switch

Body Electrical System > Power Door Mirrors > Power Out Side Mirror Switch > Components and Components Location

Component

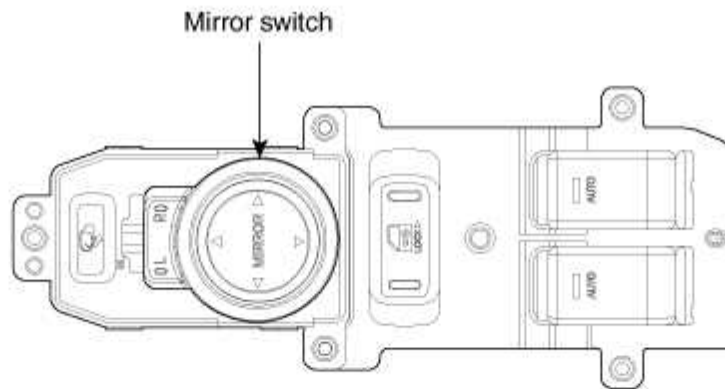


Mirror switch connector (12pin)

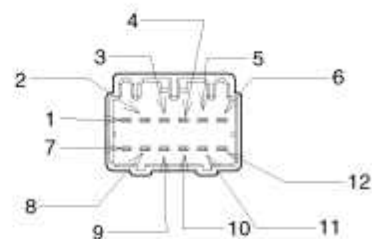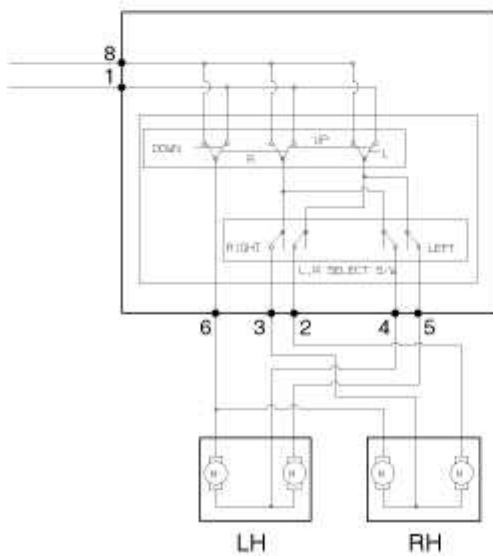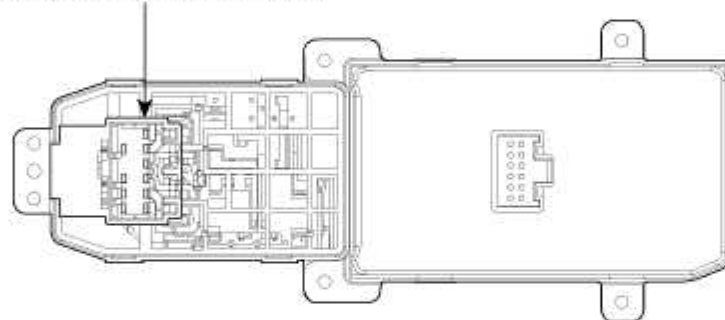

Body Electrical System > Power Door Mirrors > Power Out Side Mirror Switch > Repair procedures
Inspection

1. Disconnect the negative (-) battery terminal.
2. Remove the front door trim panel.
(Refer to the Body group - "Front door")
3. Disconnect the 12P connector from the switch.

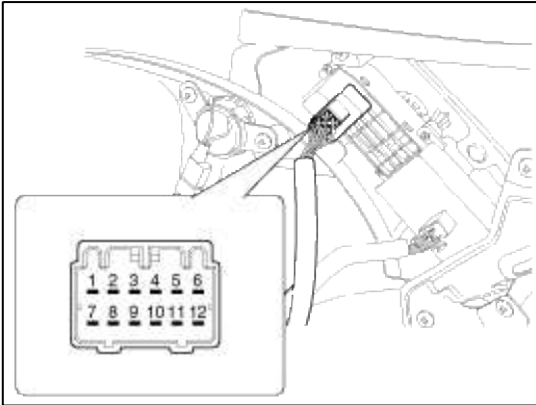


4. Check for continuity between the terminals in each switch position according to the table.

Item	Terminal Position	Terminal							
		4	5	3	2	6	1	7	9
Left	UP	○	○			○	○		
	DOWN	○	○				○	○	
	OFF	○	○	○	○	○	○	○	○
	LEFT	○		○	○	○	○	○	○
	RIGHT	○	○			○	○	○	○
Right	UP			○	○	○	○		
	DOWN			○	○		○		
	OFF			○	○	○	○	○	○
	LEFT			○	○	○	○	○	○
	RIGHT			○	○		○	○	○

Body Electrical System > Power Door Mirrors > Power Door Mirror Actuator > Repair procedures
Inspection

1. Remove the front door quadrant delta cover.
(Refer to the Body group - "Front door")

2. Disconnect the power door mirror connector from the harness.

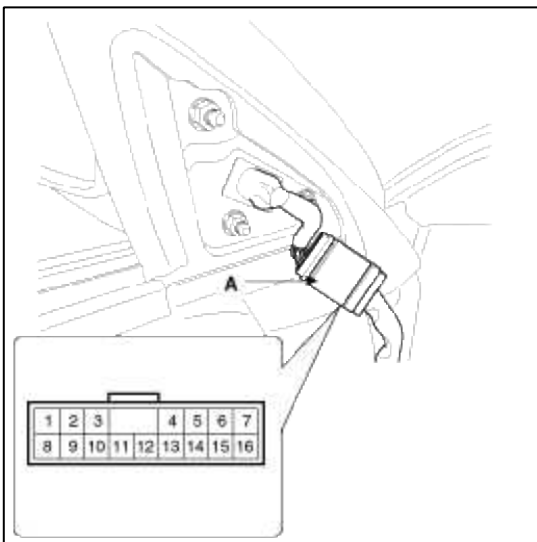

3. Apply battery voltage to each terminal as shown in the table and verify that the mirror operates properly.

Terminal Position	7	16	6	B+	GND
UP	○	○	○	○	○
DOWN	○	○	○	○	○
OFF	○	○	○	○	○
RIGHT	○	○	○	○	○
LEFT	○	○	○	○	○


Mirror Heater Inspection

Terminal Position	4	13
Heater	○	○

Side Repeater Lamp

Terminal Position	12	11
Lamp	B	E


Folding Mirror

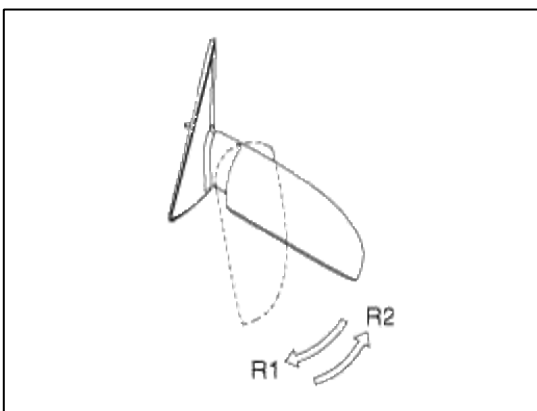

Terminal Position	B(+)	GND(-)	14	5
Folding (R1)	○	○	○	○
Unfolding (R2)	○	○	○	○

Body Electrical System > Power Windows > Components and Components Location

Component Location

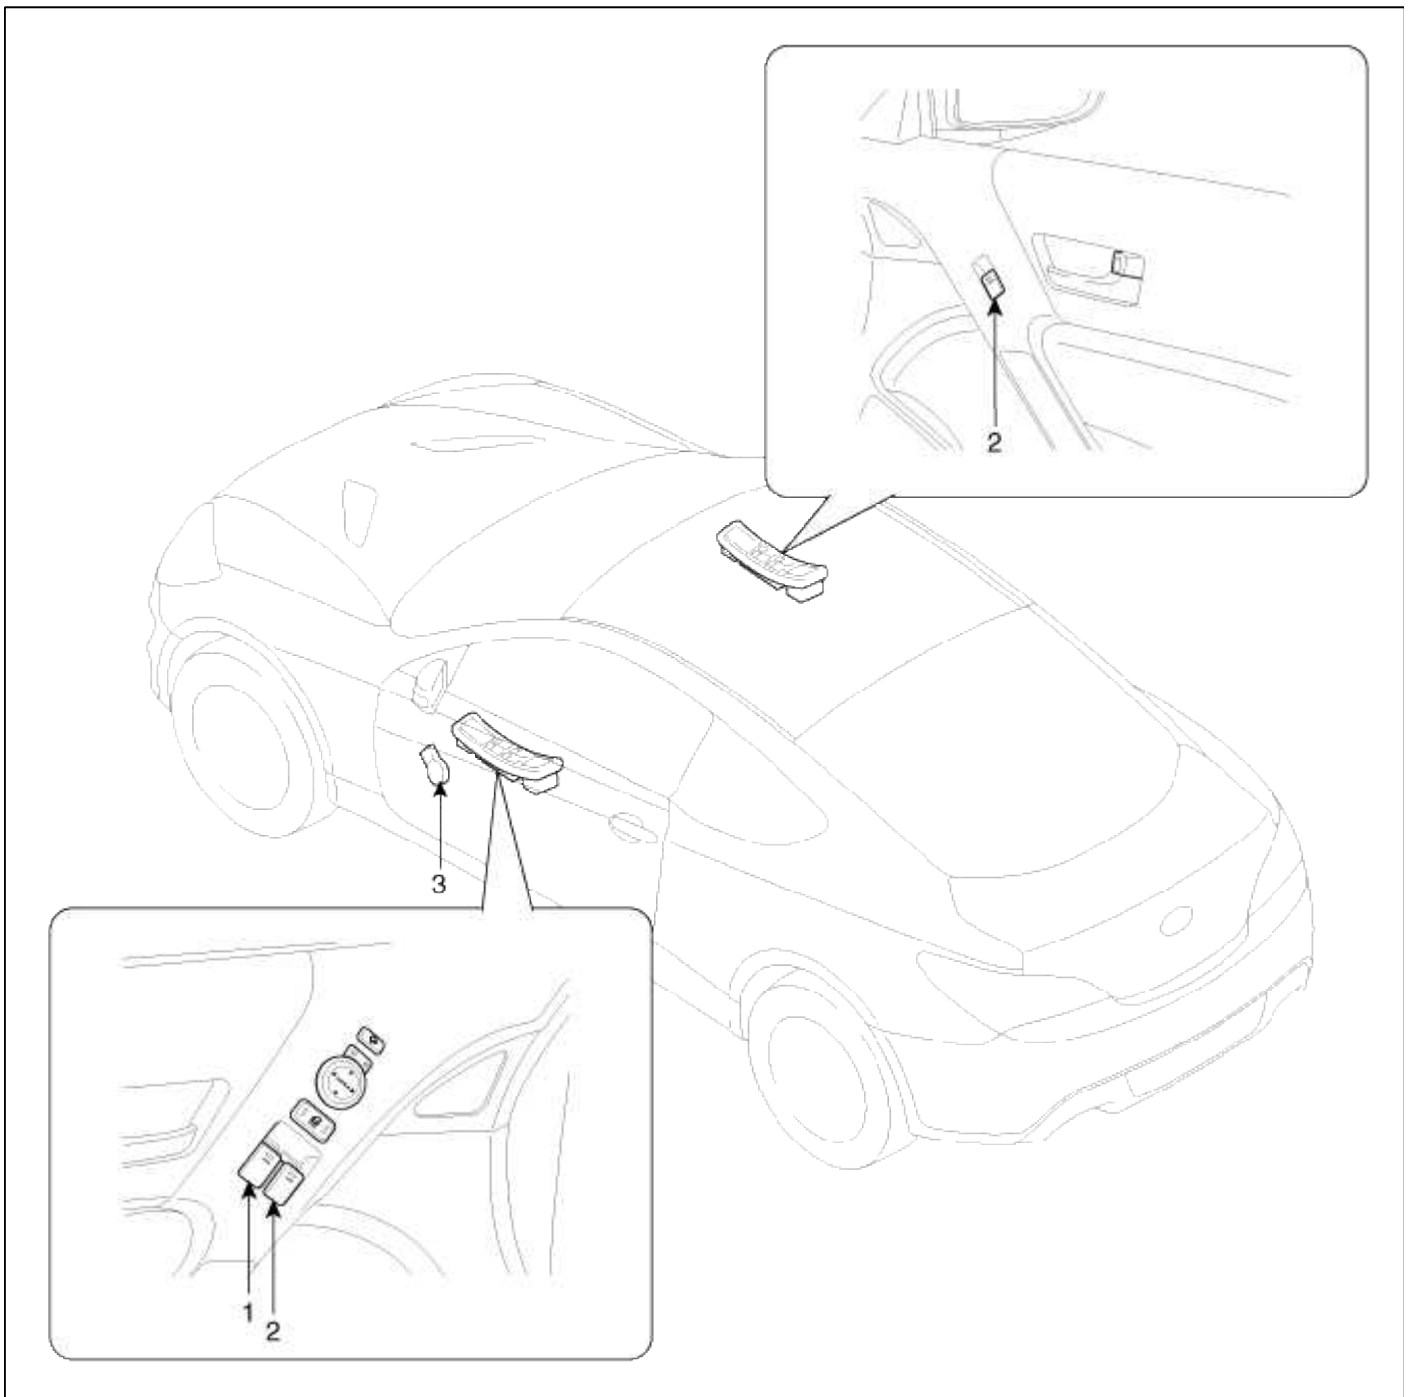

- | | |
|------------------------------------|---------------------------------------|
| 1. Driver power window main switch | 3. Front window motor (Safety window) |
| 2. Passenger power window switch | |

Body Electrical System > Power Windows > Description and Operation

Function Of Safety Power Window

When driver door power window auto-up switch is operated, safety function is activated.


1. Safety function condition

When detect the force of 100N (using the 10N/mm spring) during the window rising, window is reversed.

2. Length of window reversing (except holding the auto-up switch)


A. When detect the jamming during the 4mm ~ 250mm from top of the door.

→ Window is reversed until 300mm from top of the door.

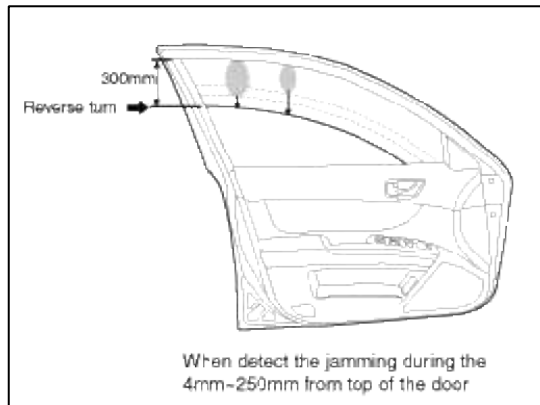

B. When detect the jamming over the 250mm from top of the door.

→ Window is reversed until 20mm from jamming position.

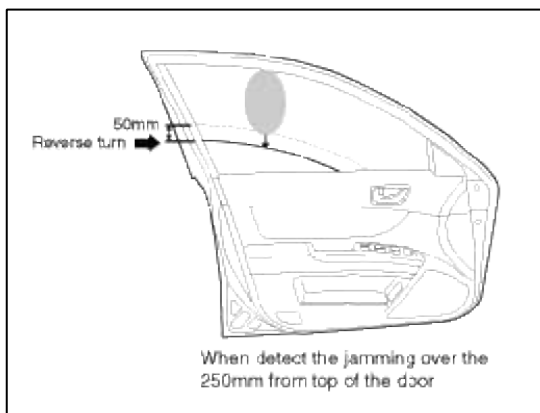

3. Length of window reversing (holding the auto-up switch)

A. When detect the jamming during holding the auto-up switch.


→ Window is reverse until 25mm from jamming position.

B. Auto-up function is not available during the 5 seconds from above condition.

→ When holding the auto-up switch, window is operated as a manual-up function. (Safety function is not activated.)

C. When holding the auto-up switch after 5 seconds from above condition.

→ Window is reverse until 25mm from jamming position.

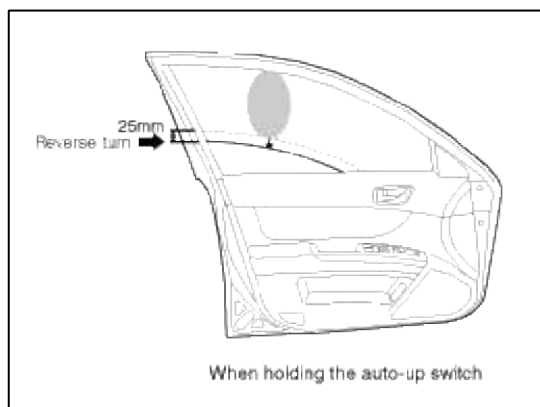

4. Safety function is not available area

Safety function is not available during the 4mm from top of the door.

Initializing Method Of The Safety Power Window

1. Initializing of Battery Connection

When the battery is not connected the vehicle over the 5 minutes, safety power window switch need the initializing.

(1) Power window operation before initializing

A. Manual-Up/Down function is available

B. Auto-Up function is not available

(When holding the auto-up/down switch, window is operated as a manual-up/down.)

(2) Initializing method

Close the window in window open position, and holding the switch in window full close position over the 0.2 second.

(If start the closing the window in window full close position, initializing could be failed.)

(3) If initialize the safety power window in jamming status, could occur below conditions.

A. Safety function is not available

2. Initializing of fail safe mode

(1) If the window moved by compulsion and motor have a problem, power window switch could be entering the fail safe mode for user's safety.

(2) Power window operation in fail mode

A. Auto/Manual-Down function is available

B. Auto/Manual-Up function is not available

(When auto/manual-up is operated, window is rising 20mm and is stopped the moving.)

Short Drop



The short drop (SD) functionality is linked to the door ajar signal. In case of door opened, the door ajar signal (low level) will be received by the ECU. As a result the upper stop position will be changed from upper mechanical block position to the short drop position (EEPROM parameter). Short drop commandos will be executed independent of multi function line state.

Window lifter behavior due to door ajar signal:

Window	Event	Action
Closed	Door opened → Short drop active	Glass moves down to SD position
Over SD position	Door opened → Short drop active	Glass moves down to SD position
Below SD position	Door opened → Short drop active	Glass will not move, but upper stop position will be changed to SD position
SD position	Door opened → Short drop active	Glass will not move, but upper stop position will be changed to SD position
SD position	Door closed → Short drop inactive	Glass will move to upper block position, upper stop position is equal to mechanical stop SD position
Below SD position	Door closed → Short drop inactive	Glass will not move, but upper stop position will change to mechanical stop position

Body Electrical System > Power Windows > Power Window Motor > Schematic Diagrams

Circuit Diagram

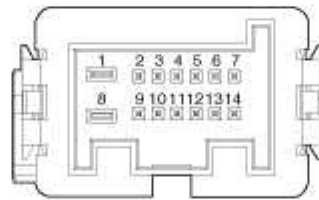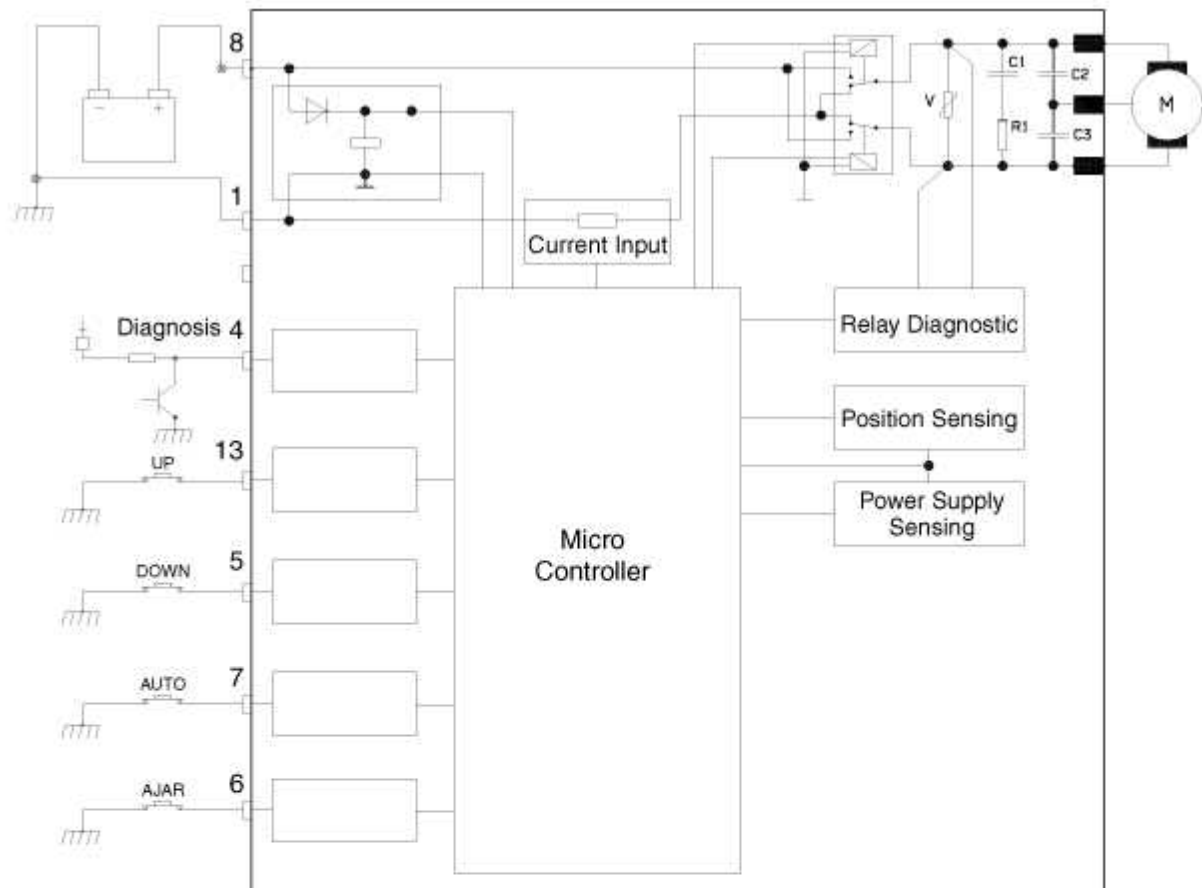

Pin No.	Name
1	Battery GND
4	Diagnostic Line
5	Down Switch
6	AJAR Switch
7	Auto Switch
8	Battery
13	Up Switch


Body Electrical System > Power Windows > Power Window Motor > Repair procedures

Inspection

Front Power Window Motor

1. Remove the front door trim panel.
(Refer to the Body group - "Front door")

2. Disconnect the connector from the motor.

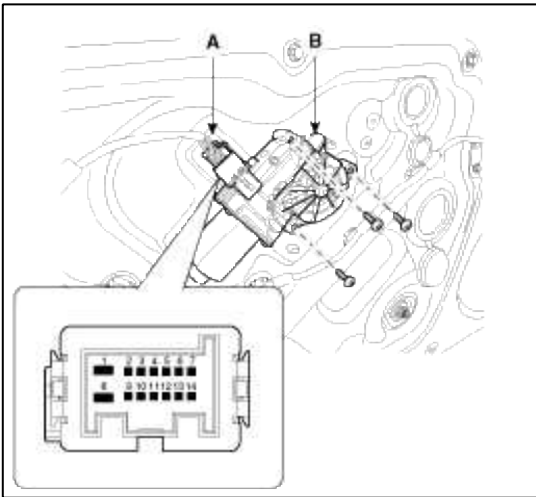




3. Connect the terminal No.4 directly to battery voltage (12V) and check that the motor operates smoothly. If the operation is abnormal, replace the motor.

Terminal Position		13	1(GND)	5
LH	UP	○	○	
	DOWN		○	○
RH	UP	○	○	
	DOWN		○	○

Body Electrical System > Power Windows > Power Window Switch > Schematic Diagrams




Circuit Diagram

Driver Power Window Switch

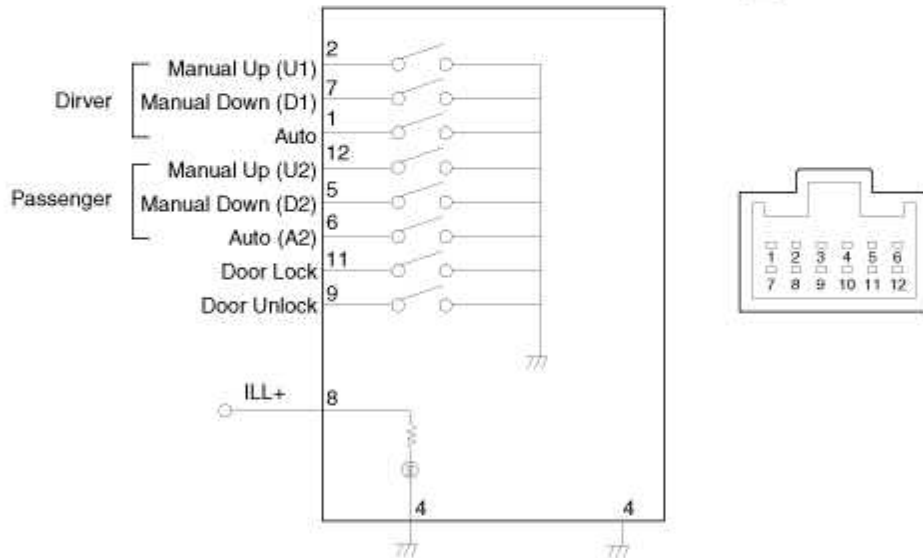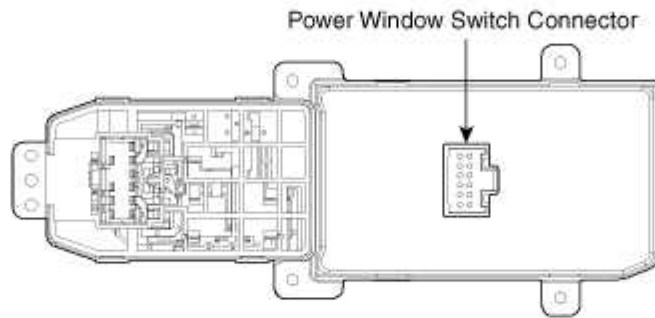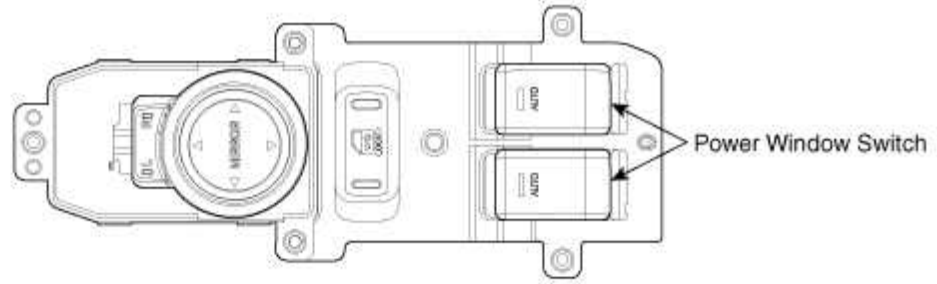

Pin No.	Name	Pin No.	Name
1	Auto (Driver)	7	Manual Down (Driver)
2	Manual Up (Driver)	8	ILL (+)
3	-	9	Door Unlock
4	GND	10	-
5	Manual Down (Passenger)	11	Door Lock
6	Auto Down (Passenger)	12	Manual Up (Passenger)

Assist Power Window Switch

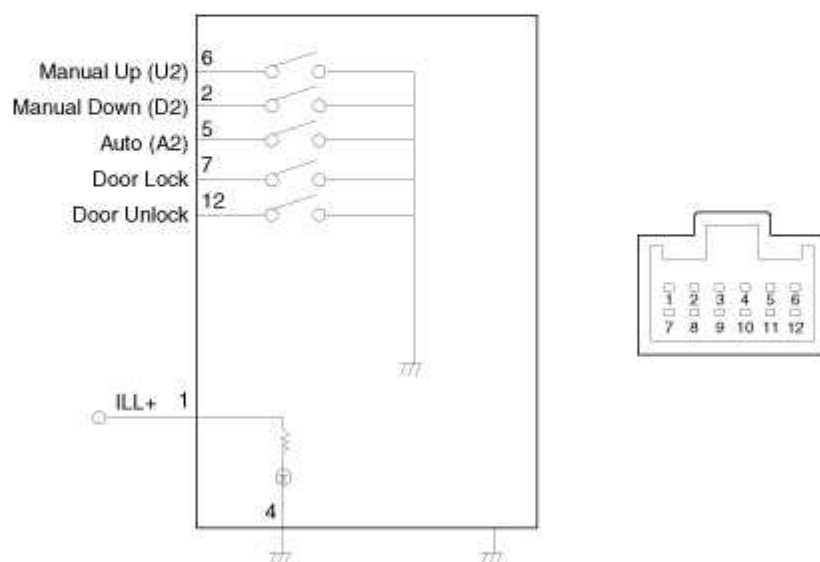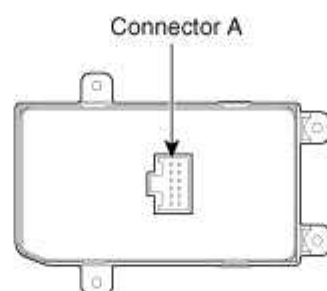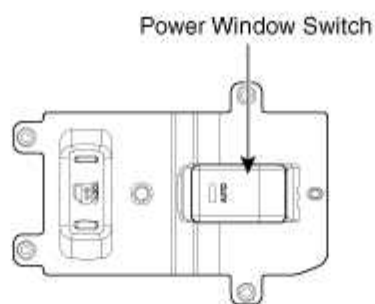

Pin No.	Name	Pin No.	Name
1	ILL (+)	7	Door Lock
2	Manual Down	8	-
3	-	9	-
4	GND	10	-
5	Auto	11	-
6	Manual Up	12	Door Unlock


Body Electrical System > Power Windows > Power Window Switch > Repair procedures

Inspection

Power Window Main Switch Inspection

1. Disconnect the negative (-) battery terminal.
2. Remove the front door trim panel.
(Refer to the Body group - front door)

3. Disconnect the 12P connector from the switch.

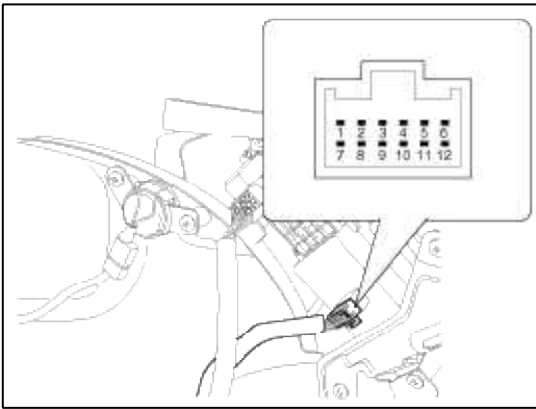


4. Check for continuity between the terminals in each switch position according to the table. If the continuity condition is not normal, replace the switch.

Position		Terminal						
		1	2	4 (GND)	5	6	7	12
Driver	Manual Up		○	○				
	Manual Down			○	○	○	○	
	Auto	○	○					
Passenger	Manual Up			○	○	○	○	
	Manual Down			○	○			
	Auto			○	○			

Assist Power Window Switch Inspection

1. Disconnect the negative (-) battery terminal.
2. Remove the front door trim panel.
(Refer to the Body group - front door)
3. Disconnect the 12P connector from the switch.

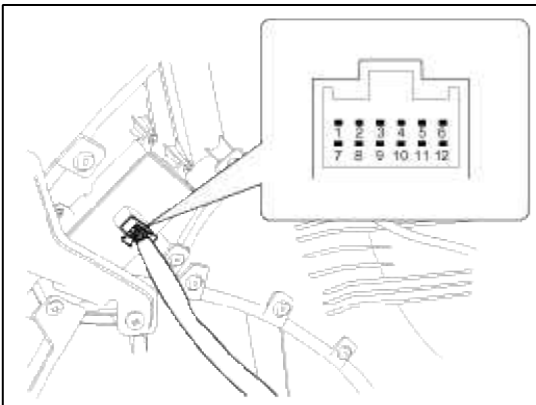


4. Check for continuity between the terminals in each switch position according to the table. If the continuity condition is not normal, replace the switch.

Terminal Position		2	4 (GND)	5	6
		Manual Up		○	○
Manual Down	○	○			
Auto		○	○		

Body Electrical System > Rear Glass Defogger > Components and Components Location

Component Location

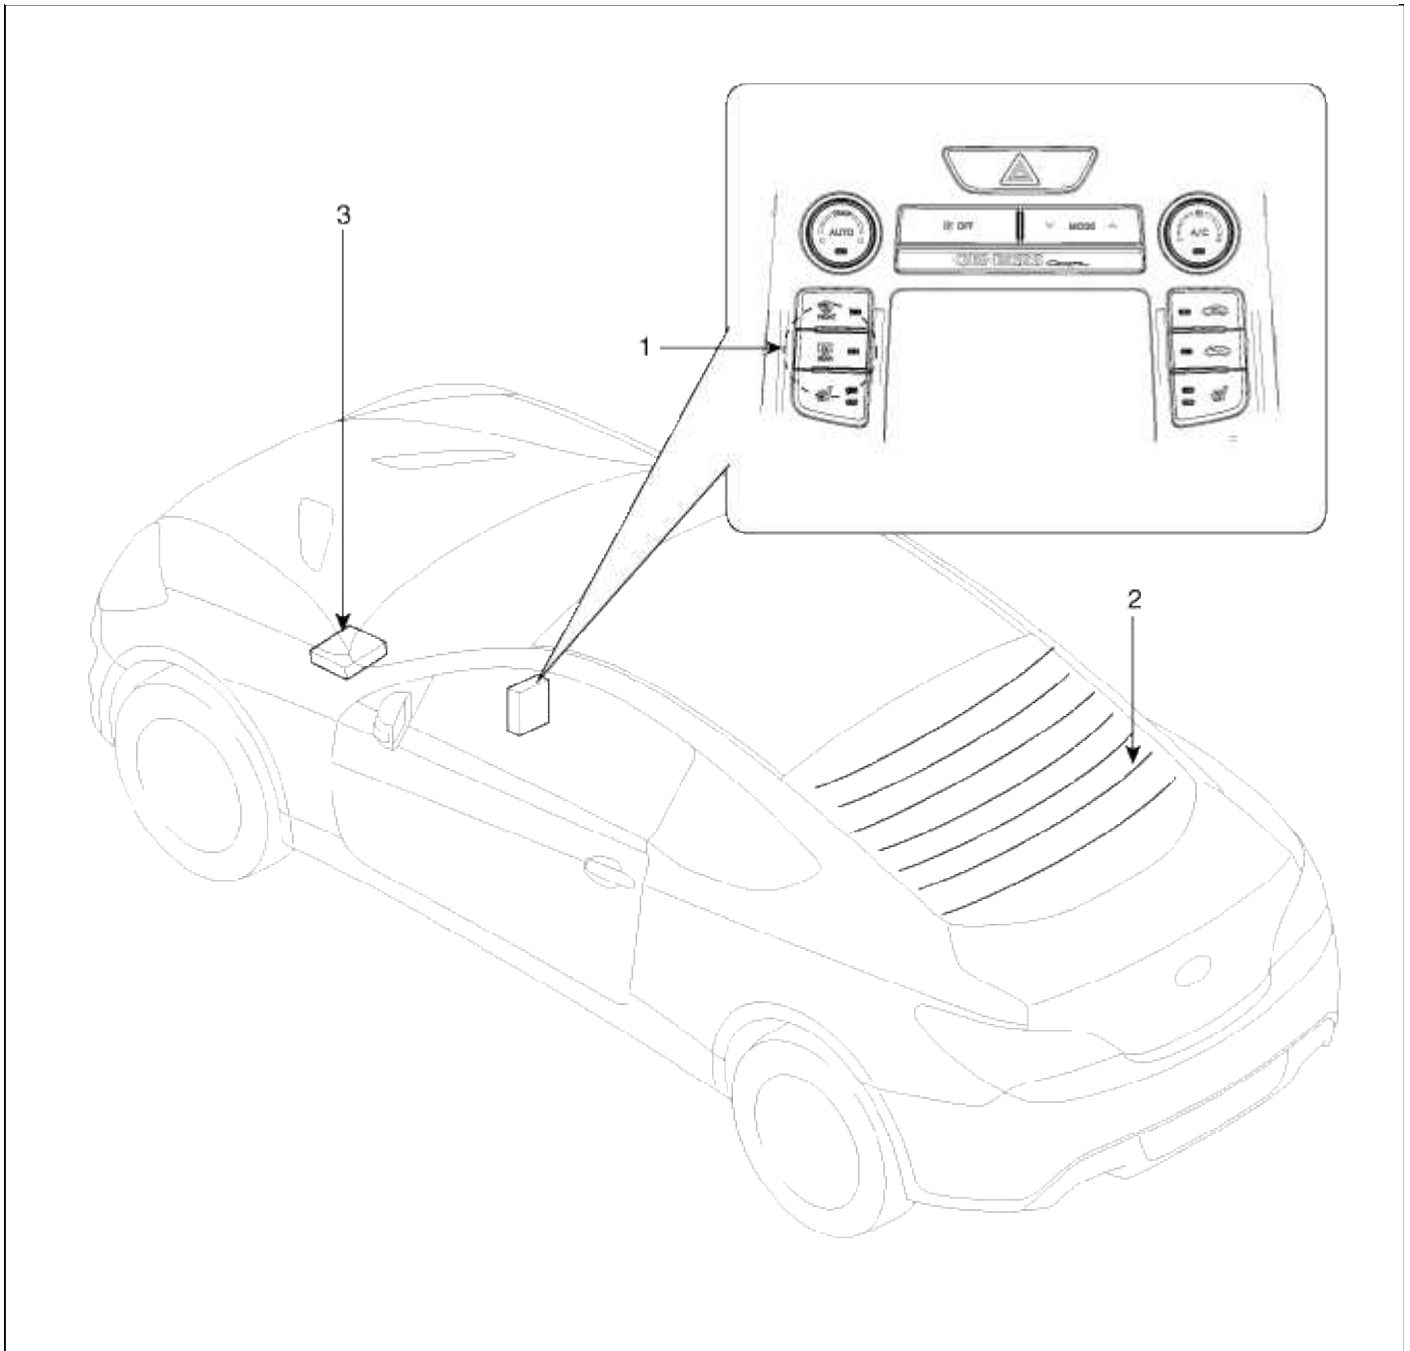

1. Rear window defogger switch (A/C controller)
2. Rear window defogger


3. Body control module (Rear window defogger relay)

Body Electrical System > Rear Glass Defogger > Rear Glass Defogger Printed Heater > Repair procedures


Inspection

CAUTION


Wrap tin foil around the end of the voltmeter test lead to prevent damaging the heater line. Apply finger pressure on the tin foil, moving the tin foil along the grid line to check for open circuits.

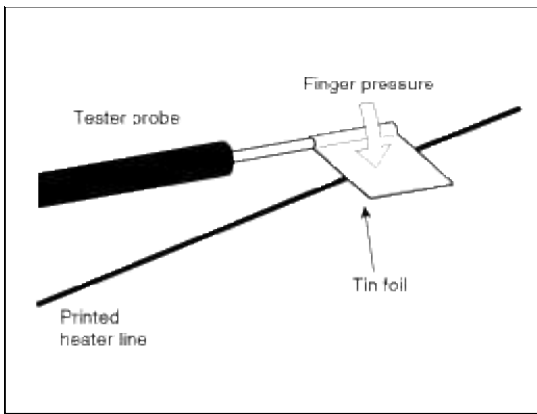


1. Turn on the defogger switch and use a voltmeter to measure the voltage of each heater line at the glass center point. If a voltage of approximately 6V is indicated by the voltmeter, the heater line of the rear window is considered satisfactory.

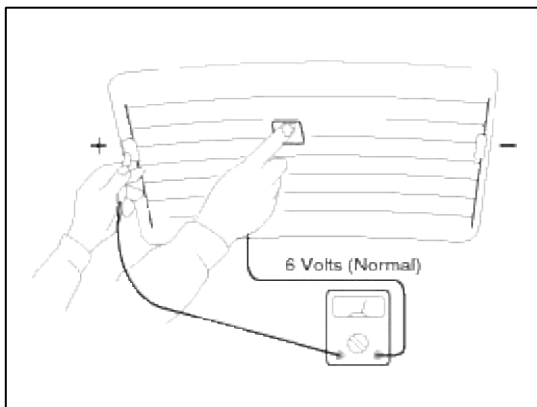


2. If a heater line is burned out between the center point and (+) terminal, the voltmeter will indicate 12V.

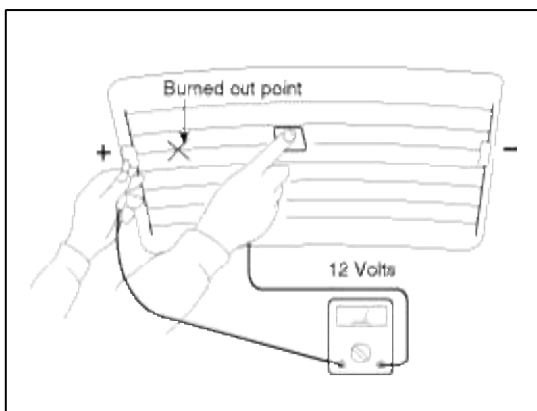


3. If a heater line is burned out between the center point and (-) terminal, the voltmeter will indicate 0V.

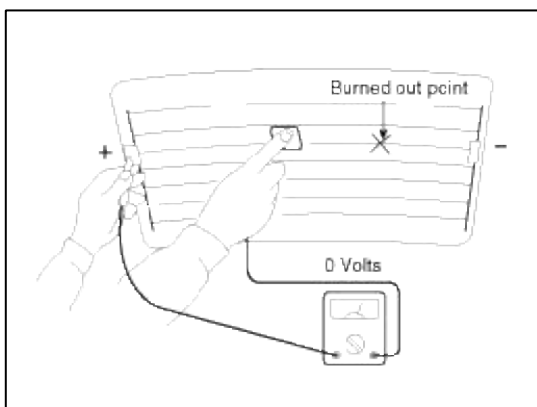

4. To check for open circuits, slowly move the test lead in the direction that the open circuit seems to exist. Try to find a point where a voltage is generated or changes to 0V. The point where the voltage has changed is the open-circuit point.

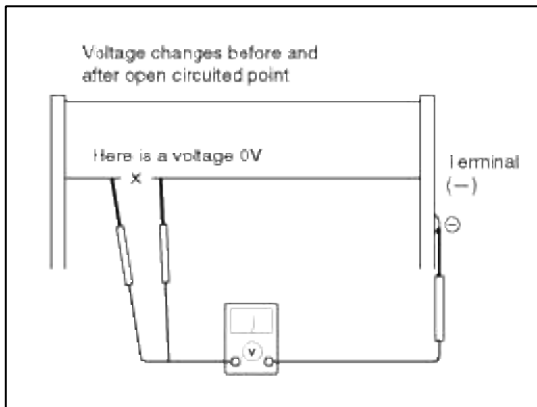

5. Use an ohmmeter to measure the resistance of each heater line between a terminal and the center of a grid line, and between the same terminal and the center of one adjacent heater line. The section with a broken heater line will have a resistance twice as that in other sections. In the affected section, move the test lead to a position where the resistance sharply changes.

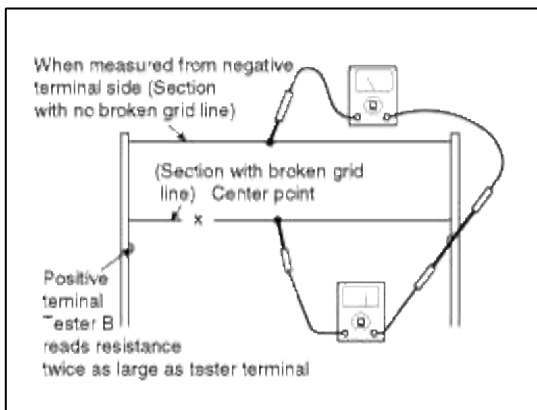


Repair Of Broken Heater Line

Prepare the following items:

1. Conductive paint.
2. Paint thinner.
3. Masking tape.
4. Silicone remover.
5. Using a thin brush:

Wipe the glass adjacent to the broken heater line, clean with silicone remover and attach the masking tape as shown. Shake the conductive paint container well, and apply three coats with a brush at intervals of about 15 minutes apart. Remove the tape and allow sufficient time for drying before applying power. For a better finish, scrape away excess deposits with a knife after the paint has completely dried. (Allow 24 hours).

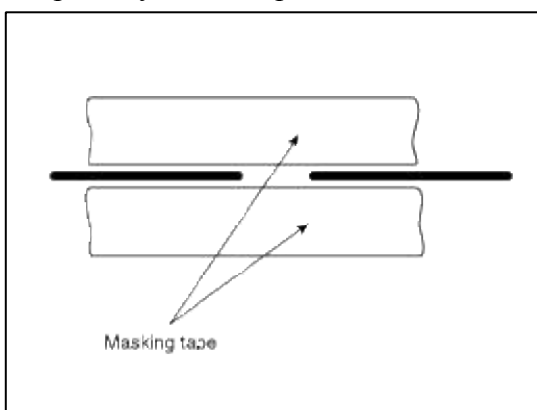

Body Electrical System > Rear Glass Defogger > Rear Glass Defogger Switch > Repair procedures
Inspection

1. The rear glass defogger switch inputs can be checked using the GDS.
2. To check the input value of rear glass defogger switch, select option "Body Control Module".
3. To consult the present input/output value of BCM, "Current DATA". It provides information of BCM input/output conditions of rear defogger relay.

Sensor Name	Value	Unit
<input type="checkbox"/> Canada DRL Status	NONE	-
<input type="checkbox"/> Front Deicer Relay	OFF	-
<input type="checkbox"/> Rear defogger relay	OFF	-
<input type="checkbox"/> Burglar Alarm Horn Relay	OFF	-
<input type="checkbox"/> Start Inhibitor Relay	OFF	-
<input type="checkbox"/> Tailgate/Trunk Release Relay	OFF	-
<input type="checkbox"/> Central door lock switch	OFF	-
<input type="checkbox"/> Power Window Relay	ON	-
<input type="checkbox"/> Assist Door Actuator Position Switch	UNLOCK	-
<input type="checkbox"/> Driver Door Actuator Position Switch	UNLOCK	-
<input type="checkbox"/> Assist Door Key Unlock Switch	OFF	-
<input type="checkbox"/> Driver Door Key Lock Switch	OFF	-
<input type="checkbox"/> Driver Door Key Unlock Switch	OFF	-
<input type="checkbox"/> Turn Left Switch	OFF	-
<input type="checkbox"/> Turn Right Switch	OFF	-
<input type="checkbox"/> Hazard Switch	OFF	-
<input type="checkbox"/> Central door unlock switch	OFF	-
<input type="checkbox"/> Driver door unlock relay	OFF	-
<input type="checkbox"/> Door unlock relay	OFF	-
<input type="checkbox"/> Door lock relay	OFF	-
<input type="checkbox"/> HID Option	OFF	-

4. To check the input value of rear glass defogger switch in force mode, select option "Actuation Test of smart junction box".


Test Items	Value	Unit
Head Lamp Low Relay		
Head Lamp High Relay		
Front Fog Lamp		
Tail Lamp Relay		
AV Tail		
Burglar horn relay		
Tailgate/Trunk Release Relay		
Starter inhibit relay		
Rear defogger relay		
Front deicer relay		
Central Door Lock Relay		
Central Door Unlock Relay		
Driver Door Unlock Relay		
Power window relay		
Turn Left Signal		
Turn Right Signal		

● Duration Until Stop Button	● Conditions IG. ON	● Result Success	<input type="button" value="Start"/>
			<input type="button" value="Stop"/>


Removal

1. Disconnect the negative(-) battery terminal.


2. Remove the console upper cover (A).
(Refer to the BD group - "Console")

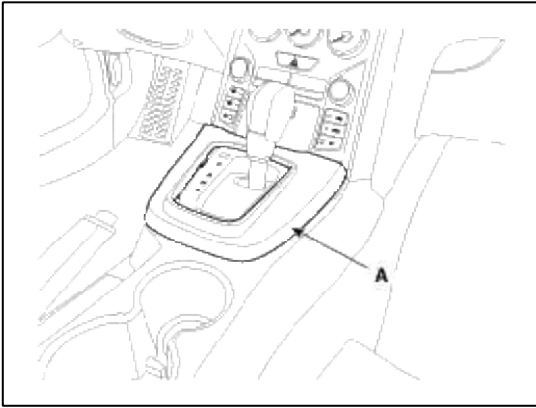

3. Remove the center fascia lower panel (A).
(Refer to the BD group - "Crash pad")

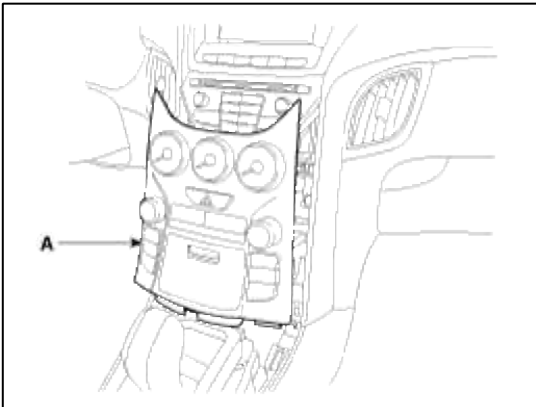

4. Disconnect the heater control unit (A) connectors and cables.

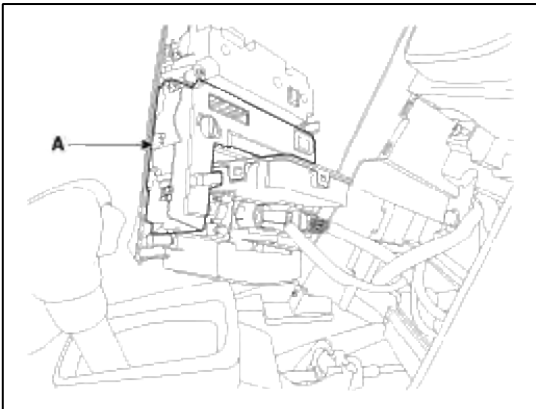


5. Remove the heater control unit contained the rear window defogger switch from the center fascia panel.

Installation

1. Install the heater control unit.
2. Install the center fascia lower panel.
3. Install the console upper cover.

Body Electrical System > Windshield Wiper/Washer > Components and Components Location

Component Location

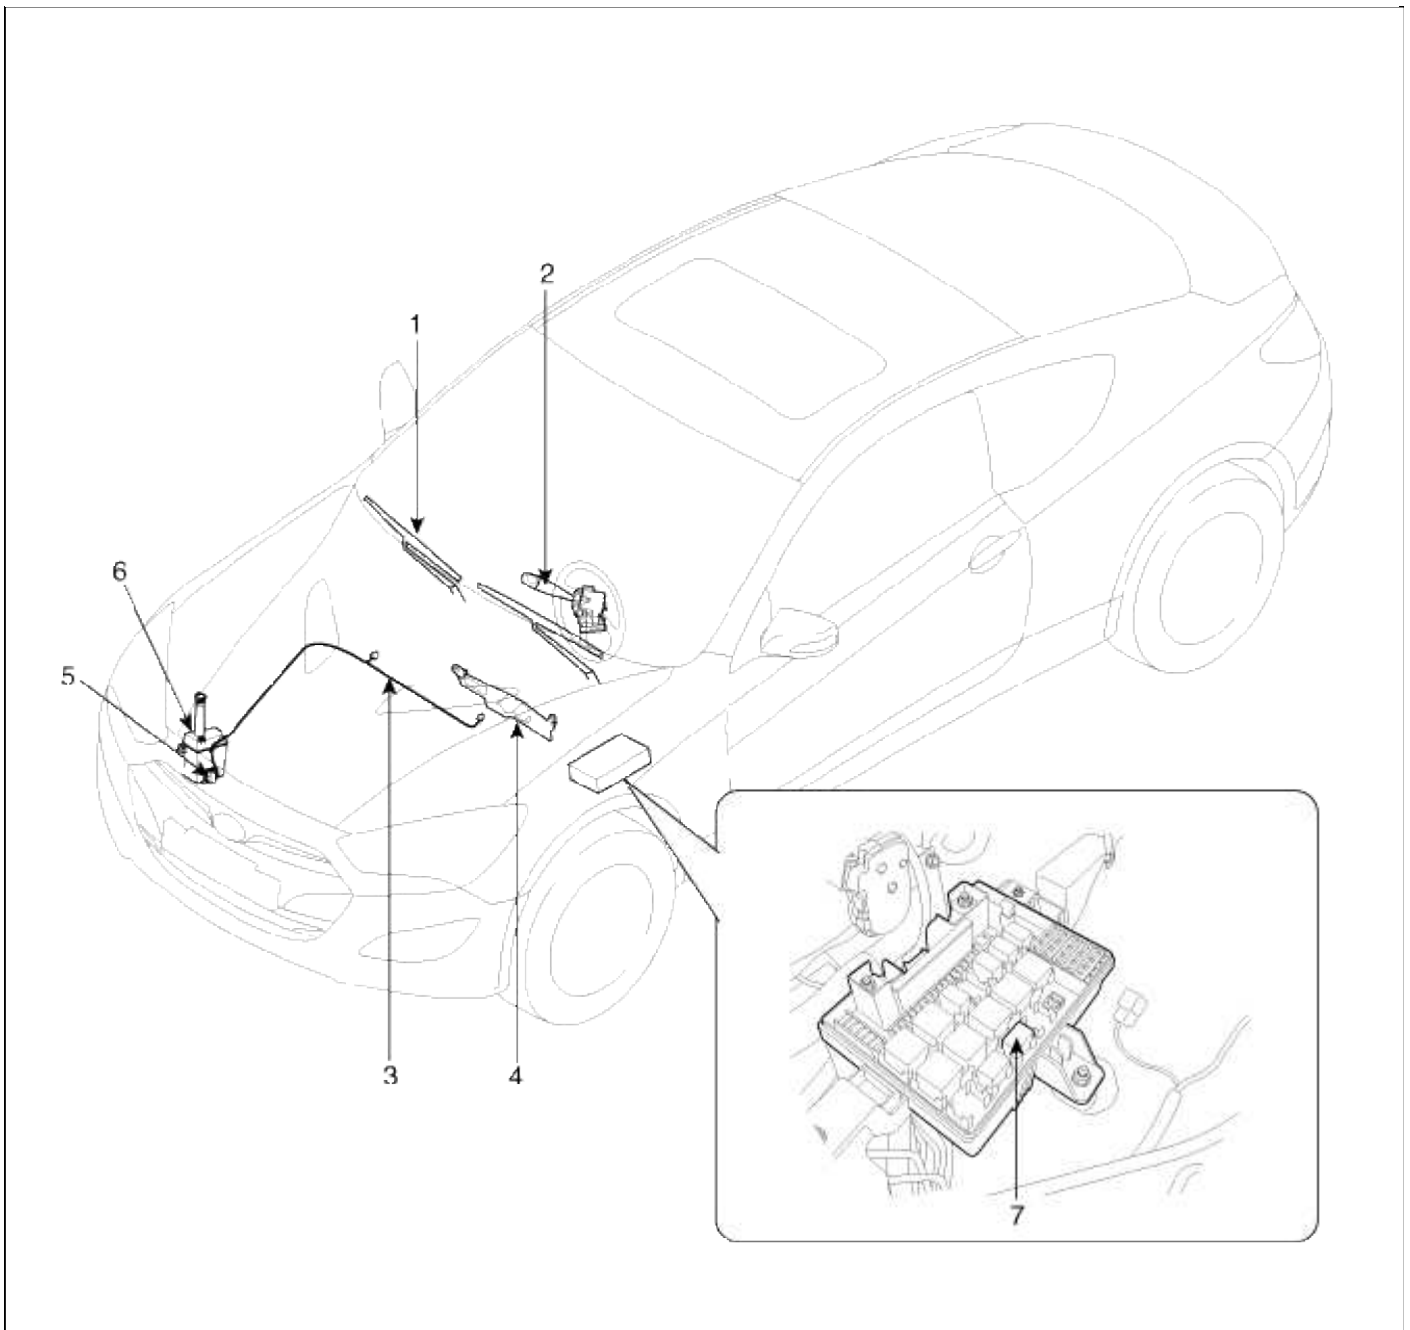


- | | |
|-------------------------------------|--|
| 1. Windshield wiper arm & blade | 5. Washer motor |
| 2. Wiper & washer switch | 6. Washer reservoir |
| 3. Windshield washer hose | 7. Wiper relay (Engine room relay box) |
| 4. Windshield wiper motor & linkage | |

Body Electrical System > Windshield Wiper/Washer > Windshield Wiper-Washer Switch > Repair procedures

Inspection

Check for continuity between the terminals while operating the wiper and washer switch. If it is not normal condition, replace wiper and wiper switch.

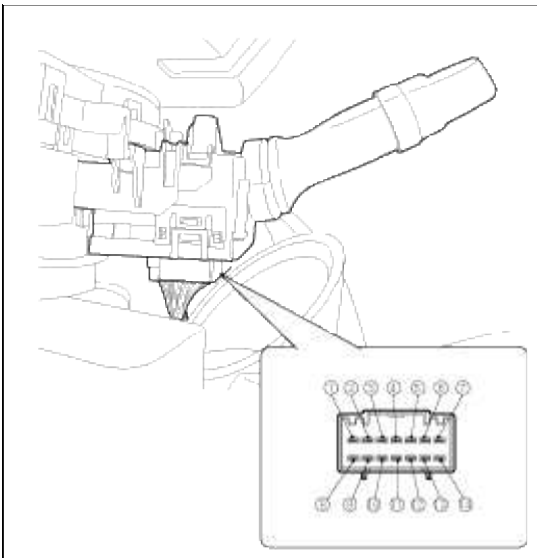

Wiper Switch


Terminal Position	3	9	2	8	10	1	4	5
MIST	○	○			○	○		
OFF	○	○						
INT	○	○		○	○		○	○
LOW	○				○			
HI		○		○				

Washer Switch

Terminal Position	10	11
OFF		
ON	○	○

Removal

1. Remove the steering column upper and lower shrouds after removing 3 screws.
2. Remove the wiper switch(A) by releasing the part.

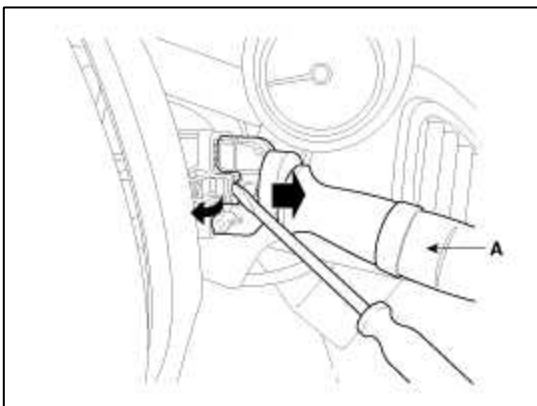


Installation

1. Install the wiper switch.
2. Install the steering column upper and lower shrouds.

Body Electrical System > Windshield Wiper/Washer > Front Wiper Motor > Components and Components Location

Component Location

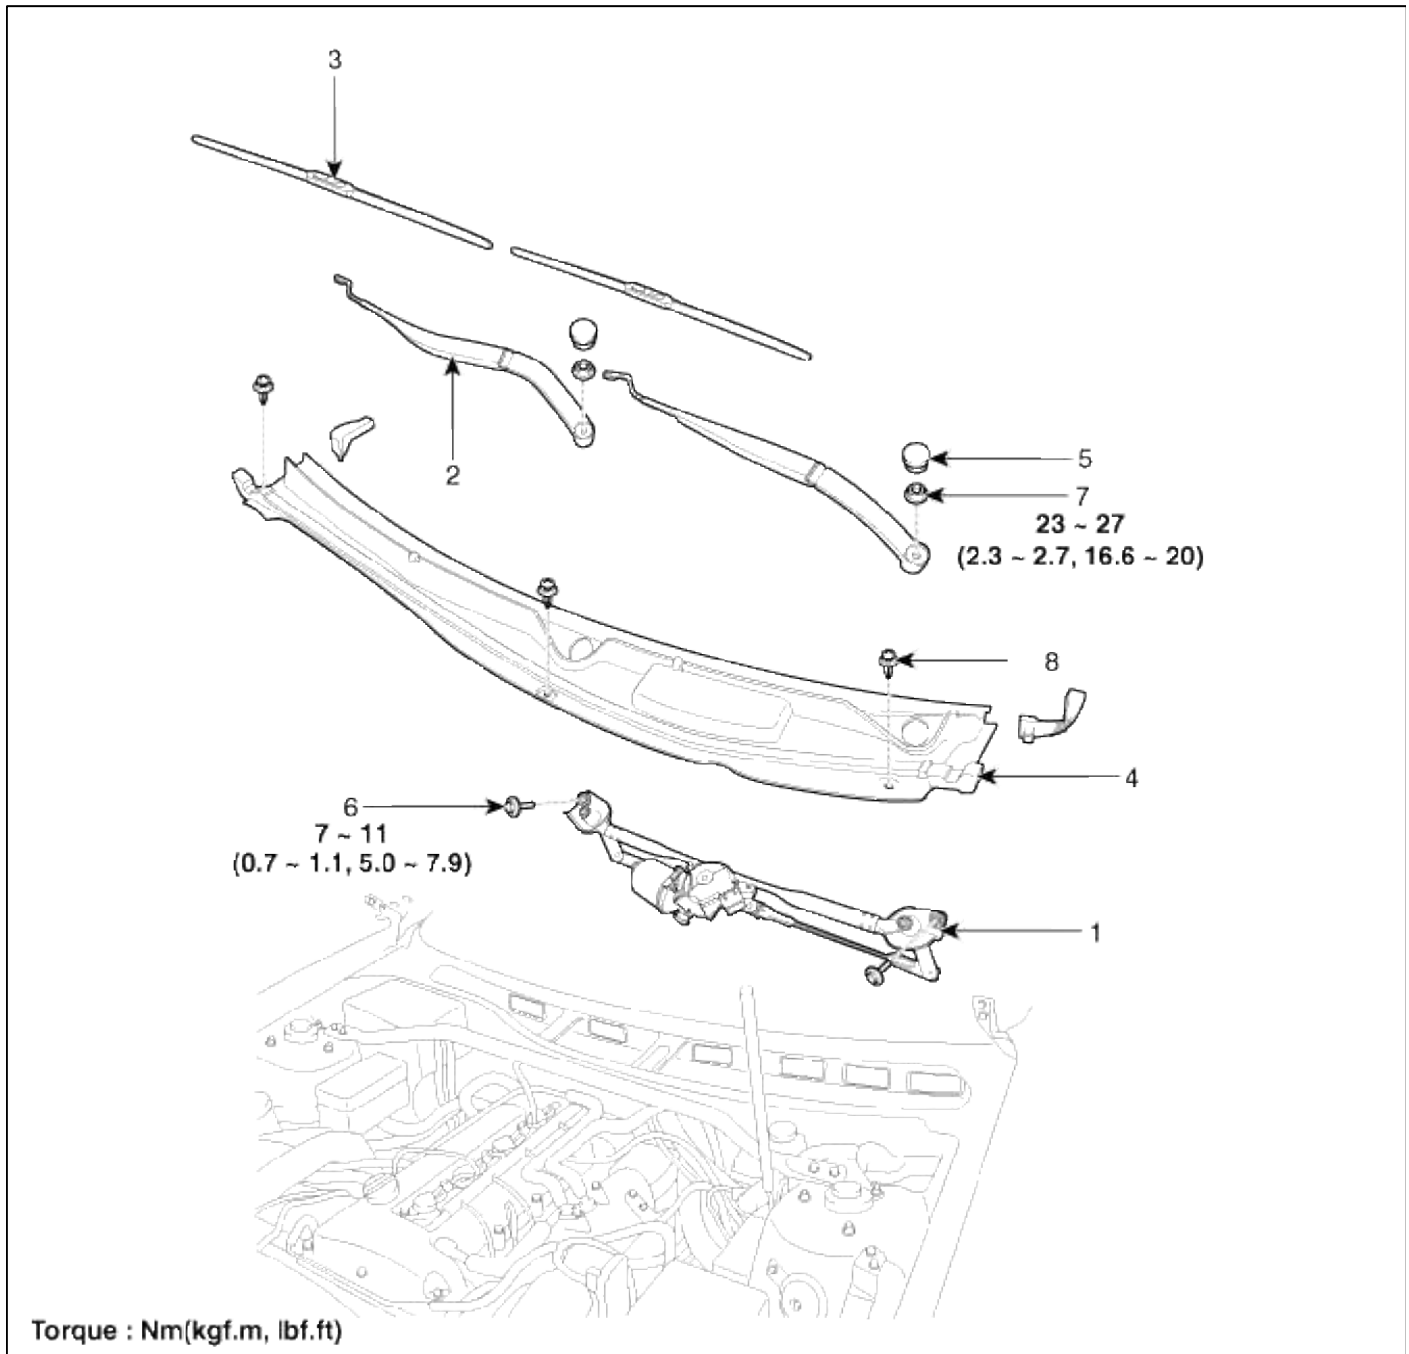

1. Wiper motor & linkage assembly
2. Wiper arm
3. Wiper blade
4. Cowl top cover


5. Cap
6. Bolt
7. Nut
8. Rivet

Body Electrical System > Windshield Wiper/Washer > Front Wiper Motor > Repair procedures

Inspection

Speed Operation Check

1. Remove the connector (A) from the wiper motor.

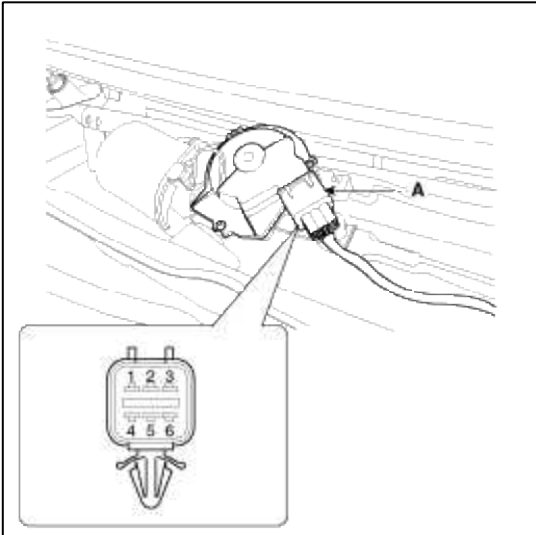


2. Attach the positive (+) lead from the battery to terminal 5 and the negative (-) lead to terminal 2.
3. Check that the motor operates properly.

Terminal Position	4	5	3	1
OFF	○	○	○	○
LOW		○	○	○
HIGH		○	○	

Removal


1. Remove the wiper arm mounting nut (B) after removing the wiper cap (A).

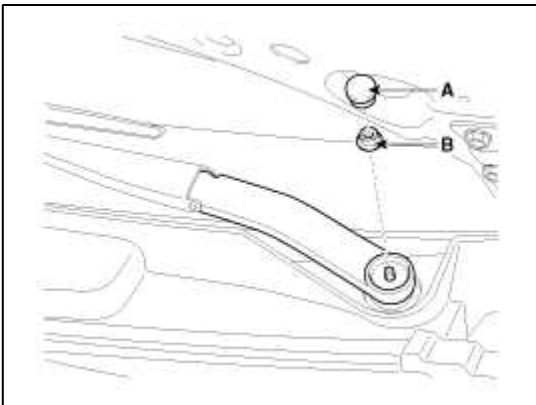


2. Remove the windshield wiper arm (A) and blade (B).

Tightening torque :


23~27 Nm (2.3~2.7 kgf.m, 16.6~20 lbf.ft)

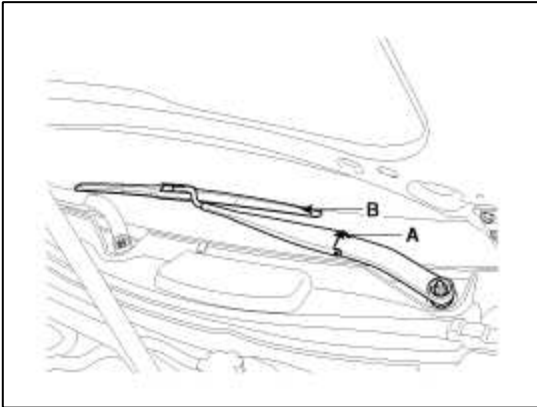


3. If necessary of removing the wiper blade, push in the bottom of the wiper blade clip (A) and remove the wiper blade from the inside radius of the wiper arm.

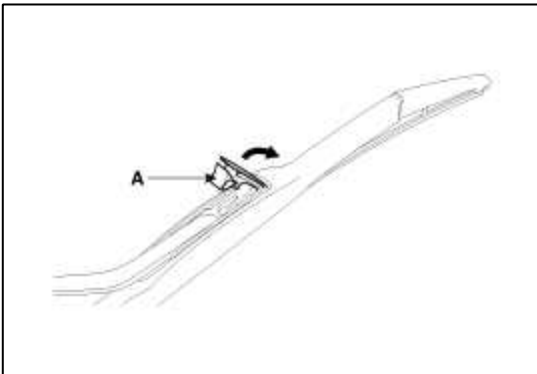

4. Remove the weather strip then remove the cowl top cover (A) after removing 3 rivets.

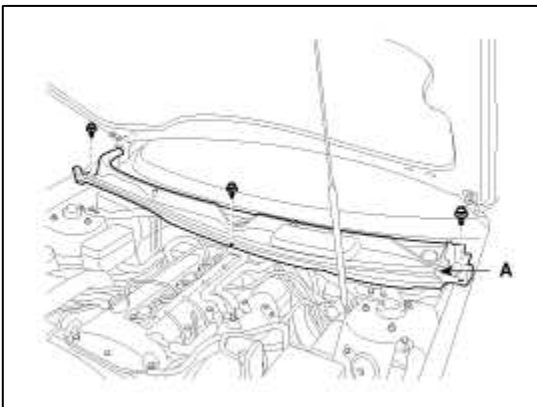


5. Disconnect the wiper motor connector (A).

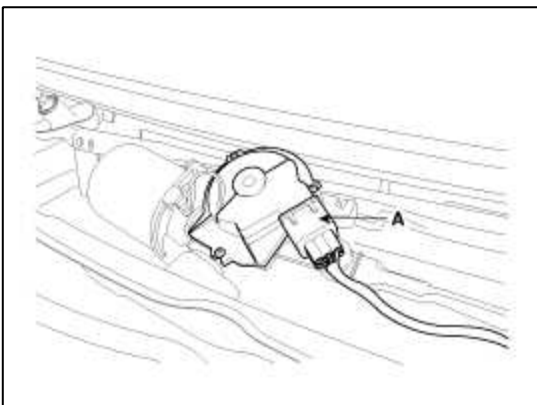

6. Remove the windshield wiper motor and linkage assembly (A) after removing 2 bolts.

Tightening torque :


7~11Nm (0.7~1.1, kgf.m, 5.0~7.9 lbf.ft)

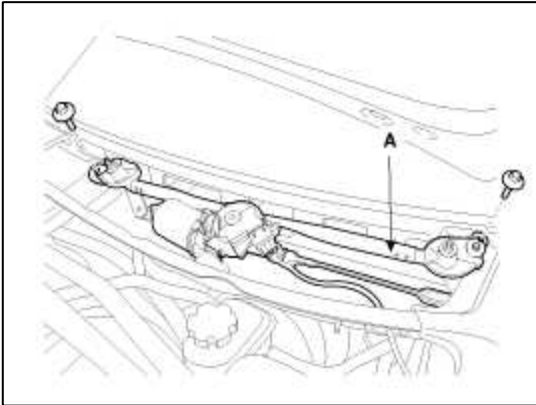

Installation


1. Install the wiper arm and blade to the specified position.

Specified position	A	B
Distance [in (mm)]	1.49 ± 0.2 (38 ± 5)	1.97 ± 0.2 (50.1 ± 5)

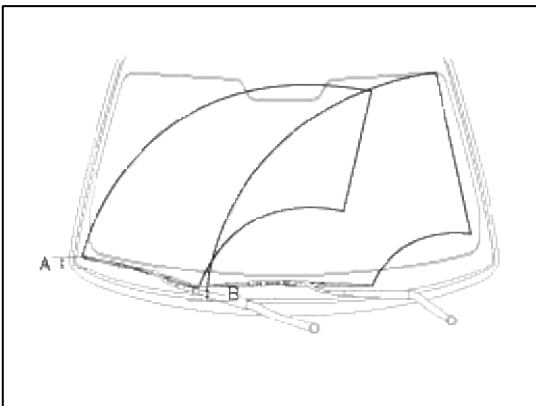

2. Set the washer nozzle on the specified spray position.

Specified position	Distance [in (mm)]
A	21.1 (535)
B	21.1 (535)
C	17.0 (432)
D	17.0 (432)
E	24.4 (620)
F	20.3 (515)
G	20.3 (515)
H	24.4 (620)
I	21.3 (540)

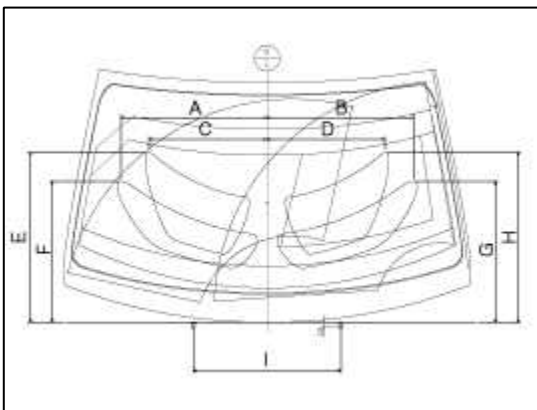

Body Electrical System > Windshield Wiper/Washer > Front Washer Motor > Repair procedures

Inspection

1. With the washer motor connected to the reservoir tank, fill the reservoir tank with water.

NOTE


Before filling the reservoir tank with water, check the filter for foreign material or contamination. if necessary, clean the filter.

2. Connect positive (+) battery cables to terminal 1 and negative (-) battery cables to terminal 2 respectively.
3. Check that the motor operates normally and the washer motor runs and water sprays from the front nozzles.

4. If they are abnormal, replace the washer motor.


Connector No.1 : Windshield washer(+),

2 : Ground

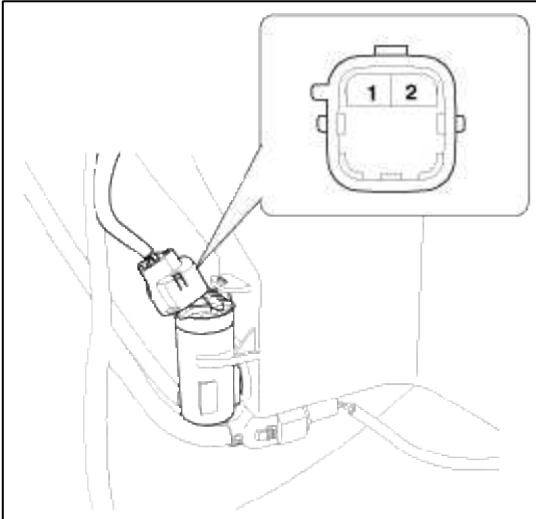

Washer Fluid Level Sensor Switch

1. Disconnect the negative(-) battery terminal.
2. Drain the washer fluid less than 650 cc.
3. Check for continuity between the No. 1 and No.2 terminal in each float position.
There should be continuity when the float is down.
There should be no continuity when the float is up.
4. If the continuity is not as specified, replace the washer fluid level switch

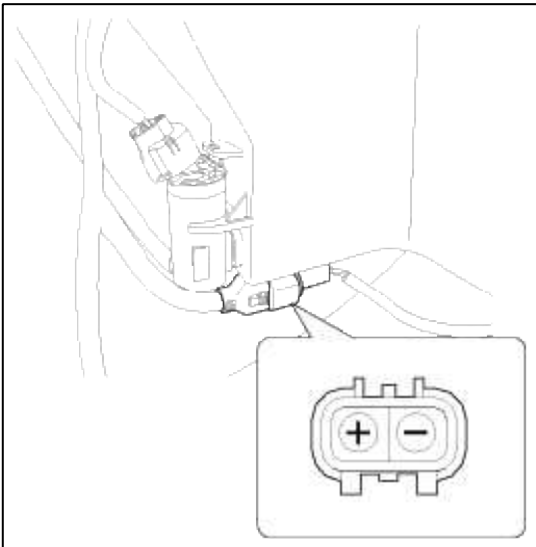

Terminal Position	1	2
Over 650cc		
Under 650cc	○	○

(Tolerance : -50cc ~ +100cc)


Removal

CAUTION


- When servicing the washer pump, be careful not to damage the washer pump seal.
- Do not operate the washer pump before filling the washer reservoir.
Failure to do so could result in premature pump failure.

1. Disconnect the negative (-) battery terminal.


2. Remove the front bumper.
(Refer to BD group - "Front bumper")
3. Remove the washer hose and disconnect the washer motor connector(A) and level sensor connector(B).

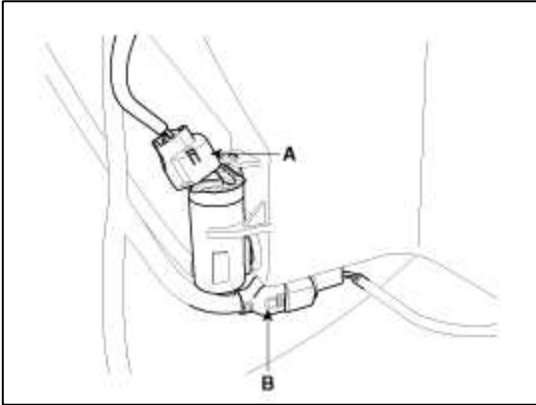


4. Remove the washer motor(A).

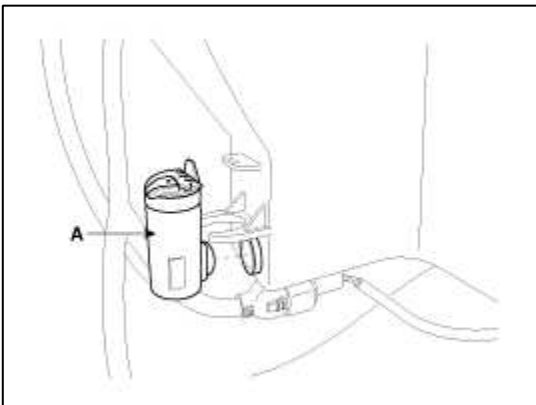

5. Remove the funnel part(A) of reservoir after loosening the mounting bolt(1EA).

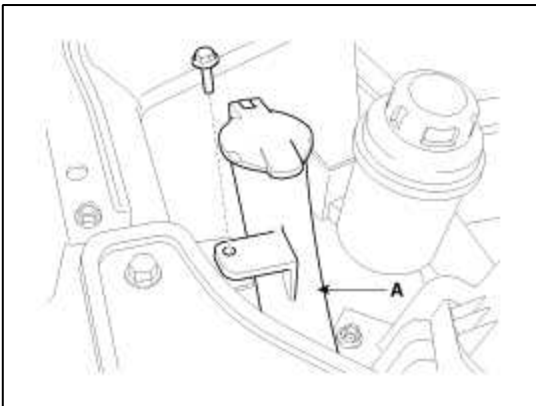

6. Remove the washer reservoir (A) after removing 2 bolts.

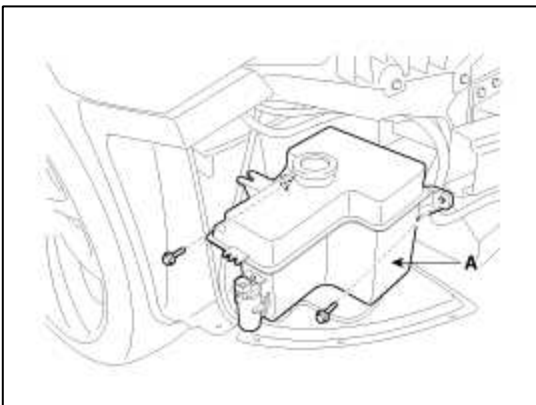


1. Install the washer reservoir.

NOTE

Before installing the pump motor, check the filter for foreign material or contamination. if necessary, clean the filter into the pump motor.

2. Install the funnel.
3. Install the washer motor.
4. Install the washer hose.
5. Connect the washer motor connector and level sensor connector.
6. Install the front bumper.

Body Electrical System > Electro chromic Inside Rear View Mirror > Components and Components Location**Components**

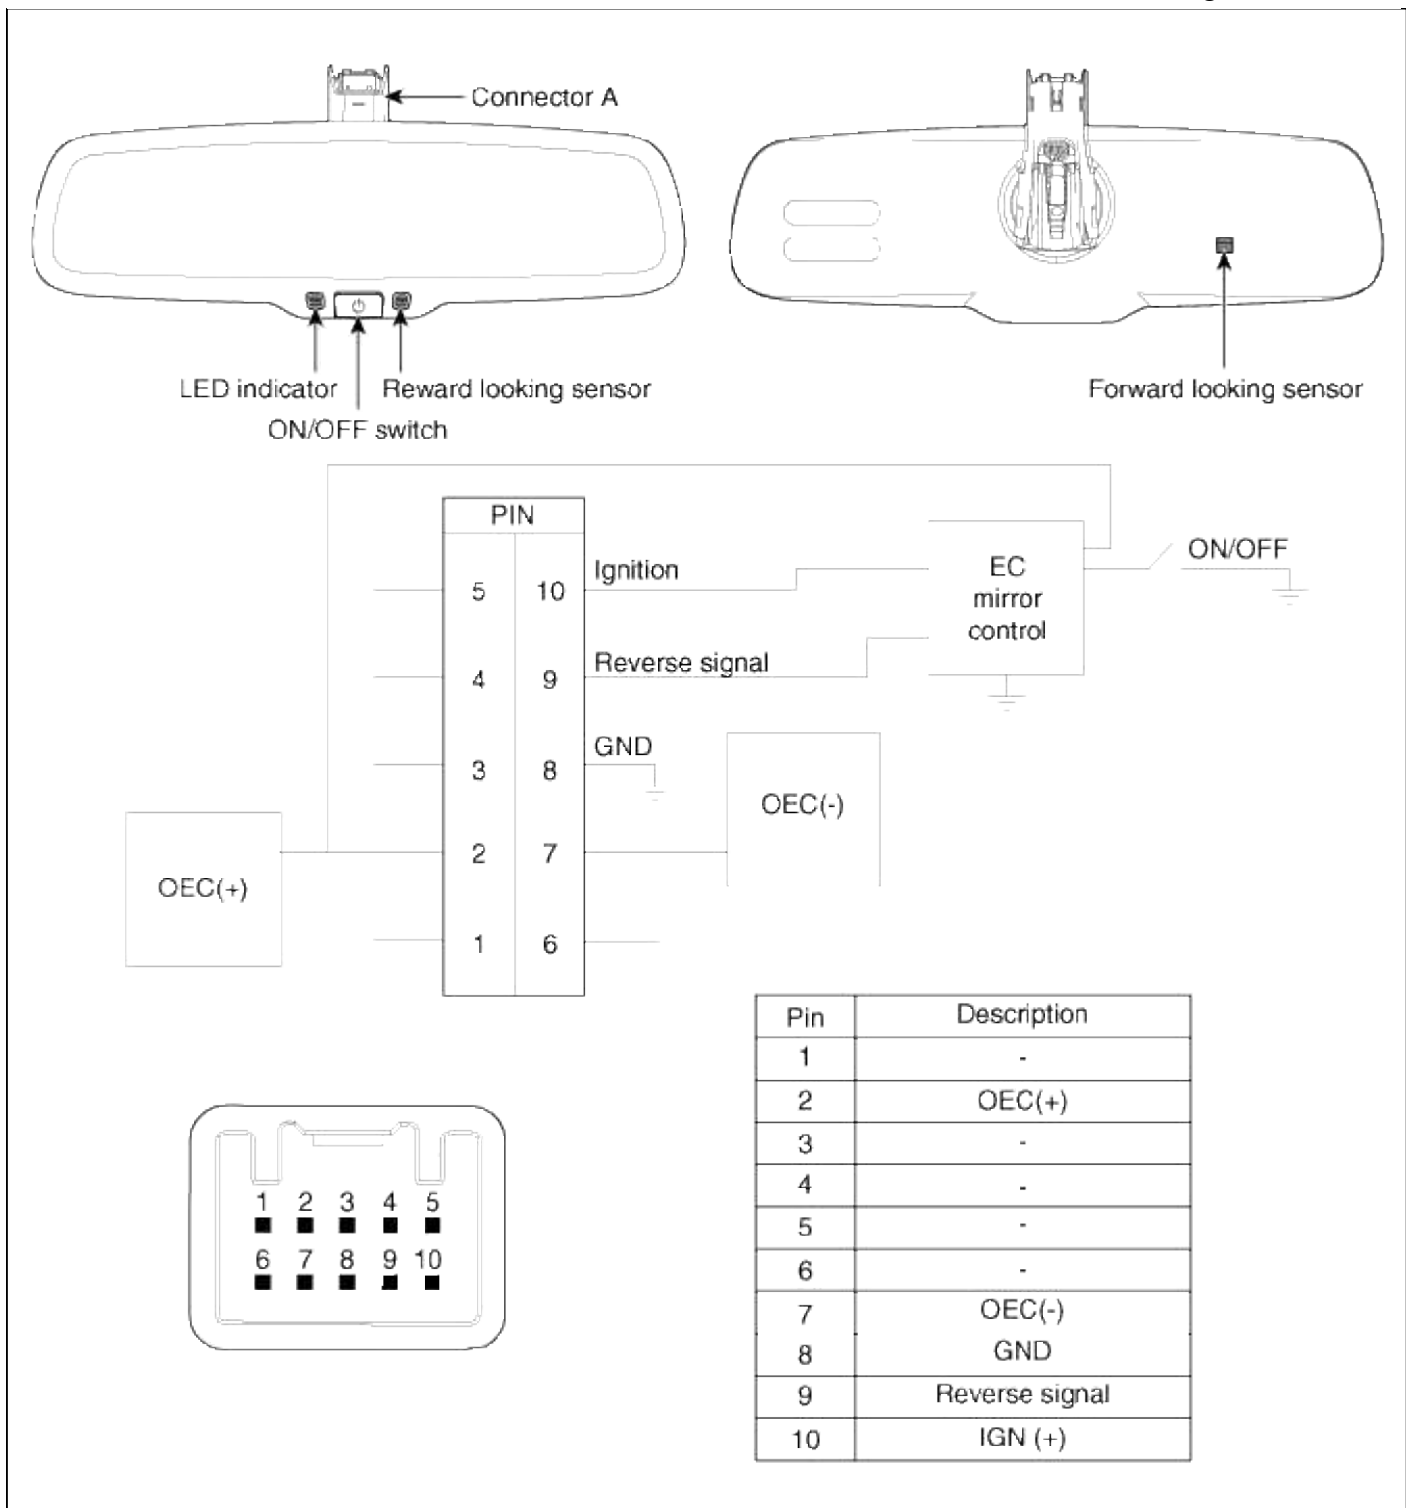


Body Electrical System > Electro chromic Inside Rear View Mirror > Description and Operation

Description

The ECM (Electro Chromatic inside rear view Mirror) is for dimming the reflecting light from a vehicle behind at night, in order the user not to be dazzled by the light. The forward facing sensor detects brightness of the surroundings, while the rearward looking sensor detects the strength of the reflecting light so that adjusts the reflexivity of the mirror in the range of 7~85%. But, when the reverse gear is engaged, it stops functioning.

1. The forward facing sensor sees if the brightness of the surroundings is low enough for the mirror to operate its function.
2. The rearward looking sensor detects glaring of the reflecting light from a vehicle behind.

3. The ECM is darkened to the level as determined by the rearward looking sensor. When the glaring is no longer detected, the mirror stops functioning.
 1. LED indicator
 2. ON/OFF Switch
 3. Rearward looking sensor
 4. Forward facing sensor

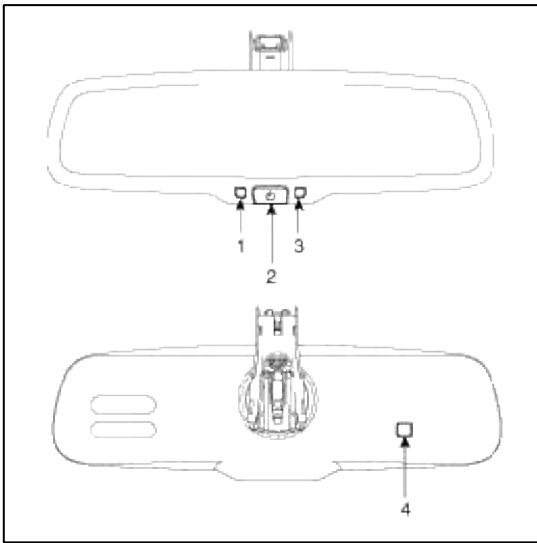

Body Electrical System > Electro chromic Inside Rear View Mirror > Repair procedures

Inspection

Check it by the procedure below to see if the function of the ECM is normal.

1. Turn the ignition key to the "ON" position.
2. Cover the front sensor to stop functioning.
3. Shine a light at the rear sensor.
4. The ECM should be darkened as soon as the rear sensor detects the light.


NOTE

If this test is performed in daytime, the ECM may be darkened as soon as the front sensor is covered.


5. When the reverse gear is engaged, the ECM should not be darkened.
6. When heading lights to both the front and rear sensors, the ECM should not be darkened.

Removal

1. Remove the mirror wiring cover (A).

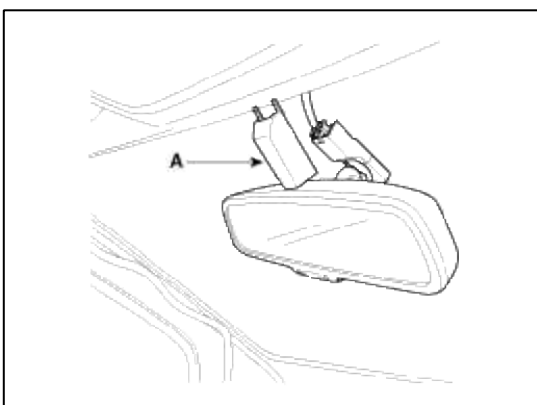

2. Remove the screw (A) and disconnect the mirror connector (B).

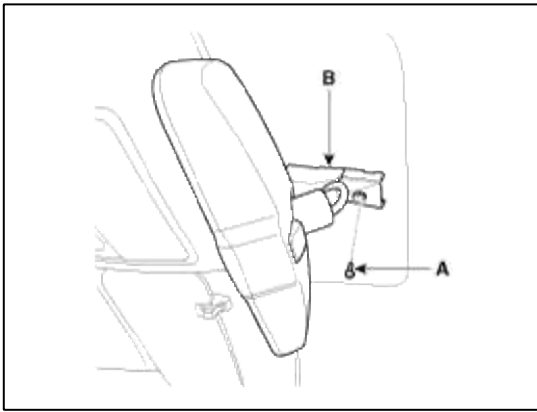

NOTE

Take care not to damage the mounting bracket during removal.

Installation

1. Install the mirror assembly.
2. Install the mirror wiring cover and connector.

Body Electrical System > Electro chromic Inside Rear View Mirror > Compass Mirror > Description and Operation

Description

The compass feature is designed to be integrated into an electro chromic interior rearview mirror.

The mirror assembly shall display a compass heading.

The compass mirror then take the sensor information to determine static field strengths and rotating field information to determine an accurate compass heading.

Specification

Item	Standard value
Rate voltage	DC 12V
Operating voltage range	DC9 ~ 16V
Operating temperature range	-30 ~ +65°C
Direction display	8
Renewal time	2 sec.

Switch Point Accuracy


The compass module shall, while compensating for the vehicle magnetic fields, until the Earth's varying magnetic fields to determine direction.

[Switch points]

Switch point	Heading \pm 10°
N - NE	22.5
NE - E	67.5
E - SE	112.5
SE - S	157.5
S - SW	202.5
SW - W	247.5
W - NW	292.5
NW - N	337.5

NOTE

There should be hysteresis at each switch point.
Switch points between the 8 cardinal directions, these switch points are $\pm 10^\circ$

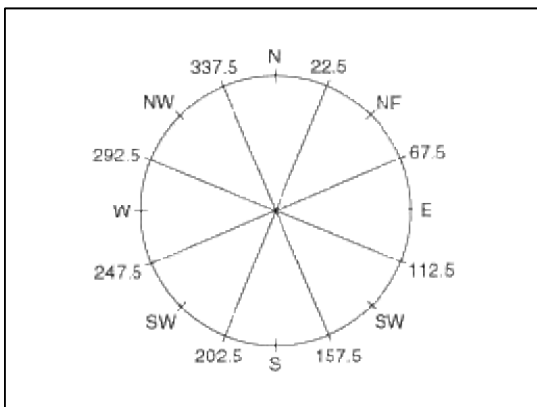**Compass display interval**

Compass display should be updated at every two seconds.


Function

The compass can be turned ON and OFF and will remember the last state when the ignition is cycled. To turn the display feature ON/OFF :

1. Press and release the feature control button (A) to turn the display feature OFF.

2. Press and release the feature control button (A) again to turn the display back ON.

Additional options can be set with press and hold sequences of the feature control button (A) and are detailed below.

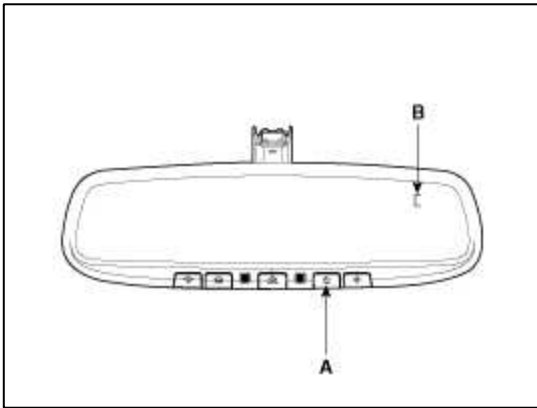

There is a difference between magnetic north and true north. The compass in the mirror can compensate for this difference when it knows the magnetic zone in which it is operating. This is set either by the dealer or by the user.

Body Electrical System > Electro chromic Inside Rear View Mirror > Compass Mirror > Repair procedures

Adjustment

Calibration procedure

If the display read "C", calibrate the compass.

1. Driving the vehicle in a circle at less than 8km/h 3 times or until the compass heading appears.
2. Driving in a circle in right-handed direction and opposite direction are possible, and if the calibration is completed, the compass heading will appear.
3. Keep driving in a circle until a compass heading appears.

To adjust the Zone setting :


1. Determine the desired zone number based upon your current location on the zone maps.
2. Press and hold the Feature Control button for more than 6 but less than 9 seconds, the current zone number will appear on the display (B).
3. Pressing and holding the feature control button (A) again will cause the numbers to increment (Note: they will repeat ...13, 14, 15, 1, 2,..). Releasing the button when the desired zone number appears on the display will set the new zone.
4. Within about 5 seconds the compass will start displaying a compass heading again.

To re-calibrate the compass :

There are some conditions that can cause changes to the vehicle magnets. Items such as installing a ski rack or a antenna or even some body repair work on the vehicle can cause changes to the vehicle's magnetic field. In these situations, the compass will need to be re-calibrated to quickly correct for these changes.


1. Press and hold the feature control button (A) for more than 9 seconds. When the compass memory is cleared, a "C" will appear in the display (B).
2. To calibrate the compass, drive the vehicle in 2 complete circles at less than 8 KPH (5 MPH).

Zone Map

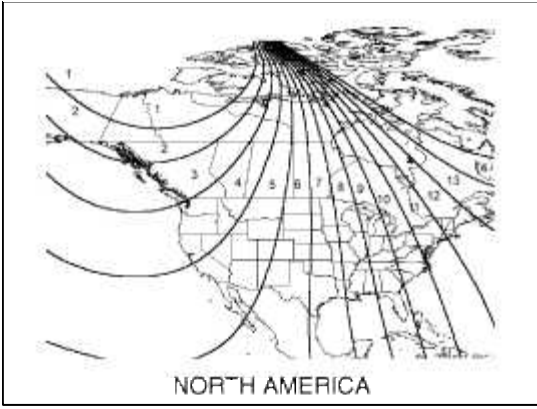

Body Electrical System > Hands Free System > Components and Components Location

Components

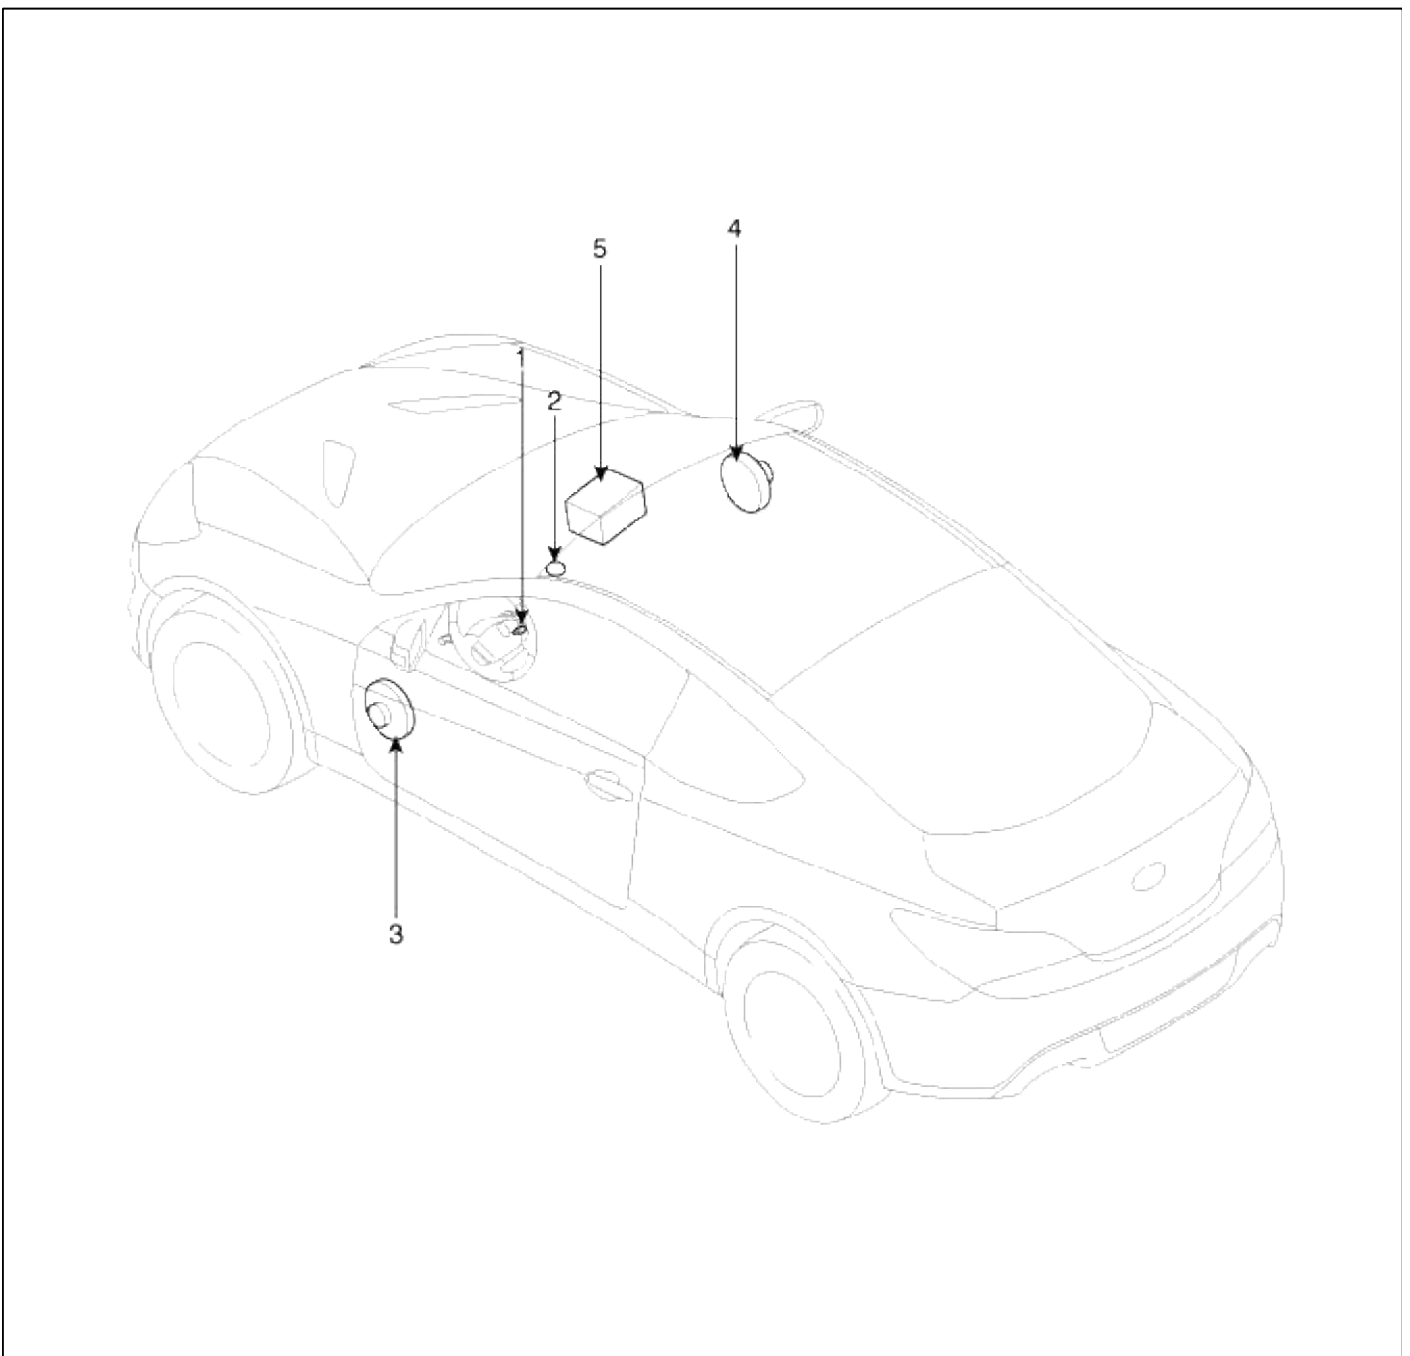


1. Hands free call switch	4. Front right speaker
2. Mic	5. Audio head unit (hands free control)
3. Front left speaker	

There is no hands free jack. This system supports Bluetooth(wireless system).

Body Electrical System > Hands Free System > Description and Operation

Function

Bluetooth Phone Operation

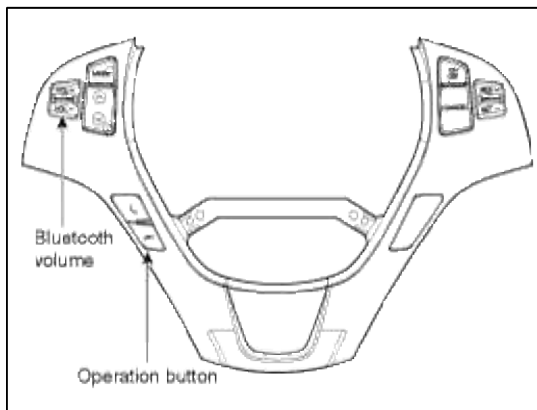

General Features




- This audio system supports Bluetooth hands-free and stereo headset features.
- HANDS-FREE feature: Making or receiving calls wirelessly.
- STEREO-HEADSET feature: Playing music from cellular phones (that supports A2DP feature) wirelessly.

NOTE

1. The phone must be paired to the system before using Bluetooth features.
2. Only one selected (connected) cellular phone can be used with the system at a time.
3. Some phones are not fully compatible with this system.

Body Electrical System > Hands Free System > Hands Free Switch > Schematic Diagrams

Circuit Diagram

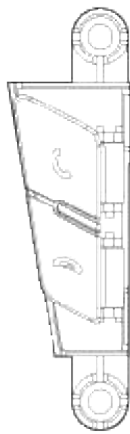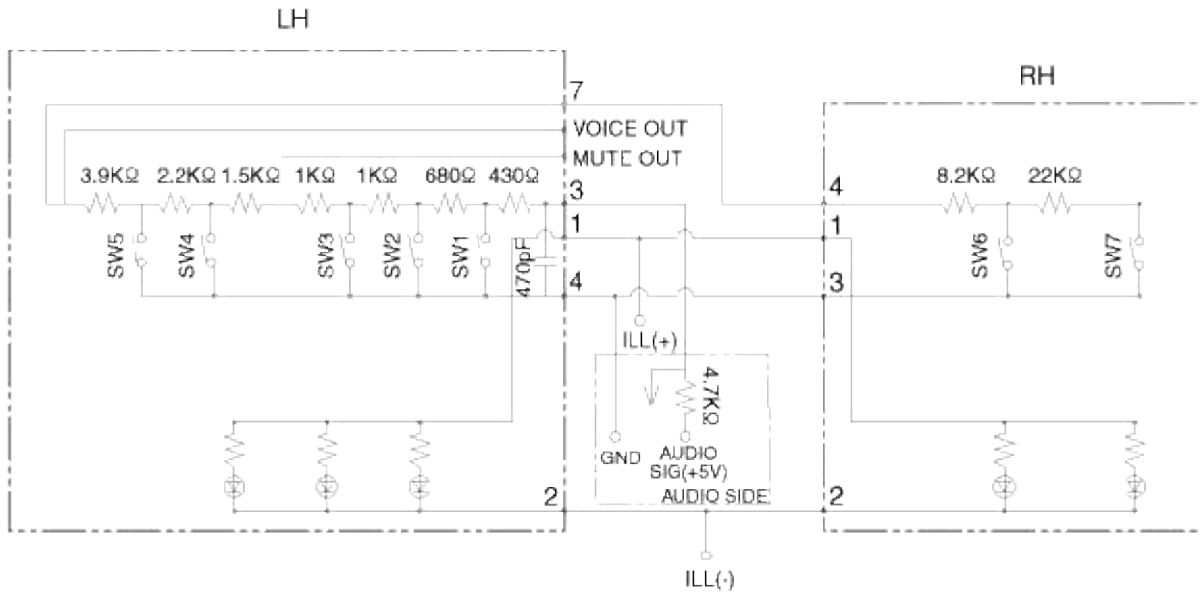

[LH]


Pin NO.	Connector
1	-
2	-
3	Bluetooth in
4	Audio(-)
5	ILL(-)
6	ILL(+)

[LH]

Body Electrical System > Hands Free System > Hands Free Switch > Repair procedures

Inspection


1. Check the hands free remote control switch for resistance between No.3 and No.4 terminals in each switch position.

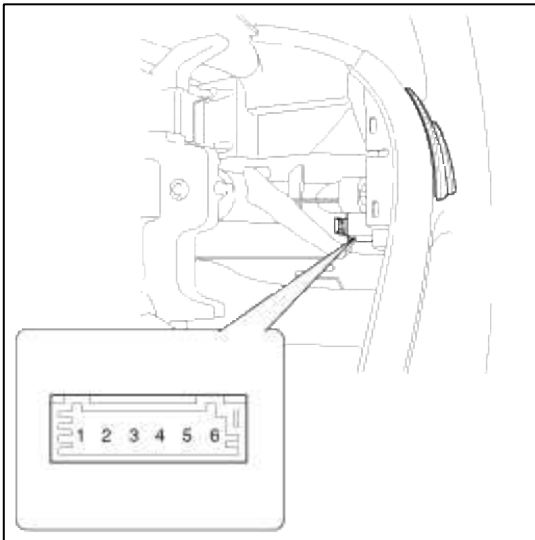


Switch	Connector terminal	Resistance ($\pm 5\%$)
END	3 - 4 (LH)	18.91 k Ω
CALL	3 - 4 (LH)	40.91 k Ω

Removal

1. Disconnect the negative (-) battery terminal.
2. Remove the driver airbag module.
(Refer to the airbag group)
3. Remove the steering wheel.
(Refer to ST group - "Steering column & shaft")
4. Remove the steering wheel cover after loosening the 4 screws.

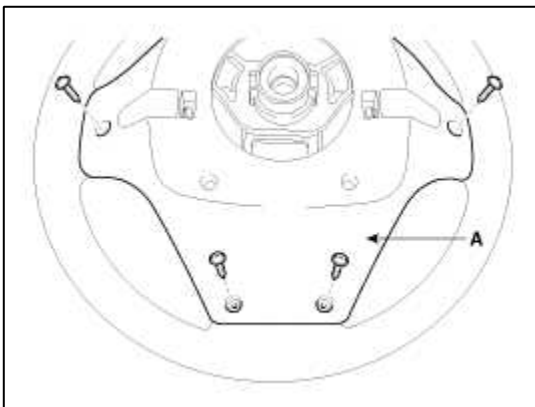

- Remove the hands free remote control switch (A) after removing the steering wheel remote control switch connector and 2 screws.

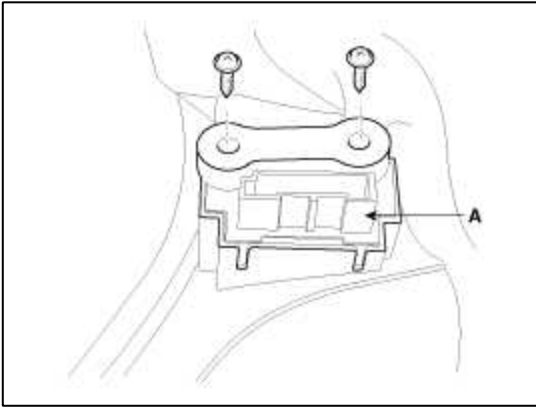

Installation

- Reassemble the steering wheel remote control switch after connecting the connector.
- Reassemble the steering wheel.
- Reassemble the driver airbag module.


NOTE

Make sure the hands free remote control switch and the airbag module connectors are plugged in properly.


Body Electrical System > Hands Free System > Hands Free Mic > Repair procedures

Inspection

- Disconnect the negative(-) battery terminal.
- Remove the hands free mic (A) after loosening the connector from loof top.

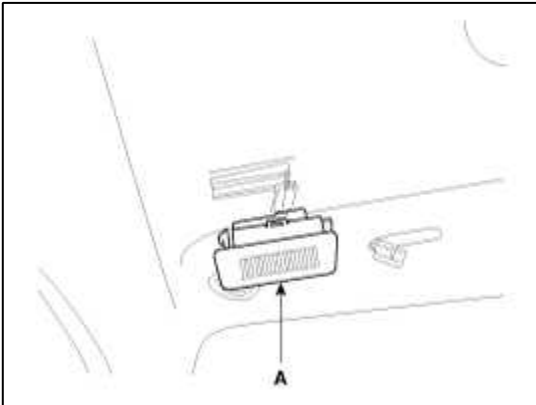


- Check the continuity of Mic between terminals.

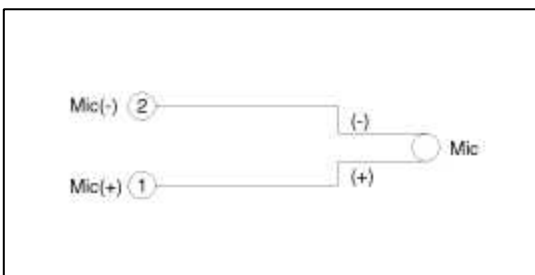

Body Electrical System > Sun Roof > Components and Components Location


Component Location

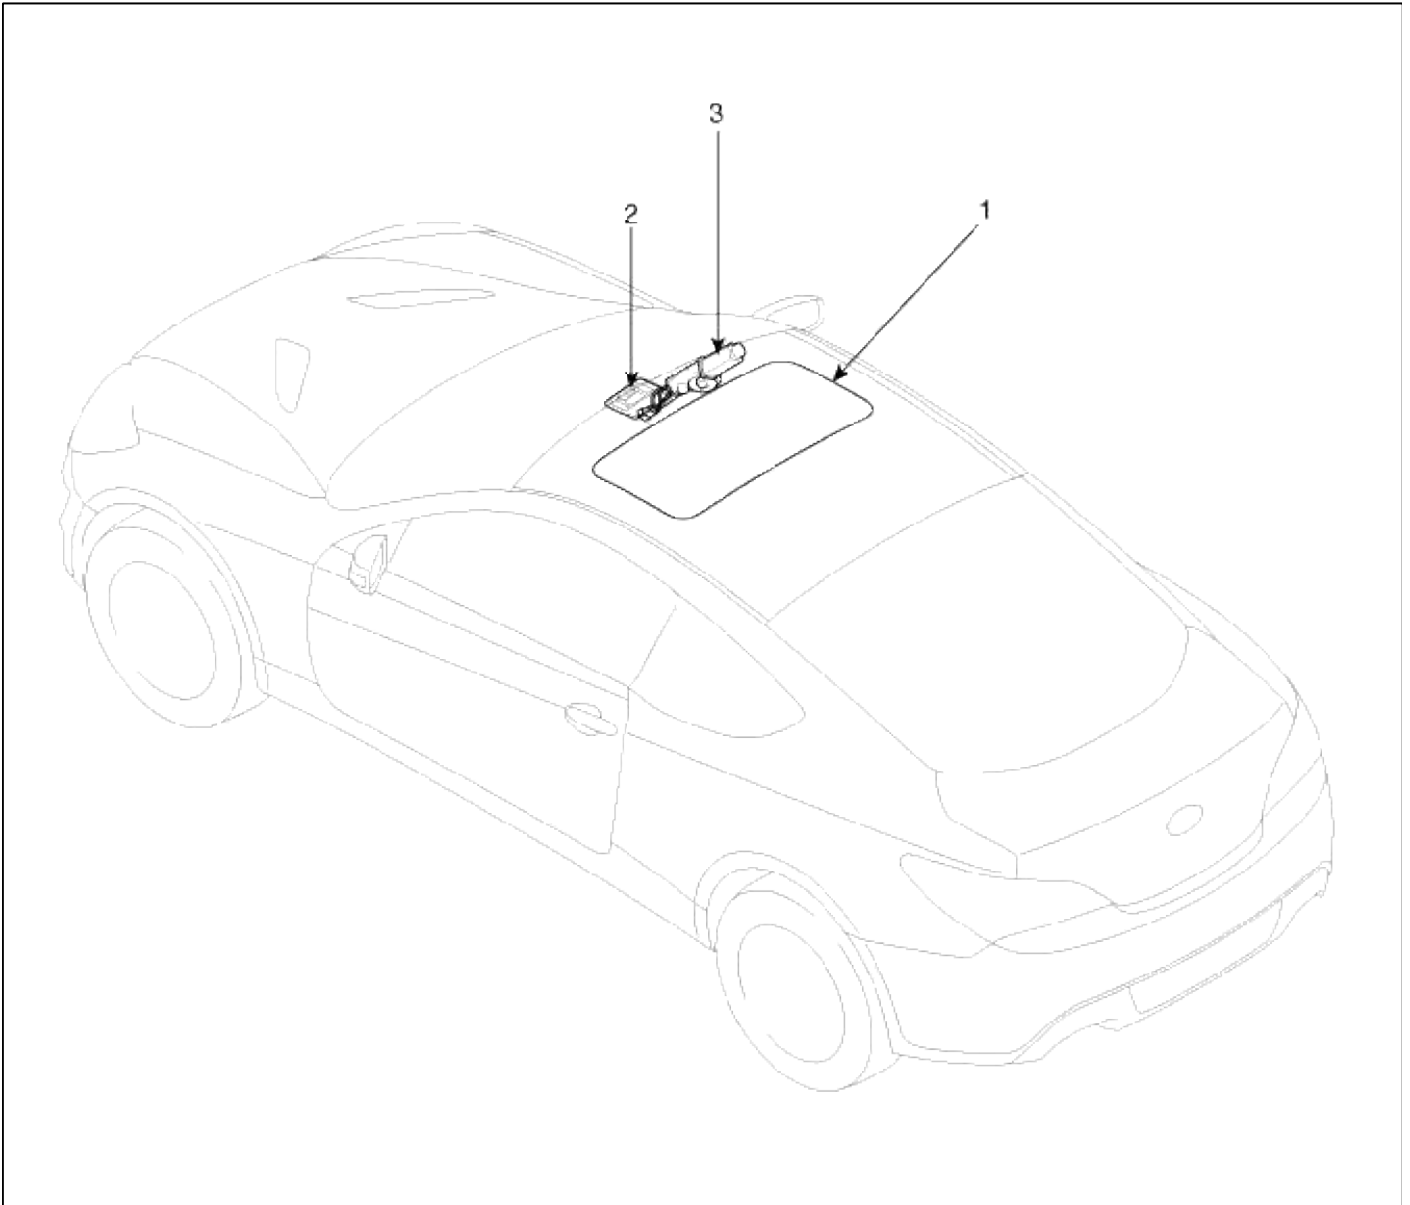

1. Sunroof 2. Sunroof switch	3. Sunroof motor & controller
---------------------------------	----------------------------------

Body Electrical System > Sun Roof > Schematic Diagrams


Circuit Diagram

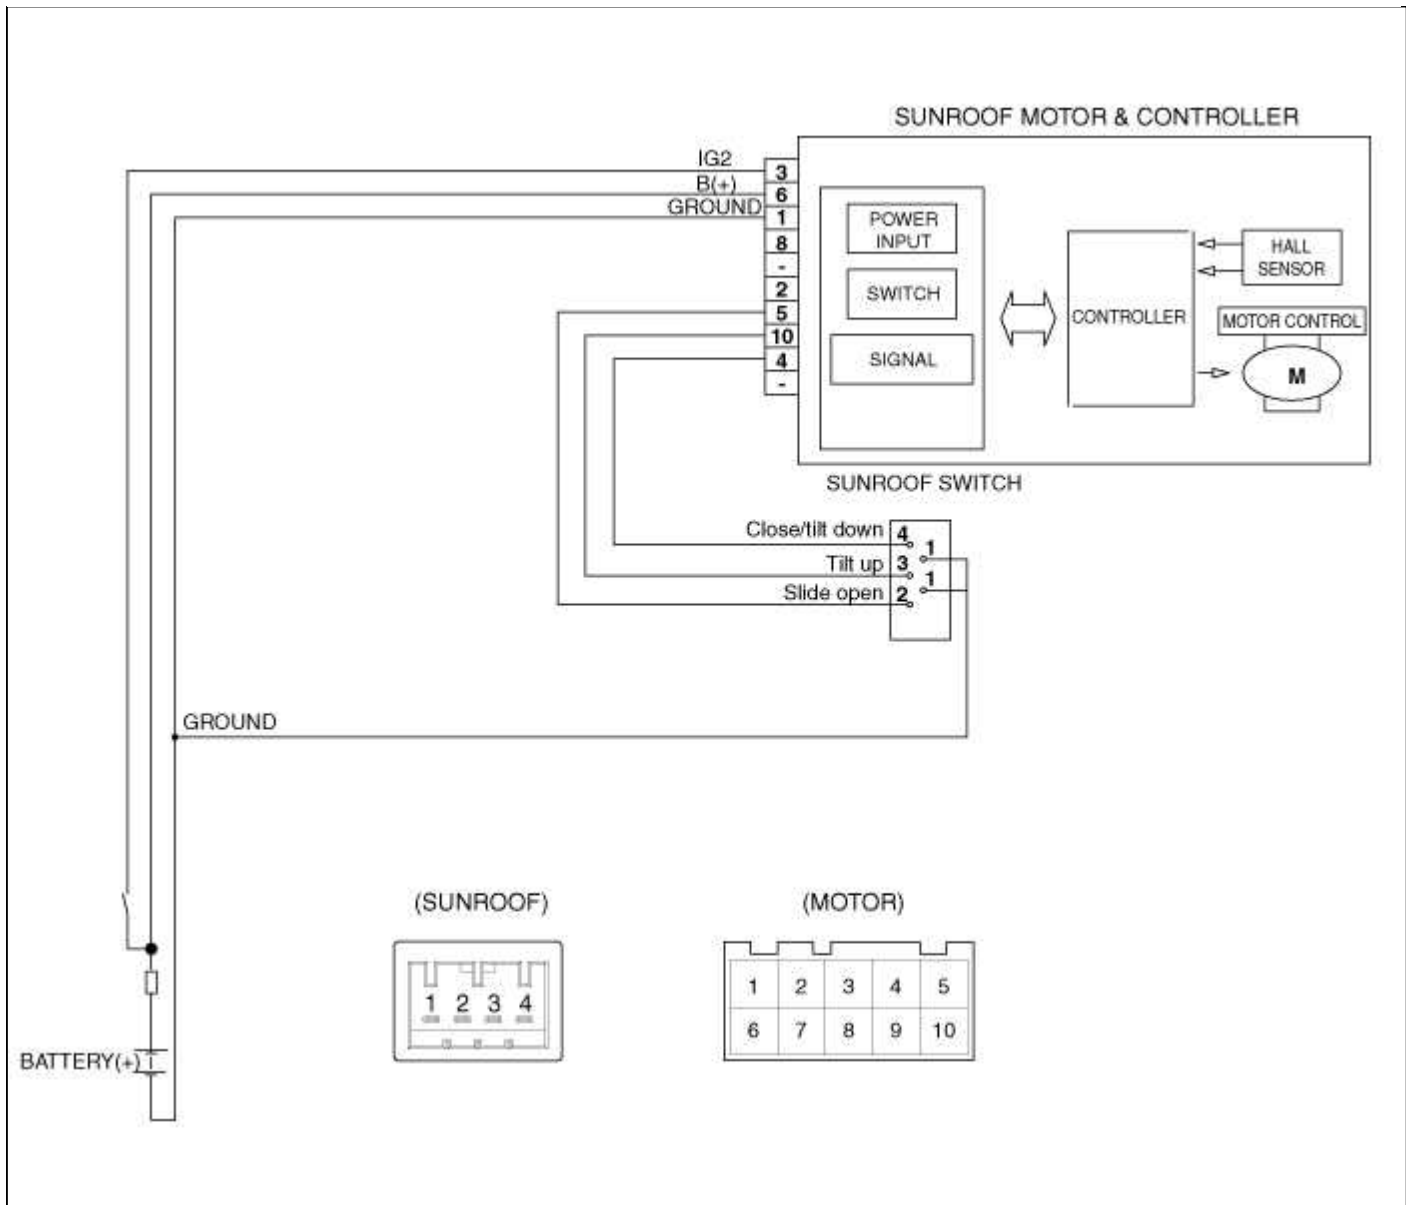


Body Electrical System > Sun Roof > Sunroof Switch > Repair procedures

Inspection

1. Disconnect the negative (-) battery terminal.
2. Open the sunglass case cover from the overhead console then remove the 2 screws holding the overhead console (A).

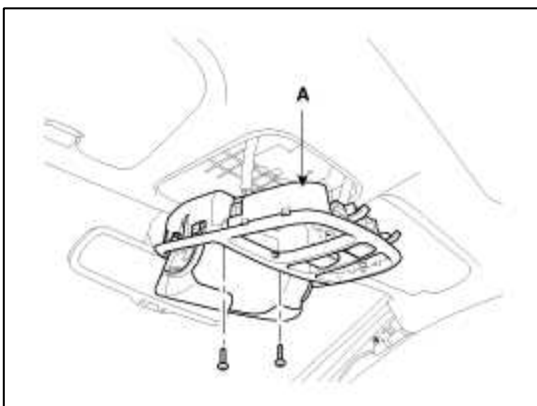

3. Disconnect the connector. Check for continuity between the terminals. If the continuity is not as specified, replace the sunroof switch.

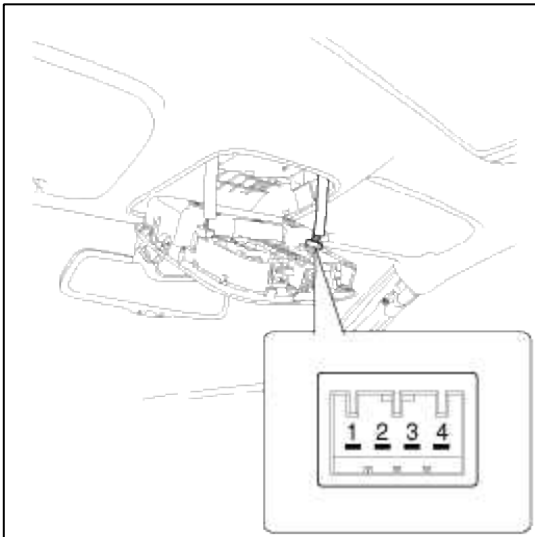


Terminal Position	1	2	3	4
Manual open	○ — ○			
Auto open	○ — ○ — ○			
Manual close Tilt down	○ — ○ — ○ — ○			
Auto close	○ — ○ — ○ — ○			
Manual tilt up	○ — ○ — ○			
Manual tilt down	○ — ○ — ○			

Body Electrical System > Sun Roof > Sunroof Motor > Repair procedures

Inspection

1. Disconnect the negative (-) battery terminal.
2. Open the sunglass case cover from the overhead console then remove the 2 screws holding the overhead console. Disconnect the connector then remove the overhead console lamp assembly from the headliner.
3. Disconnect the sunroof motor(A) connector.

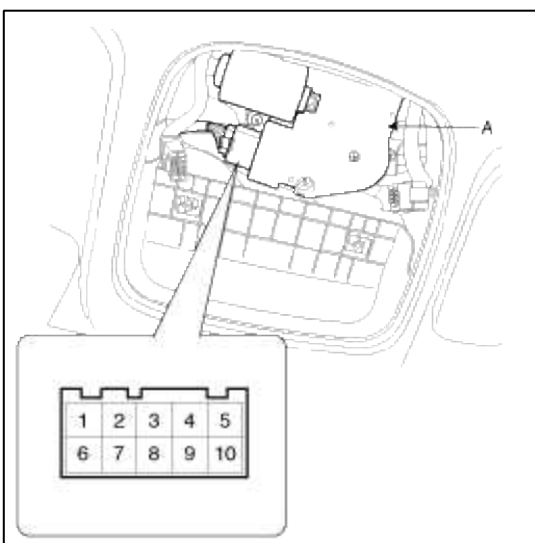

4. Ground the terminals as below table, and check that the sunroof unit operates as below table.

Terminal Position	3	4	5	10
Manual open	⊕		⊖	
Auto open	⊕		⊖	⊖
Manual close Manual tilt down	⊕	⊖		⊖
Auto close	⊕	⊖		⊖
Manual tilt up	⊕			⊖
Manual tilt down	⊕	⊖	⊖	

5. Make these input tests at the connector

If any test indicates a problem, find and correct the cause, then recheck the system.

If all the input tests prove OK, the sunroof motor must be faulty; replace it.

Terminal	Test condition	Test: Desired result
3	IG2 ON	Check for voltage to ground: There should be battery voltage.
1	Under all conditions	Check for continuity to ground: There should be continuity.
6	Under all conditions	Check for voltage to ground: There should be battery voltage.

Replacement

Resetting The Sunroof

Whenever the vehicle battery is disconnected or discharged, or you use the emergency handle to operate the sunroof, you have to reset your sunroof system as follows :


1. Turn the ignition key to the ON position and then close the sunroof completely.
2. Release the sunroof control lever.
3. Press and hold the CLOSE button for more than 10 seconds until the sunroof closed and it has moved slightly.
4. Release the sunroof control lever.
5. Press and hold the CLOSE button once again within 5 seconds until the sunroof do as follows;
 - A. Tilt → Slide Open → Slide Close
Then release the lever.
6. Reset procedure of panorama system is finished.

Protecting Motor From Overheating

In order to protect the sunroof motor from overheating from continuous motor operation, the sunroof ECU controls the Run-time and Cool-time of the motor as follows:

1. The Sunroof ECU detects the Run- time of motor
2. Motor can be operated continuously for the 1st run-time(120 ± 10 sec.).
3. The continuous operation of motor stops after the 1st Run-time(120 ± 10 sec.).
4. Then Motor is not operated for the 1st Cool-time(18 ± 2 sec.).
5. Motor is operated for the 2nd Run-time(10 ± 2 sec.) at the continued motor operation after 1st Cool-time(18 ± 2 sec.)
6. The continuous operation of motor stops operating after the 2nd Run-time(10 ± 2 sec.)
7. Motor is not operated for the 2nd Cool-time(18 ± 2 sec.).

8. Motor repeats the 2nd run-time and 2nd cool-time at the continued motor operation.
- A. In case that motor is not operated continuously, the run-time is increased.
- B. The Run-Time of motor is initialized to "0" if the battery or fuse is reconnected after being disconnected, discharged or blown.

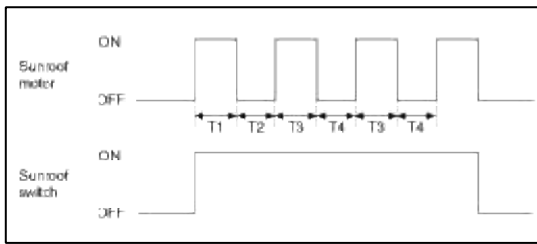

T1 : 120 ± 10 sec., T2 : 18 ± 2 sec.,
 T3 : 10 ± 2 sec., T4 : 18 ± 2 sec.


Body Electrical System > Lighting System > Specifications

Specification


Items		Bulb watt (W)	Bulb type	
Front	Head lamp (High)	55	H7	
	Head lamp (Low)	General	55	H7
		HID	35	D1S
	Turn signal / Position lamp		28/8	PY28/8WLL
	Front fog lamp		35	H8
	Daytime running light		LED	-
	Side marker		5	W5WLL
Rear	Stop / Tail lamp		LED	-
	Back up lamp		16	W16W
	Turn signal lamp		27	PY27WL
	Tail lamp		LED	-
	Side marker		LED	-
	License plate lamp		5 x 2	W5W
Others	Overhead console lamp		10 x 2	W10W
	Luggage lamp		5	Festoon
	Vanity lamp		5	Festoon
	Glove box lamp		5	Festoon
	High mounted stop lamp		LED	-

Body Electrical System > Lighting System > Components and Components Location

Component Location

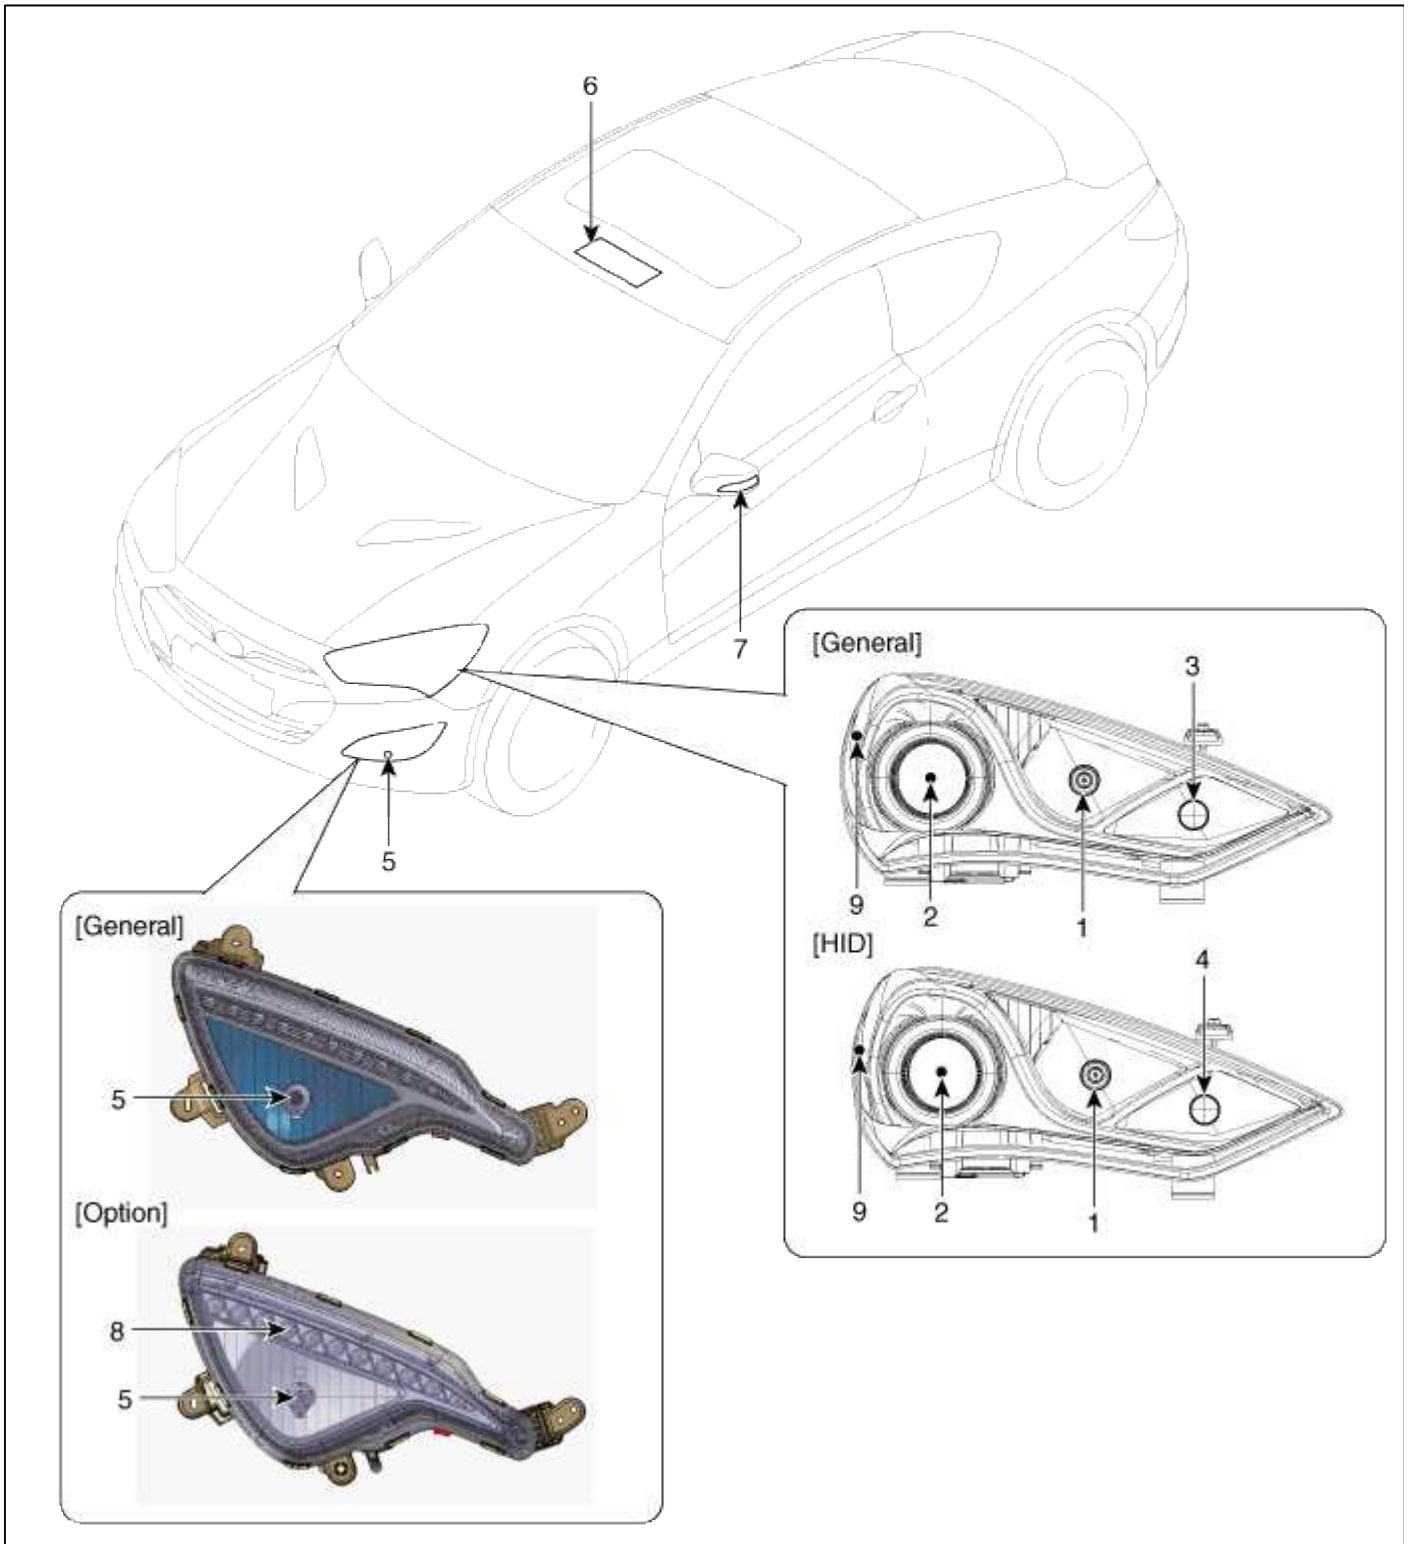

1. Head lamp (High)	4. Front turn signal lamp	7. Trun signal lamp (Mirror)
2. Head lamp (Low)	5. Front fog lamp	8. DRL
3. Turn signal / Position	6. Map lamp	9. Side marker

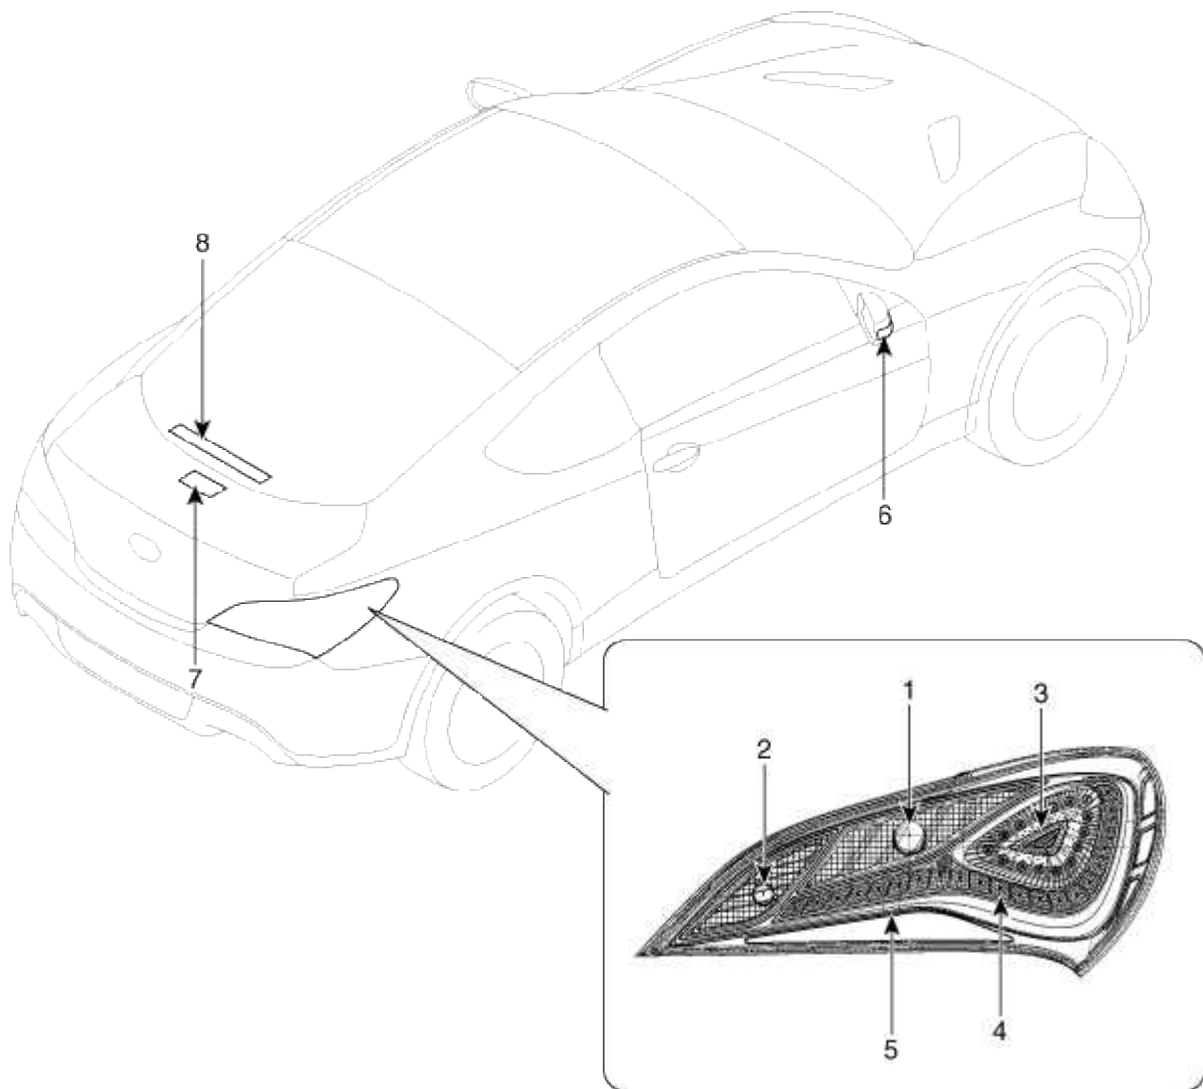


1. Turn signal lamp	5. Rear fog lamp
2. Back up lamp	6. Turn signal lamp (Mirror)
3. Tail / Stop lamp	7. Luggage lamp
4. Tail / Stop lamp	8. High mounted stop lamp

Body Electrical System > Lighting System > Head Lamps > Components and Components Location

Component

[HID]

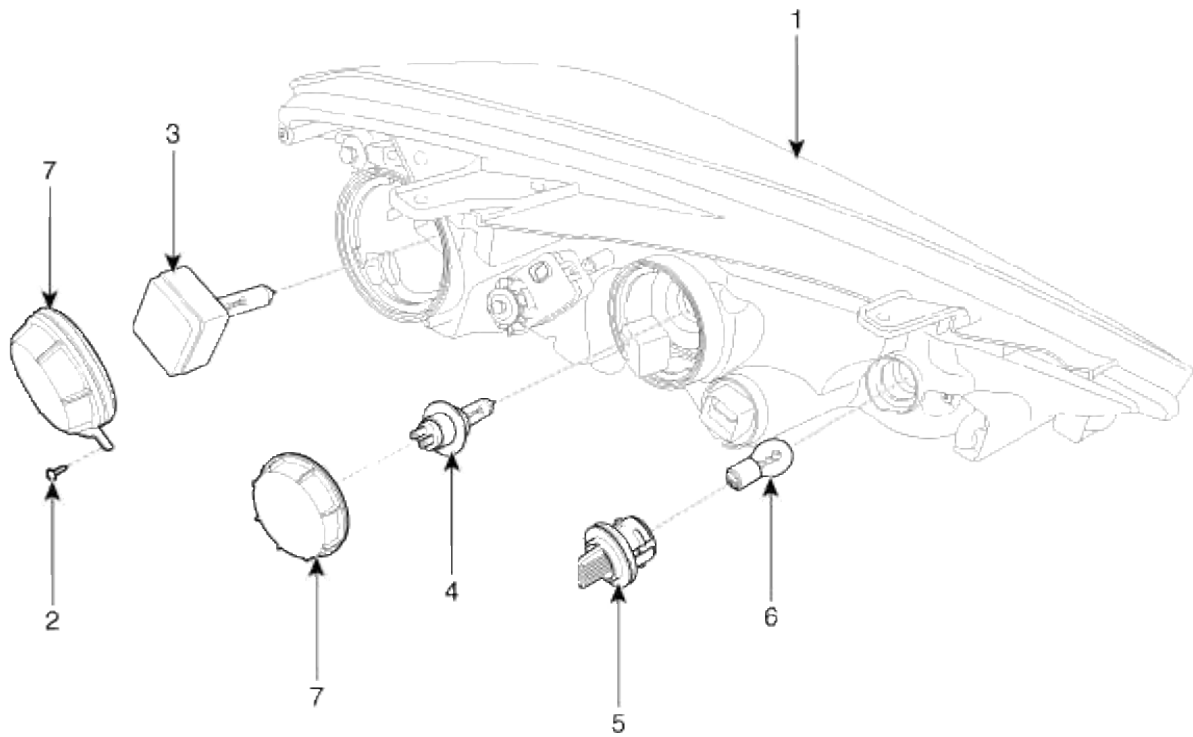

1. Head lamp assembly housing
 2. Screw
 3. Head lamp (Low) lamp
 4. Headlamp (High) lamp


5. Socket
 6. Turn signal/Tail lamp
 7. Dust cover

Body Electrical System > Lighting System > Head Lamps > Repair procedures

Inspection

1. Check-points upon head lamp failure (HID)

- (1) Check the battery voltage. (Low beam will be on when the battery voltage above 9V.)
- (2) Check the fuse and relay.
- (3) Check the polarity of ballast. (If the polarity are changed, low beam doesn't lighten)
- (4) Check the bulb connector securely.
- (5) Visually bulb checking (no filament): damaged glass, damaged for upper parts and lower parts of glass tube.
- (6) After (1)~(5), replace the ballast and the ignitor. (ballast assembly).

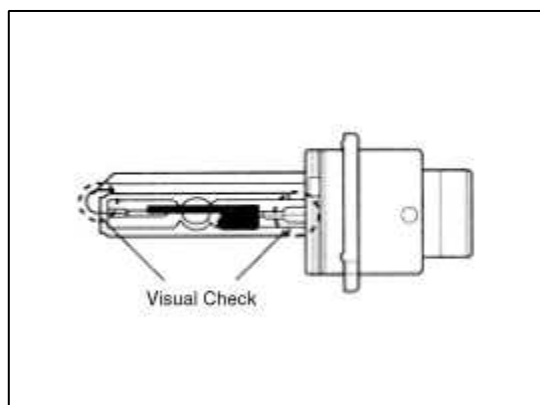

2. Service procedure and warning (HID)

No.	Item	Service procedures	Warning	Remarks
1	Replacement of lamp assembly	<ol style="list-style-type: none"> 1. Disconnect the power connector from the lamp. 2. Remove and replace the lamp assembly. 3. Connect the power connector. 	<ul style="list-style-type: none"> • Disconnect the head lamp power connector to avoid high voltage. 	<ul style="list-style-type: none"> • Other description is the same as the halogen bulbs.
2	Replacement of the Bulb	<ol style="list-style-type: none"> 1. Disconnect the power connector from the lamp. (head lamp, turn signal, head lamp leveling device) 2. Remove the lamp assembly. 3. Remove the ballast and dust cover. 4. Remove the bulb socket and replace the bulb. 5. Installation is the reverse of removal. 	<ul style="list-style-type: none"> • Disconnect the head lamp power connector to avoid high voltage. • Be careful not to damage the bulb and use genuine bulbs only. • Do not apply excessive force and fit it correctly. 	
		<ol style="list-style-type: none"> 1. Disconnect the power connector from the lamp. 		

3	Replacement of the Ballast (with built-in ignitor)	<ol style="list-style-type: none"> 2. Remove the lamp and then the ballast and the dust cover. 3. Remove the head lamp leveling device and then the bulb socket. 4. Connect the bulb socket on the replacement ballast and install the leveling device. 5. Installation is the reverse of removal. 	<ul style="list-style-type: none"> • Disconnect the head lamp power connector to avoid high voltage. 	<ul style="list-style-type: none"> • Replace the ballast only and install the used lamp. • Replace the sub assembly except the ballast.
4	Others	<ol style="list-style-type: none"> 1. Power supply should be according to the rated capacity. 2. Use the rated fuse and wire. 3. Bulb socket shall be free from moisture or dirt. 4. Do not apply the ballast severe shock, water, or extreme 	<ul style="list-style-type: none"> • All parts should be serviced only at specified service centers. 	<ul style="list-style-type: none"> • HID lamp should not be installed on other cars (Dangerous, fire may occur.)

CAUTION

HID lamp shall not be used on other cars.(Fire may occur.)


Fire may occur when HID lamp initially lights due to the fact that arc-discharge generates high voltage (max. 30,000V) and high current (12-13A), and are different from the halogen lamp specification.

3. Understanding of color change by replacement of HID bulb.


(1) The cause of HID color change.

(Change of color is HID feature)

A. The change of color occur during mixing three Elements in the HID bulb.

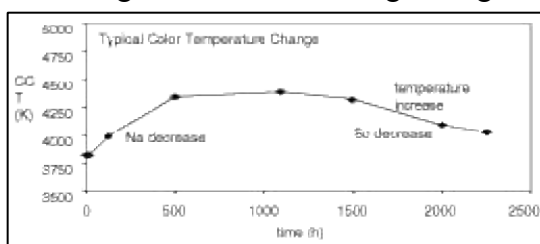

B. Color Coordinates by Lifetime

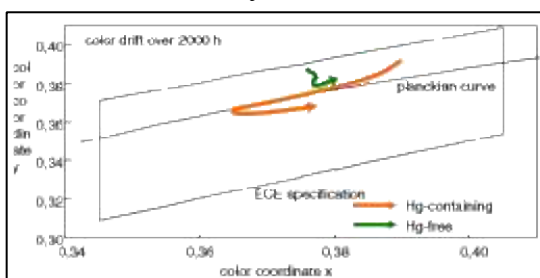

C. Chemical compounds in an arc tube :

1. Xenon gas(an inert gas , protection of arc tube)
2. Mercury(increase voltage, protection of arc tube, blue in the first 3 second)
3. Metal halide

- Natrium(Yellow) : 0.12mg
- Scandium(Blue) : 0.06mg
- Iodine(Halogen) : 0.02mg

(2) Change of Color by Lighting Up Time

A. It needs 4 seconds at least for stabilization.

At first, you can see the blue for 3 seconds because of Mercury.

B. After stabilization, change of color occur by metal halide.

- 0 Hour : Yellow(Na is more than Sc.)
- 10 Hour : Bright Blue (Na and Sc are similar ratio.)
- 1000Hour more : Blue (Sc is more than Na.)

C. The end of lifetime : When HID used up Natrium and Scandium, a beam of light will be dark suddenly.
so you can see the red, purple and turn on and off.


Characteristic

1. Durable for vibration as there is no filament.
2. HID lamp had a more long life than halogen lamp.
3. Does not operate if polarity is changed.
4. Operating input voltage : 9-16V

Removal


Head Lamp Assembly

1. Disconnect the negative (-) battery terminal.
2. Remove the front bumper.
(Refer to BD group - "Front bumper")
3. Remove the head lamp assembly(A) after loosening the mounting bolt(2EA).

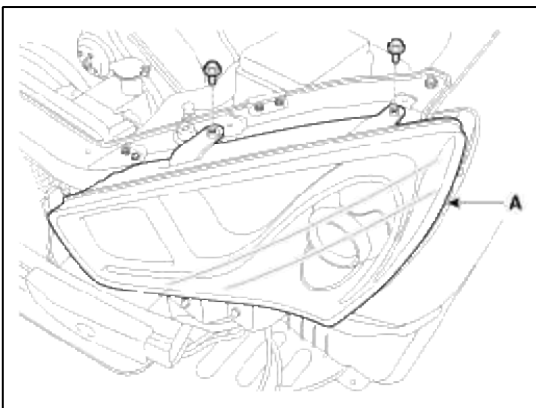


NOTE

Take care that holding clip (A, B) is not to be damaged.

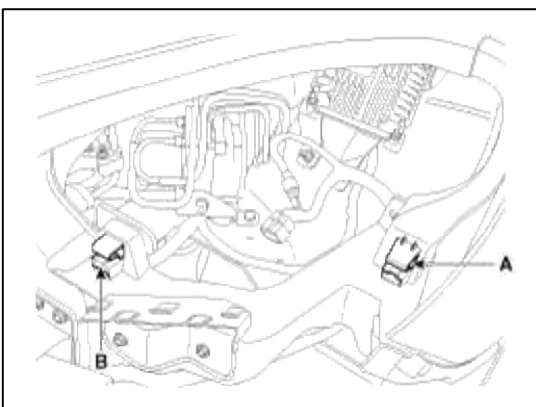

4. Disconnect the head lamp connectors(A) (HID only).

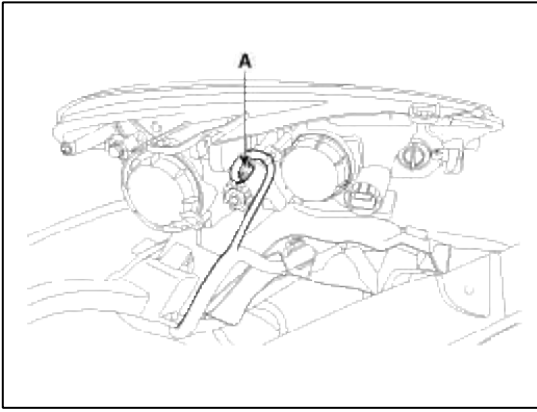


5. Remove the bulb caps from the head lamp assembly after turning in the counter clock-wise direction.


Head Lamp Bulb (Low)

1. Disconnect the head lamp connector.


2. Remove the dust cover (A) after loosening the screw (HID only).

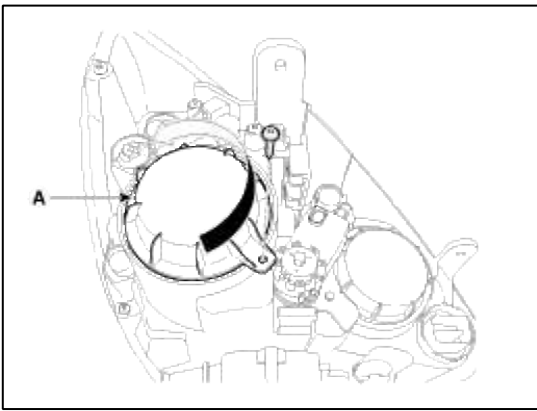

3. Remove the bulb connector (A) and Ignitor fixing clip (B) (HID only).

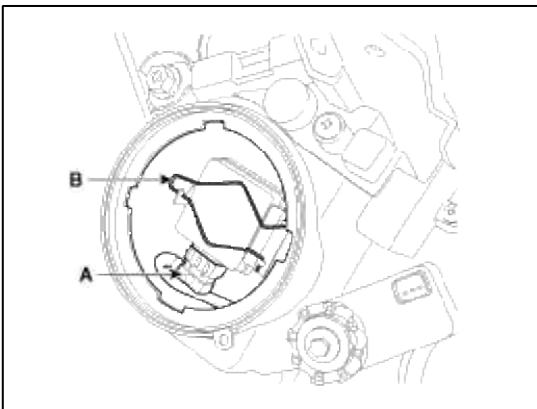

4. Remove the Ignitor & bulb (A) (HID only).

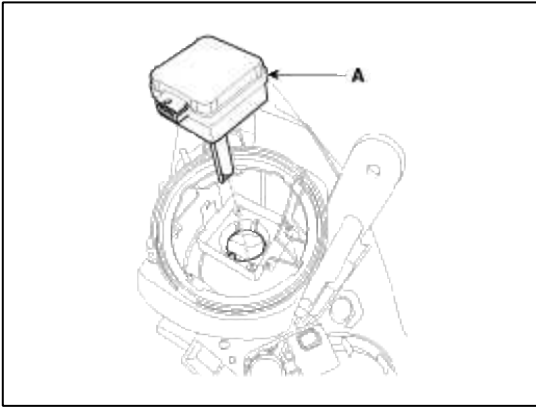
**CAUTION**

Turn the head lamp switch off to avoid high voltage
Be careful not to damage the bulb and use genuine bulbs only


- Do not apply excessive force and fit it correctly.
- Confirm the bulb locking

Head Lamp Bulb (High)

1. Disconnect the head lamp connector.
2. Turn the dust cover (A) counterclockwise and remove it.

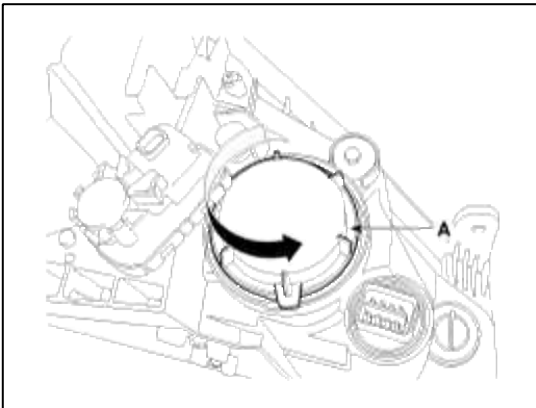


3. Turn the bulb socket (A) counterclockwise and remove it.

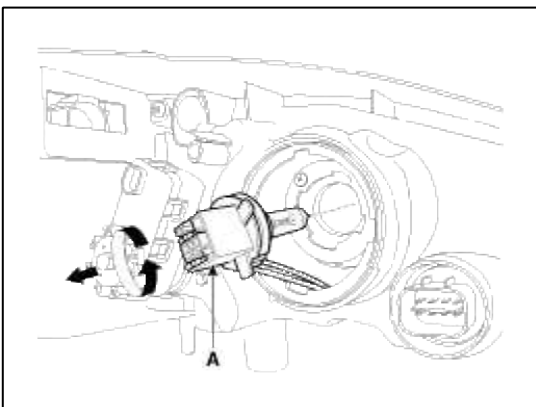


Head Lamp Bulb (Turn signal)

1. Disconnect the head lamp connector.

2. Remove the dust cover (A) after loosening the screw (HID only).

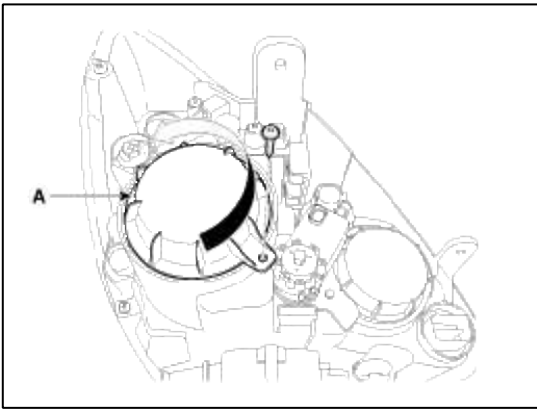


3. Turn the bulb socket (B) counterclockwise and remove the turn signal bulb (A).

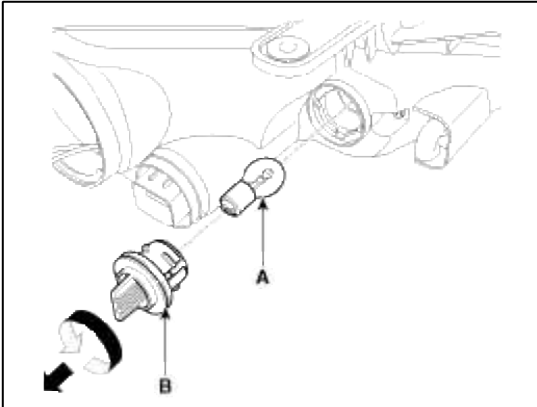

Ballast

1. Turn the head lamp switch off.
2. Remove the head lamp assembly.
3. Disconnect the head lamp connector.
4. Remove the ballast (A) after loosening the screws (3EA).

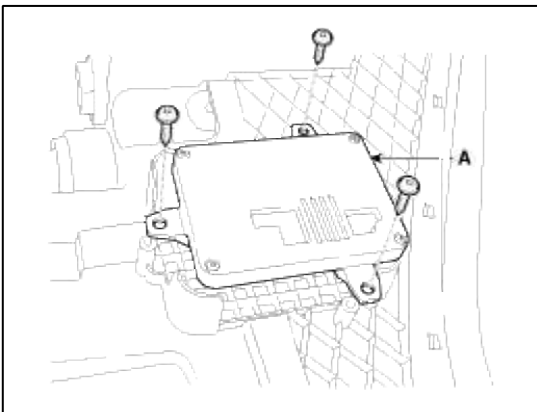

CAUTION

- HID lamp shall not be used on other cars.(Fire may occur.)
- Fire may occur when HID lamp initially lights due to the fact that arc-discharge generates high voltage (max. 20,000V) and high current (12-13A), and are different from the halogen lamp specification.
- Install the dust cover after confirming the locking state between bulb and bulb holder.
- When testing the HID head lamp, turn the power on or off with switch between power supply and lamp because of high voltage.
- Do not operate the head lamp switch with the bulb not installed, because it generates spark momentarily.

Head Lamp Assembly

1. Install the head lamp assembly after connecting the connector.
2. Install the radiator under cover.
3. Connect the negative (-) battery terminal.

Head Lamp Aiming Instructions

The head lamps should be aimed with the proper beam-setting equipment, and in accordance with the equipment manufacturer's instructions.


NOTE

If there are any regulations pertinent to the aiming of head lamps in the area where the vehicle is to be used, adjust so as to meet those requirements.

Alternately turn the adjusting gear to adjust the head lamp aiming. If beam-setting equipment is not available, proceed as follows:

1. Inflate the tires to the specified pressure and remove any loads from the vehicle except the driver, spare tire, and tools.
2. The vehicle should be placed on a flat floor.
3. Draw vertical lines (Vertical lines passing through respective head lamp centers) and a horizontal line (Horizontal line passing through center of head lamps) on the screen.
4. With the head lamp and battery in normal condition, aim the head lamps so the brightest portion falls on the horizontal and vertical lines.


Make vertical(A) adjustments to the lower beam using the adjusting wheel.

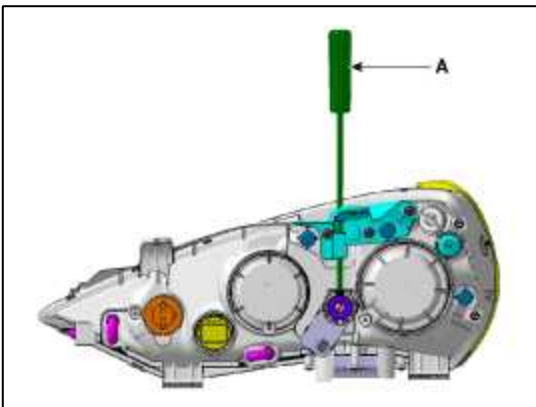


Front Fog Lamp Aiming

The front fog lamps should be aimed in the same manner of the head lamps aiming.

With the front fog lamps and battery in normal condition, aim the front fog lamps by turning the adjusting screw(A) with a driver.

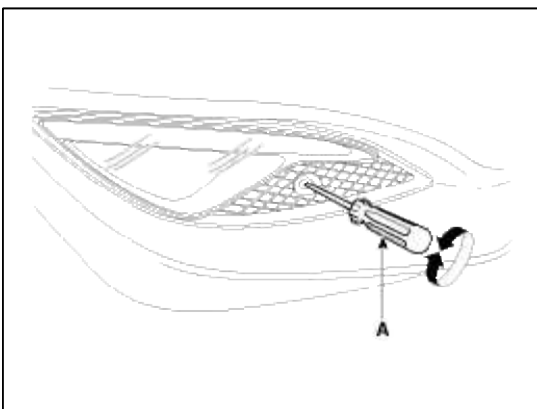


Head Lamp And Fog Lamp Aiming Point

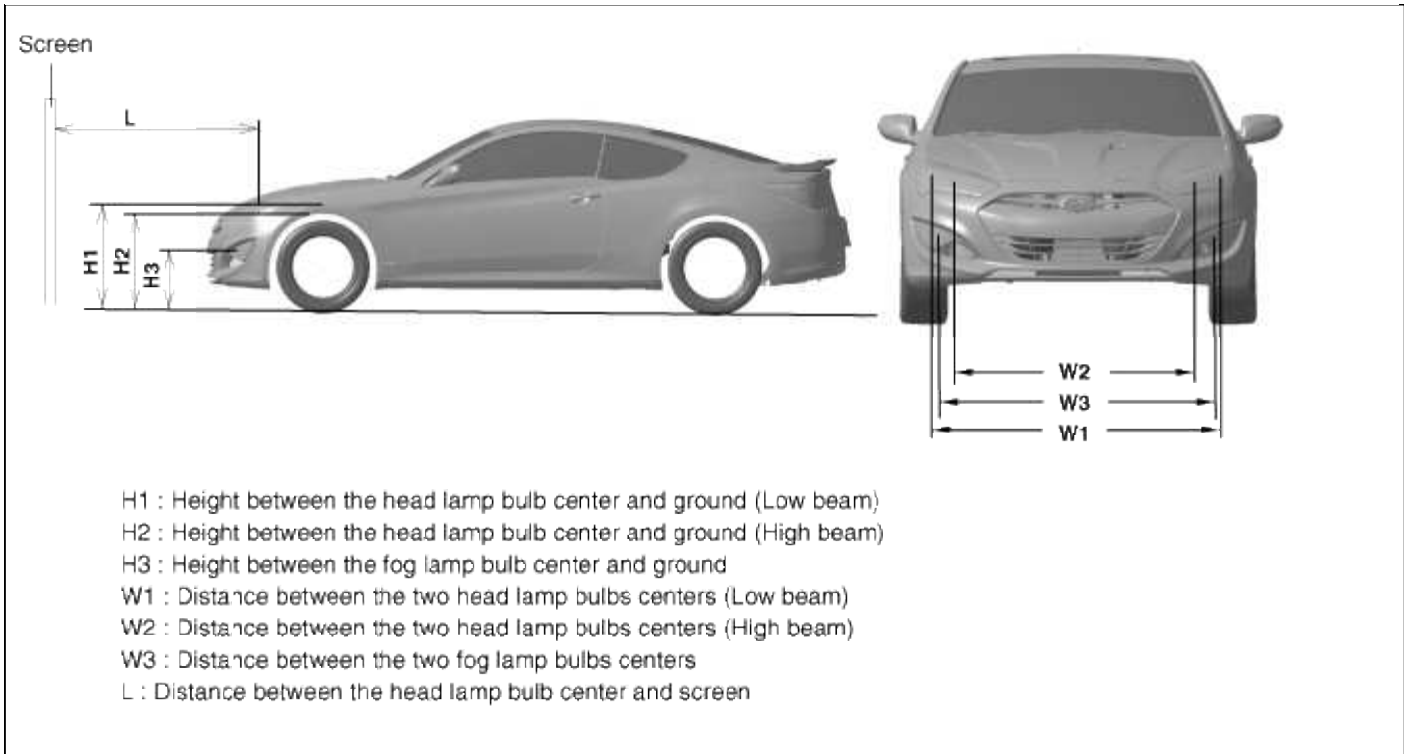

							Unit : in.(mm)
Vehicle condition	H1	H2	H3	W1	W2	W3	L
Without driver	27.7(704)	27.6(701)	15.5(394)	59.84 (1,519)	48.7 (1,238)	59.8 (1,519)	Refer to aiming condition
With driver	27.4(696)	27.3(693)	15.2(386)				


1. General Type (VOR)

- A. Turn the low beam on without driver aboard.
- B. The cut-off line should be projected in the allowable range (shaded region) shown in the picture.
- C. If head lamp leveling device is equipped, adjust the head lamp leveling device switch with 0 positions.

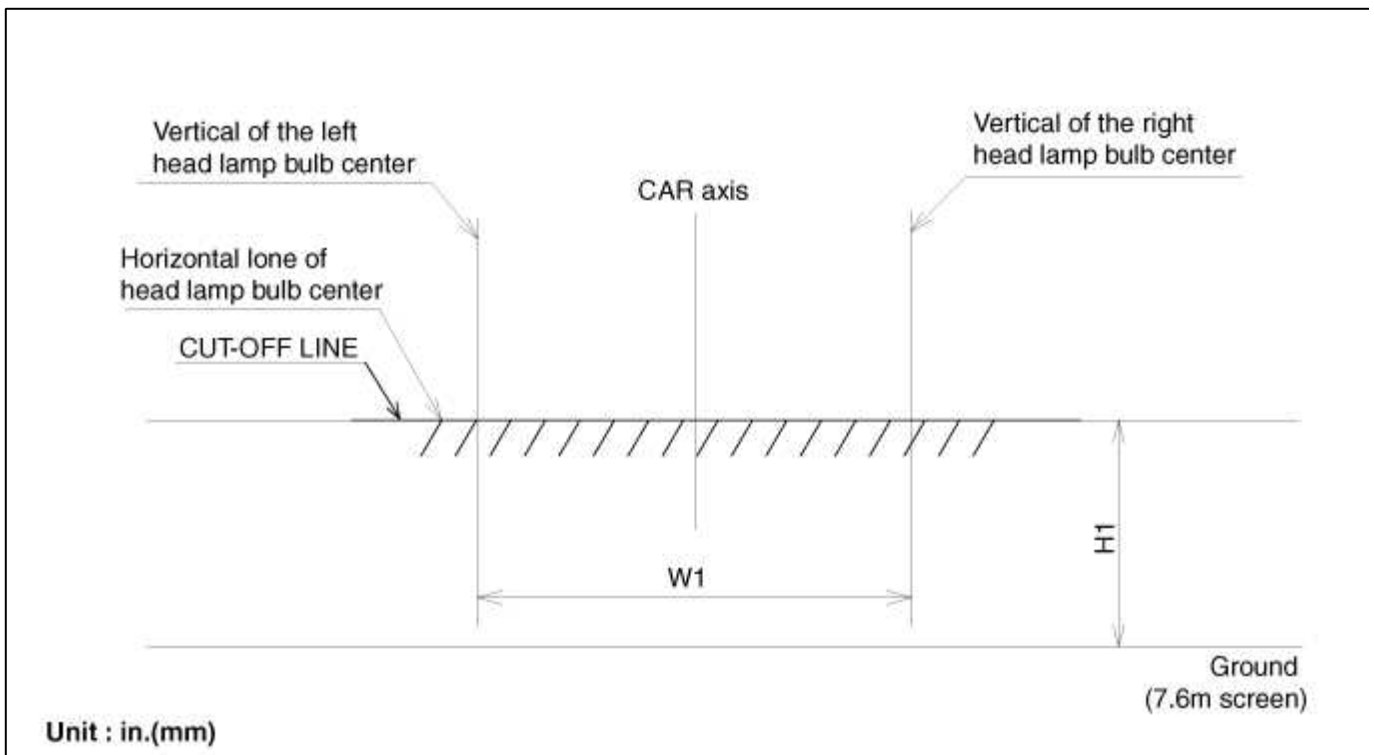


2. HID Type (VOL)

- A. Turn the low beam on without driver aboard.
- B. The cut-off line should be projected in the cut-off line shown in the picture.
- C. If head lamp leveling device is equipped, adjust the head lamp leveling device switch with 0 positions.

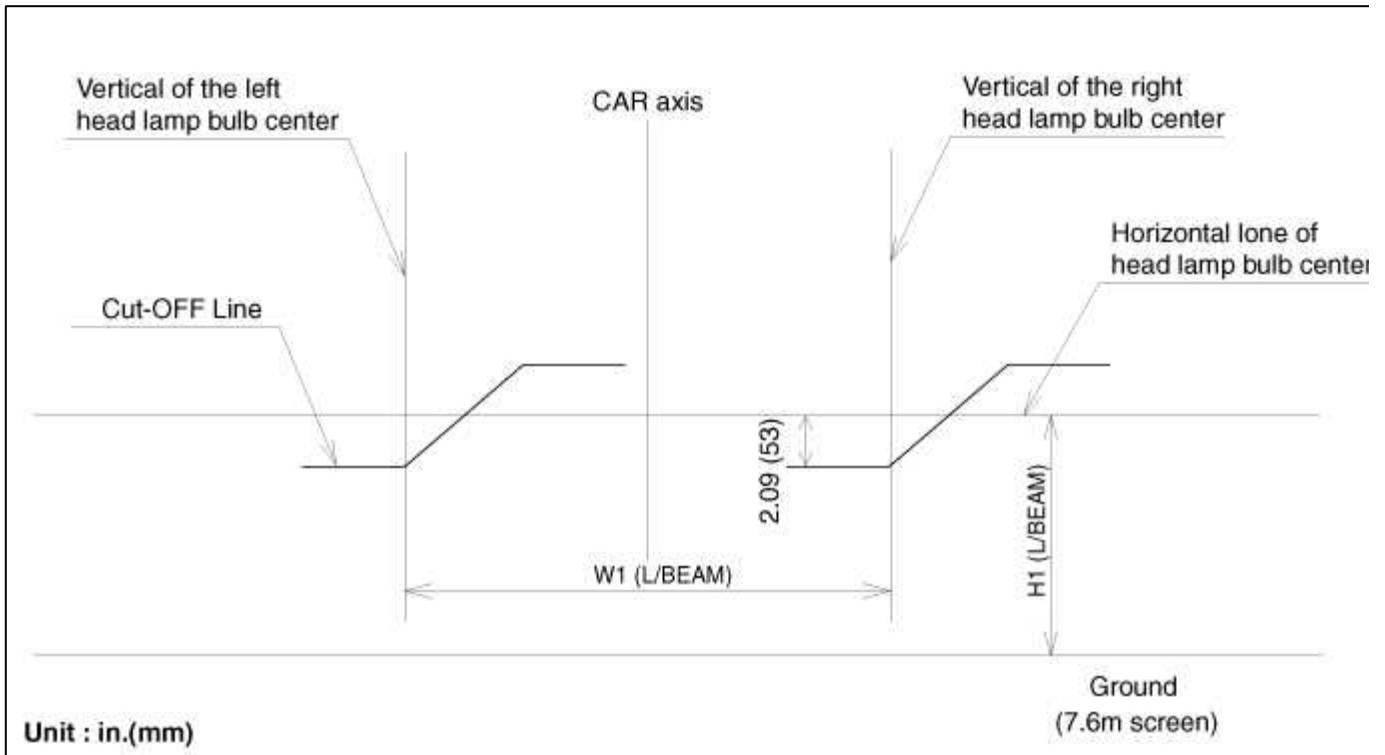

3. Turn the front fog lamp on without the driver aboard.

The cut-off line should be projected in the allowable range (shaded region)


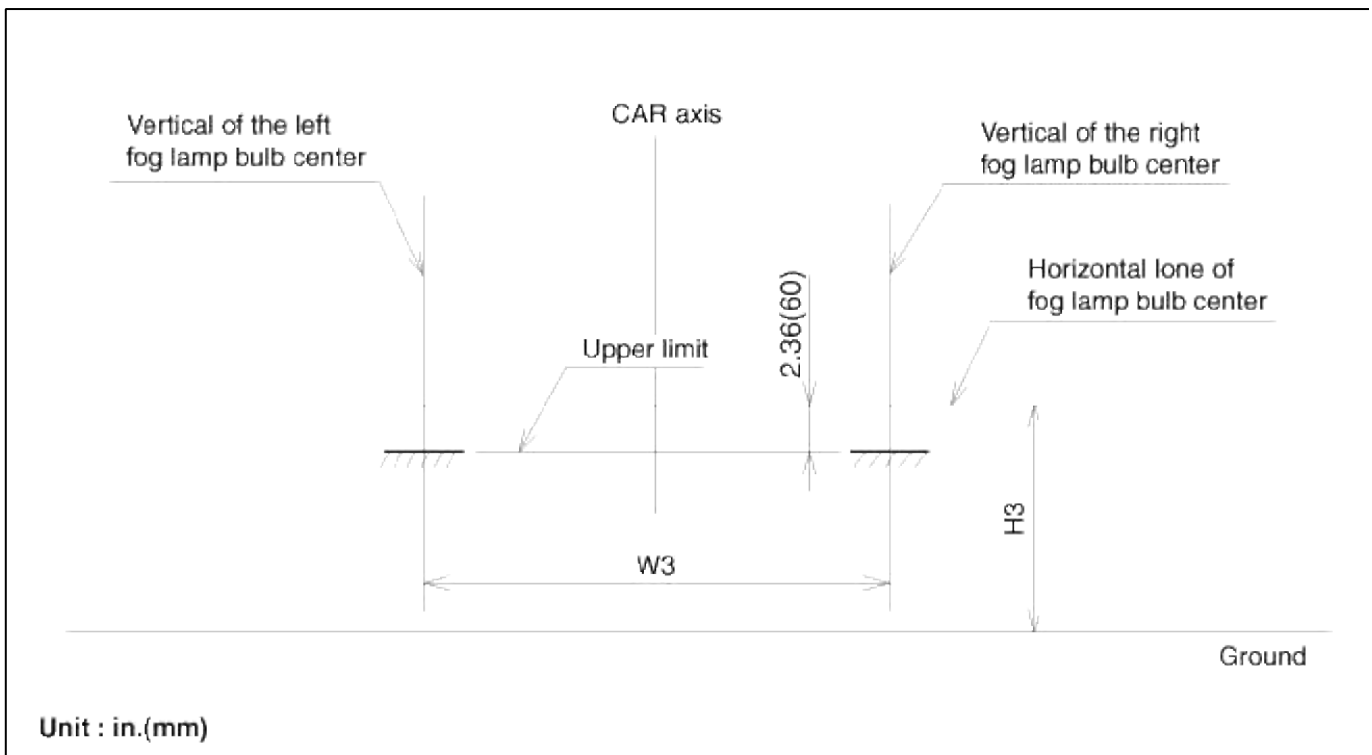


Body Electrical System > Lighting System > Rear combination lamp > Repair procedures

Inspection

Stop Lamp Relay


1. Check for continuity between the terminals.

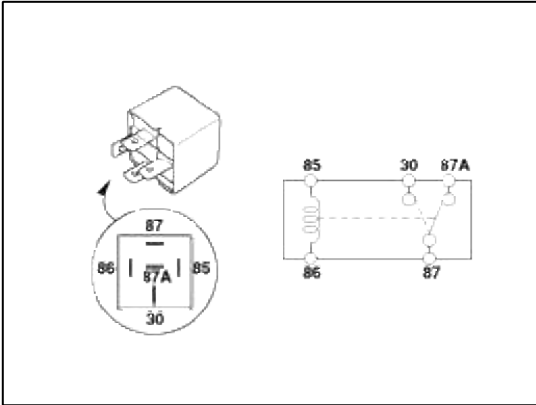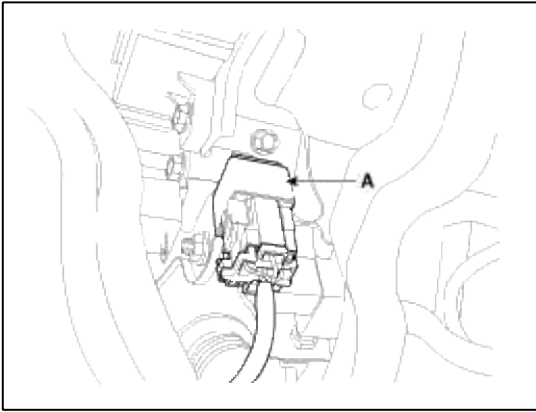



Terminal	86	85	87	87a	30
Power					
Disconnected	○ — ○				
Connected	○ — ○	○ — ○	○ — ○ — ○		

Removal

1. Disconnect the negative (-) battery terminal.
2. Remove the rear combination lamp cover (A).

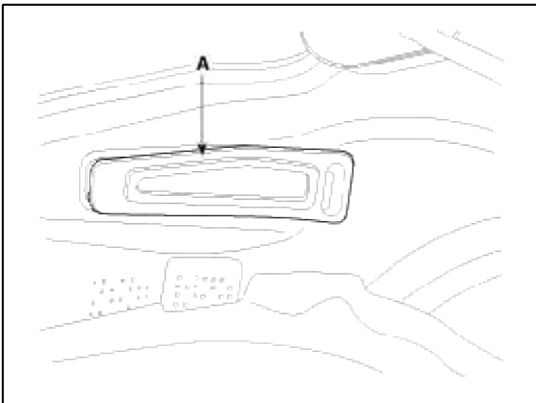


3. Loosen the rear combination lamp mounting nuts (4EA) and disconnect the connector (A) then remove the rear combination lamp assembly (B).

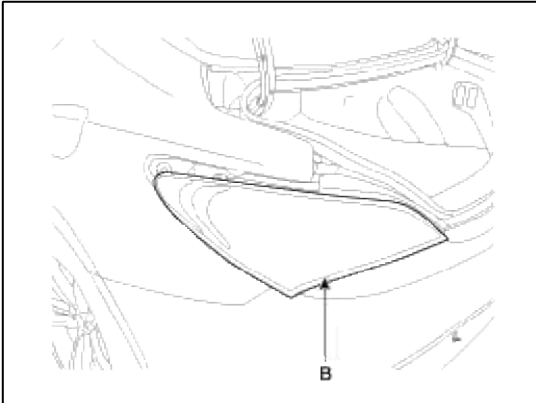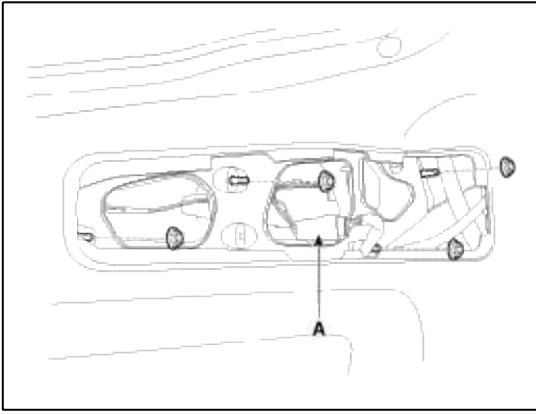

4. If necessary to replace the bulb, replace the bulb turning the cap in the counter clock-wise direction without removal of rear combination lamp assembly.

A : Back up lamp, B : Turn signal lamp

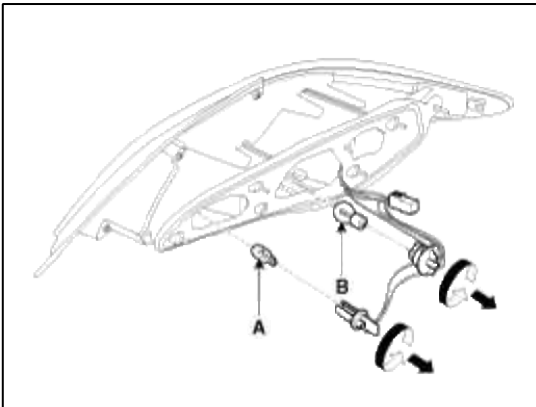


Installation

1. Install the rear combination lamp assembly after replacing the bulbs.

Body Electrical System > Lighting System > Overhead Console Lamp > Repair procedures

Inspection


Remove the overhead console lamp assembly then check for continuity between terminals. If the continuity is not as specified, replace the map lamp switch.

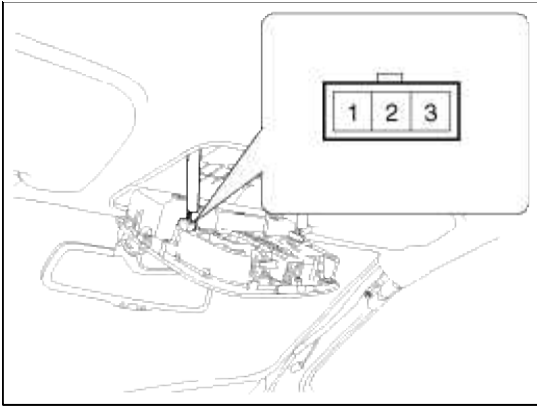


Terminal Position	1	3	2
ON	○	⊖	○
DOOR		○	⊖
OFF			

Removal


1. Disconnect the negative (-) battery terminal.
2. Loosen 2 screws holding the overhead console(A).

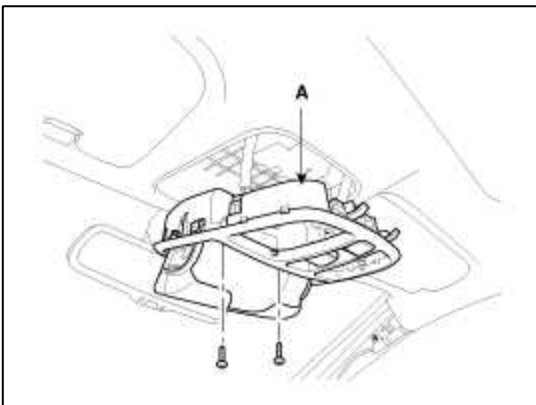

3. Disconnect the connectors(A) of sunroof switch then remove the overhead console lamp assembly.

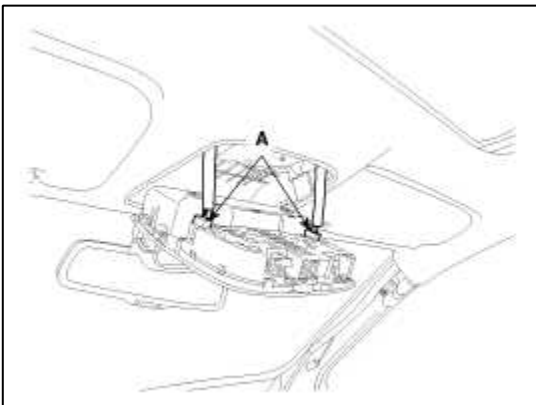

4. Replace the bulb after turning the socket in the conunterclockwise direction.

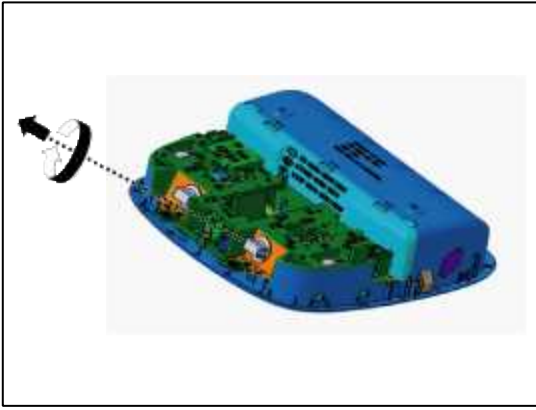

5. If necessary to replace the bulb(A) only, replace the bulb after opening the overhead console lens.



Installation


1. Install the overhead console lamp after connecting the sunroof switch connector and lamp connector.
2. Install the lens.(If lens is removed.)
3. Tighten the screws.

Body Electrical System > Lighting System > Hazard Lamp Switch > Repair procedures


Removal

Hazard Lamp Switch


1. Disconnect the negative (-) battery terminal.
2. Remove the console upper cover(A).
(Refer to Body group - "Console")

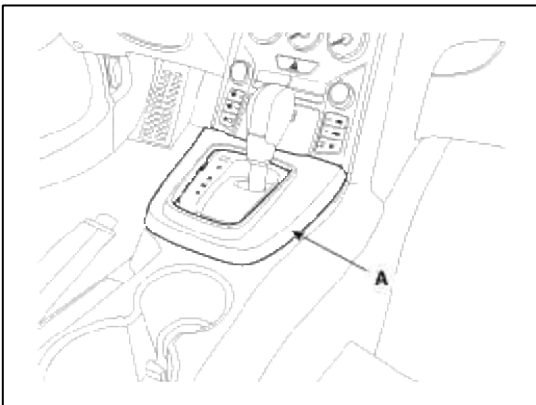

3. Remove the center fascia lower panel(A).

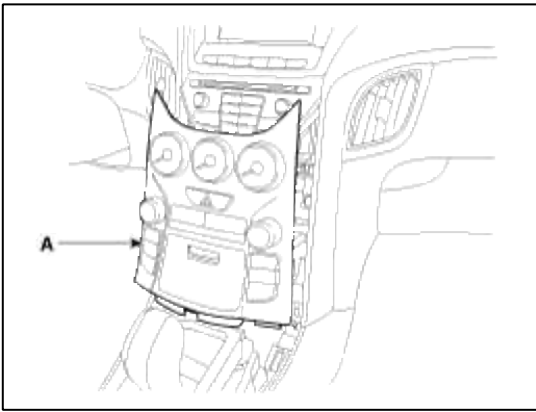

4. Disconnect the heater control unit connectors and cables.

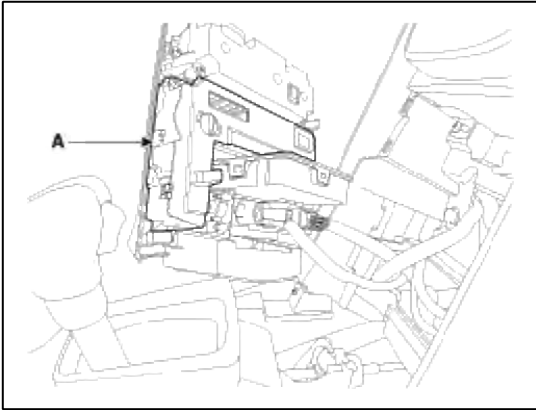


Installation

1. Install the heater control unit.
2. Install the center fascia lower panel and console upper cover.


Body Electrical System > Lighting System > Flasher Unit > Repair procedures

Inspection

1. Disconnect the negative (-) battery terminal.
2. Remove the driver crash pad lower panel (A).

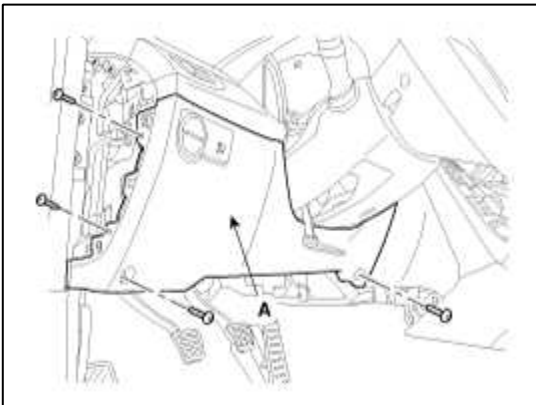

- Remove the flasher unit (A) after loosening the bolt and disconnecting the connector.

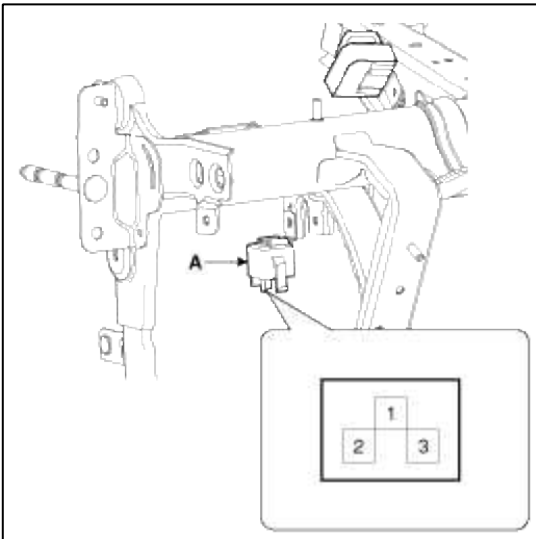

- Connect the positive (+) lead from the battery to terminal 2 and the negative (-) lead to terminal 3.
- Connect the two turn signal lamps in parallel to terminals 1 and 3. Check that the bulbs turn on and off.


NOTE

The turn signal lamps should flash 60 to 120 times per minute. If one of the front or rear turn signal lamps has an open circuit, the number of flashes will be more than 120 per minute. If operation is not as specified, replace the flash unit.


Body Electrical System > Lighting System > Rheostat > Repair procedures

Inspection


- Disconnect the negative (-) battery terminal.
- Remove the lower crash pad switch (A) from the side crash pad cover by using the scraper.

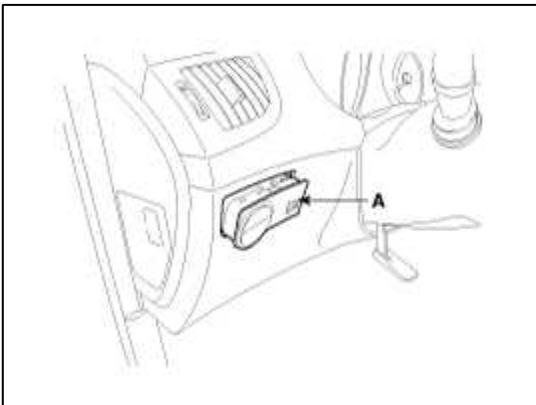

- Disconnect the rheostat connector from lower crash pad switch.

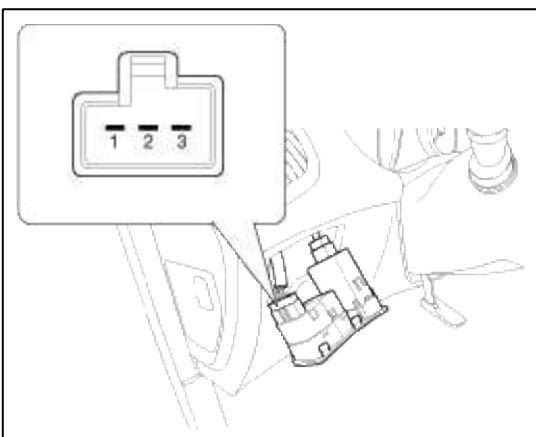


4. Check for intensity. If the light intensity of the lamps changes smoothly without any flickering when the rheostat is turned, it can be assumed that the rheostat is normal.

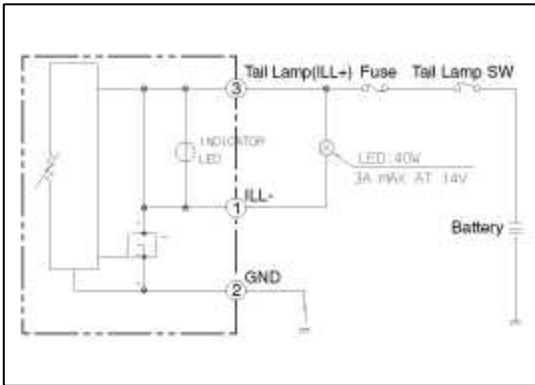

Body Electrical System > Lighting System > Front Fog Lamps > Repair procedures

Inspection

1. Disconnect the negative(-) battery terminal.
2. Remove the lighting switch of the multi-function switch. (Refer to the multi-function switch)
3. With the front fog lamp switch, make sure that continuity exists between the terminals below.
If continuity is not as specified, replace the multi-function switch.

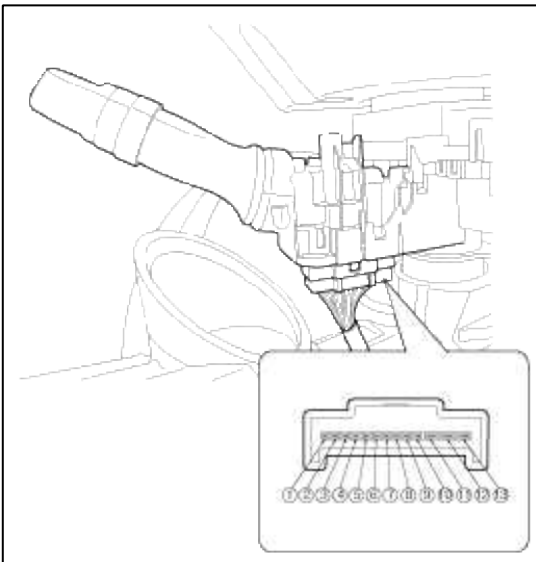


Front Fog Lamp

Terminal Position	5	6
OFF		
ON	○ ————— ○	

Removal

1. Disconnect the negative (-) battery terminal.


2. Open the front wheel guard service cover (A).

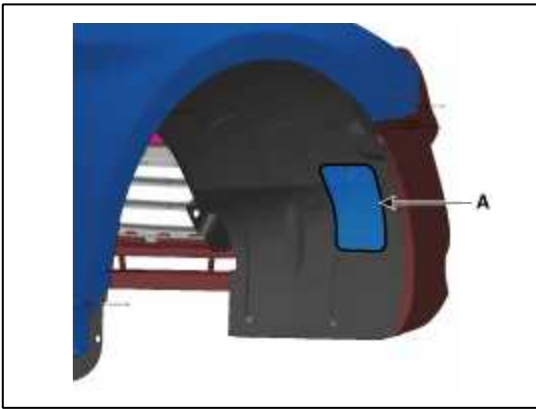

3. Remove the dust cover (A) in the service cover.




4. Replace the front fog bulb turning it in the counterclockwise direction.

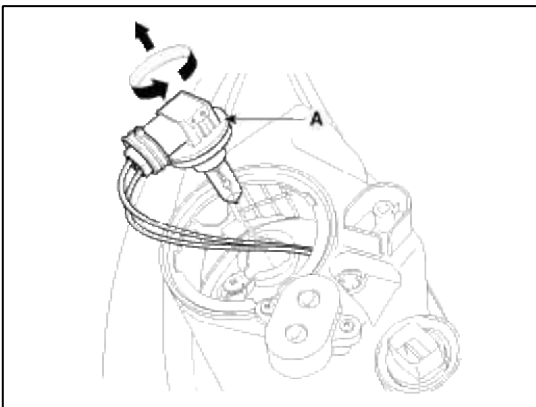


5. Remove the front bumper when it need to remove the front fog lamp assembly.
(Refer to BD group - "Front Bumper")

6. Disconnect the front fog lamp connector (A).

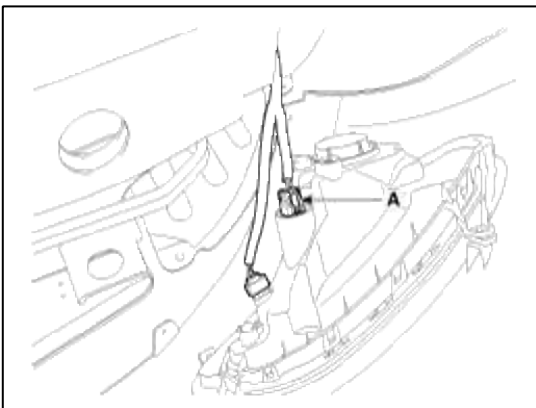

7. Remove the front fog lamp assembly (A) after loosening the screws.

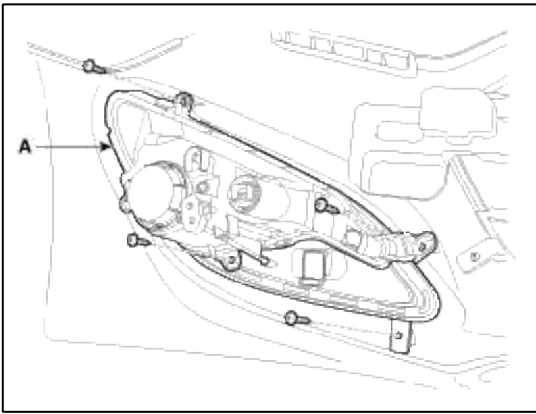


Installation

1. Install the front fog bulb and dust cover.
2. Reconnect the lamp connector.
3. Install the front bumper.

Body Electrical System > Lighting System > Rear Fog Lamps > Repair procedures

Inspection

1. Disconnect the negative(-) battery terminal.
2. Remove the lighting switch of the multi-function switch. (Refer to the multi-function switch)
3. With the rear fog lamp switch, make sure that continuity exists between the terminals below.
If continuity is not as specified, replace the multi-function switch.

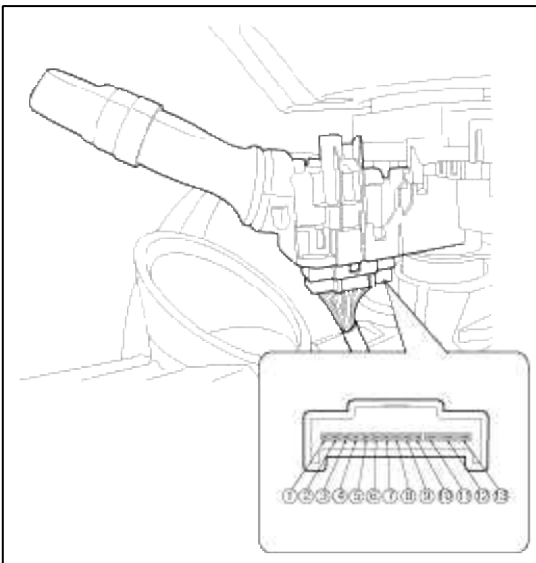

Rear Fog Lamp


Terminal Position	5	6	9
OFF			
Front	○	○	
Rear	○	○	○

For the removal and installation of rear fog lamp, please refer to the rear combination lamp.

Body Electrical System > Lighting System > Luggage Room Lamps > Repair procedures

Removal

1. Disconnect the negative (-) battery terminal.
2. Remove the luggage room lamp with a flat-tip screwdriver and disconnect the 2P connector.
3. Remove the bulb (A).

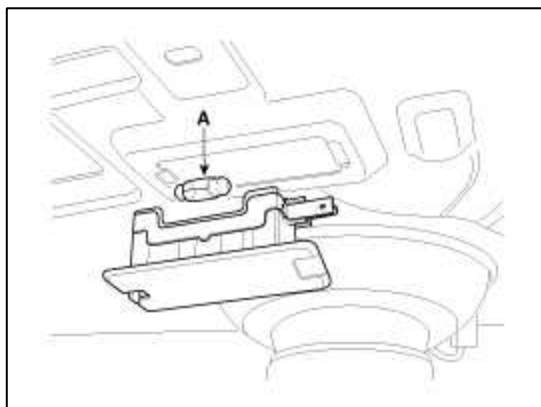

Installation

1. Install the bulb.
2. Install the luggage lamp.

Body Electrical System > Lighting System > Troubleshooting

Troubleshooting

Symptom	Possible cause	Remedy
One lamp does not light (all exterior)	Bulb burned out	Replace bulb
	Socket, wiring or ground faulty	Repair if necessary
Head lamps do not light	Bulb burned out	Replace bulb
	Ignition fuse (LOW:15A, HIGH:15A) blown	Check for short and replace fuse
	Head lamp fuse (15A) blown	Check for short and replace fuse
	Head lamp relay faulty	Check relay
	Lighting switch faulty	Check switch
	Wiring or ground faulty	Repair if necessary
Tail lamps and license plate lamps do not light	Bulb burned out	Replace bulb
	Tail lamp fuse (20A) blown	Check for short and replace fuse
	Tail lamp relay faulty	Check relay
	Lighting switch faulty	Check switch
	Wiring or ground faulty	Repair if necessary
Stop lamps do not light	Bulb burned out	Replace bulb
	Stop lamp fuse (15A) blown	Check for short and replace fuse
	Stop lamp switch faulty	Adjust or replace switch
	Wiring or ground faulty	Repair if necessary

Stop lamps do not turn off	Stop lamp switch faulty	Repair or replace switch
Instrument lamps do not light (Tail lamps light)	Rheostat faulty	Check rheostat
	Wiring or ground faulty	Repair if necessary
Turn signal lamp does not flash on one side	Bulb burned out	Replace bulb
	Turn signal switch faulty	Check switch
	Wiring or ground faulty	Repair if necessary
Turn signal lamps do not light	Bulb burned out	Replace bulb
	Turn signal lamp fuse (10A) blown	Check for short and replace fuse
	Flasher unit faulty	Check flasher unit
	Turn signal switch faulty	Check switch
	Wiring or ground faulty	Repair if necessary
Hazard warning lamps do not light	Bulb burned out	Replace bulb
	Hazard warning lamp fuse (15A) blown	Check for short and replace fuse
	Flasher unit faulty	Check flasher unit
	Hazard switch faulty	Check switch
	Wiring or ground faulty	Repair if necessary
Back up lamps do not light	Bulb burned out	Replace bulb
	Back up lamp fuse (10A) blown	Check for short and replace fuse
	Back up lamp switch (M/T) faulty	Check switch
	Transaxle range switch (A/T) faulty	Check switch
	Wiring or ground faulty	Repair if necessary
Front fog lamps do not light	Bulb burned out	Replace bulb
	Front fog lamp fuse (15A) blown	Check for short and replace fuse
	Front fog lamp relay faulty	Check relay
	Front fog lamp switch faulty	Check switch
	Wiring or ground faulty	Repair if necessary
Map lamp does not light	Bulb burned out	Replace bulb
	Room lamp fuse (10A) blown	Check for short and replace fuse
	Map lamp switch faulty	Check switch
	Wiring or ground faulty	Repair if necessary
Luggage room lamp does not light	Bulb burned out	Replace bulb
	Room lamp fuse (10A) blown	Check for short and replace fuse

	Luggage room lamp switch faulty	Check switch
	Wiring or ground faulty	Repair if necessary


Body Electrical System > Auto Lighting Control System > Specifications

Specifications


Items		Specifications
Rated voltage		5V
Load		Max. 1mA
Detection illuminations	Tail lamp	ON : $0.82 \pm 0.05V$ OFF : $1.65 \pm 0.05V$
	Head lamp	ON : $0.48 \pm 0.05V$ OFF : $0.92 \pm 0.05V$

Body Electrical System > Auto Lighting Control System > Components and Components Location


Component Location

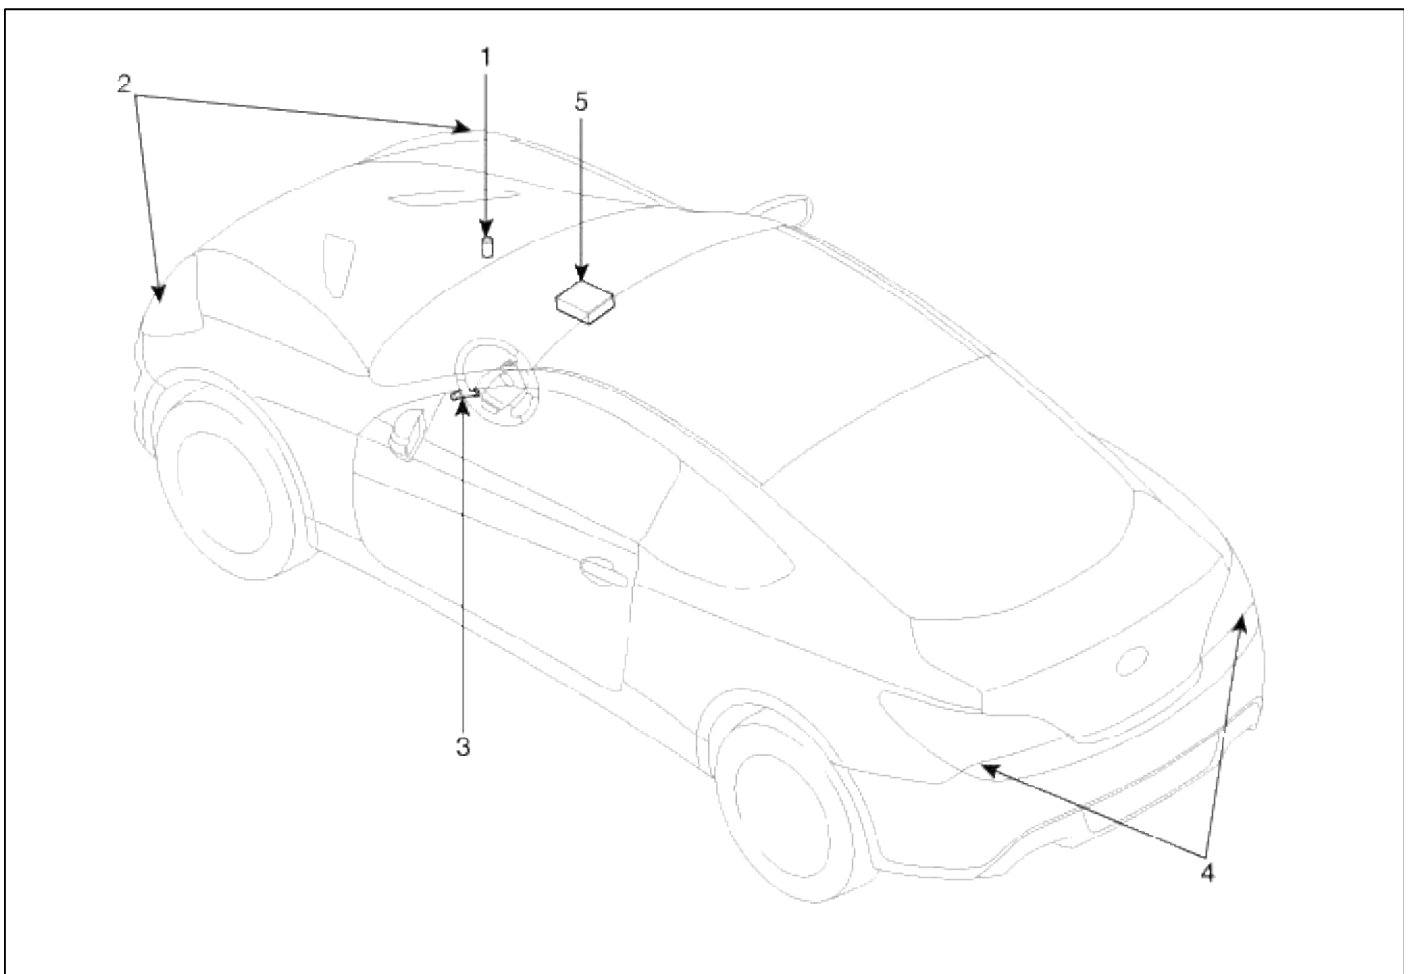

1. Auto light sensor	4. Tail lamps
2. Head lamps	5. Body control module (BCM)
3. Lighting switch (Auto)	

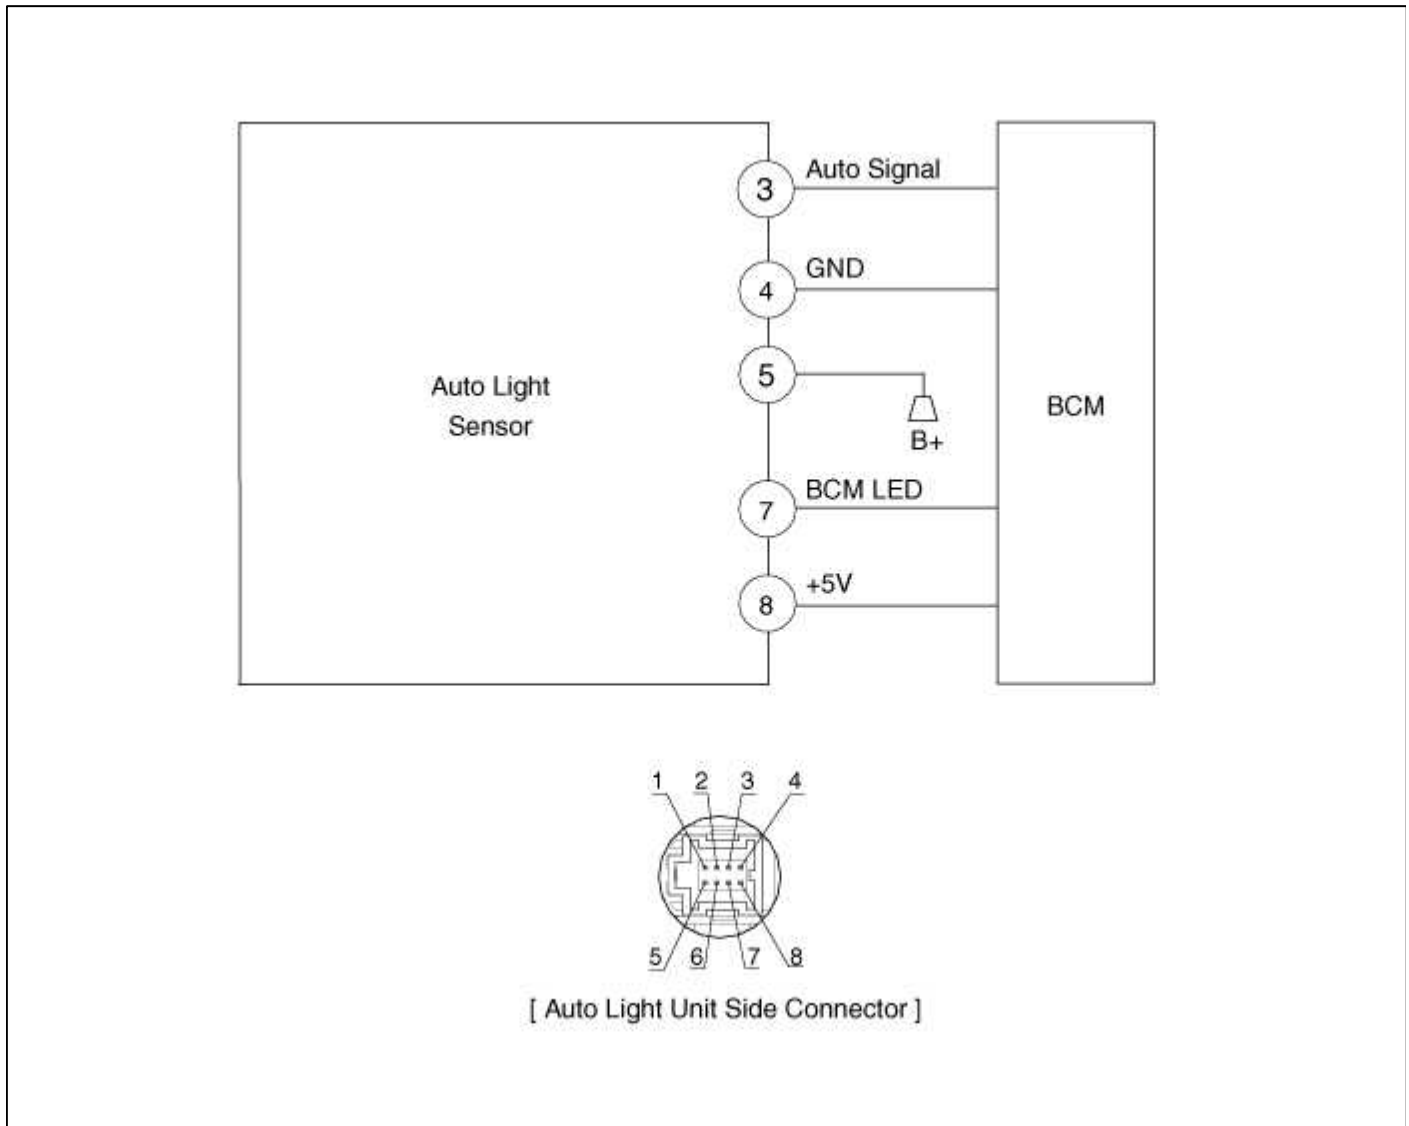Body Electrical System > Auto Lighting Control System > Schematic Diagrams
Circuit Diagram

Body Electrical System > Auto Lighting Control System > Auto Light Switch > Repair procedures
Inspection

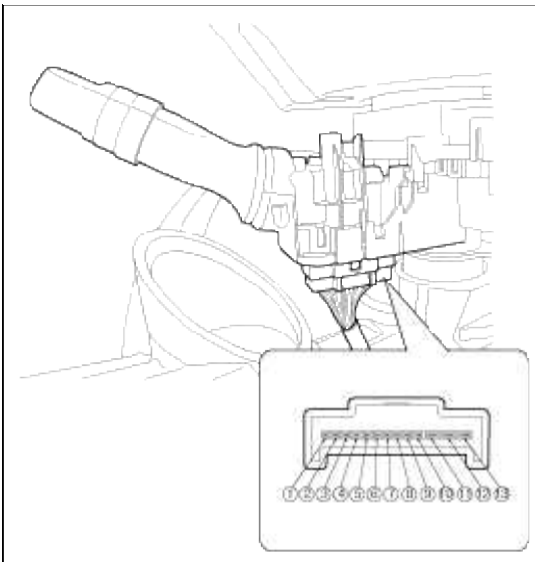Operate the auto light switch, then check for continuity between terminals of multi-function switch connector.



Terminal Position	1	4	3	2
OFF				
I	○	—————	○	○
II	○	○	—————	○
AUTO			○	○

Body Electrical System > Auto Lighting Control System > Auto Light Sensor > Repair procedures

Inspection

In the state of IGN1 ON, when multi function switch module detects auto light switch on, tail lamp relay output and head lamp low relay output are controlled according to auto light sensor's input.

The auto light control doesn't work if the pin sunlight supply (5V regulated power from Ignition 1 power to sunlight sensor) is in short circuit with the ground.

If IGN1 ON, The BCM monitors the range of this supply and raises up a failure as soon as the supply's voltage is out of range. Then this failure occurs and as long as this is present, the head lamp must be turned on without taking care about the sunlight level provided by the sensor.


This is designed to prevent any head lamp cut off when the failure occurs during the night.

	Tail lamp	Head lamp
ON	$0.82 \pm 0.05V$	$0.48 \pm 0.05V$
OFF	$1.65 \pm 0.05V$	$0.92 \pm 0.05V$

Removal

1. Disconnect the negative (-) battery terminal.

2. Remove the photo & auto light sensor(A) from crash pad upper side by using screw (-) driver.

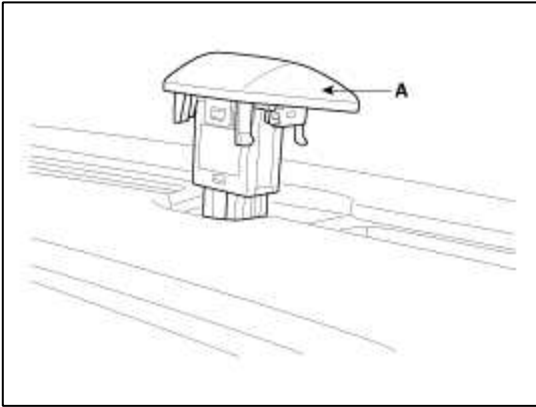


3. Remove the auto light connector.

Installation

1. Reconnect the auto light connector.
2. Install the auto light sensor.

Body Electrical System > Auto Head Lamp Leveling Device > Components and Components Location

Component Location


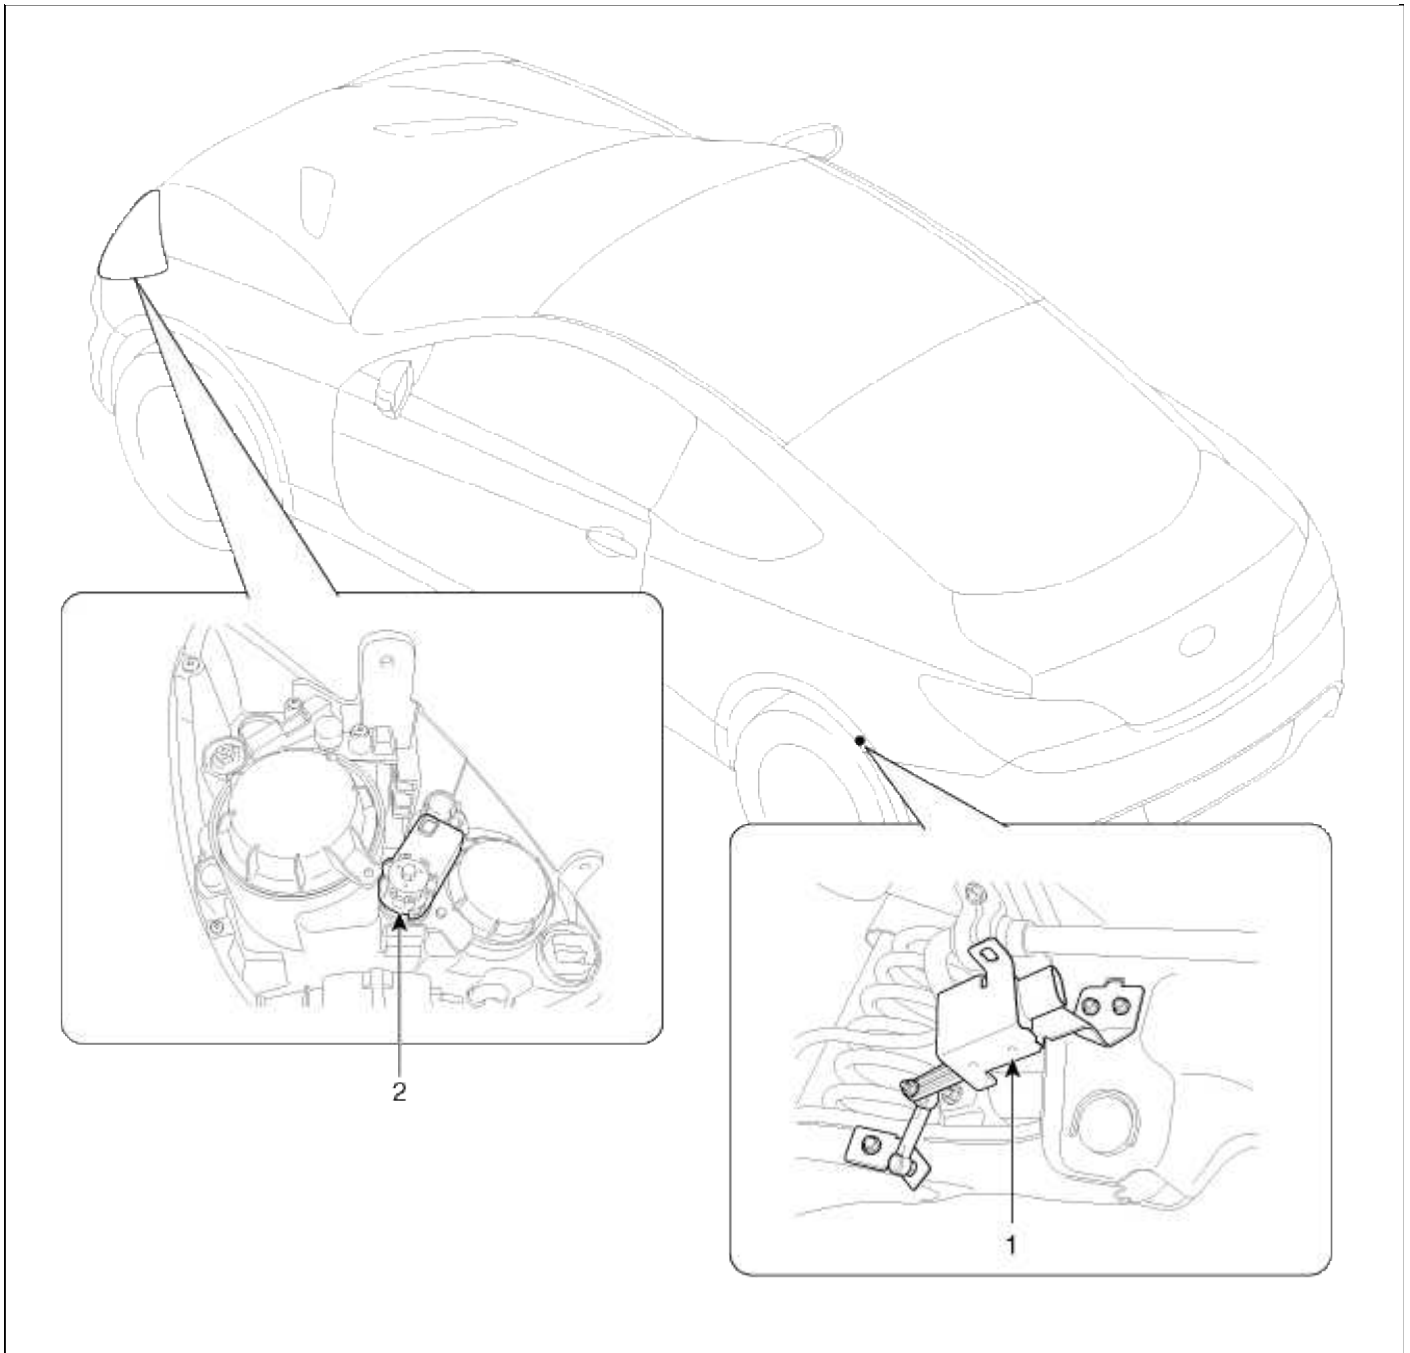


1. Head lamp leveling unit

2. Head lamp leveling actuator

Body Electrical System > Auto Head Lamp Leveling Device > Auto Head lamp leveling Unit > Schematic Diagrams

Circuit Diagram

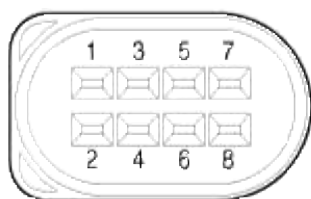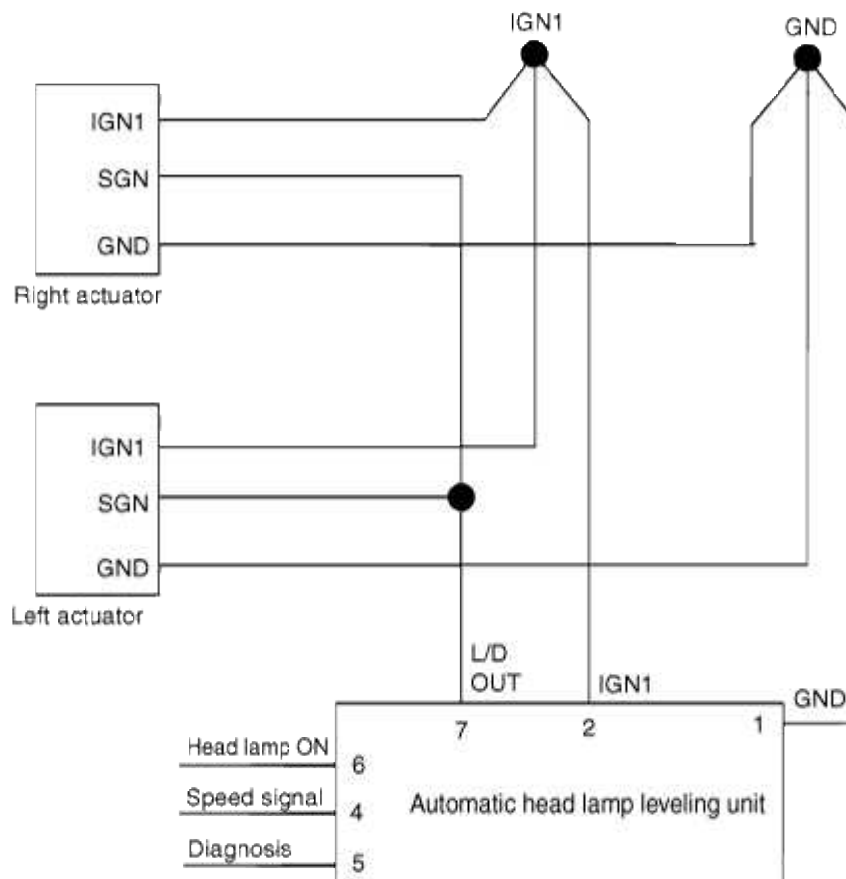

PIN CONNECTION

Terminal	Description
1	Ground
2	IGN1
3	-
4	Speed signal
5	Diagnosis
6	Head lamp ON
7	Leveling actuator
8	-

Body Electrical System > Auto Head Lamp Leveling Device > Auto Head lamp leveling Unit > Description and Operation

Description

According to driving environment and loading state of vehicle, head lamp lighting direction is changed to keep the driver's visibility range and to protect the driver's vision from glare, aiming at safety driving.

Sensor integrated ECU mounting on the rear center arm drives the actuator mounting on the head lamp since sensing the input signal following the vehicle's statically changes. m048@gmail.com

Head lamp beam is automatically operated by chassis tilt.

Operation

Operating Procedure


1. Suspension angle change resulted from vehicle's load change.
2. Sensor angle change.
3. Microprocessor calculates necessary head lamp angle change amount.
4. Sending a proper signal to head lamp leveling device and driving actuator.

Operating Condition


1. Ignition on
2. Low beam on
3. On stop : If sensor lever change is 2° and above, head lamp is operated after max. 1.5 sec.
4. On driving : If vehicle velocity is over 4km/h(2.48mile/h), velocity change is not over 0.8-1.6km/h(0.5 ~ 1.0mile/h) per second, and loading condition is changed, then head lamp is operated.

Components

1. Auto head lamp leveling unit
 1. Leveling unit & sensor
 2. Sensor mounting bracket
 3. Sensor linkage
 4. Linkage bracket
 5. Assist arm

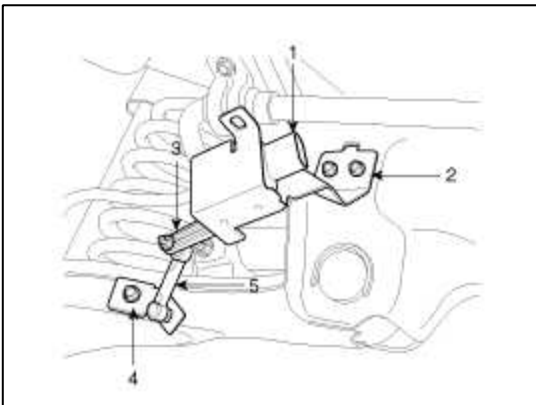

- A. Using a Micro-processor, percept the operation lever's mechanical angle change or speed signal.
 - B. As an actuator control device of inner control program, mounting on the rear center arm.
2. Actuator
 - A. Change the head lamp lighting direction up or down since automatic head lamp leveling unit sensing the input signal following the vehicle's statically changes.

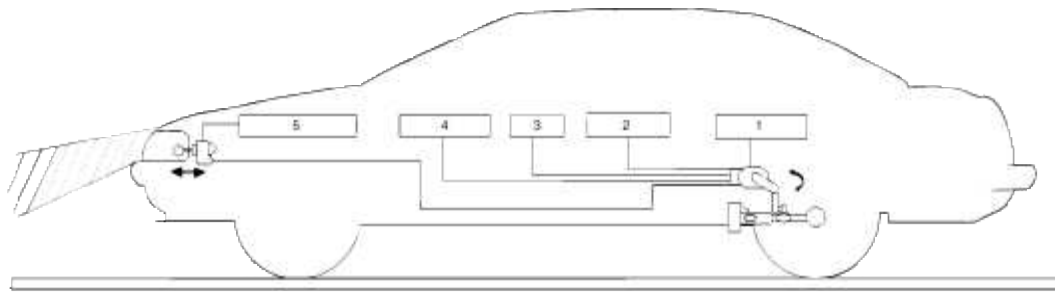


- | | |
|--------------------------------------|-----------------|
| 1. Automatic head lamp leveling unit | 4. Head lamp ON |
| 2. Speed signal (T/M) | 5. Actuator |
| 3. Diagnosis | |

Body Electrical System > Auto Head Lamp Leveling Device > Auto Head lamp leveling Unit > Repair procedures

Removal


1. Remove the head lamp leveling unit connector(A).

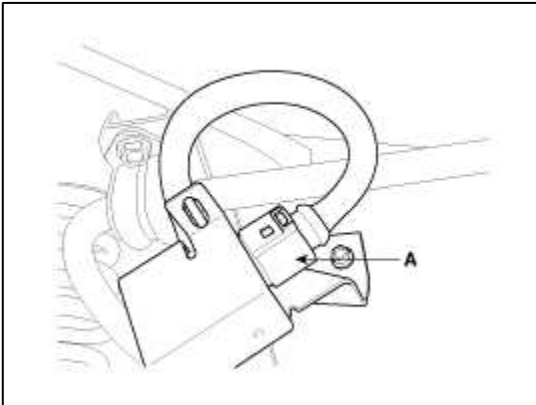

- Loosen the mounting bolts (3EA) of automatic head lamp leveling unit assembly.

Tightening torque :

3 ~ 5 Nm (30 ~ 50 kg.cm, 2.21 ~ 3.68 lbf.ft)

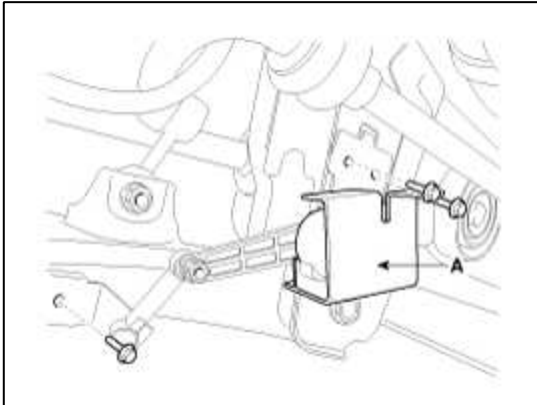

- Remove the head lamp leveling unit assembly.

Installation

- Install the head lamp leveling unit.
- Reconnect the head lamp leveling unit connector.

Inspection

- Ignition "ON".
- Turn on the head lamp switch.
- Check for operation. If the aim of the head lamps changes smoothly when the head lamp leveling switch is turned.
- If the operation does not work well, inspect the connector and terminals to be sure they are all making good contact.
If the terminals are bent, loose or corroded, repair them as necessary, and recheck the system.
If the terminals look OK, go to step 5.
- Substitute with a known-good head lamp assembly and check for proper operation.


Body Electrical System > Immobilizer System > Description and Operation

Description

The immobilizer system will disable the vehicle unless the proper ignition key is used, in addition to the currently available anti-theft systems such as car alarms, the immobilizer system aims to drastically reduce the rate of auto theft.

1. Encrypted SMARTRA type immobilizer


- A. The SMARTRA system consists of a passive challenge - response (mutual authentication) transponder located in the ignition key, an antenna coil, an encoded SMARTRA unit, an indicator light and the PCM(ECM).
- B. The SMARTRA communicates to the PCM(ECM) (Engine Control Module) via a dedicated communications line. Since the vehicle engine management system is able to control engine mobilization, it is the most suitable unit to control the SMARTRA.
- C. When the key is inserted in the ignition and turned to the ON position, the antenna coil sends power to the transponder in the ignition key. The transponder then sends a coded signal back through the SMARTRA unit to the PCM(ECM).
- D. If the proper key has been used, the PCM(ECM) will energize the fuel supply system. The immobilizer indicator light in the cluster will simultaneously come on for more than five seconds, indicating that the SMARTRA unit has recognized the code sent by the transponder.
- E. If the wrong key has been used and the code was not received or recognized by the PCM(ECM) the indicator light will continue blinking for about five seconds until the ignition switch is turned OFF.
- F. If it is necessary to rewrite the PCM(ECM) to learn a new key, the dealer needs the customer's vehicle, all its keys and the Hi-scan (pro) equipped with an immobilizer program card. Any key that is not learned during rewriting will no longer start the engine.
- G. The immobilizer system can store up to eight key codes.
- H. If the customer has lost his key, and cannot start the engine, contact Hyundai motor service station.

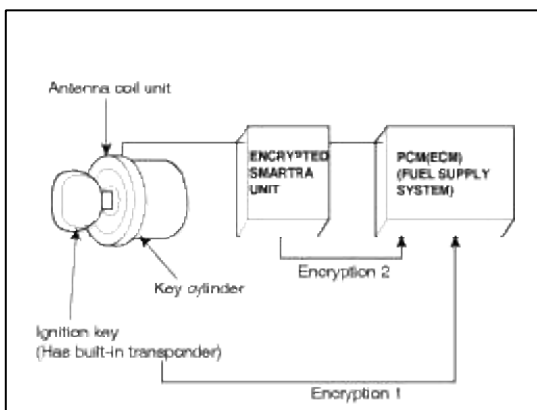

Components Operations

PCM (Power Train Control Module)

1. The PCM(ECM) (A) carries out a check of the ignition key using a special encryption algorithm, which is programmed into the transponder as well as the PCM(ECM) simultaneously. Only if the results are equal, the engine can be started. The data of all transponders, which are valid for the vehicle, are stored in the PCM(ECM). ERN (Encrypted Random Number) value between EMS and encrypted smartra unit is checked and the validity of coded key is decided by EMS.

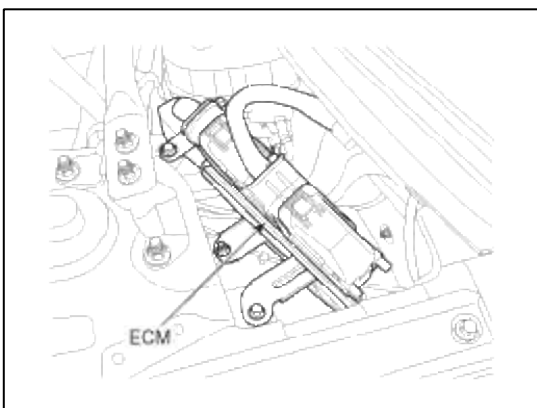


ENCRYPTED SMARTRA unit (A)

The SMARTRA carries out communication with the built-in transponder in the ignition key. This wireless

communication runs on RF (Radio frequency of 125 kHz). The SMARTRA is mounted behind of the crash pad close to center cross bar.


The RF signal from the transponder, received by the antenna coil, is converted into messages for serial communication by the SMARTRA device. And, the received messages from the PCM(ECM) are converted into an RF signal, which is transmitted to the transponder by the antenna.

The SMARTRA does not carry out the validity check of the transponder or the calculation of encryption algorithm. This device is only an advanced interface, which converts the RF data flow of the transponder into serial communication to the PCM(ECM) and vice versa.

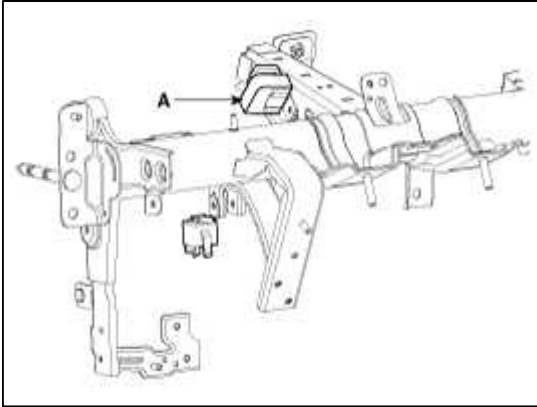

TRANSPONDER (Built-in keys)


The transponder (A) has an advanced encryption algorithm. During the key teaching procedure, the transponder will be programmed with vehicle specific data. The vehicle specific data are written into the transponder memory. The write procedure is once only; therefore, the contents of the transponder can never be modified or changed.

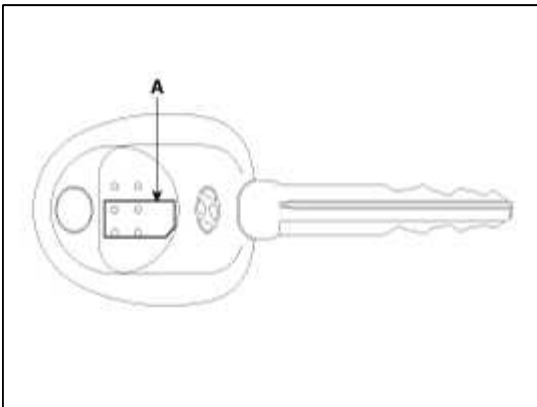

Antenna coil

The antenna coil (A) has the following functions.

- The antenna coil supplies energy to the transponder.
 - The antenna coil receives signal from the transponder.
 - The antenna coil sends transponder signal to the SMARTRA.
- It is located directly in front of the steering handle lock.

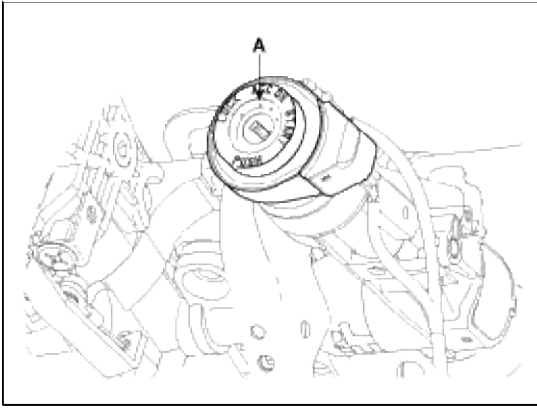

Body Electrical System > Immobilizer System > Repair procedures

Replacement


Problems And Replacement Parts:

Problem	Part set	Scan tool required?
All keys have been lost	Blank key (4)	YES
Antenna coil unit does not work	Antenna coil unit	NO
ECM does not work	PCM(ECM)	YES
Ignition switch does not work	Ignition switch with Antenna coil unit	YES
Unidentified vehicle specific data occurs	Key, PCM(ECM)	YES
SMARTRA unit does not work	SMARTRA unit	YES


Replacement Of Ecm And Smartra

In case of a defective ECM, the unit has to be replaced with a "virgin" or "neutral" ECM. All keys have to be taught to the new ECM. Keys, which are not taught to the ECM, are invalid for the new ECM (Refer to key teaching procedure). The vehicle specific data have to be left unchanged due to the unique programming of transponder. In case of a defective SMARTRA, it needs teaching the smartra. A new SMARTRA device replaces the old one and smartra need teaching.

1. Things to remember before a replacement (PCM(ECM))

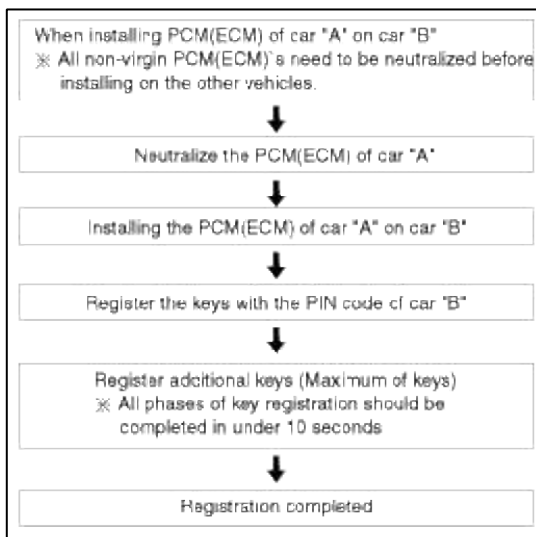

2. Things to remember before a replacement (Keys & Additional registration)

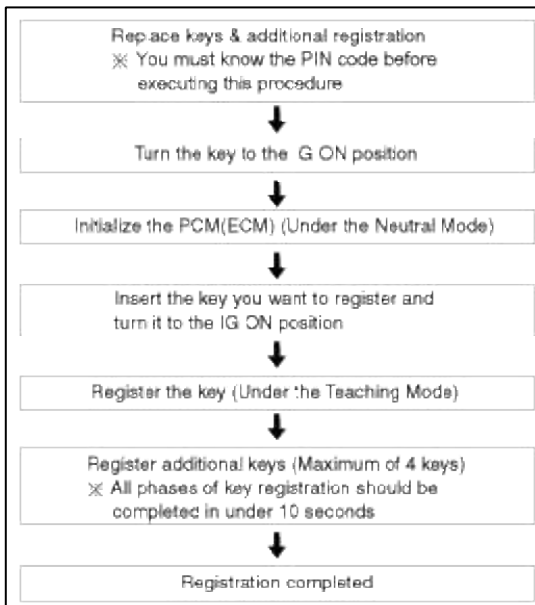

NOTE

1. When there is only one key registered and you wish to register another key, you need to re-register the key which was already registered.
2. When the key #1 is registered and master key #2 is not registered, Put the key #1 in the IG/ON or the start position and remove it. The engine can be started with the unregistered key #2.
(Note that key #2 must be used within 10 seconds of removing key #1)
3. When the key #1 is registered and key #2 is not registered, put the unregistered master key #2 in the IG/ON or the start position.
The engine cannot be started even with the registered key #1.
4. When you inspect the immobilizer system, refer to the above paragraphs 1, 2 and 3.
Always remember the 10 seconds zone.
5. If the pin code & password are entered incorrectly on three consecutive inputs, the system will be locked for one hour.
6. Be cautious not to overlap the transponder areas.
7. Problems can occur at key registration or vehicle starting if the transponders should overlap.

Neutralizing Of ECM

The PCM(ECM) can be set to the "neutral" status by a tester.

A valid ignition key is inserted and after ignition on is recorded, the PCM(ECM) requests the vehicle specific data from the tester. The communication messages are described at "Neutral Mode" After successfully receiving the data, the PCM(ECM) is neutralized.

The ECM remains locked. Neither the limp home mode nor the "twice ignition on" function, is accepted by the PCM(ECM).

The teaching of keys follows the procedure described for the virgin PCM(ECM). The vehicle specific data have to be unchanged due to the unique programming of the transponder. If data should be changed, new keys with a virgin transponder are requested.

This function is for neutralizing the PCM(ECM) and Key. Ex) when lost key, Neutralize the PCM(ECM) then teach keys.











(Refer to the Things to do when Key & PIN Code the PCM(ECM) can be set to the "neutral" status by a scanner. If wrong vehicle specific data have been sent to SMATRA three times continuously or intermittently, the SMATRA will reject the request to enter neutral mode for one hour. Disconnecting the battery or other manipulation cannot reduce this time. After connecting the battery the timer starts again for one hour.

NOTE


- Neutralizing setting condition
 - In case of PCM(ECM) status "Learnt" regardless of user password "Virgin or Learnt"
 - Input correct PIN code by scanner.
 - Neutralizing meaning .
 - : PIN code (6) & user password (4) deletion.
 - : Locking of ECM (except key teaching permission)
- Neutralizing meaning:
 - PIN Code(6) & User P/Word(4) deletion
 - Locking of EMS(except Key Learning permission)



Function	Engine Running			Learning	
	Learnt Key	Limp home	Twice Ignition	Key	User Password
EMS Neutral	No	No	No	Yes	No



Select System

 ENGINE	 A/T	 ESC	 AIRBAG	 AIR/CON
 IMMO	 PIC	 TPMS	 BCM	 CODE

Selected


IMMO
 Immobilizer(IMMO)

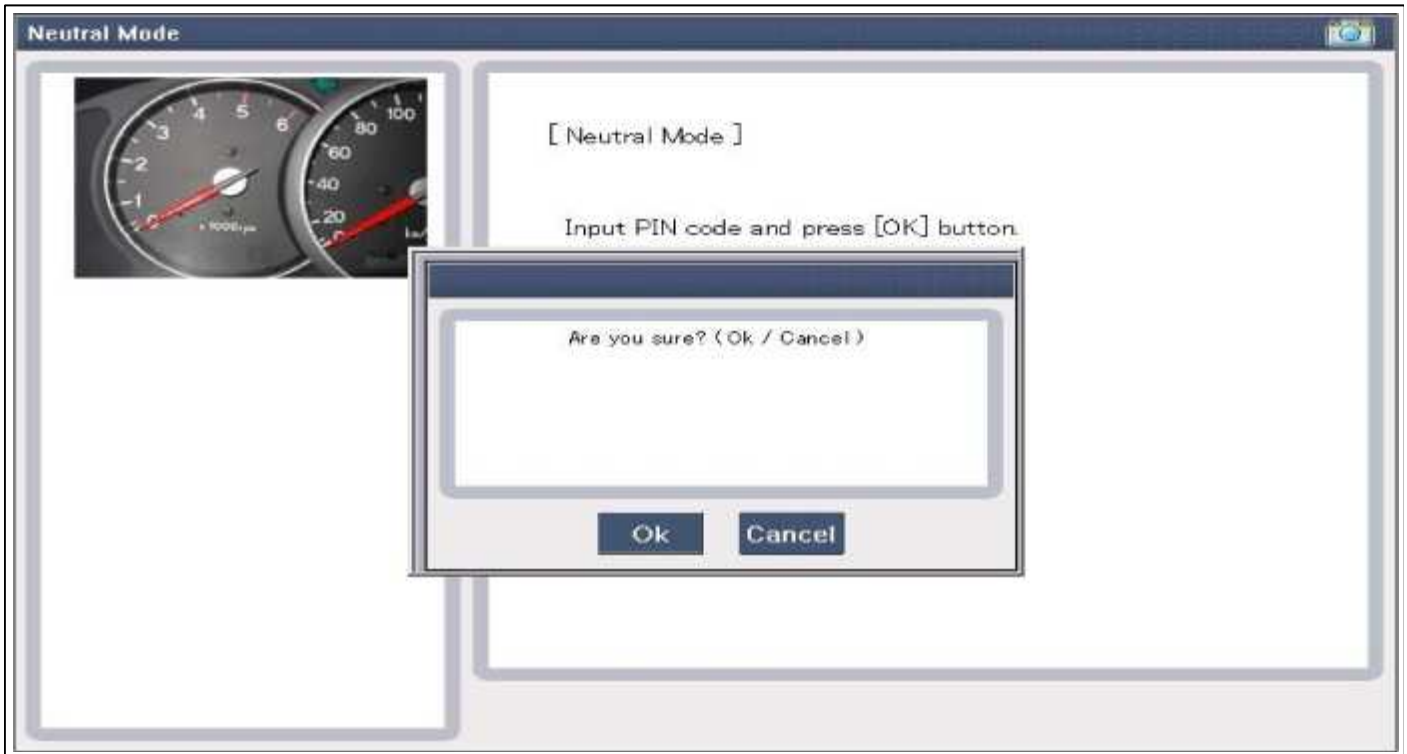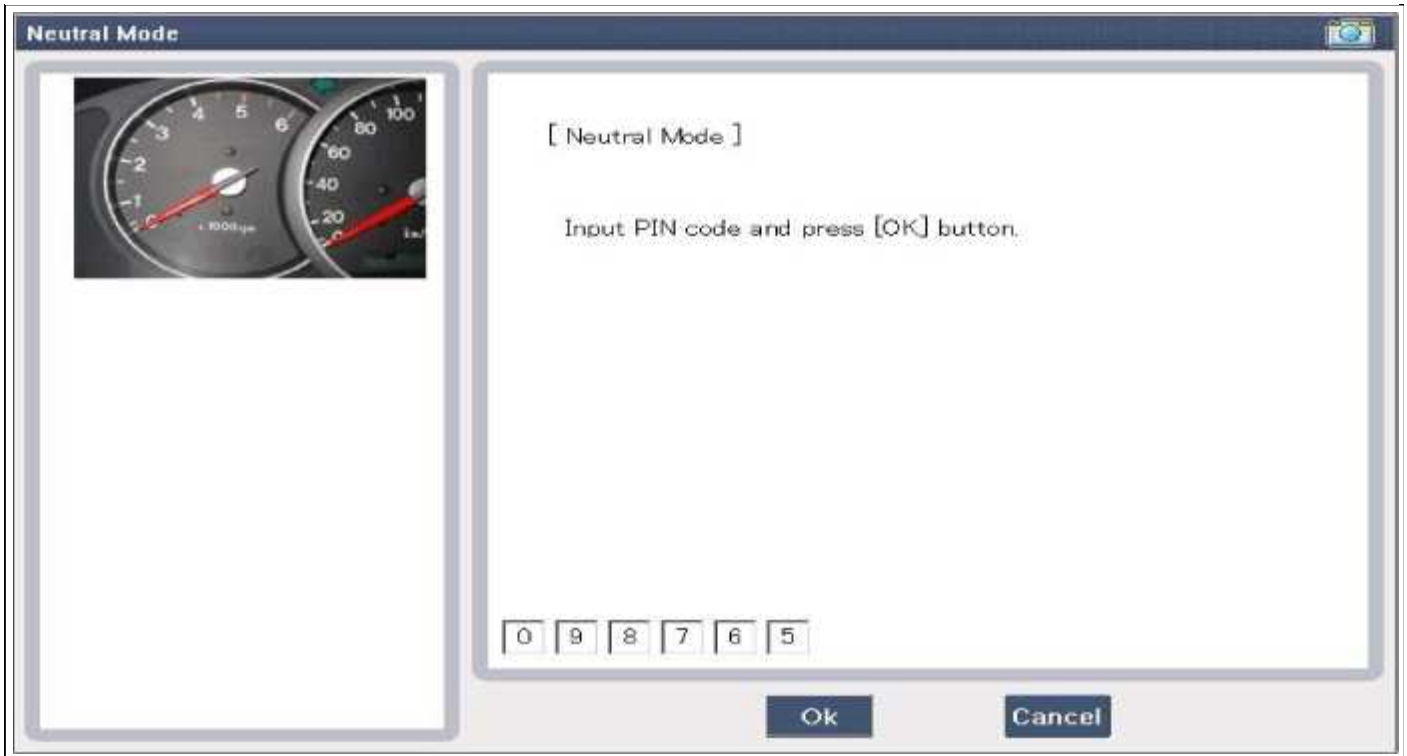

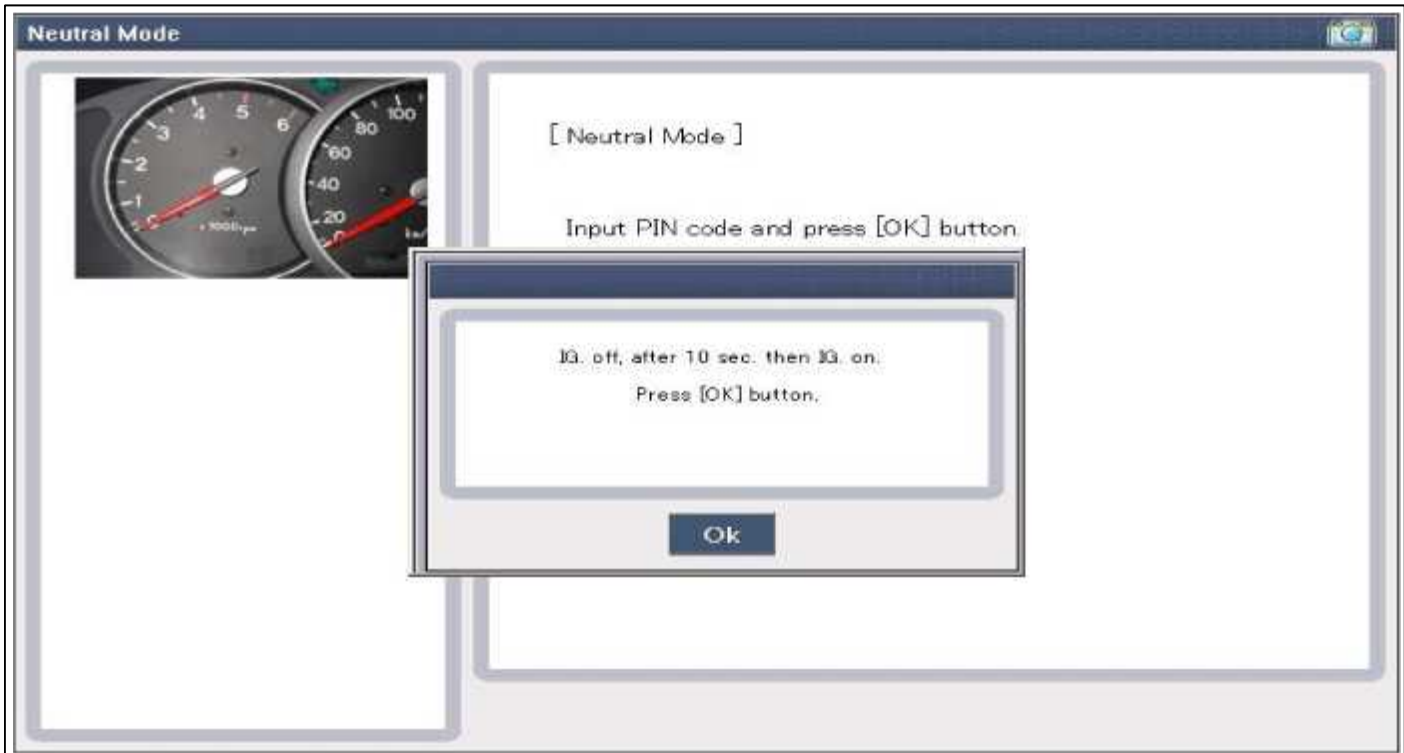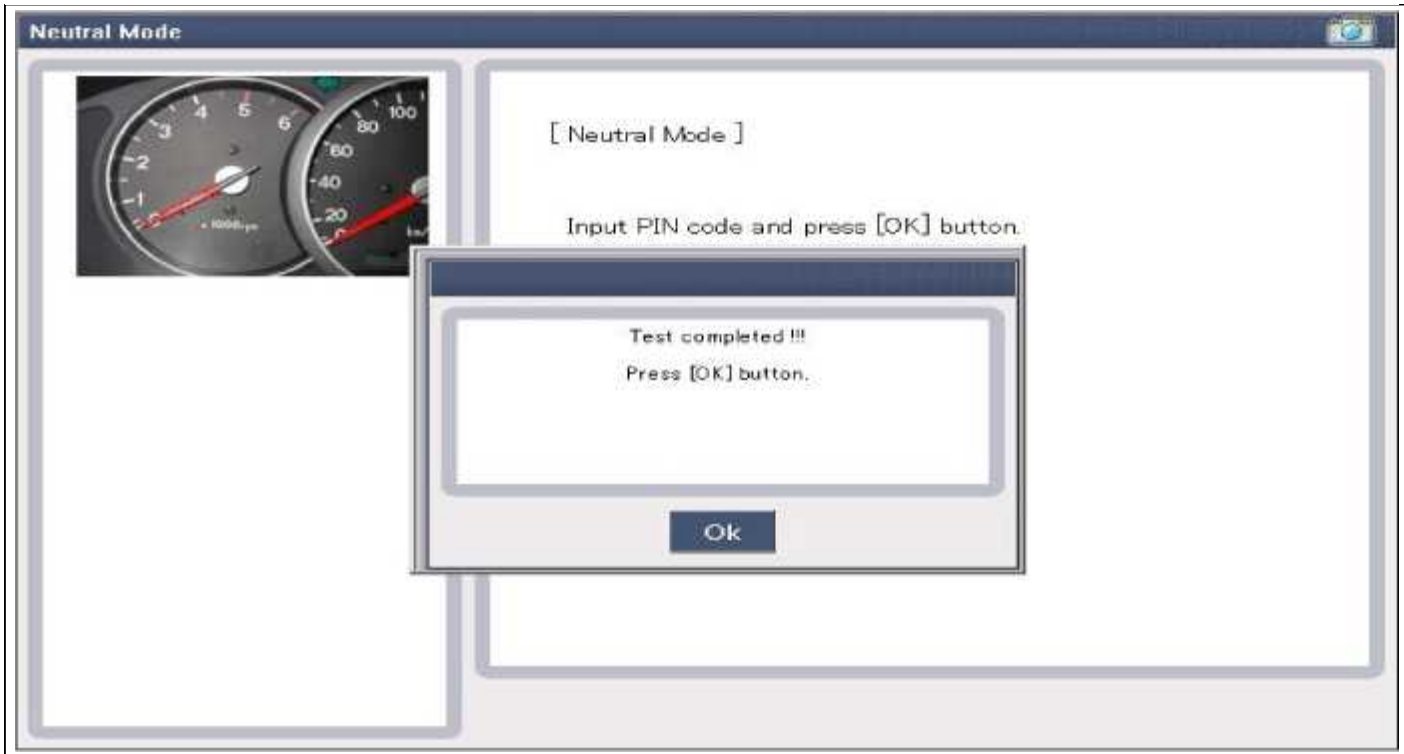



Neutralizing Of SMARTRA

The EMS can be set to the status "neutral" by tester

Ignition key (regardless of key status) is inserted and after IGN ON. If receiving the correct vehicle password from GST, SMARTRA can be neutralized. The neutralization of SMARTRA is possible if DPN is same as the value inputted by GST.

In case that the SMARTRA status is neutral, the EMS keeps the lock state. And the start is not possible by "twice ignition".

In case of changing the vehicle password, new virgin transponder must be only used. And in case of virgin key, after Learning the key of vehicle password, it can be used.

If wrong vehicle specific data have been sent to SMATRA three times continuously or intermittently, the SMATRA will reject the request to enter neutral mode for one hour. Disconnecting the battery or other manipulation cannot reduce this time. After connecting the battery the timer starts again for one hour.

NOTE

- Neutralizing Setting condition :
 - In case of "SMARTRA status", "Learnt"
 - Input correct Pin code by tester
- Neutralizing meaning :
 - Vehicle password(DPN Code) & SEK Code deletion.
 - Permission of New DPN Learning.

Function	Engine Running			Learning	
	Learnt Key	Limp home	Twice Ignition	Key	User Password
SMARTRA					
Neutral	No	Yes (EMS learnt)	No	Yes	No

ID Register

➤ Password Teaching/Changing


➤ Neutral Mode

➤ Limp Home Mode

➤ Smatra Neutral Mode

➤ Teaching

Smatra Neutral Mode





[Neutral Mode]

Input PIN code and press [OK] button.

4 5 5 0 7 2

Ok Cancel

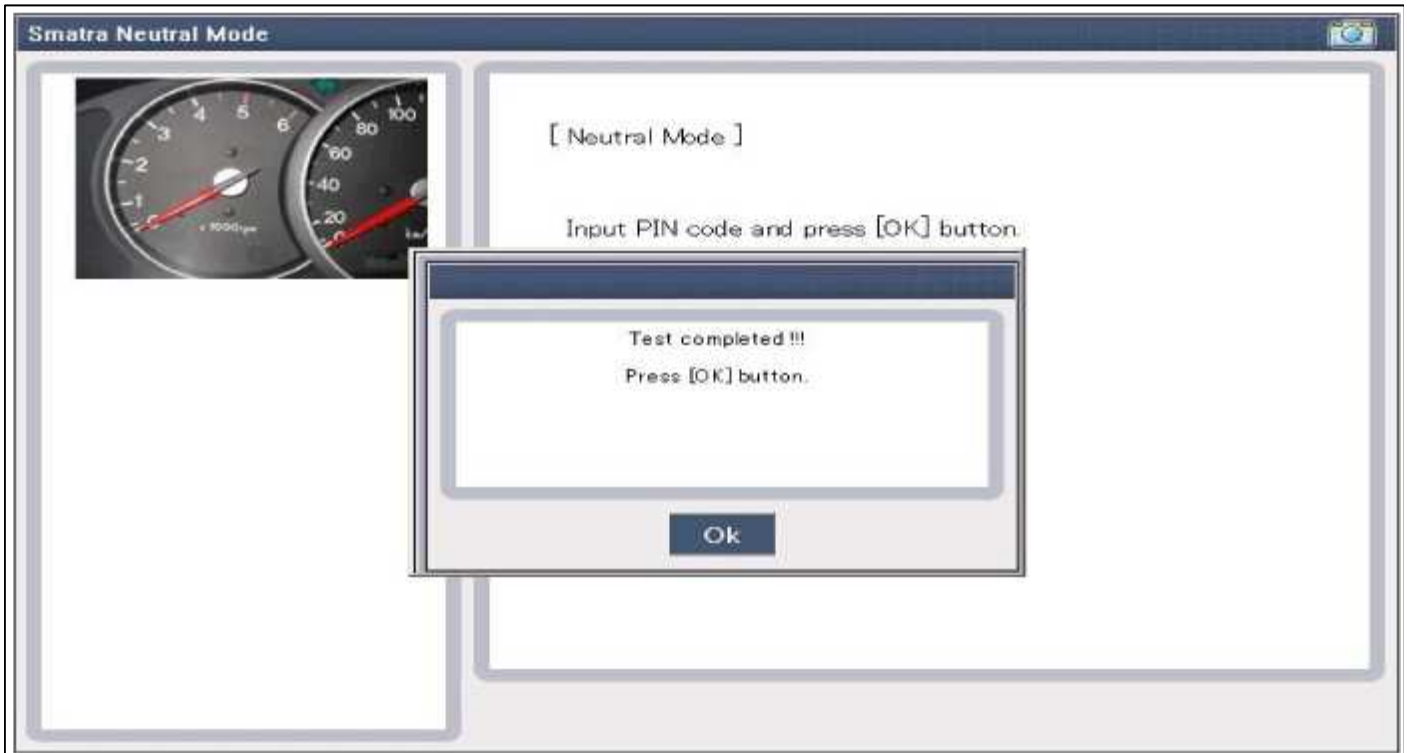

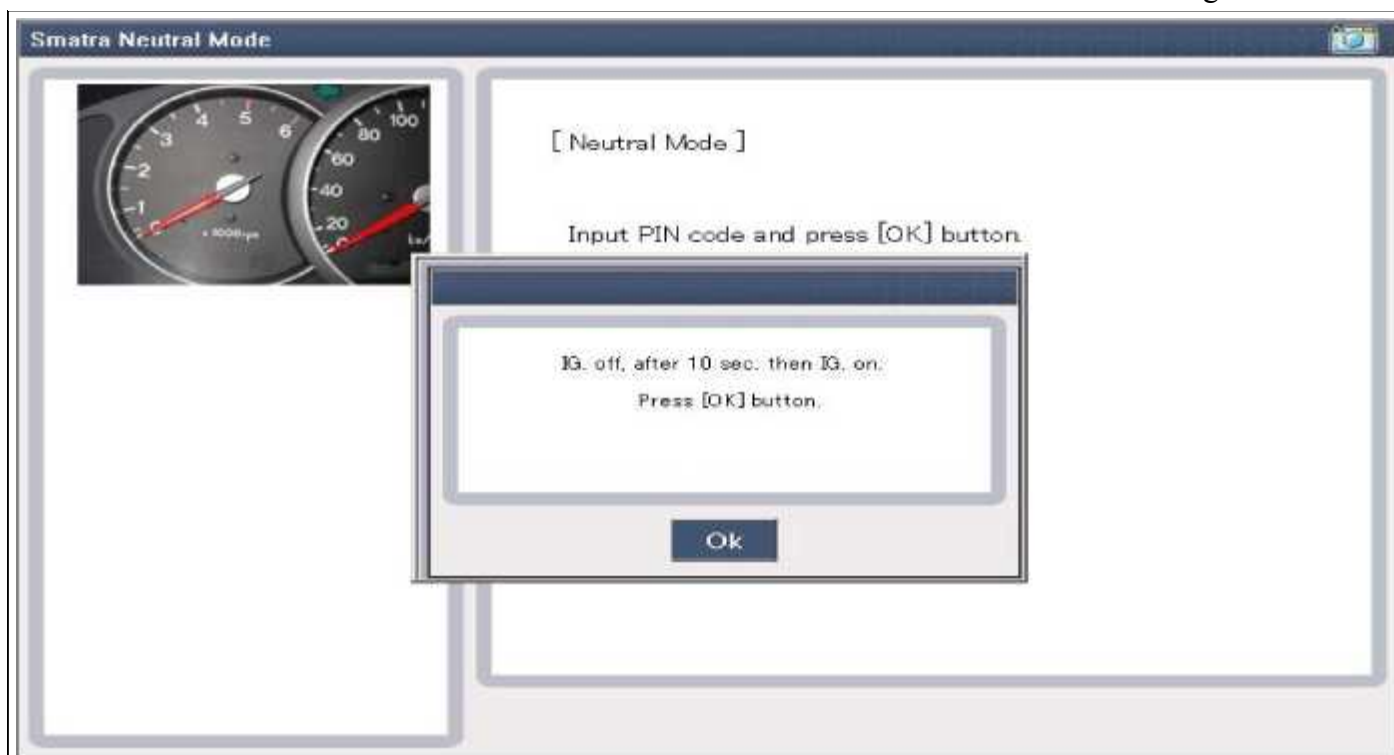

Current Data		1/4
Sensor Name	Value	Unit
<input type="checkbox"/> Number of Learnt Keys	0	-
<input type="checkbox"/> ECU Status	NEUTRAL	-
<input type="checkbox"/> Key Status	LEARNT	-
<input type="checkbox"/> Smatra3 Status	NEUTRAL	-

Teaching Procedures

1. Key Teaching Procedure

Key teaching must be done after replacing a defective PCM(ECM) or when providing additional keys to the vehicle owner.

The procedure starts with an PCM(ECM) request for vehicle specific data (PIN code: 6digits) from the tester. The "virgin" PCM(ECM) stores the vehicle specific data and the key teaching can be started. The "learnt" PCM(ECM) compares the vehicle specific data from the tester with the stored data. If the data are correct, the teaching can proceed. If incorrect vehicle specific data have been sent to the PCM(ECM) three times, the PCM(ECM) will reject the request of key teaching for one hour. This time cannot be reduced by disconnecting the battery or any other manipulation. After reconnecting the battery, the timer starts again for one hour.

The key teaching is done by ignition on with the key and additional tester commands. The PCM(ECM) stores the relevant data in the EEPROM and in the transponder. Then the PCM(ECM) runs the authentication required for confirmation of the teaching process. The successful programming is then confirmed by a message to the tester.

If the key is already known to the PCM(ECM) from a previous teaching, the authentication will be accepted and the EEPROM data are updated. There is no changed transponder content (this is impossible for a learnt transponder). The attempt to repeatedly teach a key, which has been taught already during the same teaching cycle, is recognized by the PCM(ECM). This rejects the key and a message is sent to the tester.


The PCM(ECM) rejects invalid keys, which are presented for teaching. A message is sent to the tester. The key is considered invalid due to faults in the transponder or other reasons, which result from unsuccessful programming of data. If the PCM(ECM) detects different authenticators of a transponder and an PCM(ECM), the key is considered to be invalid. The maximum number of taught keys is 8.

If an error occurs during the Immobilizer Service Menu, the PCM(ECM) status remains unchanged and a specific code is stored.







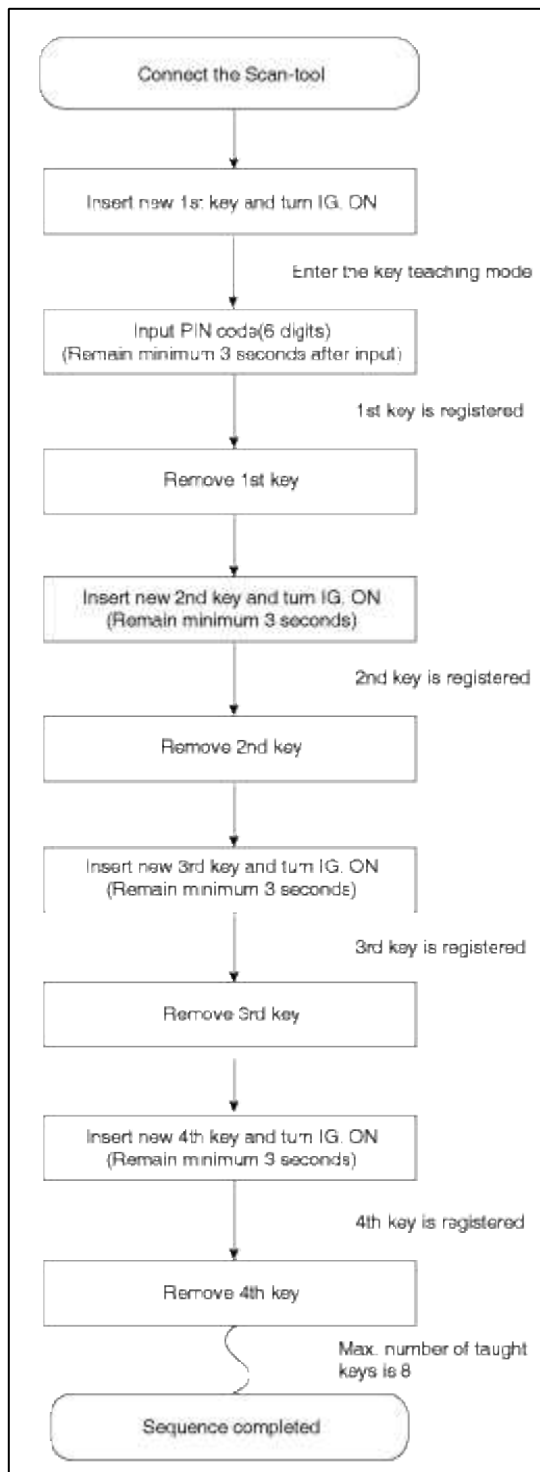




If the PCM(ECM) status and the key status do not match for teaching of keys, the tester procedure will be stopped. A specific fault code will be stored at PCM(ECM).

NOTE

When teaching the 1st key, Smartra registers at the same time.




(1) PCM(ECM) learnt status.

Select System					Selected
 ENGINE	 A/T	 ESC	 AIRBAG	 AIR/CON	 IMMO Immobilizer(IMMO)
 IMMO	 PIC	 TPMS	 BCM	 CODE	

ID Register

- Password Teaching/Changing
- Neutral Mode
- Limp Home Mode
- Smatra Neutral Mode
- Teaching

Teaching



[Teaching]


Status : NEUTRAL

Input PIN code and press [OK] button.

4 5 5 0 7 2

Ok Cancel

Teaching





[Teaching]


1st key teaching

Continue? (OK/CANCEL)

Ok Cancel

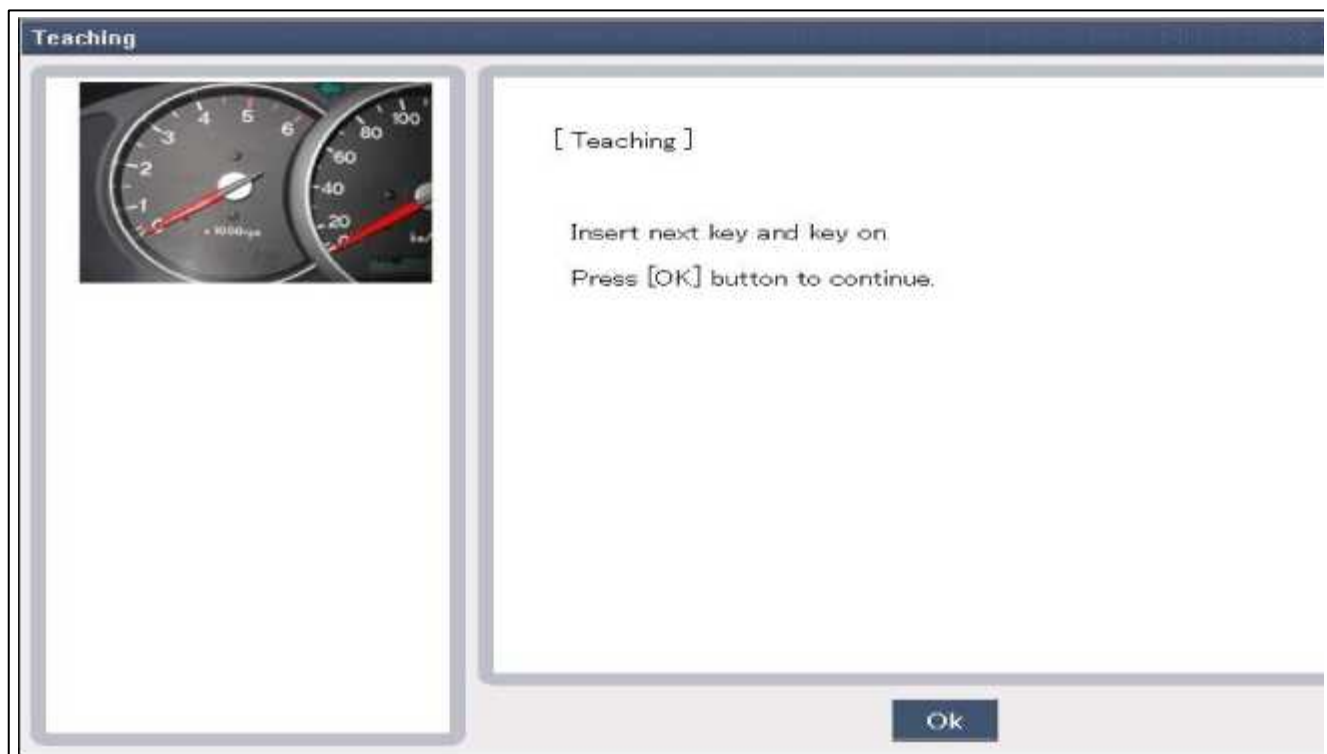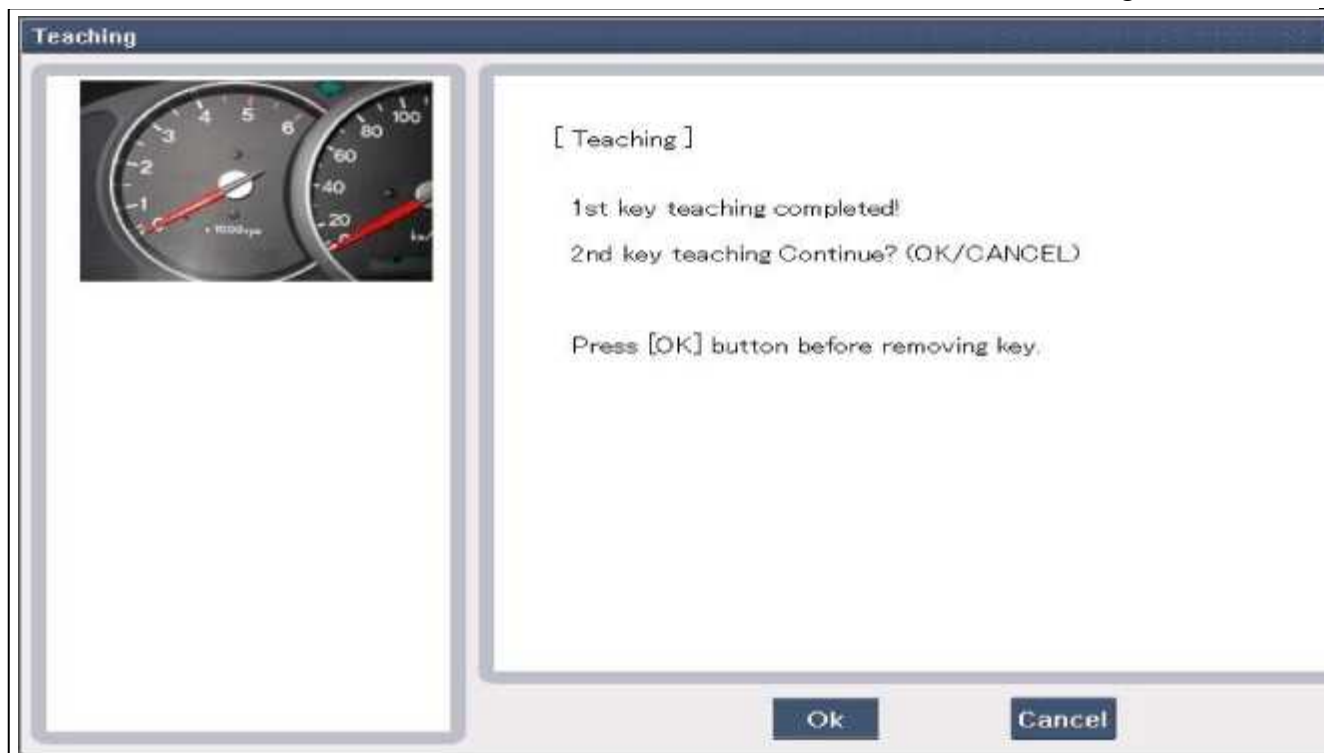

Teaching




[Teaching]

2nd key teaching completed!
3rd key teaching Continue? (OK/CANCEL)

Press [OK] button before removing key.

Ok Cancel



Teaching




[Teaching]

Insert next key and key on.
Press [OK] button to continue.

Ok

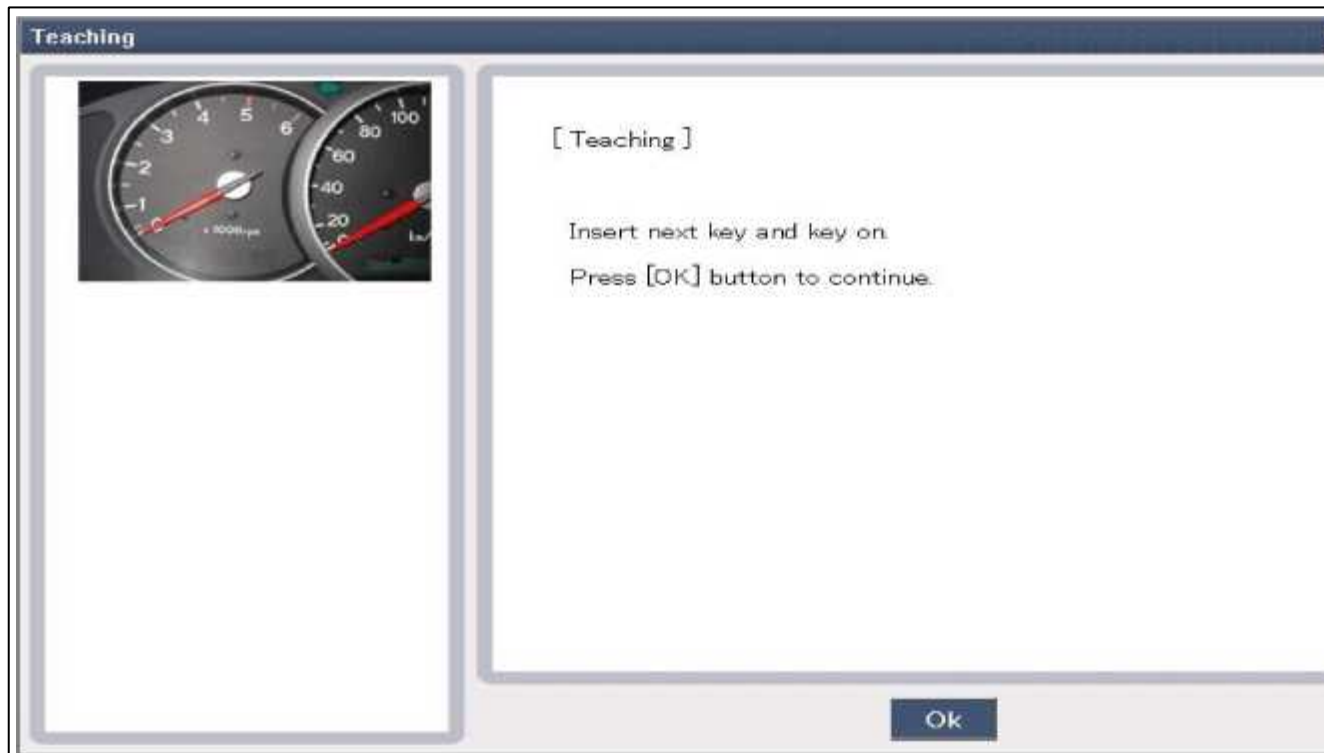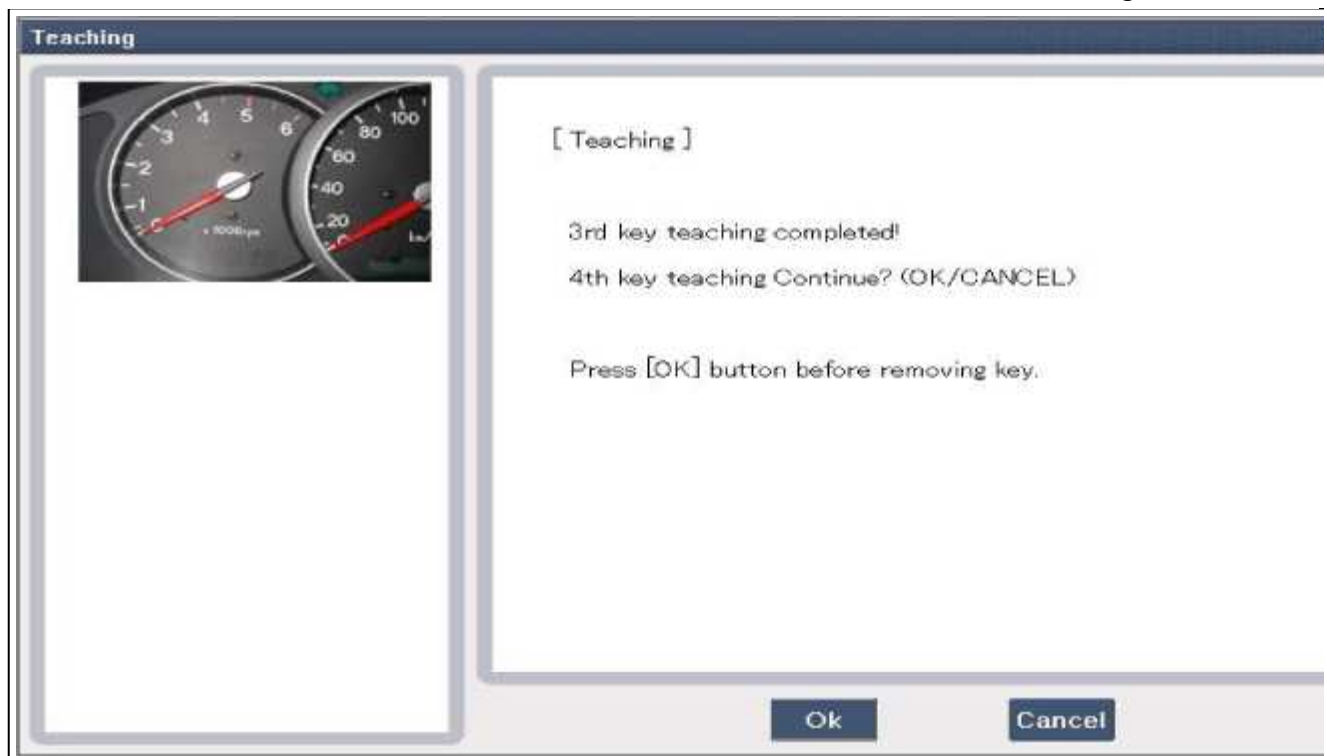

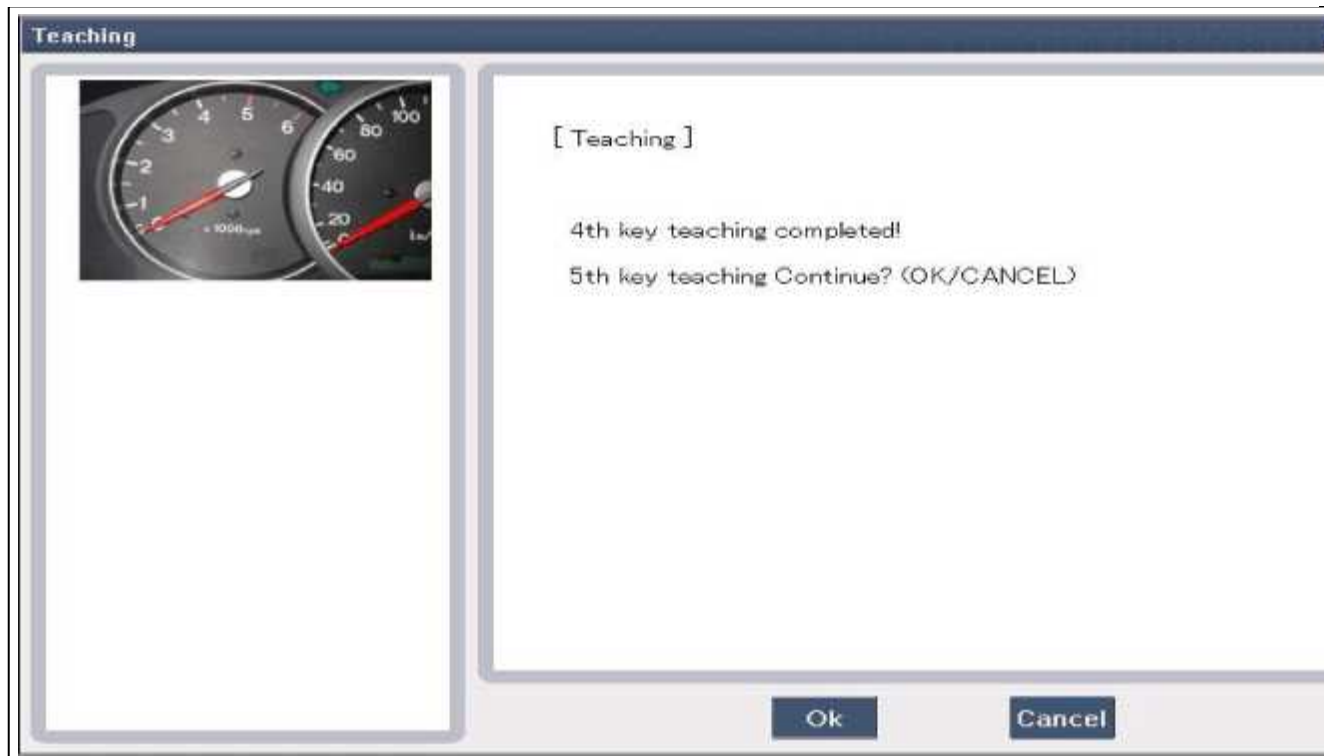

(2) PCM(ECM) virgin status.

After replacing new "PCM(ECM)" GDS displays that PCM(ECM) is virgin status in Key Teaching mode. "VIRGIN" status means that PCM(ECM) has not matched any PIN code before.

2. User Password Teaching Procedure

The user password for limp home is taught at the service station. The owner of the vehicle can select a number with digits.

The user password teaching is only accepted by a "learnt" PCM(ECM). Before first teaching of user password to PCM(ECM), the status of the password is "virgin" No limp home function is possible.

The teaching is started by ignition on, with a valid key(learnt key) and sending the user password by tester. After successful teaching, the status of the user password changes from "virgin" to "learnt"

The learnt user password can also be changed. This can be done if the user password status is "learnt" and the tester sends authorization of access, either the old user password or the vehicle specific data. After correct authorization PCM(ECM) requests the new user password. The status remains "learnt" and the new user password will be valid the next limp home mode.

If wrong user passwords or wrong vehicle specific data have been sent to the PCM(ECM) three times continuously, the PCM(ECM) will reject the request to change the password for one hour. This time cannot be reset by disconnecting the battery or any other actions. After reconnecting the battery, the timer starts again for one hour.

(1) User password teaching

ID Register

➤ Password Teaching/Changing

➤ Neutral Mode

➤ Limp Home Mode

➤ Smatra Neutral Mode

➤ Teaching

Password Teaching/Changing




[Password Teaching/Changing]


Password Status : Virgin

Input new password and press [OK] button.

Ok


Cancel

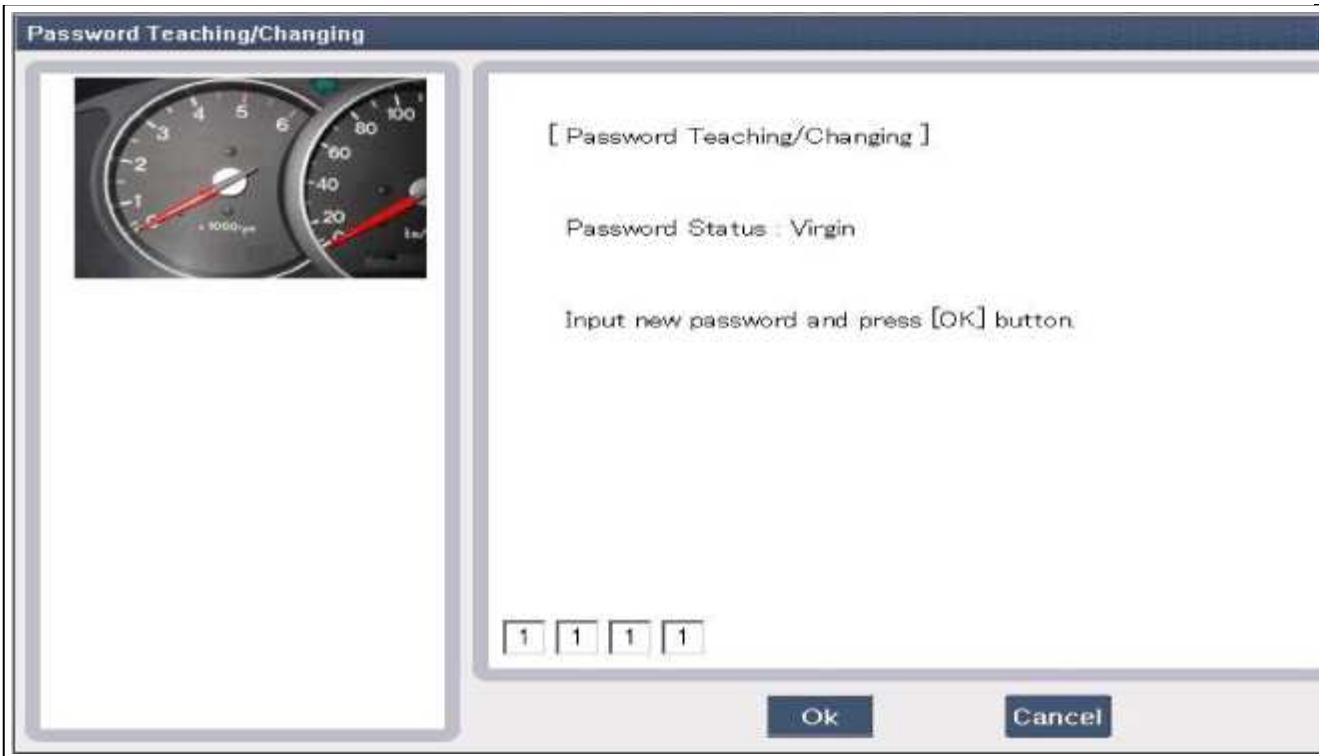

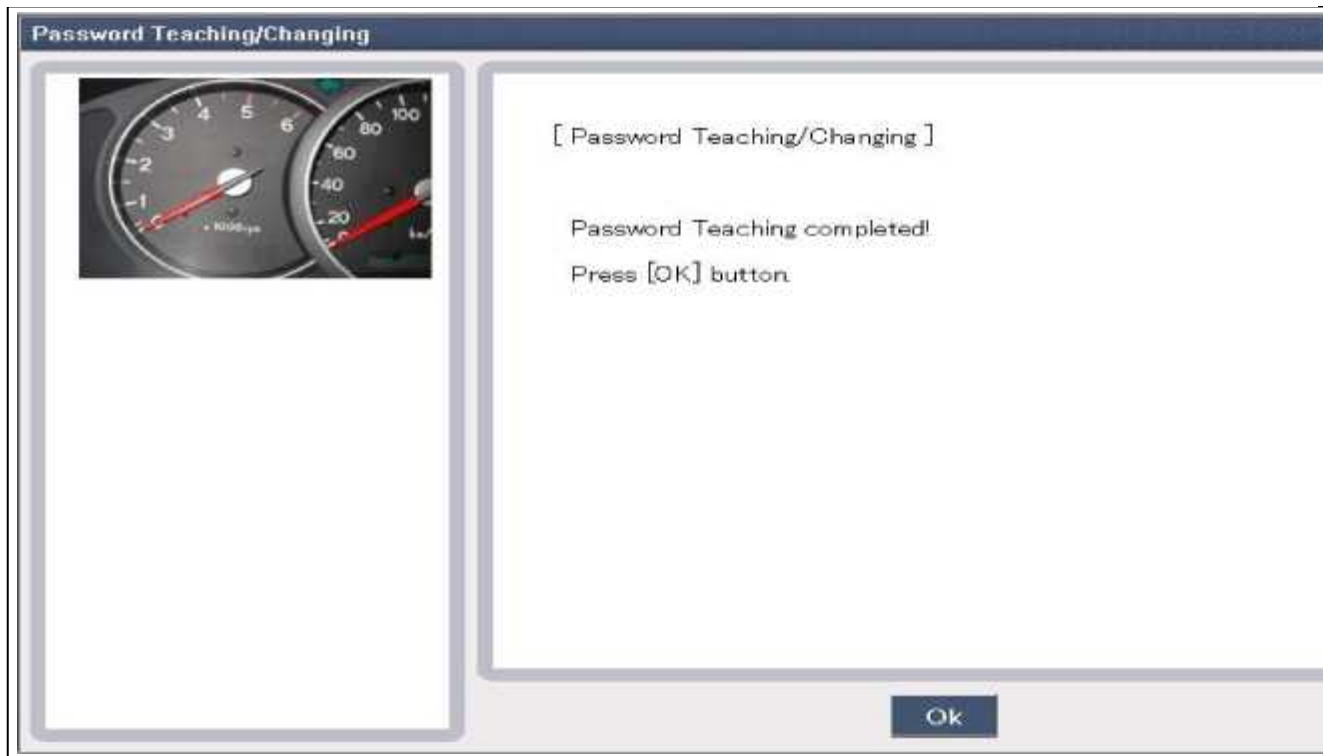


In case of putting wrong password, retry from first step after 10 seconds.

(2) User password changing

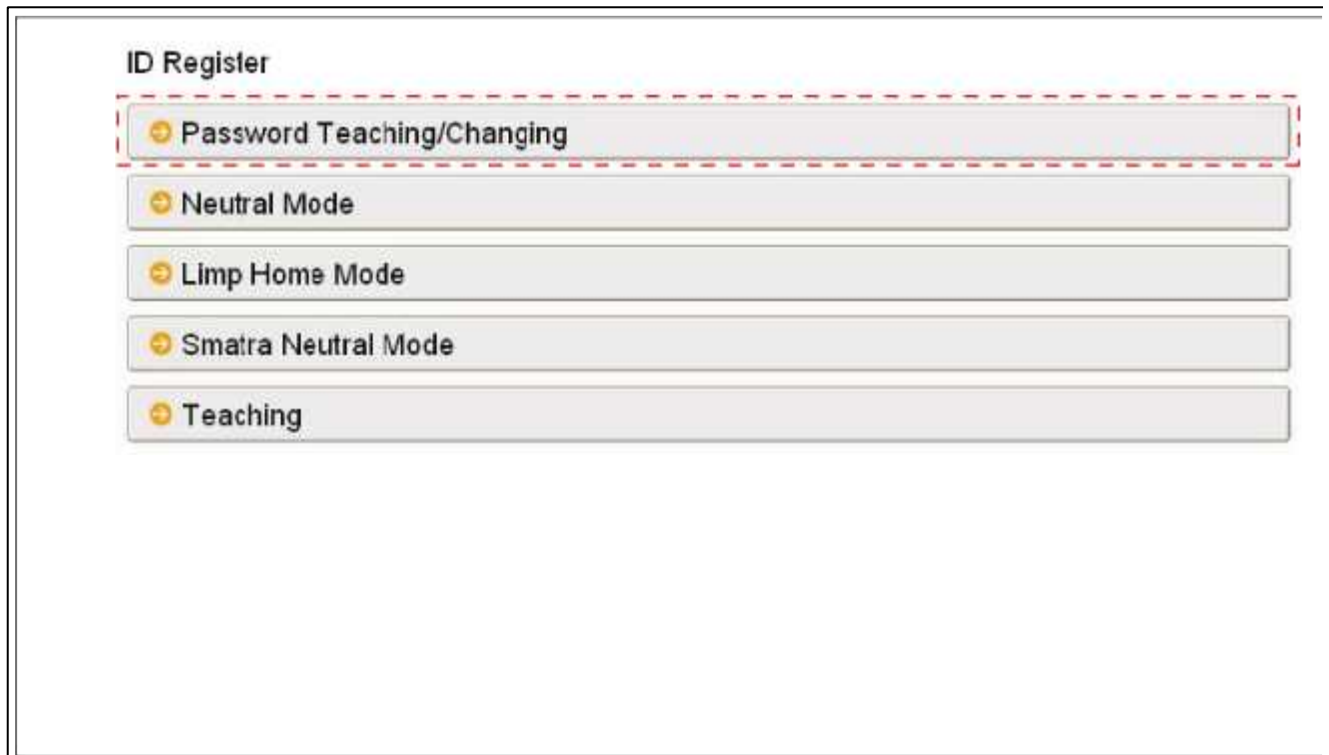

Password Teaching/Changing



[Password Teaching/Changing]

Password Status : Learnt

Input old password and press [OK] button.

Ok **Cancel**

Password Teaching/Changing





[Password Teaching/Changing]

Password Status : Learnt

Input old password and press [OK] button.

Ok **Cancel**

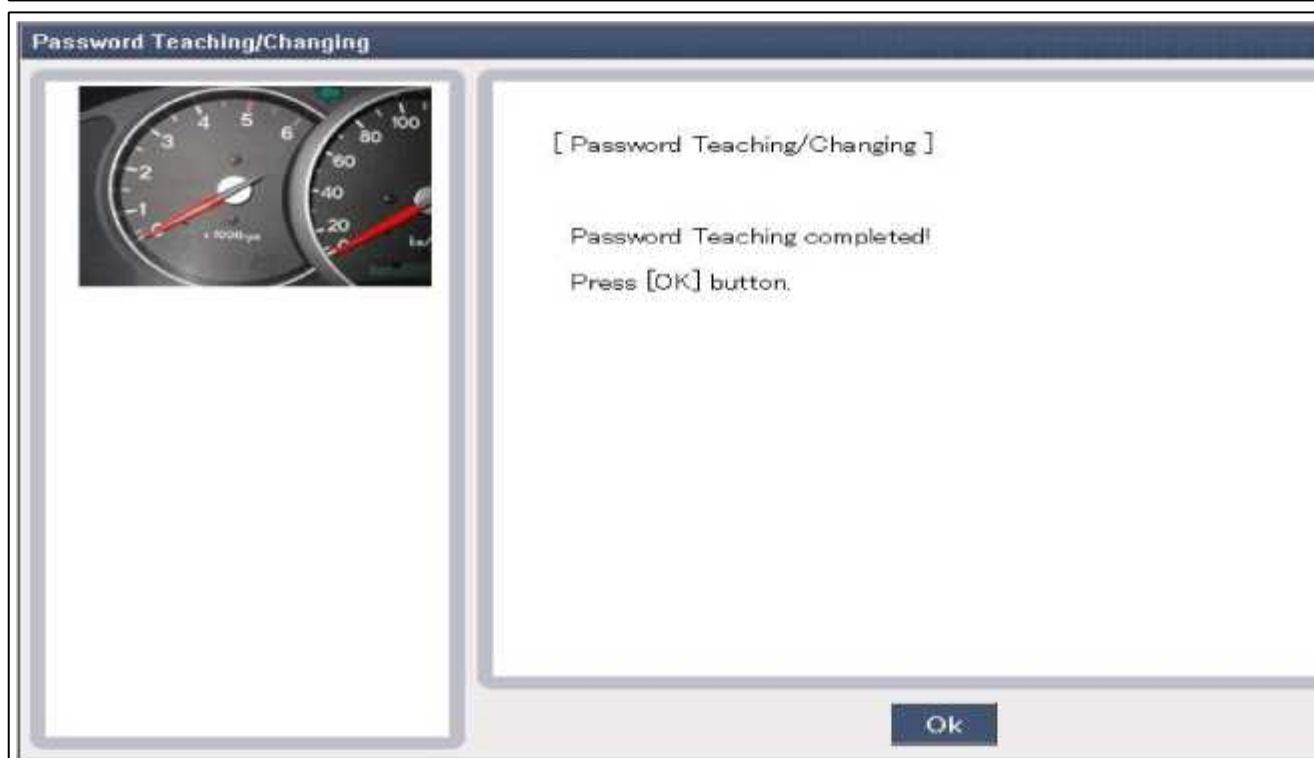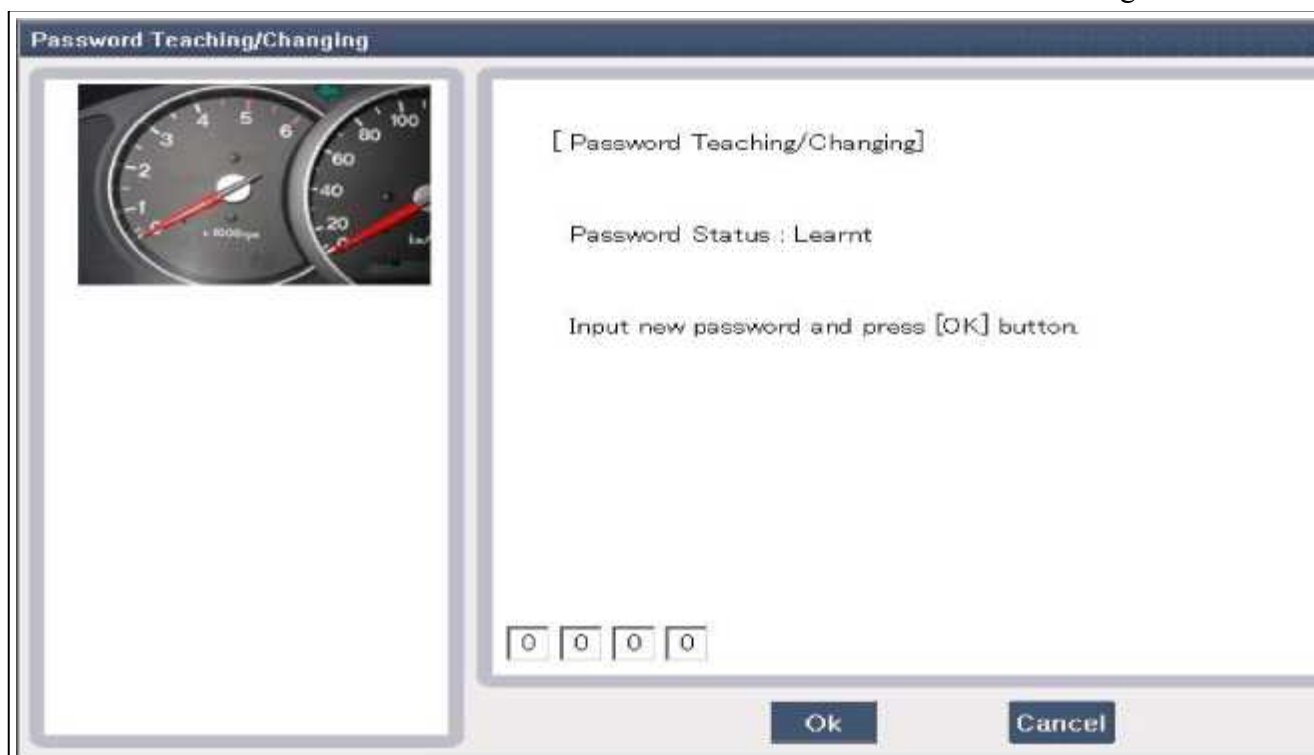

Limp Home Function

1. Limp Home By Tester

If the PCM(ECM) detects the fault of the SMARTRA or transponder, the PCM(ECM) will allow limp home function of the immobilizer. Limp home is only possible if the user password (4 digits) has been given to the PCM(ECM) before. This password can be selected by the vehicle owner and is programmed at the service station. The user password can be sent to the PCM(ECM) via the special tester menu.

Only if the PCM(ECM) is in status "learnt" and the user password status is "learnt" and the user password is correct, the PCM(ECM) will be unlocked for a period of time (30 sec.). The engine can only be started during this time. After the time has elapsed, engine start is not possible.

If the wrong user password is sent, the PCM(ECM) will reject the request of limp home for one hour. Disconnecting the battery or any other action cannot reduce this time. After connecting the battery to the PCM(ECM), the timer

starts again for one hour.

ID Register


➤ Password Teaching/Changing


➤ Neutral Mode

➤ Limp Home Mode

➤ Smatra Neutral Mode

➤ Teaching

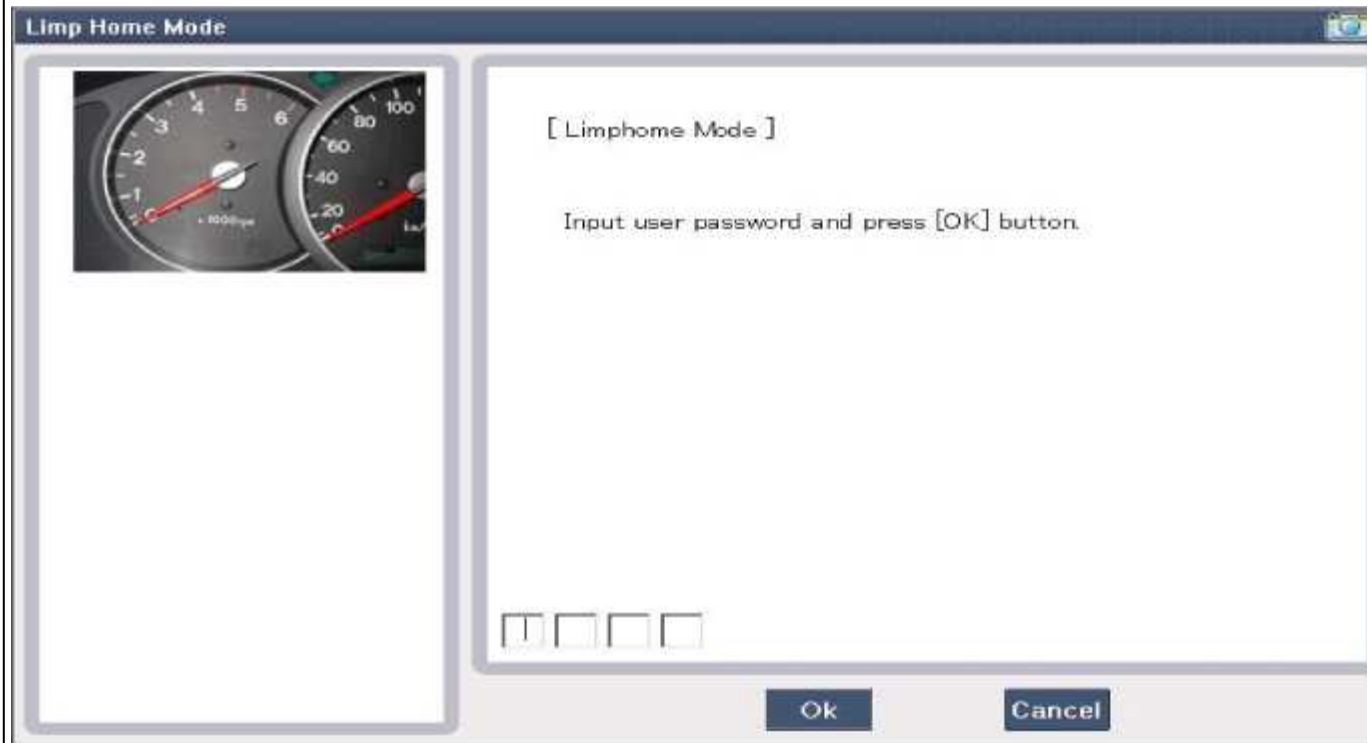

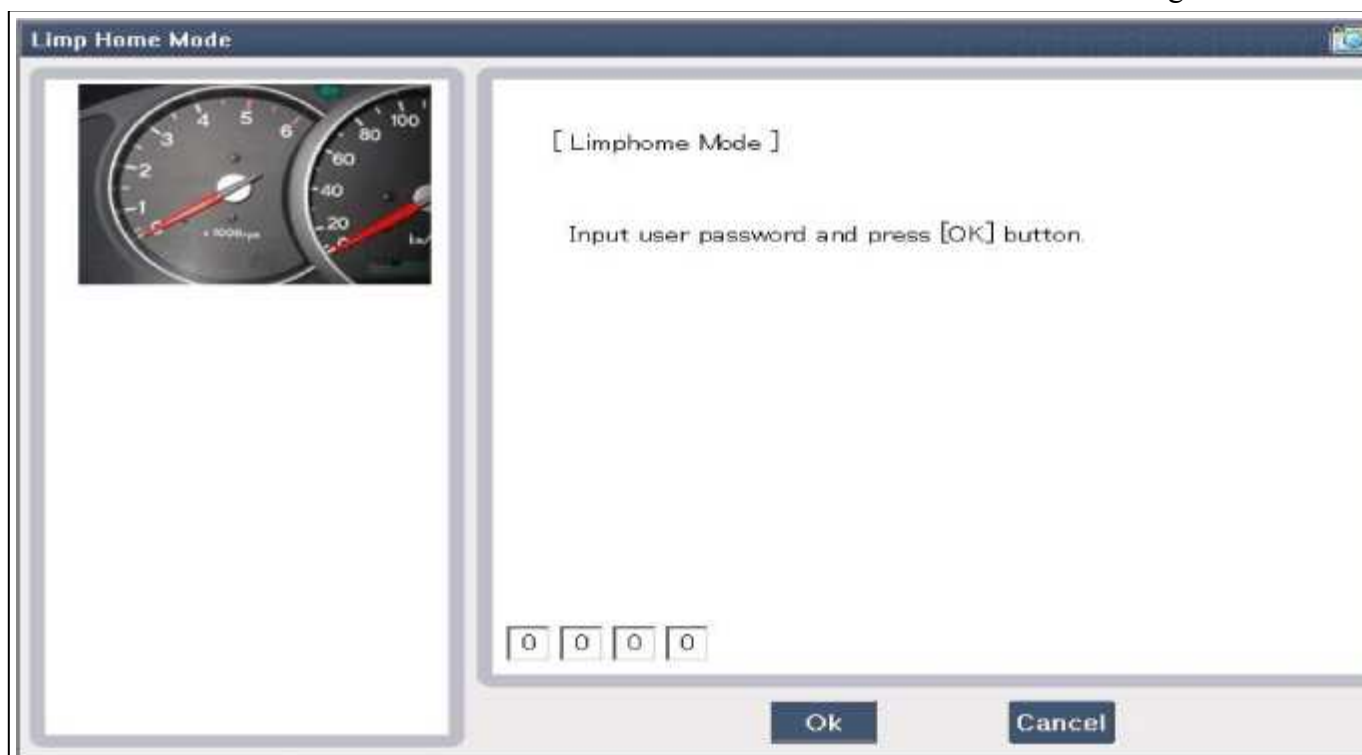


2. Limp Home By Ignition Key

The limp home can be activated also by the ignition key. The user password can be input to the PCM(ECM) by a special sequence of ignition on/off.

Only if the PCM(ECM) is in status "learnt" and the user password status is "learnt" and the user password is correct, the PCM(ECM) will be unlocked for a period of time (30 sec.).

The engine can be started during this time. After the time has elapsed, engine start is not possible. After a new password has been input, the timer (30 sec.) will start again.


After ignition off, the PCM(ECM) is locked if the timer has elapsed 8 seconds. For the next start, the input of the user password is requested again.

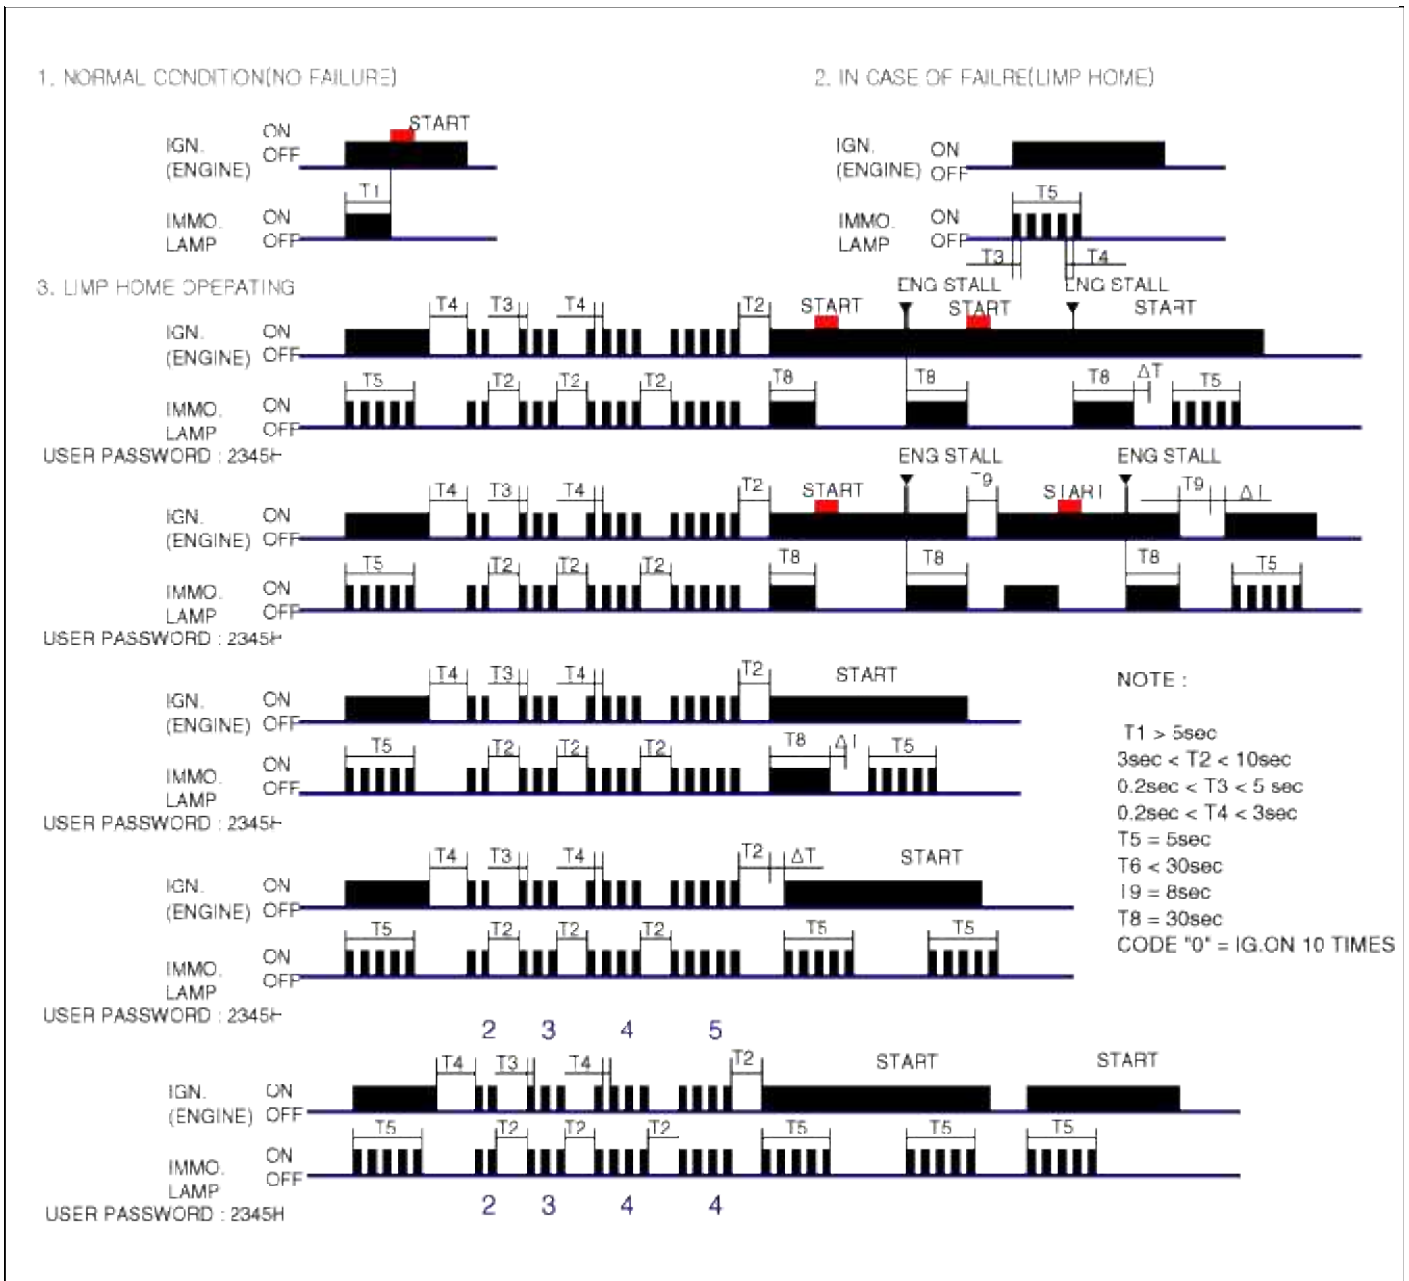


Body Electrical System > Immobilizer System > Immobilizer Control Unit > Repair procedures

Replacement

1. Disconnect the negative (-) battery terminal.
2. Remove the crash pad lower panel (A).

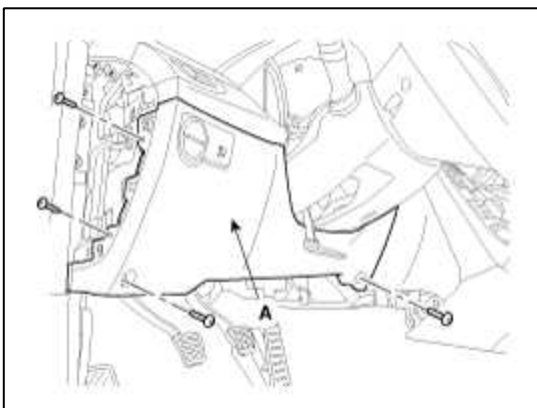

3. Disconnect the 5P connector of the SMARTRA unit and then remove the SMARTRA unit (A) after loosening the screw.

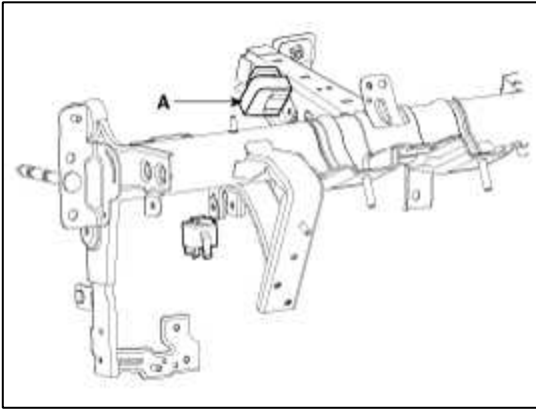


4. Installation is the reverse of removal procedure.

Body Electrical System > Immobilizer System > Antenna Coil > Repair procedures

Replacement

1. Disconnect the negative (-) battery terminal.
2. Remove the crash pad lower panel (A).

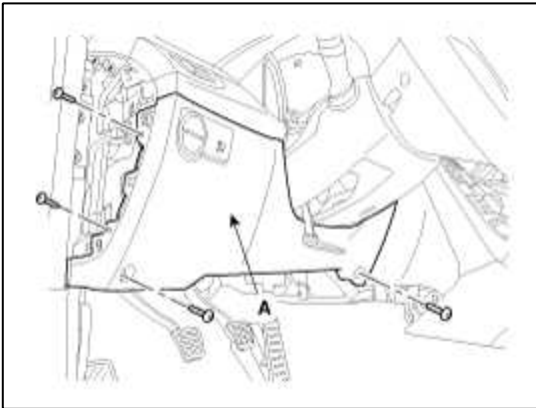

3. Remove the steering column shaft (Refer to the ST group).
4. Disconnect the 6P connector of the coil antenna and then remove the coil antenna after loosening the screw.
5. Installation is the reverse of removal procedure.

Body Electrical System > Immobilizer System > Troubleshooting

Diagnosis Of Immobilizer Faults

- Communication between the ECM and the SMARTRA.
- Function of the SMARTRA and the transponder.
- Data (stored in the ECM related to the immobilizer function).

The following table shows the assignment of immobilizer related faults to each type:

Immobilizer Related Faults	Fault types	Diagnostic codes
PCM(ECM) fault	1. Non-Immobilizer-EMS connected to an Immobilizer	P1610
Transponder key fault	1. Transponder not in password mode 2. Transponder transport data has been changed.	P1674 (Transponder status error)
Transponder key fault	1. Transponder programming error	P1675 (Transponder programming error)
SMARTRA fault	1. Invalid message from SMARTRA to PCM(ECM)	P1676 (SMARTRA message error)
SMARTRA fault	1. Virgin SMARTRA at learnt EMS 2. Neutral SMARTRA at learnt EMS 3. Incorrect the Authentication of EMS and SMARTRA 4. Locking of SMARTRA	P169A (SMARTRA Authentication fail)
SMARTRA fault	1. No response from SMARTRA 2. Antenna coil error 3. Communication line error (Open/Short etc.) 4. Invalid message from SMARTRA to PCM(ECM)	P1690 (SMARTRA no response)
Antenna coil fault	1. Antenna coil open/short circuit	P1691 (Antenna coil error)
Immobilizer indicator lamp fault	1. Immobilizer indicator lamp error (Cluster)	P1692 (Immobilizer lamp error)
Transponder key fault	1. Corrupted data from transponder 2. More than one transponder in the magnetic field (Antenna coil) 3. No transponder (Key without transponder) in the magnetic field (Antenna coil)	P1693 (Transponder no response error/invalid response)
PCM(ECM) fault	1. Request from PCM(ECM) is invalid (Protocol layer violation- Invalid request, check sum error etc.)	P1694 (PCM(ECM) message error)
PCM(ECM) internal permanent memory (EEPROM) fault	1. PCM(ECM) internal permanent memory (EEPROM) fault 2. Invalid write operation to permanent memory (EEPROM)	P1695 (PCM(ECM) memory error)
Invalid key fault	1. Virgin transponder at PCM(ECM) status "Learnt" Learnt (Invalid) Transponder at PCM(ECM) status "Learnt"(Authentication fail)	P1696 (Authentication fail)
Hi-Scan fault	1. Hi-Scan message error	P1697
Locked by timer	1. Exceeding the maximum limit of Twice IGN ON (32 times)	P1699 (Twice IG ON over trial)

Body Electrical System > Front/Rear Parking Assist System > Specifications


Specification

Item		Specification
Ultrasonic sensor	Voltage rating	DC 12 V
	Detecting range	30 cm ~ 120 cm
	Operation voltage	DC 9 ~ 16 V
	Operation current	MAX 300 mA
	Operation temperature	-30°C ~ +80°C (-22°C ~ +176°C)
	Operation frequency	8 ± 5 KHz
	Number of sensors	Front
Rear		4

Rear parking assist control unit function is built in BCM (body control unit).

Body Electrical System > Front/Rear Parking Assist System > Components and Components Location

Component Location

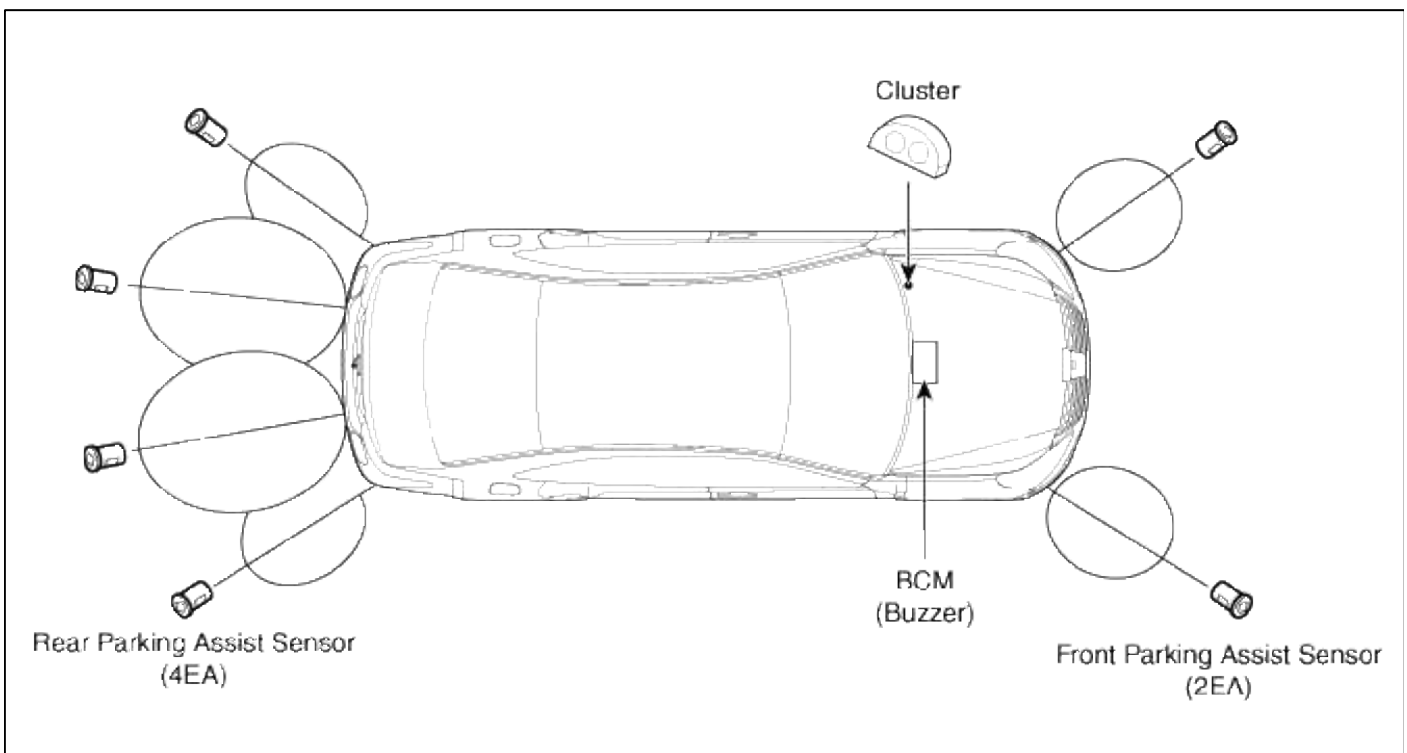

Rear parking assist control unit function is built in BCM (body control unit).


Body Electrical System > Front/Rear Parking Assist System > Description and Operation

System Overview

RPAS(Rear Parking Assist System) is an electronic driving aid device warning driver to be cautious when they park

or speed low after detecting an object on side and behind of vehicle by using the feature of ultrasonic waves. PAS consists of Six(Front:2, Rear:4) PAS sensors which are detecting the obstacles and transmit the result separated into three warning levels, the first, second and third to BCM by Lin communication. BCM decides the alarm level by the transmitted communication message from the slave sensors, then operate the buzzer or transmits the data for display.

System Block Diagram

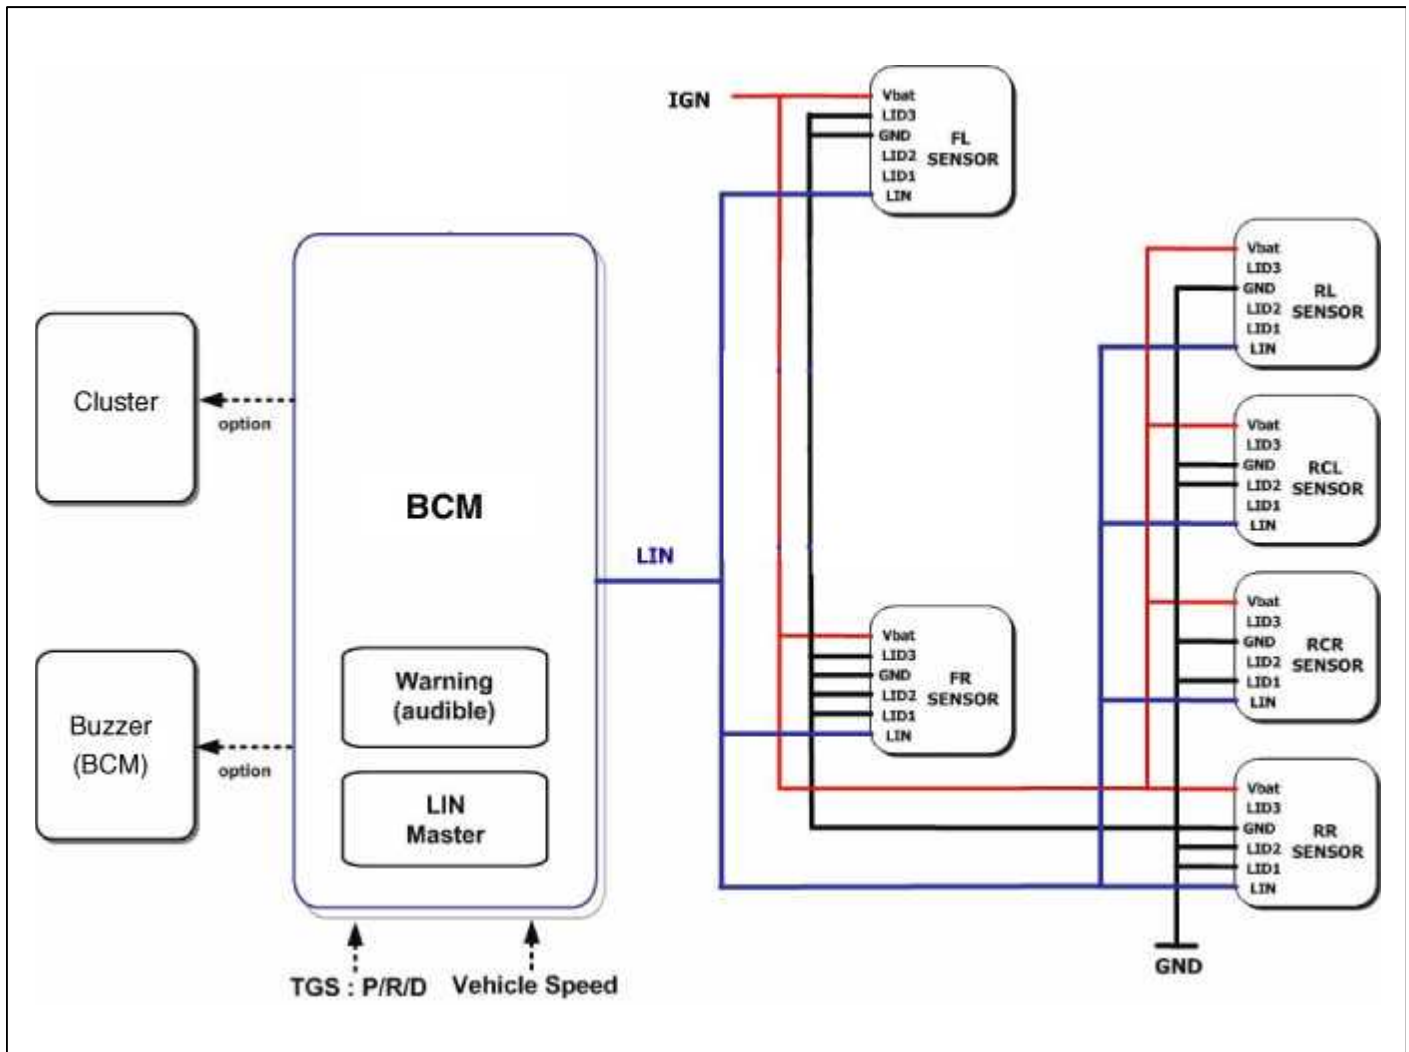

System Operation Specification.

1. INIT mode

- (1) System initializing time is 500ms after IGN1+ R Gear.
- (2) RPAS recognizes LID and sets the sensor ID up during initialization.
- (3) RPAS activates each sensor and then executes the diagnosis after finishing initialization of BCM
- (4) R-PAS Starting buzzer” is normally worked, when sensor does not send an error message and after finishing error diagnosis.
- (5) If any failure is received from the any sensors, R-PAS Starting Buzzer” does not work but the failure alarm is operated for a moment.
If you have display option, warning sign is also shown on it.
- (6) Buzzer for sensor failure is operated once, but display is shown continuously until it is repaired completely.

2. NORMAL Mode


- (1) LIN communication starts and keeps the routine after IGN1 ON+R gear
- (2) BCM send a message once to each sensor for operating request to check the initial status of the system and four sensors response at a time. At this time, if there is no problem, the alarm starts after 500ms of R gear shifting at 300ms intervals.
- (3) After initialization, normal mode starts 100ms later after finishing alarm output.
- (4) Alarm for obstacles is divided into 3 levels.
The first and second are intermittent sound, and the third alarms continuously (Front sensor have second and third alarms.)
- (5) The efficient vehicle speed of RPAS operation is under 10Km/h.
- (6) Refer to 'Digital PAS Project LIN communication' for the more detailed communication specification.

Sensing Area


1. Measurement condition – PVC pole (diameter 75mm, length 3m), normal temperature
2. Distance range detected objects (Measured directly in front of sensor)

Position	Level	Distance range	
		cm	inch
Front	2nd	31 ~ 60 (± 15)	12.2 ~ 23.6 (± 5.9)
	3rd	0 ~ 30 (± 10)	Less than 11.8 (± 3.9)
Rear	1st	61 ~ 120 (± 15)	24.0 ~ 47.2 (± 5.9)
	2nd	31 ~ 60 (± 15)	12.2 ~ 23.6 (± 5.9)
	3rd	Less than 30 (± 10)	Less than 11.8 (± 3.9)

Horizontal Sensing Area

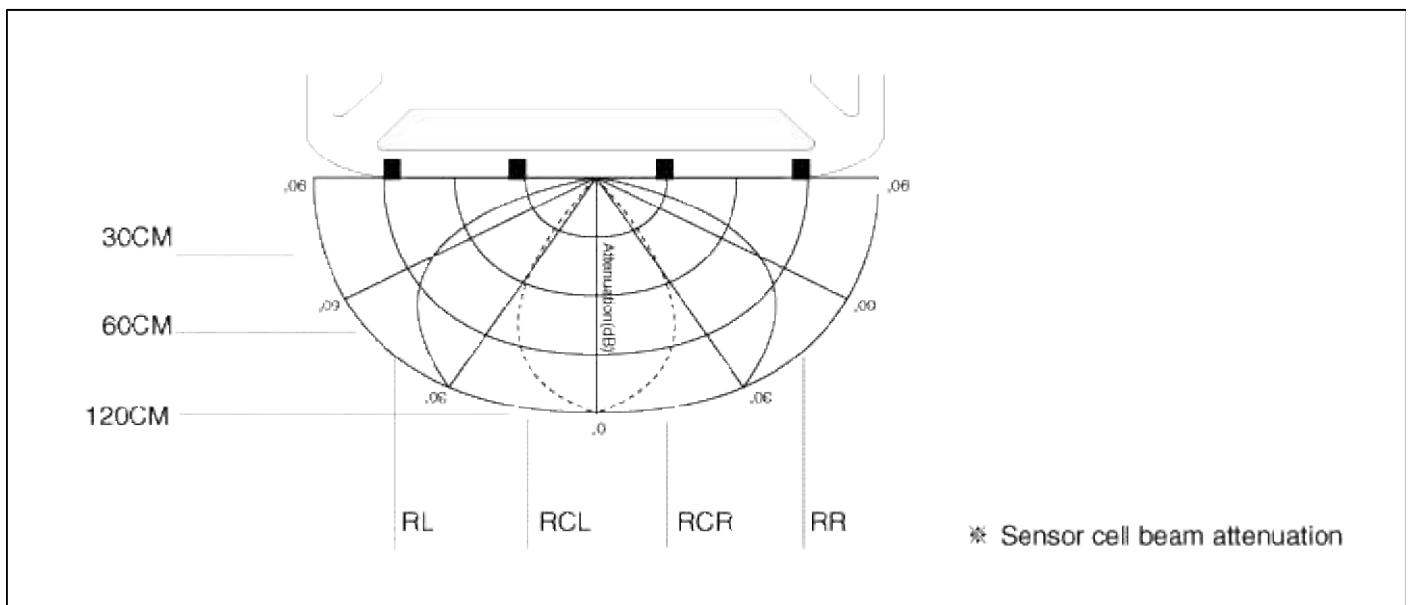


Vertical Sensing Area

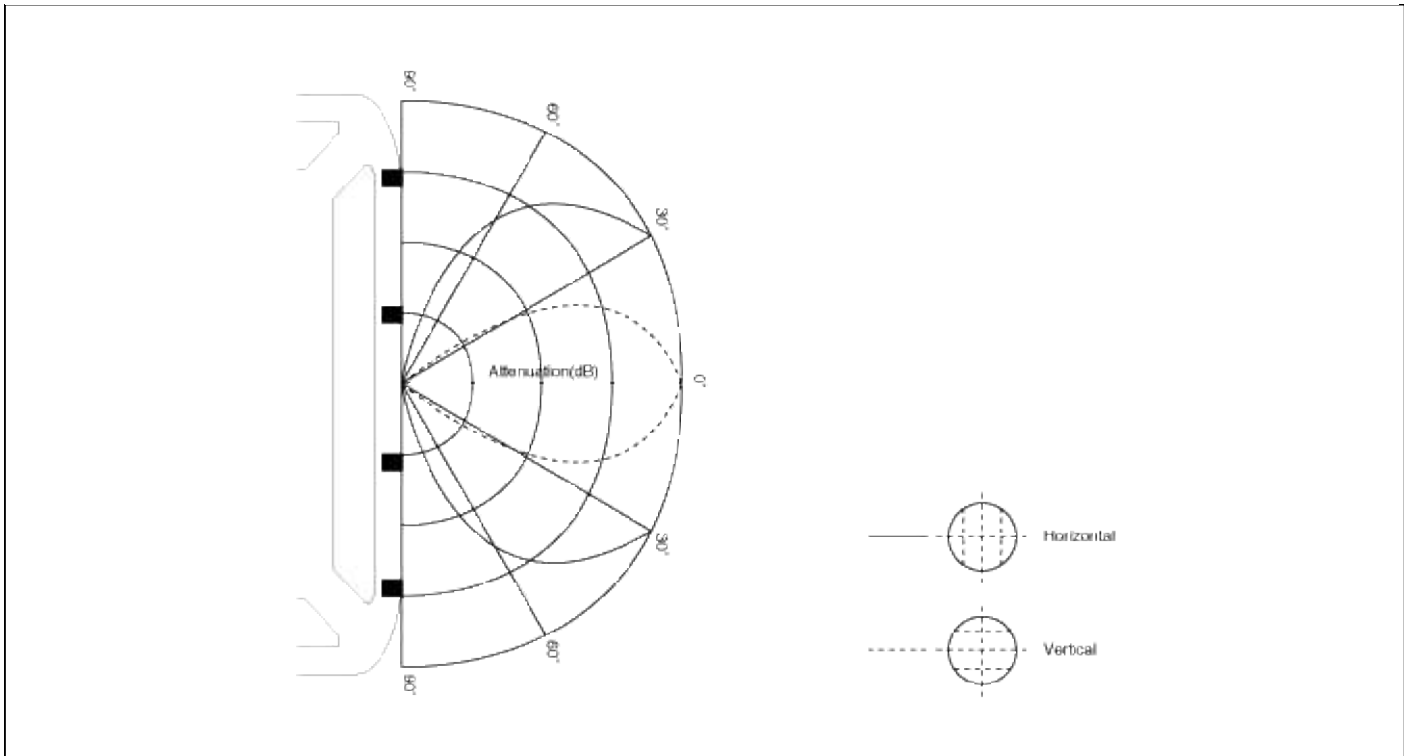

Distance Measurement

Direct Measurement


Transmission and Reception are executed with one sensor
(RL, RCL, RCR, RR each sensor execution)

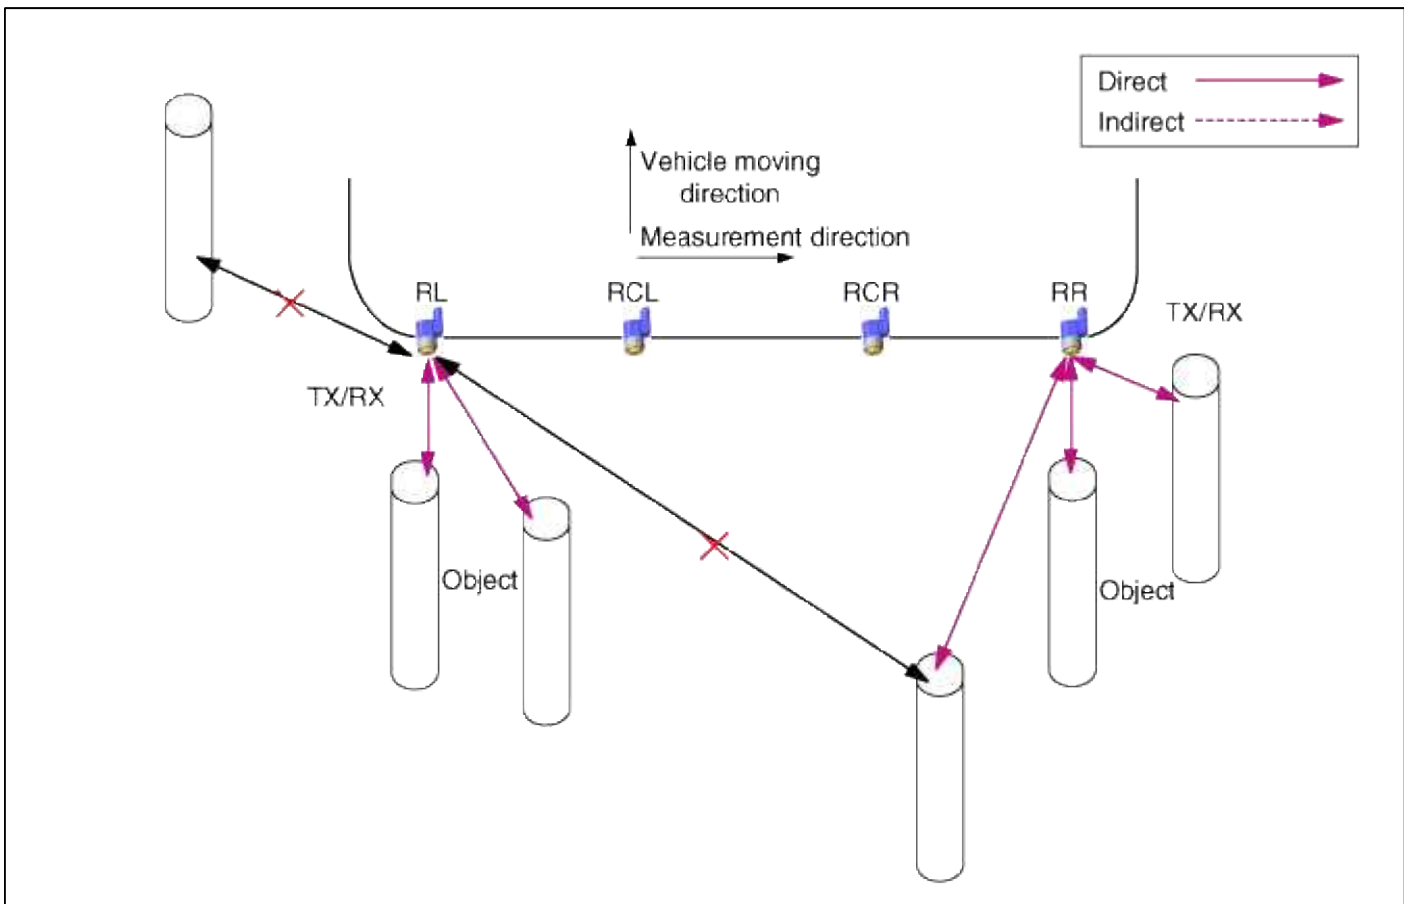

Indirect Measurement


(RCL → RL, RCL → RCR, RCR → RCL, RCR → RR Execution in order)

With two or three sensors, one of them sends the transmission and the others get the reception.

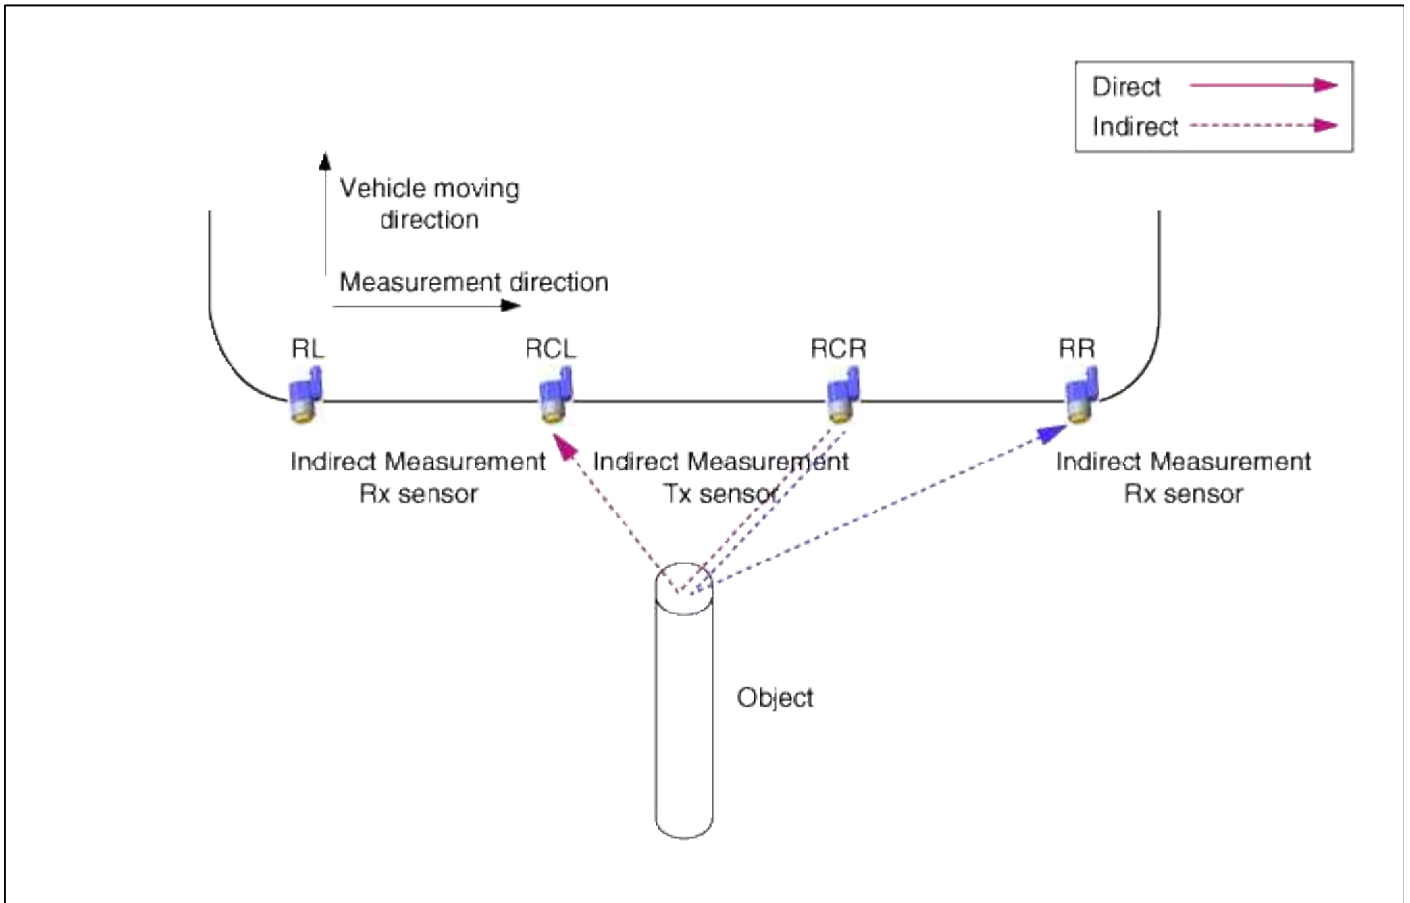

Direct and Indirect Measurement at once

With two or three sensors, the one sensor performs both transmission and reception, and others perform only reception.

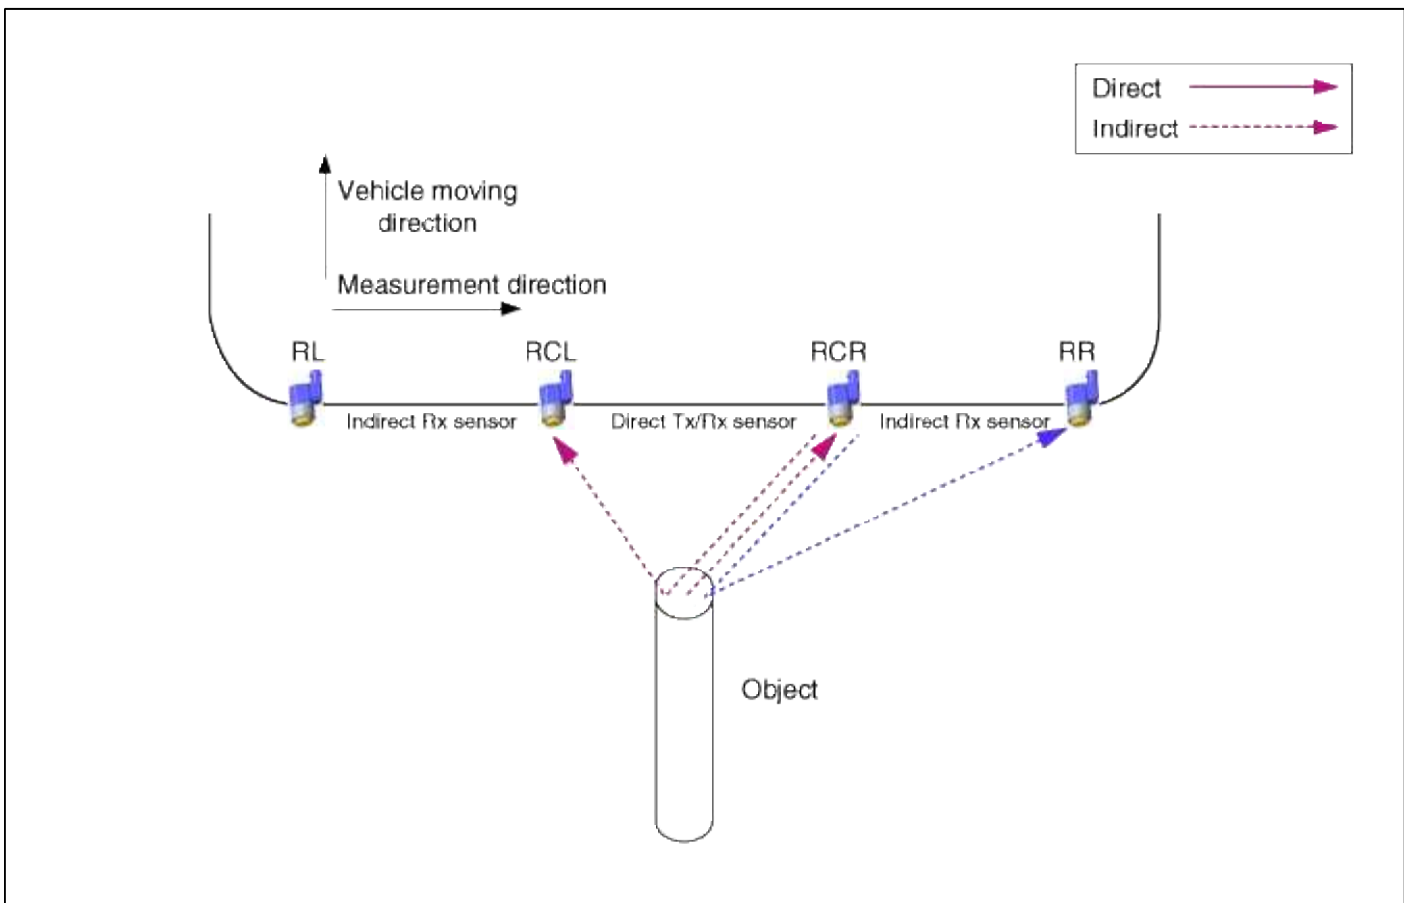


RPAS alarm system

When the RPAS sensor detects the object, warning is operated by audible alarm device as like buzzer. RPAS sensor sends data to BCM with LIN communication and BCM implements audible warning for each RPAS SENSOR by priority. And it performs a role of gateway only when it sends visible alarm device such as Cluster.


- Sensor buzzer/display information processing method of BCM In case of RL/RR sensor information, the BCM handles each sensor information directly about Display and buzzer output function. Buzzer output of CL/CR sensor, BCM handles center combination information by priority both sensor.

Body Electrical System > Front/Rear Parking Assist System > Parking Assist Sensor > Components and Components Location

Component

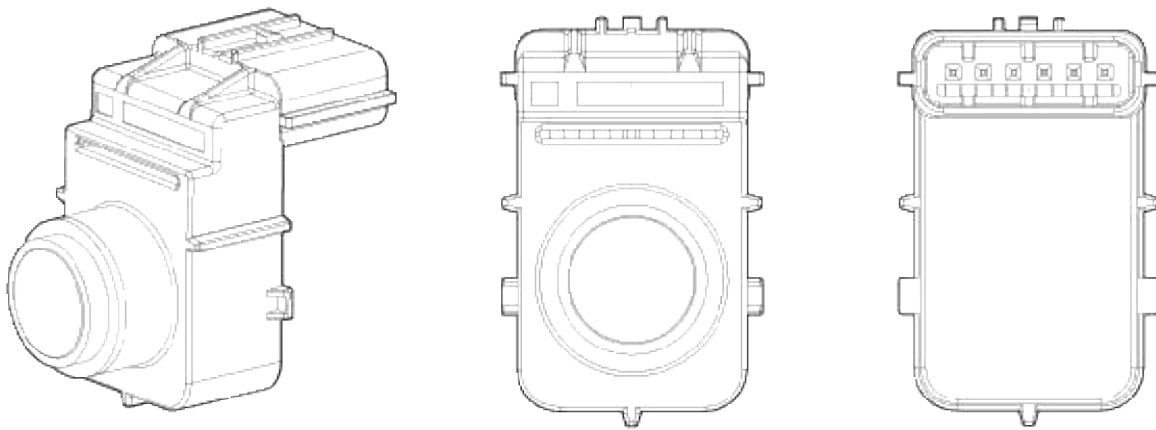

Circuit Diagram

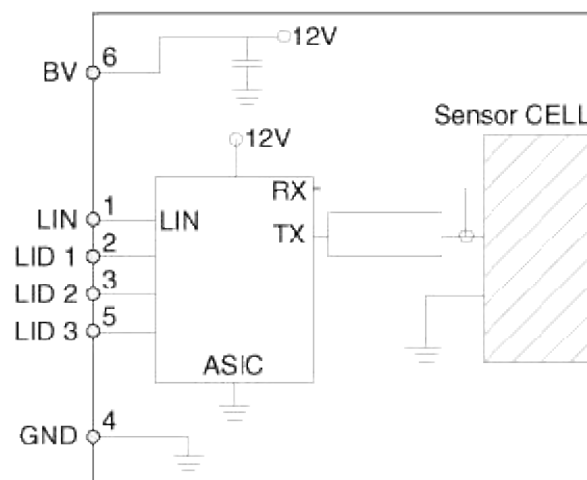


NO	Name
1	LIN
2	LID 1
3	LID 2
4	GND
5	LID 3
6	B+

Body Electrical System > Front/Rear Parking Assist System > Parking Assist Sensor > Repair procedures

Removal

1. Remove the rear bumper.
(Refer to the Body group - "Rear bumper")
2. Disconnect the connector from the rear bumper.

3. Pull out the sensor (A) by opening the sensor holder (B) out.

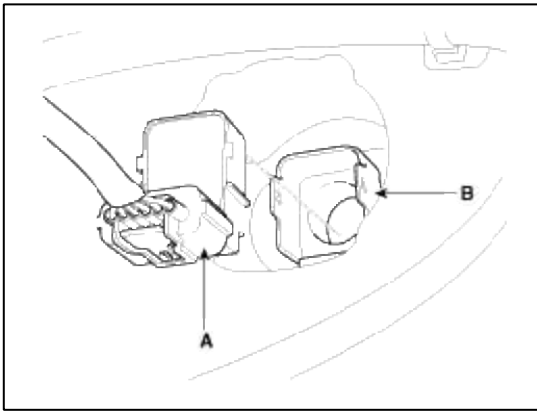


Installation

1. Install the rear ultra sensor after connecting the connector.
2. Install the rear bumper.

Body Electrical System > Button Engine Start System > Components and Components Location


Component Location

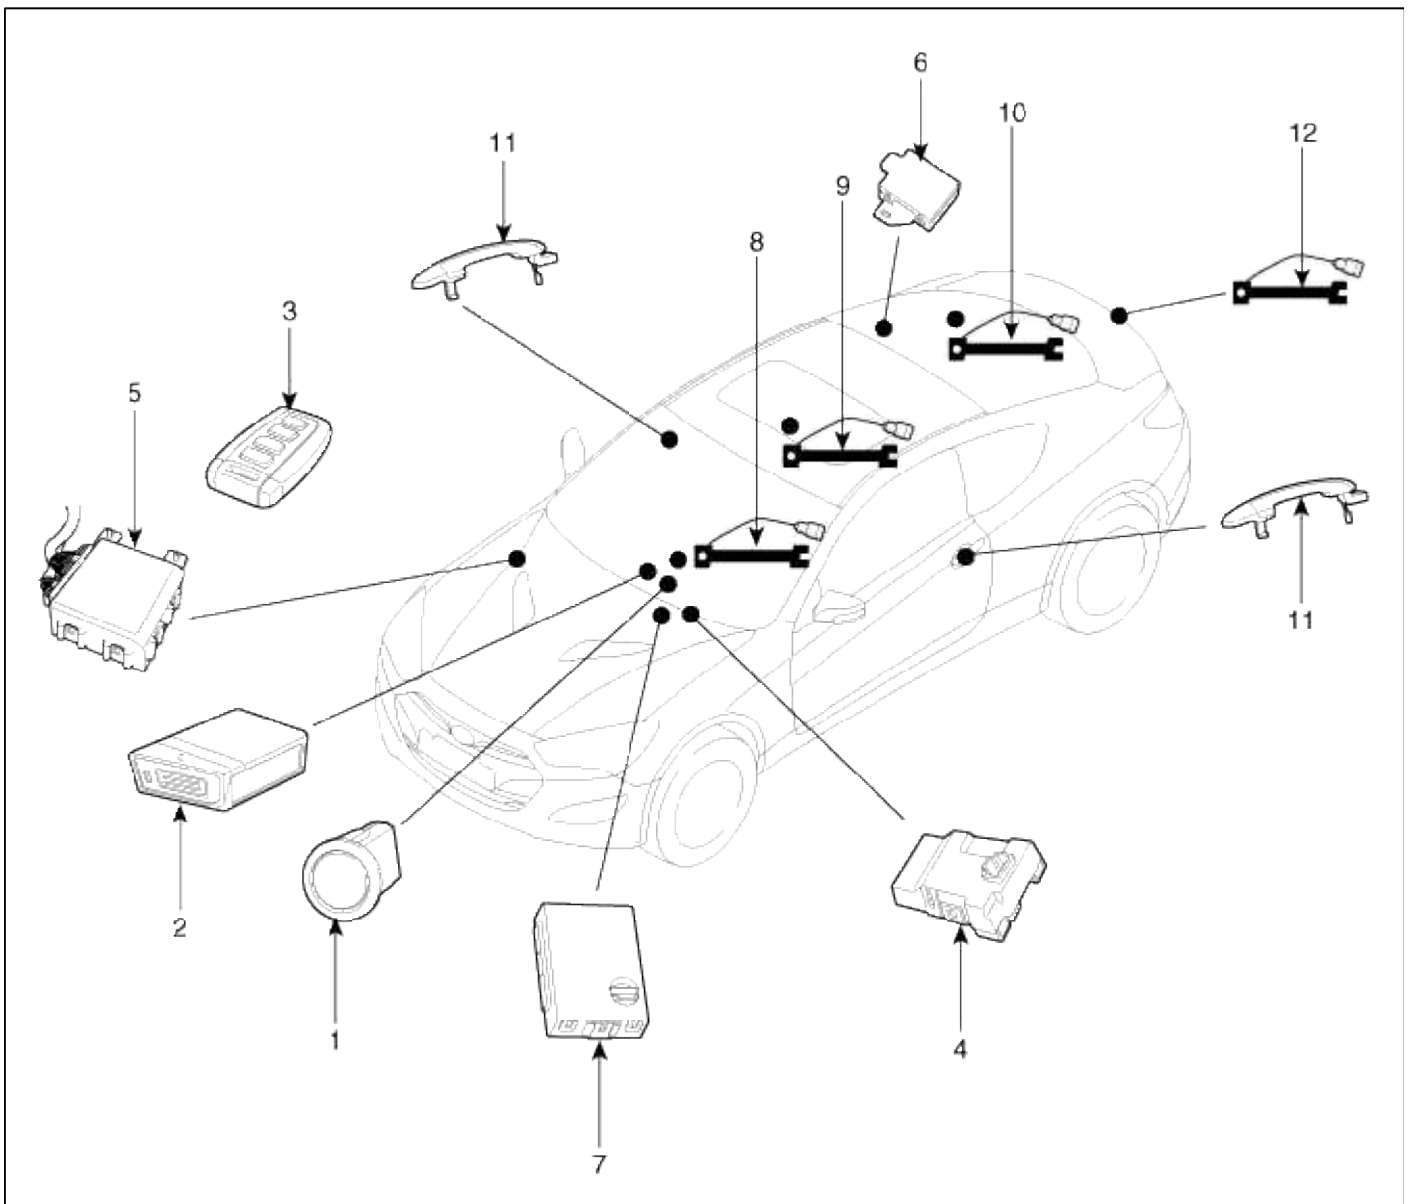

- | | |
|-----------------------------------|--------------------------------|
| 1. Start Stop Button(SSB) | 7. Body control module |
| 2. FOB key holder | 8. Interior antenna 1 |
| 3. FOB key | 9. Interior antenna 2 |
| 4. PDM(Power Distribution Module) | 10. Interior antenna 3 |
| 5. Smart key unit | 11. Door handle & door antenna |
| 6. RF receiver | 12. Bumper antenna |

Body Electrical System > Button Engine Start System > Schematic Diagrams

Circuit Diagram

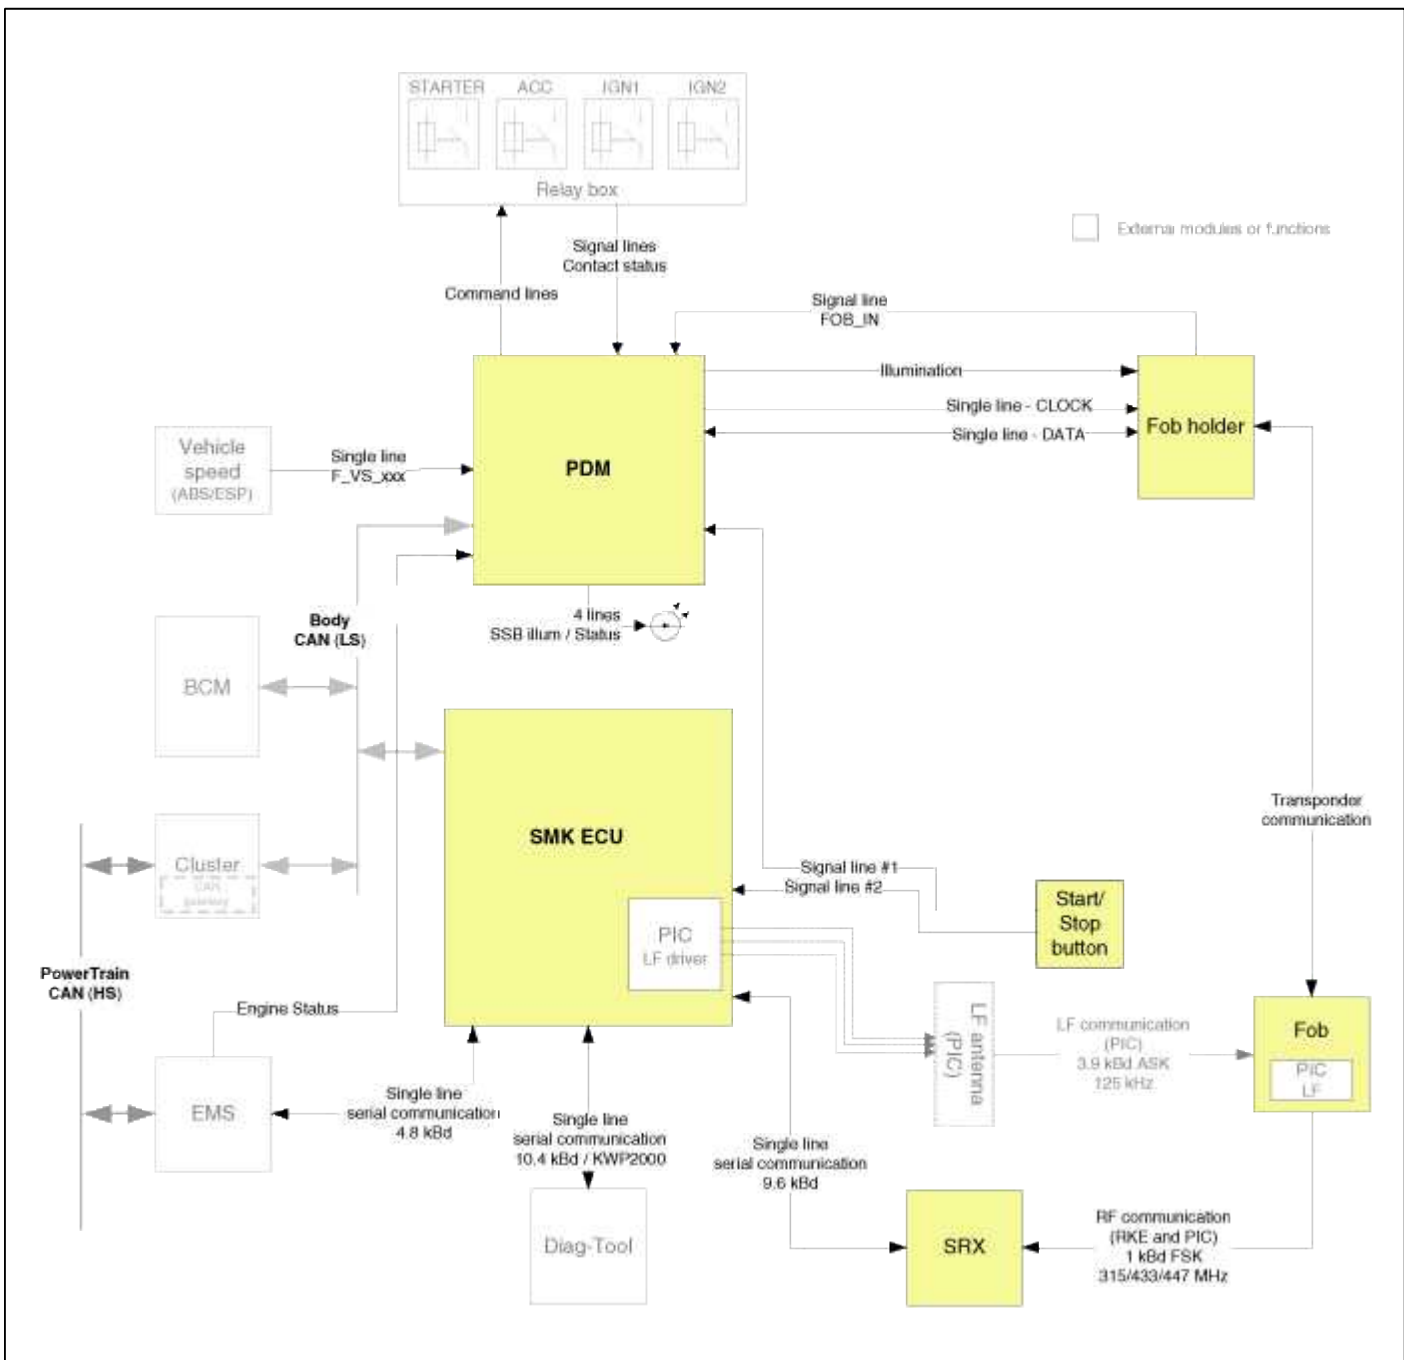

Body Electrical System > Button Engine Start System > Description and Operation

Description

System Overview

The System offers the following features:

- Human machine interface through a 1-stage button, for terminal switching and engine start.
- Control of external relays for ACC / IGN1 / IGN2 terminal switching and STARTER, without use of mechanical ignition switch.
- Indication of vehicle status through LED or explicit messages on display.
- Immobilizer function by LF transponder communication between fob and fob holder.
- Redundant architecture for high system dependability .
- Interface with Low Speed CAN vehicle communication network.
- Interface with LIN vehicle communication network depending on platform .

The RKE and SMART KEY functions are not considered part of this Button Engine Start system and are specified in separated system.

System Main Function

- Switching of ACC / IGN1 / IGN2 terminals.
- Control of the STARTER relay BAT line (high side) based on communication with EMS ECU.
- Management of the Immobilizer function.
- Management of BES warning function.

Button Engine Start System

The Button Start System allows the driver to operate the vehicle by simply pressing a button (called as SSB) instead of using a standard mechanical key.


If the driver press the SSB while prerequisites on brakes, fob authentication and transmission status are satisfied, the BES System will proceed with the locking/unlocking of the steering column, the control of the terminal, and the cranking of the engine.

The driver can release the SSB as soon as this sequence initiated. After positive response from immobilizer interrogation, the system will activate the starter motor and communicate with the EMS to check the engine running status for starter release.

The driver will be able to stop the engine by a short push on the SSB if the vehicle is already in standstill. Emergency engine stop will be possible by a long press of the SSB or 3 consecutive presses in case the vehicle is in ENGINE RUNNING.

If the conditions for engine cranking are not satisfied while a push on the SSB is detected and a valid fob authenticated, the system will unlock the steering column and switch the terminals to IGN. Another push on the SSB will be necessary to start the engine.

In case of a vehicle equipped with SMART KEY system, fob authentication will not require any action from the driver. For limp home start or in case of vehicle without SMART KEY, the driver will have to insert the fob into the fob holder.

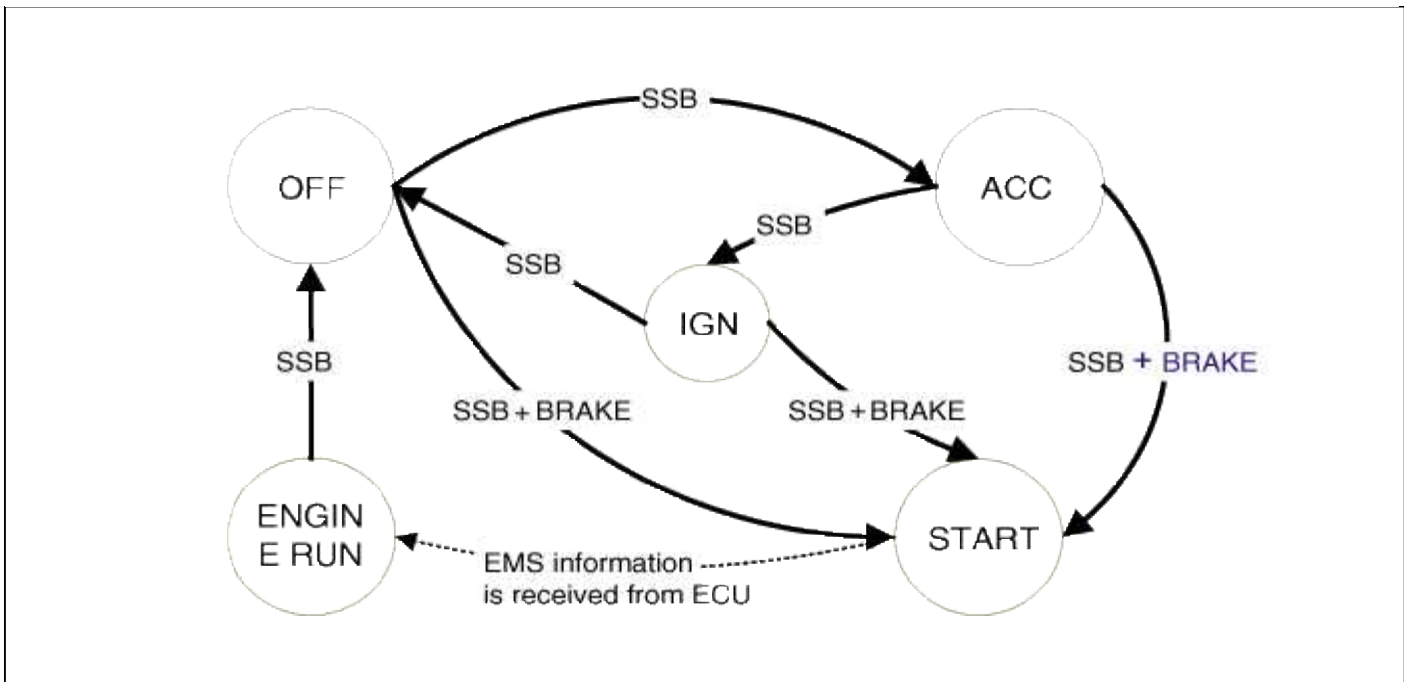


- Control Ignition and engine ON/OFF by Sending signal to IPM and PDM.
- Display status by LED Lamp ON/OFF. (Amber or Blue)

Indicator ON/OFF Condition At Ignition Key Off Condition

No.	Character lamp	Conditions
1	Indicator Lamp ON	Door open, Tail lamp ON, ACC, IG ON
2	Indicator Lamp 30sec ON → Lamp OFF	Door close, Tail lamp OFF, IG OFF
3	Indicator Lamp OFF	Remote LOCK, Passive LOCK
4	Rheostat at tail lamp ON (Illumination lamp)	

Indicator ON/OFF Condition According To Ignition Key's Position

No.	Ignition conditions	Start Button LED status
1	IG OFF	LED OFF
2	IG ACC	Amber color LED ON
3	IG ON (Engine OFF)	Blue color LED ON
4	Cranking	Maintain LED status before cranking
5	Engine running	LED OFF

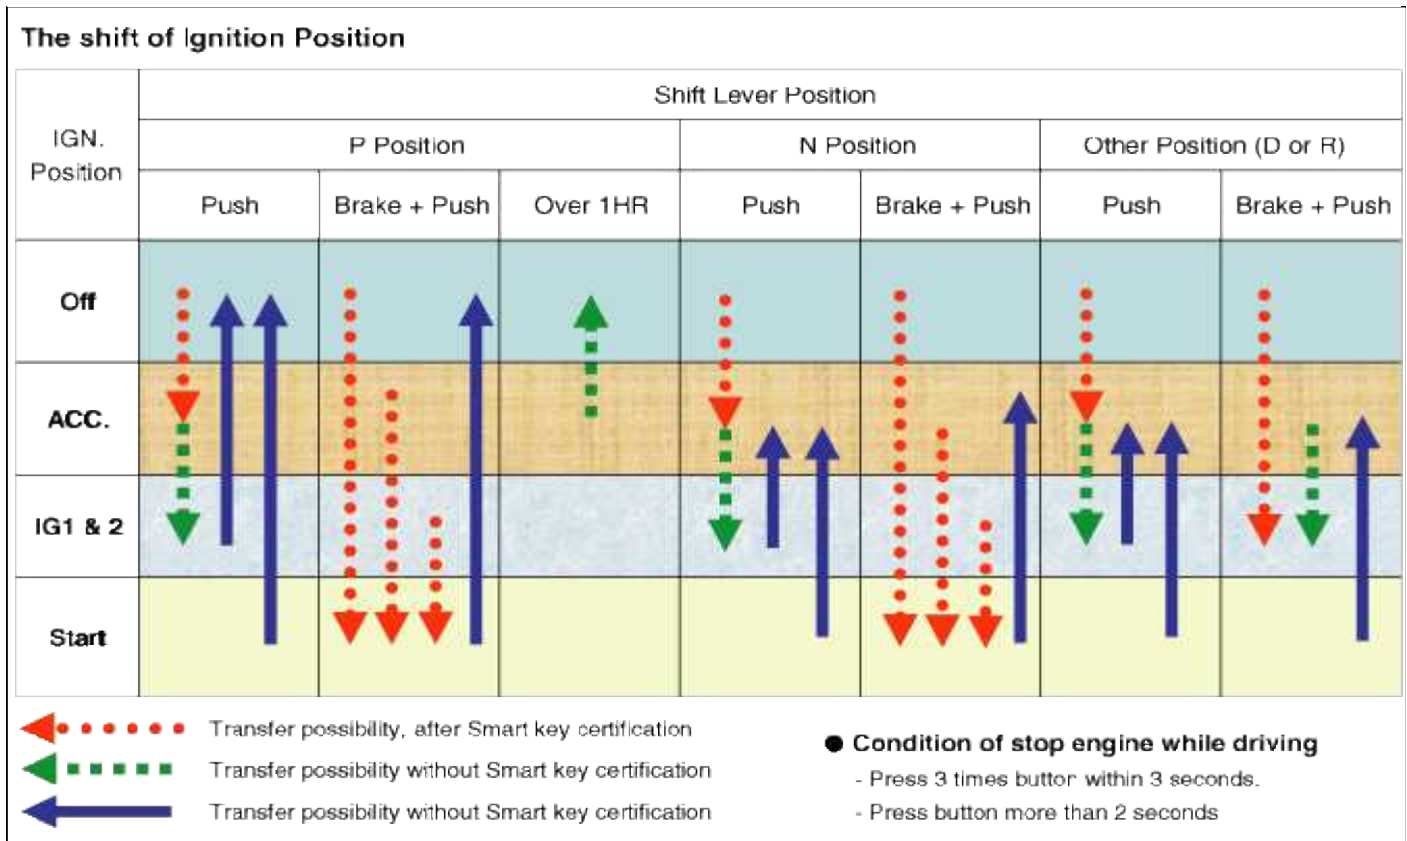

Wireless Communication

Electromagnetic waves are used to exchange information between the vehicle and the FOB. Two types of RKE Key can supplement the BES system:

- Non-smart key RKE
- SMART KEY FOB

Currently the BES system comprises with SMART KEY FOB always.


The transmitter, receiver and antennas required for the communication between the fob and the vehicle will differ depending on functionalities and regional areas.

The RKE and SMART KEY functions are in separated documents. Refer to Smart key system for more detailed information about SMART KEY function.

Smart Key

The SMK manages all function related to:

- "Start Stop Button (SSB) monitoring",
- "Immobilizer communication" (with Engine Management System unit for immobilizer release),
- "Authentication server" (Validity of Transponder and in case of Smart Key option Passive Fob authentication),
- "System consistency monitoring",
- "System diagnosis",
- Control of display message / warning buzzer .

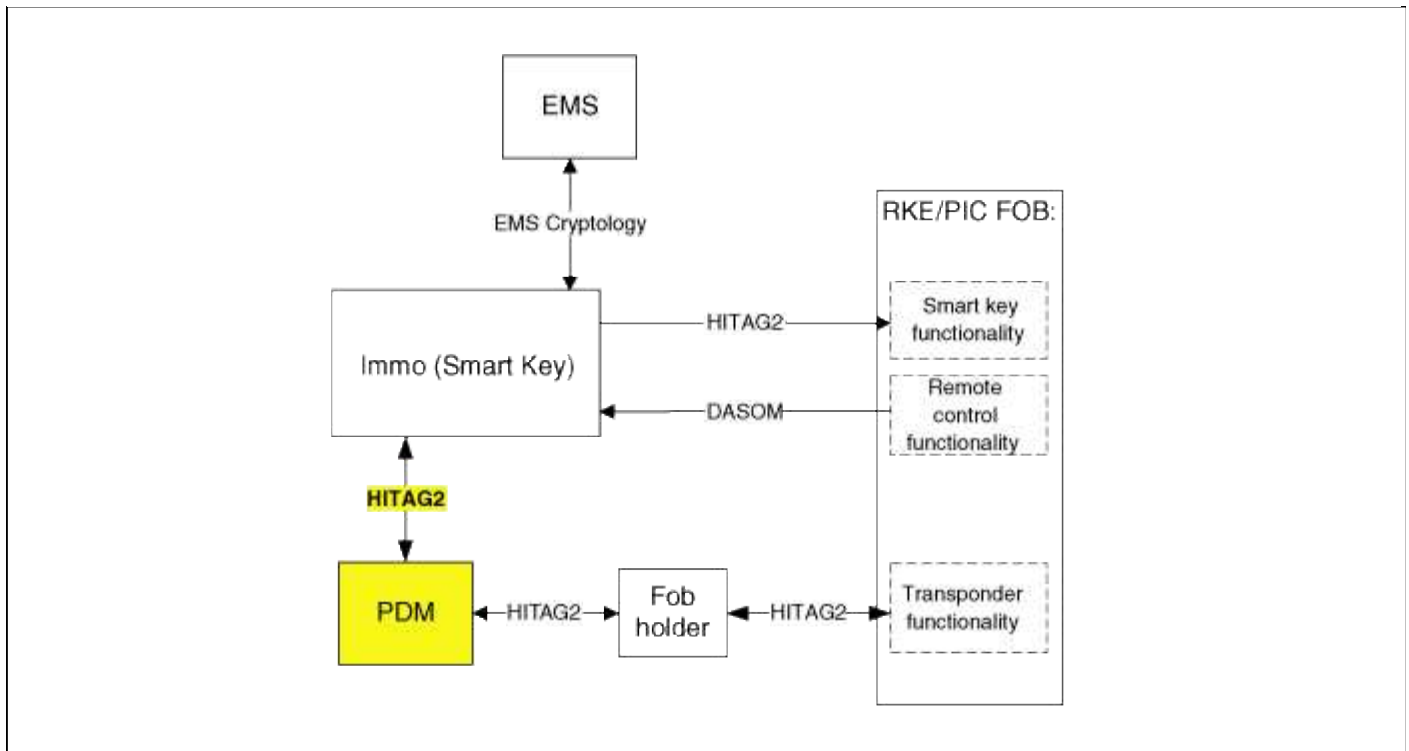

The unit behaves as Master role in the whole system.

In case of SMART KEY application, for example “Passive Access”, “Passive Locking” and “Passive Authorization are integrated for Terminal switching Operations”.

It collects information about vehicle status from other modules (vehicle speed, alarm status, driver door open...), read the inputs (e.g. SSB, Lock Button and PARK position Switch), controls the outputs (e.g. exterior and interior antennas), and communicates with others devices via the CAN network as well as a single line interfaces.

The diagnosis and learning of the components of the BES System are also handled by the SMK.

PDM

The PDM manages the functions related to the "terminal control" by activating external relays for ACC, IGN1 and IGN2. This unit is also responsible for the control of the STARTER relay.

The PDM is also controlling the illumination of the SSB as well as the "system status indicator", which consists of 2 LEDs of different color. The illumination of the fob holder is also managed by the PDM.

The PDM reads the inputs (Engine fob_in, vehicle speed, relays contact status), controls the outputs (Engine relay output drivers), and communicates with others devices via the CAN.

The internal architecture of the PDM is defined in a way that the control of the terminal is secured even in case of failure of one of the two microcontrollers, system inconsistency or interruption of communication on the CAN network.

In case, failure of one of the two controllers, the remaining controller shall disable the starter relay. The IGN1 and IGN2 terminals relays shall be maintained in the state memorized before the failure and the driver shall be able to switch those IGN terminals off by pressing the SSB with EMERGENCY_STOP pressing sequence. However, engine restart will not be allowed. The state of the ACC relay will depend on the type of failure.

The PDM is diagnosed through the SMK MUT service, using the CAN network.

The main functions of the PDM are:

- Control of Terminal relays
- Monitoring of the Vehicle speed received from sensor or ABS/ESP ECU.
- Control of SSB LEDs (illumination, clamp state) and FOB HOLDER illumination.
- Control of the base station located in fob holder through direct serial interface.
- System consistency monitoring to diagnose SMK failure and to switch to relevant limp home mode.
- Providing vehicle speed information

Fob Holder

This unit is used for transponder authentication. In case of a vehicle equipped with Smart key, this transponder

authentication is necessary in case of failure of the passive fob authentication (Engine loss of RF or LF link with the fob).

The Fob holder module integrates a slot where to insert the fob. The fob is maintained in position with a push-push mechanical locking (not electrically driven) and a signal (FOB_IN) is sent back to the PDM as soon as its insertion is detected.

The power supply of the fob holder is active only if a communication is initiated by the PDM.


The insertion of the fob into the holder and the communication with the transponder should be possible regardless of the insertion direction of fob to the holder (buttons facing up or bottom).

A lighting device is also integrated for illumination of the Fob Holder and it is driven directly by the PDM,

The main functions of the Fob holder are:

- Transponder base station
- Fob mechanical lock
- Illumination

Transponder

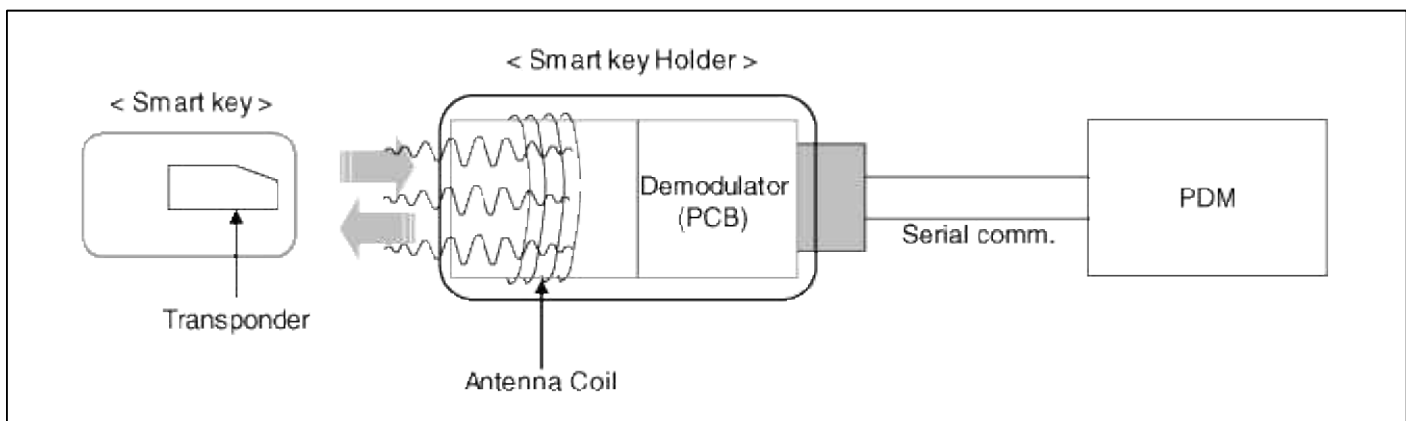

External Receiver(SRX)

The data transmitted by the RKE or Smart key Fob is received by an external RF receiver called as SRX. This receiver will be same as that one for the SMK applications, with respect to electronics, housing, connector and software.

This receiver is connected to the SMK via a serial communication line.

Terminal And Starter Relays

Relays will be used to switch the terminals ACC / IGN1 / IGN2. Those normally-open relays will be driven by the PDM and located either in the passenger or engine compartment depending on the vehicle architecture.

Only one relay coil is connected to the terminal outputs of the PDM.

Those relays should integrate a resistor connected in parallel to the coil in order to reduce the transients during commutation.

Start/Stop Button(SSB)

A single stage push button is used for the driver to operate the vehicle. Pressing this button allows:

- To activate the power modes 'Off', 'Accessory', 'Ignition' and 'Start' by switching the corresponding terminals
- To start the engine
- To stop the engine

The contact will be insured by a micro-switch and a backlighting is provided to highlight the marking of the button whenever necessary.

Two (2) LED colors are located in the center of the button to display of the status of the system. Another illumination LED is also integrated into the SSB for the lighting of the "Engine Start/Stop" characters.



BES System State Chart

System STATES in LEARNT MODE

In learnt mode, the BES System can be set in 6 different states, depending on the status of the terminals and Engine status:

System State	Terminal Status	Engine status
1. OFF - Locked	OFF	Stopped
2. OFF - Unlocked	OFF	Stopped
3. ACC	ACC	Stopped
4. IGN	IGN1, IGN2, ACC	Stopped
5. Start	IGN1, Start	Cranking
6. IGN - Engine	IGN1, IGN2, ACC	Running (means "self-running")

Referring to the terminals, the system states described in the table above are same as those one found in a system based on a mechanical ignition switch. The one of distinction with Mechanical-Ignition-Switch based system is that the BES system allows specific transition from [OFF] to [START] without going through [ACC] and [IGN] states. System STATES IN VIRGIN MODE


The BES System can be set in 5 different states (OFF LOCKED is not available in virgin mode), depending on the status of the terminals and Engine status:

System State	Terminal Status	Engine status
1. OFF - UNLOCKED	OFF	Stopped
2. ACC	ACC	Stopped
3. IGN	IGN1, IGN2, ACC	Stopped
4. Start	IGN1, START with special pattern of activation see Chap 6.2.1 for details	Cranking
5. IGN - Engine	IGN1, IGN2, ACC	Running (means "self-running")

Referring to the terminals, the system states described in the table above are same as those one found in a system based on a mechanical ignition switch. The one of distinction with Mechanical-Ignition-Switch based system is that the BES system allows specific transition from [OFF] to [START] without going through [ACC] and [IGN] states.

Body Electrical System > Button Engine Start System > Start/Stop Button > Components and Components Location

Component

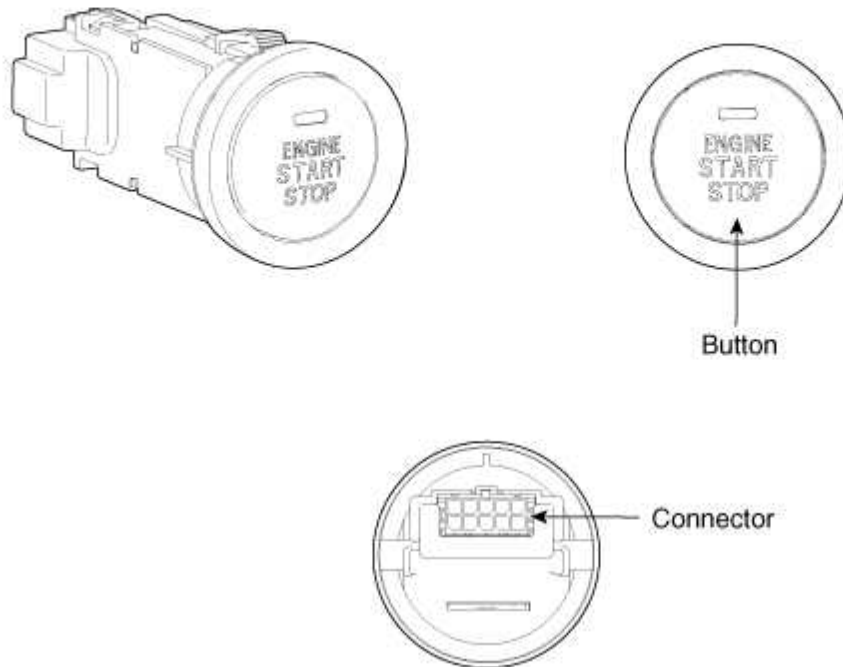


Pin No.	Description	Pin No.	Description
1	Start/Stop button switch1(PDM)	6	Battery
2	Battery illumination	7	Start/Stop button switch2(IPM)
3	Start/Stop button LED Amber(PDM)	8	Start/Stop button LED Blue(PDM)
4	Start/Stop button illum. GND(PDM)	9	Rheostat
5	Start/Stop button illum. power	10	-

Body Electrical System > Button Engine Start System > Start/Stop Button > Repair procedures


Removal

1. Disconnect the negative(-) battery terminal.

2. Remove the start/stop button cover(A).

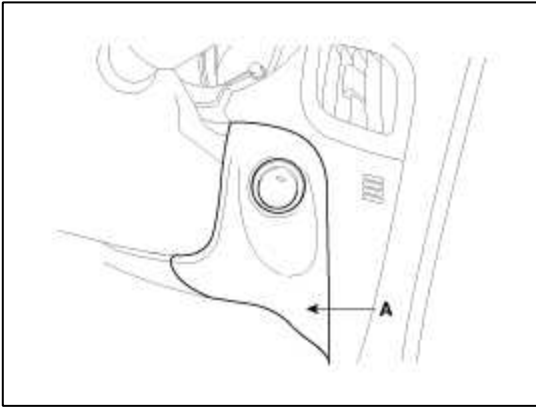

3. Remove the start/stop button (A).

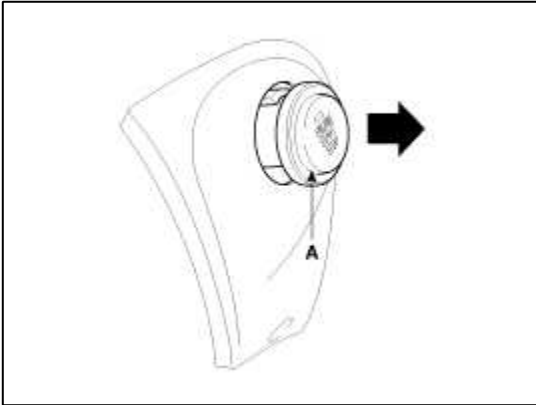


Installation

1. Install the start/stop button.
2. Install the start/stop button cover.

Body Electrical System > Button Engine Start System > Fob Holder > Components and Components Location

Component

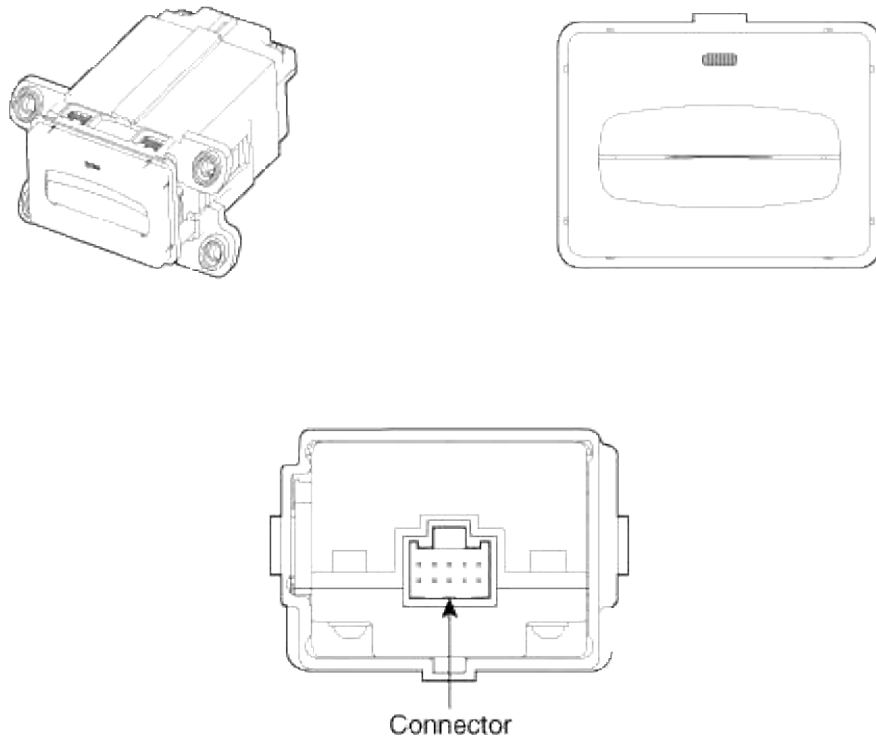


Pin No.	Description	Pin No.	Description
1	-	6	Battery
2	Immobilizer clock	7	Immobilizer data
3	Holder illumination(PDM)	8	Illumination battery
4	-	9	Fob in (PDM)
5	GND	10	-

Body Electrical System > Button Engine Start System > Fob Holder > Repair procedures


Removal

1. Disconnect the negative(-) battery terminal.

- Remove the console assembly (A).
(Refer to BD group - "Console")

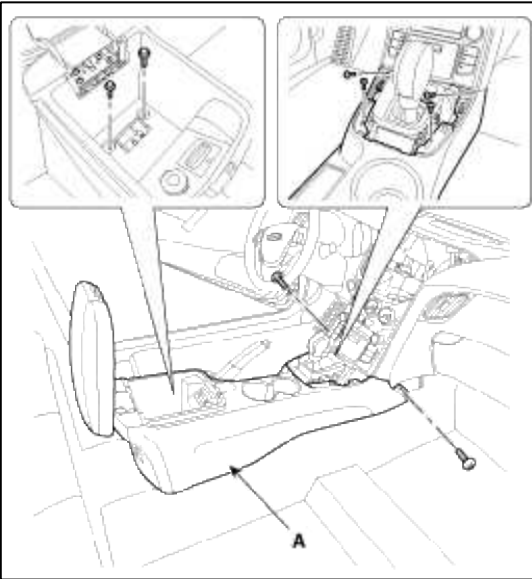

- Disconnect the connector and remove the fob holder(A) after loosening the mounting screws.

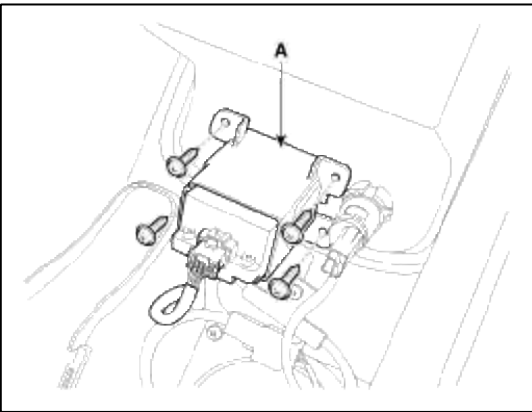


Installation

- Install the fob holder assembly.
- Install the console assembly.

Body Electrical System > Button Engine Start System > PDM(Power Distribution Module) > Components and Components Location

Component

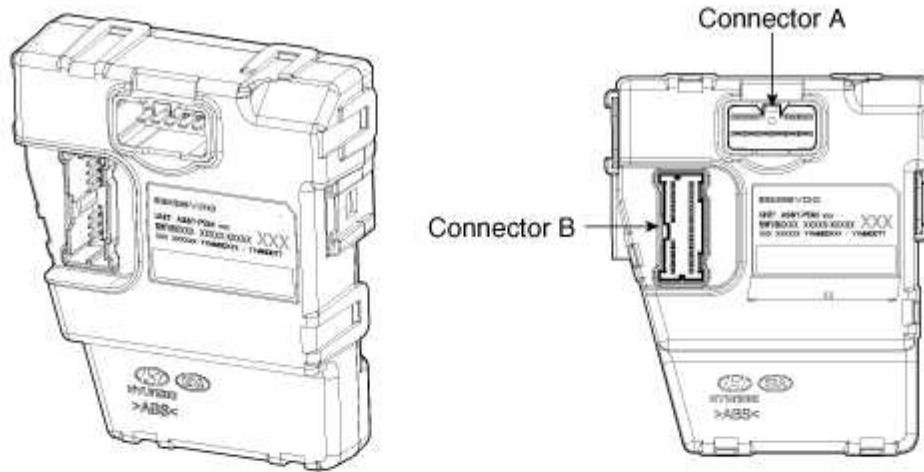


Pin No.	Connector A (10 pin)	Connector B (20 pin)
1	Power ground 1	IGN2
2	Power ground 2	Immobilizer clock
3	-	Immobilizer data
4	ESCL battery	ACC
5	ESCL ground	-
6	Starter relay	SSB switch1
7	IGN1 relay	SSB illumination ground
8	IGN2 relay	SSB LED green
9	ACC relay	IGN1
10	Battery load	CAN L
11		CAN H
12		Fob in
13		ESCL unlock
14		Vehicle speed
15		Start Feed back
16		RPM data (EMS)
17		SSB LED amber
18		SSB illumination power
19		Holder illumination
20		CPU battery

Body Electrical System > Button Engine Start System > PDM(Power Distribution Module) > Schematic Diagrams

System Circuit Diagram

[PDM]

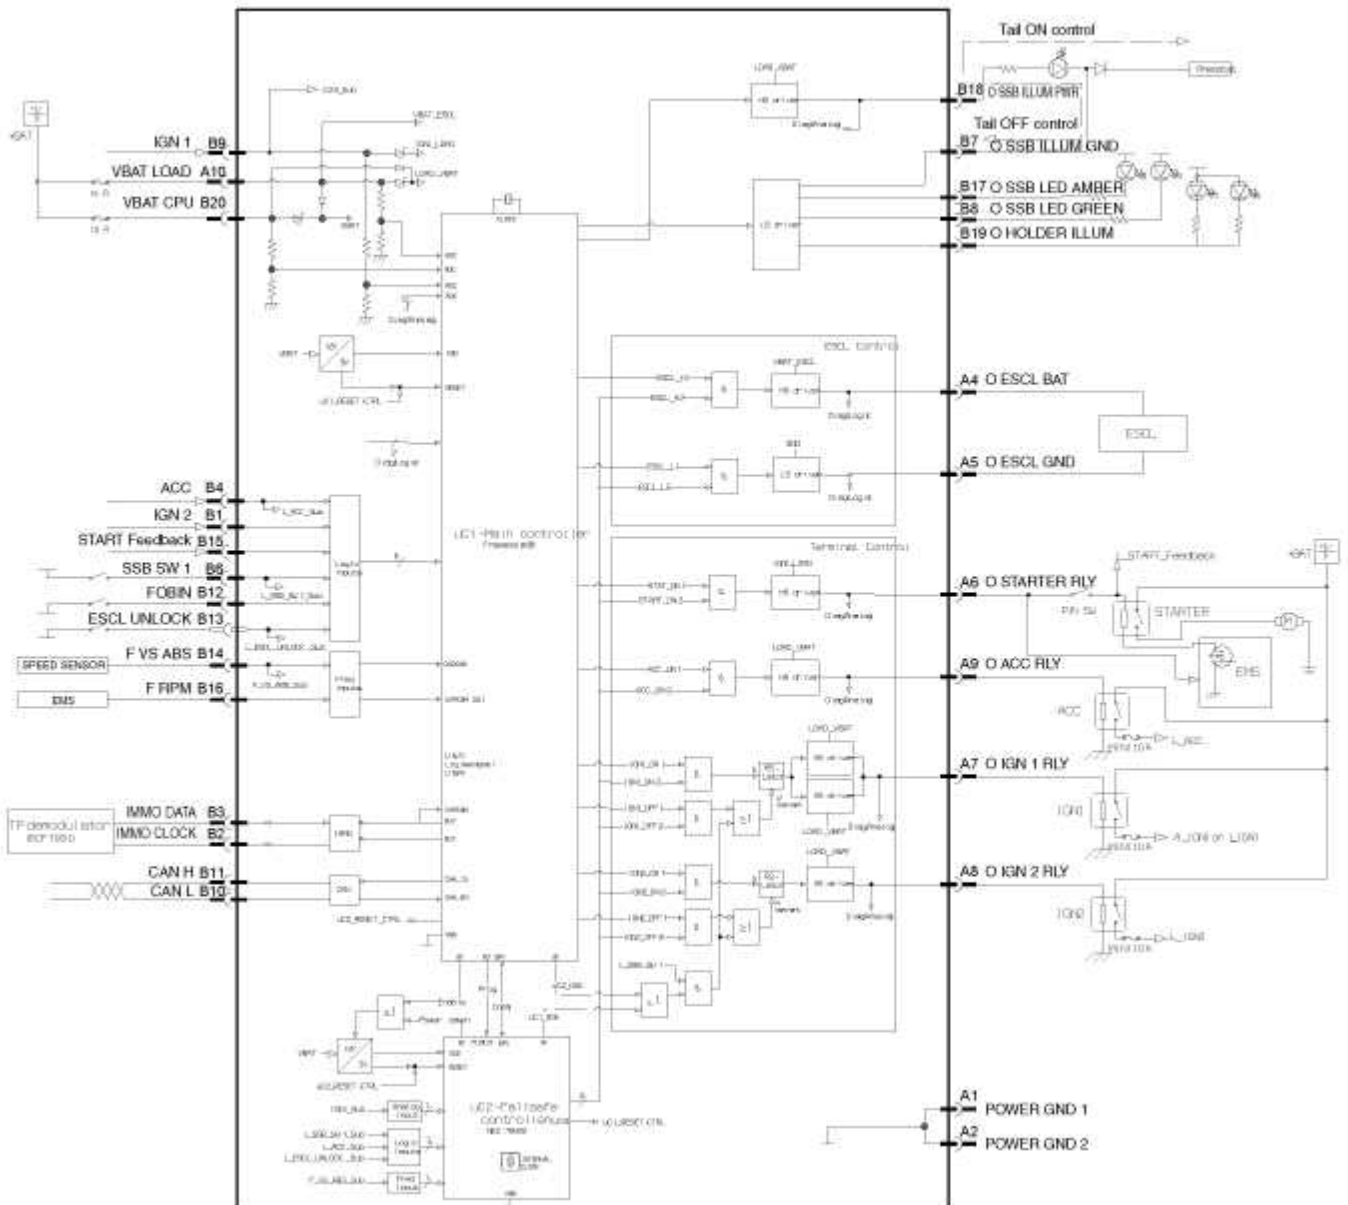


Body Electrical System > Button Engine Start System > PDM(Power Distribution Module) > Repair procedures

Inspection


PDM Diagnosis With GDS

1. It will be able to diagnose defects of Smart key with GDS quickly.
GDS can operates actuator forcefully, input/output value monitoring and self diagnosis.


2. Select model and "Smart key system (Button start)" menu if you want to check PDM.

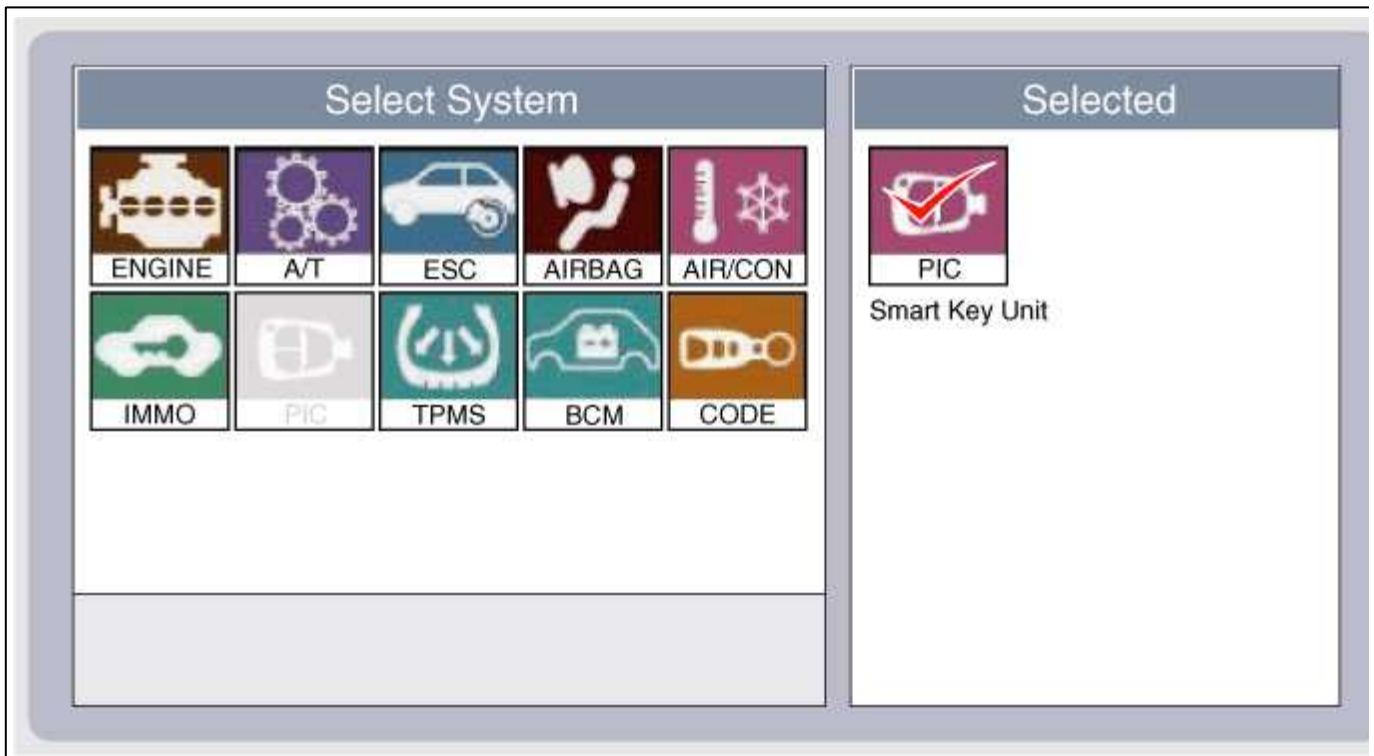

3. Select "PDM" in the manu.

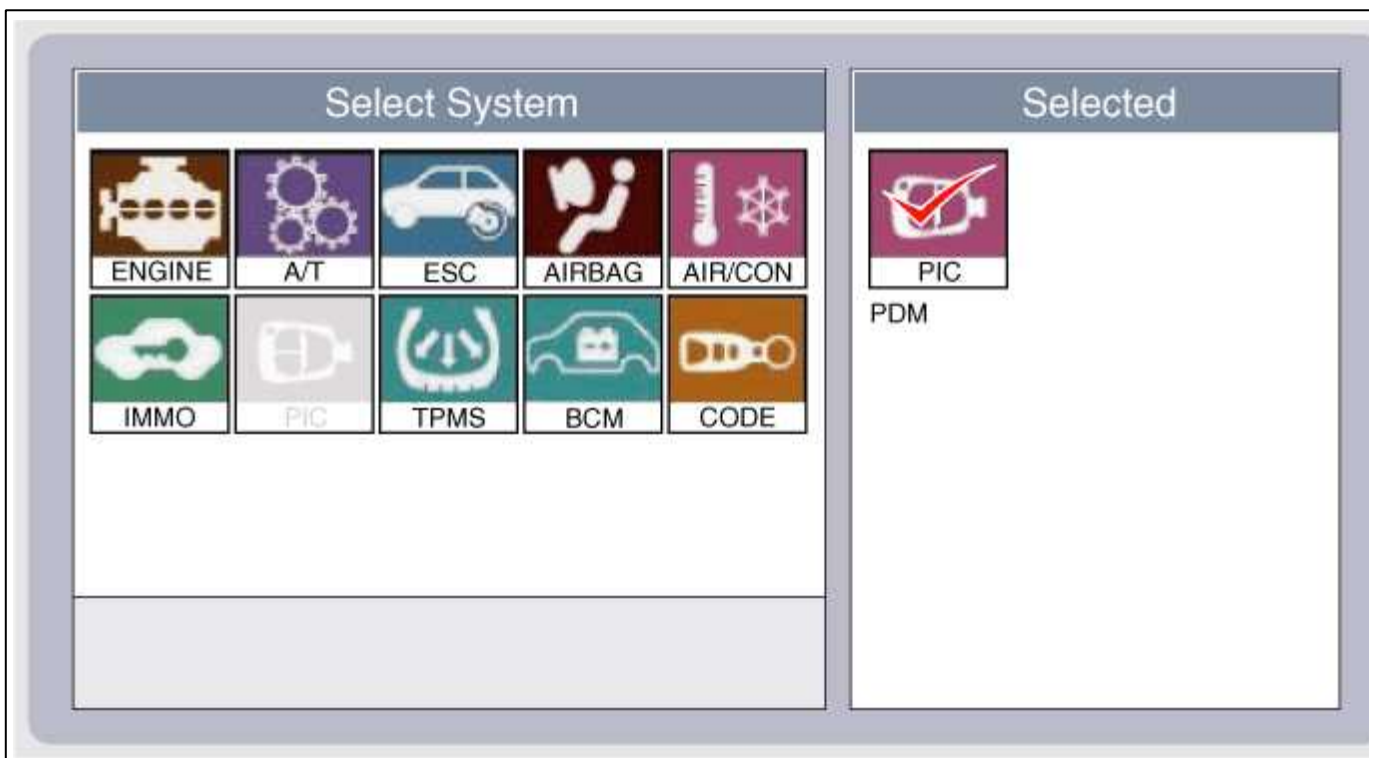


4. Select "Current Data", if you want to check current data of PDM.
It provides the input/output status of each module.

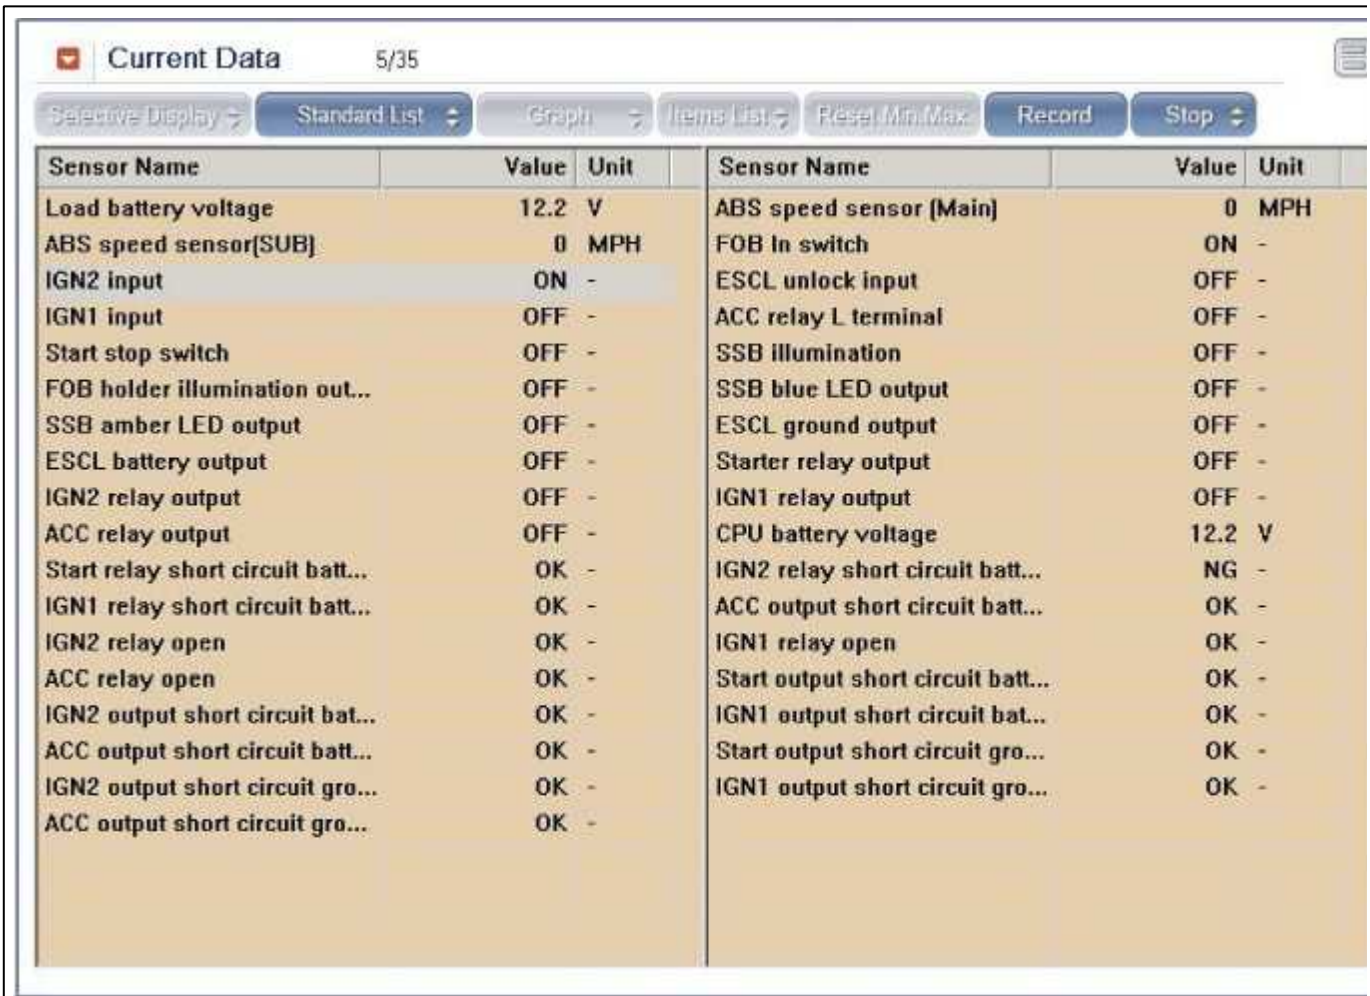

The screenshot shows the 'Current Data' window with a 'Standard List' selected. The table below displays the current data for various sensors.

Sensor Name	Value	Unit	Sensor Name	Value	Unit
Load battery voltage	12.2	V	ABS speed sensor (Main)	0	MPH
ABS speed sensor(SUB)	0	MPH	FOB In switch	ON	-
IGN2 input	ON	-	ESCL unlock input	OFF	-
IGN1 input	OFF	-	ACC relay L terminal	OFF	-
Start stop switch	OFF	-	SSB illumination	OFF	-
FOB holder illumination out...	OFF	-	SSB blue LED output	OFF	-
SSB amber LED output	OFF	-	ESCL ground output	OFF	-
ESCL battery output	OFF	-	Starter relay output	OFF	-
IGN2 relay output	OFF	-	IGN1 relay output	OFF	-
ACC relay output	OFF	-	CPU battery voltage	12.2	V
Start relay short circuit batt...	OK	-	IGN2 relay short circuit batt...	NG	-
IGN1 relay short circuit batt...	OK	-	ACC output short circuit batt...	OK	-
IGN2 relay open	OK	-	IGN1 relay open	OK	-
ACC relay open	OK	-	Start output short circuit batt...	OK	-
IGN2 output short circuit bat...	OK	-	IGN1 output short circuit bat...	OK	-
ACC output short circuit batt...	OK	-	Start output short circuit gro...	OK	-
IGN2 output short circuit gro...	OK	-	IGN1 output short circuit gro...	OK	-
ACC output short circuit gro...	OK	-			

5. If you want to check PDM data operation forcefully, select "Actuation test".

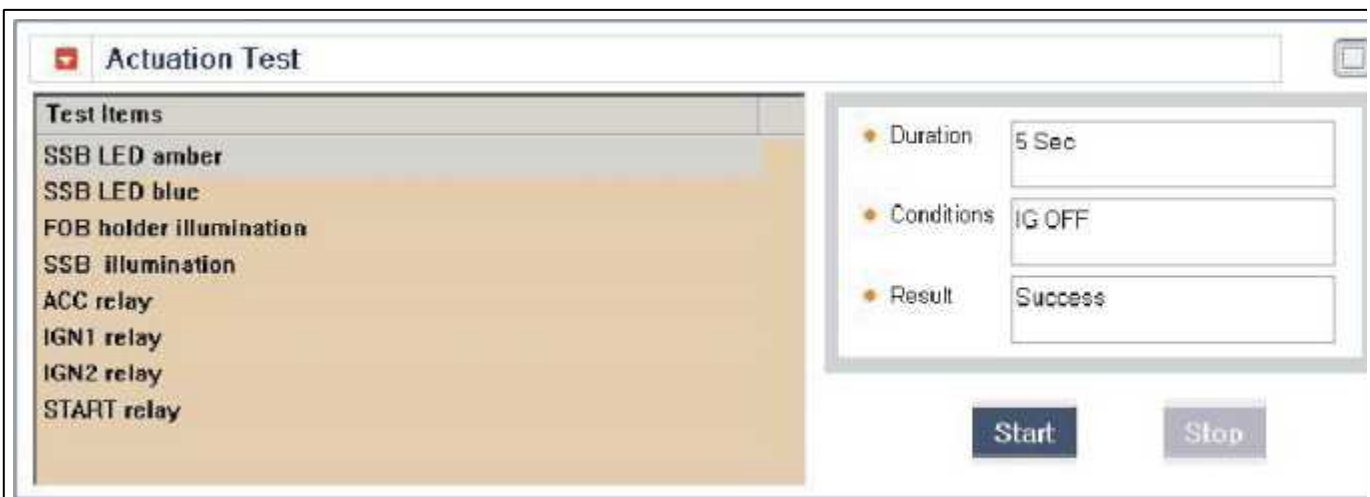

The screenshot shows the 'Actuation Test' window. It includes a list of test items and configuration options for duration, conditions, and result.

Test Items	Duration	Conditions	Result
SSB LED amber	5 Sec	IG OFF	Success
SSB LED blue			
FOB holder illumination			
SSB illumination			
ACC relay			
IGN1 relay			
IGN2 relay			
START relay			

Buttons: Start, Stop

Input/output Current Data


NO	Description	Unit
1	Load Battery Voltage	V
2	Abs Speed Sensor(main)	Km/h
3	Start Stop Button SW	OFF/ON
4	ACC input	OFF/ON
5	IGN1 Input	OFF/ON
6	IGN2 Input	OFF/ON
7	Fob In Switch	RELEASE/INSERT
8	Start Relay Monitoring Input	
9	SSB Ember LED Output	OFF/ON
10	SSB Blue LED Output	OFF/ON
11	Fob Holder Illumination Output	OFF/ON
12	SSB Illumination Output	OFF/ON
13	ACC Relay Output	OFF/ON
14	IGN1 Relay Output	OFF/ON
15	IGN2 Relay Output	OFF/ON
16	Start Relay S1 Output	OFF/ON
17	-	-
18	-	-
19	CPU Battery Voltage	V
20	Engine Speed	DATA*1.0
21	ACC Relay SCB	OFF/ON
22	IGN1 Relay SCB	OFF/ON
23	IGN2 Relay SCB	OFF/ON
24	Start Relay SCB	OFF/ON
25	SCC Relay Open	OFF/ON
26	IGN1 Relay Open	OFF/ON
27	IGN2 Relay Open	OFF/ON
28	ACC Output SCB	OFF/ON
29	IGN1 Output SCB	OFF/ON
30	IGN2 Output SCB	OFF/ON
31	Start Output SCB	OFF/ON
32	ACC Output SCG	OFF/ON
33	IGN1 Output SCG	OFF/ON
34	IGN2 Output SCG	OFF/ON
35	Start Output SCG	OFF/ON


Actuation Test

No.	Description
1	SSB Ember LED
2	SSB Blue LED
3	Fob Holder Illumination
4	SSB Illumination
5	ACC Output
6	ING1 Output
7	ING2 Output
8	Start Output
9	-

ESCL OPEN STATUS CHECK

1. Select the "ESCL open status check" menu if you want to check ESCL open.

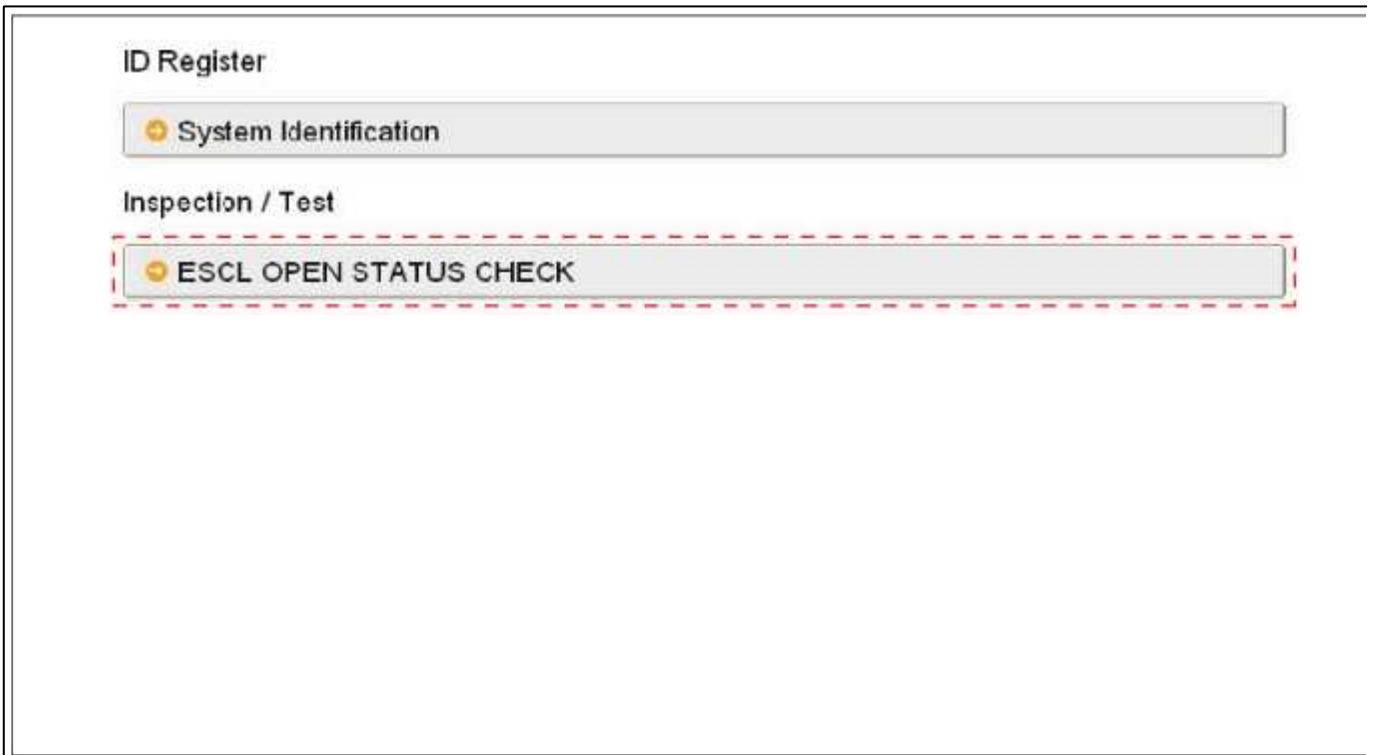


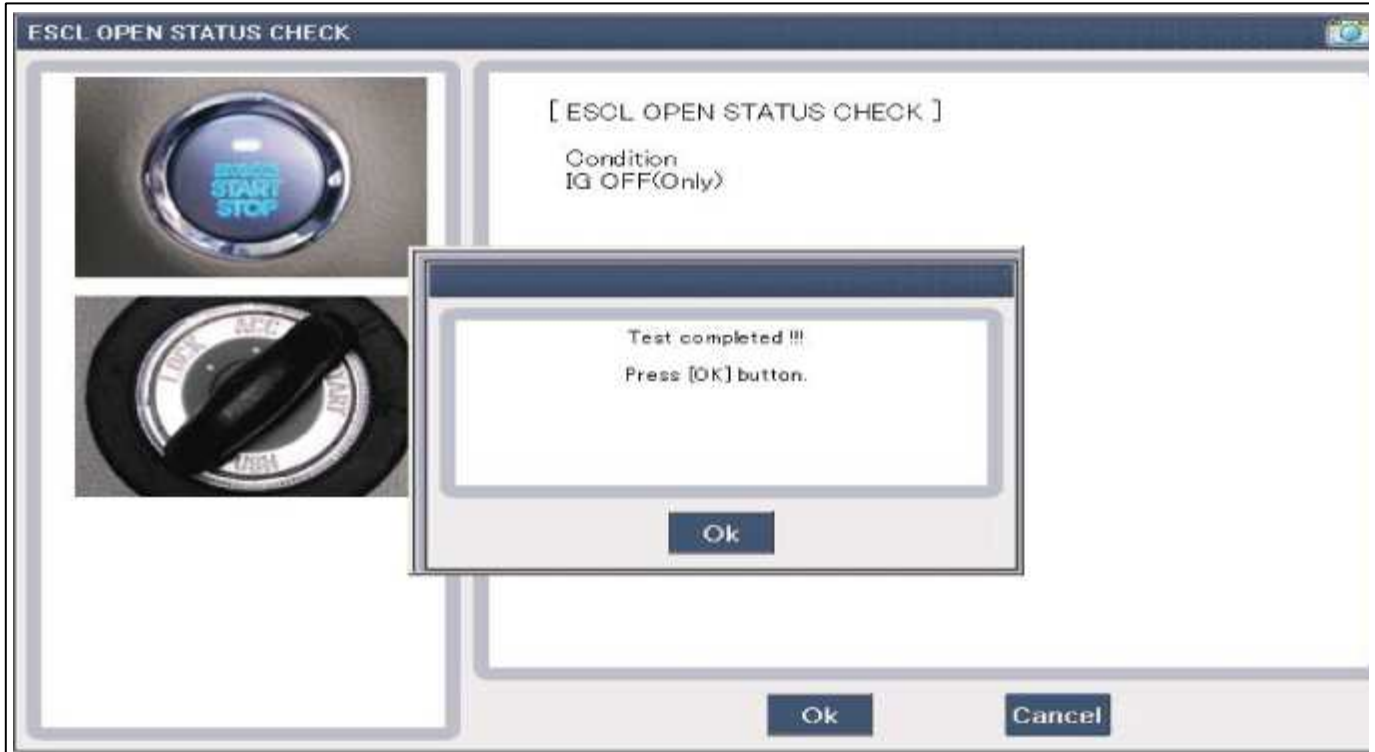


Removal

1. Disconnect the negative(-) battery terminal.

2. Remove the crash pad lower panel(A).
(Refer to Body group-"Crash pad")

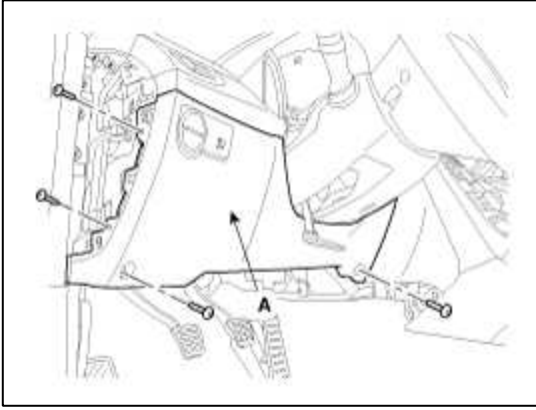

3. Disconnect the power distribution module(PDM) connector.
4. Remove the power distribution module(A) after loosening nut and bolt.

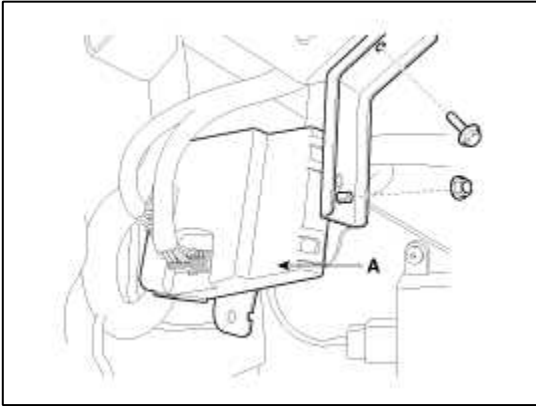

Installation

1. Install the power distribution module.
2. Install the crash pad lower panel.

GENESIS COUPE(BK) > 2013 > G 3.8 GDI > Brake System**Brake System > General Information > Specifications**

Specifications

Item		Specification	
Master cylinder	Type	Tandem	
	Cylinder I.D.	23.81mm (0.94in)	
	Piston stroke	43±1mm (1.69±0.039in)	
	Fluid level switch	Provided	
Brake booster	Type	7" + 8" Tandem	
	Boosting ratio	9 : 1	
Front Disc brake	Caliper Type	General Disc Brake	Brembo Disc Brake
	Type	Ventilated disc	Ventilated disc
	Disc O.D	320mm(12.60in)	340mm(13.39in)
	Disc thickness	28mm(1.10in)	28mm(1.10in)
	Caliper piston	Single	4piston
	Cylinder I.D	Φ60mm(2.36in)	Φ(42mm+42mm(1.65in+1.65in))X2
Rear Disc brake	Caliper Type	General Disc Brake	Brembo Disc Brake
	Type	Solid disc	Ventilated disc
	Disc O.D	314mm(12.36in)	330mm(12.99in)
	Disc thickness	13mm(0.51in)	20mm(0.79in)
	Caliper piston	Single	4piston
	Cylinder I.D	Φ42.9mm(1.69in)	Φ(32mm+28mm(1.26in+1.10in))X2
Parking brake	Type	DIH (Drum in hat)	
	Drum I.D.	Ø 190mm (7.48in)	

NOTE

O.D. : Outer Diameter
I.D : Inner Diameter

Specification (ESC)

Part	Item	Standard value	Remark
HECU	System	4 Channel 4 Sensor (Solenoid)	Total control (ABS, EBD, TCS, ESC)
	Type	Motor, valve relay intergrated type	
	Operating Voltage	10 ~ 16V	
	Operating Temperature	-40 ~ 120°C(-40 ~ 248°F)	
	Motor power	270W	
Warning lamp	Min. Operating Voltage	12V	
	Max. Current consumption	Max. 200mA	
Active Wheel speed sensor	Supply voltage	DC 4.5 ~ 20V	
	Output current low	5.9 ~ 8.4mA	
	Output current high	11.8~ 16.8mA	
	Output range	1 ~ 2500Hz	
	Tone wheel	Front : 46 teeth Rear : 47 teeth	
	Air gap	0.5 ~ 1.5mm	
Steering Wheel Angle Sensor	Operating Voltage	8 ~ 16V	
	Current consumption	Max. 100mA	
	Output measurement range	-780 ~ +799.9°	
	Operating Angular velocity	1500°/sec	
Yaw rate& Lateral G sensor (CAN TYPE)	Operating Voltage	8 V ~ 17V	
	Current Consumption	Max. 140mA	
	Yaw rate sensor measurement range	-75 ~ 75°/sec	
	Lateral G sensor measurement range	-1.5 ~ 1.5gN	

Service Standard

Items		Standard vale	
Brake pedal stroke		AT : 132.1mm (5.20in) MT : 132.9mm (5.23in)	
Stop lamp clearance		1.0 ~ 1.5mm (0.04 ~ 0.06in)	
Brake pedal free play		3 ~ 8 mm (0.12 ~ 0.13in)	
Parking brake lever stroke when lever assembly is pulled with 196N (20Kg, 44lb force)		5 Notch	
Front brake disc	disc thickness	General	28mm(1.10in)
		Brembo	28mm(1.10in)
	pad thickness	General	11mm(0.43in)
		Brembo	8.5mm(0.33in)
Rear brake disc	disc thickness	General	13mm(0.51in)
		Brembo	20mm(0.79in)
	pad thickness	General	9mm(0.35in)
		Brembo	9.1mm(0.36in)

Tightening Torques

Items		N.m	kgf.m	lb-ft
Master cylinder to brake booster		12.7 ~ 16.7	1.3 ~ 1.7	9.4 ~ 12.3
Brake booster mounting nuts		12.7 ~ 15.7	1.3 ~ 1.6	9.4 ~ 11.6
Air bleeding screw	General	6.9 ~ 12.7	0.7 ~ 1.3	5.1 ~ 9.4
	Brembo	16.7 ~ 19.6	1.7 ~ 2.0	12.3 ~ 14.5
Brake tube flare nuts		12.7 ~ 16.7	1.3 ~ 1.7	9.4 ~ 12.3
Front caliper guide rod bolts		21.6 ~ 31.4	2.2 ~ 3.2	15.9 ~ 23.1
Rear caliper guide rod bolts		21.6 ~ 31.4	2.2 ~ 3.2	15.9 ~ 23.1
Front caliper assembly to knuckle	General	78.5 ~ 98.1	8.0 ~ 10.0	57.9 ~ 72.3
	Brembo	88.3 ~ 103.0	9.0 ~ 10.5	65.1 ~ 75.9
Rear caliper assembly to knuckle		78.5 ~ 98.1	8.0 ~ 10.0	57.9 ~ 72.3
Brake hose to caliper		24.5 ~ 29.4	2.5 ~ 3.0	18.1 ~ 21.7
Brake pedal member bracket bolts		12.7 ~ 15.7	1.3 ~ 1.6	9.4 ~ 11.6
Brake pedal shaft nut		8.8 ~ 13.7	0.9 ~ 1.4	6.5 ~ 10.1
Stop lamp switch lock nut		7.8 ~ 9.8	0.8 ~ 1.0	5.8 ~ 7.2
Wheel speed sensor mounting bolt		6.9 ~ 10.8	0.7 ~ 1.1	5.1 ~ 8.0
HECU bracket mounting bolt		16.7 ~ 25.5	1.7 ~ 2.6	12.3 ~ 18.8


Yaw rate&G sensor mounting bolts	7.8 ~ 10.8	0.8 ~ 1.1	5.8 ~ 8.0
----------------------------------	------------	-----------	-----------

Lubricants

Items	Recommended	Quantity
Brake fluid	DOT 3 or DOT 4	As required
Brake pedal bushing and bolt	Chassis grease	As required
Parking brake shoe and backing plate contacting surface	Heat resistance grease	As required
Front caliper guide rod and boot	AI-11P	1.2 ~ 1.7g
Rear caliper guide rod and boot	AI-11P	0.8 ~ 1.3g

Brake System > General Information > Special Service Tools

Special Service Tools

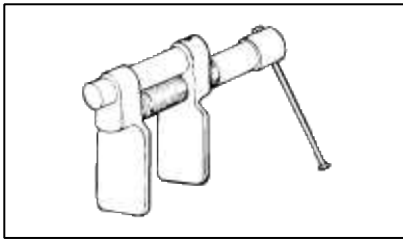Tool (Number and Name)	Illustration	Use
09581-11000 Piston expander		Spreading the front disc brake piston

Brake System > General Information > Troubleshooting

Troubleshooting

Problem Symptoms Table

Use the table below to help you find the cause of the problem. The numbers indicate the priority of the like cause of the problem. Check each part in order.

If necessary, replace these parts.

Symptom	Suspect Area	Reference
Lower pedal or spongy pedal	<ol style="list-style-type: none"> 1. Brake system (Fluid leaks) 2. Brake system (Air in) 3. Piston seals (Worn or damaged) 4. Rear brake shoe clearance (Out of adjustment) 5. Master cylinder (Inoperative) 	repair air-bleed replace adjust replace
Brake drag	<ol style="list-style-type: none"> 1. Brake pedal free play (Minimum) 2. Parking brake lever travel (Out of adjustment) 3. Parking brake wire (Sticking) 4. Rear brake shoe clearance (Out of adjustment) 5. Pad or lining (Cracked or distorted) 6. Piston (Stuck) 7. Piston (Frozen) 	adjust adjust repair adjust replace replace replace


	<ul style="list-style-type: none"> 8. Anchor or Return spring (Inoperative) 9. Booster system (Vacuum leaks) 10. Master cylinder (Inoperative) 	<ul style="list-style-type: none"> replace repair replace
Brake pull	<ul style="list-style-type: none"> 1. Piston (Sticking) 2. Pad or lining (Oily) 3. Piston (Frozen) 4. Disc (Scored) 5. Pad or lining (Cracked or distorted) 	<ul style="list-style-type: none"> replace replace replace replace replace
Hard pedal but brake inefficient	<ul style="list-style-type: none"> 1. Brake system (Fluid leaks) 2. Brake system (Air in) 3. Pad or lining (Worn) 4. Pad or lining (Cracked or distorted) 5. Rear brake shoe clearance (Out of adjustment) 6. Pad or lining (Oily) 7. Pad or lining (Glazed) 8. Disc (Scored) 9. Booster system (Vacuum leaks) 	<ul style="list-style-type: none"> repair air-bleed replace replace adjust adjust replace replace replace
Noise from brake	<ul style="list-style-type: none"> 1. Pad or lining (Cracked or distorted) 2. Installation bolt (Loosen) 3. Disc (Scored) 4. Sliding pin (Worn) 5. Pad or lining (Dirty) 6. Pad or lining (Glazed) 7. Anchor or Return spring (Faulty) 8. Brake pad shim (Damage) 9. Shoe hold-down spring (Damage) 	<ul style="list-style-type: none"> replace adjust replace replace clean replace replace replace replace
Brake fades	<ul style="list-style-type: none"> 1. master cylinder 	<ul style="list-style-type: none"> replace
Brake vibration, pulsation	<ul style="list-style-type: none"> 1. brake booster 2. pedal free play 3. master cylinder 4. caliper 5. master cylinder cap seal 6. damaged brake lines 	<ul style="list-style-type: none"> replace adjust replace replace replace replace
Brake Chatter	<p>Brake chatter is usually caused by loose or worn components, or glazed or burnt linings. Rotors with hard spots can also contribute to brake chatter. Additional causes of chatter are out-of-tolerance rotors, brake lining not securely attached to the shoes, loose wheel bearings and contaminated brake lining.</p>	

Brake System > Brake System > Repair procedures

Operation and Leakage Check

Check all of the following items

Component	Procedure
Brake Booster (A)	Check brake operation by applying the brakes during a test drive. If the brakes do not work properly, check the brake booster. Replace the brake booster as an assembly if it does not work properly or if there are signs of leakage.
Piston cup and pressure cup inspection (B)	<ul style="list-style-type: none"> • Check brake operation by applying the brakes. Look for damage or signs of fluid leakage. Replace the master cylinder as an assembly if the pedal does not work properly or if there is damage or signs of fluid leakage. • Check for a difference in brake pedal stroke between quick and slow brake applications. Replace the master cylinder if there is a difference in pedal stroke.
Brake hoses (C)	Look for damage or signs of fluid leakage. Replace the brake hose with a new one if it is damaged or leaking.
Caliper piston seal and piston boots (D)	Check brake operation by applying the brakes. Look for damage or signs of fluid leakage. If the pedal does not work properly, the brakes drag, or there is damage or signs of fluid leakage, disassemble and inspect the brake caliper. Replace the boots and seals with new ones whenever the brake caliper is disassembled.

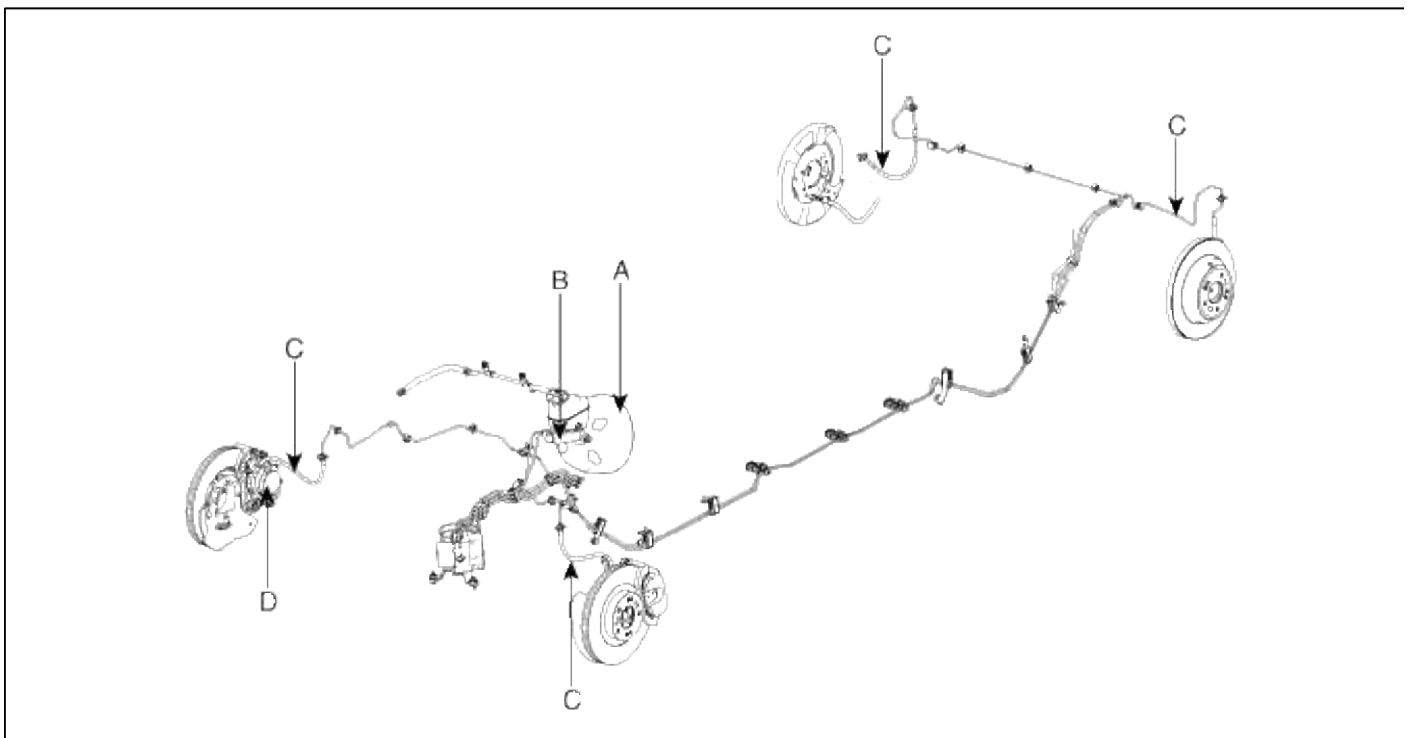


Brake System Bleeding

CAUTION


- Do not reuse the drained fluid.
- Always use genuine DOT3/DOT4 brake Fluid.
Using a non-genuine DOT3/DOT4 brake fluid can cause corrosion and decrease the life of the system.
- Make sure no dirt or other foreign matter is allowed to contaminate the brake fluid.
- Do not spill brake fluid on the vehicle, it may damage the paint; if brake fluid does contact the paint, wash it off immediately with water.
- The reservoir on the master cylinder must be at the MAX (upper) level mark at the start of bleeding procedure and checked after bleeding each brake caliper. Add fluid as required.

1. Make sure the brake fluid in the reservoir is at the MAX(upper) level line.
2. Have someone slowly pump the brake pedal several times, and then apply pressure.
3. Loosen the right-rear brake bleed screw (A) to allow air to escape from the system. Then tighten the bleed screw securely.


Front

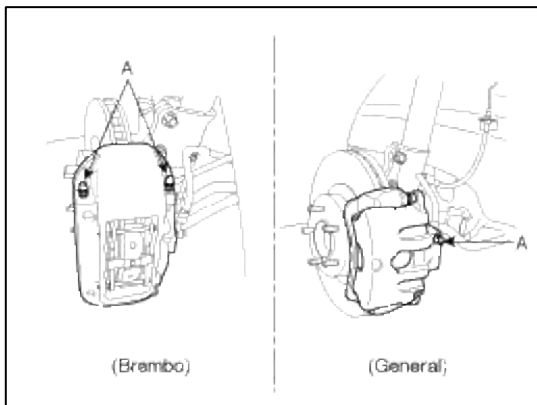

Rear

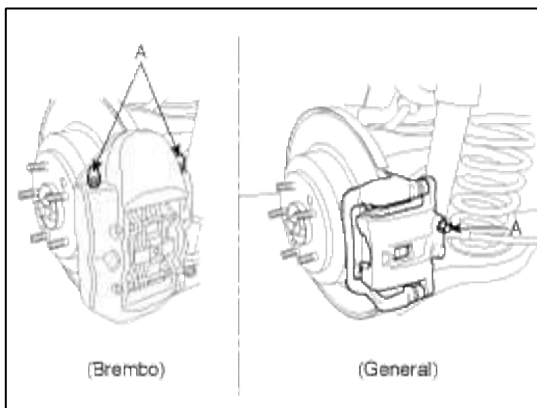


4. Repeat the procedure for wheel in the sequence shown below until air bubbles no longer appear in the fluid.

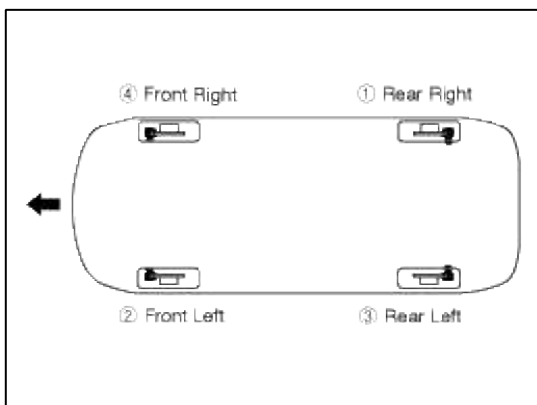

5. Refill the master cylinder reservoir to MAX(upper) level line.

Brake System > Brake System > Brake Booster > Components and Components Location

Components

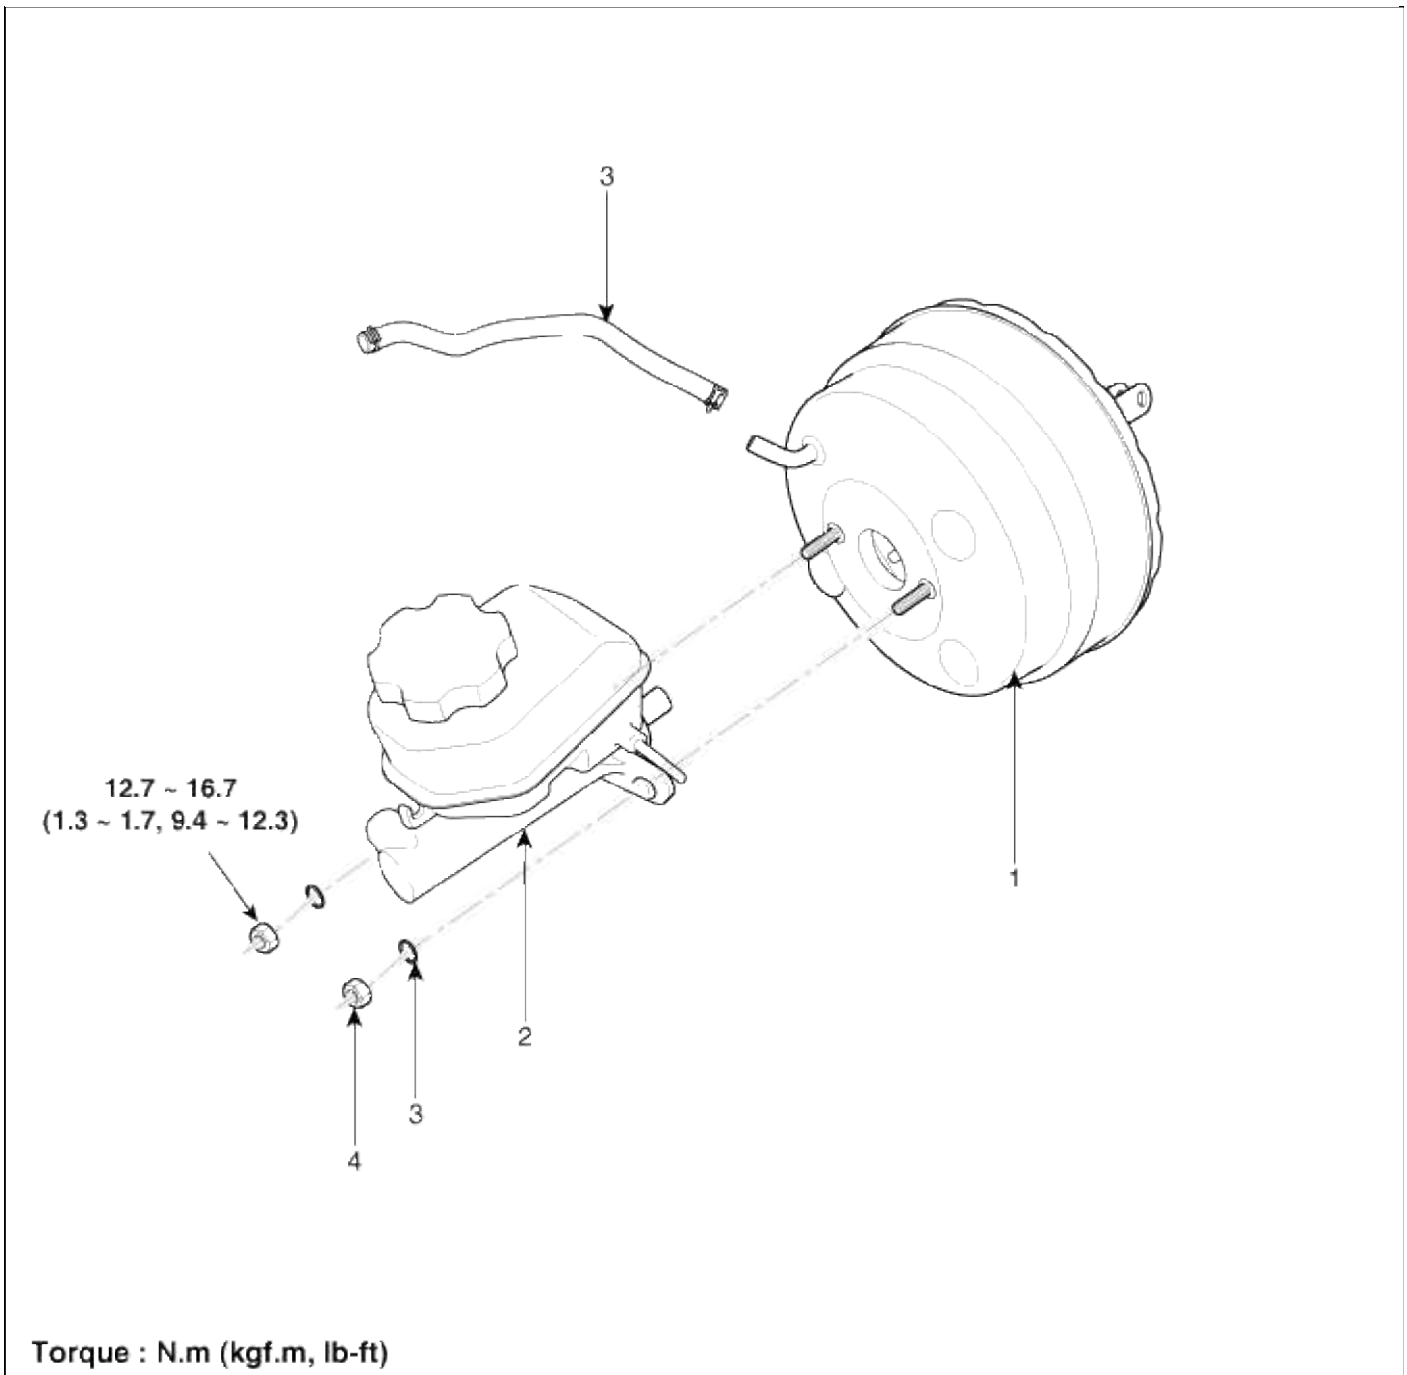


1. Brake booster	4. Nut
2. Master cylinder assembly	5. Vacuum hose
3. Washer	

Brake System > Brake System > Brake Booster > Repair procedures


Brake Booster Operating Test

For simple checking of the brake booster operation, carry out the following tests.


1. Run the engine for one or two minutes, and then stop it. If the pedal depresses fully the first time but gradually becomes higher when depressed succeeding times, the booster is operating properly, if the pedal height remains unchanged, the booster is inoperative.

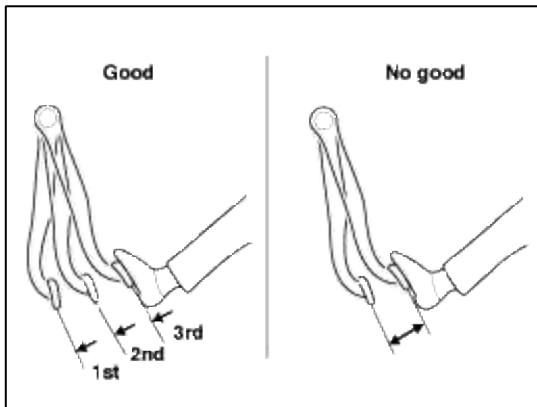

2. With the engine stopped, step on the brake pedal several times. Then step on the brake pedal and start the engine. If the pedal moves downward slightly, the booster is in good condition. If there is no change, the booster is inoperative.

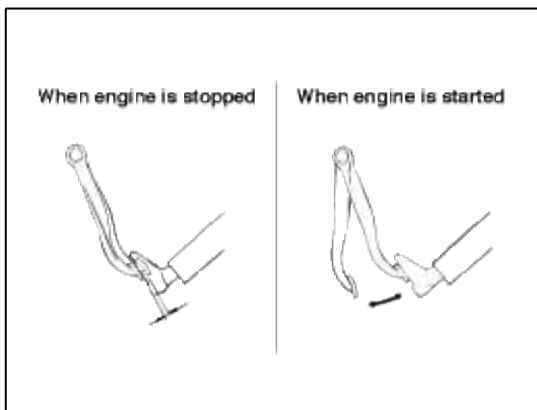


3. With the engine running, step on the brake pedal and then stop the engine. Hold the pedal depressed for 30 seconds. If the pedal height does not change, the booster is in good condition, if the pedal rises, the booster is inoperative. If the above three tests are okay, the booster performance can be determined as good. Even if one of the above three tests is not okay, check the check valve, vacuum hose and booster for malfunction.

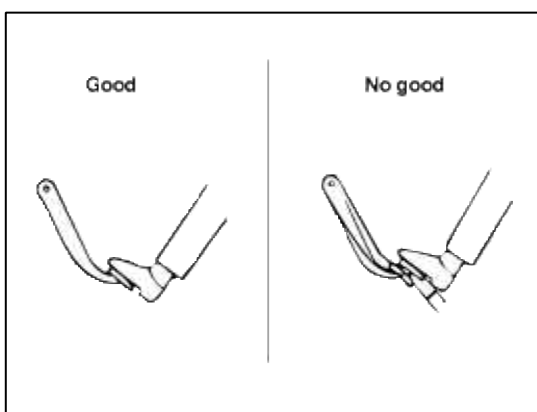

Removal


1. Turn ignition switch OFF and disconnect the negative (-) battery cable.

2. Remove the strut bar (A).

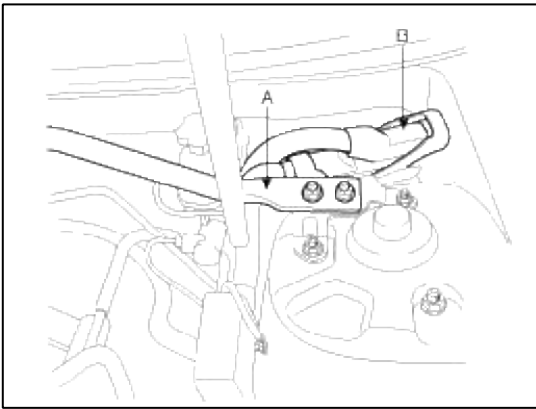

3. Disconnect the ECM connector (B). And then take the protector of control harness off.


4. Disconnect the vacuum hose (A) from the brake booster.

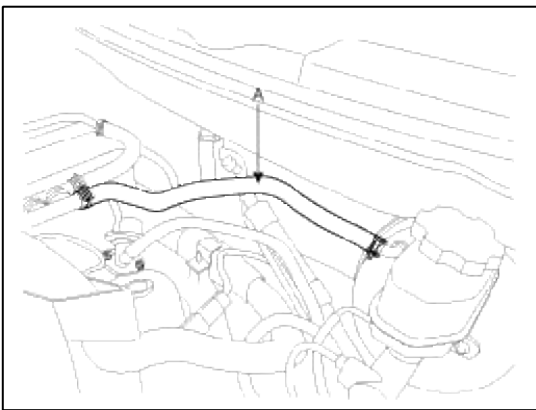

5. Remove the master cylinder.

(Refer to Master cylinder)


6. Remove the snap pin (A) and clevis pin (B).

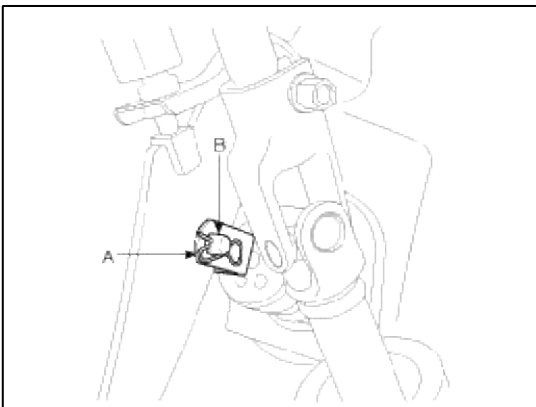

7. Remove the mounting nuts.

Tightening torque :

12.7 ~ 15.7 N.m (1.3 ~ 1.6 kgf.m, 9.4 ~ 11.6 lb-ft)

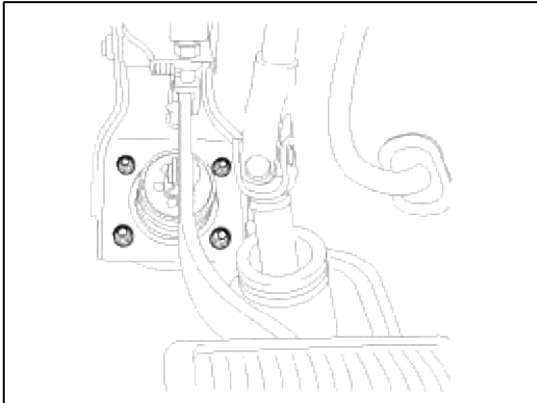

8. Remove the brake booster.

Inspection

1. Inspect the check valve in the vacuum hose.

CAUTION

Do not remove the check valve from the vacuum hose.

2. Check the boot for damage.

Installation

1. Installation is the reverse of removal.

CAUTION

- Before installing the pin, apply the grease to the joint pin.
- Use a new snap pin whenever installing.

2. After installing, bleed the brake system.

(Refer to Brake system bleeding)

3. Adjust the brake pedal height and free play.

(Refer to Brake pedal height and free play adjustment)

Brake System > Brake System > Vacuum Pump (2.0 A/T & ESC Only) > Description and Operation


Description

The Vacuum Pump System is set up in a vehicle in order to make the vacuum enough when a driver presses the brake pedal on the high ground. To operate this system, the vacuum pump is installed on a vehicle.

If the vacuum is not sufficient to press the brake pedal, the HECU senses it through the vacuum switch, which is installed on booster. And then the HECU supplies the power to the vacuum pump by grounding the circuit of the vacuum pump relay. When the vacuum pump is supplied with electric power, it makes the vacuum and supplements it to the booster.

Brake System > Brake System > Vacuum Pump (2.0 A/T & ESC Only) > Components and Components Location

Components

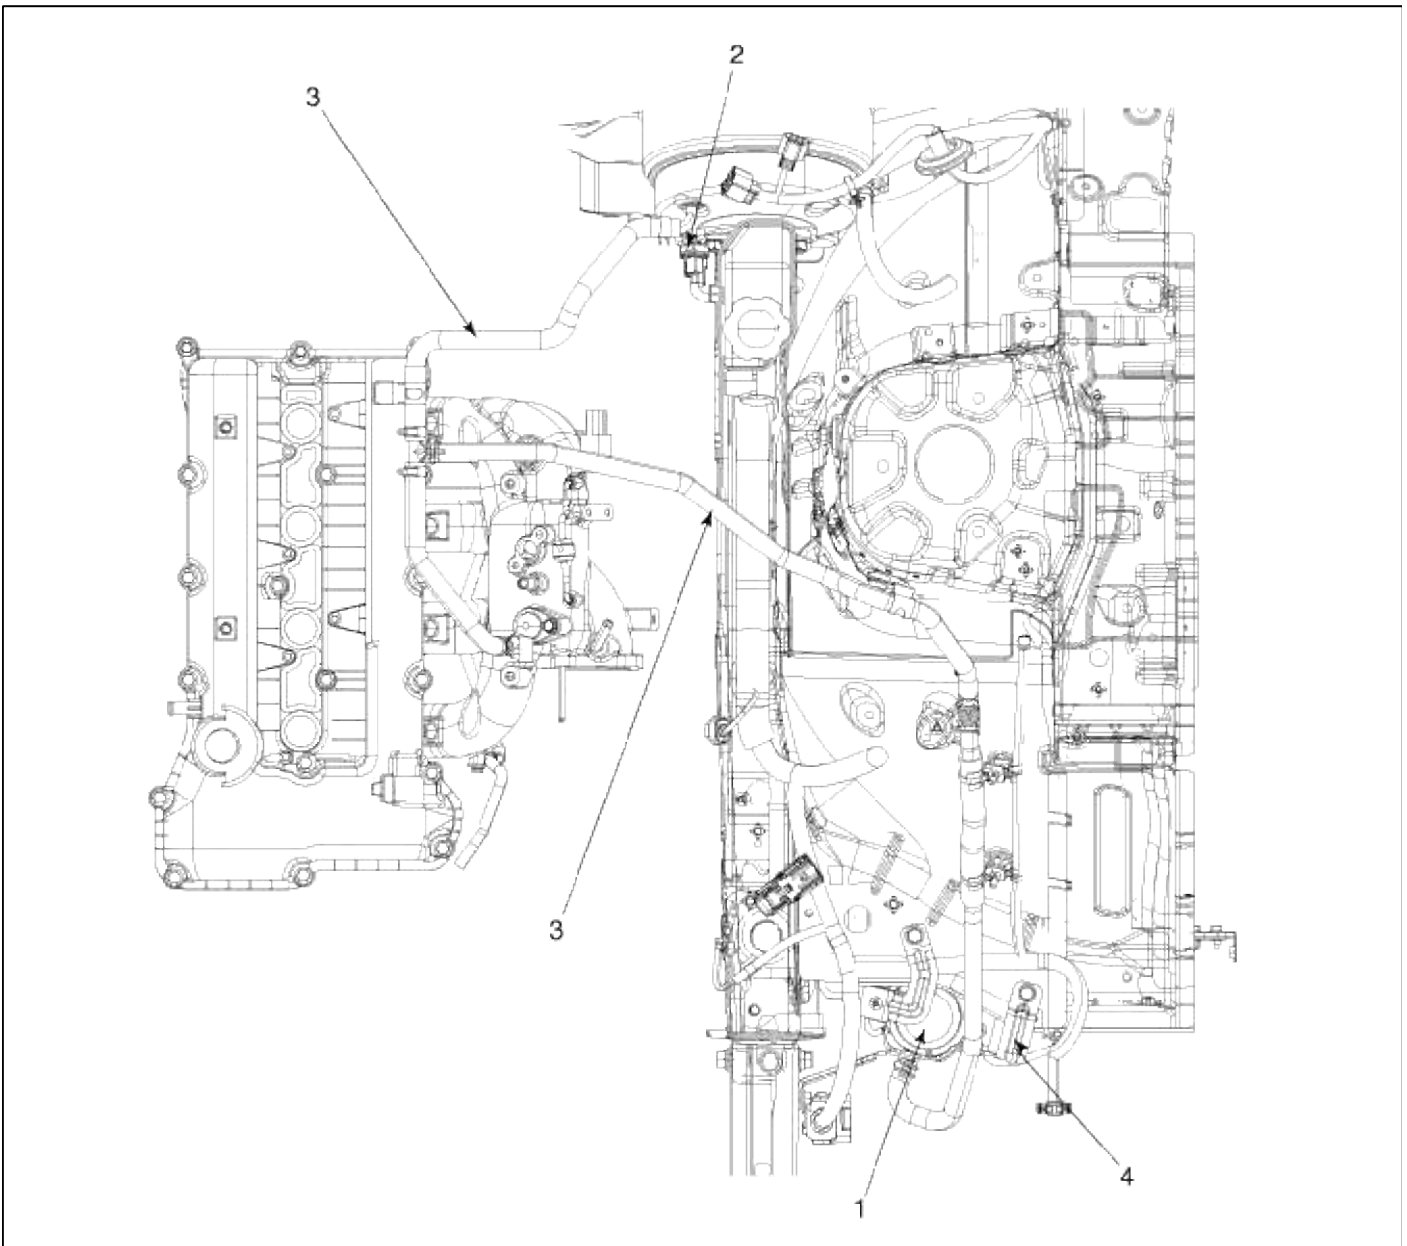


- | | |
|------------------|------------------------|
| 1. Vacuum pump | 3. Vacuum hose |
| 2. Vacuum switch | 4. Vacuum pump bracket |

Brake System > Brake System > Vacuum Pump (2.0 A/T & ESC Only) > Repair procedures


Removal

1. Remove the front bumper cover.
(Refer to Body group – "Bumper")


2. Disconnect the Vacuum pump connector (A).

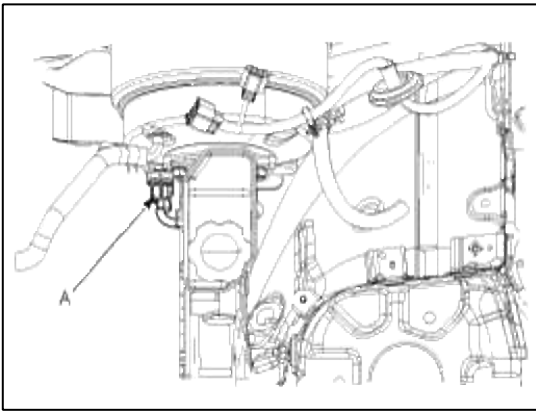


3. Remove the Vacuum hose (A).

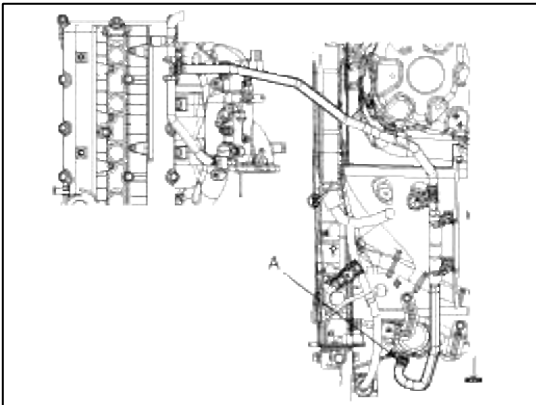

4. Remove the mounting bracket bolt (A).

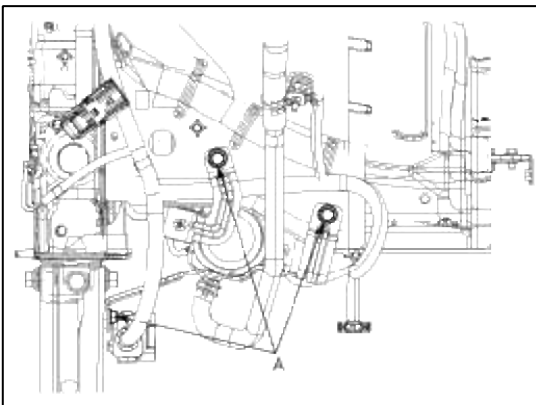


5. Remove the 2 nuts (A) and then remove the bracket from Vacuum pump.

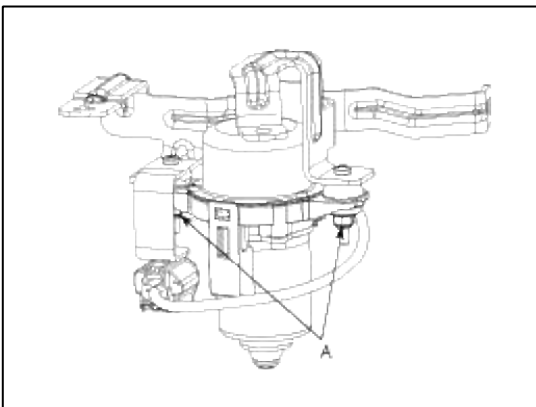


Installation


1. Install the Vacuum pump to the bracket.

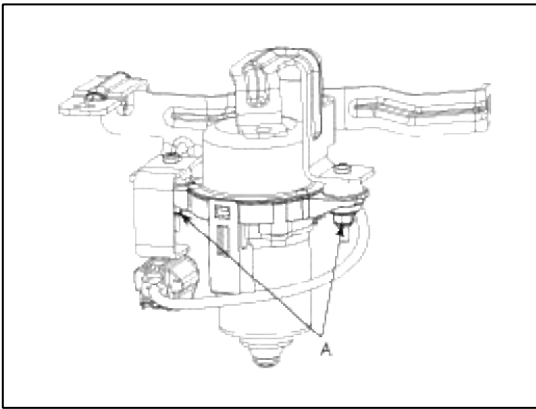


2. Install the Vacuum pump & bracket bolt.

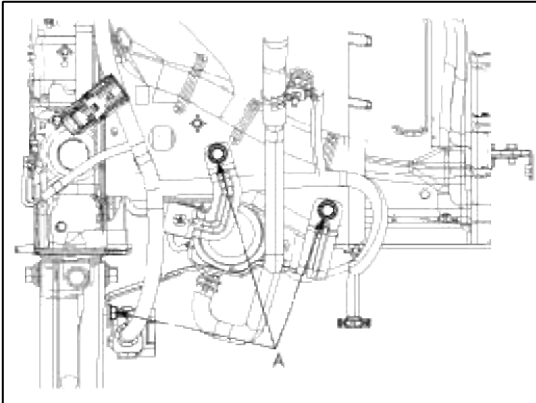

3. Install the Vacuum hose.

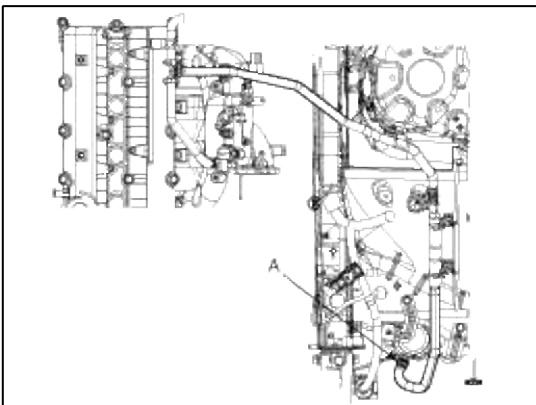


4. Connect the Vacuum pump connector.

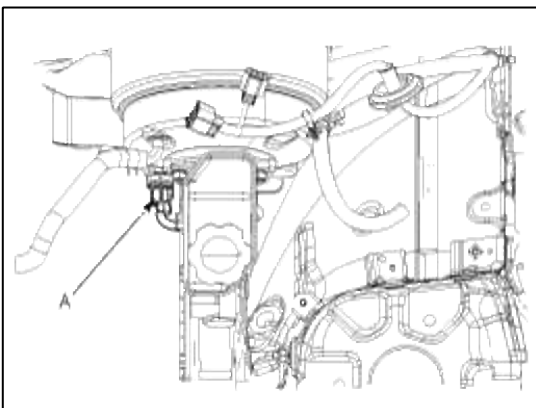

5. Install the front bumper cover.
 (Refer to Body group – "Bumper")

Components

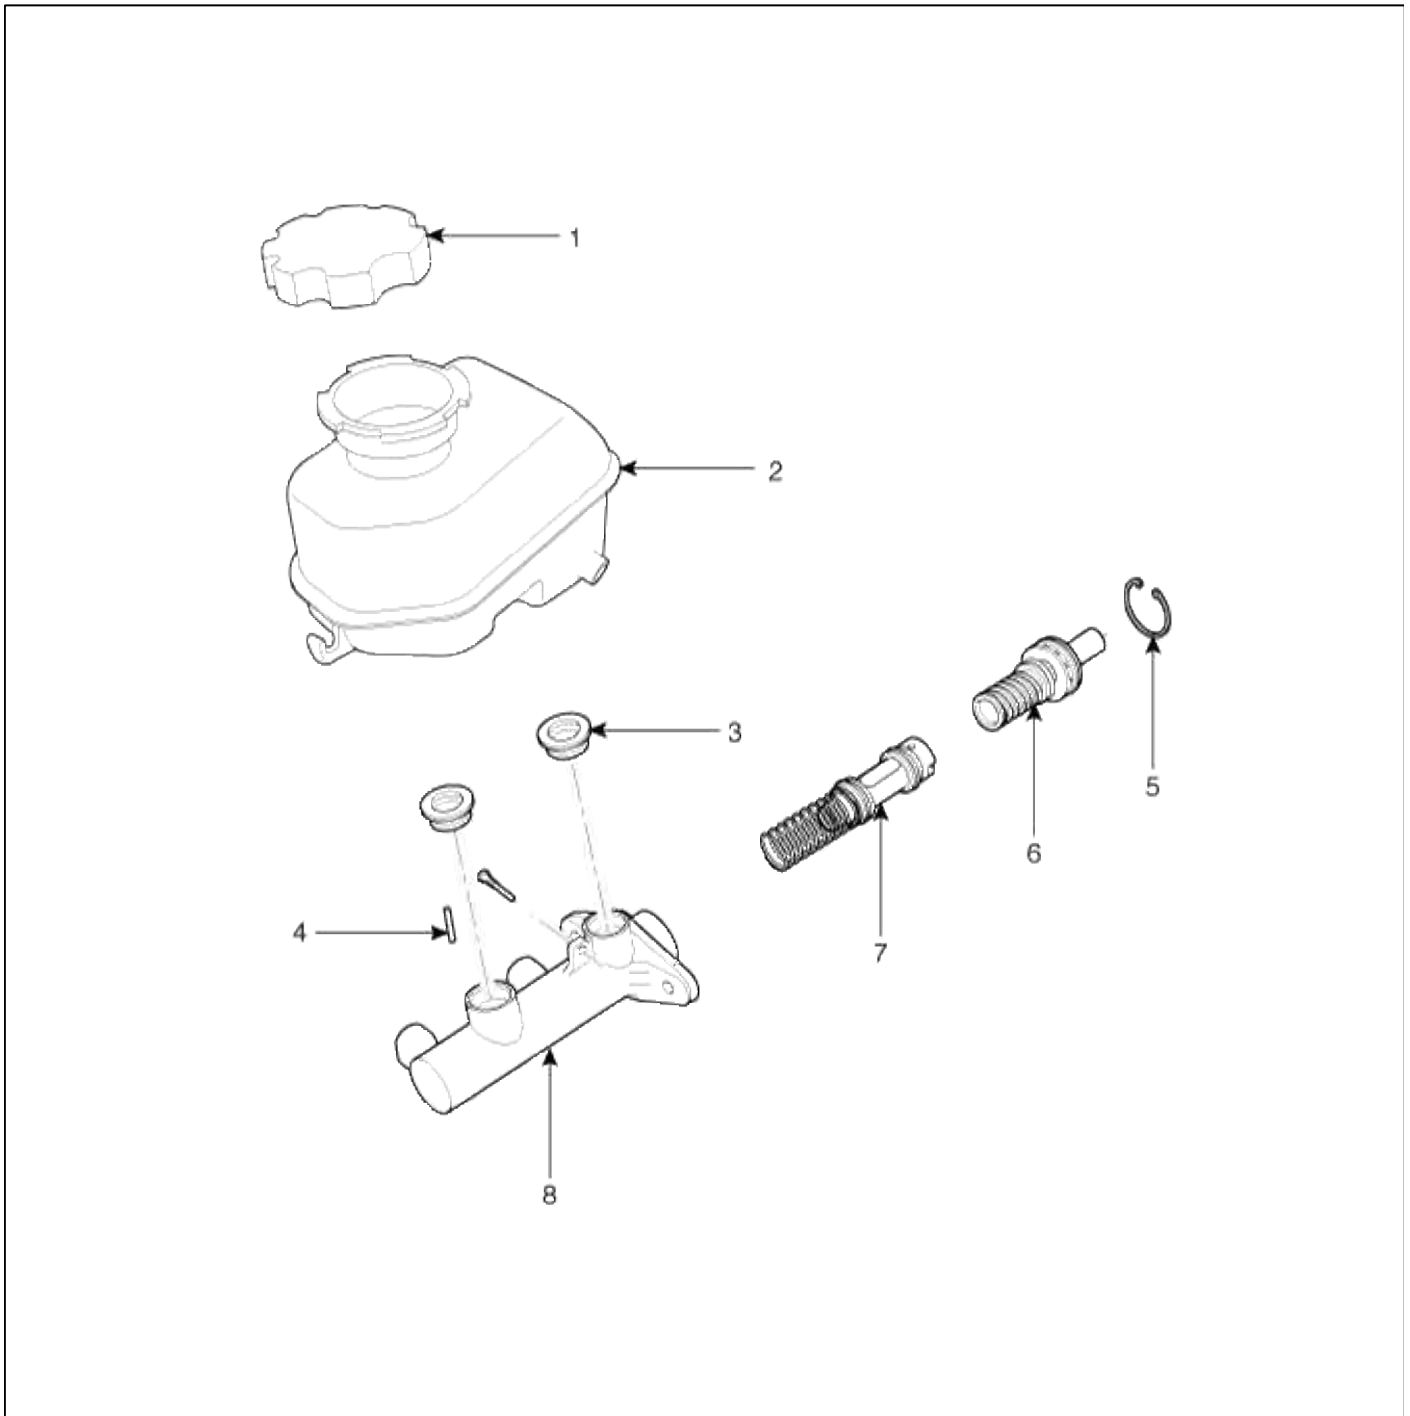


1. Reservoir cap	5. Retainer
2. Reservoir	6. Primary piston assembly
3. Grommet	7. Secondary piston assembly
4. Cylinder pin	8. Master cylinder body


Brake System > Brake System > Master Cylinder > Repair procedures

Removal

1. Turn ignition switch OFF and disconnect the negative (-) battery cable.
2. Remove the strut bar (A).

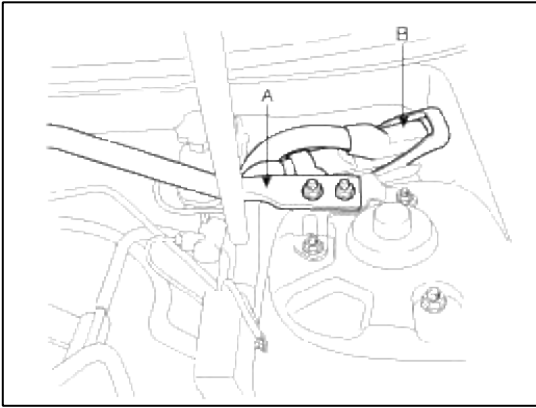

3. Disconnect the ECM connector (B). And then take the protector of control harness off.
4. Disconnect the brake fluid level switch connector (A) from the reservoir.

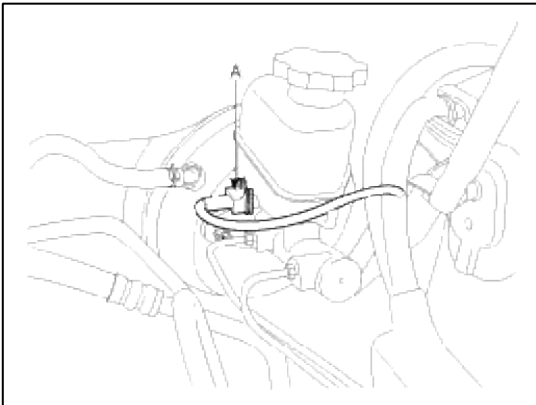

5. Remove the brake fluid from the master cylinder reservoir with a syringe.

CAUTION


- Do not spill brake fluid on the vehicle, it may damage the paint; if brake fluid does contact the paint, wash it off immediately with water.

6. Disconnect the brake tube (B) from the master cylinder by loosening the tube flare nut.

Tightening torque :

ABS : 12.7 ~ 16.7 N.m (1.3 ~ 1.7 kgf.m, 9.4 ~ 12.3 lb-ft)


ESC : 18.6 ~ 22.6 N.m (1.9 ~ 2.3 kgf.m, 13.7 ~ 16.7 lb-ft)

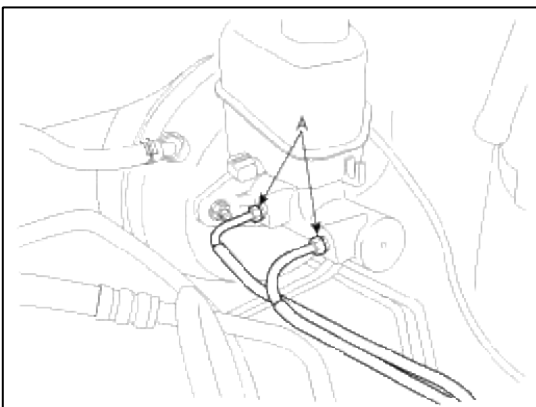

7. Remove the master cylinder (B) from the brake booster after loosening the mounting nuts (C).


Tightening torque :

12.7 ~ 16.7 N.m (1.3 ~ 1.7 kgf.m, 9.4 ~ 12.3 lb-ft)

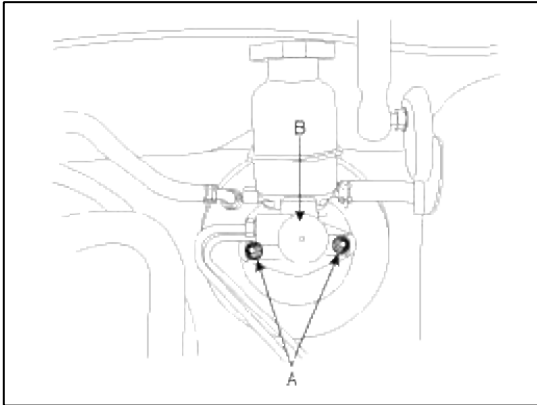


Disassembly

1. Remove the reservoir cap and drain the brake fluid into a suitable container.
2. Remove the reservoir (C) from the master cylinder (B), after remove mounting screw (A).

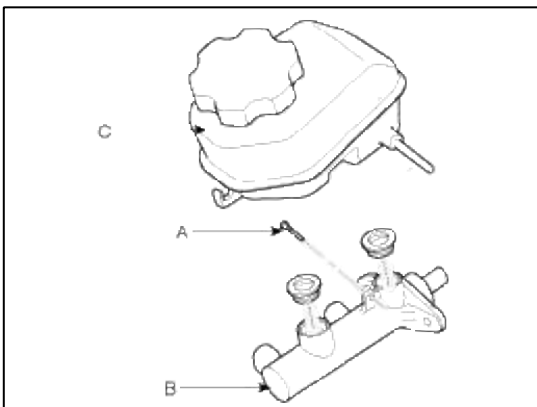

3. Remove the retainer ring (A) by using the snap ring pliers.
4. Remove the primary piston assembly (B).
5. Remove the pin (D) with the secondary piston (C) pushed completely using a screwdriver. Remove the secondary piston assembly (C).

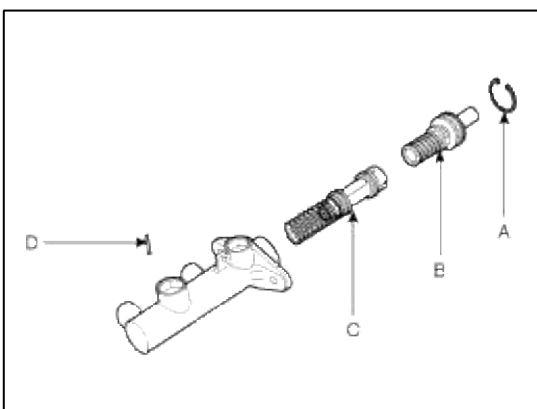

NOTE

Do not disassemble the primary and secondary piston assembly.


1. Check the master cylinder bore for rust or scratching.
2. Check the master cylinder for wear or damage. If necessary, clean or replace the cylinder.

CAUTION


- If the cylinder bore is damaged, replace the master cylinder assembly.
- Wash the contaminated parts in alcohol.

Reassembly

1. Apply genuine brake fluid to the rubber parts of the cylinder kit and grommets.
2. Carefully insert the springs and pistons in the proper direction.
3. Press the secondary piston (C) with a screwdriver and install the cylinder pin (D).

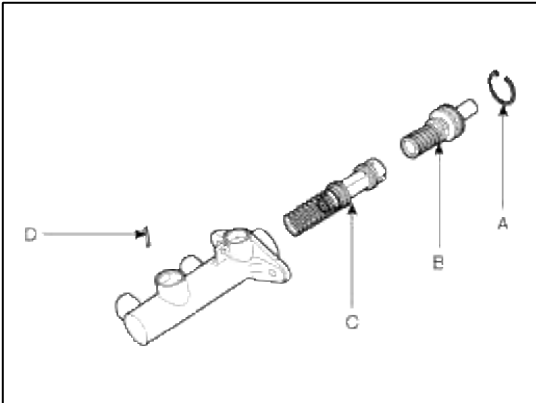

4. Install the retainer ring (A) after installing primary piston assembly (B).
5. Mount two grommets.
6. Install the reservoir (C) on the cylinder (B), and then install the mounting screw (A).

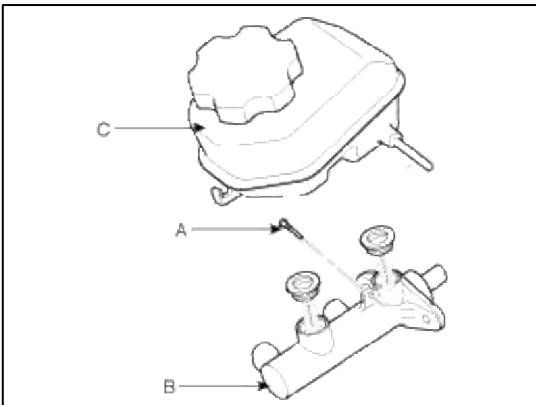


Installation

1. Installation is the reverse of removal.
2. After installation, bleed the brake system.
(Refer to Brake system bleeding)

Brake System > Brake System > Brake Line > Components and Components Location

Components

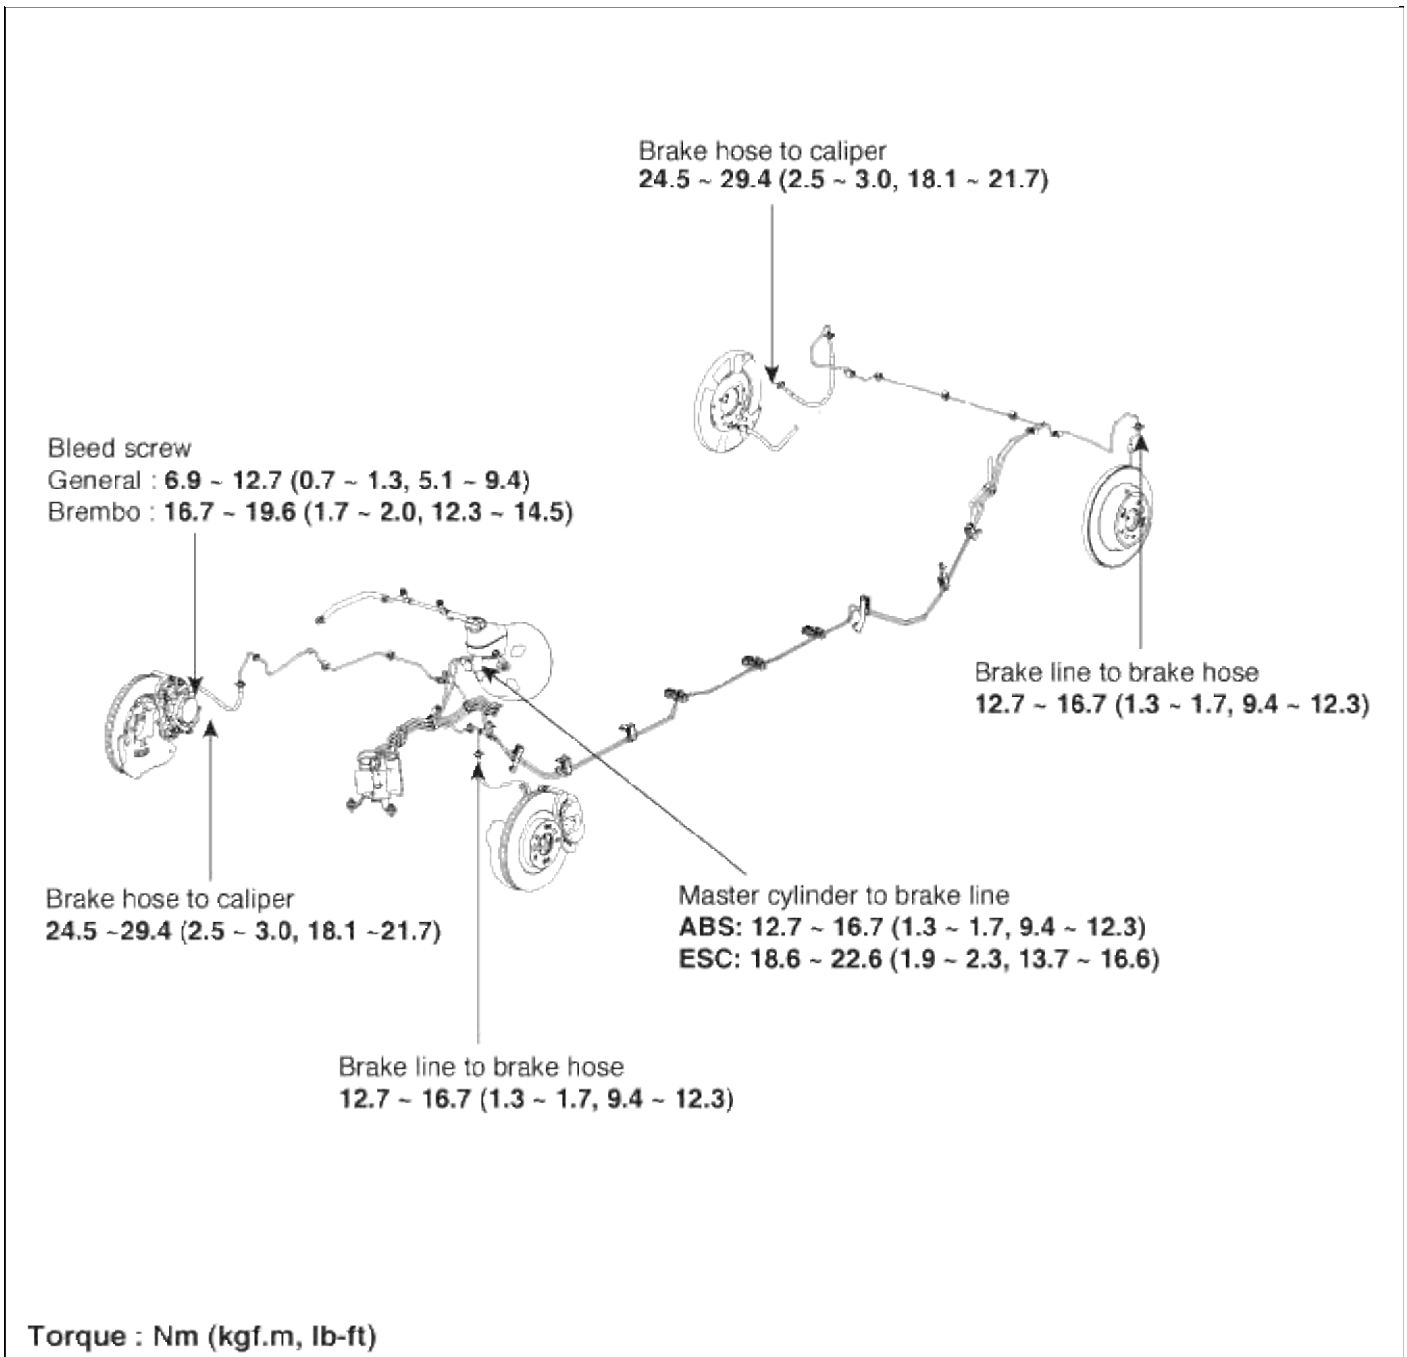**WARNING**

When installing brake hose, be sure to comply with the torque specification to prevent twisted hose.


Brake System > Brake System > Brake Line > Repair procedures

Removal

1. Remove the wheel & tire.

2. Remove the brake hose clip (A).

Front

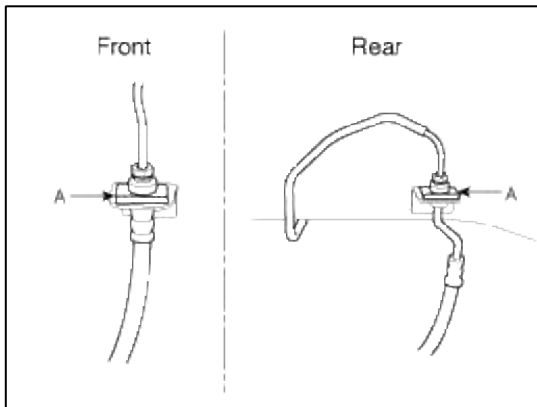

3. Disconnect the brake tube by loosening the tube flare nut.

Tightening torque :


12.7 ~ 16.7 N.m (1.3 ~ 1.7 kgf.m, 9.4 ~ 12.3 lb-ft)

4. Disconnect the brake hose from the brake caliper by loosening the bolt.


Tightening torque :

24.5 ~ 29.4 N.m (2.5 ~ 3.0 kgf.m, 18.1 ~ 21.7 lb-ft)

Front

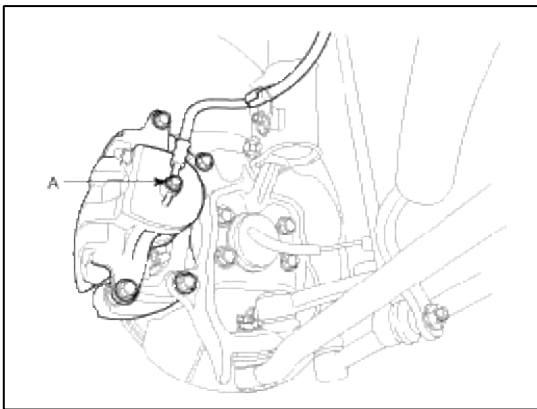

Rear

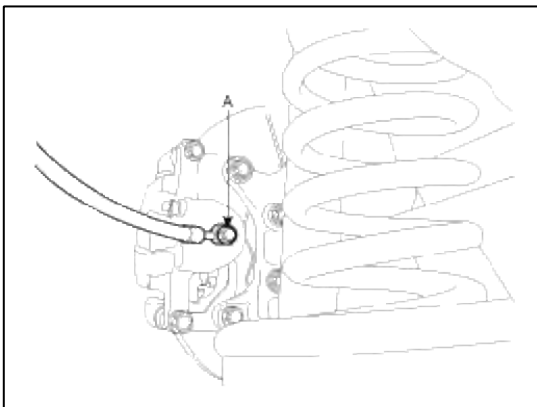

Inspection

1. Check the brake tubes for cracks, crimps and corrosion.


2. Check the brake hoses for cracks, damage and fluid leakage.
3. Check the brake tube flare nuts for damage and fluid leakage.
4. Check the brake hose mounting bracket for crack or deformation.

Installation

1. Installation is the reverse of removal.

CAUTION


Use a new washer (A) whenever installing.

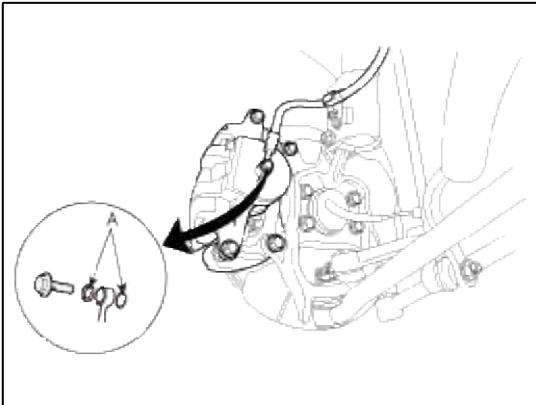

2. After installation, bleed the brake system.
(Refer to Brake system bleeding)
3. Check the spilled brake oil.

Brake System > Brake System > Brake Pedal > Components and Components Location

Components

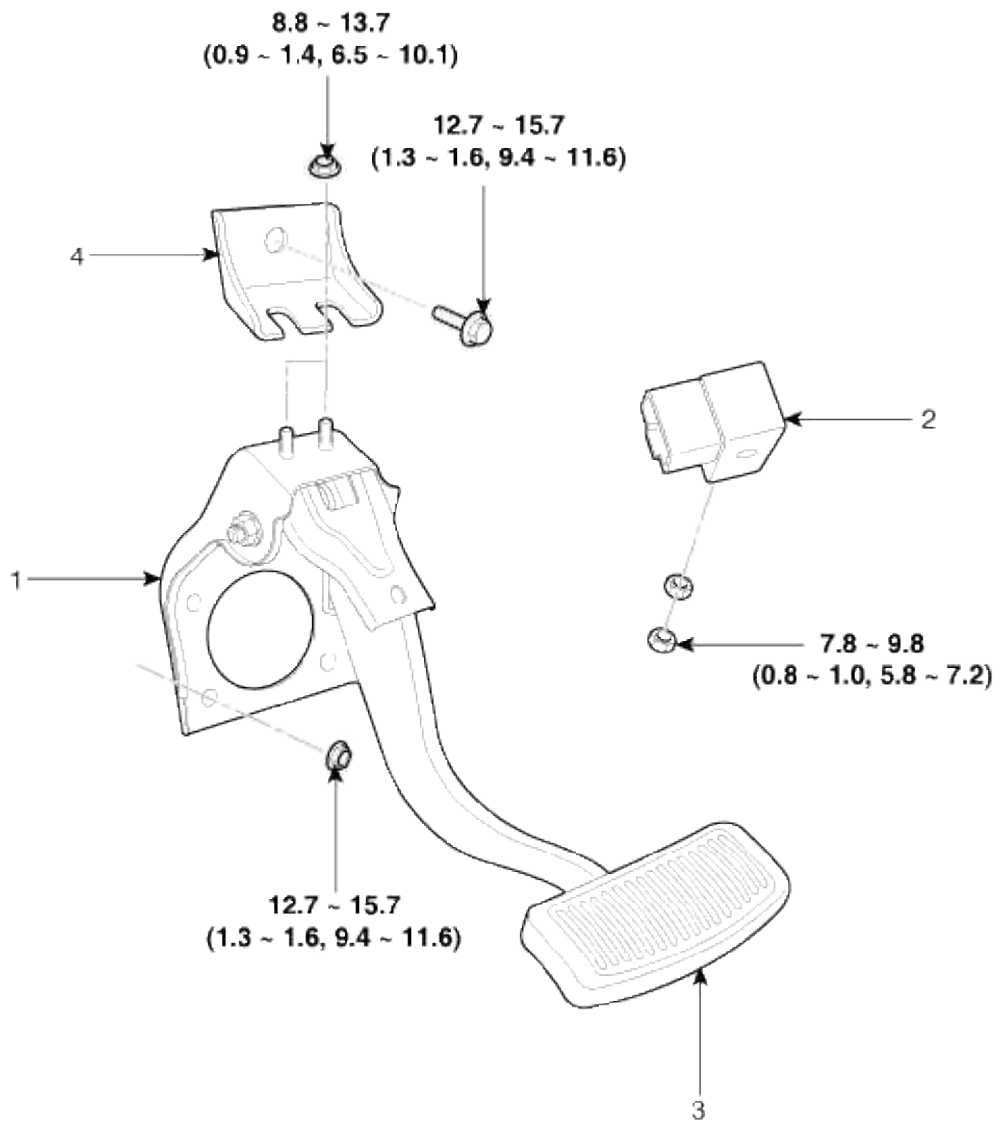

Torque : N.m (kgf.m, lb-ft)


- | | |
|-----------------------|-------------------------|
| 1. Brake pedal member | 3. Brake pedal assembly |
| 2. Stop lamp switch | 4. Brake bracket |

Brake System > Brake System > Brake Pedal > Repair procedures

Removal

1. Remove the lower crash pad.
(Refer to Body group - "Crash pad")

2. Disconnect the stop lamp switch connector (A).

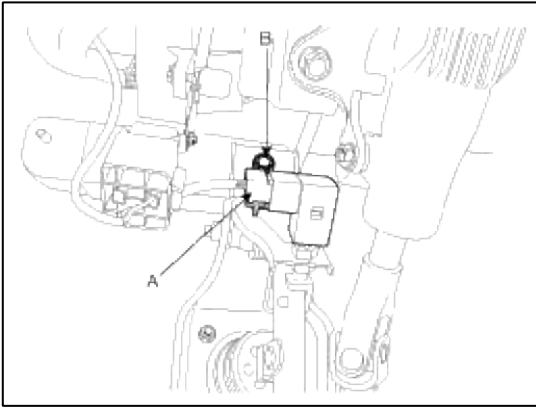


3. Remove the mounting bracket bolt (B).

Tightening torque :

12.7 ~ 15.7 N.m (1.3 ~ 1.6 kgf.m, 9.4 ~ 11.6 lb-ft)


4. Remove the snap pin (A) and clevis pin (B).

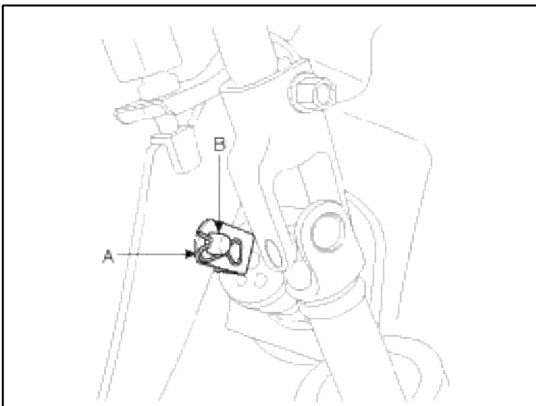

5. Remove the brake pedal member assembly mounting nuts and then remove the brake pedal assembly.

Tightening torque :


12.7 ~ 15.7 N.m (1.3 ~ 1.6 kgf.m, 9.4 ~ 11.6 lb-ft)

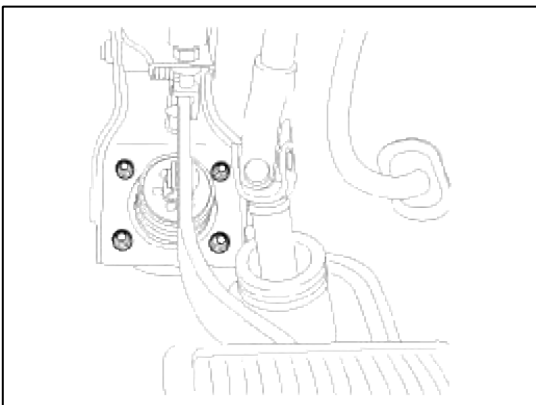**Inspection**

1. Check the bushing for wear.
2. Check the brake pedal for bending or twisting.
3. Check the brake pedal return spring for damage.

4. Check the stop lamp switch.

- (1) Connect a circuit tester to the connector of stop lamp switch, and check whether or not there is continuity when the plunger of the stop lamp switch is pushed in and when it is released.
- (2) The stop lamp switch is in good condition if there is no continuity when plunger (A) is pushed.

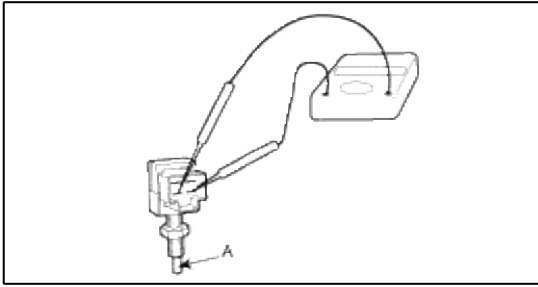

Installation

1. Installation is the reverse of removal.


CAUTION

- Before installing the pin, apply the grease to the clevis pin.
- Use a new snap pin whenever installing.

2. Check the brake pedal operation.

Brake System > Brake System > Front Disc Brake > Components and Components Location


Components (1)

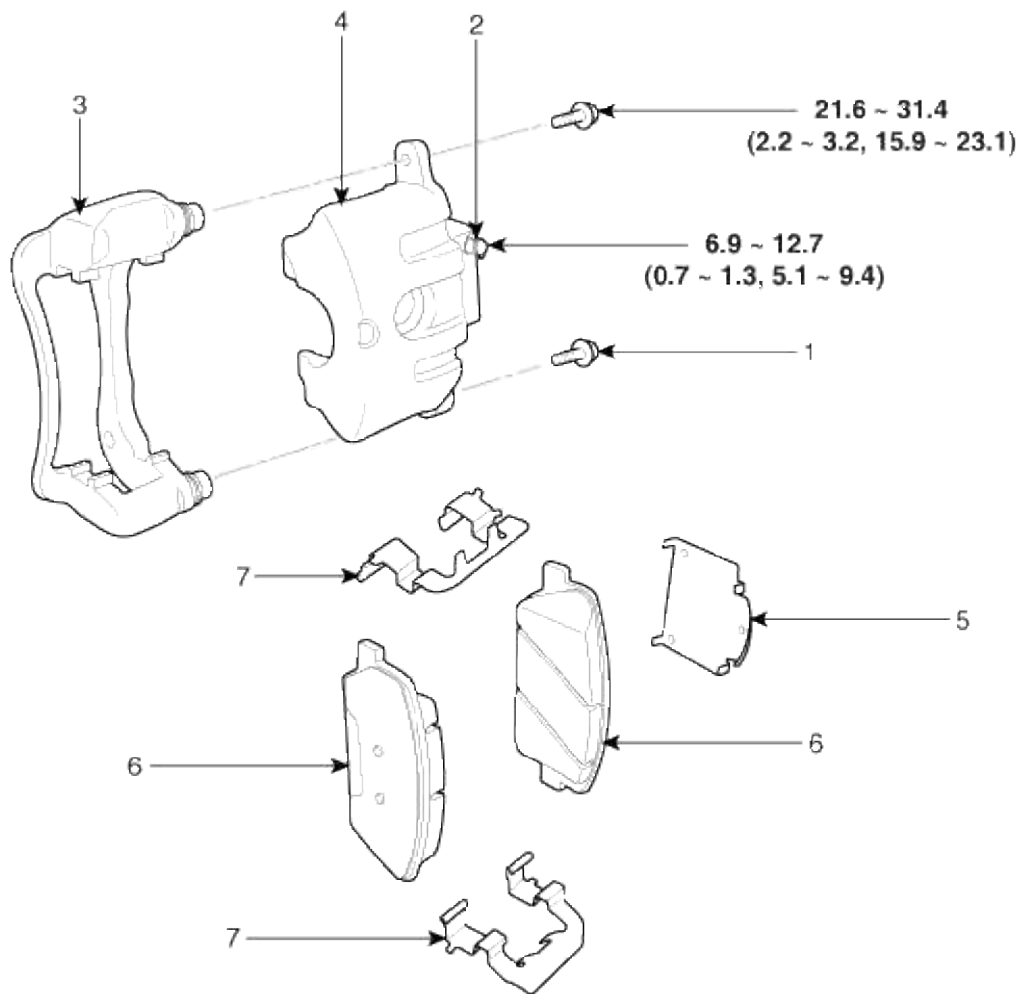

Torque : N.m (kgf.m, lb-ft)

1. Guide rod bolt	5. Inner pad shim
2. Bleed screw	6. Brake pad
3. Caliper bracket	7. Pad retainer
4. Caliper body	

Components (2)

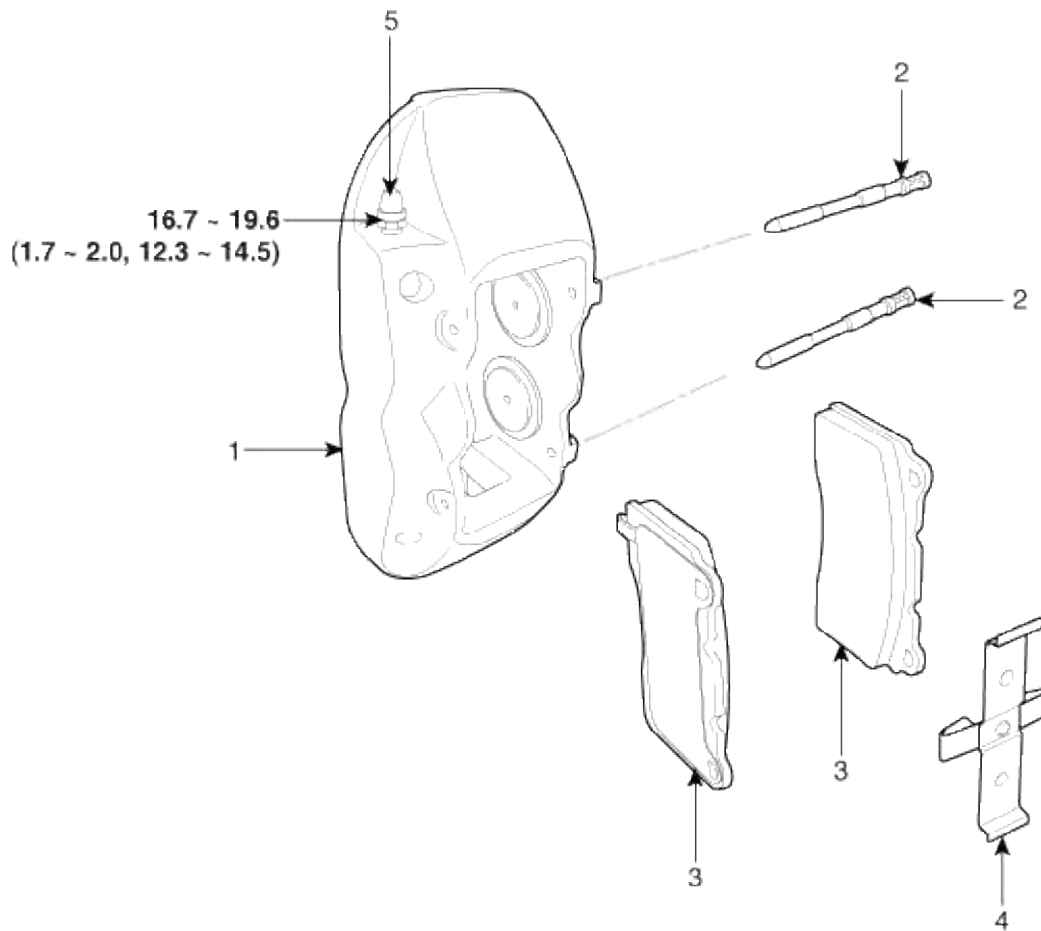

Torque : N.m (kgf.m, lb-ft)

1. Caliper body	4. Retraction spring
2. Guide pin	5. Bleed screw
3. Brake pad	

Brake System > Brake System > Front Disc Brake > Repair procedures

Removal

General caliper type

1. Remove the front wheel & tire.

Tightening torque :

88.3 ~ 107.9 N.m (9.0 ~ 11.0 kgf.m, 65.1 ~ 79.6 lb-ft)

2. Loosen the hose eye-bolt (B) and caliper mounting bolts (C), then remove the front caliper assembly (A).


Tightening torque

Brake hose to caliper (B):


24.5 ~ 29.4 N.m (2.5 ~ 3.0 kgf.m, 18.1 ~ 21.7 lb-ft)

Caliper assembly to knuckle (C):

78.5 ~ 98.1 N.m (8.0 ~ 10.0 kgf.m, 57.9 ~ 72.3 lb-ft)

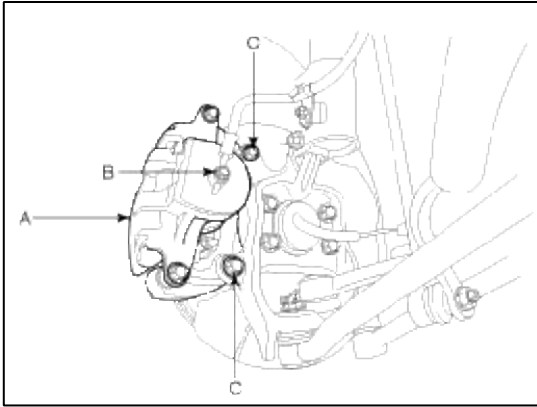

3. Remove the front brake disc by loosening the screws.

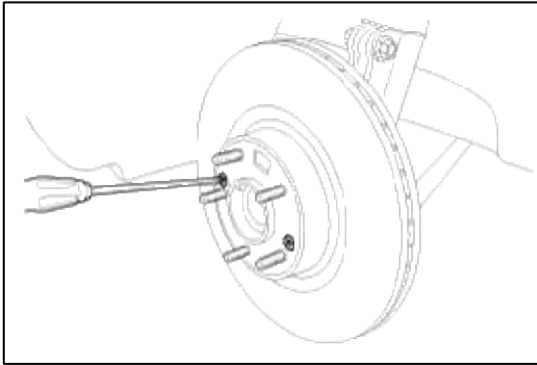

Brembo caliper type

1. Remove the front wheel & tire.

Tightening torque :

88.3 ~ 107.9 N.m (9.0 ~ 11.0 kgf.m, 65.1 ~ 79.6 lb-ft)

2. Loosen the hose eye-bolt (B) and caliper mounting bolts (C), then remove the front caliper assembly (A).


Tightening torque

Brake hose to caliper (B):


24.5 ~ 29.4 N.m (2.5 ~ 3.0 kgf.m, 18.1 ~ 21.7 lb-ft)

Caliper assembly to knuckle (C):

88.3 ~ 103.0 N.m (9.0 ~ 10.5 kgf.m, 65.1 ~ 75.9 lb-ft)

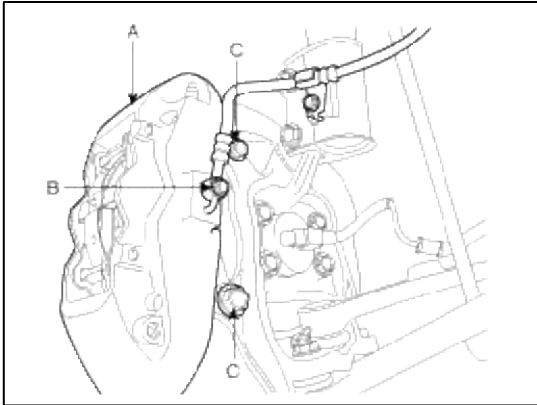


3. Remove the front brake disc by loosening the screws.

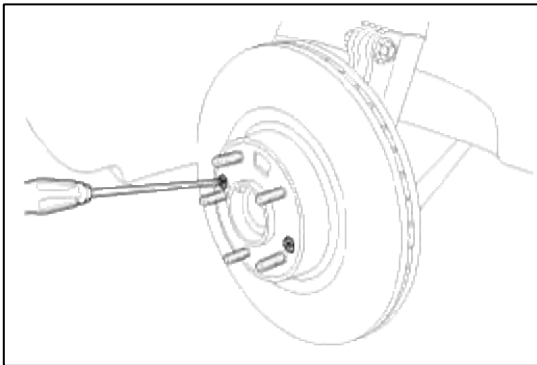

Replacement

Front Brake Pads (General caliper type)


1. Remove the brake hose mounting bracket (knuckle mounting part : D).

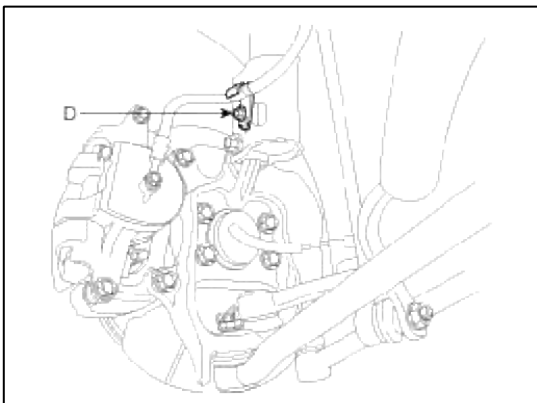


2. Loosen the guide rod bolt (B) and remove the caliper body (A).

Tightening torque :

21.6 ~ 31.4 N.m (2.2 ~ 3.2 kgf.m, 15.9 ~ 23.1 lb-ft)

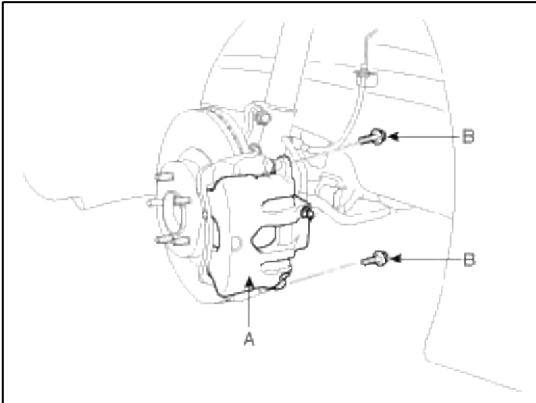


3. Replace pad shim (B), pad retainers (C) and brake pads (B) in the caliper bracket (A).

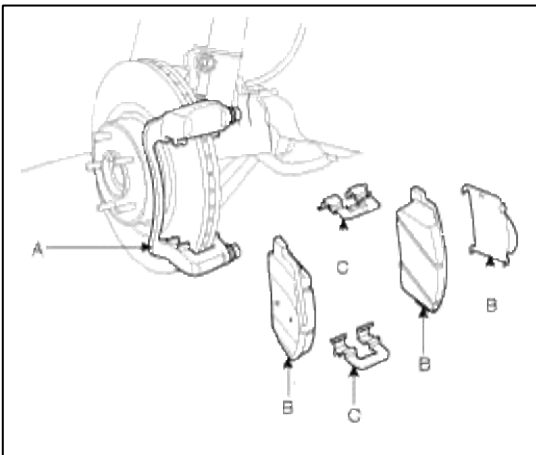


Front Brake Pads (Brembo caliper type)


1. Remove the guide pin (B) of the lower part with the pin punch (A).

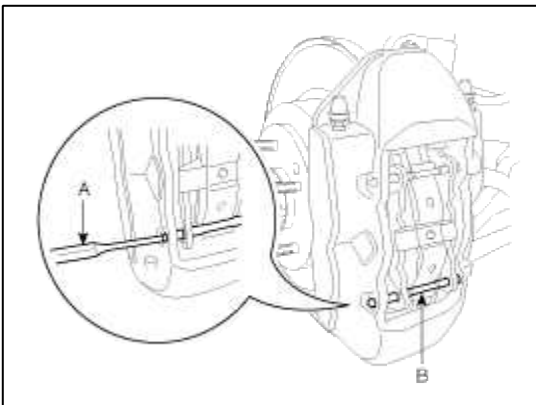

- Remove the guide pin (C) of the upper part and retraction spring (D).

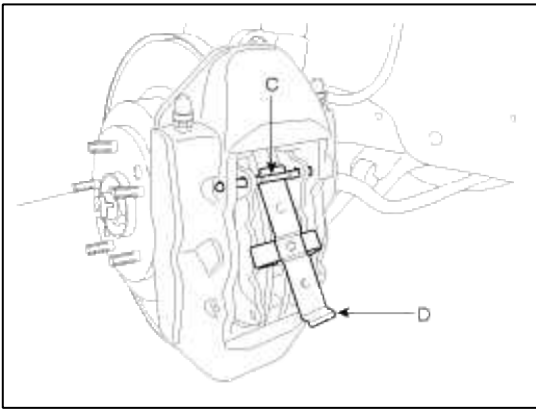

- Replace brake pads (E) at the caliper body.

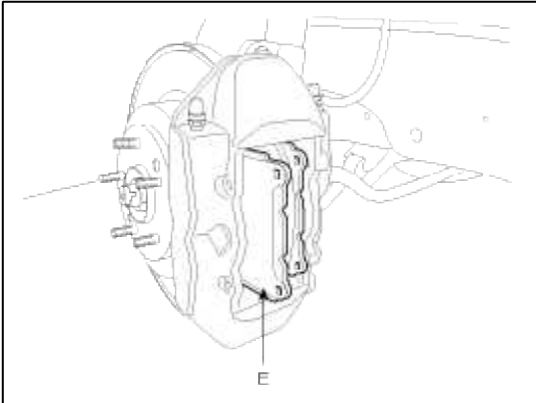

Inspection

Front Brake Disc Thickness Check

- Check the brake pads for wear and fade.
- Check the brake disc for damage and cracks.
- Remove all rust and contamination from the surface, and measure the disc thickness at 8 points, at least, of same distance (5mm) from the brake disc outer circle.

Brake disc thickness

General caliper type

Standard: 28mm (1.10in)

Service limit: 26.4mm (1.04in)

Deviation: Less than 0.005mm (0.0002in) - circumference

Less than 0.01mm (0.0004in) - radius


Brembo caliper type

Standard: 28mm (1.10in)

Service limit: 26mm (1.02in)

Deviation: Less than 0.01mm (0.0004in) - circumference

Less than 0.04mm (0.0016in) - radius

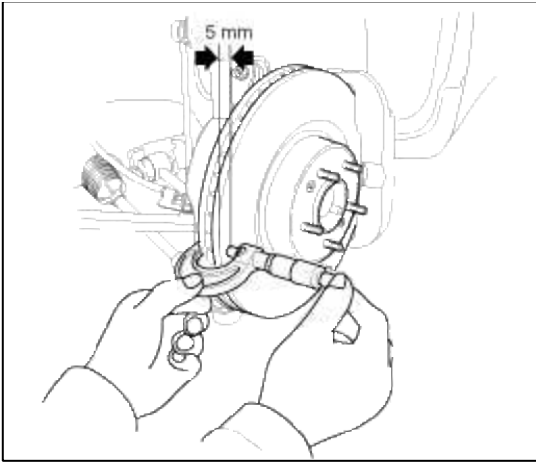

4. If wear exceeds the limit, replace the discs and pad assembly left and right of the vehicle.

Front Brake Pad Check

1. Check the pad wear. Measure the pad thickness and replace it, if it is less than the specified value.

Pad thickness

General caliper type

Standard value : 11mm (0.43in)

Service limit : 2.0mm (0.0787in)

Brembo caliper type

Standard value : 8.5mm (0.33in)

Service limit : 2.0mm (0.0787in)


2. Check that grease is applied, to sliding contact points and the pad and backing metal for damage.

Front Brake Disc Runout Check

1. Place a dial gauge about 5mm (0.2 in.) from the outer circumference of the brake disc, and measure the runout of the disc.

Brake disc runout

Limit : 0.035mm (0.00137in.) or less (new one)

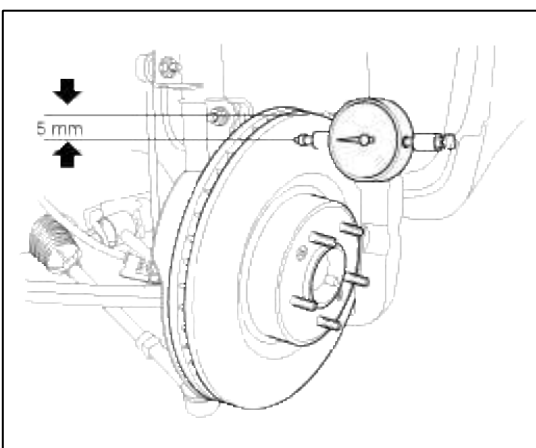


2. If the run out of the brake disc exceeds the limit specification, replace the disc, and then measure the run out again.
3. If the run out does not exceed the limit specification, install the brake disc after turning it and then check the run out of the brake disc again.
4. If the run out cannot be corrected by changing the position of the brake disc, replace the brake disc.

Installation

1. Installation is the reverse of removal.
2. Use a SST (09581-11000) when installing the brake caliper assembly.
3. After installation, bleed the brake system.
(Refer to Brake system bleeding)


Brake System > Brake System > Rear Disc Brake > Components and Components Location

Components (1)

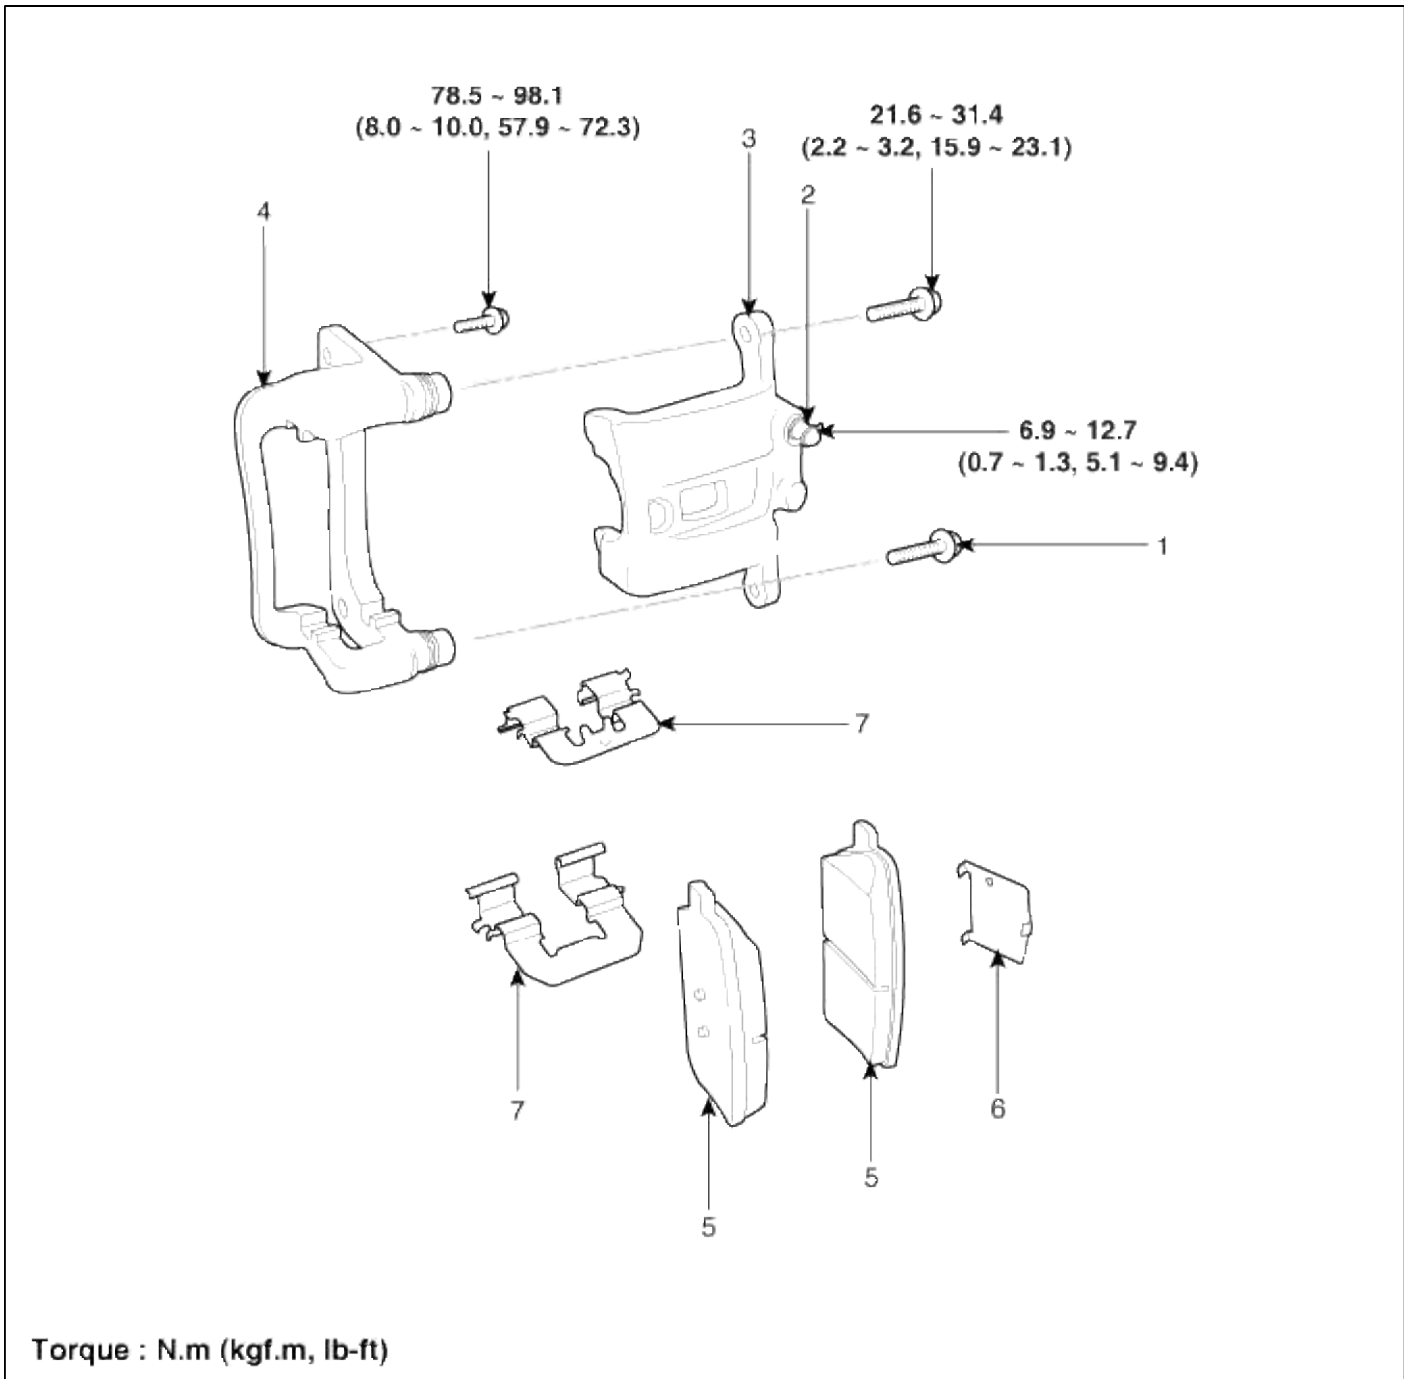

1. Guide rod bolt	5. Inner pad shim
2. Bleed screw	6. Brake pad
3. Caliper body	7. Pad retainer
4. Caliper bracket	

Components (2)

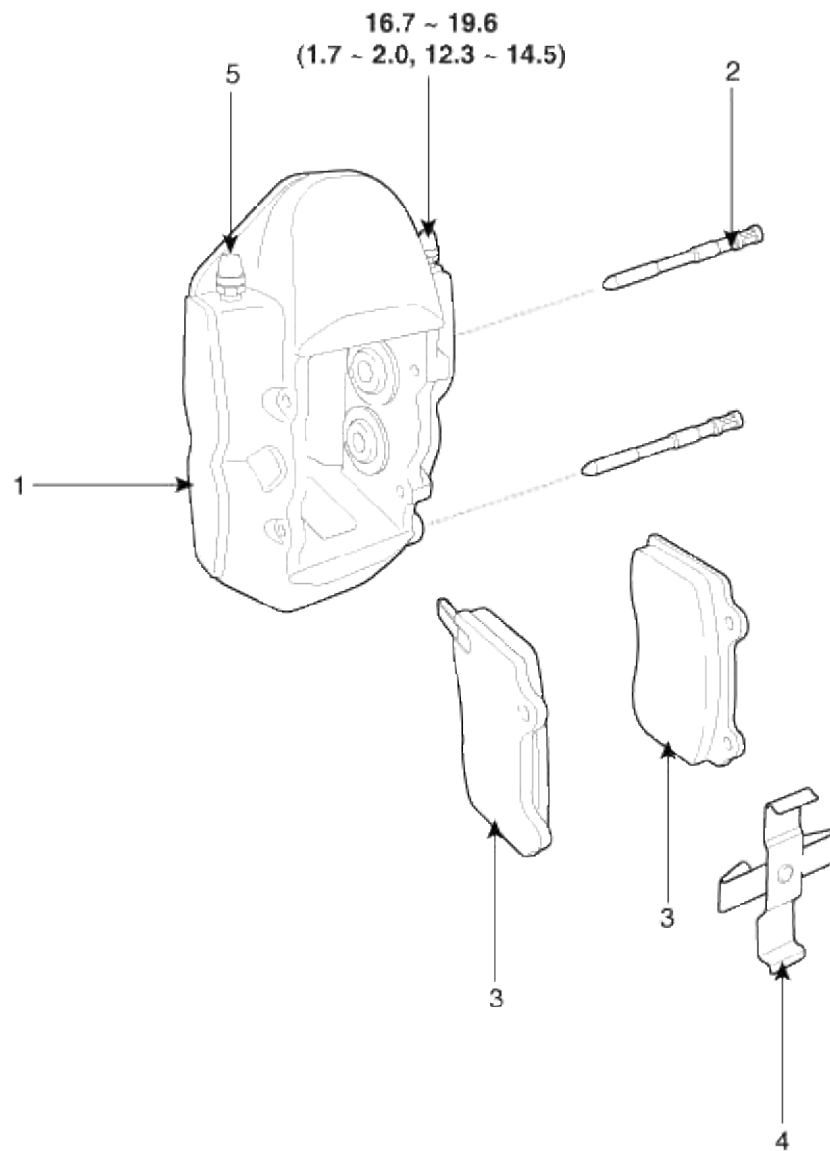

Torque : N.m (kgf.m, lb-ft)

1. Caliper body	4. Retraction spring
2. Guide pin	5. Bleed screw
3. Brake pad	

Brake System > Brake System > Rear Disc Brake > Repair procedures

Removal

General caliper type

1. Remove the rear wheel & tire.

Tightening torque :

88.3 ~ 107.9 N.m (9.0 ~ 11.0 kgf.m, 65.1 ~ 79.6 lb-ft)

2. Loosen the hose eye-bolt (B) and caliper mounting bolts (C), then remove the rear caliper assembly (A).


Tightening torque

Brake hose to caliper (B):


24.5 ~ 29.4 N.m (2.5 ~ 3.0 kgf.m, 18.1 ~ 21.7 lb-ft)

Caliper assembly to carrier (C):

78.5 ~ 98.1 N.m (8.0 ~ 10.0 kgf.m, 57.9 ~ 72.3 lb-ft)

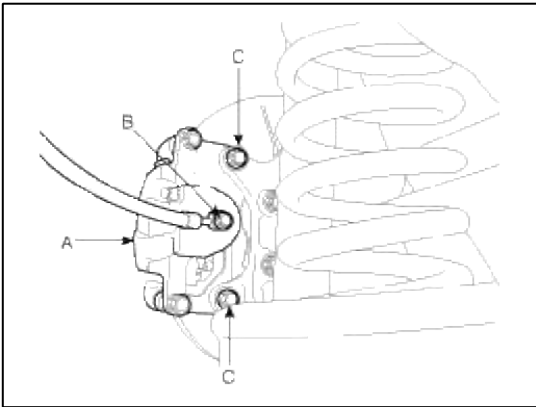

3. Remove the rear brake disc by loosening the screws (A).

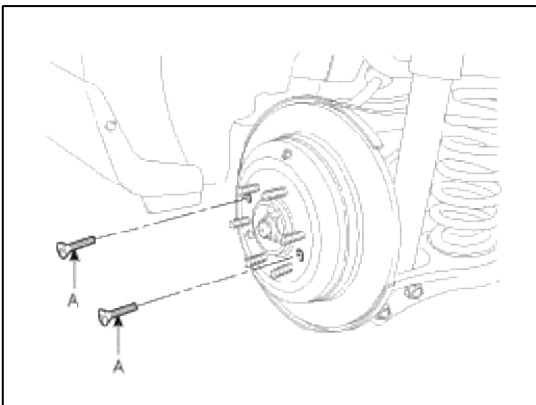

Brembo caliper type

1. Remove the rear wheel & tire.

Tightening torque :

88.3 ~ 107.9 N.m (9.0 ~ 11.0 kgf.m, 65.1 ~ 79.6 lb-ft)

- Loosen the hose eye-bolt (B) and caliper mounting bolts (C), then remove the rear caliper assembly (A).


Tightening torque

Brake hose to caliper (B):


24.5 ~ 29.4 N.m (2.5 ~ 3.0 kgf.m, 18.1 ~ 21.7 lb-ft)

Caliper assembly to carrier (C):

78.5 ~ 98.1 N.m (8.0 ~ 10.0 kgf.m, 57.9 ~ 72.3 lb-ft)

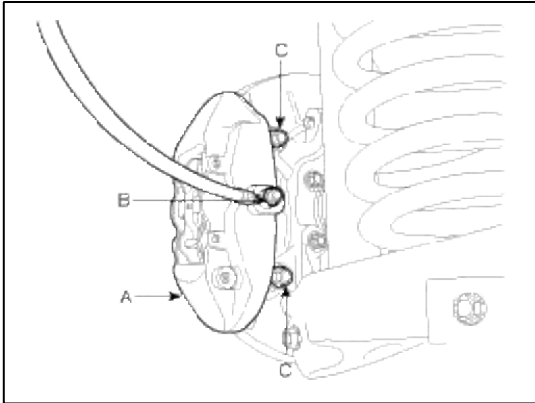

- Remove the rear brake disc by loosening the screws (A).

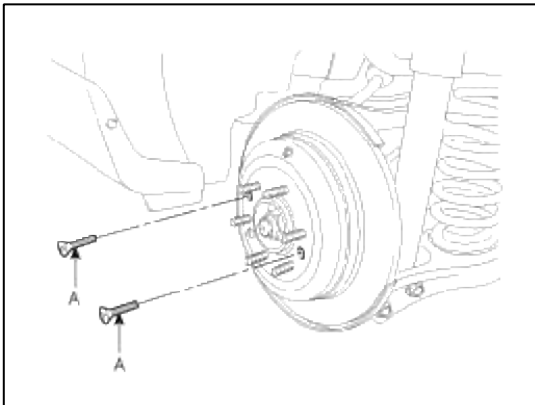


Replacement

Rear Brake Pads (General caliper type)


- Loosen the guide rod bolt (B) and remove the caliper body (A).

Tightening torque :

21.6 ~ 31.4 N.m (2.2 ~ 3.2 kgf.m, 15.9 ~ 23.1 lb-ft)

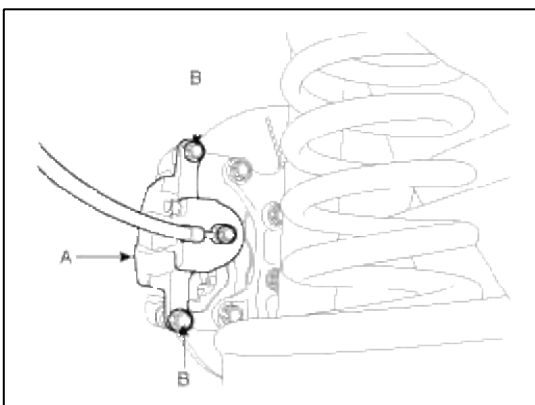

2. Replace pad shim, pad retainers (C) and brake pads (B) in the caliper bracket (A).

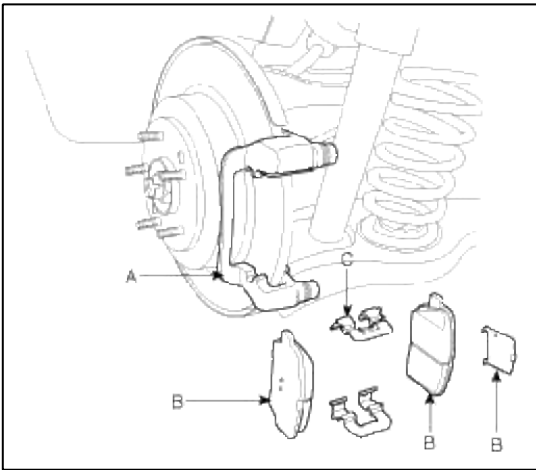


Rear Brake Pads (Brembo caliper type)


1. Remove the guide pin (B) of the lower part with the pin punch (A).

Tightening torque :


21.6 ~ 31.4 N.m (2.2 ~ 3.2 kgf.m, 15.9 ~ 23.1 lb-ft)

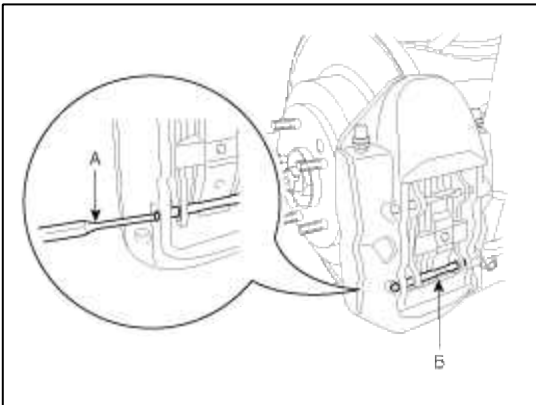

2. Remove the guide pin (C) of the upper part and the retraction spring (D).

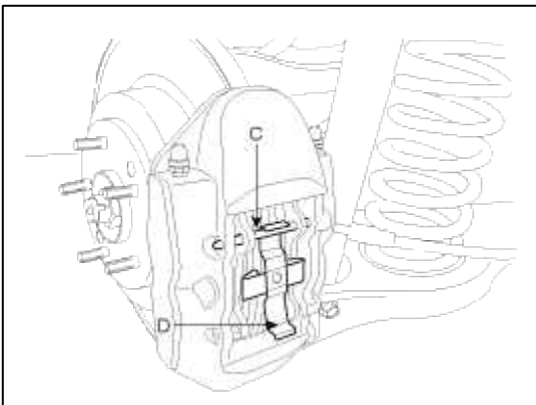

3. Replace brake pads (E) at the caliper body.

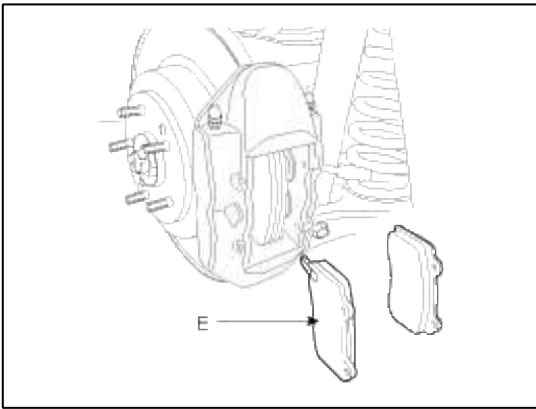

Inspection

Rear Brake Disc Thickness Check

1. Check the brake pads for wear and fade.
2. Check the brake disc for damage and cracks.
3. Remove all rust and contamination from the surface, and measure the disc thickness at 8 points, at least, of same distance (5mm) from the brake disc outer circle.

Brake disc thickness

General caliper type

Standard: 13mm (0.51in)

Service limit: 11.4mm (0.45in)

Deviation: Less than 0.005mm (0.0002in) - circumference

Less than 0.01mm (0.00039in) - radius


Brembo caliper type

Standard: 20mm (0.79in)

Service limit: 18mm (0.71in)

Deviation: Less than 0.01mm (0.0004in) - circumference

Less than 0.04mm (0.0016in) - radius

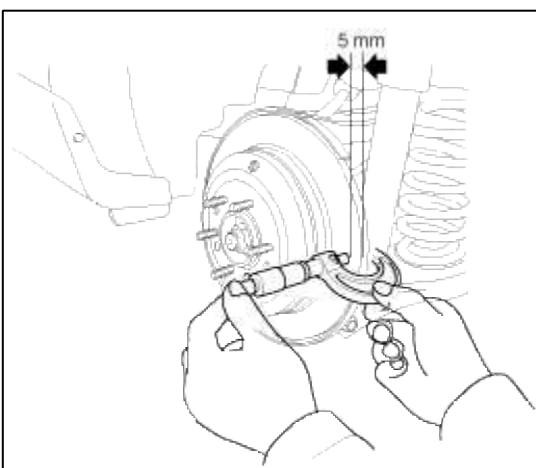

4. If wear exceeds the limit, replace the discs and pad assembly left and right of the vehicle.

Rear Brake Pad Check

1. Check the pad wear. Measure the pad thickness and replace it, if it is less than the specified value.

Pad thickness

General caliper type

Standard value: 9mm (0.354in)

Service limit : 2.0mm (0.0787in)

Brembo caliper type

Standard value : 9.1mm (0.358in)

Service limit : 2.0mm (0.0787in)


2. Check that grease is applied, to sliding contact points and the pad and backing metal for damage.

Rear Brake Disc Runout Check

1. Place a dial gauge about 5mm (0.2 in.) from the outer circumference of the brake disc, and measure the runout of the disc.

Brake disc runout

Limit: 0.035mm (0.00137in.) or less (new one)

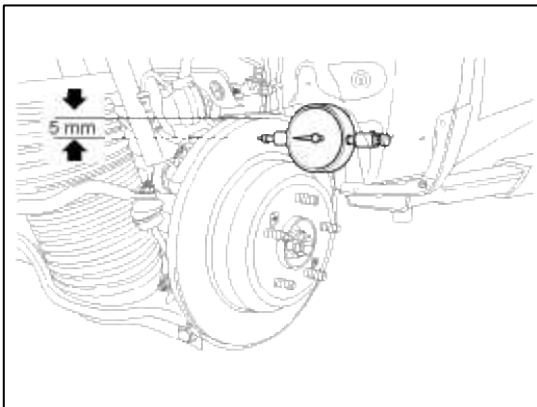


2. If the runout of the brake disc exceeds the limit specification, replace the disc, and then measure the runout again.
3. If the runout exceeds the limit specification, install the brake disc after turning it 180° and then check the runout of the brake disc again.
4. If the runout cannot be corrected by changing the position of the brake disc, replace the brake disc.

Installation

1. Installation is the reverse of removal.
2. Use a SST (09581-11000) when installing the brake caliper assembly.
3. After installation, bleed the brake system.
(Refer to Brake system bleeding)


Brake System > Parking Brake System > Parking Brake Assembly > Components and Components Location

Components (1)

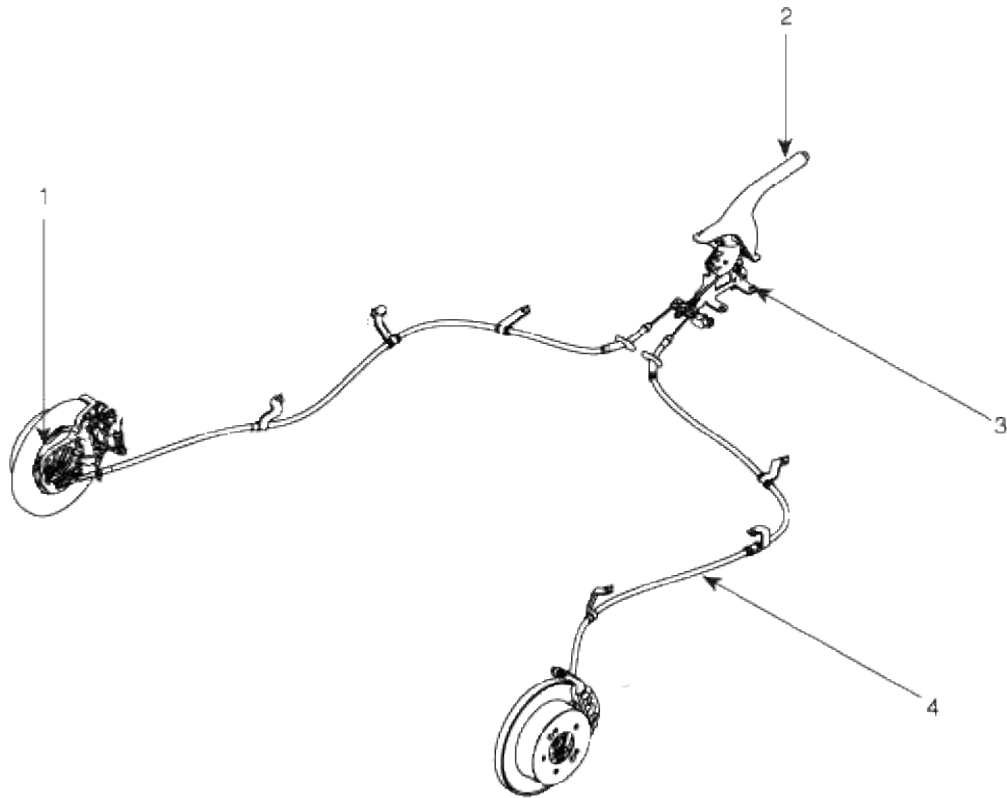

1. Rear parking brake	3. Parking brake switch
2. Parking brake lever	4. Parking brake cable

Components (2)

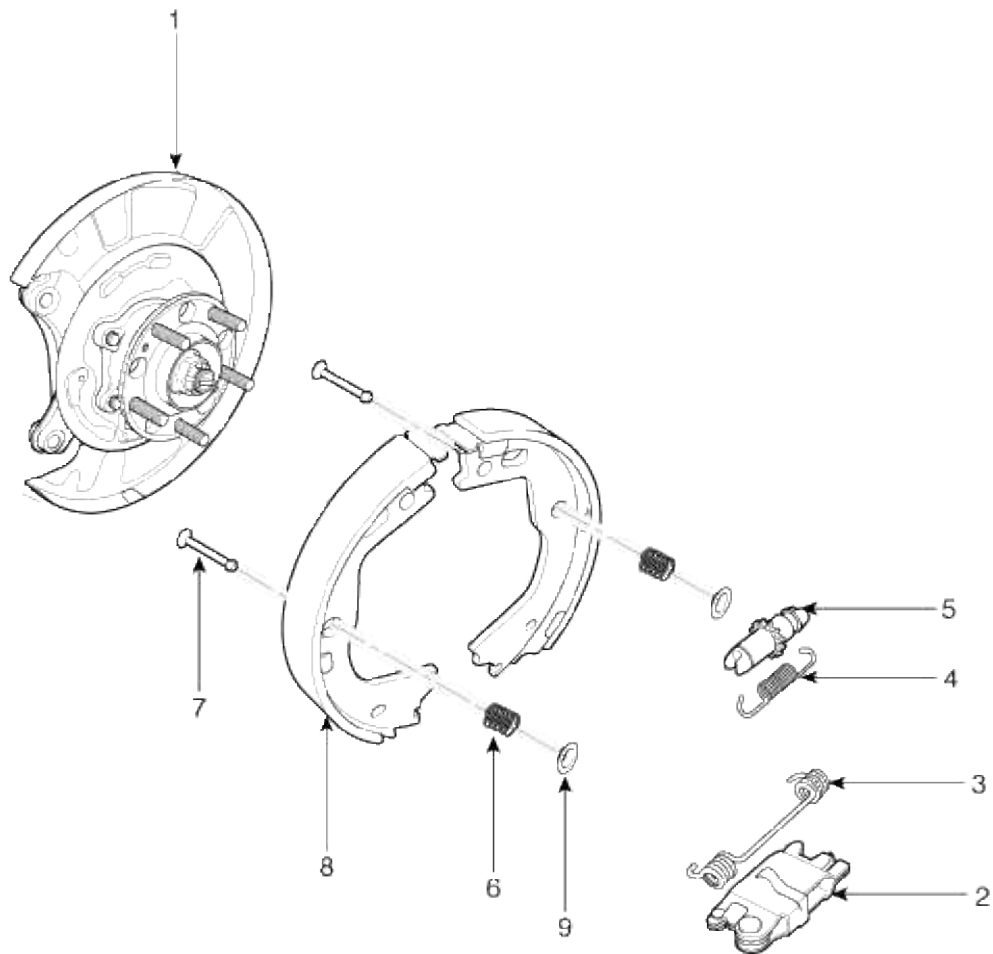

1. Backing plate	4. Lower spring	7. Shoe hold down pin
2. Operating lever	5. Adjuster	8. Parking brake shoe
3. Upper spring	6. Shoe hold down spring	9. Cup washer

Brake System > Parking Brake System > Parking Brake Assembly > Repair procedures


Removal

Parking Brake Lever


NOTE

The parking brake cables must not be bent or distorted. This will lead to stiff operation and premature failure.


1. Remove the floor console.
(Refer to Body group - "Floor console")
2. Loosen the adjusting nut (A) and the parking brake cables.

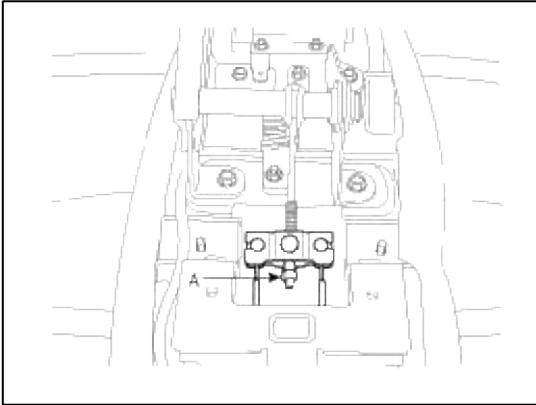

3. Disconnect the connector (A) of parking brake switch.

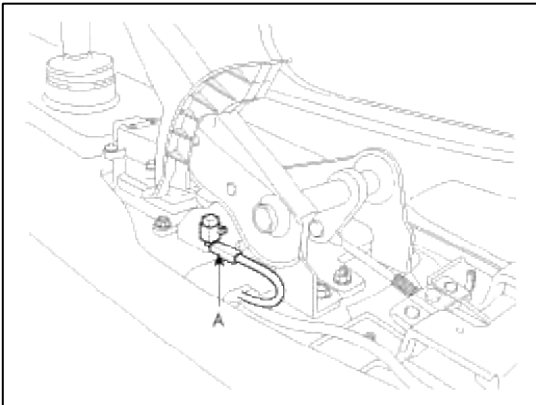

4. Remove the parking brake lever assembly (A) with loosening the bolts.

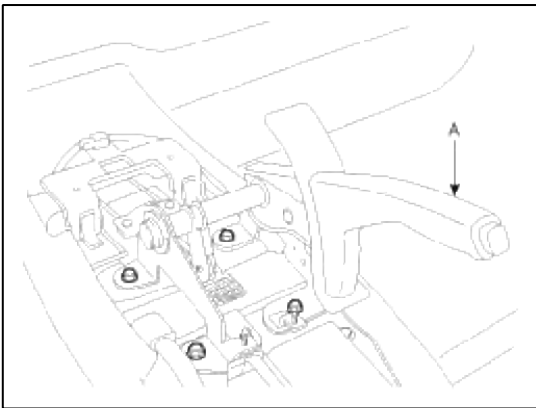


Parking Brake Shoe

1. Raise the vehicle, and make sure it is securely supported.
2. Remove the rear tire and wheel.
3. Remove the brake caliper and Rear disc brake.
(Refer to "Rear disc brake removal")


4. Remove the parking brake cable (B), after removing the bolt (A).
-

Tightening torque :


53.9 ~ 63.7 N.m (5.5 ~ 6.5 kgf.m, 39.8 ~ 47.0 lb-ft)

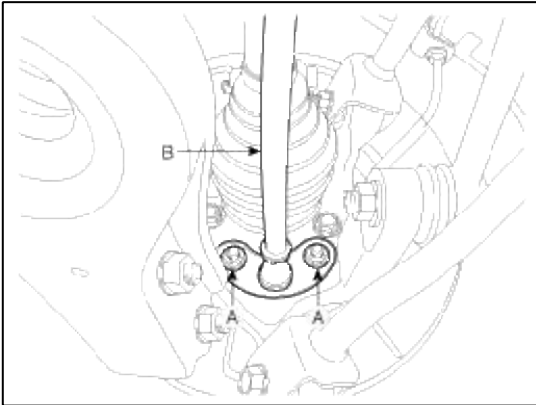


5. Remove the shoe hold down pin (A) and the spring (B) by pushing the retainer spring and turning the pin.

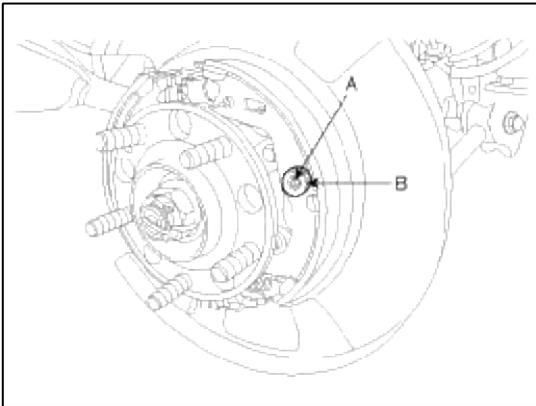

6. Remove the adjuster assembly (B) and the lower return spring (A).

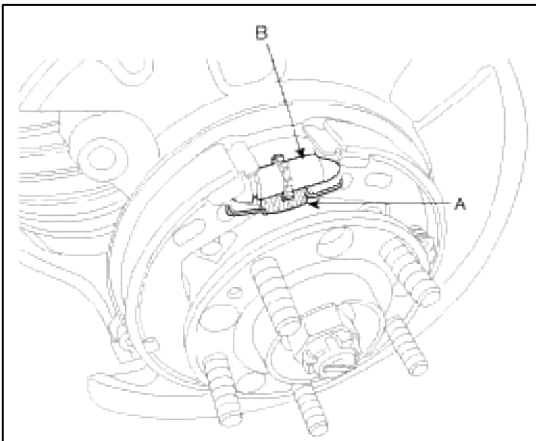

7. Remove the upper return spring (C) and the brake shoes (D).

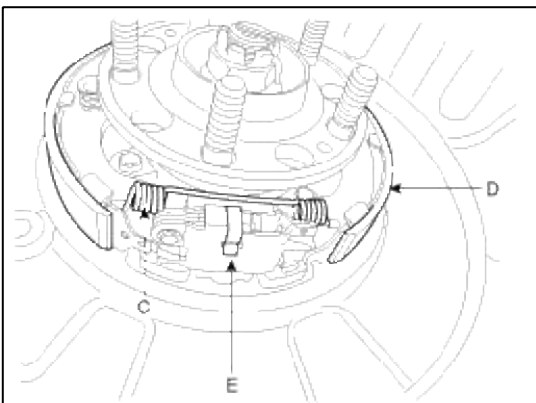


8. Remove the operating lever assembly (E).

Installation


Parking Brake Shoe

1. Install the operating lever assembly (E).

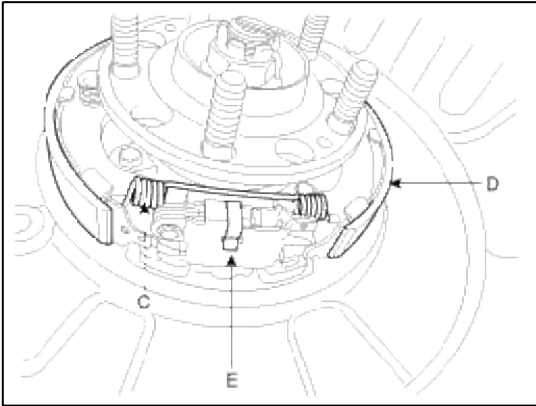


2. Install the upper return spring (C) and the brake shoes (D).


3. Install the adjuster assembly (B) and the lower return spring (A).

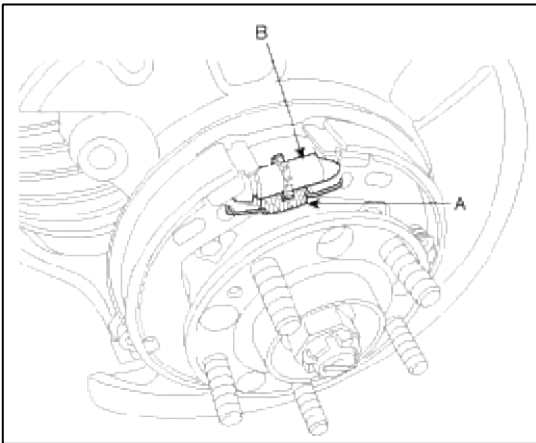

4. While pressing the spring, install the brake shoe hold down pin (A) and spring (B).

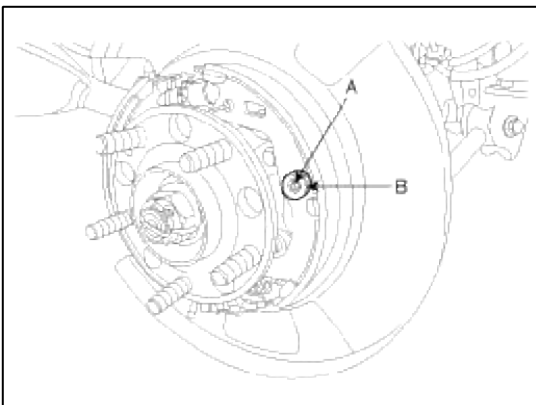

5. Install the parking brake cable (B), then install the bolt (A).

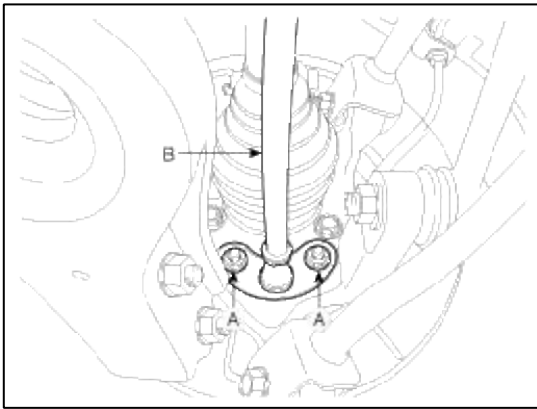


NOTE

How to install the DIH cable (Quick Fit type)

1. Put the inner cable into the knuckle hole in DIH lever operating direction when installing the cable (B).
2. Confirm by pulling the cable that cable is fixed certainly before installing the bolt (A).

6. Install the rear brake disc, then adjust the rear brake shoe clearance.

- (1) Remove the plug from the disc.

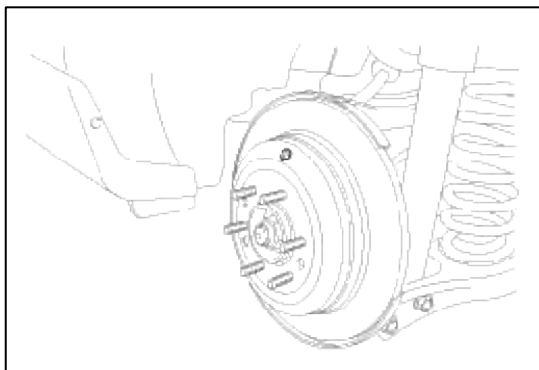

- (2) Rotate the toothed wheel of adjuster by a screw driver until the disc is not moving, and then return it by 5 notches in the opposite direction.

- (3) Install the plug.

7. Install the brake caliper assembly. (Refer to "Rear brake installation")

8. Install the tire and wheel.

9. If the parking brake shoe or the brake disc are replaced a newly one, perform the brake shoe bed-in procedure.

- (1) While operating the parking brake pedal for 69N (7kgf, 15lbf) effort, drive the vehicle 500 meters (0.31 miles) at the speed of 60kph (37.3 mph).
- (2) Repeat the above procedure more than two times.
- (3) Must be held on at 30% uphill.

CAUTION


After adjusting parking brake, notice following matter;

1. Must be free from troubles when the parking pedal is operated at 686 N (70 kgf, 154 lb).
2. Check that all parts move smoothly.
3. The parking brake indicator lamp must be on after the parking pedal is worked and must be off after the pedal is released.

1. Install the parking brake lever assembly, then tighten the mounting bolts in alphabetic order.

Tightening torque :


8.8 ~ 13.7 N.m (0.9 ~ 1.4 kgf.m, 6.5 ~ 10.1 lb-ft)

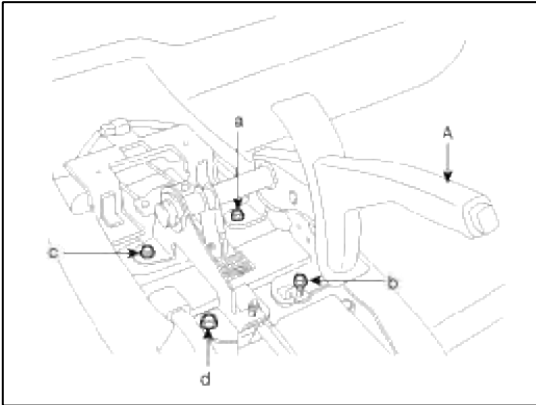

2. Apply a coating of the specified grease to each sliding parts (A) of the ratchet plate or the ratchet pawl.

Specified grease :

Multi purpose grease RheoGel 429 (MS511-54, LT2)

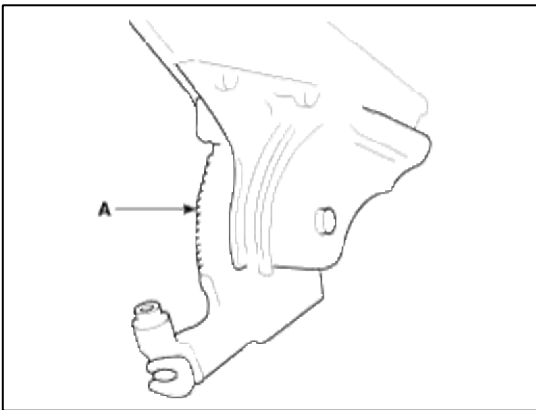



3. Install the parking brake cable adjuster, then adjust the parking brake lever stroke by turning adjusting nut (A).

Parking brake lever stroke :


5 clicks (Pull the lever with 20kg)

NOTE

After repairing the parking brake shoe, adjust the brake shoe clearance, and then adjust the parking brake lever stroke. (Refer to "Parking brake shoe installation")

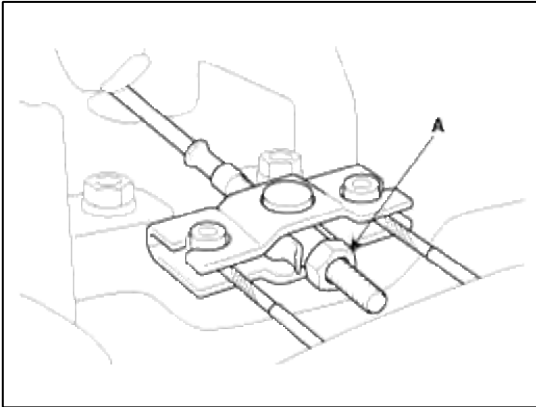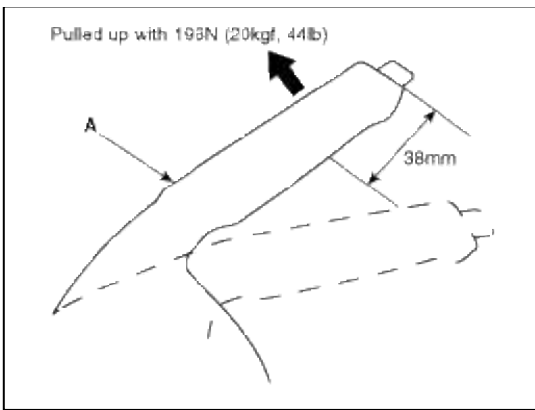

4. Release the parking brake lever fully, and check that parking brakes do not drag when the rear wheels are turned. Readjust if necessary.
5. Make sure that the parking brakes are fully applied when the parking brake lever is pulled up fully.
6. Reconnect the connector (A) of parking brake switch.

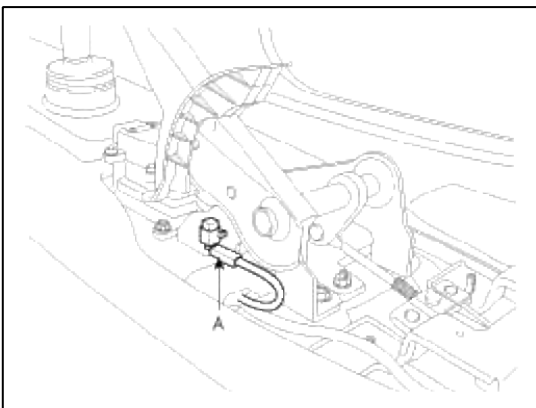

NOTE

Inspect the continuity of parking brake switch.

When the brake lever is pulled : continuity

When the brake lever is released : no continuity


7. Install the floor console.
(Refer to Body group - "Floor console")

Adjustment

Parking Brake Shoe Clearance Adjustment

1. Raise the vehicle, and make sure it is securely supported.
2. Remove the rear tire and wheel.

3. Remove the plug from the disc.

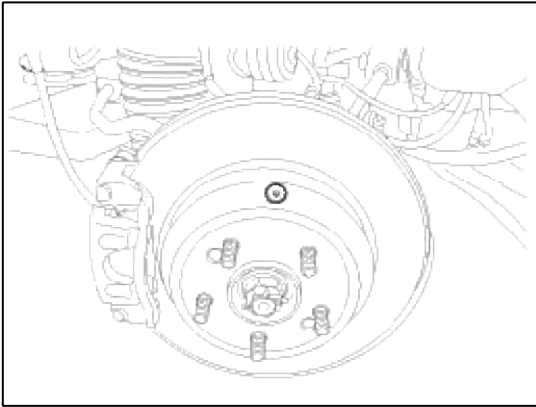

4. Rotate the toothed wheel of adjuster by a screw driver until the disc is not moving, and then return it by 5 notches in the opposite direction.
5. Install the plug on disc and then rear wheel & tire.

Parking Brake Lever Stroke Adjustment



1. Raise the vehicle, and make sure it is securely supported.
2. Remove the floor console.
(Refer to Body group - "Floor console")
3. Adjust the parking brake lever stroke by turning adjusting nut (A).

Parking brake lever stroke :

5 cliks (Pull the lever with 20kg)

NOTE

After repairing the parking brake shoe, adjust the brake shoe clearance, and then adjust the parking brake lever stroke. (Refer to "Parking brake shoe installation")

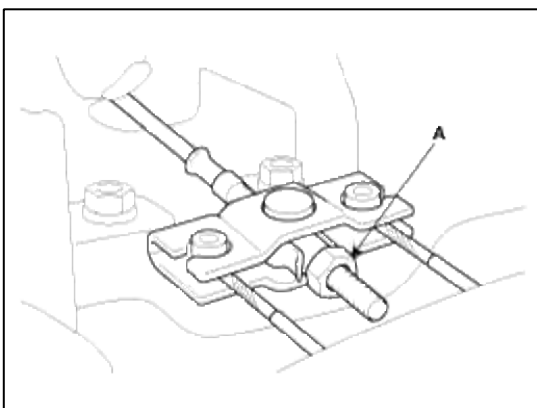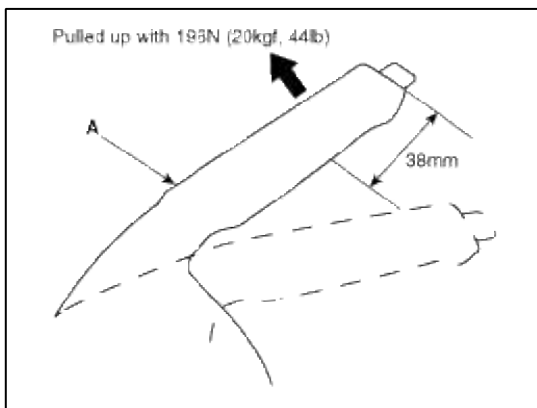


4. Release the parking brake lever fully, and check that parking brakes do not drag when the rear wheels are turned. Readjust if necessary.

5. Make sure that the parking brakes are fully applied when the parking brake lever is pulled up fully.
6. Install the floor console.
(Refer to Body group - "Floor console")

Brake System > ESC(Electronic Stability Control) System > Components and Components Location

Components

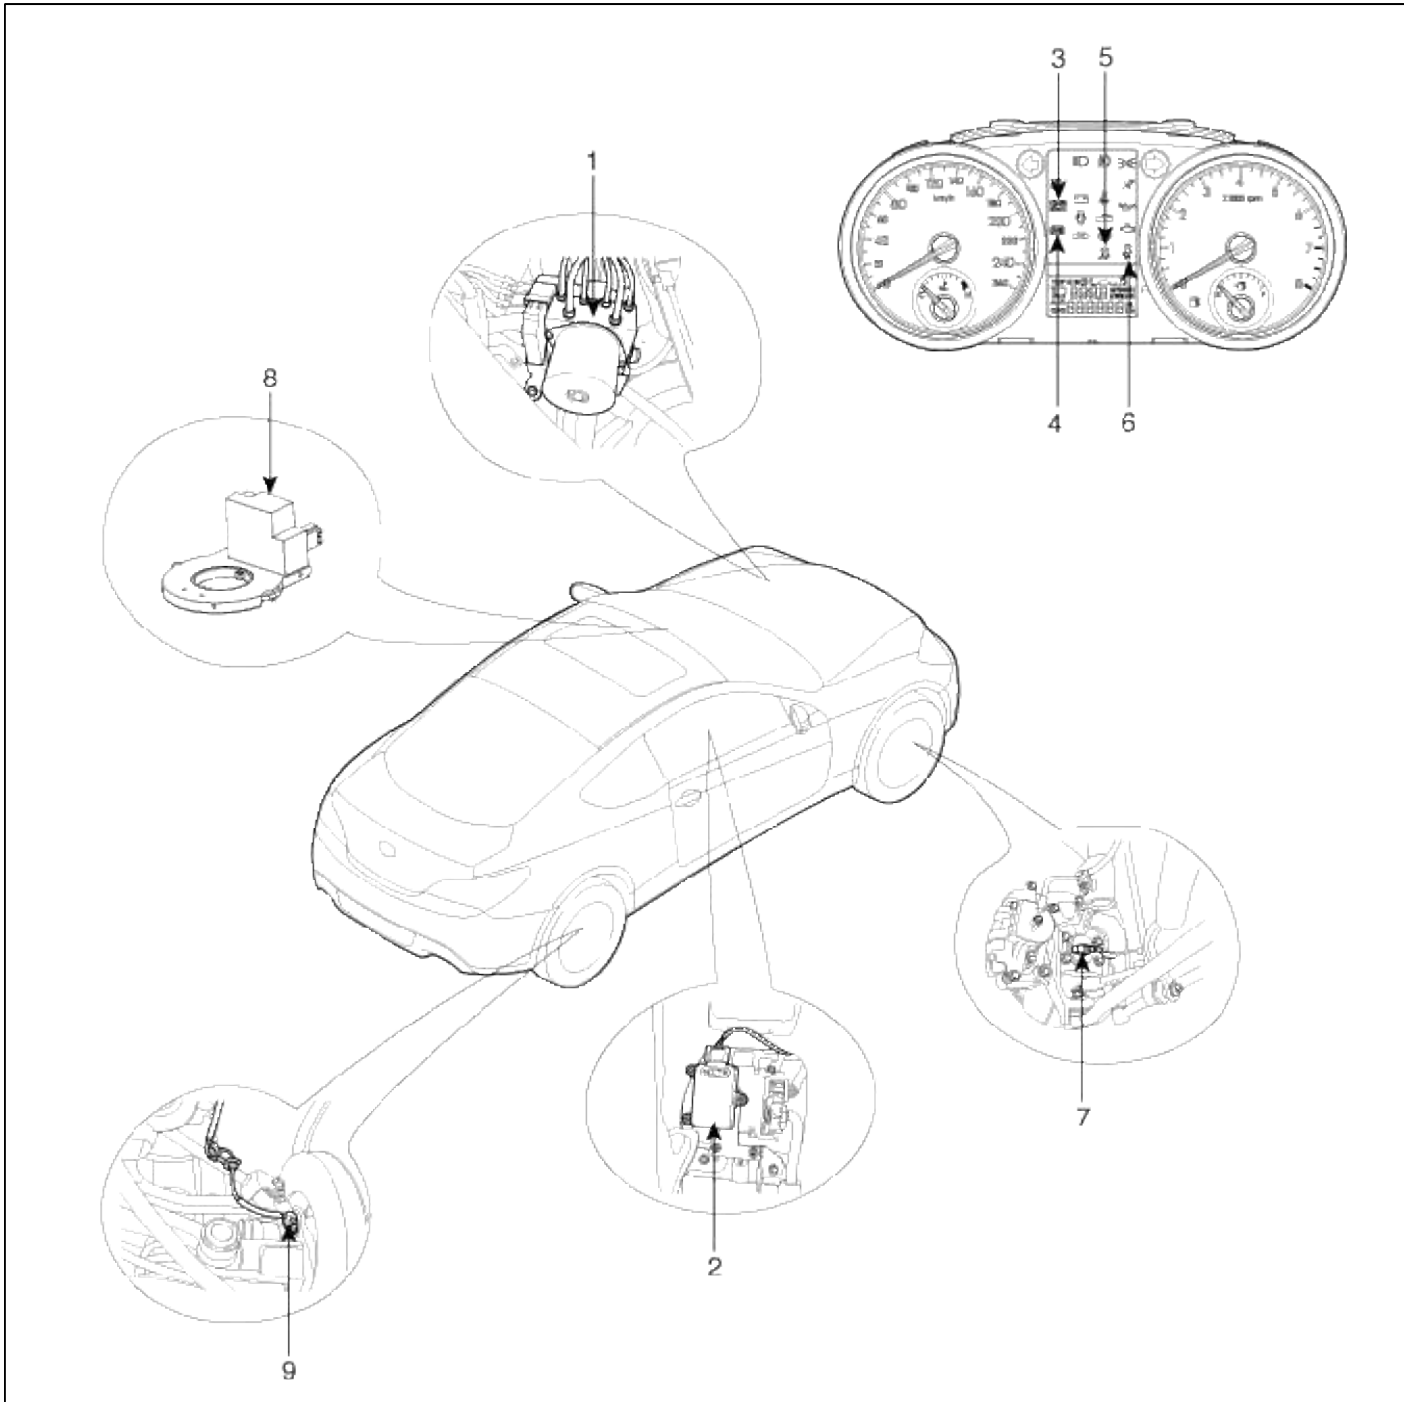

1. HECU module	6. ESC OFF warning lamp
2. Yaw rate & Lateral G sensor	7. Front wheel speed sensor
3. Parking brake/EBD warning lamp	8. Steering angle sensor
4. ABS warning lamp	9. Rear wheel speed sensor
5. ESC function / warning lamp	

Brake System > ESC(Electronic Stability Control) System > Description and Operation

Description of ESC

Optimum driving safety now has a name : ESC, the Electronic Stability Control.

ESC recognizes critical driving conditions, such as panic reactions in dangerous situations, and stabilizes the vehicle by wheel-individual braking and engine control intervention.

ESC adds a further function known as AYC(Active Yaw Control) to the ABS, TCS, EBD and EDC functions.


Whereas the ABS/TCS function controls wheel slip during braking and acceleration and, thus, mainly intervenes in the longitudinal dynamics of the vehicle, active yaw control stabilizes the vehicle about its vertical axis.

This is achieved by wheel individual brake intervention and adaptation of the momentary engine torque with no need for any action to be taken by the driver.

ESC essentially consists of three assemblies : the sensors, the electronic control unit and the actuators.

The stability control feature works under all driving and operating conditions. Under certain driving conditions, the ABS/TCS function can be activated simultaneously with the ESC function in response to a command by the driver.

In the event of a failure of the stability control function, the basic safety function, ABS, is still maintained.

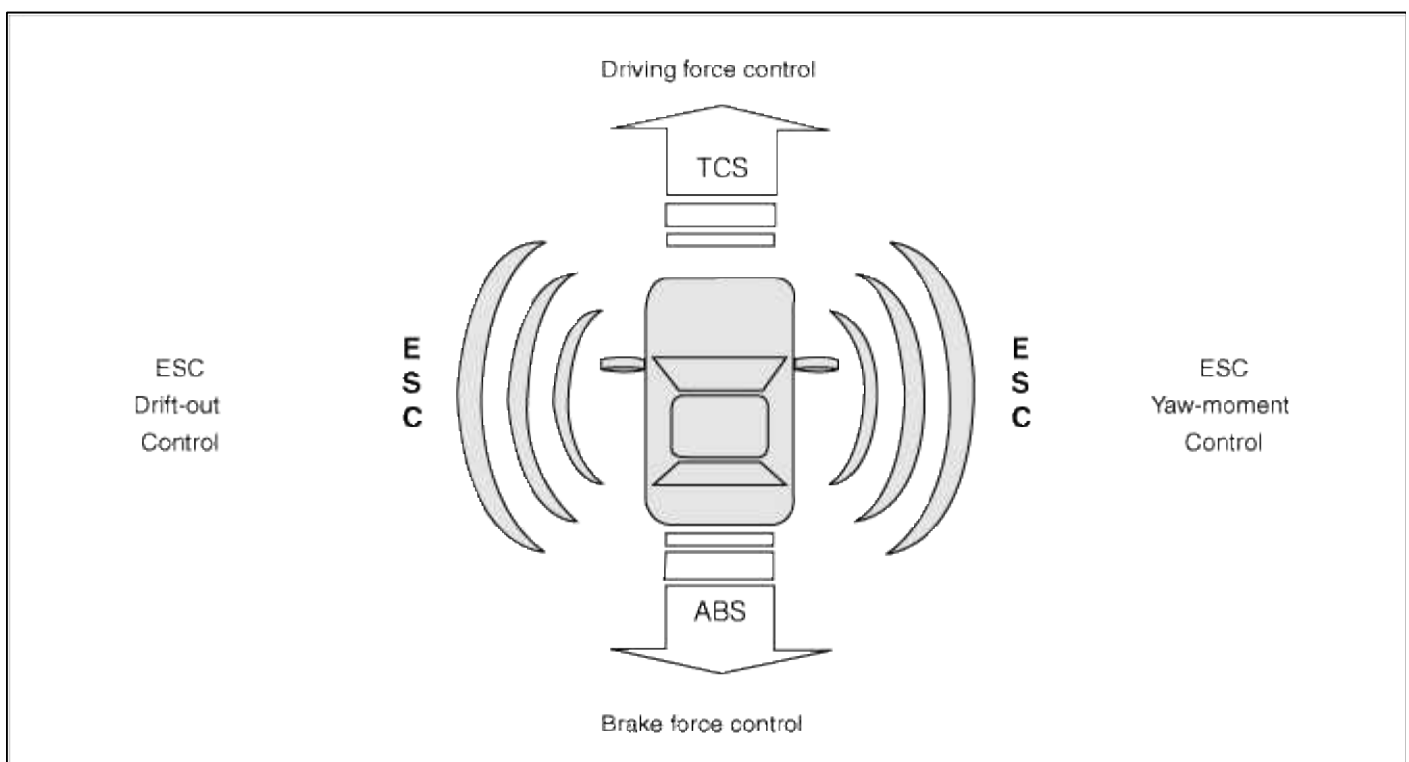

Description of ESC control


ESC system includes ABS/EBD, TCS and AYC function.

ABS/EBD function : The ECU changes the active sensor signal (current shift) coming from the four wheel sensors to the square wave. By using the input of above signals, the ECU calculates the vehicle speed and the acceleration & deceleration of the four wheels. And, the ECU judges whether the ABS/EBD should be actuated or not.


TCS function prevents the wheel slip of drive direction by adding the brake pressure and engine torque reduction via CAN communication. TCS function uses the wheel speed sensor signal to determine the wheel slip as far as ABS function.

AYC function prevents unstable maneuver of the vehicle. To determine the vehicle maneuver, AYC function uses the maneuver sensor signals (Yaw Rate Sensor, Lateral Acceleration Sensor, Steering Wheel Angle Sensor). If vehicle maneuver is unstable (Over Steer or Under Steer), AYC function applies the brake pressure on certain wheel, and send engine torque reduction signal by CAN.

After the key-on, the ECU continually diagnoses the system failure. (self-diagnosis) If the system failure is detected, the ECU informs driver of the system failure through the BRAKE/ABS/ESC warning lamp. (fail-safe warning)

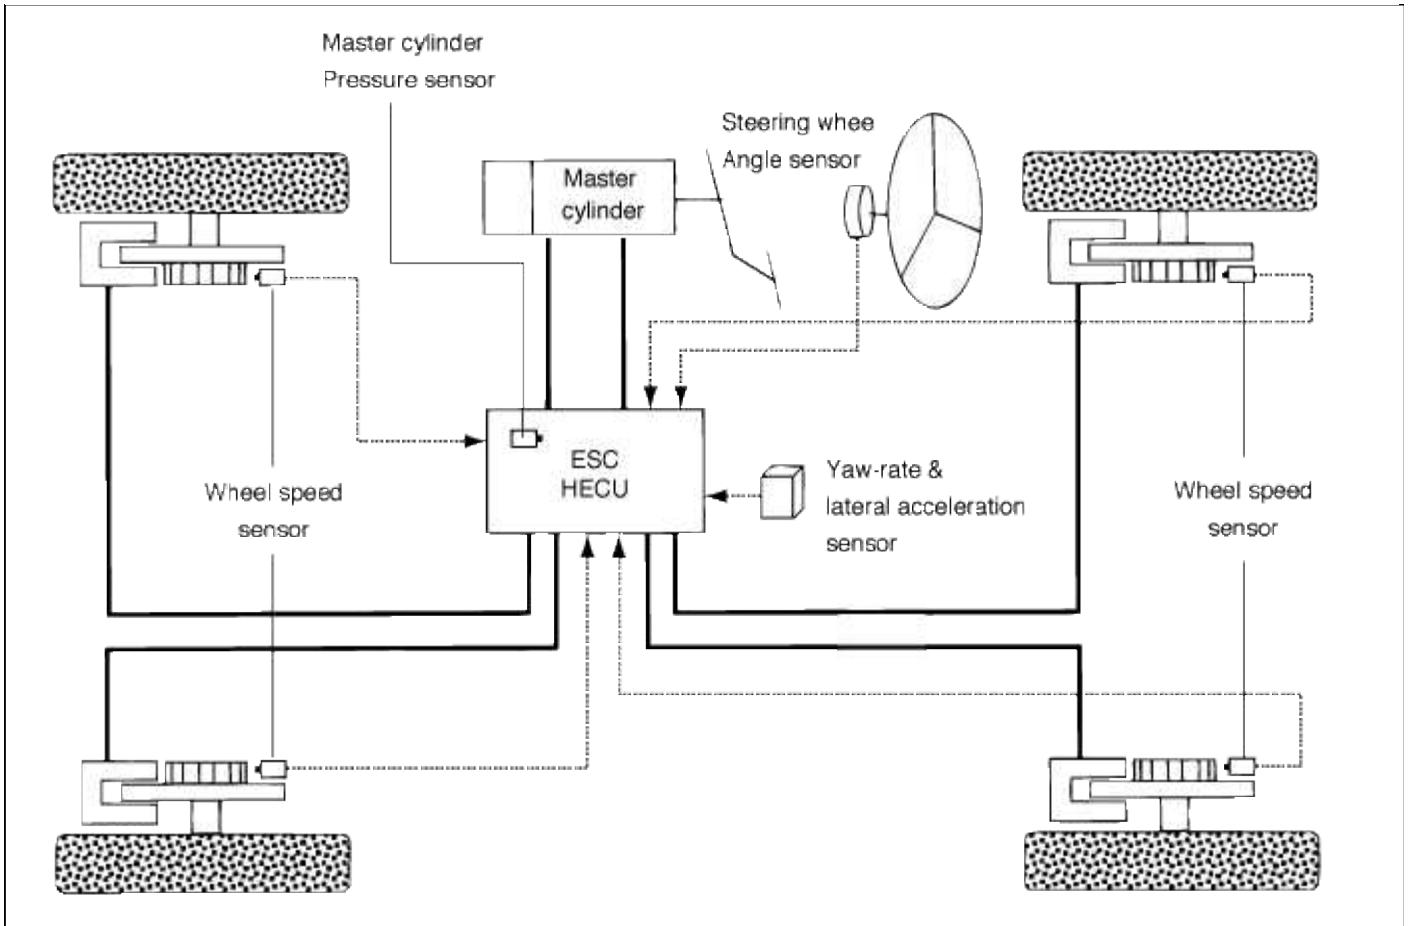


Input and output diagram

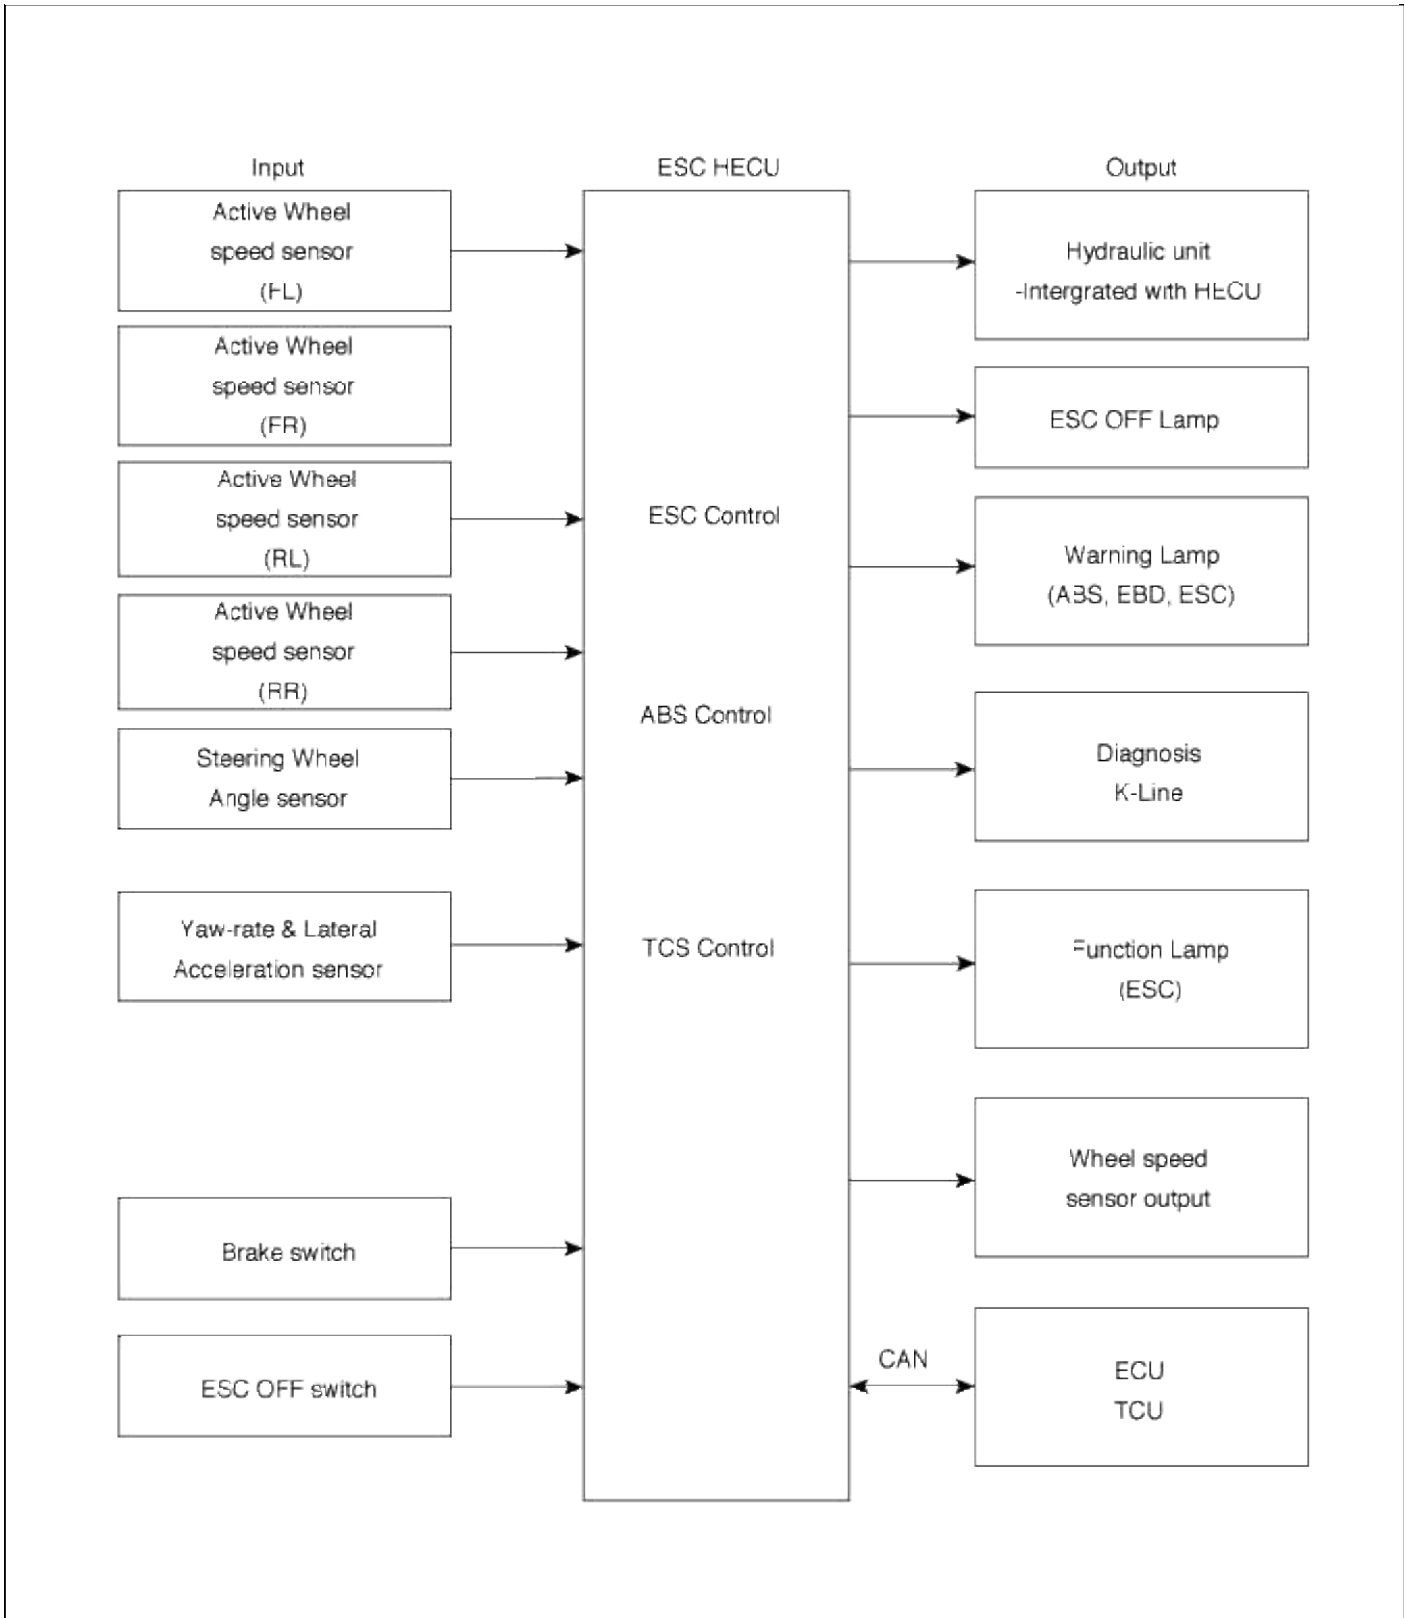

ESC Operation mode

ESC Hydraulic system diagram

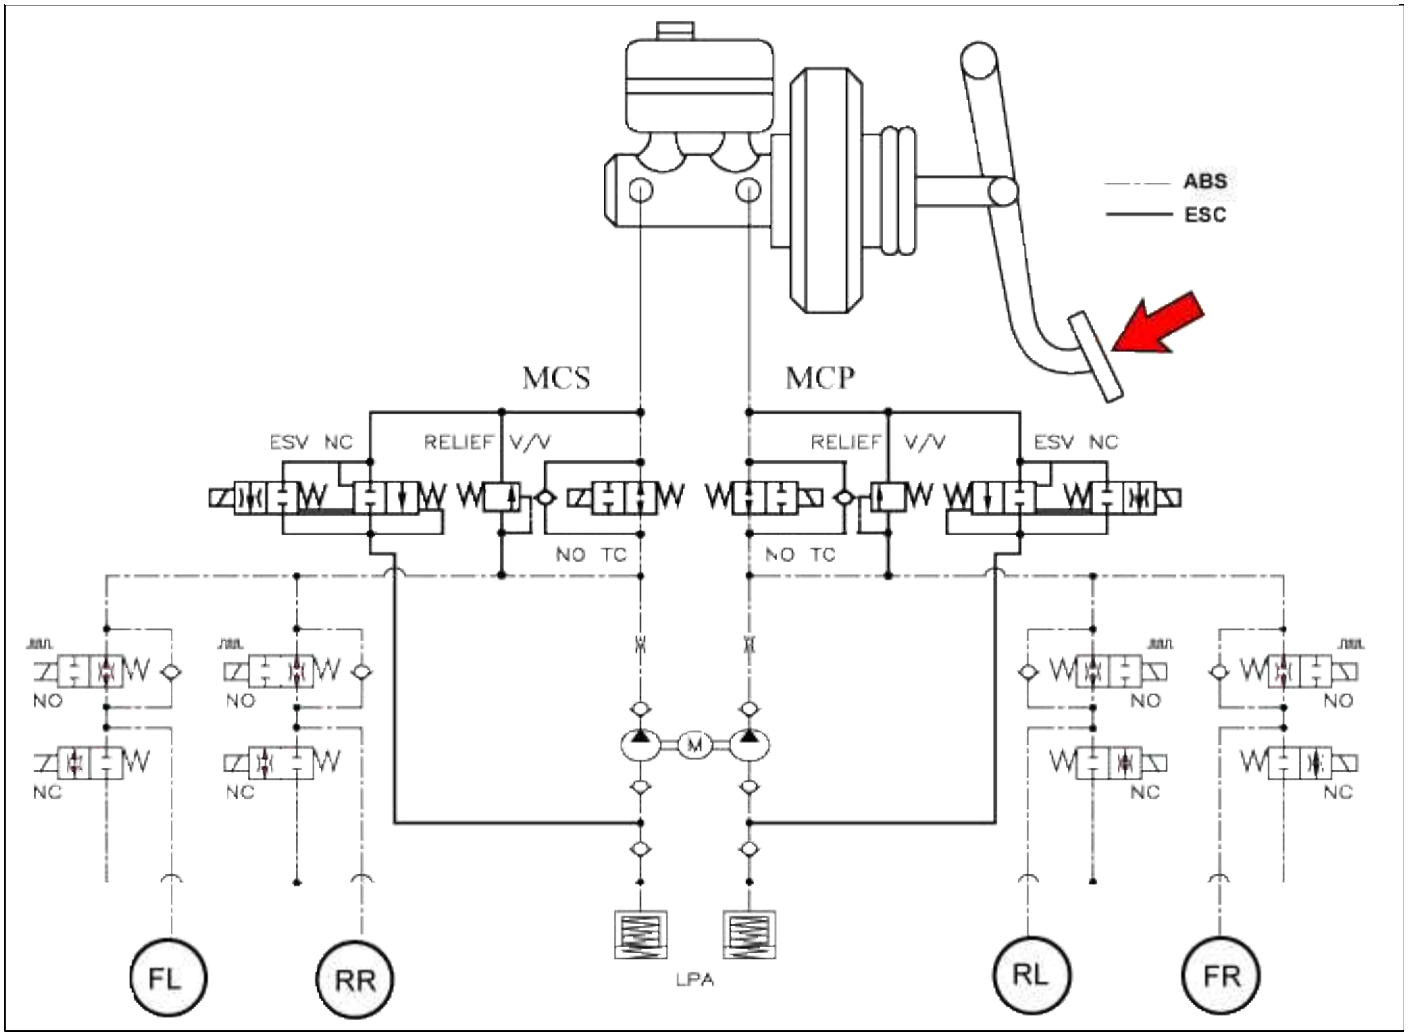


1. ESC Non-operation : Normal braking.

Solenoid valve	Continuity	Valve	Motor pump	TC Valve
IN (NO)	OFF	OPEN	OFF	OFF
OUT (NC)	OFF	CLOSE		

2. ESC operation

Solenoid valve		Continuity	Valve	Motor pump	TC Valve
Understeering (Only inside of rear wheel)	IN(NO)	OFF	OPEN	ON	ON
	OUT(NC)	OFF	CLOSE		
Oversteering (Only outside of front wheel)	IN(NO)	OFF	OPEN		
	OUT(NC)	OFF	CLOSE		

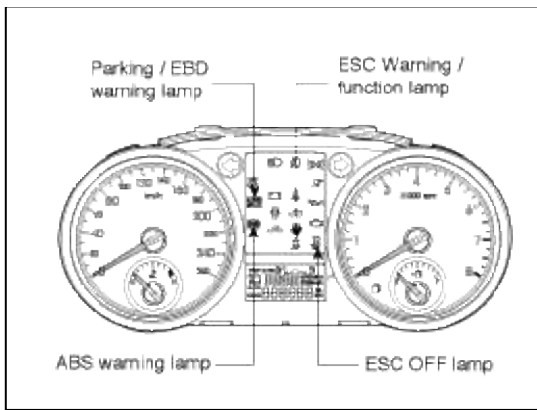

ABS Warning lamp module

The active ABS warning lamp module indicates the self-test and failure status of the ABS. The ABS warning lamp shall be on:

- During the initialization phase after IGN ON. (continuously 3 seconds).
- In the event of inhibition of ABS functions by failure.
- During diagnostic mode.
- When the ECU Connector is separated from ECU.

EBD/Parking brake warning lamp module

The active EBD warning lamp module indicates the self-test and failure status of the EBD. However, in case the Parking Brake Switch is turned on, the EBD warning lamp is always turned on regardless of EBD functions. The EBD warning lamp shall be on:

- During the initialization phase after IGN ON. (continuously 3 seconds).
- When the Parking Brake Switch is ON or brake fluid level is low.
- When the EBD function is out of order .
- During diagnostic mode.
- When the ECU Connector is separated from ECU.

ESC Warning lamp (ESC system)

The ESC warning lamp indicates the self-test and failure status of the ESC.

The ESC warning lamp is turned on under the following conditions :

- During the initialization phase after IGN ON. (continuously 3 seconds).
- In the event of inhibition of ESC functions by failure.
- When driver turn off the ESC function by on/off switch.
- During diagnostic mode.

ESC Function lamp (ESC system)

The ESC function lamp indicates the self-test and operating status of the ESC.

The ESC Function lamp operates under the following conditions :

- During the initialization phase after IGN ON. (continuously 3 seconds).
- When the ESC control is operating. (Blinking - 2Hz)


ESC On/Off switch (ESC system)

The ESC On/Off Switch shall be used to toggle the ESC function between On/Off states based upon driver input.


The On/Off switch shall be a normally open, momentary contact switch. Closed contacts switch the circuit to ignition. Initial status of the ESC function is on and switch toggle the state.

Brake System > ESC(Electronic Stability Control) System > Schematic Diagrams


Circuit Diagram - ESC (1)

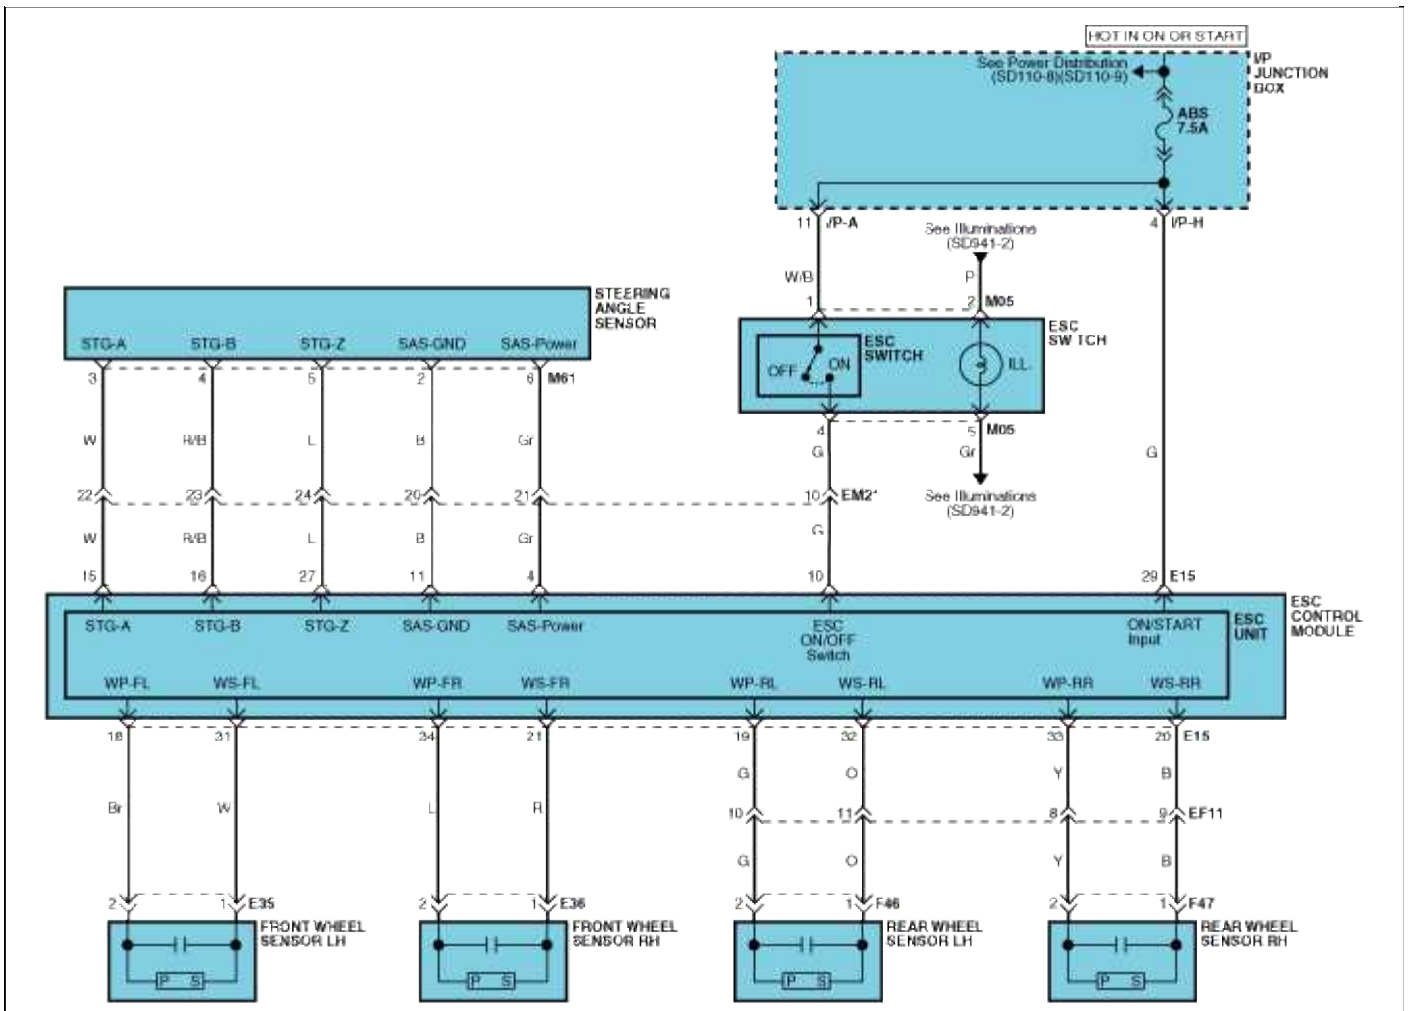


Circuit Diagram - ESC (2)

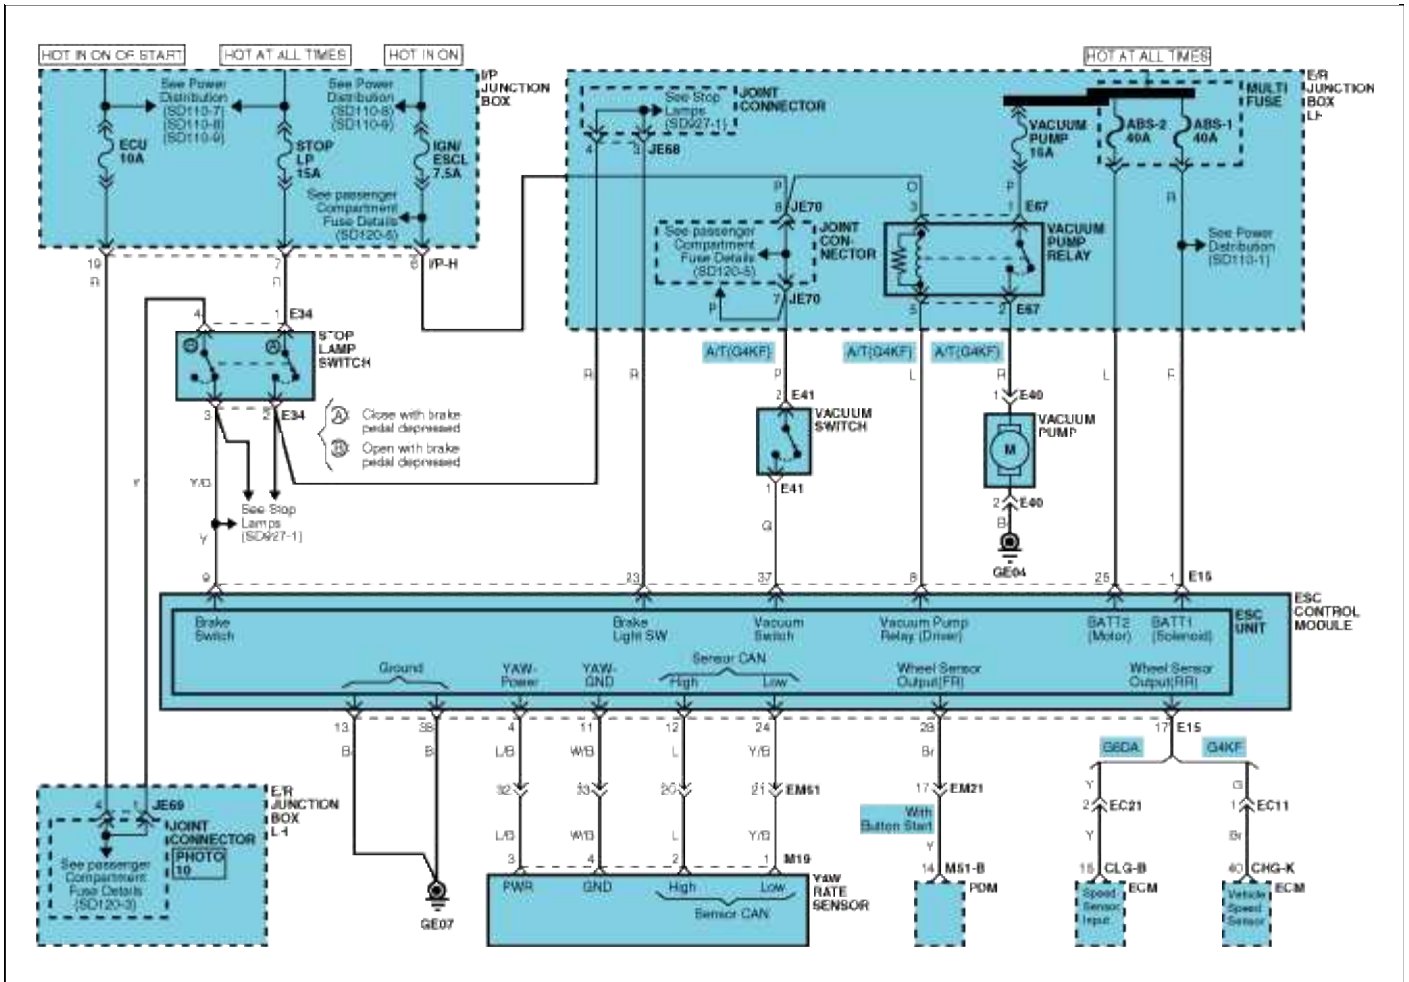

Circuit Diagram - ESC (3)

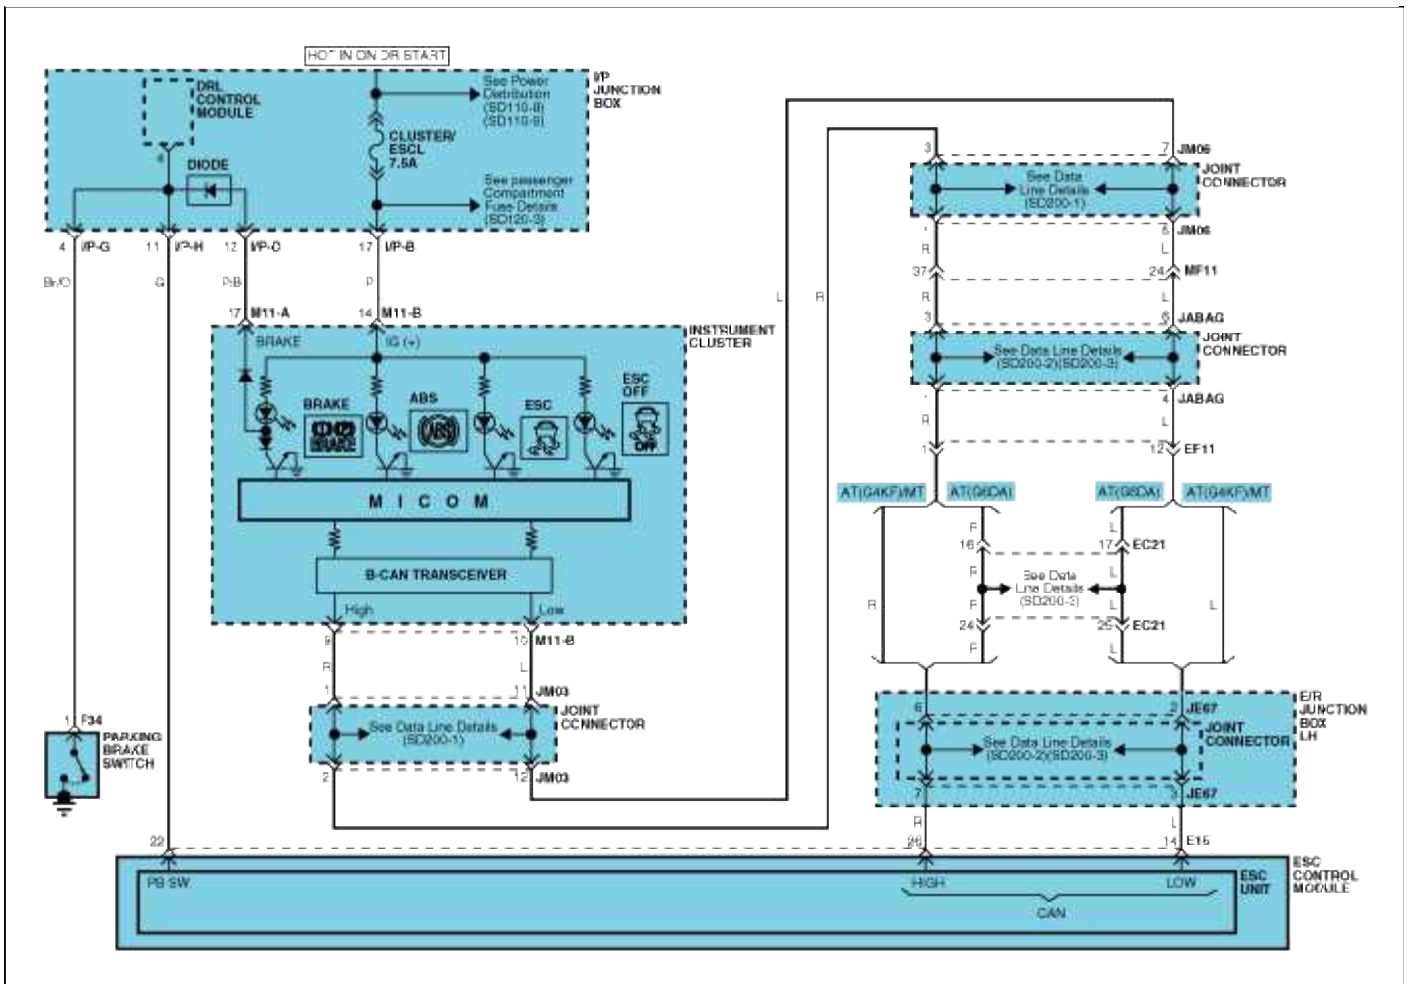

ESP Connector Input/Output

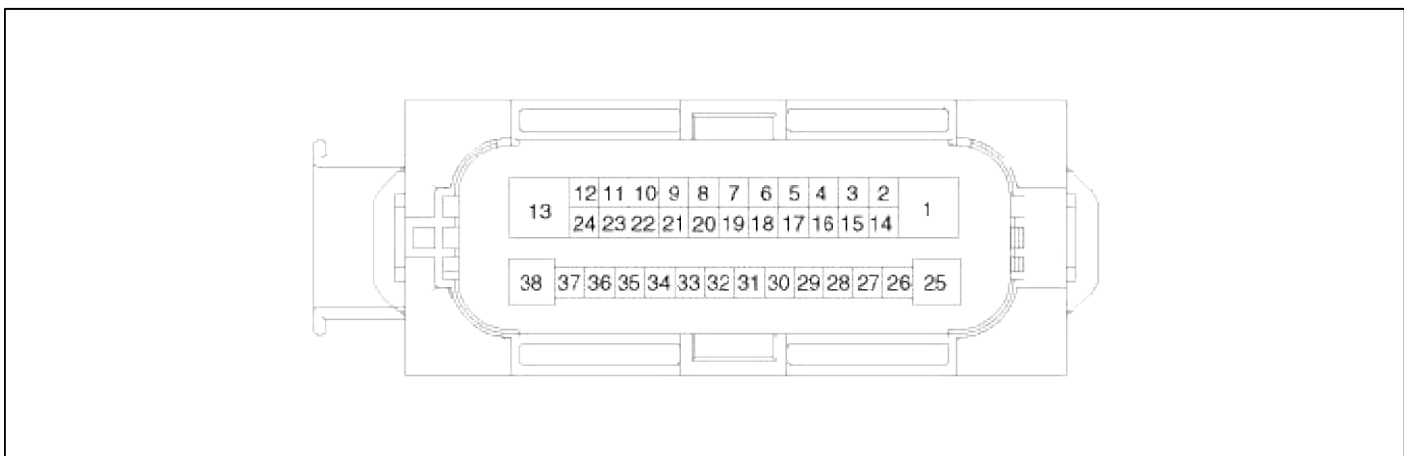

Connector Terminal		Specification
No	Description	
29	IGNITION1(+)	High level of wake up voltage : $4.5V < V < 16.0V$ Low level of wake up voltage : $V < 2.4V$ Max. current : $I < 50mA$
25	POS. BATTERY 1.(SOLENOID)	Over voltage range : $17.0 \pm 0.5V$ Operating voltage range : $10.0 \pm 0.5V < V < 16.0 \pm 0.5V$ Low voltage range : $7.0 \pm 0.5V < V < 9.5 \pm 0.5V$ Max. current : $I < 40A$

		Max. leakage current : $I < 0.25\text{mA}$
1	POS. BATTERY 2.(MOTOR)	Operating voltage range: $10.0 \pm 0.5\text{V} < V < 16.0 \pm 0.5\text{V}$ Rush current : $I < 110\text{A}$ Max. current : $I < 40\text{A}$ Max. leakage current : $I < 0.25\text{mA}$
38	GROUND	Rated current : $I < 550\text{mA}$ Max. current: $I < 40\text{A}$
13	PUMP MOTOR GROUND	Rush current : $I < 110\text{A}$ Max. current : $I < 40\text{A}$
23	BRAKE LIGHT SWITCH	Input voltage (Low) : $V < 2\text{V}$
9	BRAKE SWITCH	Input voltage (High) : $V > 6\text{V}$ Max. Input current : $I < 3\text{mA}$
11	SENSOR GROUND	Rated current : $I < 250\text{mA}$
4	SENSOR POWER	Max. current Capability : $I < 250\text{mA}$ Max. voltage : $V_{\text{BAT1}} - 0.8\text{V}$
10	ESC ON/OFF SWITCH	Input voltage (Low) : $V < 2\text{V}$
22	PARKING BRAKE SWITCH	Input voltage (High) : $V > 6\text{V}$
37	VACCUM SWITCH	Max input current : $I < 5\text{mA} (@12.8\text{V})$
8	VACCUM PUMP DRIVE	Max. Input current : 200mA Max. output voltage (Low) : $V < 1.2\text{V}$
28	SENSOR FRONT RIGHT OUTPUT	External pull up resistance : $1\text{K}\Omega < R$
17	SENSOR REAR RIGHT OUTPUT	Output duty : $50 \pm 20\%$
14	CAN BUS LINE(LOW)	Max. Input current : $I < 10\text{mA}$
26	CAN BUS LINE(HIGH)	
18	SENSOR FRONT LEFT POWER	Output voltage : $V_{\text{BAT1}} - 0.6\text{V} \sim V_{\text{BAT1}} - 1.1\text{V}$ Output current : Max. 30mA
34	SENSOR FRONT RIGHT POWER	
19	SENSOR REAR LEFT POWER	
33	SENSOR REAR RIGHT POWER	
31	SENSOR FRONT LEFT SIGNAL	Input current Low : $5.9 \sim 8.4\text{mA}$
21	SENSOR FRONT RIGHT SIGNAL	Input current High : $11.8 \sim 16.8\text{mA}$
32	SENSOR REAR LEFT SIGNAL	Frequency range : $1 \sim 2500\text{Hz}$
20	SENSOR REAR RIGHT SIGNAL	Input duty : $50 \pm 10\%$
12	CAN SENSOR LINE (HIGH)	Max. input current : $I < 10\text{mA}$
24	CAN SENSOR LINE (LOW)	
15	STEERING ANGLE SENSOR PHASE A	Input duty (STG A, STG B) : $50 \pm 10\%$
16	STEERING ANGLE SENSOR PHASE B	phase Difference (STG A, STG B) $2 \pm 0.6\text{deg}$
27	STEERING ANGLE SENSOR PHASE Z	High voltage : $3.0\text{V} < V_{\text{H}} < 4.1\text{V}$ Low voltage : $1.3\text{V} < V_{\text{L}} < 2.0\text{V}$

Brake System > ESC(Electronic Stability Control) System > Troubleshooting

Failure Diagnosis

1. In principle, ESC and TCS controls are prohibited in case of ABS failure.
2. When ESC or TCS fails, only the failed system control is prohibited.
3. However, when the solenoid valve relay should be turned off in case of ESC failure, refer to the ABS fail-safe.
4. Information on ABS fail-safe is identical to the fail-safe in systems where ESC is not installed.

Memory of Fail Code

1. It keeps the code as far as the backup lamp power is connected. (O)
2. It keeps the code as far as the HCU power is on. (X)

Failure Checkup

1. Initial checkup is performed immediately after the HECU power on.
2. Valve relay checkup is performed immediately after the IG2 ON.
3. It executes the checkup all the time while the IG2 power is on.


Countermeasures In Fail

1. Turn the system down and perform the following actions and wait for HECU power OFF.
2. Turn the valve relay off.
3. Stop the control during the operation and do not execute any until the normal condition recovers.

Warning Lamp ON

1. ESC operation lamp turn on for 3sec after IGN ON.
2. ESC operation lamp blinks when ESC Act.
3. ESC OFF lamp turn on in case of
 - A. ESC Switch OFF
 - B. ESC Failure Detect
 - C. 3sec after IGN ON

Standard flow of diagnostic troubleshooting

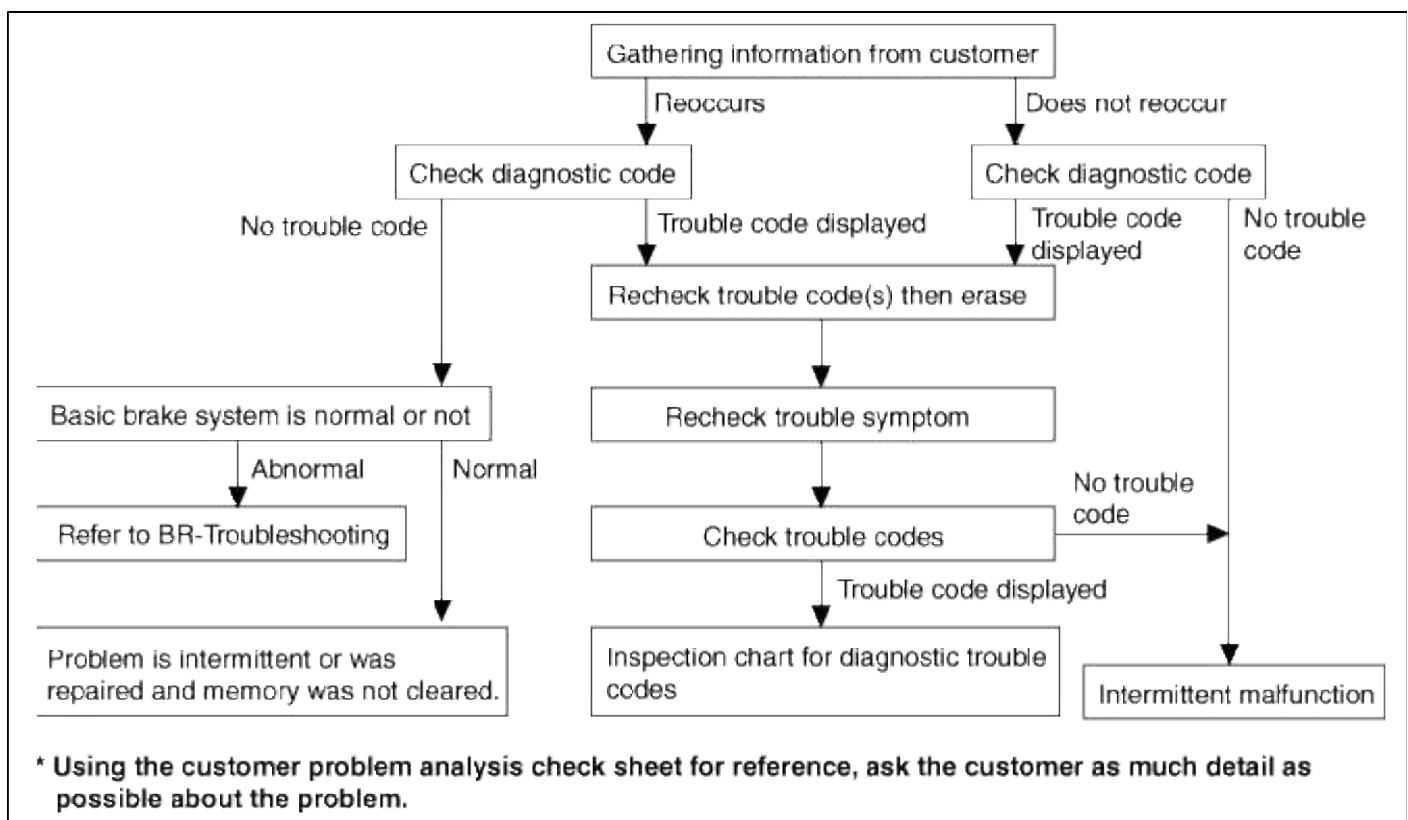

Notes with regard to diagnosis

The phenomena listed in the following table are not abnormal.

Phenomenon	Explanation
System check sound	When starting the engine, a thudding sound can sometimes be heard coming from inside the engine compartment. This is because the system operation check is being performed.
ABS operation sound	<ol style="list-style-type: none"> 1. Sound of the motor inside the ABS hydraulic unit operation (whine). 2. Sound is generated along with vibration of the brake pedal (scraping). 3. When ABS operates, sound is generated from the vehicle chassis due to repeated brake application and release (Thump : suspension; squeak: tires)
ABS operation (Long braking distance)	For road surfaces such as snow-covered and gravel roads, the braking distance for vehicles with ABS can sometimes be longer than that for other vehicles. Accordingly, advise the customer to drive safely on such roads by lowering the vehicle speed.
<p>Diagnosis detection conditions can vary depending on the diagnosis code. When checking the trouble symptom after the diagnosis code has been erased, ensure that the requirements listed in "Comment" are met.</p>	

ABS Check sheet

ABS Check Sheet

 Inspector's
Name _____

Customer's Name		Registration No.	
		Registration Year	/ /
		VIN.	
Date Vehicle Brought In	/ /	Odometer	Km Miles

Date the Problem First Occurred	/ /
Frequency of Occurrence of Problem	<input type="checkbox"/> Continuous <input type="checkbox"/> Intermittent (times a day)

Symptoms	<input type="checkbox"/> ABS does not operate.		
	<input type="checkbox"/> ABS does not operate efficiently.	<input type="checkbox"/> Intermittent (times a day)	
	ABS Warning Light Abnormal	<input type="checkbox"/> Remains ON	<input type="checkbox"/> Does not light up

Diagnostic Trouble Code Check	1st Time	<input type="checkbox"/> Normal Code	<input type="checkbox"/> Malfunction Code (Code)
	2nd Time	<input type="checkbox"/> Normal Code	<input type="checkbox"/> Malfunction Code (Code)

Problem symptoms table

Symptom	Suspect Area
ABS does not operate.	Only when 1.~4. are all normal and the problem is still occurring, replace the HECU. 1. Check the DTC reconfirming that the normal code is output. 2. Power source circuit. 3. Speed sensor circuit. 4. Check the hydraulic circuit for leakage.
ABS does not operate intermittently.	Only when 1.~4. are all normal and the problem is still occurring, replace the ABS actuator assembly. 1. Check the DTC reconfirming that the normal code is output. 2. Wheel speed sensor circuit. 3. Stop lamp switch circuit. 4. Check the hydraulic circuit for leakage.
Communication with GDS is not possible. (Communication with any system is not possible)	1. Power source circuit 2. CAN line
Communication with GDS is not possible. (Communication with ABS only is not possible)	1. Power source circuit 2. CAN line 3. HECU
When ignition key is turned ON (engine OFF), the ABS warning lamp does not light up.	1. ABS warning lamp circuit 2. HECU
Even after the engine is started, the ABS warning lamp remains ON.	1. ABS warning lamp circuit 2. HECU

CAUTION

During ABS operation, the brake pedal may vibrate or may not be able to be depressed. Such phenomena are due to intermittent changes in hydraulic pressure inside the brake line to prevent the wheels from locking and is not an abnormality.

ABS Does Not Operate.**Detecting condition**

Trouble Symptoms	Possible Cause
Brake operation varies depending on driving conditions and road surface conditions, so diagnosis can be difficult. However if a normal DTC is displayed, check the following probable cause. When the problem is still occurring, replace the ESC control module.	<ul style="list-style-type: none"> - Faulty power source circuit - Faulty wheel speed sensor circuit - Faulty hydraulic circuit for leakage - Faulty HECU

Inspection procedures

DTC Inspection

1. Connect the GDS with the data link connector and turn the ignition switch ON.
2. Verify that the normal code is output.
3. Is the normal code output?

NO	Check the power source circuit.
YES	Erase the DTC and recheck using GDS.


Check the power source circuit

1. Disconnect the connector from the ESC control module.
2. Turn the ignition switch ON, measure the voltage between terminal 29 of the ESC control module harness side connector and body ground.

Specification: approximately B+

3. Is the voltage within specification?


YES	Check the ground circuit.
NO	Check the harness or connector between the fuse (10A) in the engine compartment junction block and the ESC control module. Repair if necessary.

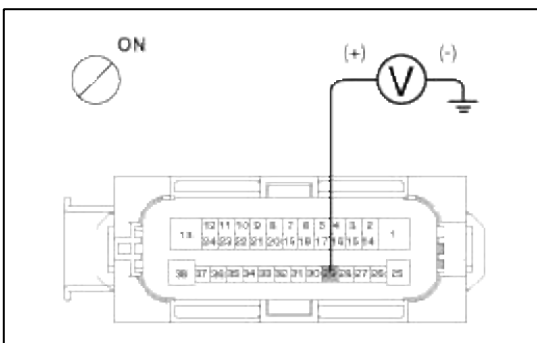

Check the ground circuit

1. Disconnect the connector from the ESC control module.
2. Check for continuity between terminals 13, 38 of the ESC control module harness side connector and ground point.
3. Is there continuity?

YES	Check the wheel speed sensor circuit.
NO	Repair an open in the wire and ground point.

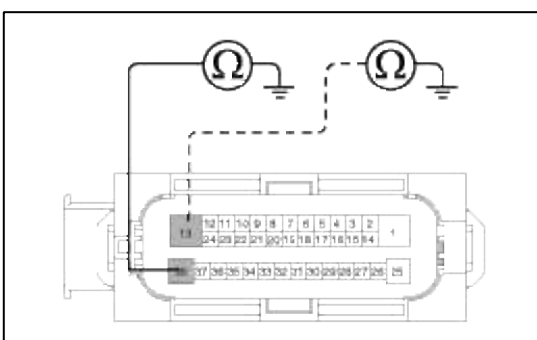

Check the wheel speed sensor circuit

1. Refer to the DTC troubleshooting procedures.
2. Is it normal?

YES	Check the hydraulic circuit for leakage.
NO	Repair or replace the wheel speed sensor.

Check the hydraulic circuit for leakage

1. Refer to the hydraulic lines.
2. Inspect leakage of the hydraulic lines.
3. Is it normal?

YES	The problem is still occurring, replace the ESC control module.
NO	Repair the hydraulic lines for leakage.

ABS Does Not Operate (Intermittently).

Detecting condition

Trouble Symptoms	Possible Cause
Brake operation varies depending on driving conditions and road surface conditions, so diagnosis can be difficult. However if a normal DTC is displayed, check the following probable cause. When the problem is still occurring, replace the ESC control module.	<ul style="list-style-type: none"> - Faulty power source circuit - Faulty wheel speed sensor circuit - Faulty hydraulic circuit for leakage - Faulty HECU

Inspection procedures

DTC Inspection

1. Connect the GDS with the data link connector and turn the ignition switch ON.
2. Verify that the normal code is output.
3. Is the normal code output?

NO	Check the wheel speed sensor circuit.
YES	Erase the DTC and recheck using GDS.

Check the wheel speed sensor circuit

1. Refer to the DTC troubleshooting procedures.
2. Is it normal?

YES	Check the stop lamp switch circuit.
NO	Repair or replace the wheel speed sensor.

Check the stop lamp switch circuit


1. Check that stop lamp lights up when brake pedal is depressed and turns off when brake pedal is released.

2. Measure the voltage between terminal 23 of the ESC control module harness side connector and body ground when brake pedal is depressed.

Specification : approximately B+

3. Is the voltage within specification?

YES	Check the hydraulic circuit for leakage.
NO	Repair the stop lamp switch. Repair an open in the wire between the ESC control module and the stop lamp switch.

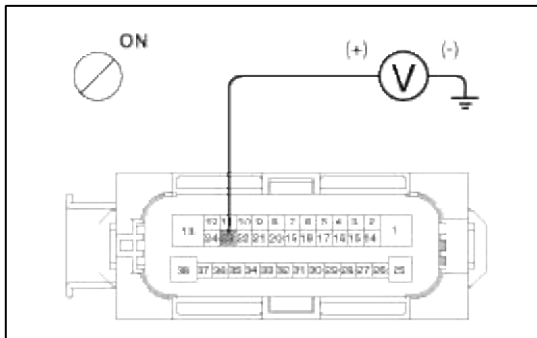

Check the hydraulic circuit for leakage

1. Refer to the hydraulic lines.
2. Inspection leakage of the hydraulic lines.
3. Is it normal?

YES	The problem is still occurring, replace the ESC control module.
NO	Repair the hydraulic lines for leakage.

**Communication with GDS is not possible.
(Communication with any system is not possible)**

Detecting condition

Trouble Symptoms	Possible Cause
Possible defect in the power supply system (including ground) for the diagnosis line.	<ul style="list-style-type: none"> - An open in the wire - Poor ground - Faulty power source circuit

Inspection procedures


Check The Power Supply Circuit For The Diagnosis

1. Measure the voltage between terminal 16 of the data link connector and body ground.

Specification : approximately B+

2. Is voltage within specification?


YES	Check the ground circuit for the diagnosis.
NO	Repair an open in the wire. Check and replace fuse (15A) from the engine compartment junction block.

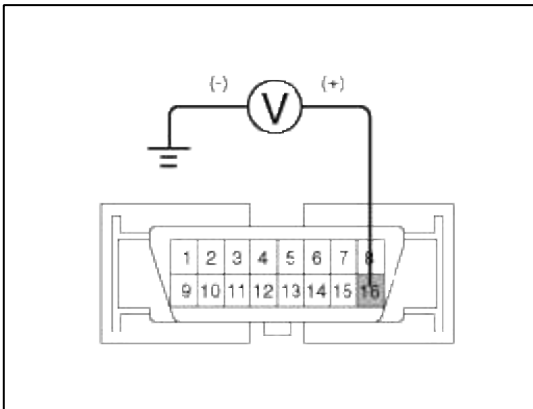

Check the ground circuit for the diagnosis

1. Check for continuity between terminal 4 of the data link connector and body ground.
2. Is there continuity?

NO	Repair an open in the wire between terminal 4 of the data link connector and ground point.
-----------	--

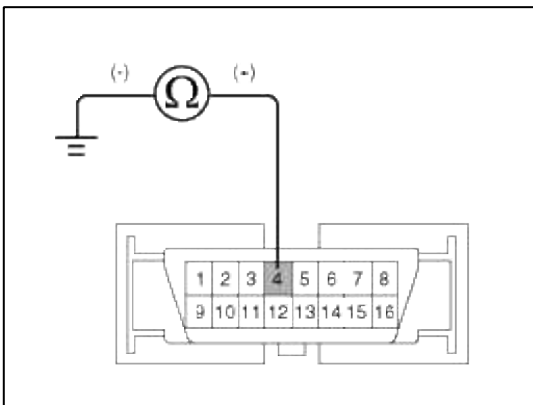

**Communication with GDS is not possible.
(Communication with ABS only is not possible)**

Detecting condition

Trouble Symptoms	Possible Cause
When communication with GDS is not possible, the cause may be probably an open in the HECU power circuit or an open in the diagnosis output circuit.	<ul style="list-style-type: none"> - An open in the wire - Faulty HECU - Faulty power source circuit

Inspection procedures

Check for Continuity in the Diagnosis Line

1. Disconnect the connector from the ESC control module.
2. Check for continuity between terminals 26, 14 of the ESC control module connector and 6, 14 of the data link connector.

3. Is there continuity?

YES	Check the power source of ESC control module.
NO	Repair an open in the wire.


Check the power source of ESC control module

1. Disconnect the connector from the ESC control module.
2. Turn the ignition switch ON, measure the voltage between terminal 29 of the ESC control module harness side connector and body ground.

Specification : approximately B+

3. Is voltage within specification?


YES	Check for poor ground.
NO	Check the harness or connector between the fuse (10A) in the engine compartment junction block and the ESC control module. Repair if necessary.

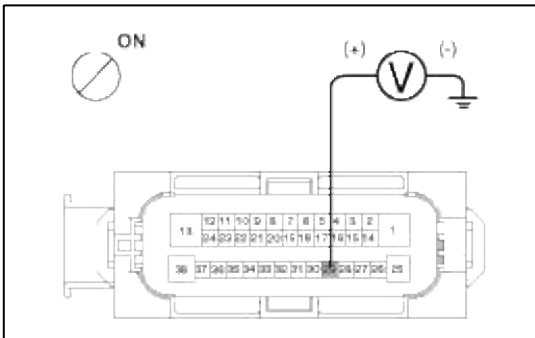

Check for poor ground

1. Check for continuity between terminal 4 of the data link connector and ground point.

YES	Replace the ESC control module and recheck.
NO	Repair an open in the wire or poor ground

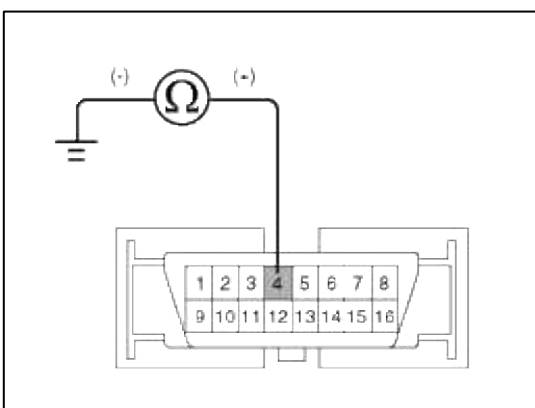

When Ignition Key Is Turned ON (engine OFF), The ABS Warning Lamp Does Not Light Up.

Detecting condition

Trouble Symptoms	Possible Cause
<p>When current flows in the HECU the ABS warning lamp turns from ON to OFF as the initial check. Therefore if the lamp does not light up, the cause may be an open in the lamp power supply circuit, a blown bulb, an open in the both circuits between the ABS warning lamp and the HECU, and the faulty HECU.</p>	<ul style="list-style-type: none"> - Faulty ABS warning lamp bulb - Blown fuse is related to ABS in the engine compartment junction block - Faulty ABS warning lamp module - Faulty HECU

Inspection procedures

Problem verification


1. Disconnect the connector from the ESC control module and turn the ignition switch ON.
2. Does the ABS warning lamp light up?

YES	Inspect again after replacing the ESC HECU.
NO	Check the power source for the ABS warning lamp.

Check the power source for the ABS warning lamp

1. Disconnect the instrument cluster connector (M11-B) and turn the ignition switch ON.
2. Measure the voltage between terminal (M11-B) 14 of the cluster harness side connector and body ground.

Specification : approximately B+

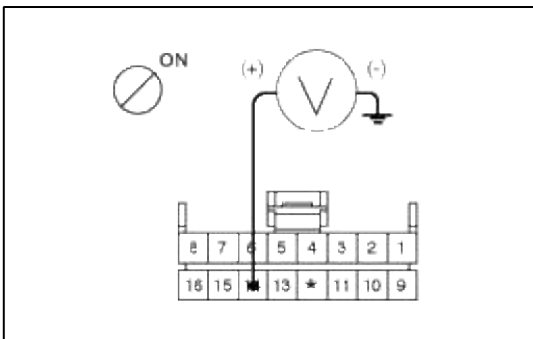

3. Is voltage within specification?


YES	Check the CAN circuit resistance for ABS warning lamp.
NO	Check for blown fuse.

Check the can circuit resistance for ABS warning lamp

1. Disconnect the instrument cluster connector (M11-B) and turn the ignition switch OFF.

2. Measure the resistance between terminal (M11-B) 9 and 10 of the cluster harness side connector.

Specification : 60Ω

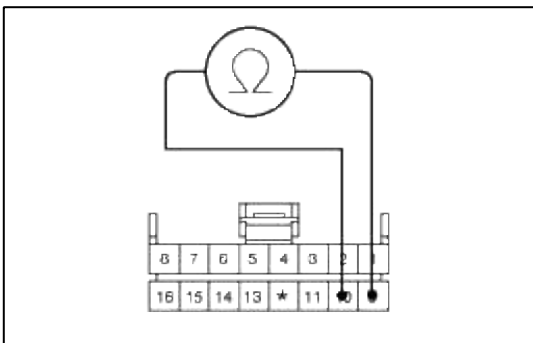

3. Is resistance within specification?

YES	Repair ABS warning lamp bulb or instrument cluster assembly.
NO	Check the CAN circuit wiring for ABS warning lamp.

Check the can circuit wiring for ABS warning lamp

1. Disconnect the instrument cluster connector (M11-B) and HECU connector, and then turn the ignition switch OFF.
2. Check for continuity between terminal (M11-B) 9 of the cluster harness side connector and terminal 14 of HECU harness side.
Check for continuity between terminal (M11-B) 10 of the cluster harness side connector and terminal 26 of HECU harness side.

Specification : Below 1Ω

3. Is resistance within specification?

YES	Repair short of wiring between terminal 14, 26 of HECU harness connector and ABS warning lamp module.
NO	Repair open of wiring between terminal 14, 26 of HECU harness connector and ABS warning lamp module.

Even After The Engine Is Started, The ABS Warning Lamp Remains ON.

Detecting condition

Trouble Symptoms	Possible Cause
If the HECU detects trouble, it lights the ABS warning lamp while at the same time prohibiting ABS control. At this time, the HECU records a DTC in memory. Even though the normal code is output, the ABS warning lamp remains ON, then the cause may be probably an open or short in the ABS warning lamp circuit.	<ul style="list-style-type: none"> - An open in the wire - Faulty instrument cluster assembly - Faulty ABS warning lamp module - Faulty HECU

Inspection procedures

Check DTC Output

1. Connect the GDS to the 16P data link connector located behind the driver's side kick panel.
2. Check the DTC output using GDS.


3. Is DTC output?

YES	Perform the DTC troubleshooting procedure (Refer to DTC troubleshooting).
NO	Check the CAN circuit resistance for ABS warning lamp.

Check the can circuit resistance for ABS warning lamp

1. Disconnect the instrument cluster connector (M11-B) and turn the ignition switch OFF.
2. Measure the resistance between terminal (M11-B) 9 and 10 of the cluster harness side connector.

Specification : 60Ω

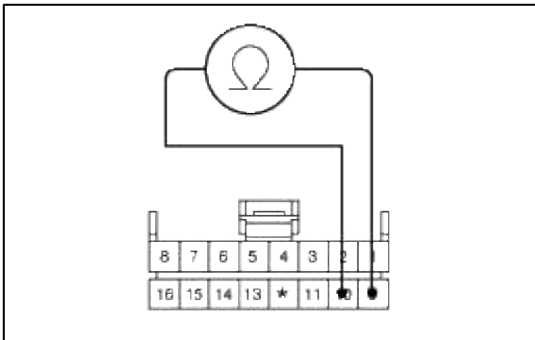

3. Is resistance within specification?

YES	Repair ABS warning lamp bulb or instrument cluster assembly.
NO	Check the CAN circuit wiring for ABS warning lamp.

Check the can circuit wiring for ABS warning lamp

1. Disconnect the instrument cluster connector (M11-B) and HECU connector, and then turn the ignition switch OFF.
2. Check for continuity between terminal (M11-B) 9 of the cluster harness side connector and terminal 14 of ESC HECU harness side.
Check for continuity between terminal (M11-B) 10 of the cluster harness side connector and terminal 26 of ESC HECU harness side.

Specification : Below 1Ω

3. Is there continuity?

YES	Repair short of wiring between terminal 14, 26 of HECU harness connector and ABS warning lamp module. If no trouble in wiring, inspect again after replacing the HECU.
NO	Repair short of wiring between terminal 14, 26 of HECU harness connector and ABS warning lamp module. If no trouble in wiring, inspect again after replacing the HECU.

Bleeding of Brake System

This procedure should be followed to ensure adequate bleeding of air and filling of the ESC unit, brake lines and master cylinder with brake fluid.

1. Remove the reservoir cap and fill the brake reservoir with brake fluid.

CAUTION

If there is any brake fluid on any painted surface, wash it off immediately.

NOTE


When pressure bleeding, do not depress the brake pedal.
Recommended fluid..... DOT3 or DOT4

2. Disconnect the vacuum switch connector.
(2.0 AT & ESC Only)
3. Connect a clear plastic tube to the wheel cylinder bleeder plug and insert the other end of the tube into a half filled clear plastic bottle.
4. Connect the GDS to the data link connector located underneath the dash panel.
5. Select and operate according to the instructions on the GDS screen.

CAUTION

You must obey the maximum operating time of the ABS motor with the GDS to prevent the motor pump from burning.

- (1) Select vehicle name.
- (2) Select Anti-Lock Brake system.
- (3) Select HCU air bleeding mode.

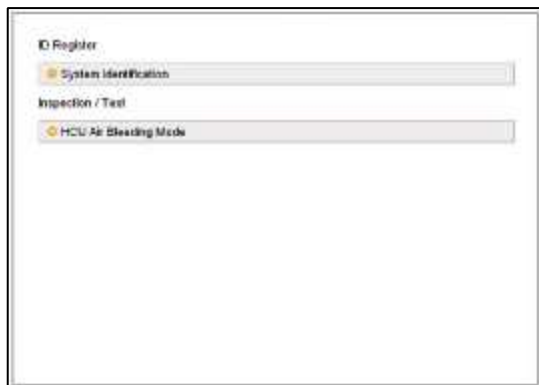

- (4) Press "OK" to operate motor pump and solenoid valve.



- (5) Wait 60 sec. before operating the air bleeding.
 (If not, you may damage the motor.)




- (6) Perform the air bleeding.




6. Pump the brake pedal several times, and then loosen the bleeder screw until fluid starts to run out without bubbles. Then close the bleeder screw.


Front

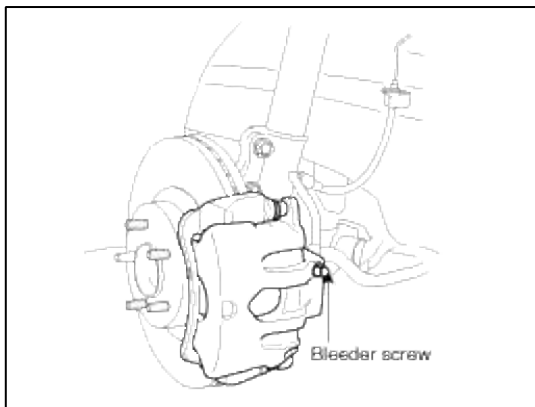

Rear

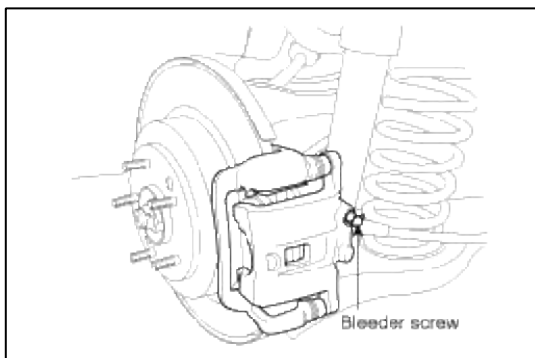

7. Repeat step 5 until there are no more bubbles in the fluid for each wheel.

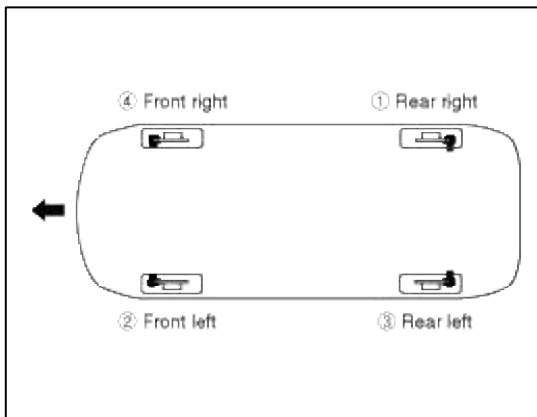

8. Tighten the bleeder screw.

Bleed screw tightening torque:

6.9 ~ 12.7N.m (0.7 ~ 2.0kgf.m, 5.1 ~ 9.5lb-ft)

9. Connect the vacuum switch connector.
(2.0 AT & ESC Only)

Brake System > ESC(Electronic Stability Control) System > EBD(Electronic Brake-force Distribution) > Description and Operation

EBD(Electronic brake-force distribution) Operation

The EBD system (Electronic Brake force Distribution) as a sub-system of the ABS system is to control the effective adhesion utilization by the rear wheels.

It further utilizes the efficiency of highly developed ABS equipment by controlling the slip of the rear wheels in the partial braking range.

The brake force is moved even closer to the optimum and controlled electronically, thus dispensing with the need for the proportioning valve.

The proportioning valve, because of a mechanical device, has limitations to achieve an ideal brake force distribution to the rear wheels as well as to carry out the flexible brake force distribution proportioning to the vehicle load or weight increasing. And in the event of malfunctioning, driver cannot notice whether it fails or not.


EBD controlled by the ABS Control Module, calculates the slip ratio of each wheel at all times and controls the brake pressure of the rear wheels not to exceed that of the front wheels.

If the EBD fails, the EBD warning lamp (Parking brake lamp) lights up.

Advantages


- Function improvement of the base-brake system.
- Compensation for the different friction coefficients.
- Elimination of the proportioning valve.
- Failure recognition by the warning lamp.

Comparison between proportioning valve and EBD

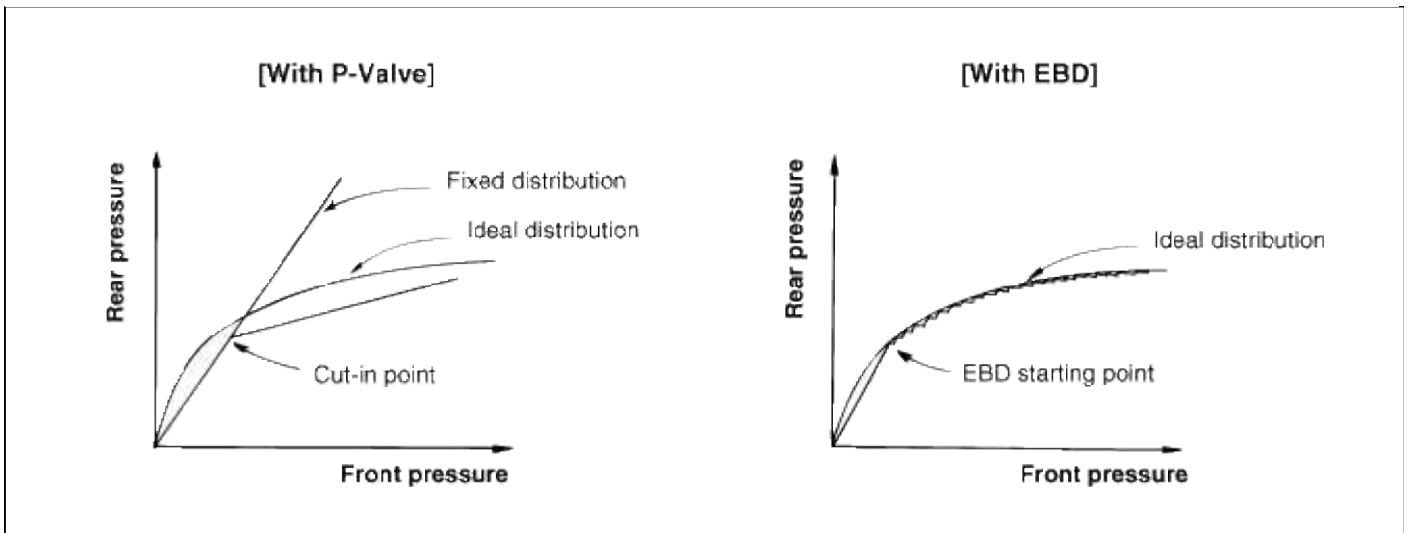

Brake System > ESC(Electronic Stability Control) System > ESC Control Module > Components and Components Location

Components

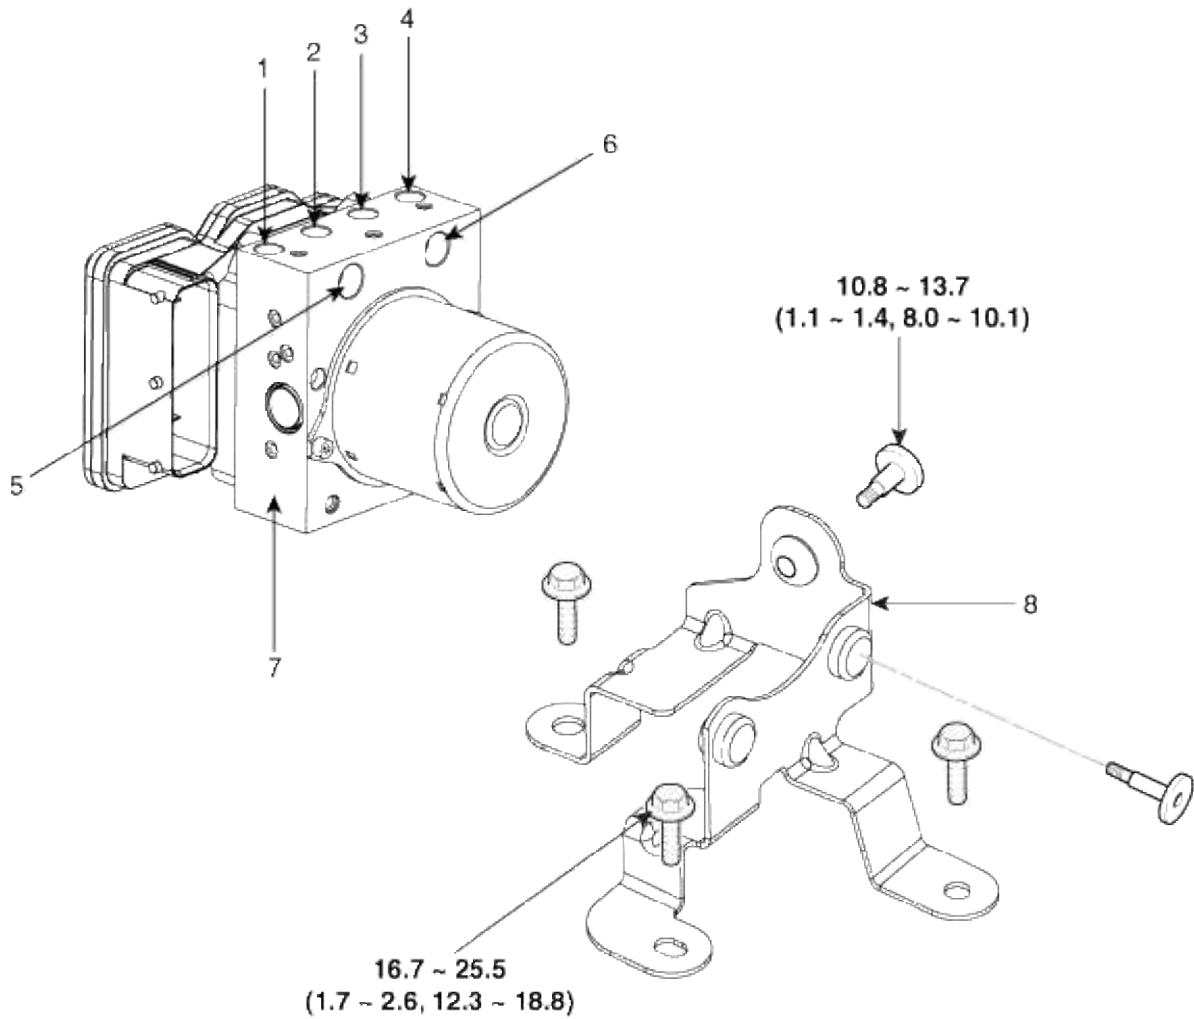

Torque : N.m (kgf.m, lb-ft)


1. Front-left tube	5. MC2
2. Rear -right tube	6. MC1
3. Rear-left tube	7. ESC control module (HECU)
4. Front-right tube	8. Bracket

Brake System > ESC(Electronic Stability Control) System > ESC Control Module > Repair procedures

Removal

1. Turn the ignition switch OFF and disconnect the negative (-) battery cable.

2. Remove the engine room junction box and bracket.

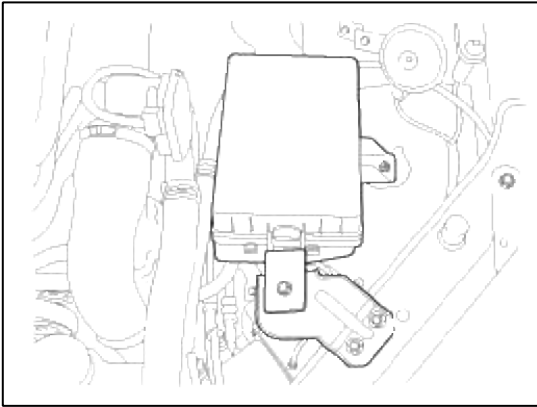


3. Disconnect the brake tubes from the HECU by unlocking the nuts counterclockwise with a spanner.

Tightening torque:

ABS : 12.7 ~ 16.7 N.m (1.3 ~ 1.7 kgf.m, 9.4 ~ 12.3 lb-ft)


ESC : 18.6 ~ 22.6 N.m(1.9 ~ 2.3 kgf.m, 13.7 ~ 16.6 lb-ft)

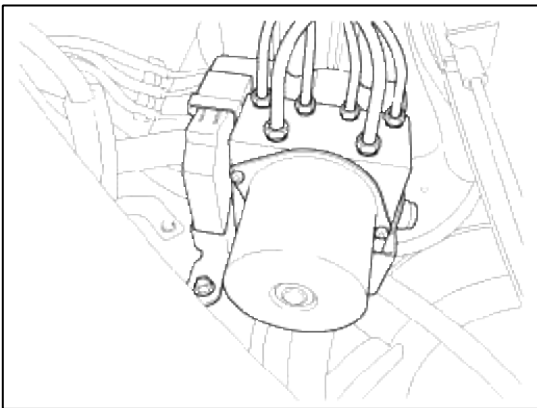

4. Pull up the lock of the HECU connector, then disconnect the connector.
5. Loosen the HECU bracket bolt(3EA), then remove HECU and bracket.

Tightening torque:

16.7 ~ 25.5 N.m (1.7 ~ 2.6 kgf.m, 12.3 ~ 18.8 lb-ft)

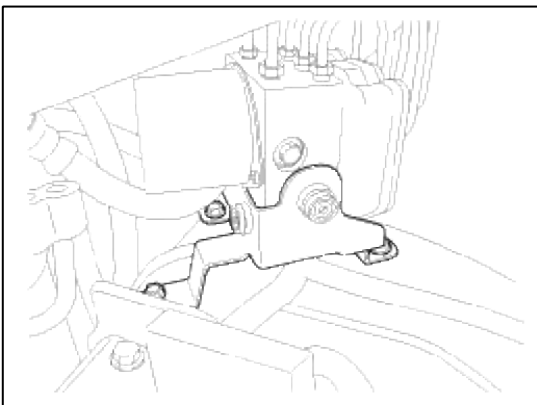

CAUTION

1. Never attempt to disassemble the HECU.
2. The HECU must be transported and stored in.
3. Never shock to the HECU.


6. Remove the 3 bolts, then remove the bracket from HECU.

Tightening torque:

10.8 ~ 13.7 N.m (1.1 ~ 1.4 kgf.m, 8.0 ~ 10.1 lb-ft)

Installation

1. Installation is the reverse of removal.
2. Tighten the HECU mounting bolts and nuts to the specified torque.

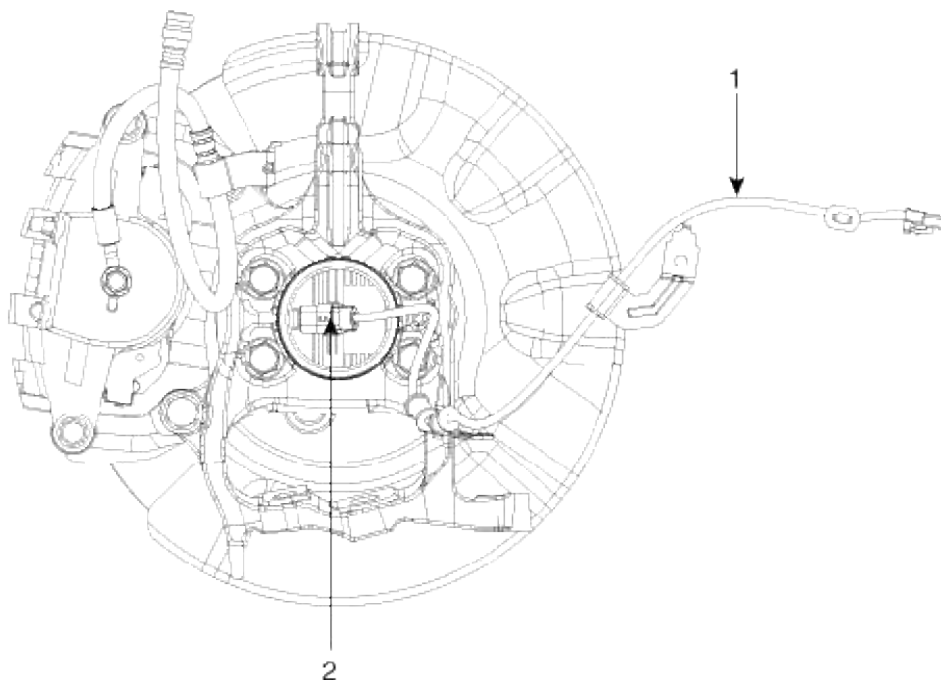
Brake System > ESC(Electronic Stability Control) System > Front Wheel Speed Sensor > Components and Components Location**Components**

1. Front wheel speed sensor cable
2. Front wheel speed sensor

Brake System > ESC(Electronic Stability Control) System > Front Wheel Speed Sensor > Repair procedures

Removal

1. Remove the connector after removing the front wheel speed sensor clip.

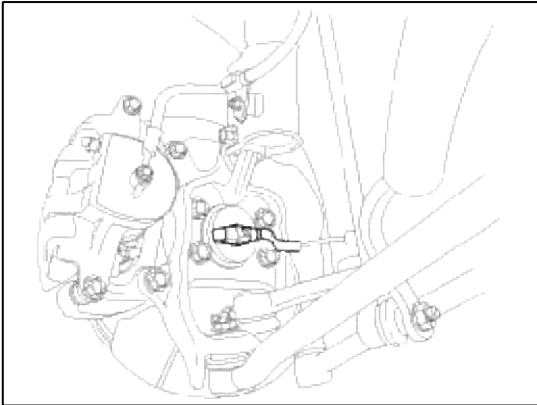


2. Remove the front wheel speed sensor.
(Refer to Driveshaft and axle group - "Front axle assembly")
3. Installation is the reverse of removal.

Inspection


1. Measure the output voltage between the terminal of the wheel speed sensor and the body ground.

CAUTION

In order to protect the wheel speed sensor, when measuring output voltage, a 100 Ω resistor must be used as shown.

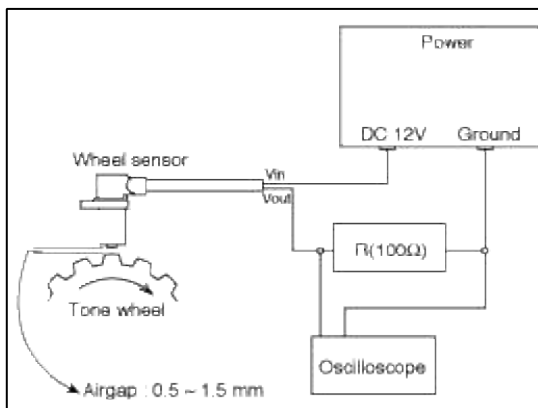

2. Compare the change of the output voltage of the wheel speed sensor to the normal change of the output voltage as shown below.

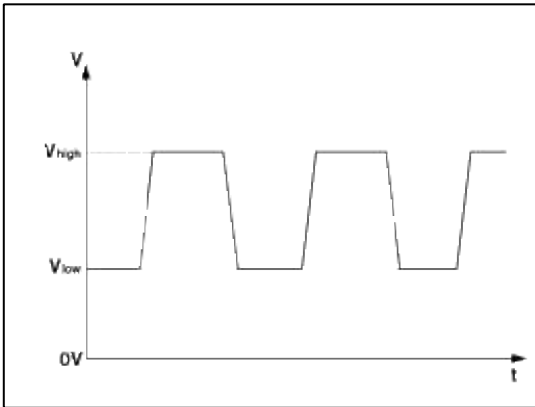


V_{low} : 0.59V ~ 0.84V

V_{high} : 1.18V ~ 1.68V

Frequency range : 1 ~ 2,500Hz

Brake System > ESC(Electronic Stability Control) System > Rear Wheel Speed Sensor > Components and Components Location

Components

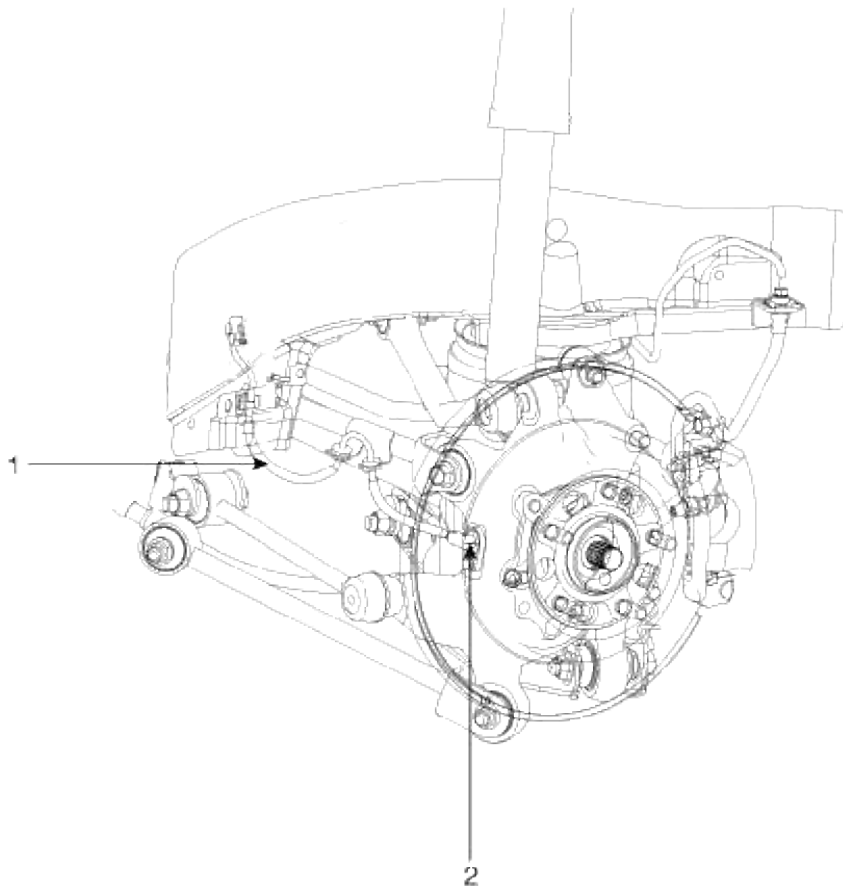

- 1. Rear wheel speed sensor cable
- 2. Rear wheel speed sensor


Brake System > ESC(Electronic Stability Control) System > Rear Wheel Speed Sensor > Repair procedures

Removal

1. Remove the rear wheel speed sensor mounting bolt (A).

Tightening torque:

6.9 ~ 10.8 N.m (0.7 ~ 1.1 kgf.m, 5.1 ~ 8.0 lb-ft)

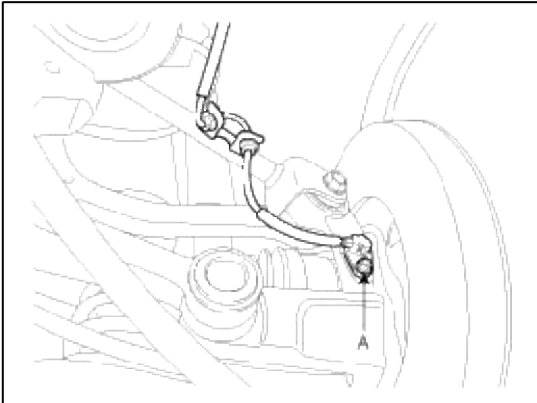


2. Remove the rear wheel guard.
3. Disconnect the rear wheel speed sensor connector (A). And remove the rear wheel speed sensor.
4. Installation is the reverse of removal.

Inspection


1. Measure the output voltage between the terminal of the wheel speed sensor and the body ground.

CAUTION

In order to protect the wheel speed sensor, when measuring output voltage, a 100 Ω resistor must be used as shown.

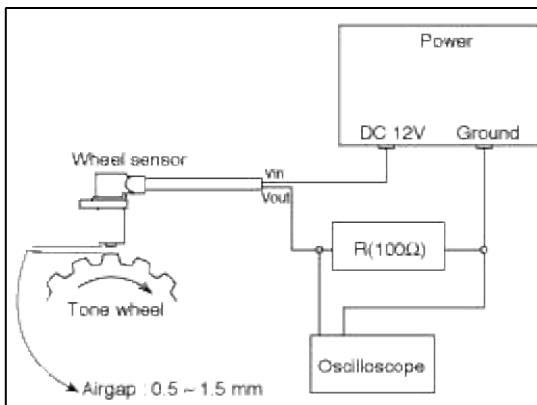

2. Compare the change of the output voltage of the wheel speed sensor to the normal change of the output voltage as shown below.

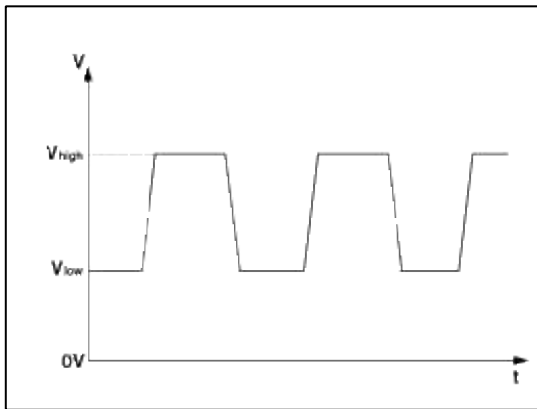

V_{low} : 0.59V ~ 0.84V

V_{high} : 1.18V ~ 1.68V

Frequency range : 1 ~ 2,500Hz

Brake System > ESC(Electronic Stability Control) System > Yaw-rate and Lateral G Sensor > Description and Operation

Description


When the vehicle is turning with respect to a vertical axis the yaw rate sensor detects the yaw rate electronically by the vibration change of plate fork inside the yaw rate sensor.

If yaw velocity reaches the specific velocity after it detects the vehicle' yawing, the ESC control is reactivated.

The later G sensor senses vehicle's lateral G. A small element inside the sensor is attached to a deflectable lever arm by later G.

Direction and magnitude of lateral G loaded to vehicle can be known with electrostatic capacity changing according to lateral G.


It interchanges signals with HECU through extra CAN line which only used for communication between HECU and sensor.

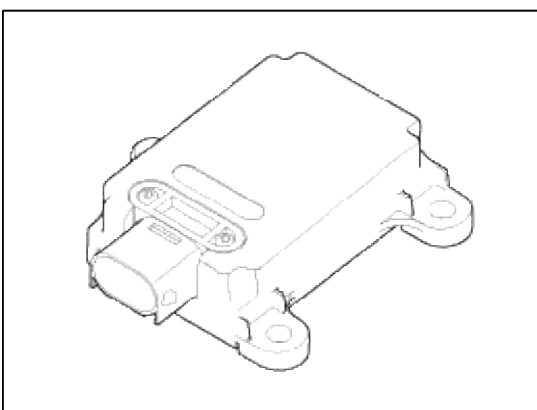

Specifications

Description		Specification	Remarks
Operating voltage		8 ~ 17V	
Output signal		CAN Interface	
Operating temperature		-40 ~ 85°C(-40 ~ 185°F)	
Yaw-rate sensor	Measurement range	-75 ~ 75°/sec	
	Frequency response	18 ~ 22Hz	
Lateral G sensor	Measurement range	-1.5 ~ 1.5g	
	Frequency response	50Hz±60%	

External Diagram

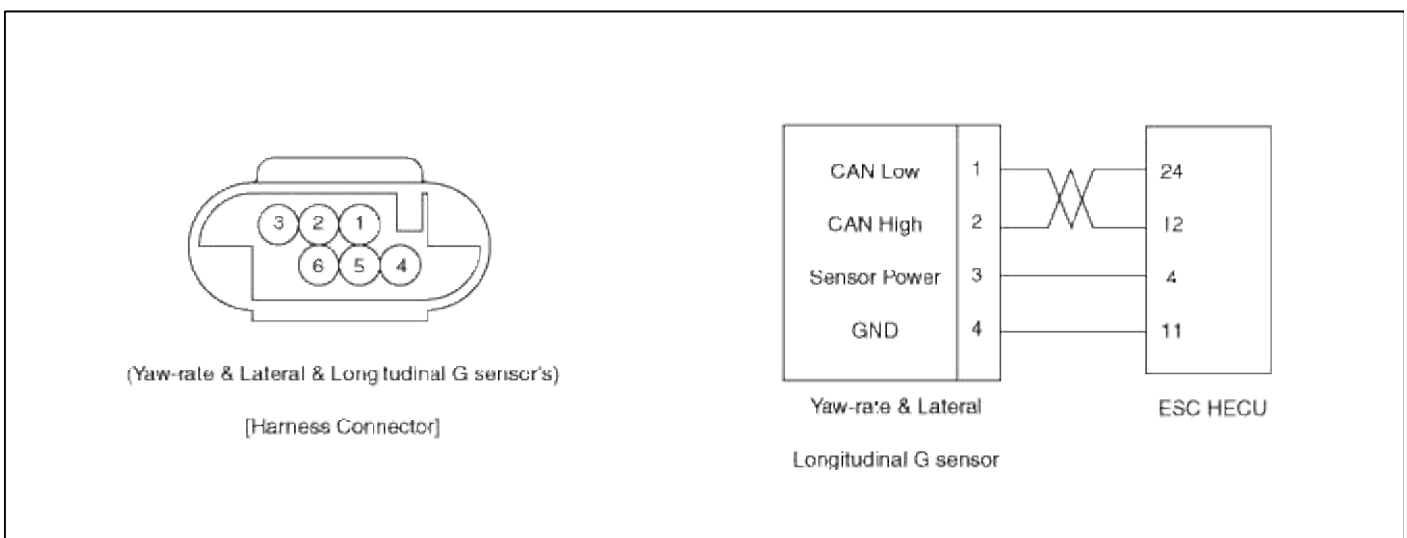

Brake System > ESC(Electronic Stability Control) System > Yaw-rate and Lateral G Sensor > Repair procedures


Removal

1. Turn ignition switch OFF and disconnect the negative (-) battery cable.
2. Remove the floor console.
(Refer to Body group - "Console")
3. Disconnect the yaw rate & lateral G sensor connector.

4. Remove the mounting bolts (A).

Tightening torque:

7.9 ~ 10.8 N.m (0.8 ~ 1.1 kgf.m, 5.8 ~ 8.0 lb-ft)

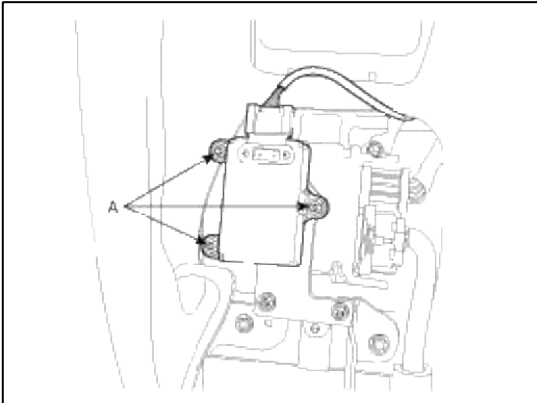

5. Installation is the reverse of removal.

Brake System > ESC(Electronic Stability Control) System > ESP OFF Switch > Description and Operation


Description

1. The ESC OFF switch is for the user to turn off the ESC system.
2. The ESC OFF lamp is on when ESC OFF switch is engaged.

Brake System > ESC(Electronic Stability Control) System > ESP OFF Switch > Repair procedures

Inspection

1. Turn ignition switch OFF and disconnect the negative (-) battery cable.
2. Remove the crash pad side cover.
(Refer to Body group - "Crash pad")
3. Remove the crash pad lower panel.
(Refer to Body group - "Crash pad")
4. Remove the lower crash pad switch assembly by using the scraper and then disconnect the connectors.

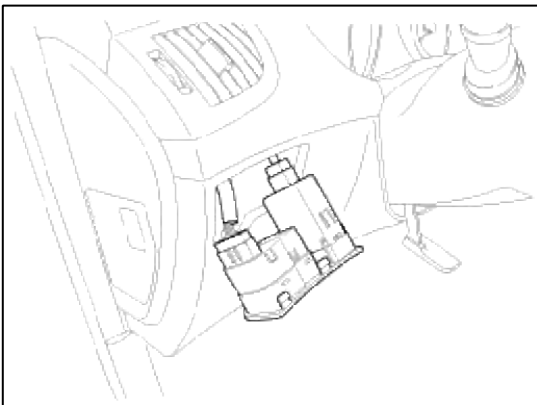

5. Check the continuity between the switch terminals as the ESC OFF switch is engaged.

Terminal Position	1	4	2	5
ON	○	○	○	○
OFF			○	○

The diagram shows the continuity between terminals 1 and 4 when the switch is ON, and between terminals 2 and 5 when the switch is OFF.


Brake System > ESC(Electronic Stability Control) System > Steering Wheel Angle Sensor > Description and Operation

Description

The steering angle sensor detects the angle of the steering wheel in order to which direction a user chooses. The sensor is detached on the MPS(Mutil-Function Switch) under the steering wheel.

Measuring principle


The split of the steering angle sensor detects a steering angle of the steering wheel by a ON/OFF pulse caused by whether or not the LED lights go through the hole of the split, rotating as the steering wheel revolves. There are three LEDs, two(ST1, ST2) for detecting a steering direction, and the other for the neutral position. The HECU calculates the steering angle by the pulse from the steering angle sensor.

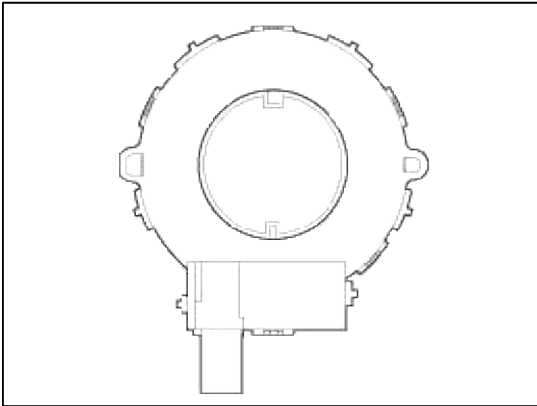


Specification

Description	Specification
Operating voltage	8 ~ 16 V
Operating temperature	-30 ~ 75 °C
Current consumption	Max.100 mA
Steering angle velocity	Max. ± 1500 °/sec

Circuit diagram(Steering wheel angle sensor)

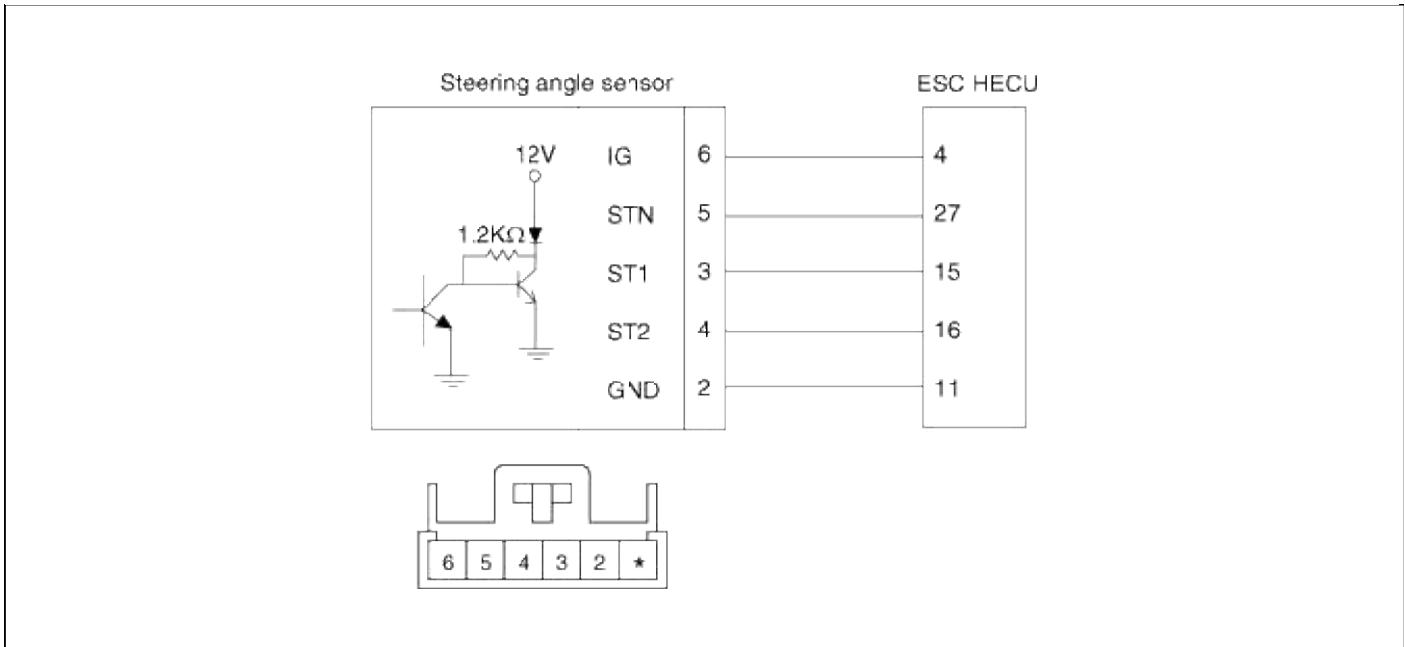

Output characteristic

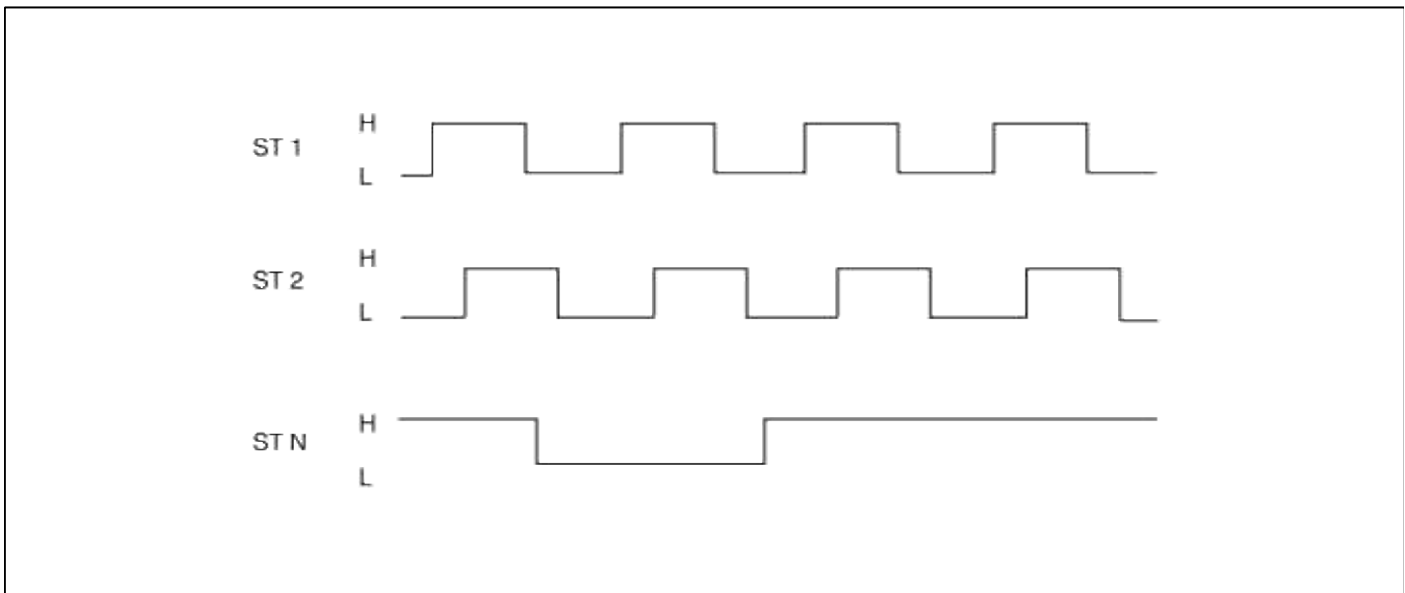

No.	Input		Output	Steering direction	Remark
1	ST1	L	L	Right	
	ST2	L	H		
	ST1	L	H	Left	
	ST2	L	L		
2	ST1	L	L	Left	
	ST1	H	L		
	ST1	L	H	Right	
	ST2	H	H		
3	ST1	H	H	Left	
	ST2	L	H		

3	ST1	H	L	Right	
	ST2	L	L		
4	ST1	H	H	Right	
	ST2	H	L		
	ST1	H	L	Left	
	ST2	H	H		

GENESIS COUPE(BK) > 2013 > G 3.8 GDI > Clutch System

Clutch System > General Information > Specifications

Specifications

Items		Specification	
Engine type		Gasoline 2.0 TCI	Gasoline 3.8 MPI/GDI
Transmission type		M6VR2	M6VR2
Clutch operation method		Hydraulic type	
Clutch disc	Type	Single dry with diaphragm	
	Facing diameter (outside x inside)mm (in)	Ø240 × 155 (Ø9.44 × 6.10)	
Clutch cover assembly		Diaphragm spring strap	
Clutch master cylinder * I.D. mm (in)		15.87 (0.6248)	

* I.D: Inside diameter

Service Standard

Items	Standard value
Clutch pedal height [Without carpet]	196.7mm (7.75in)
Clutch pedal free play	6 ~ 13mm (0.24 ~ 0.51in)
Clutch disc thickness [When free]	8.4 ± 0.3mm (0.33 ± 0.012in)
Clutch pedal stroke	130.7mm (5.14in)
Clutch disc rivet sink	0.3mm (0.012in)
Diaphragm spring end height difference	0.5mm (0.019in)
Clutch master cylinder clearance to piston	0.15mm (0.006in)

Tightening Torques


Items		kgf.m	lb-ft
Clutch pedal assembly	13 ~ 16	1.3 ~ 1.6	9.4 ~ 11.6
Clutch pedal Ignition lock switch nut	8 ~ 10	0.8 ~ 1.0	5.8 ~ 7.2
Clutch disc cover assembly	25 ~ 36	2.5 ~ 3.6	18.1~ 26.0

Lubricants

Items	Specified lubricants	Quantity
Inner surface of clutch disc spline	CASMOLY L9508	As required
Inner surface of clutch master cylinder and outer circumference of piston assembly	Brake fluid DOT 3 or DOT 4	As required
Clutch master cylinder push rod, clevis pin and washer	Wheel bearing grease SAE J310, NLGI No.2V	As required
Clutch pedal shaft and bushings	Chassis grease SAE J310a, NLGI No.1	As required

Clutch System > General Information > Special Service Tools

Special Service Tools

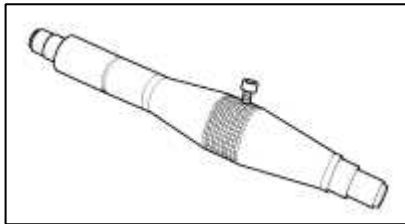Tool (Number and name)	Illustration	Use
09411-1P000 Clutch disc guide		Installation of the clutch disc.

Clutch System > General Information > Troubleshooting

Troubleshooting

Trouble symptom		Suspect area	Remedy
Clutch slipping <ul style="list-style-type: none"> • Car will not respond to engine speed during acceleration • Insufficient vehicle speed • Lack of power during uphill driving 	Insufficient pedal free play	Adjust	
	Clogged hydraulic system	Correct or replace parts	
	Excessive wear of clutch disc facing	Replace	
	Hardened clutch disc facing, or oil on surface	Replace	
	Damaged pressure plate or flywheel	Replace	
	Weak or broken pressure spring	Replace	
Difficult gear shifting (gear noise during shifting)	Excessive pedal free play	Adjust	
	Hydraulic system fluid leaks, air trapping or clogging	Repair or replace parts	
	Unusual wear or corrosion of the clutch disc spline	Replace	
	Excessive vibration (distortion) of the clutch disc	Replace	
Clutch noisy	When the clutch is not used	Insufficient play of the clutch pedal	Adjust
		Excessive wear of the clutch disc facing	Replace

A noise is heard when the clutch is disengaged	Insufficient grease on the sliding surface of the bearing sleeve	Repair
	Improperly installed clutch assembly	Repair
A noise is heard when the car suddenly rolled up with the clutch partially engaged	Damaged pilot bushing	Replace
Hard pedal effort	Insufficient lubrication of the clutch pedal	Repair
	Insufficient lubrication of the spline part of clutch disc	Repair
Hard to shift or will not shift	Excessive clutch pedal free play	Adjust the pedal free play
	Clutch disc out of place, runout is excessive or lining broken	Inspect the clutch disc
	Spline on the input shaft or clutch disc dirty or burned	Repair as necessary
	Faulty of the clutch pressure plate	Replace the clutch cover
Clutch slips	Insufficient clutch pedal free play	Adjust the pedal free play
	Clogged of the hydraulic system	Repair or replace parts
	Clutch disc lining oily or worn out	Inspect the clutch disc
	Faulty pressure plate	Replace the clutch cover
Clutch grabs/chatters	Clutch disc lining oily or worn out	Inspect the clutch disc
	Faulty the pressure plate	Replace the clutch cover
	Bent clutch diaphragm spring	Replace the clutch cover
	Worn or broken torsion spring	Replace the clutch disc
	Engine mounts loose	Repair as necessary
Clutch noisy	Damaged the clutch pedal bushing	Replace the clutch pedal bushing
	Loose part inside housing	Repair as necessary

Clutch System > Clutch System > Repair procedures


Service Adjustment Procedure
Clutch Pedal Inspection And Adjustment

1. Measure the clutch pedal height (from the face of the pedal pad to the floorboard) and the clutch pedal clevis pin play (measured at the face of the pedal pad.)

Standard value

(A) : 6 ~ 13mm (0.24 ~ 0.51in)

(B) : 196.9mm (7.75in)

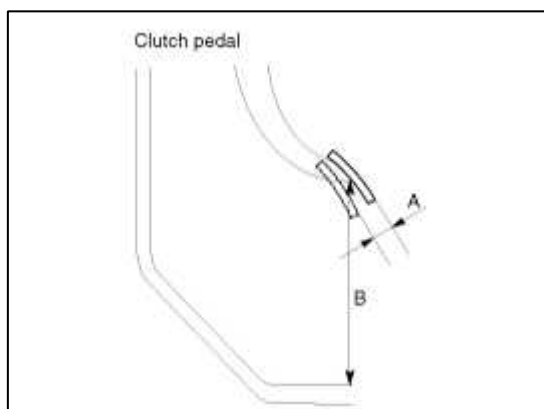


2. If the clutch pedal freeplay and height is not within the standard value range, adjust as follows:

Clutch System > Clutch System > Clutch Cover And Disc > Repair procedures

Removal

1. Remove the transmission assembly.
(Refer to Manual transmission removal in MT group)
2. Insert the special tool (09411-1P000) in the clutch disc to prevent the disc from shifting.

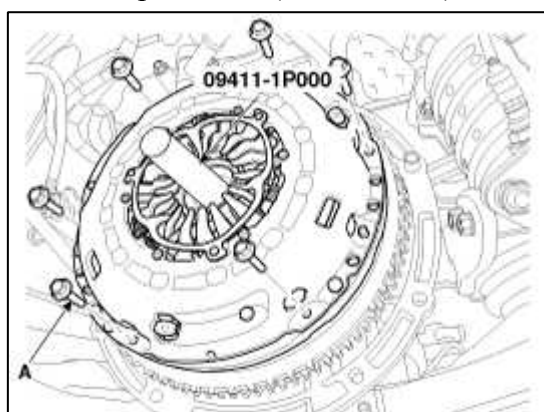

3. Loosen the bolts(6ea) which attach the clutch cover to the flywheel in a star pattern.
Loosen the bolts in succession, one or two turns at a time, to avoid bending the cover.

NOTE

Do not clean the clutch disc or the release bearing with cleaning solvent.

Inspection

Clutch Disc Cover Assembly

1. Check the diaphragm spring end for wear and uneven height.
2. Check the pressure plate surface for wear, cracks and color change.
3. Check the rivets for looseness and replace the clutch cover assembly if necessary.

Clutch Disc

1. Check the clutch facing for loose rivets, uneven contact, deterioration due to seizure, adhesion of oil, or grease, and replace the clutch disc if defective.

2. Measure the thickness of the disc when free.


Standard value

Clutch disc thickness (A) [when free] :

$8.4 \pm 0.3\text{mm}$ [$0.33 \pm 0.012\text{in}$]

Limit :

Clutch disc rivet depth (B) : 0.3mm [0.012in]

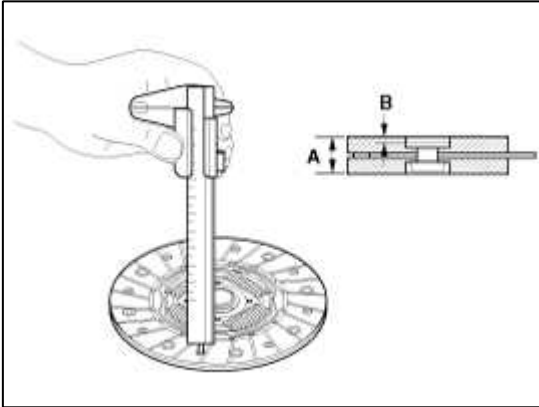

3. Check for the torsion spring play and damage and if defective, replace the clutch disc.

4. Clean the splines on the input shaft and install the clutch disc.

If the disc does not slide smoothly or if play is excessive, replace the clutch disc and/or the input shaft.

Clutch Release Bearing

CAUTION

The release bearing is packed with grease. Do not use cleaning solvent or oil.

Standard grease : CASMOLY L9508

1. Check the bearing for seizure, damage or abnormal noise. Also check the diaphragm spring contacting points for wear.

2. Replace the bearing if the release fork contacting points are worn abnormally.

Clutch Release Fork

If there is abnormal wear at the point of contact with the bearing, replace the release fork assembly.

Installation


1. Apply multipurpose grease to the spline of the disc.

Grease : CASMOLY L 9508

CAUTION

When installing the clutch, apply grease to each part, but be careful not to apply excessive grease.

It can cause clutch slippage and vibration (judder).

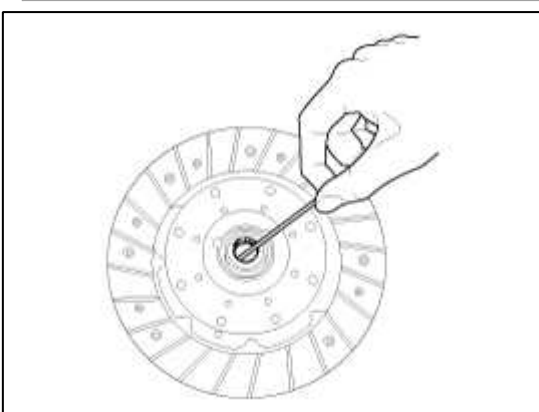


2. Install the clutch disc assembly to the flywheel using the special tool (09411-1P000).

3. Install the clutch cover assembly to the flywheel and temporarily tighten the bolts one or two steps at a time in a star pattern.

Tightening torque :

Clutch disc cover bolt :


25 ~ 36Nm (2.5 ~ 3.6kgf.m, 18.1 ~ 26.0lb-ft)

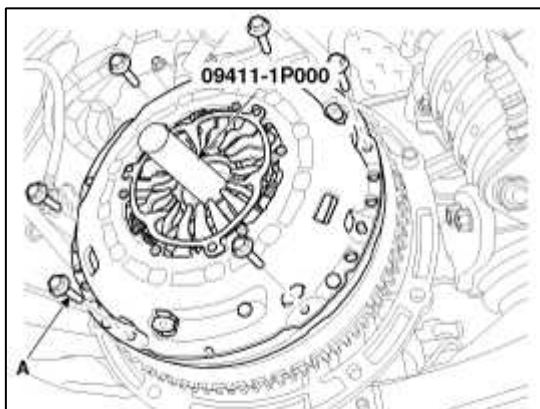

4. Remove the clutch disc guide (09411-1P000).
5. Install the transmission assembly to the engine. (Refer to Manual transmission installation in MT group)

Clutch System > Clutch System > Clutch Master Cylinder > Components and Components Location

Components

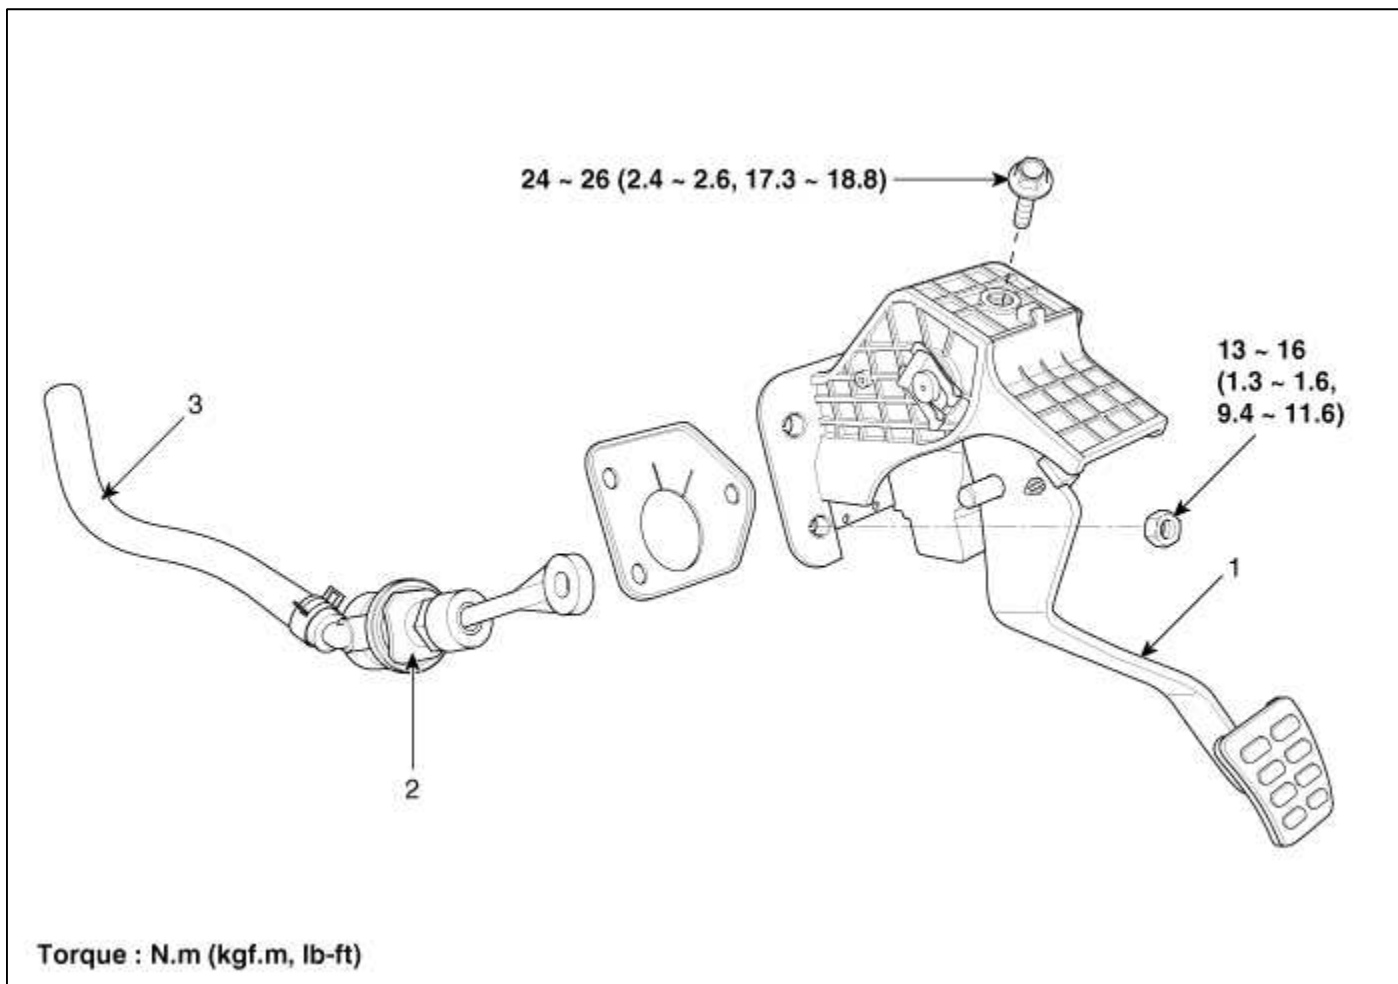


1. Clutch pedal assembly	3. Clutch fluid hose assembly
2. Clutch master cylinder assembly	


Clutch System > Clutch System > Clutch Master Cylinder > Repair procedures

Removal


1. Remove the flexible hose (A) from the brake reserve tank.

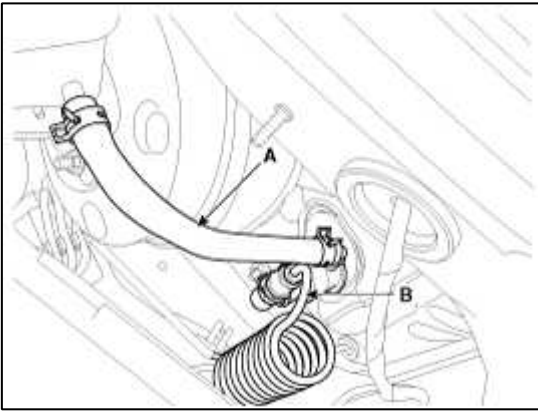


2. After pulling out a clip, disconnect the clutch tube (B) from the master cylinder.
3. Disconnect the ignition lock switch connector (A).

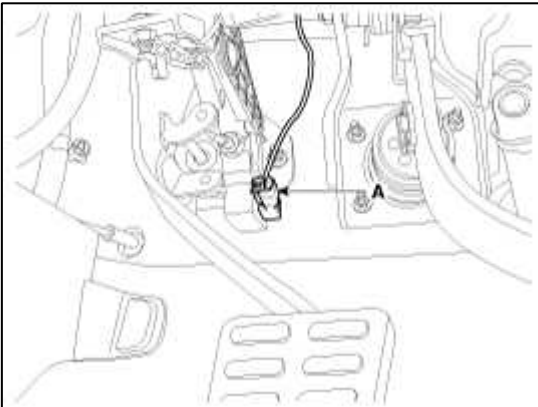

4. Remove the push rod from the clutch pedal by removing the snap pin (A) and washer (B).

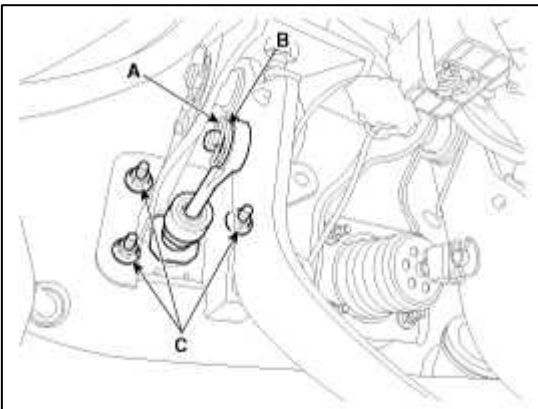

5. Remove the clutch pedal mounting nut (C-3ea).
6. Remove the clutch pedal bracket mounting nut (A-2ea).

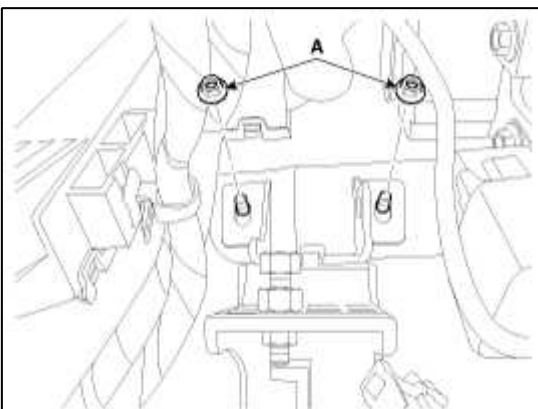

7. Remove the clutch master cylinder from the clutch pedal assembly by rotating the clutch master cylinder 45 degree counter clockwise.

Inspection

1. Check the inside of the cylinder body for rust, pitting or scoring.
2. Check the piston cup for wear or distortion.
3. Check the piston for rust, pitting or scoring.
4. Check to make sure the clutch line tube is not clogged or restricted in any way.

5. Measure the master cylinder inside diameter and the piston outside diameter with a cylinder gauge micrometer.

NOTE

Measure the inside diameter of the master cylinder at three places (bottom, middle, and top) in a perpendicular direction.

6. If the master cylinder-to-piston clearance exceeds the limit, replace the master cylinder and/or piston assembly.


Limit : 0.15 mm (0.006 in)

Installation

1. Install the clutch master cylinder to the clutch pedal assembly by rotating the clutch master cylinder 45 degree clockwise.
2. Install the clutch pedal bracket mounting nut (A-2ea).

Tightening torque :


13 ~ 16 N.m (1.3 ~ 1.6 kgf.m, 9.4 ~ 11.6 lb-ft)

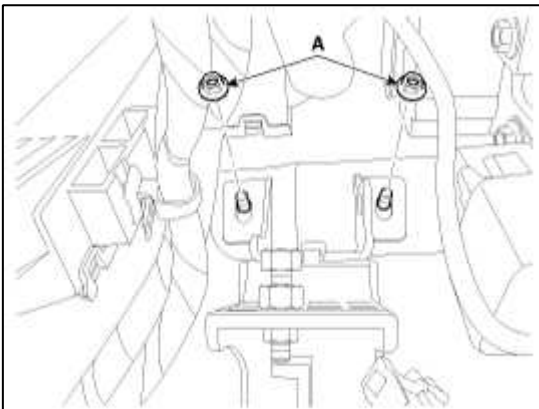

3. Install the clutch pedal mounting nut (C-3ea).

Tightening torque :


13 ~ 16 N.m (1.3 ~ 1.6 kgf.m, 9.4 ~ 11.6 lb-ft)

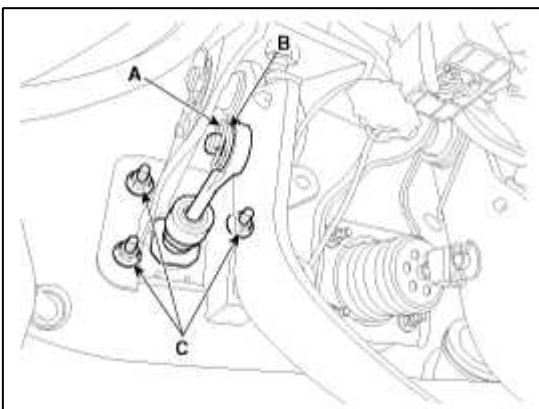


4. Install the push rod to the clutch pedal by installing the snap pin (A) and washer (B).

Wheel bearing grease : SAE J310, NLGI No.2

5. Connect the ignition lock switch connector (A).

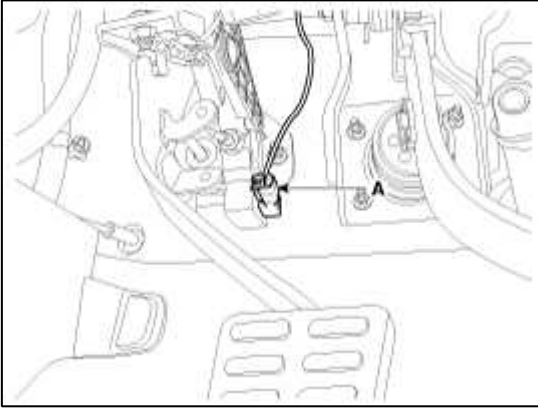

6. Install the flexible hose (A) to the brake reserve tank.

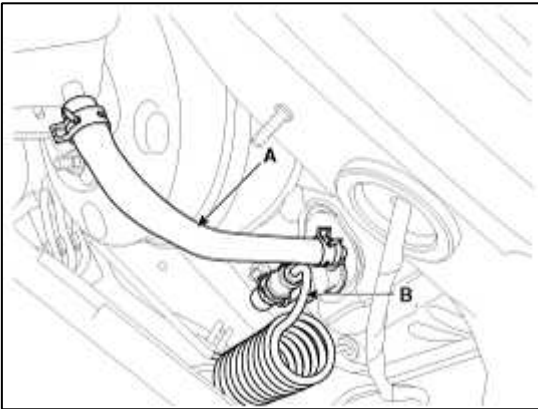

7. Connect the clutch tube (B) to the master cylinder and insert a clip.


8. Refill the brake fluid.

9. Bleed the air in the clutch system.

(Refer to bleeding in service adjustment procedure)

Clutch System > Clutch System > Clutch Pedal > Components and Components Location

Components

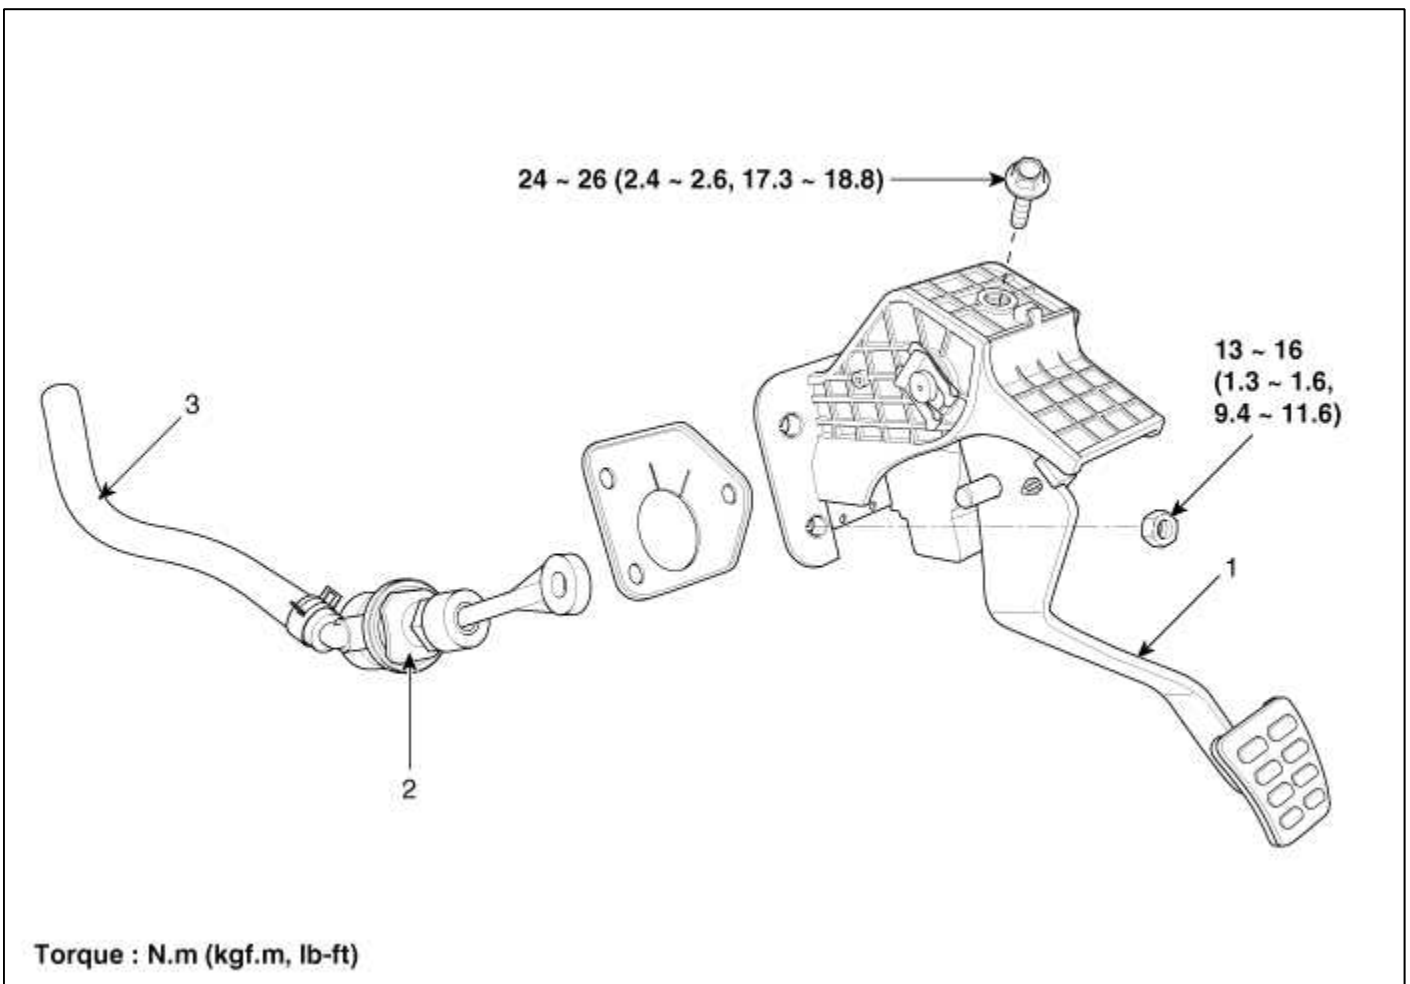


1. Clutch pedal assembly	3. Clutch fluid hose assembly
2. Clutch master cylinder assembly	


Clutch System > Clutch System > Clutch Pedal > Repair procedures

Removal


1. Remove the flexible hose (A) from the brake reserve tank.

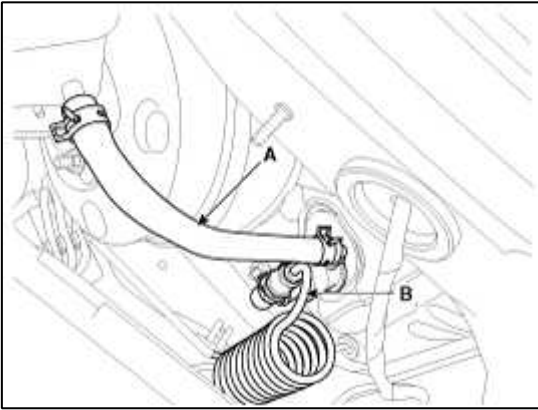


2. After pulling out a clip, disconnect the clutch tube (B) from the master cylinder.
3. Disconnect the ignition lock switch connector (A).

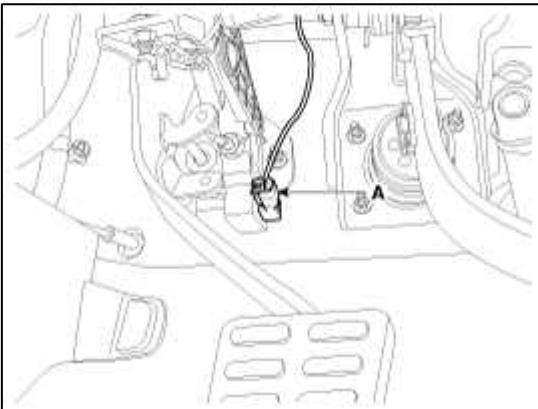

4. Remove the push rod from the clutch pedal by removing the snap pin (A) and washer (B).

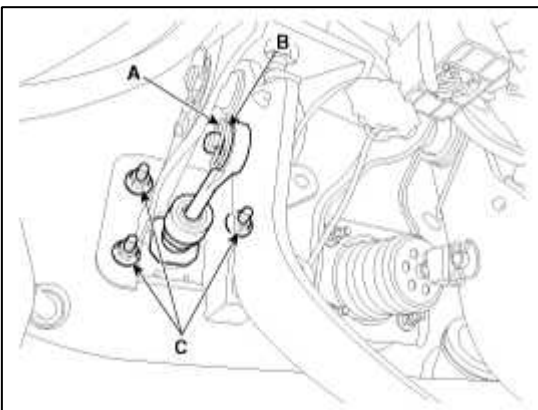

5. Remove the clutch pedal mounting nut (C-3ea).
6. Remove the clutch pedal bracket mounting nut (A-2ea).

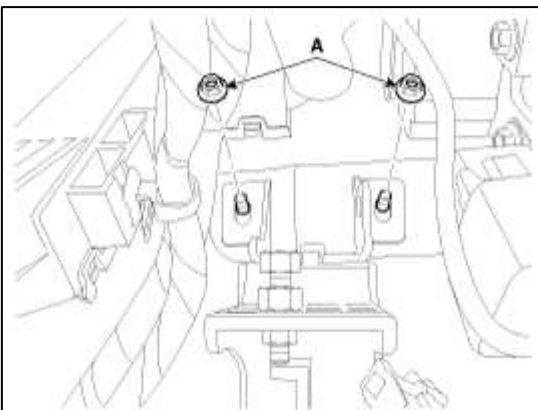

- Remove the clutch master cylinder from the clutch pedal assembly by rotating the clutch master cylinder 45 degree counter clockwise.

Inspection

Clutch Pedal Assembly

- Check the pedal shaft and bushing for wear.
- Check the clutch pedal for bending or torsion.
- Check the return spring for damage or deterioration.
- Check the pedal pad for damage or wear.

Ignition lock switch inspection


Remove the ignition lock switch and check for continuity between the terminals. If the continuity is not as specified, replace the switch.

Terminal	1	2
Condition		
Pushed(ON)	○ ————— ○	
Free(OFF)		

Standard value

Full stroke(A) : $12.0 \pm 0.3\text{mm}$ (0.472 ± 0.012 in.)

ON-OFF point (B) : $2.0 \pm 0.3\text{mm}$ (0.078 ± 0.012 in)

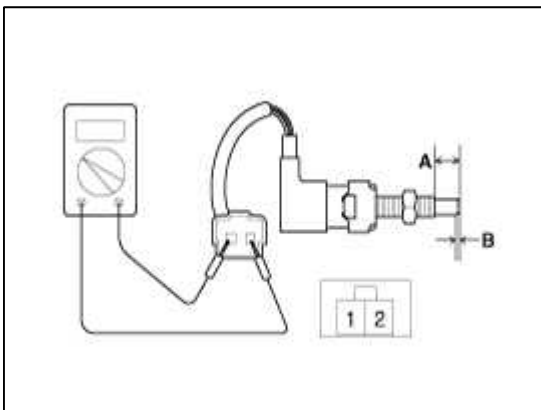


Installation

- Install the clutch master cylinder to the clutch pedal assembly by rotating the clutch master cylinder 45 degree clockwise.
- Install the clutch pedal bracket mounting nut (A-2ea).

Tightening torque :


13 ~ 16 N.m (1.3 ~ 1.6 kgf.m, 9.4 ~ 11.6 lb-ft)

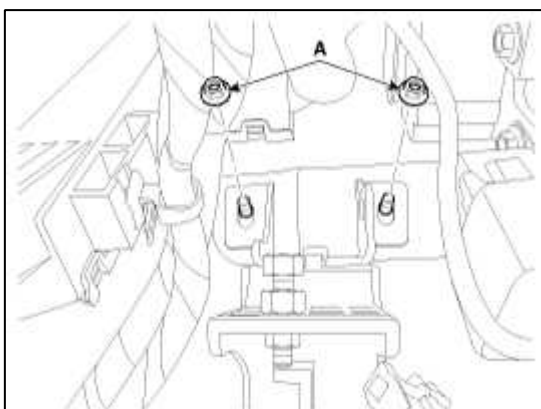

3. Install the clutch pedal mounting nut (C-3ea).

Tightening torque :


13 ~ 16 N.m (1.3 ~ 1.6 kgf.m, 9.4 ~ 11.6 lb-ft)

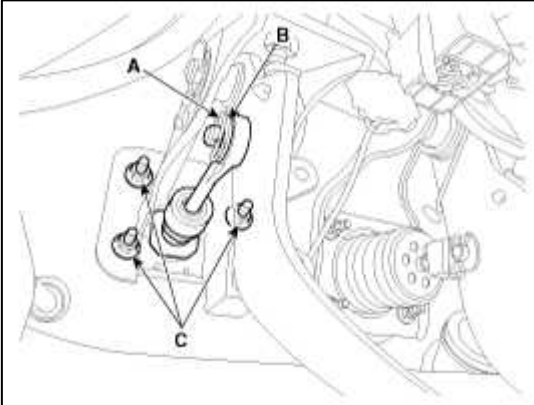


4. Install the push rod to the clutch pedal by installing the snap pin (A) and washer (B).

Wheel bearing grease : SAE J310, NLGI No.2

5. Connect the ignition lock switch connector (A).

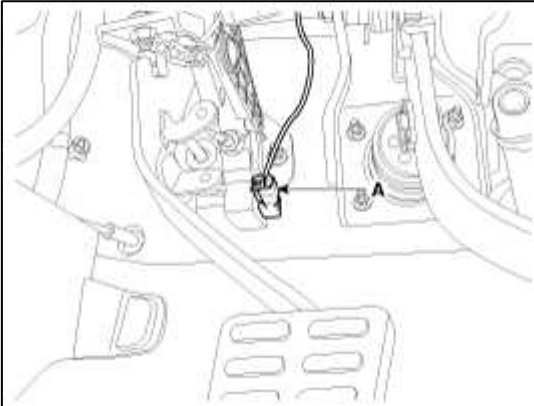


6. Install the flexible hose (A) to the brake reserve tank.

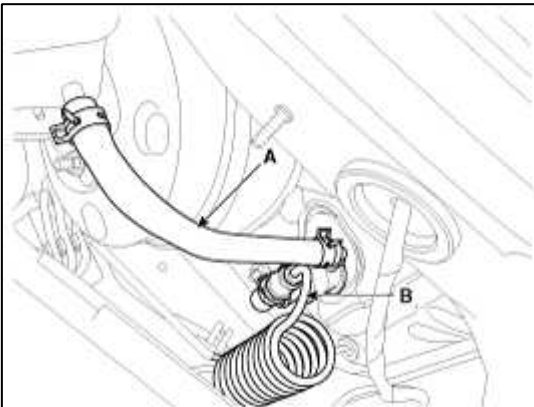

7. Connect the clutch tube (B) to the master cylinder and insert a clip.
 8. Refill the brake fluid.
 9. Bleed the air in the clutch system.
 (Refer to bleeding in service adjustment procedure)

Clutch System > Clutch System > Concentric Slave Cylinder Assembly > Components and Components Location

Components

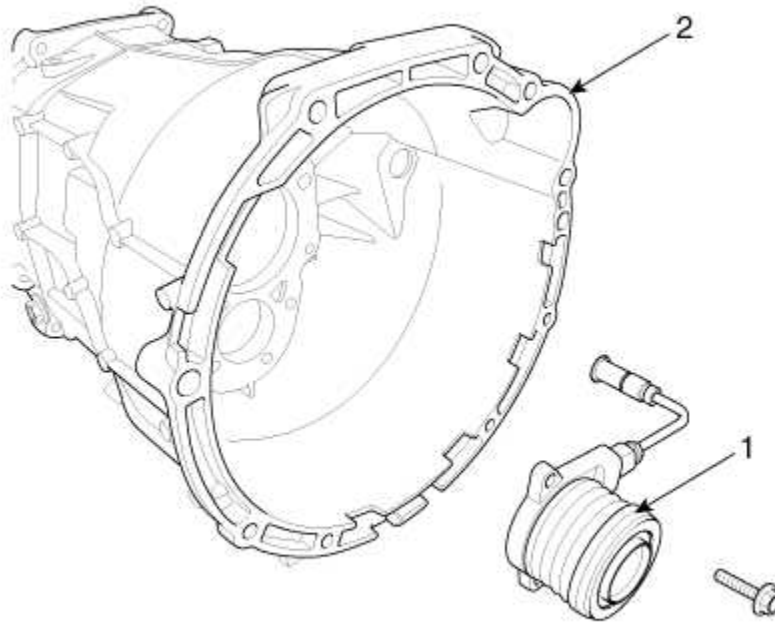


1. C.S.C (Concentric Slave Cylinder) assembly

2. Manual transaxle case

Clutch System > Clutch System > Concentric Slave Cylinder Assembly > Repair procedures


Removal

1. Remove the transaxle assembly.
(Refer to Manual transaxle removal in MT group)
2. Remove the C.S.C assembly (B) from the transaxle case by removing bolts (A-3ea).

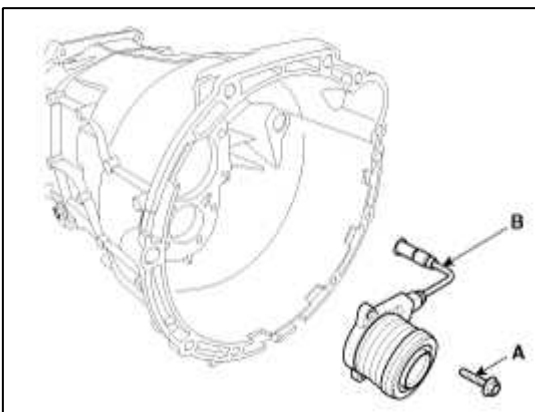

Installation

1. Install the C.S.C assembly (B) to the transaxle case by installing bolts (A-3ea).

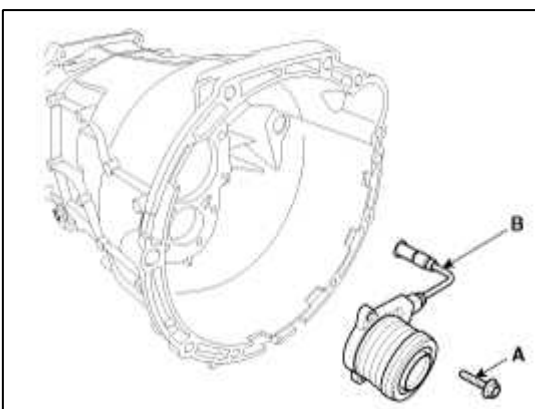

2. Install the transaxle assembly.
(Refer to Manual transaxle installation in MT group)
3. Bleed the air in the C.S.C system.
(Refer to C.S.C Adjustment Procedure)

C.S.C Adjustment Procedure

C.S.C(Concentric Slave Cylinder) Air Bleeding

1. After disconnecting a cap from the concentric slave cylinder air bleeder, insert a vinyl hose in the plug.
2. Loosening the plug screw, press and release the clutch pedal about 10 times.

CAUTION


Hold the air bleeder body not to rotate with a spanner.
The holding is needed when the plug loosened or tightened.

3. Tighten the plug during the clutch pedal pressed.
Afterwards, raise the pedal with a hand.

Tightening torque :

8 ~ 10 Nm (0.8 ~ 1.0 kgf.m, 2.8 ~ 7.2 lb-ft)

4. After pressing the clutch pedal 3 times more, loosen the plug and retighten it with the pedal pressed. Raise it again, then.
5. Repeat the step 4 two or three times. (until there is no bubble in the fluid)

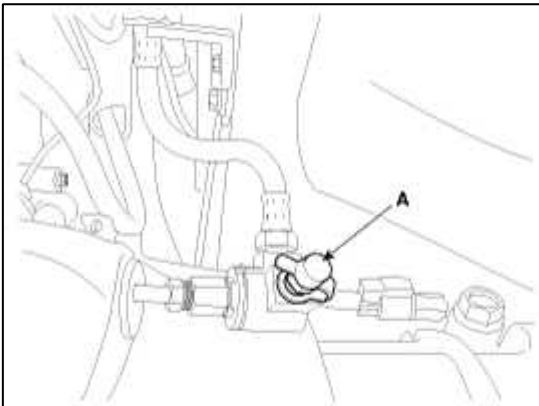

GENESIS COUPE(BK) > 2013 > G 3.8 GDI > Driveshaft and axle

Driveshaft and axle > General Information > Specifications

Specification

Items		Inner side		Outer side	
Rear drive shaft	Joint type	TSJ		BJ	
	Max. permissible angle	28.5°		15°	
	Backlash	M/T : 0.4° below A/T : 0.4° below			
Differential	Oil type	Hypoid gear oil, MS 517-15 GT (API GL-5, SAE 75W/90)			
	Oil capacity (L)	About 1.4L ± 0.05L			
	Reduction gear type	Hypoid gear			
	Reduction gear ratio	Theta 2.0 T-MPI AT	Theta 2.0 T-MPI MT	Lambda 3.8 GDI AT	Lambda 3.8 GDI MT
		4.181	3.538	4.181	3.538
	Differential gear backlash mm(in.)	0.10 ~ 0.15mm (0.0039 ~ 0.0059 in.)			

Tightening Torque

Items		Nm	Kgf.m	lb-ft
Front	Wheel nut	88.3 ~ 107.9	9.0 ~ 11.0	65.1 ~ 79.6
	Strut assembly lower mounting bolt	137.2 ~ 160	14.0 ~ 16.0	101.1 ~ 115.7
	Break caliper mounting bolt	49 ~ 58.8	5.0 ~ 6.0	36.1 ~ 43.3
	Wheel speed sensor mounting bolt	6.9 ~ 10.8	0.7 ~ 1.1	5.1 ~ 8.0
	Break disc mounting screw	4.9 ~ 5.9	0.5 ~ 0.6	3.6 ~ 4.3
	Hub assembly mounting bolt	78.5 ~ 98.1	8.0 ~ 10.0	57.9 ~ 72.3
	Lower arm ball joint mounting bolt	98.1 ~ 117.7	10.0 ~ 12.0	72.3 ~ 86.8
	Tie rod end ball joint mounting nut	78.4 ~ 88.2	8.0 ~ 9.0	57.8 ~ 65.0
Rear	Wheel nut	88.3 ~ 107.9	9.0 ~ 11.0	65.0 ~ 75.6
	Driveshaft castle nut	196.1 ~ 255.0	20.0 ~ 26.0	144.7 ~ 188.1
	Shock absorber upper mounting bolt	137.3 ~ 156.9	14.0 ~ 16.0	101.3 ~ 115.7
	Shock absorber upper mounting nut	137.3 ~ 156.9	14.0 ~ 16.0	101.3 ~ 115.7

Break caliper mounting bolt	49.1 ~ 58.8	5.0 ~ 6.0	36.1 ~ 43.4
Wheel speed sensor mounting bolt	6.9 ~ 10.8	0.7 ~ 1.1	5.1 ~ 8.0
Break disc mounting screw	4.9 ~ 5.9	0.5 ~ 0.6	3.6 ~ 4.3
Hub assembly mounting bolt	78.5 ~ 88.3	8.0 ~ 9.0	57.9 ~ 65.1
Upper arm ball joint mounting nut	78.5 ~ 88.3	8.0 ~ 9.0	57.9 ~ 65.1
Lower arm mounting bolt	137.3 ~ 156.9	14.0 ~ 16.0	101.3 ~ 115.7
Assist arm ball joint mounting nut	98.1 ~ 117.7	10.0 ~ 12.0	72.3 ~ 86.8
Trailing arm mounting bolt	98.1 ~ 117.7	10.0 ~ 12.0	72.3 ~ 86.8

CAUTION



Replace self-locking nuts with new ones after removal.





Lubricants

Items		Lubricants	Quantity
Rear driveshaft	BJ	RBA	115 ± 5g
	TSJ	RBA	130 ± 5g

Driveshaft and axle > General Information > Special Service Tools

Special Service Tools

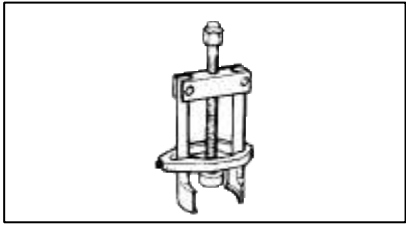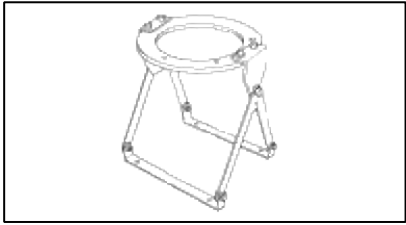Tool(Number and Name)	Illustration	Use
09495-33000 Puller		Removal of spider assembly from a drive shaft.
09517-43401 Working base		Support for the differential carrier

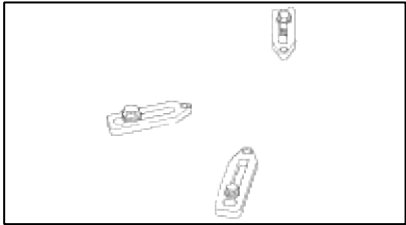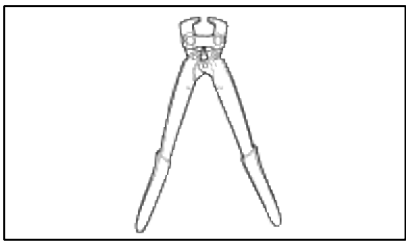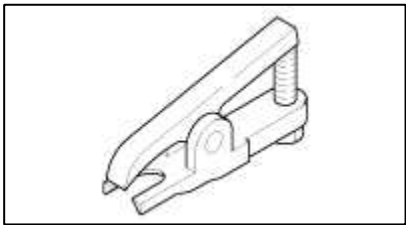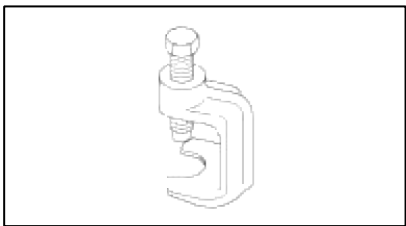09517-43500Adapter		Support for the differential carrier(Use with 09517-43401)
09495-3K000Band installer		Installation of ear type boot band
09568-34000Ball joint remover		Removal of the rear upper arm ball joint
09568-4A000Ball joint remover		Removal of the front lower arm and tie rod end ball joint

Driveshaft and axle > General Information > Troubleshooting


Troubleshooting

Trouble Symptom	Probable cause	Remedy
Vehicle pulls to one side	Scoring of driveshaft ball joint	Replace
	Wear, rattle or scoring of wheel bearing	Replace
	Defective front suspension and steering	Adjustment or Replace
	Tire inflation	Adjustment
	Tire pull, rotate tires	Adjustment
	Front camber/caster value	Adjustment
	Brakes dragging	Adjustment
	Road test on flat road (no crown)	Adjustment
	Etc	Adjustment
Vibration	Wear, damage or bending of driveshaft	Replace
	Driveshaft rattle and hub serration	Replace

	Wear, rattle or scratching of wheel bearing	Replace
Shimmy	Defective wheel balance	Adjustment or Replace
	Defective front suspension and steering	Adjustment or Replace
Excessive noise	Wear, damage or bending of driveshaft	Replace
	Rattle of driveshaft and worn hub splines	Replace
	Wear, rattle or scoring of wheel bearing	Replace
	Loose hub nut	Adjustment or Replace
	Defective front suspension and steering	Adjustment or Replace

Driveshaft and axle > Front Axle Assembly > Front Hub / Knuckle / Tone Wheel > Components and Components Location

Component Locations

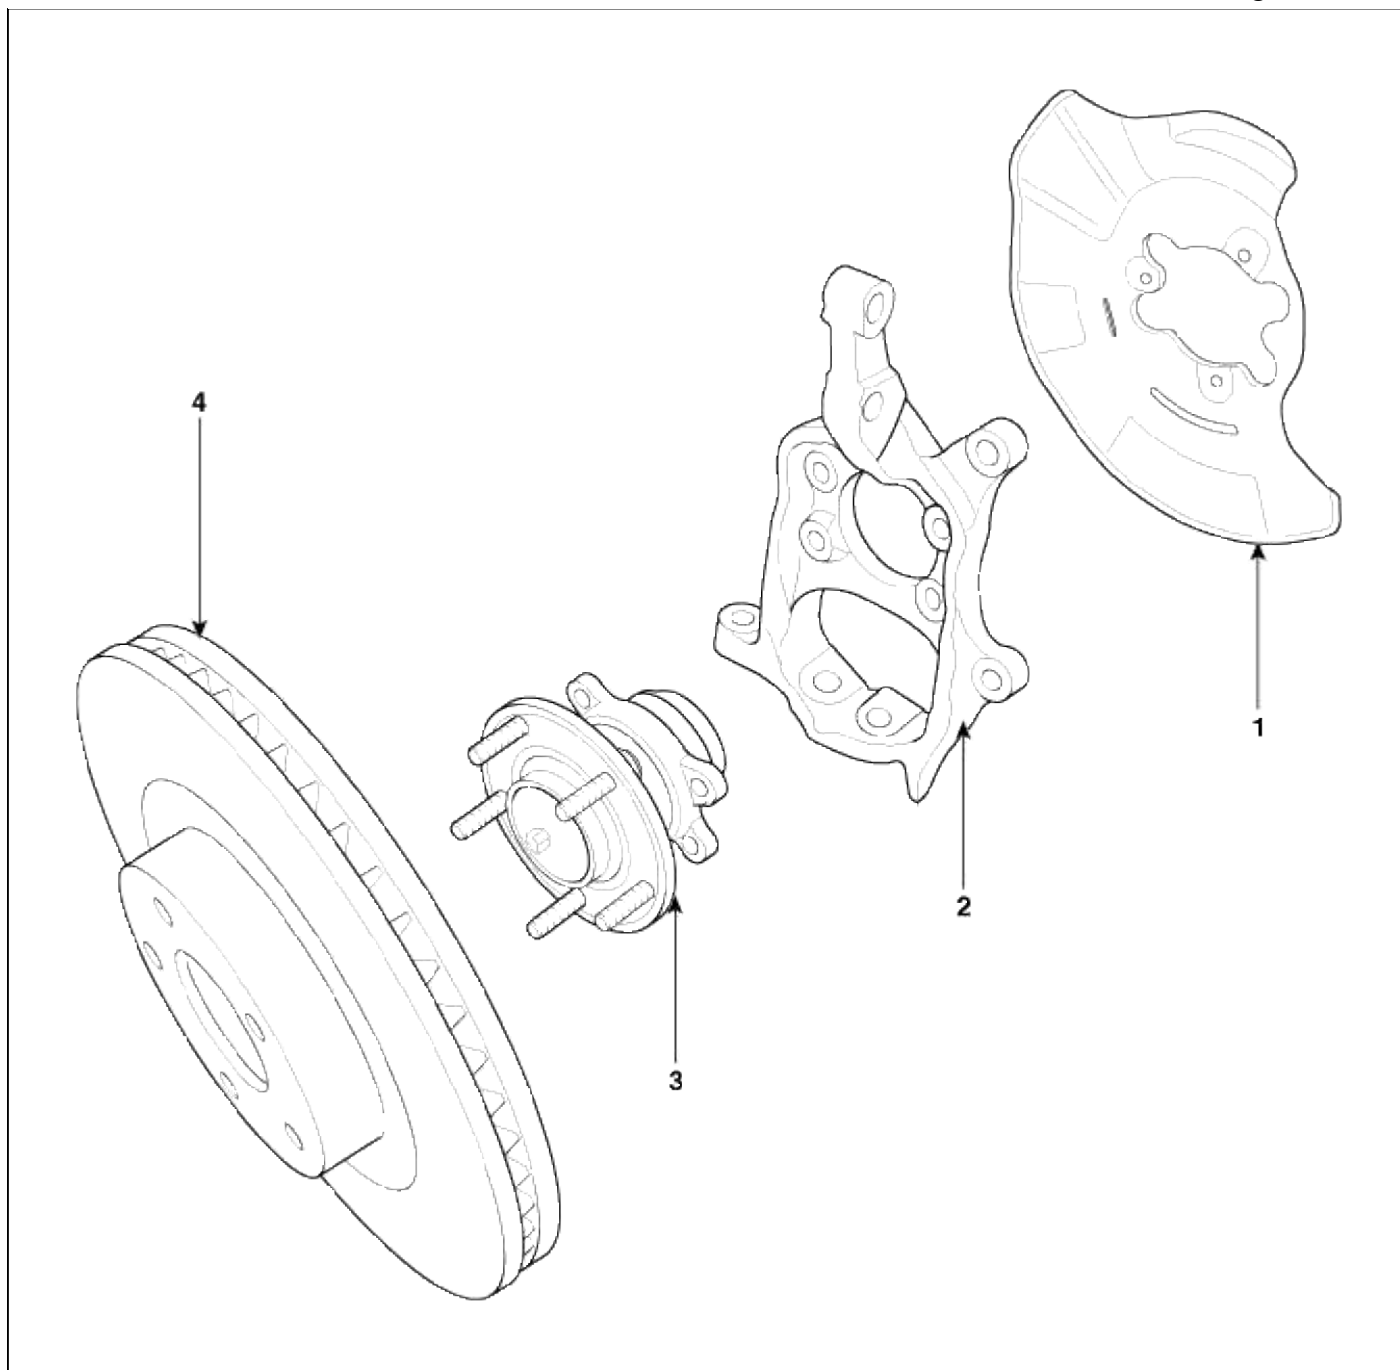

1. Dust cover	3. Hub assembly
2. Knuckle	4. Brake disc

Driveshaft and axle > Front Axle Assembly > Front Hub / Knuckle / Tone Wheel > Repair procedures


Replacement

1. Loosen the wheel nuts slightly. Raise the vehicle, and make sure it is securely supported.

2. Remove the front wheel and tire(A) from front hub .

Tightening torque :

88.3 ~ 107.9 N.m (9.0 ~ 11.0 kgf.m, 65.1 ~ 79.6 lb-ft)

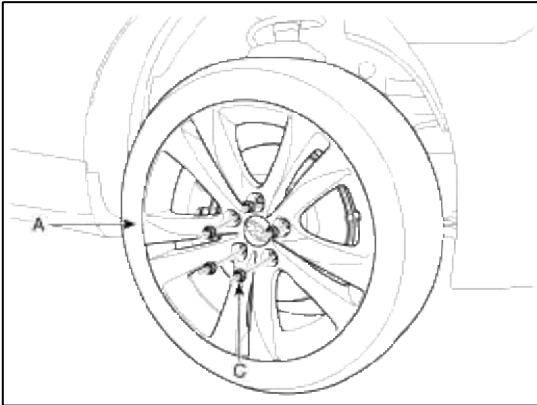
**CAUTION**

Be careful not to damage to the hub bolts when removing the front wheel and tire.

3. Remove the brake caliper mounting bolts (A), and then place the brake caliper assembly (B) with wire.

Tightening torque :

49 ~ 58.8 N.m (5.0 ~ 6.0 kgf.m, 36.1 ~ 43.3 lb-ft)


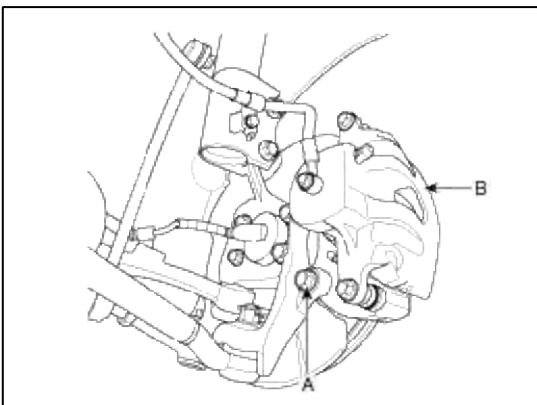


4. Remove the tie rod end ball joint from the knuckle.

- (1) Remove the split pin.
- (2) Remove the castle nut.
- (3) Disconnect the ball joint(A) from knuckle(B) using the special tool (09568-4A000).

Tightening torque :

78.4 ~ 88.2 N.m (8.0 ~ 9.0 kgf.m, 57.8 ~ 65.0 lb-ft)

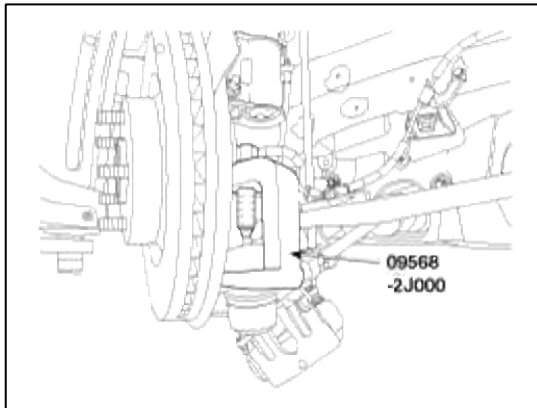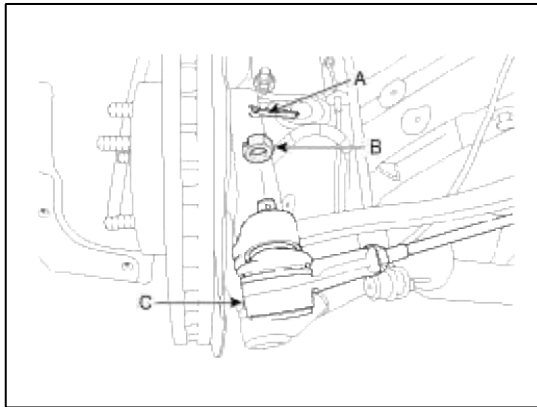**CAUTION**

Apply a few drops of oil to the special tool. (Boot contact part)


5. Loosen the tension arm mount bolt(A), and then remove the tension arm(B).

- (1) Remove the split pin.
- (2) Remove the castle nut.

(3) Disconnect the ball joint(A) from tension arm(B) using the special tool (09568-4A000).

Tightening torque :

78.4 ~ 88.2 N.m (8.0 ~ 9.0 kgf.m, 57.8 ~ 65.0 lb-ft)

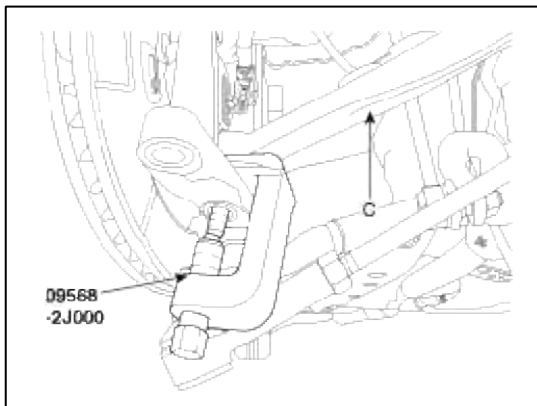


CAUTION


Be careful not to damage the boot and rotor teeth.

6. Loosen the lateral mount nut(A) and then disconnect the lateral arm(B).

Tightening torque :

90 ~ 110 N.m (9.0 ~ 11.0 kgf.m, 65 ~ 79.5 lb-ft)

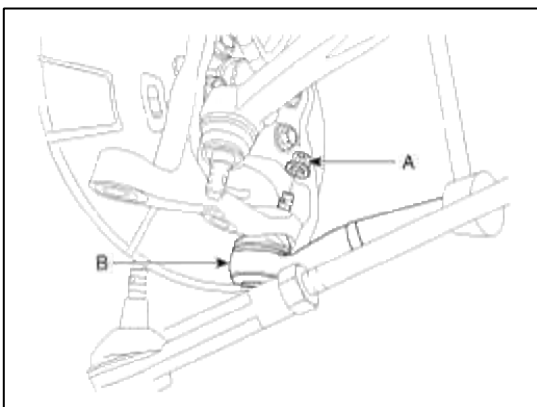


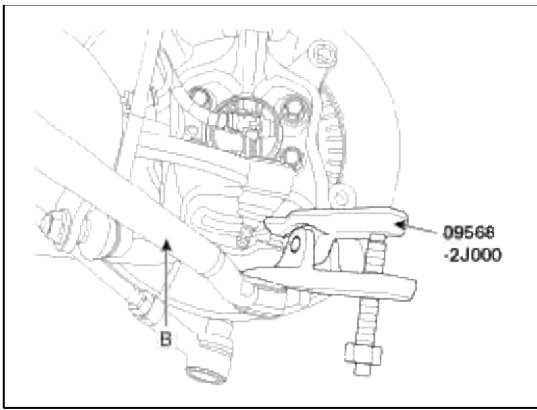


7. Remove the strut mounting bolt and then remove the knuckle assembly(A).

Tightening torque :

6.9 ~ 10.8 N.m (14 ~ 16 kgf.m, 5.1 ~ 8.0 lb-ft)

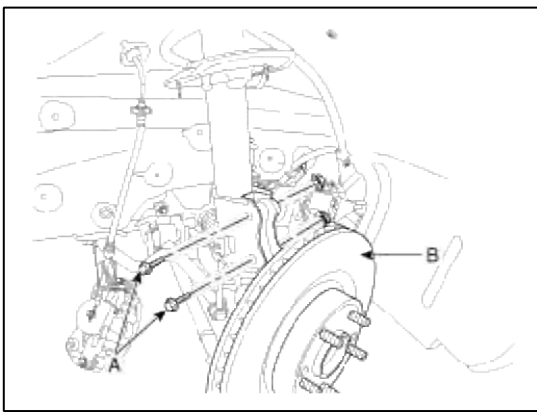


8. Remove the brake disc(A) from knuckle.

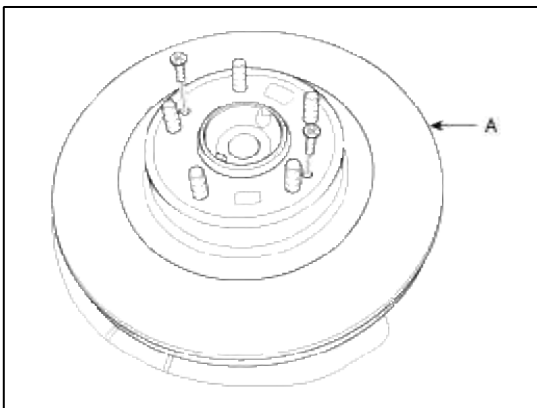


9. Remove the hub assembly(A) from knuckle assembly.

Tightening torque :

80 ~ 100 N.m (8.0 ~ 10.0 kgf.m, 57.8 ~ 72.3 lb-ft)

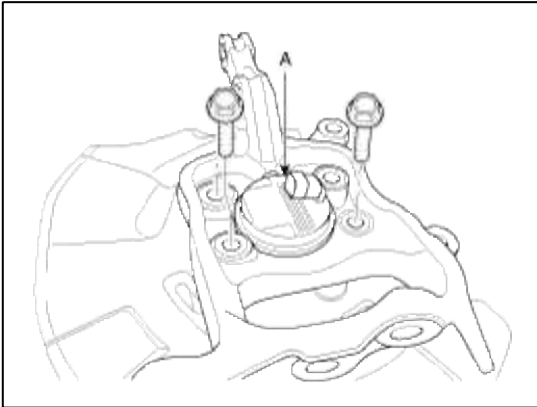

10. Loosen the dust cover mount bolts and then remove the dust cover(B).

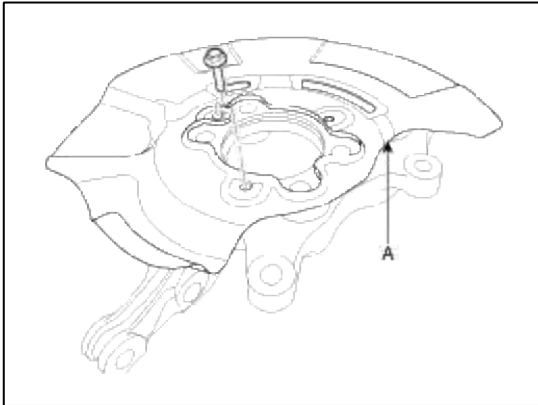


11. Installation is the reverse order of removal.

Inspection

1. Check the hub for cracks and the splines for wear.
2. Check the brake disc for scoring and damage.
3. Check the knuckle for cracks.
4. Check the bearing for cracks or damage.


Driveshaft and axle > Rear Axle Assembly > Rear Hub - Carrier > Components and Components Location

Component Locations

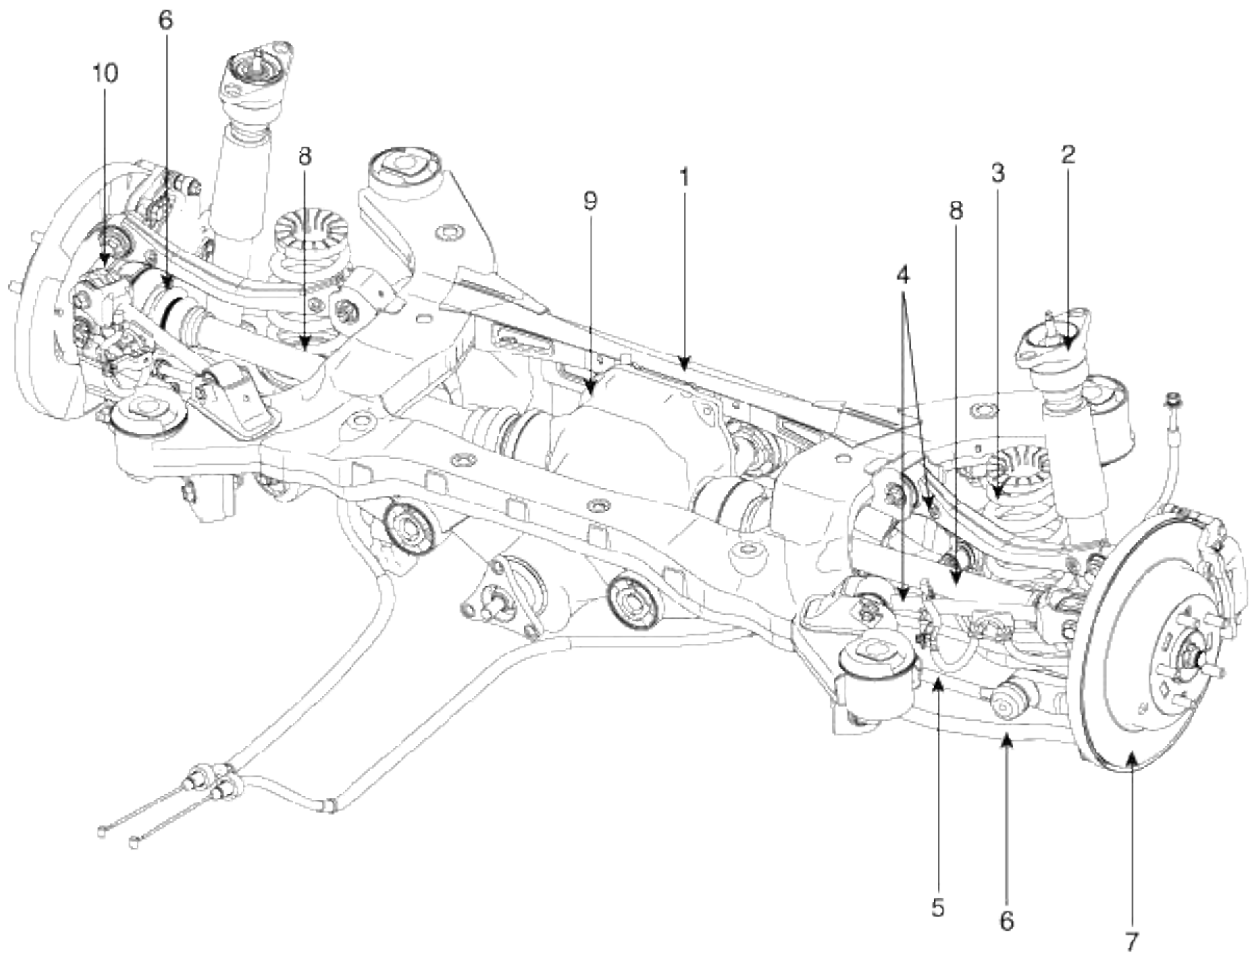

1. Sub frame	6. Trailing arm
2. Rear shock absorber	7. Rear disc
3. Coil spring	8. Rear drive shaft
4. Rear upper arm	9. Differential assembly
5. Assist arm	10. Rear axle

Components

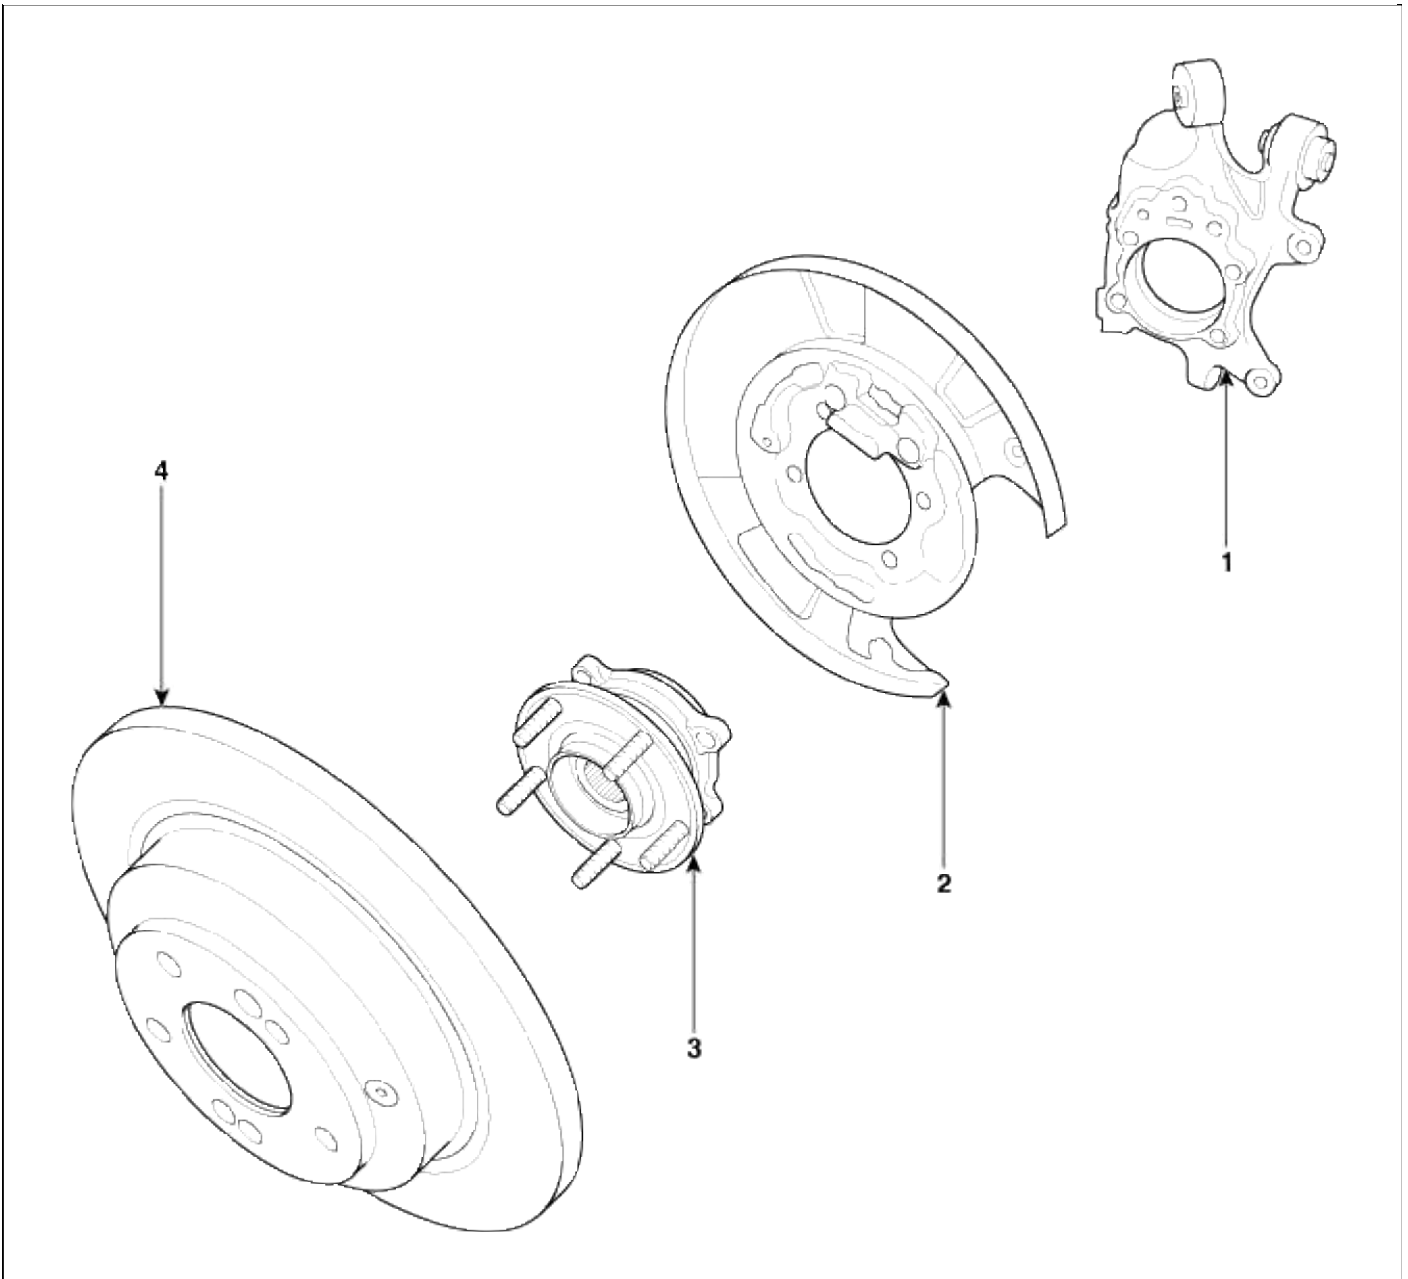

1. Rear carrier assembly	3. Rear hub assembly
2. Rear dust cover	4. Rear brake disc

Driveshaft and axle > Rear Axle Assembly > Rear Hub - Carrier > Repair procedures


Replacement

1. Loosen the wheel nuts slightly. Raise the vehicle, and make sure it is securely supported.

2. Remove the rear wheel and tire(A) from rear hub .

Tightening torque :

88.3 ~ 107.9 N.m (9.0 ~ 11.0 kgf.m, 65.1 ~ 79.6 lb-ft)

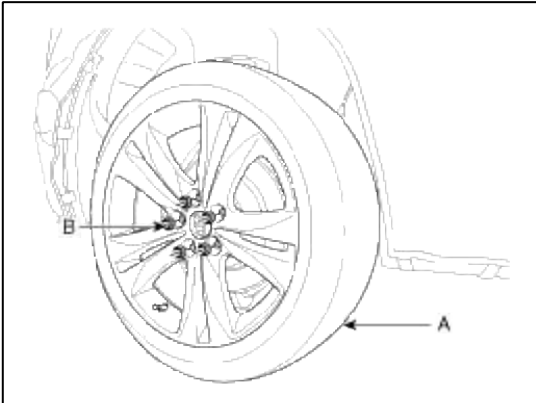
**CAUTION**

Be careful not to damage to the hub bolts when removing the rear wheel and tire.

3. Remove the brake caliper mounting bolts (A), and then place the brake caliper assembly (B) with wire as shown in the illustration.

Tightening torque :


49 ~ 58.8 N.m (5.0 ~ 6.0 kgf.m, 36.1 ~ 43.3 lb-ft)

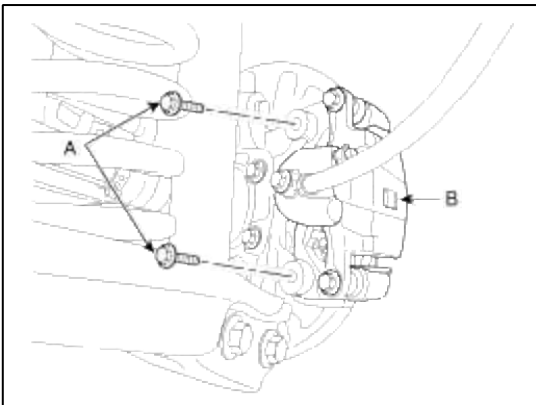

4. Remove the split pin(A), then remove castle nut(B) and washer(C) from the front hub under applying the break.

Tightening torque :


196.1 ~ 255.0 N.m (20.0 ~ 26.0 kgf.m, 144.7 ~ 188.1 lb-ft)

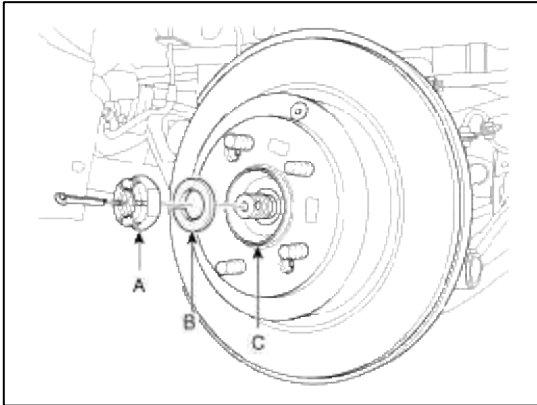

5. Remove the rear break lining. (Refer to BR group-Rear Brake)
 6. Loosen the trailing arm mount bolt & nut and then remove the trailing arm(A).

Tightening torque :


98.1 ~ 117.7 N.m (10.0 ~ 12.0 kgf.m, 72.3 ~ 86.8 lb-ft)

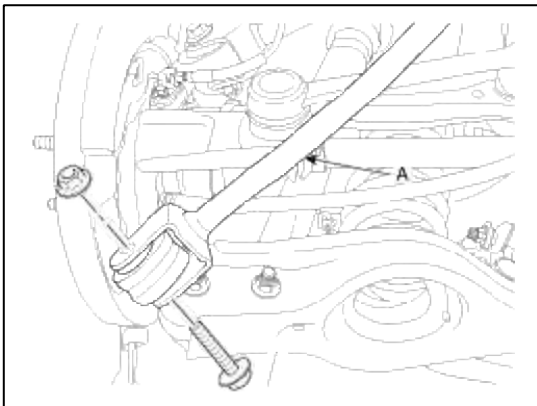


7. Loosen the assist arm mount nut and then disconnect the assist arm(A).

Tightening torque :

98.1 ~ 117.7 N.m (10.0 ~ 12.0 kgf.m, 72.3 ~ 86.8 lb-ft)

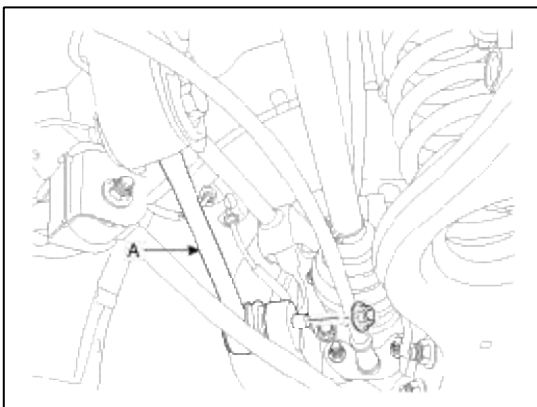


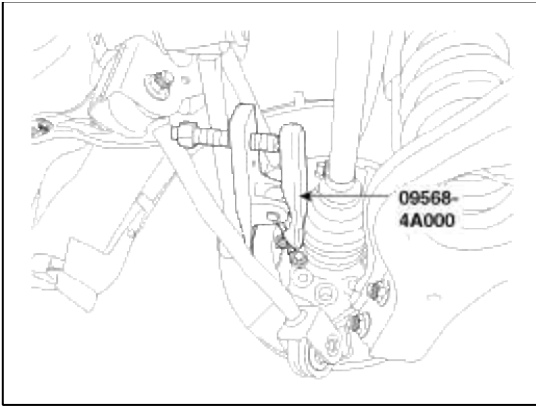

8. Remove lower arm mount bolt(A) and then remove the lower arm(B).

Tightening torque :


140 ~ 160 N.m (14.0 ~ 16.0 kgf.m, 101.2 ~ 115.7 lb-ft)

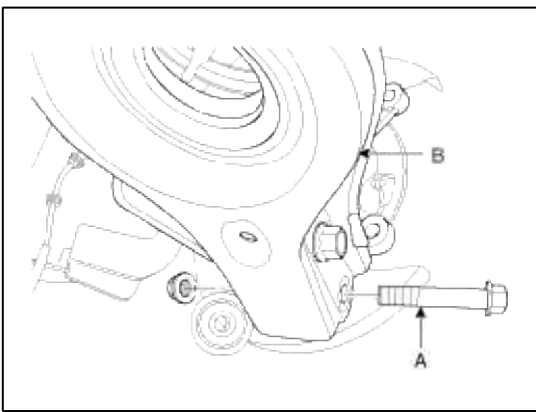


9. Remove the wheel speed sensor(A).

Tightening torque :

6.9 ~ 10.8 N.m (0.7 ~ 1.1 kgf.m, 5.1 ~ 8.0 lb-ft)

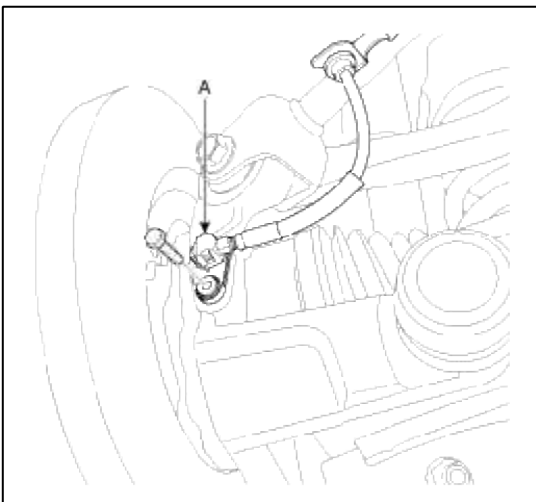


10. Loosen the brake cable mount nuts and then remove the brake cable(A).

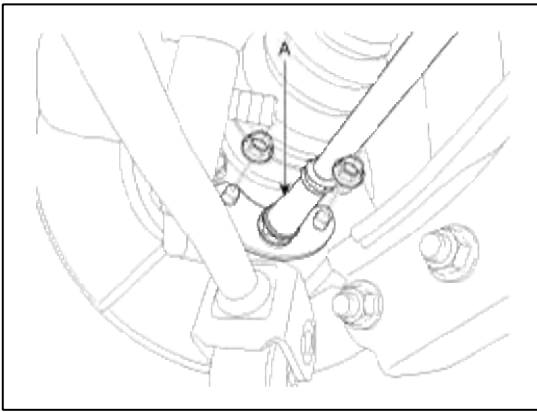

11. Loosen the upper arm(A) link mount bolt & nut and then remove the carrier assembly(B).

Tightening torque :


78.5 ~ 88.3 N.m (8.0 ~ 9.0 kgf.m, 57.9 ~ 65.1 lb-ft)

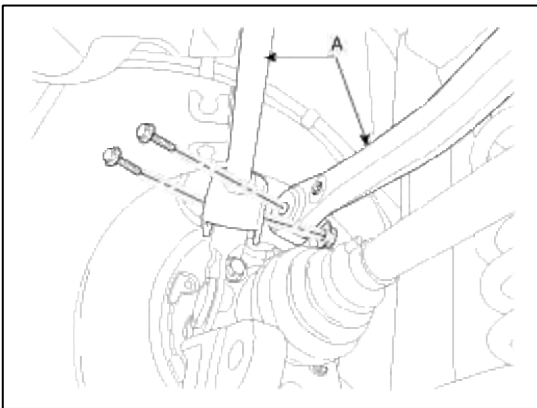

12. Remove the hub assembly mount bolts from the rear axle carrier(A).

Tightening torque :

78.5 ~ 88.3 N.m (8.0 ~ 9.0 kgf.m, 57.9 ~ 65.1 lb-ft)

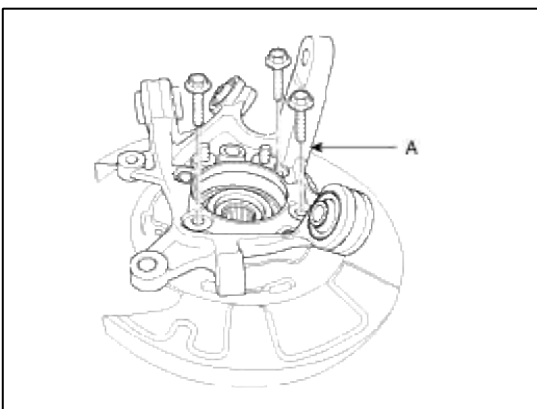


13. Installation is the reverse order of removal.

Inspection

1. Check the hub for cracks and the splines for wear.
2. Check the brake disc for scoring and damage.
3. Check the knuckle for cracks.
4. Check the bearing for cracks or damage.

Driveshaft and axle > Rear Driveshaft Assembly > Rear Driveshaft > Components and Components Location

Component Location

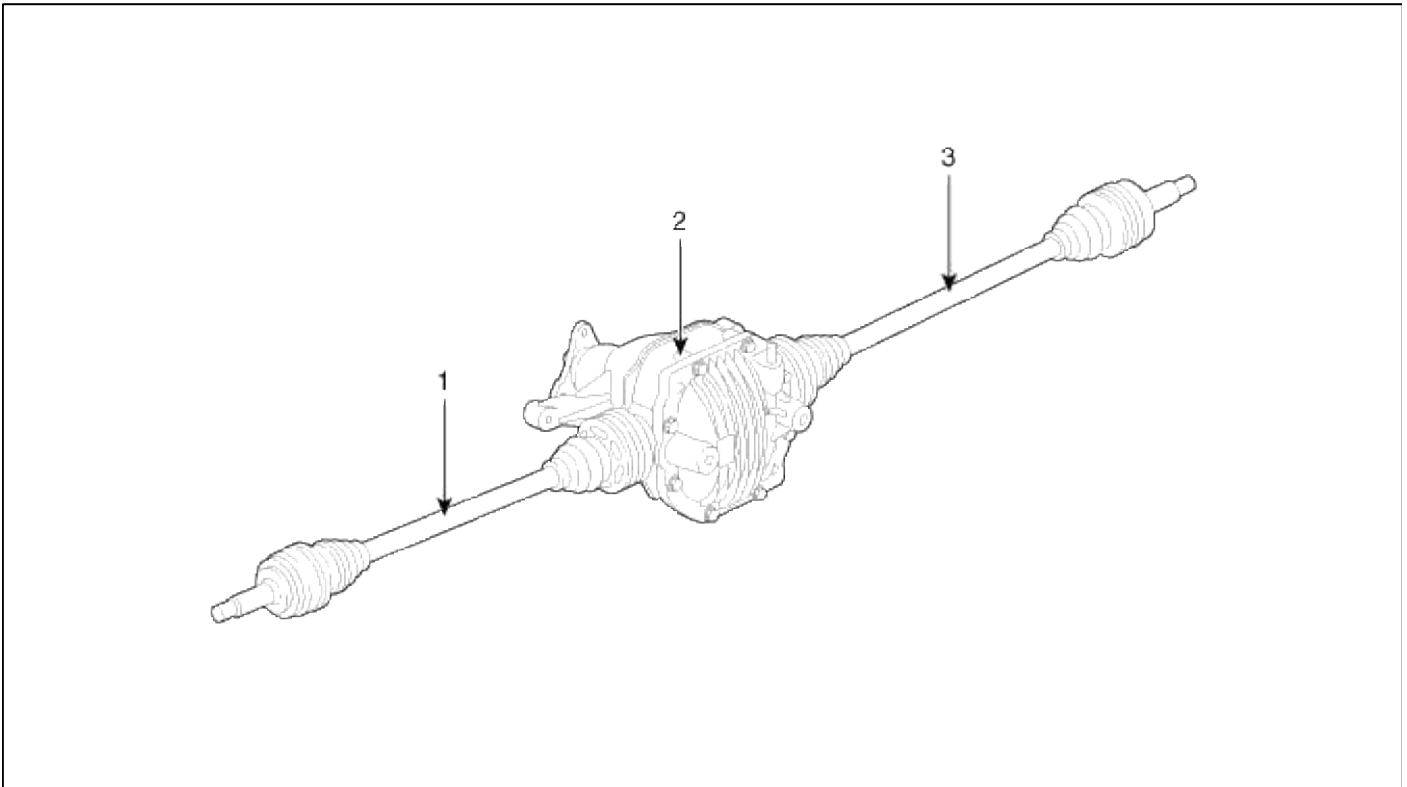

1. Drive shaft (LH)
2. Drive shaft (RH)

3. Defferential
assembly

Driveshaft and axle > Rear Driveshaft Assembly > Rear Driveshaft > Repair procedures


Replacement

1. Loosen the wheel nuts slightly. Raise the vehicle, and make sure it is securely supported.

2. Remove the rear wheel and tire(A) from rear hub .

Tightening torque :

88.3 ~ 107.9 N.m (9.0 ~ 11.0 kgf.m, 65.1 ~ 79.6 lb-ft)

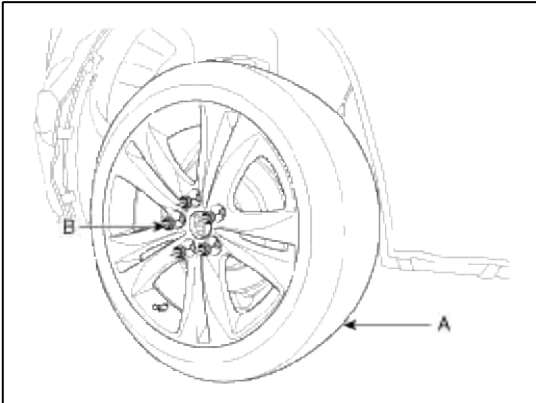
**CAUTION**

Be careful not to damage to the hub bolts when removing the rear wheel and tire.

3. Remove the brake caliper mounting bolts (A), and then place the brake caliper assembly (B) with wire as shown in the illustration.

Tightening torque :


49.0 ~ 58.8 N.m (5.0 ~ 6.0 kgf.m, 36.1 ~ 43.3 lb-ft)

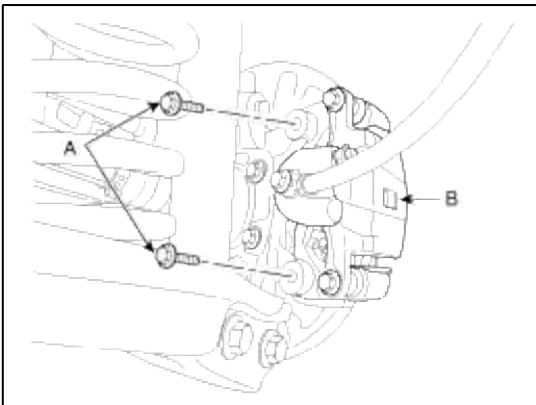

4. Remove the split pin(A), then remove castle nut(B) and washer(C) from the front hub under applying the break.


Tightening torque :

200 ~ 280 N.m (20.0 ~ 28.0 kgf.m, 144.6 ~ 202.5 lb-ft)

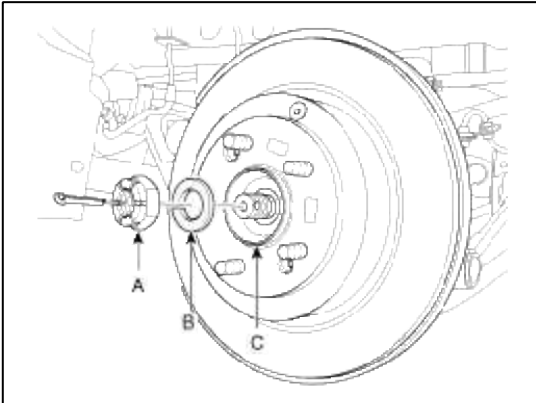

CAUTION


The washer (B) should be assembled with convex surface outward when installing the castle nut (A) and split pin (C).

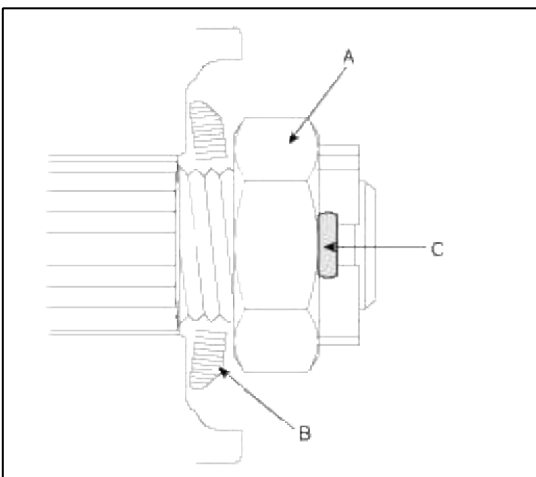



5. Remove the rear break lining (Refer to BR group-Front brake).
6. Loosen the trailing arm mount bolt & nut and than remove the trailing arm (A).

Tightening torque :

98.1 ~ 117.7 N.m (10.0 ~ 12.0 kgf.m, 72.3 ~ 86.8 lb-ft)

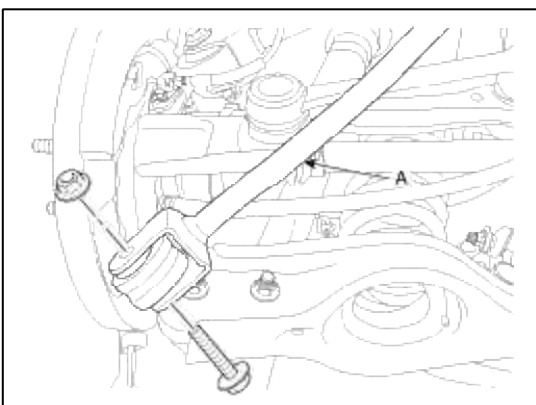


7. Loosen the assist arm mount nut and then disconnect the assist arm(A).

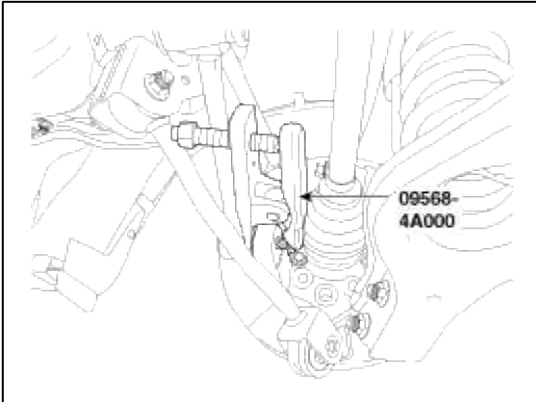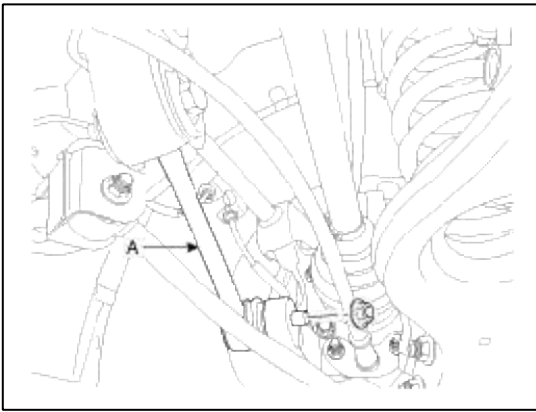

8. Remove lower arm mount bolt(A) and then remove the lower arm(B).

Tightening torque :


140 ~ 160 N.m (14.0 ~ 16.0 kgf.m, 101.2 ~ 115.7 lb-ft)

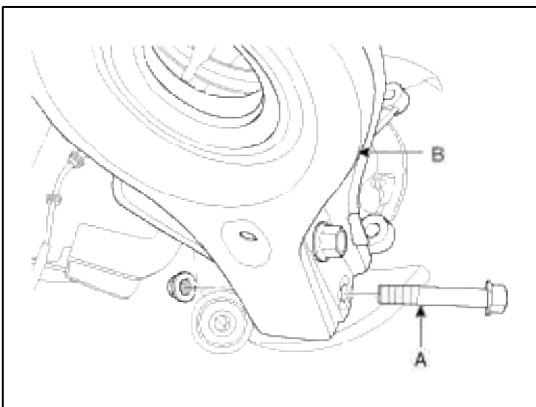

9. Remove the wheel speed sensor(A).

Tightening torque :

6.9 ~ 10.8 N.m (0.7 ~ 1.1 kgf.m, 5.1 ~ 8.0 lb-ft)

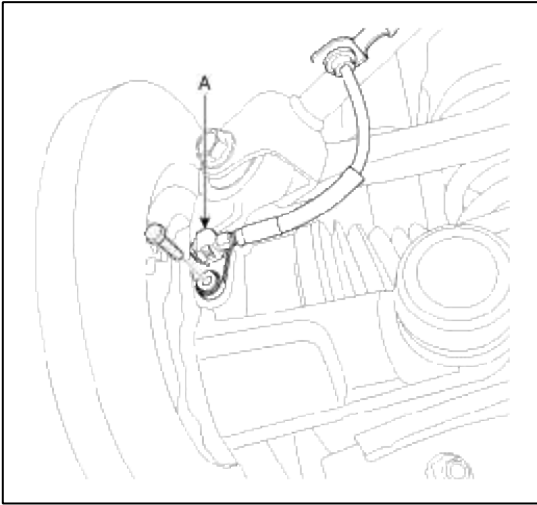


10. Loosen the brake cable mount nuts and then remove the brake cable(A).



11. Loosen the upper arm(A) link mount bolt & nut and then remove the carrier assembly(B).

Tightening torque :

78.5 ~ 88.3 N.m (8.0 ~ 9.0 kgf.m, 57.9 ~ 65.1 lb-ft)

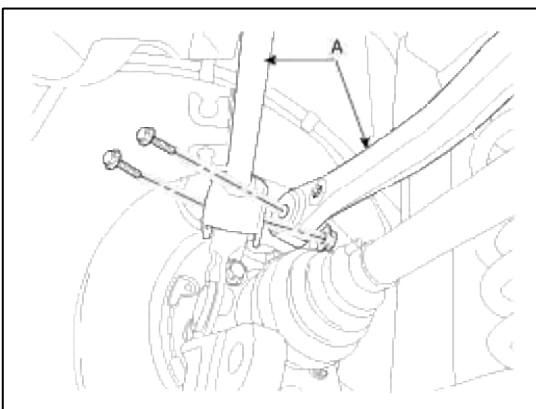


12. Push the rear axle carrier (A) outward and separate the driveshaft (B) from the axle hub.



13. Remove driveshaft (A) from differential after loosen bolt(6ea).

Tightening torque :

8.8 ~ 9.8 N.m (0.9 ~ 1.0 kgf.m, 6.5 ~ 7.2 lb-ft)

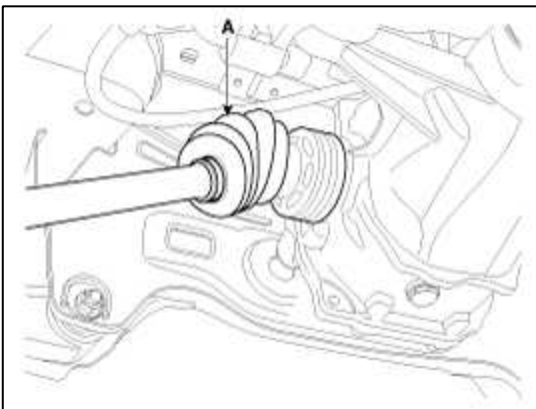

CAUTION


- Use a pry bar(A) being careful not to damage the differential and joint.
- Do not insert the pry bar(A) too deep, as this may cause damage to the oil seal.
- Do not pull the driveshaft by excessive force it may cause components inside the joint kit to dislodge resulting in a torn boot or a damaged bearing.
- Plug the hole of the differential case with the oil seal cap to prevent contamination.
- Support the driveshaft properly.
- Replace the retainer ring whenever the driveshaft is removed from the differential case.
- Do not take the drive shaft a part. Please, replace drive shaft with assembly.

14. Installation is the reverse order of removal.

Inspection

1. Check the driveshaft boots for damage and deterioration.
2. Check the ball joint for wear and damage.
3. Check the splines for wear and damage.


4. Check the dynamic damper for cracks, wear and position.

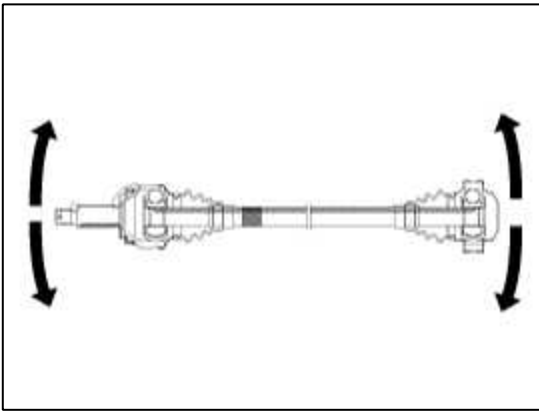

5. Check the driveshaft for cracks and wears.

Driveshaft and axle > Propeller Shaft Assembly > Propeller Shaft > Components and Components Location

Components

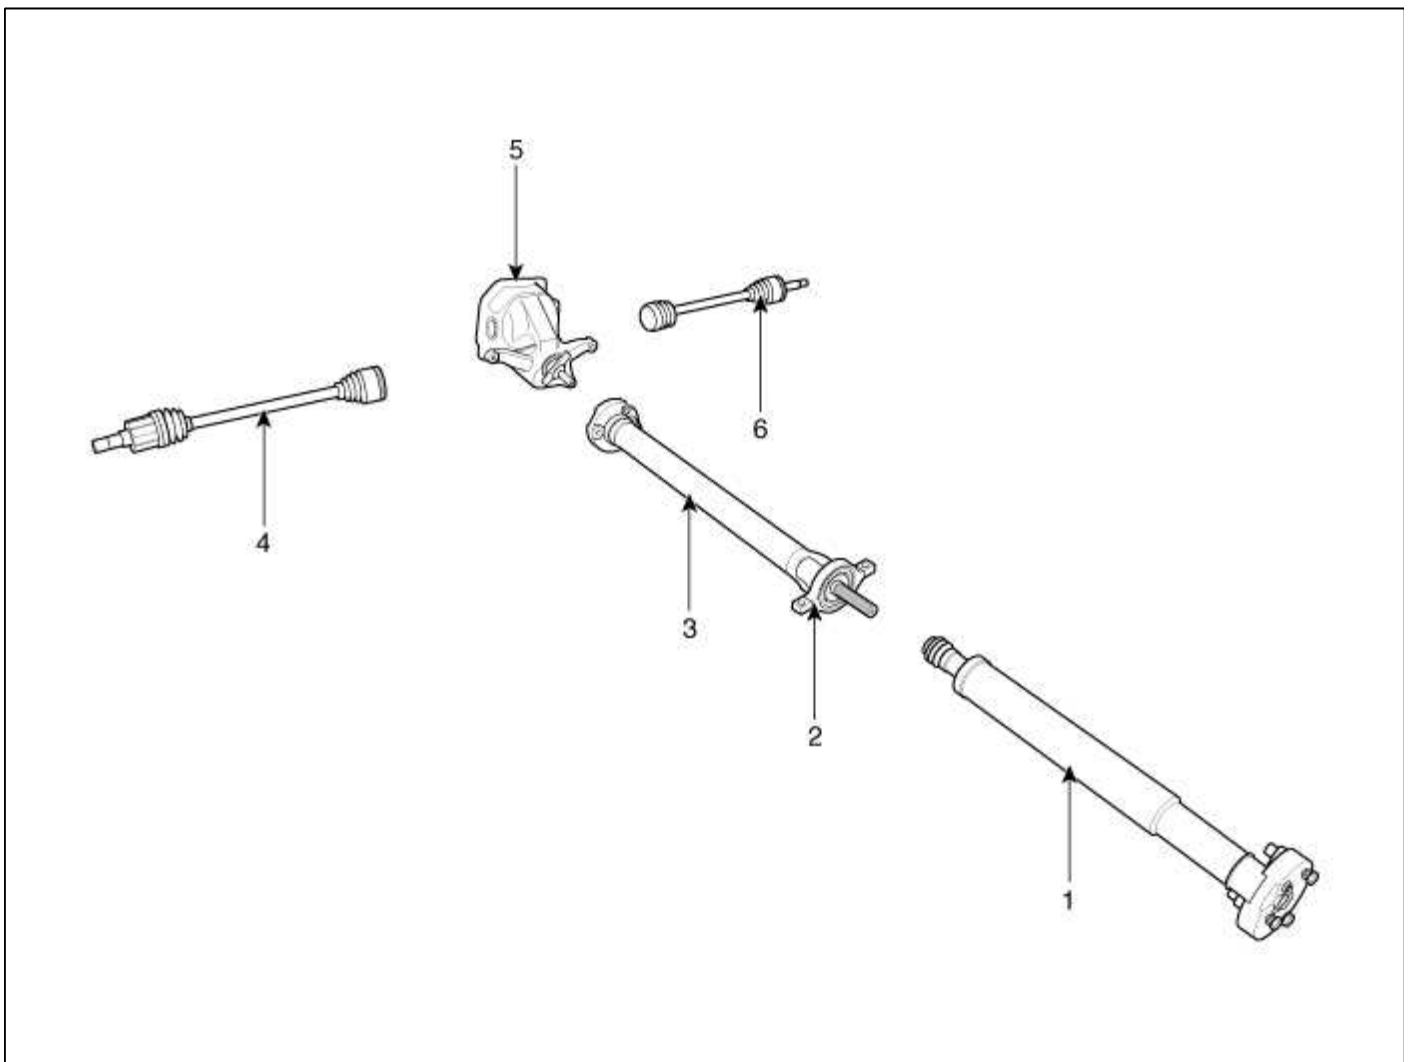


1. Front propeller shaft	4. Drive shaft (R)
2. Center bearing bracket	5. Differential carrier
3. Rear propeller shaft	6. Drive shaft (L)

Driveshaft and axle > Propeller Shaft Assembly > Propeller Shaft > Repair procedures

Inspection


Inspect Flexible Coupling

1. Check the front and rear flexible couplings for cracks or damage.
2. Inspect the flexible coupling centering bushing. If the bushing is damaged, replace the propeller shaft assembly.

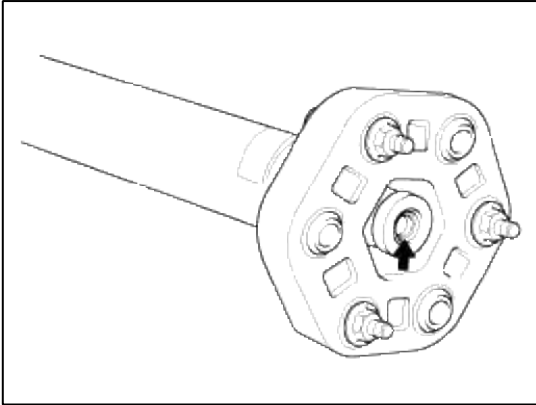

Universal Joint Inspect


1. Check that the spider bearing rotates smoothly.
2. Check that there is no play in the spider bearing if necessary, replace the propeller shaft.

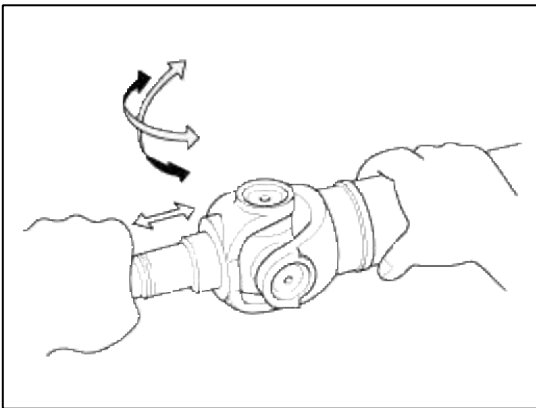


Propeller Shaft Runout

1. Install a dial indicator with its needle on the center of front propeller shaft or rear propeller shaft.
2. Turn the other propeller shaft slowly and check the runout. Repeat this procedure for the other propeller shaft.

Front Propeller Shaft Runout : 0.3mm (0.012in.)

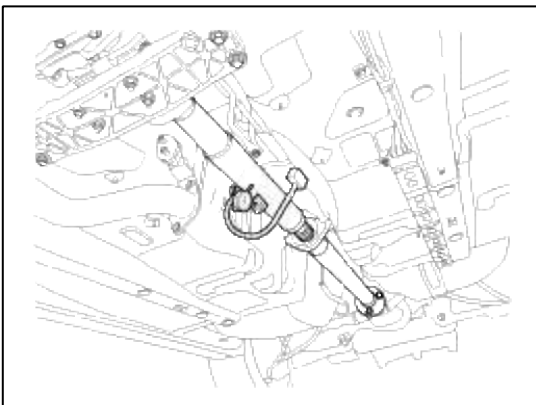


Rear Propeller Shaft Runout : 0.3mm (0.012in.)

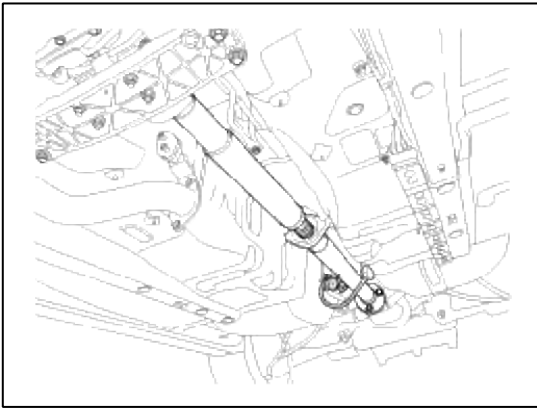

3. If the runout on either propeller shaft exceeds the service limit, replace the propeller shaft assembly.

Replacement


1. Loosen the mount bolt and then remove the bracket(A).

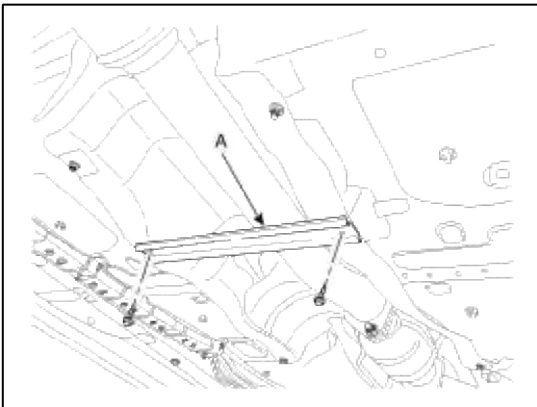

2. Remove the rear muffler(Refer to FL group-Muffler)

3. Loosen the mount bolts and then heating bracket.


4. Remove the center bearing bracket(A) mounting bolts(B).

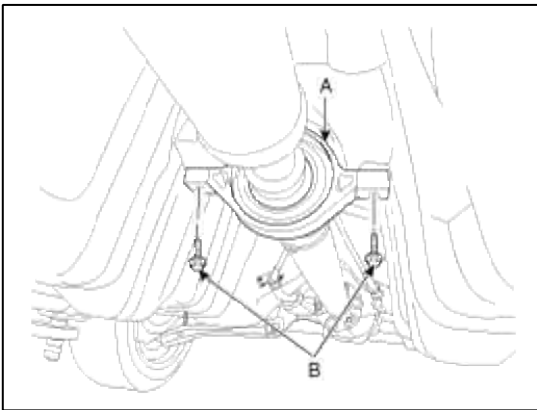

5. After making a match mark(C) on the rubber coupling(A) and rear differential companion(B), remove the propeller shaft mounting bolts(D).


Tightening torque :

90 ~ 110 N.m (9.0 ~ 11.0 kgf.m, 65.0 ~ 79.5 lb-ft)

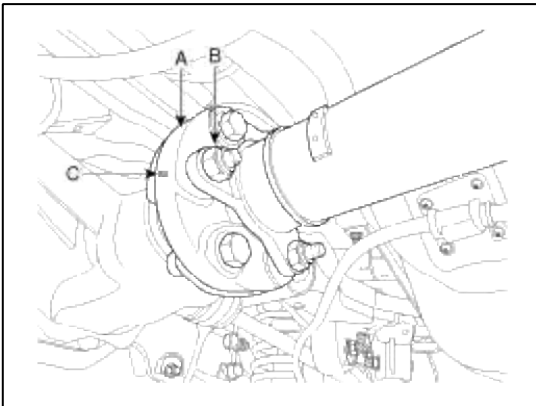

Tightening torque :

90 ~ 110 N.m (9.0 ~ 11.0 kgf.m, 65.0 ~ 79.5 lb-ft)

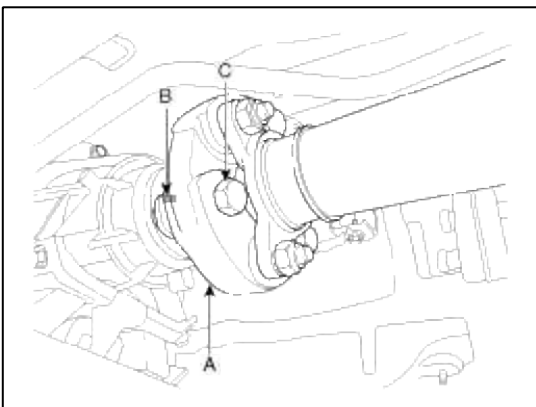


CAUTION

- A. Use the hexagonal wrench to prevent damage of bolt head when removing bolts.
 - B. When retightening the propeller shaft mounting bolts after removing them, each bolt and washer must be placed in its original position and bolt insertion direction must be the same as before, so make marks not to allow the bolts and washers to be mixed up before removing the propeller shaft.
 - C. If the position and direction of the propeller shaft mounting bolts and washers are reversed, it may cause vibration and noise at high vehicle speeds due to imbalance in the propeller shaft.
 - D. If abnormal vibration and noise occur at high vehicle speeds after replacing propeller shaft with new one, balance the propeller shaft with a balancing machine.
6. Installation is the reverse order of removal.

Driveshaft and axle > Differential Carrier Assembly > Rear Differential Carrier > Components and Components Location

Components

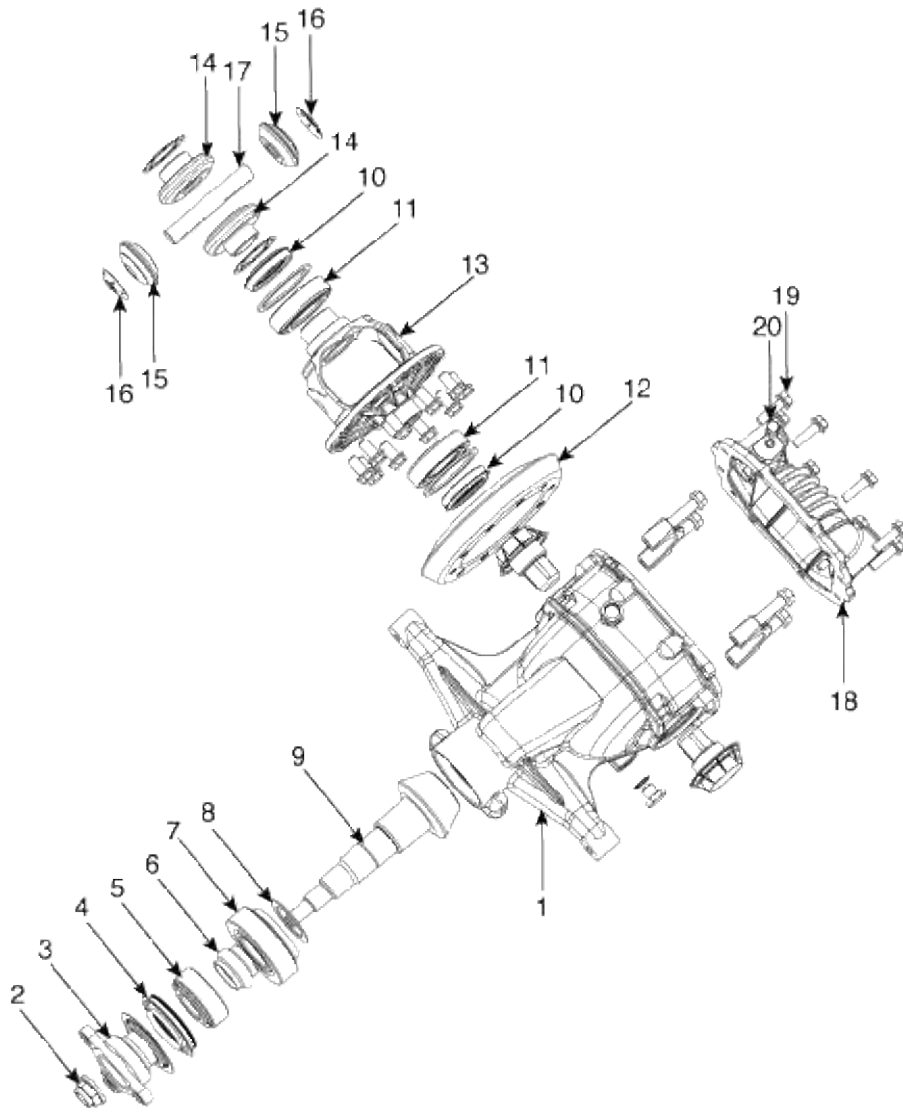

1. Differential	8. Inner bearing adjust shim	15. Pinion gear
2. Pinion locking nut	9. Drive gear	16. Thrust washer
3. Oil Seal guide	10. Oil seal	17. Differential pinion shaft
4. Pinion oil seal	11. Differential side bearing	18. Differential cover
5. Outer pinion bearing	12. Ring gear	19. Differential cover mounting bolts
6. Pinion bearing spacer	13. Differential	20. Air breather
7. Inner pinion bearing	14. Cam side gear	21. Filler piug

Driveshaft and axle > Differential Carrier Assembly > Rear Differential Carrier > Repair procedures


Replacement

1. Fill the gear oil.

Specified lubricant:

Hypoid gear oil, MS 517-15 (API GL-5, SAE 75W/90)



Oil quantity: Fill the reservoir to the plug hold (About 1.4L ± 0.05L)

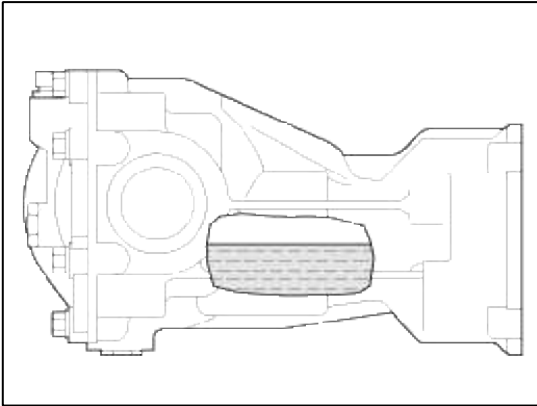

2. Remove the rear driveshaft(Refer to DS group-Rear driveshaft)
3. Remove the propellshaft assembly(Refer to DS group-Propellshaft)
4. Loosen the differential carrier assembly mount bolts and than remove the differential assembly(A)

Tightening torque :

80 ~ 100 N.m (8.0 ~ 10.0 kgf.m, 57.8 ~ 72.3 lb-ft)

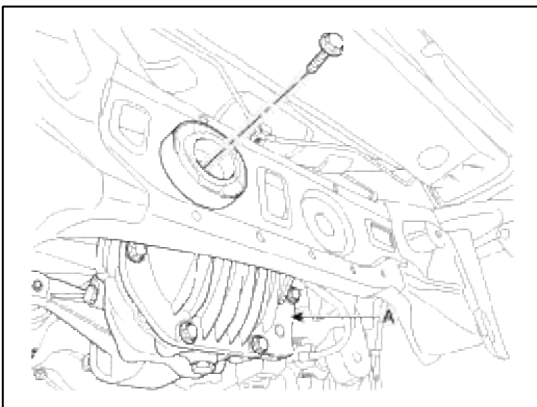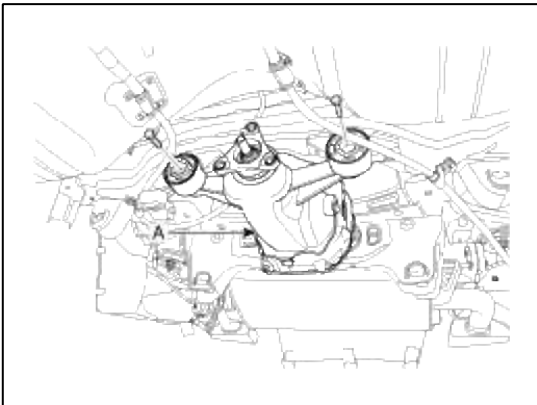


5. Installation is the reverse order of removal.


Disassembly

Rear differential carrier


1. Fill the gear oil.

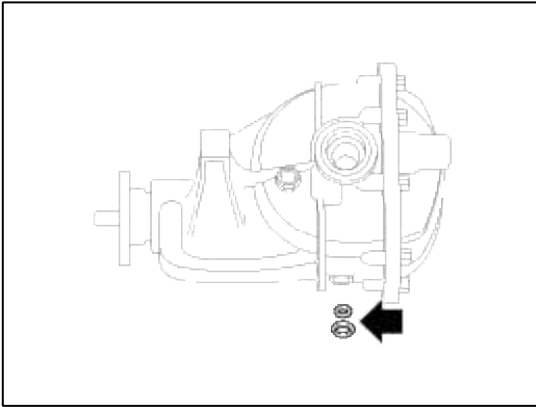


2. Loosen the mount bolts and then remove the cover.

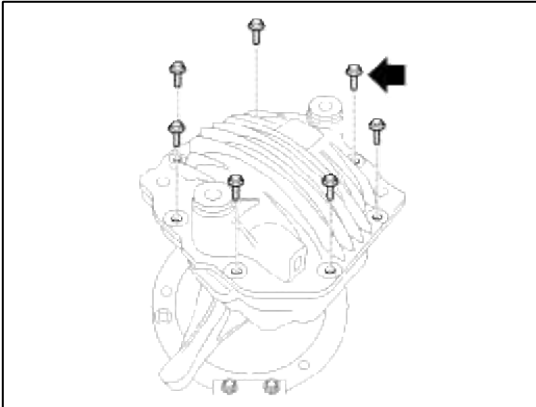


3. Mark as below before removing the differential assembly not to be changed with the left/right side of bearing cap.

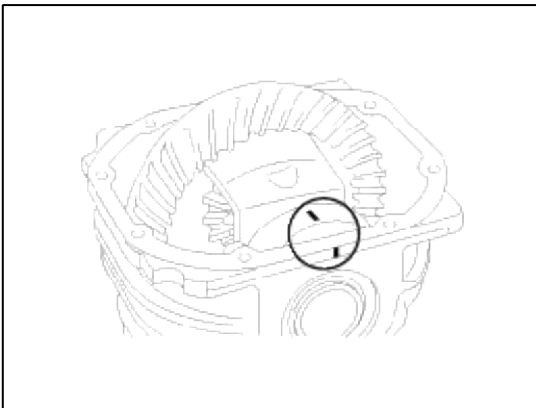


4. Loosen the bearing cap bolts and then bearing cap.

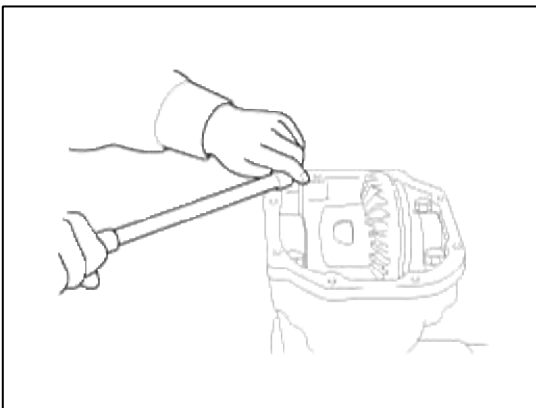

5. Disassembly the differential assembly.

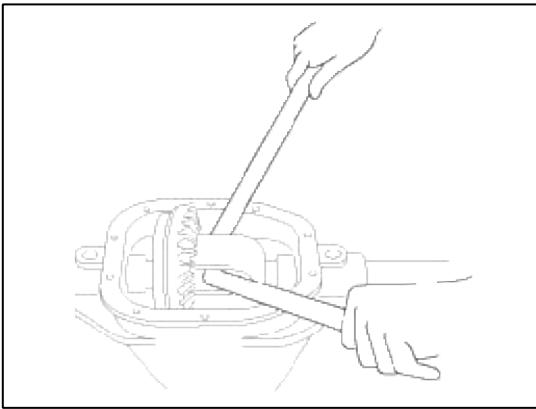


6. Mark as below removing the differential assembly not to be changed with the left/right side of bearing race.

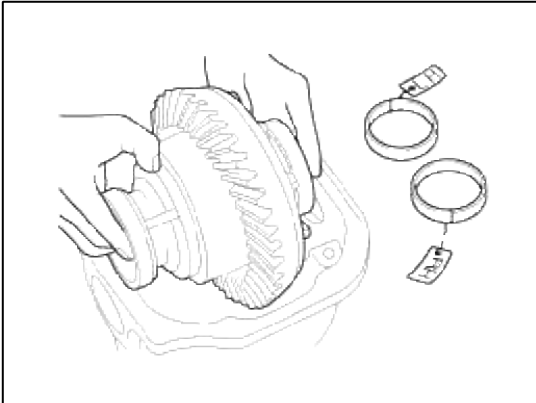


Diff assembly Disassembly


1. Remove the bearing not to be damaged after setting the bearing remover at the discape hole.

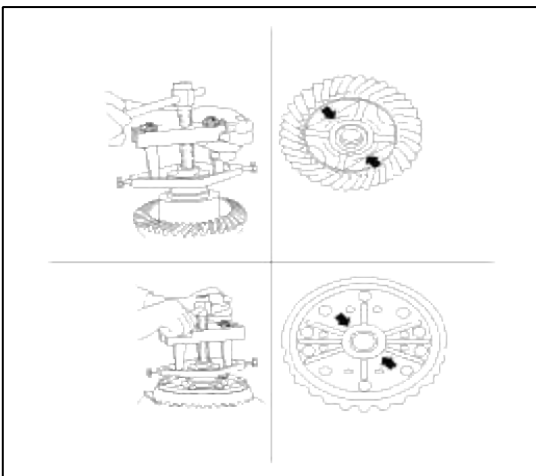


2. Mark as blow removing the bearing no to be changed with the left/right side of bearing.

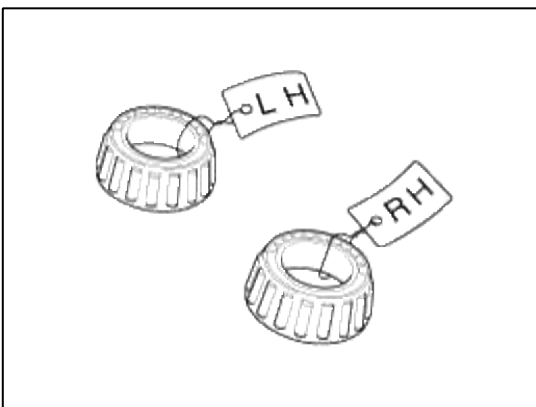


3. Loosen the ring gear bolt and than remove the drive gear.

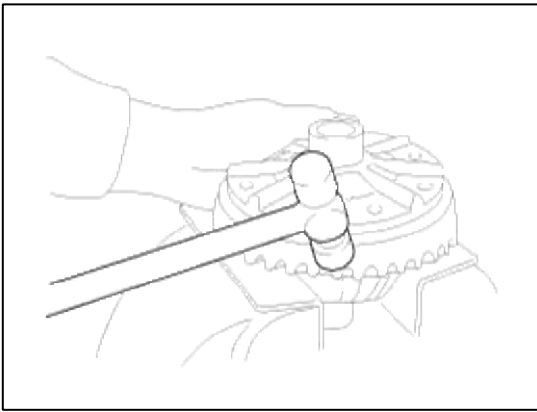

4. Disconnect the lock pin.

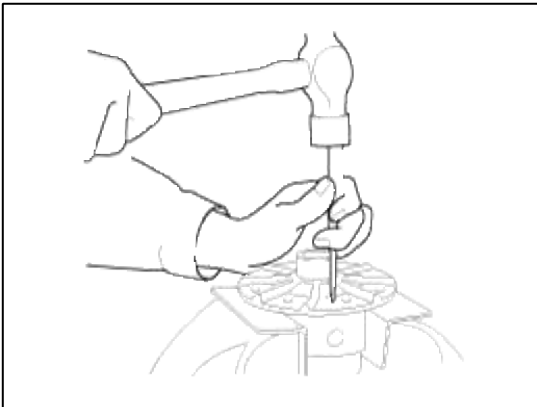

5. Disconnect the dif shaft.

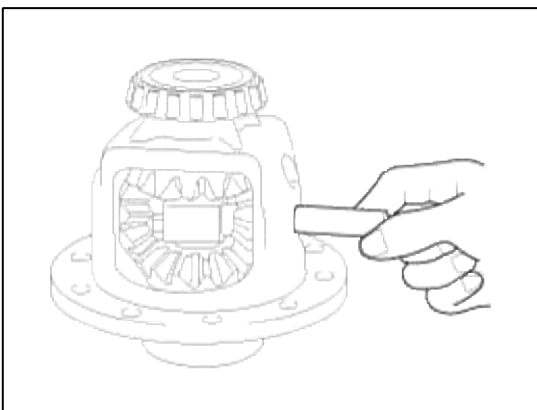


6. Disassembly the diff shat/diff side gear/diffpinion gear/washer as below by putting a finger into the hole of diff shaft.




Pinion assembly disassembly


1. Loosen the pinion locking nut.

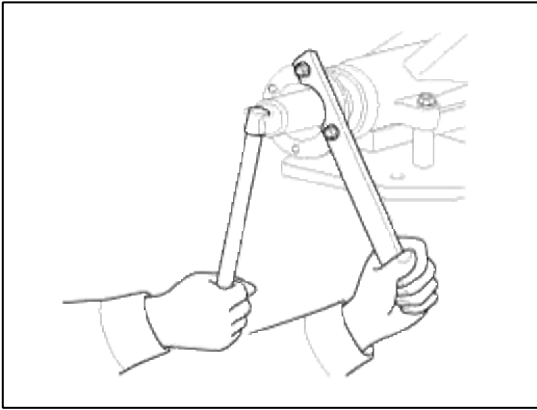


2. Remove the flang/pinion gear/pinion outer bearing by compressing the pinion gear with the pressing machine.

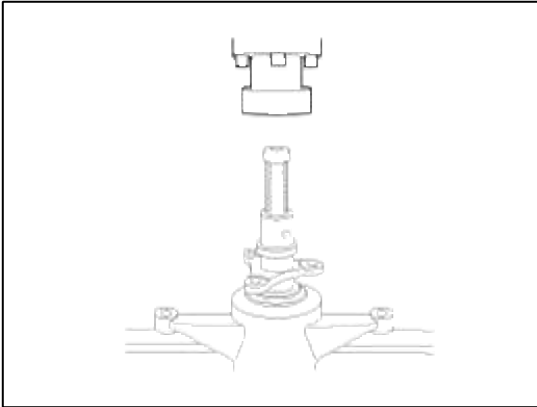


3. Remove the pinion inner bearing using the pinion gear press.

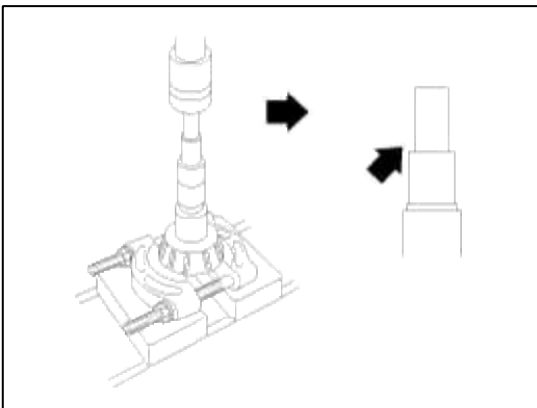

4. Remove the pinion oil seal.









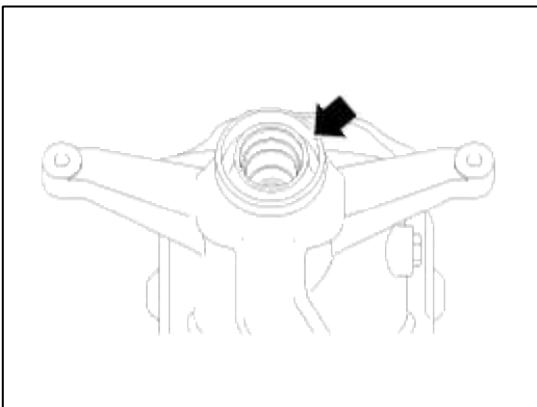


5. Remove the right /left deff oil seal.

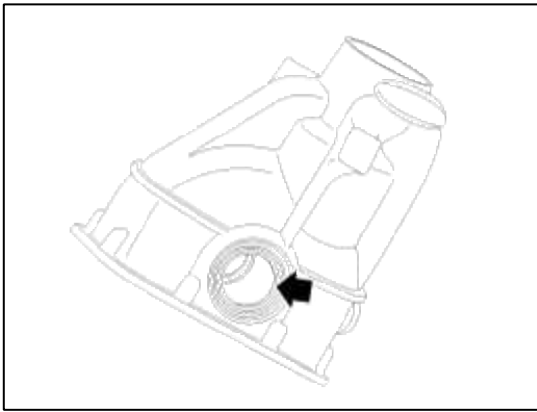

Inspection

1. Check the tooth contact pattern.

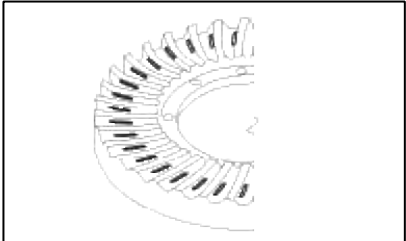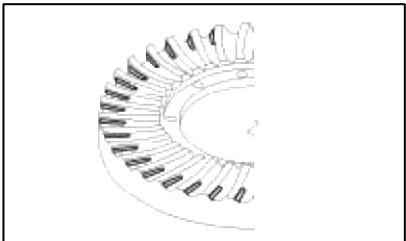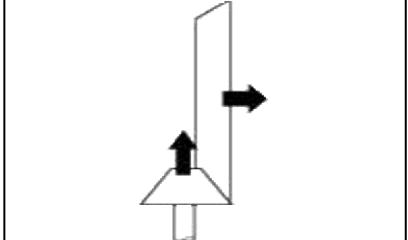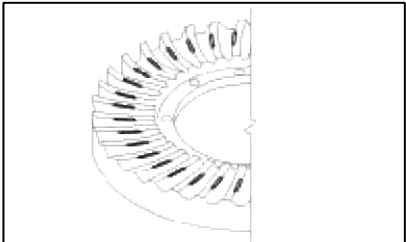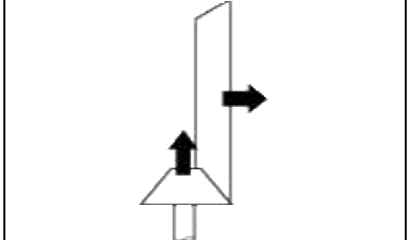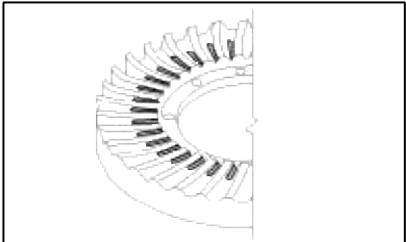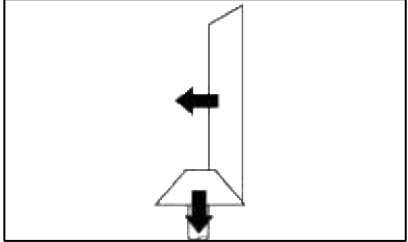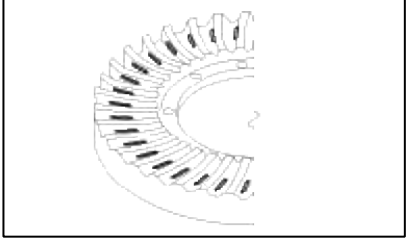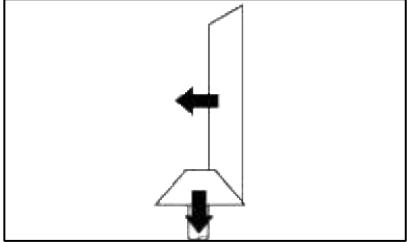Tooth contact	Contact state		Solution
Standard contact			
1. Heal contact		<p>Increase the thickness of the pinion height adjusting shim, and position the drive pinion closer to the center of the drive gear.</p>	
2. Face contact		<p>Also, for backlash adjustment, reposition the drive gear further from the drive pinion.</p>	
3. Toe contact		<p>Decrease the thickness of the pinion height adjusting shim, and position the drive pinion further from the center of the drive gear.</p>	
4. Flank contact		<p>Also, for backlash adjustment, reposition the drive gear closer to the drive pinion.</p>	


NOTE

1. Tooth contact pattern is a method for judging the result of the adjustment of drive pinion height and final drive gear backlash. The adjustment of drive pinion height and final drive gear backlash should be repeated until the tooth contact patterns are similar to the standard tooth contact pattern.
2. When you cannot obtain a correct pattern, the drive gear and drive pinion have exceeded their limits. Both gears should be replaced as a set.


Reassembly

Pinion assembly


1. Press the inner/outer bearing race.

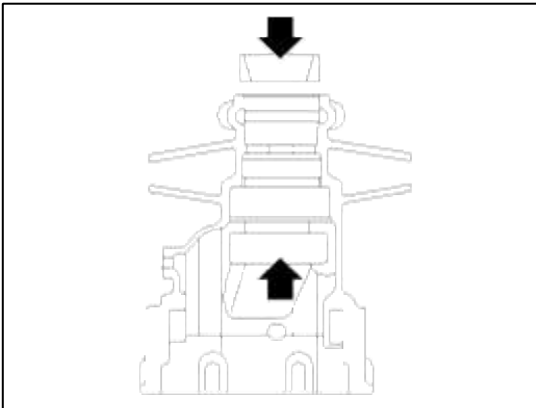

2. Select the pinion gear adjust shim and install it to the pinion gear. And then press the inner bearing.

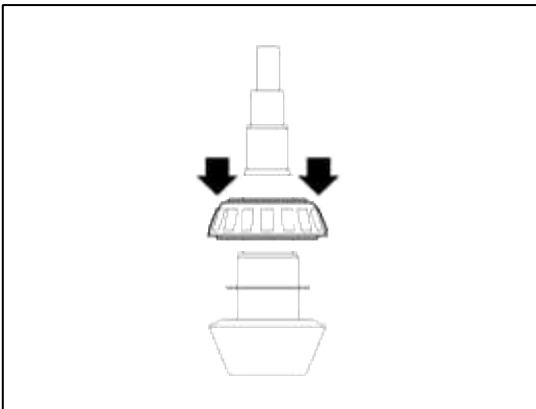


3. Install the bearing spacer.

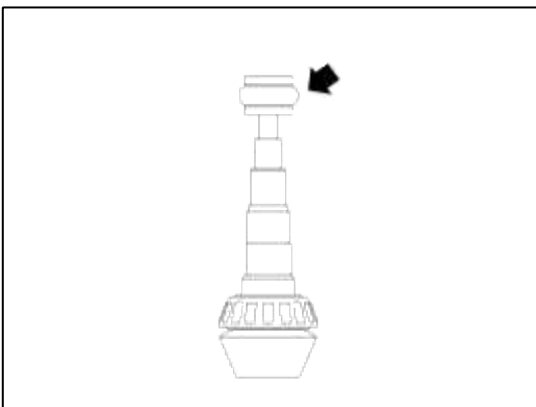**CAUTION**

Will have to use from new spacer.


4. Press the installed pinion assembly to carrier with outer bearing in the illustration.

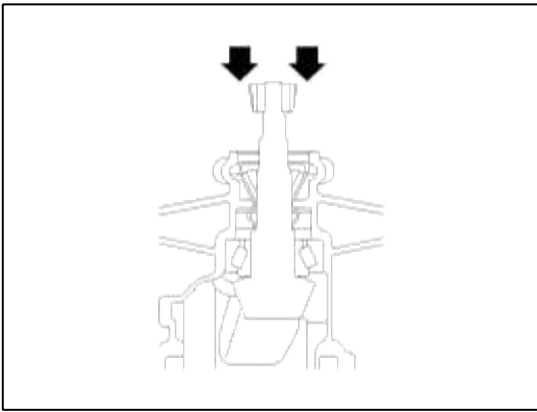


NOTE

Will have to be below pressure 5 ton.

5. Press the pinion oil seal.

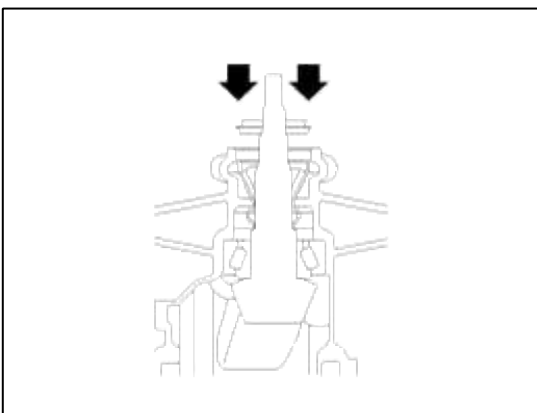


6. Press the companion flange.

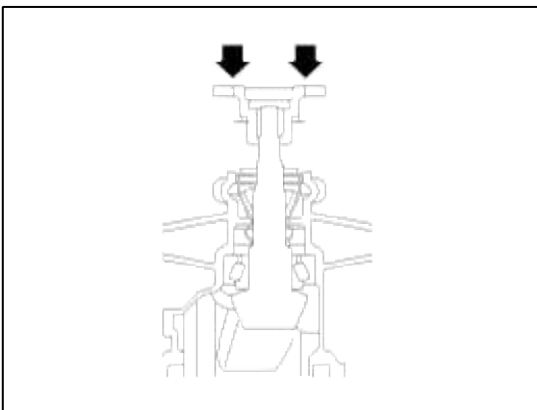

7. Install the pinion locking nut to make that the bearing freerod is standard.


Tightening torque :

112.7 ~ 161.8 N.m (11.5 ~ 16.5 kgf.m, 83.1 ~ 119.3 lb-ft)

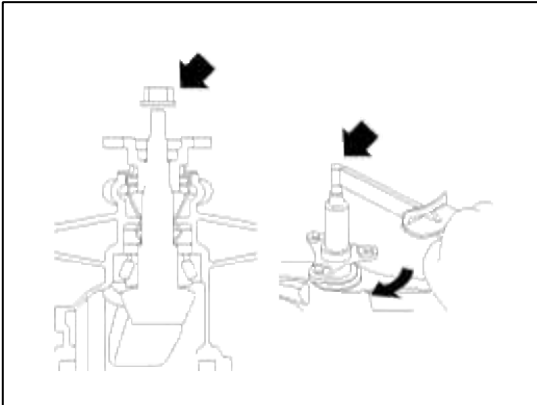


Differential case

1. Fix the diff assembly with both hands and install it to the differential carrier.

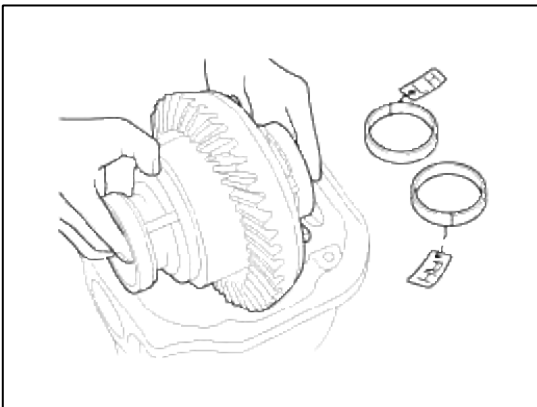


2. Insert the left/right diff shim between the diff side bearing and carrier. And then install the bearing cap with marks.

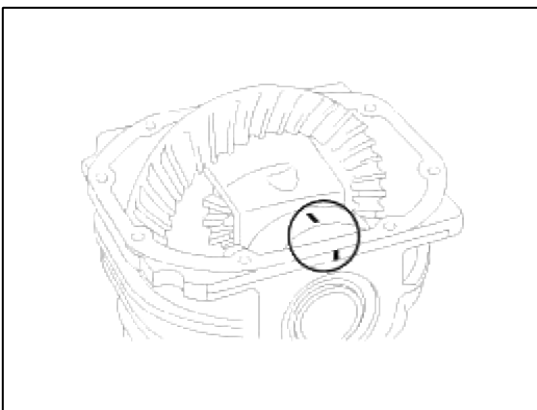

3. Adjust the diff shim.

Standard :0.10~0.15mm

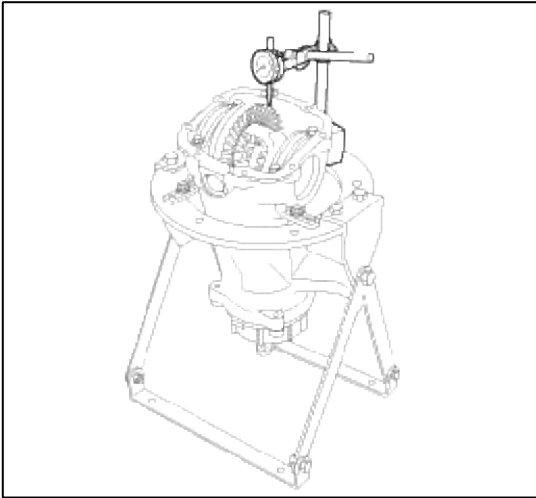


NOTE


Thickness of the diff shim need to adjusted if backlash is small. Lessen the thickness of the left side diff shim. By contraries enlarge the thickness of the right side diff shim that much.

4. Measures the freeroad.

Standard : Pinion freerod : 1.9~4.9(0.2~0.5, 1.4~3.6)

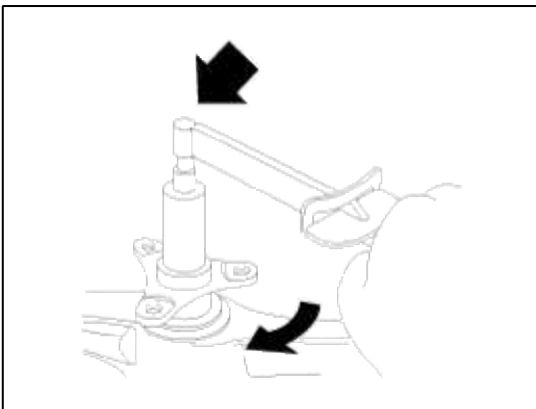


5. Applies a sealant in the carrier.

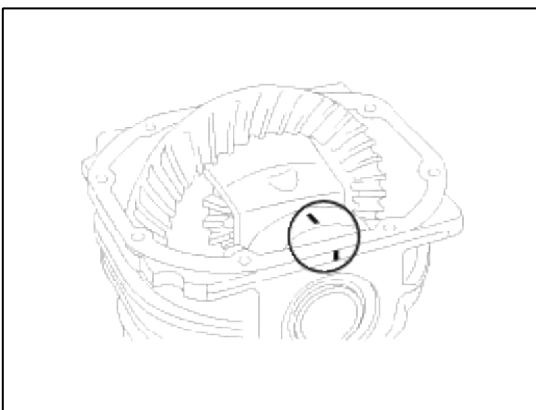


6. Install the differential cover.

Tightening torque Nm (kgf.m, lb-ft) :

39.2 ~ 49.0 N.m (4.0 ~ 5.0 kgf.m, 28.9 ~ 39.1 lb-ft)

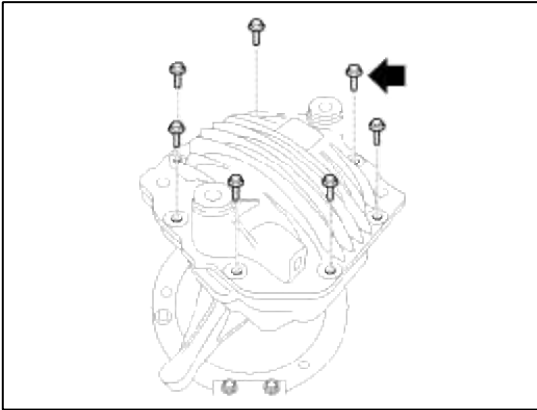


7. Install the diff oil seal.

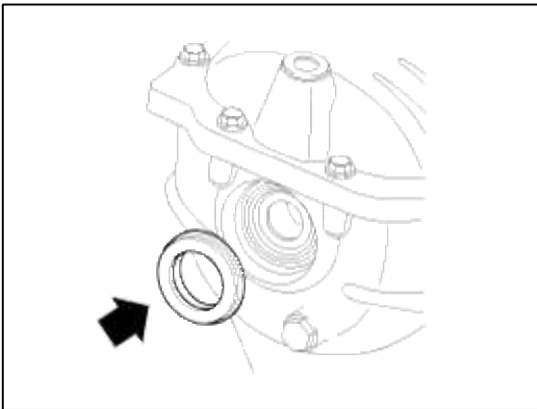

8. Install the drain plug and pinar plug.

Pillar plug : 4 ~ 6 kgf.m


Drain plug : 5 ~ 7 kgf.m

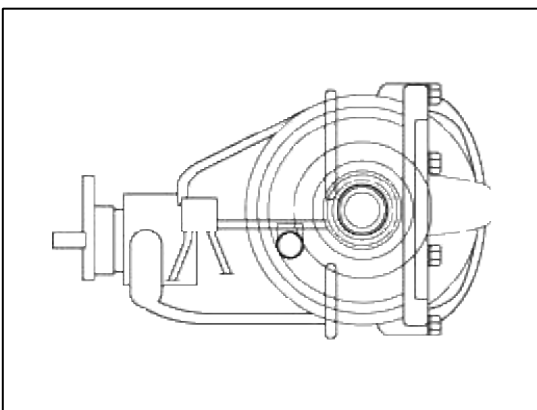

9. Install the air breather.

Tightening torque :

9.8 ~ 19.6 N.m (1.0 ~ 2.0 kgf.m, 7.2 ~ 14.4 lb-ft)

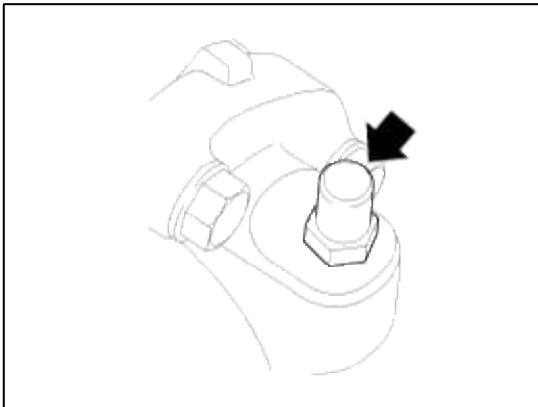

GENESIS COUPE(BK) > 2013 > G 3.8 GDI > Emission Control System

Emission Control System > General Information > Description and Operation

Description

Emissions Control System consists of three major systems.

- Crankcase Emission Control System prevents blow-by gas from releasing into the atmosphere. This system recycles gas back into the intake manifold (Closed Crankcase Ventilation Type).
- Evaporative Emission Control System prevents evaporative gas from releasing into the atmosphere. This system burns gas at appropriate engine operating condition after gathering it in the canister.
- Exhaust Emission Control System converts the three pollutants [hydrocarbons (HC), carbon monoxide (CO), and oxides of nitrogen (NOx)] into harmless substances by using the 3-way catalytic converter.

Emission Control System > General Information > Specifications

Specifications

Purge Control Solenoid Valve (PCSV)

Specification

Item	Specification
Coil Resistance (Ω)	22.0 ~ 26.0 [20°C(68°F)]

Fuel Tank Pressure Sensor (FTPS)

Type: Piezo-Resistive Pressure Sensor

Specification

Pressure (kPa)	Output Voltage (V)
-6.67	0.5
0	2.5
+6.67	4.5

Canister Close Valve (CCV)

Specification

Item	Specification
Coil Resistance (Ω)	23.0~26.0 [20°C(68°F)]

Tightening Torques

Item	kgf.m	N.m	lb-ft
Positive Crankcase Ventilation (PCV) Valve installation	0.8 ~ 1.2	7.8 ~ 11.8	5.8 ~ 8.7
Fuel tank pressure sensor installation bolt	0.4 ~ 0.6	3.9 ~ 5.9	2.9 ~ 4.3
Canister close valve installation bolt	0.4 ~ 0.6	3.9 ~ 5.9	2.9 ~ 4.3
Canister band installation bolt	0.4 ~ 0.6	3.9 ~ 5.9	2.9 ~ 4.3
Canister service cover installation bolt	0.8 ~ 1.2	7.8 ~ 11.8	5.8 ~ 8.7
Ventilation hose connector assembly installation bolt	0.4 ~ 0.6	3.9 ~ 5.9	2.9 ~ 4.3
Canister installation bolt	2.0 ~ 3.0	19.6 ~ 29.4	14.5 ~ 21.7


Emission Control System > General Information > Troubleshooting

Troubleshooting

Symptom	Suspect area
Engine will not start or hard to start	Vapor hose damaged or disconnected
Engine hard to start	Malfunction of the Purge Control Solenoid Valve
Rough idle or engine stalls	Vapor hose damaged or disconnected
	Malfunction of the PCV valve
Rough idle	Malfunction of the Evaporative Emission Control System
Excessive oil consumption	Positive crankcase ventilation line clogged


Emission Control System > General Information > Schematic Diagrams

Schematic Diagram

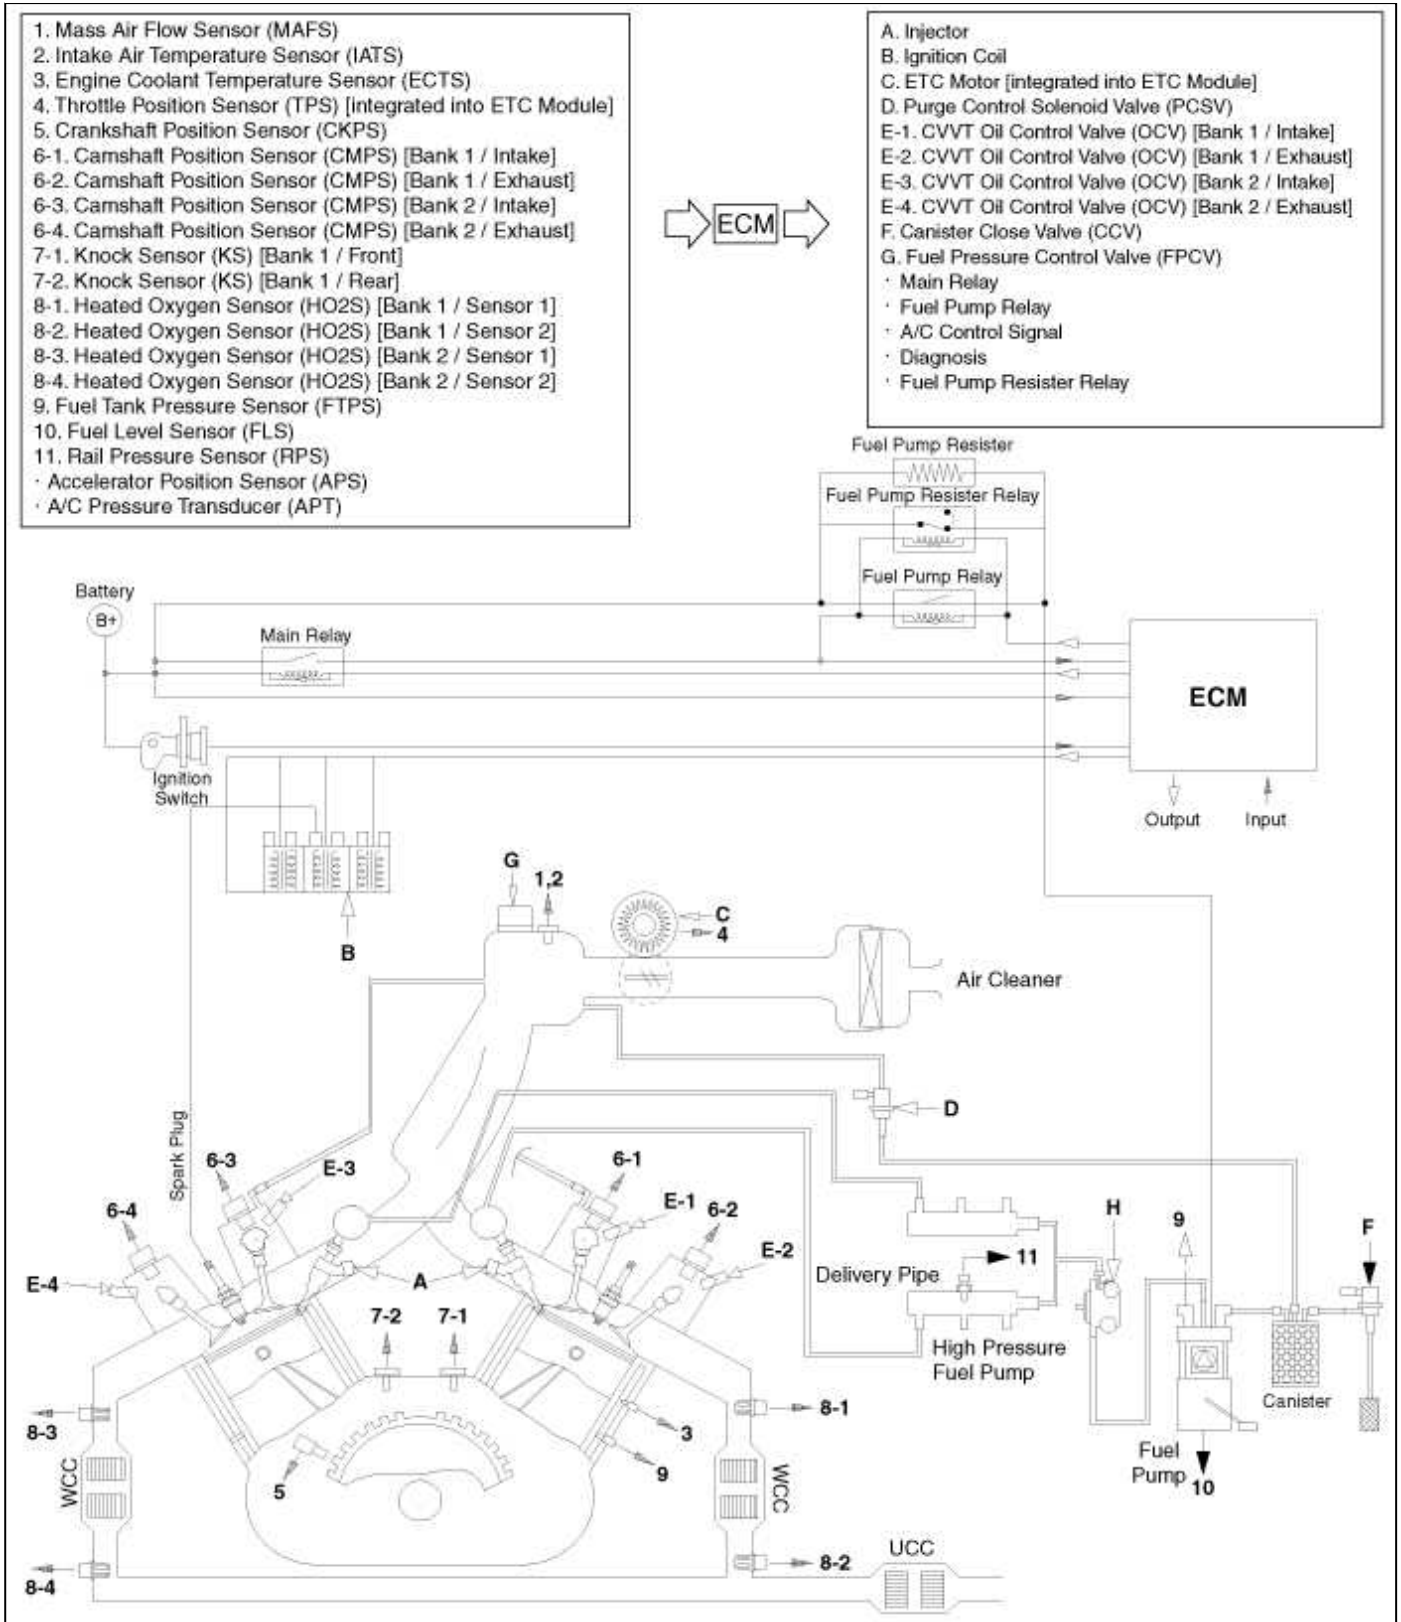


Emission Control System > General Information > Components and Components Location

Components Location

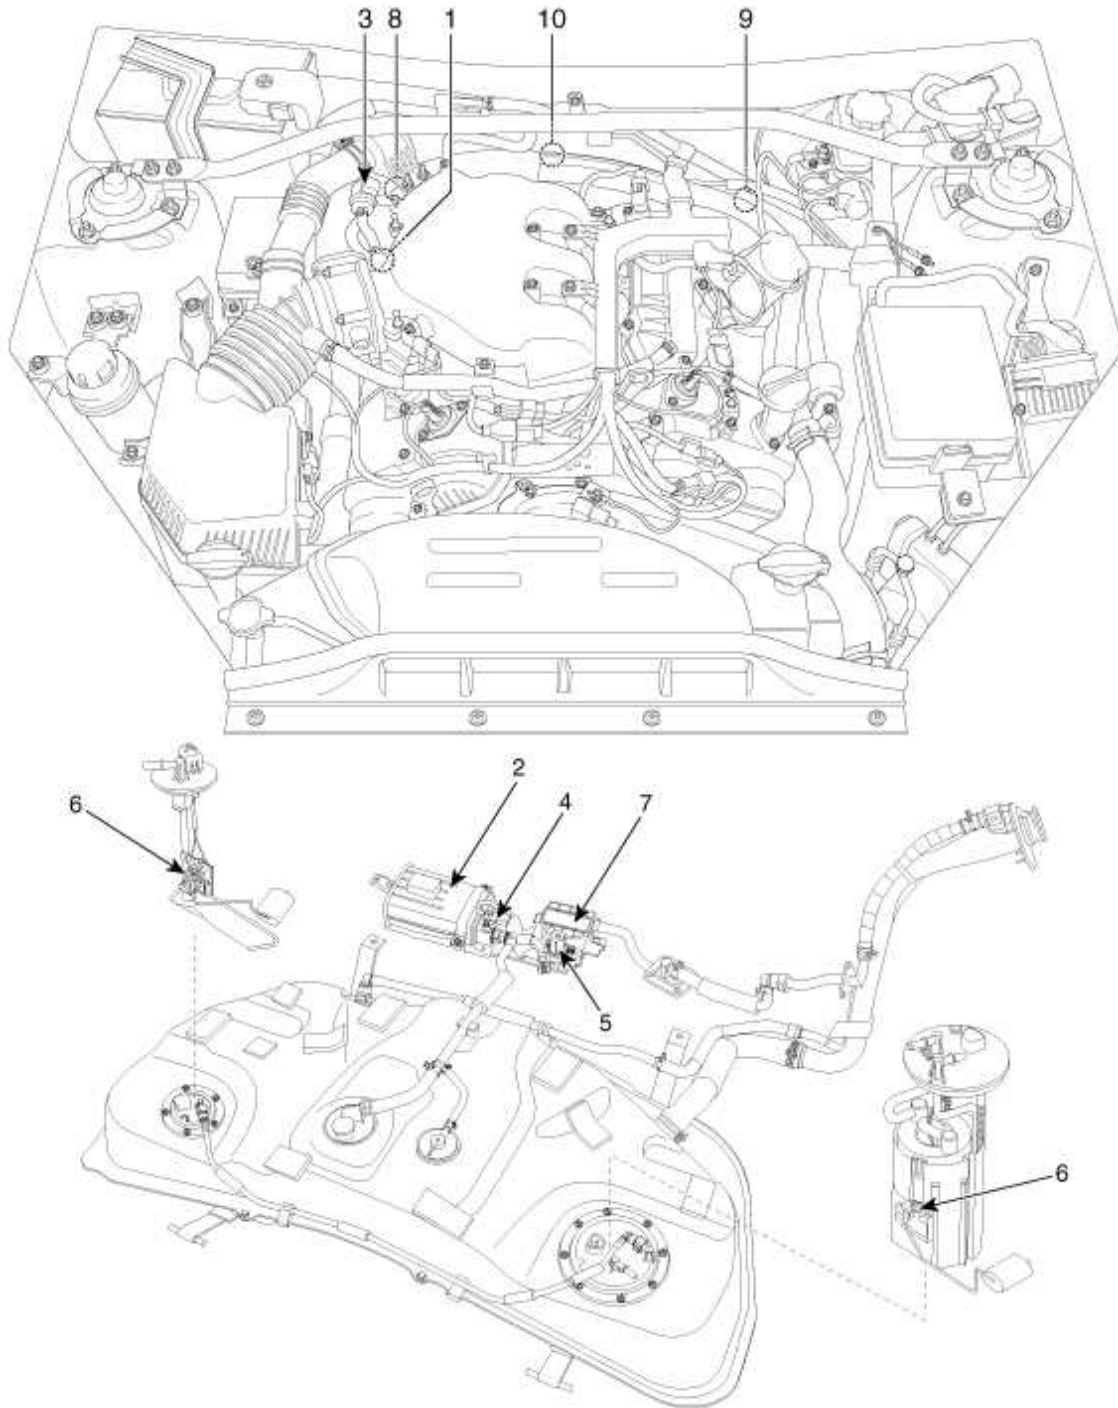


1. PCV Valve	6. Fuel Level Sensor (FLS)
2. Canister	7. Fuel Tank Air Filter
3. Purge Control Solenoid Valve (PCSV)	8. Catalytic Converter (WCC, Bank 1)
4. Fuel Tank Pressure Sensor (FTPS)	9. Catalytic Converter (WCC, Bank 2)
5. Canister Close Valve (CCV)	10. Catalytic Converter (UCC)


1. PCV Valve

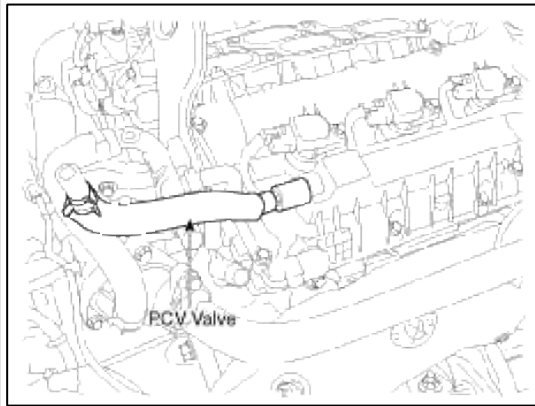

2. Canister

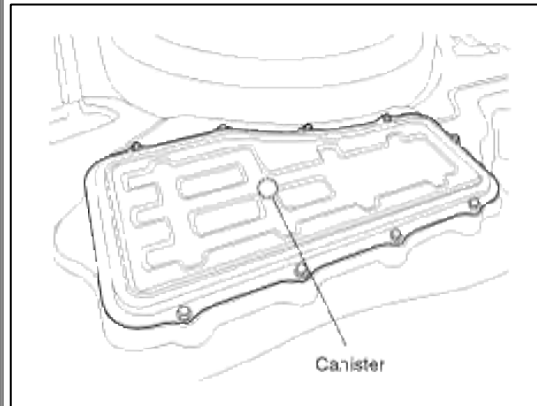


3. Purge Control Solenoid Valve (PCSV)

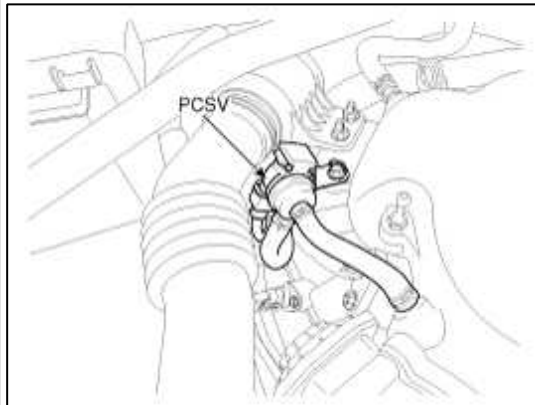


4. Fuel Tank Pressure Sensor (FTPS)

5. Canister Close Valve (CCV)


7. Fuel Tank Air Filter

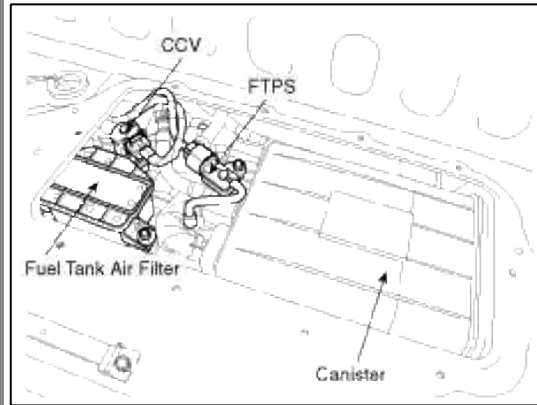

6. Fuel Level Sensor (FLS)


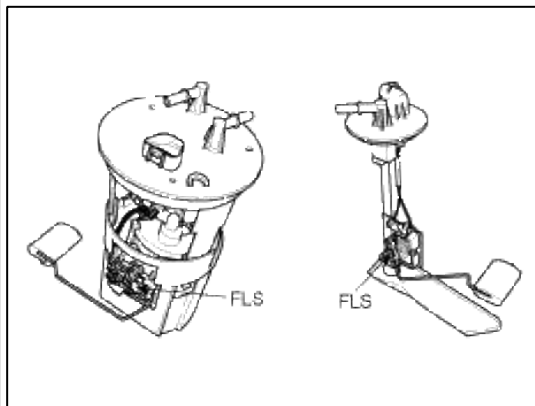



8. Catalytic Converter (WCC, Bank 1)

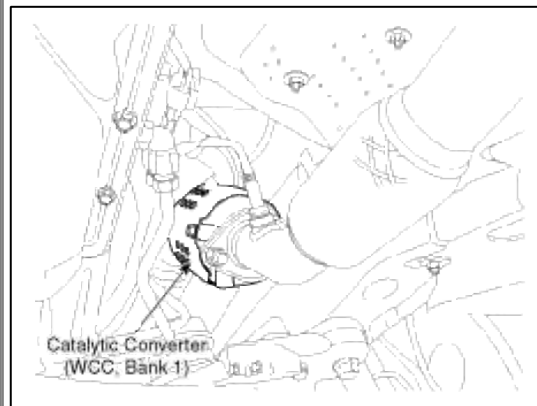

9. Catalytic Converter (WCC, Bank 2)

9. Catalytic Converter (UCC)

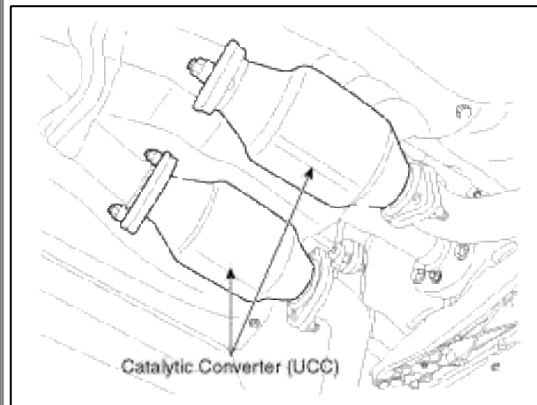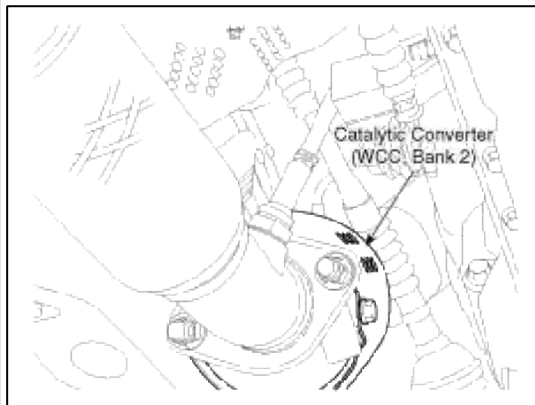

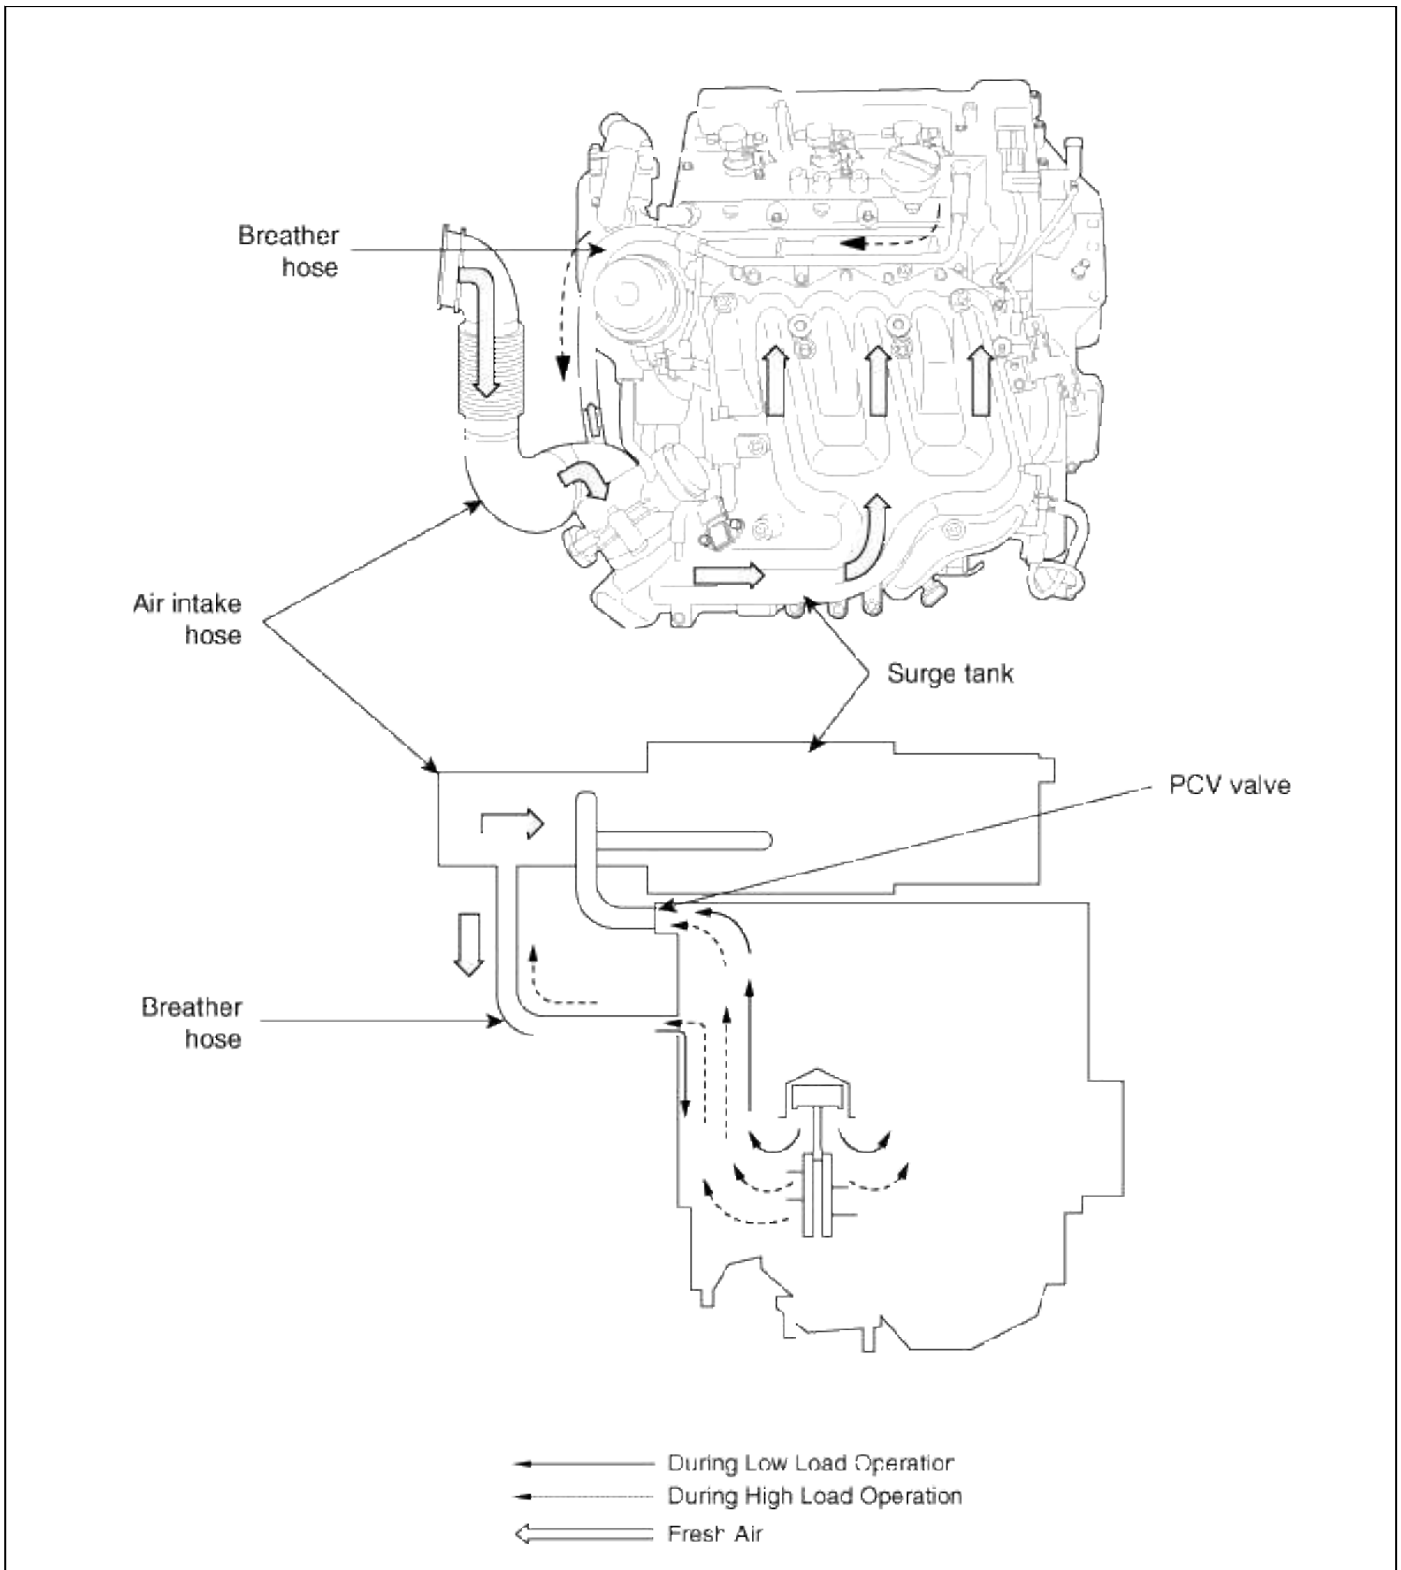

Emission Control System > Crankcase Emission Control System > Repair procedures


Inspection

1. After disconnecting the vapor hose from the PCV valve, remove the PCV valve.
2. Reconnect the PCV valve to the vapor hose.

- Run the engine at idle, and put a finger on the open end of the PCV valve and make sure that intake manifold vacuum can be felt.

NOTE

The plunger inside the PCV valve will move back and forth at vacuum.

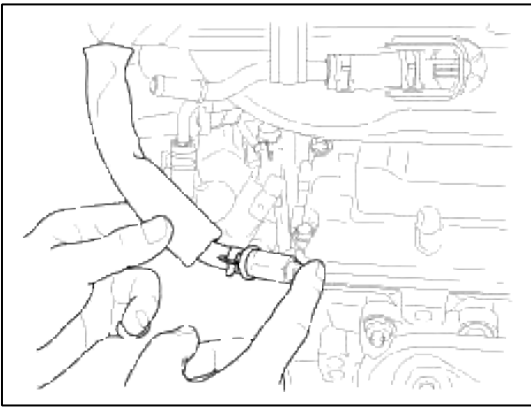

- If the vacuum is not felt, clean or replace the vapor hose.

Emission Control System > Crankcase Emission Control System > Positive Crankcase Ventilation (PCV) Valve > Description and Operation

Operation Principle


Engine Condition	Not Running	Idling or Decelerating	Normal Operation	Accelerating and High Load
Vacuum in Intake Manifold	0	High	Moderate	Low
PCV Valve	Close	Slightly Open	Properly Oper	Fully Open
Blow-by Gas Flow	0	Small	Medium	Large
Schematic Diagram	<p>Intake Manifold</p>	<p>Intake Manifold</p>	<p>Intake Manifold</p>	<p>Intake Manifold</p>

Emission Control System > Crankcase Emission Control System > Positive Crankcase Ventilation (PCV) Valve > Repair procedures

Removal


- Disconnect the vapor hose (A).

2. Remove the PCV valve (B).

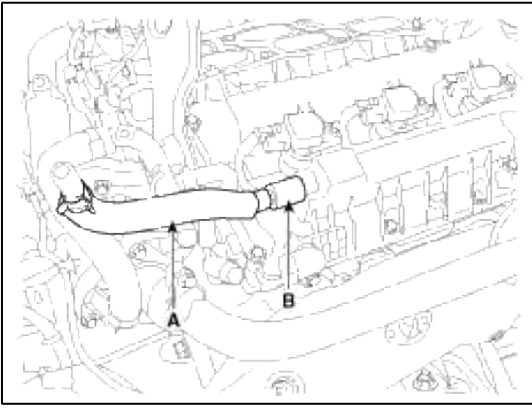

Inspection

1. Insert a thin stick (A) into the PCV valve (B) from the threaded side to check that the plunger moves.

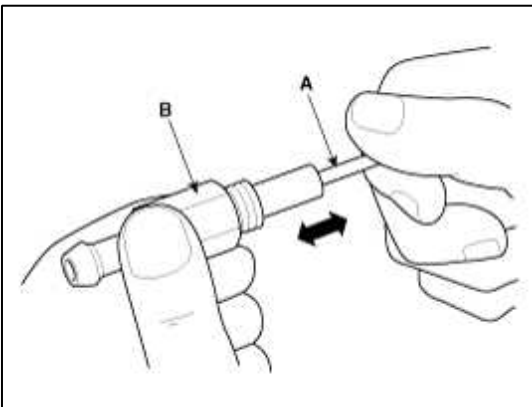**NOTE**

If the plunger does not move (PCV valve is clogged), clean or replace the valve.

Installation

1. Installation is reverse of removal.

PCV Valve installation :

7.8 ~ 11.8 N.m (0.8 ~ 1.2 kgf.m, 5.8 ~ 8.7 lb-ft)


Emission Control System > Evaporative Emission Control System > Description and Operation

Description

Evaporative Emission Control System prevents fuel vapor stored in fuel tank from vaporizing into the atmosphere. When the fuel evaporates in the fuel tank, the vapor passes through vent hoses or tubes to canister filled with charcoal. The canister temporarily holds the vapor in the charcoal. If ECM determines to draw the gathered vapor into the combustion chambers during certain operating conditions, it will vacuum into intake manifold.

Emission Control System > Evaporative Emission Control System > Schematic Diagrams

Schematic Diagram

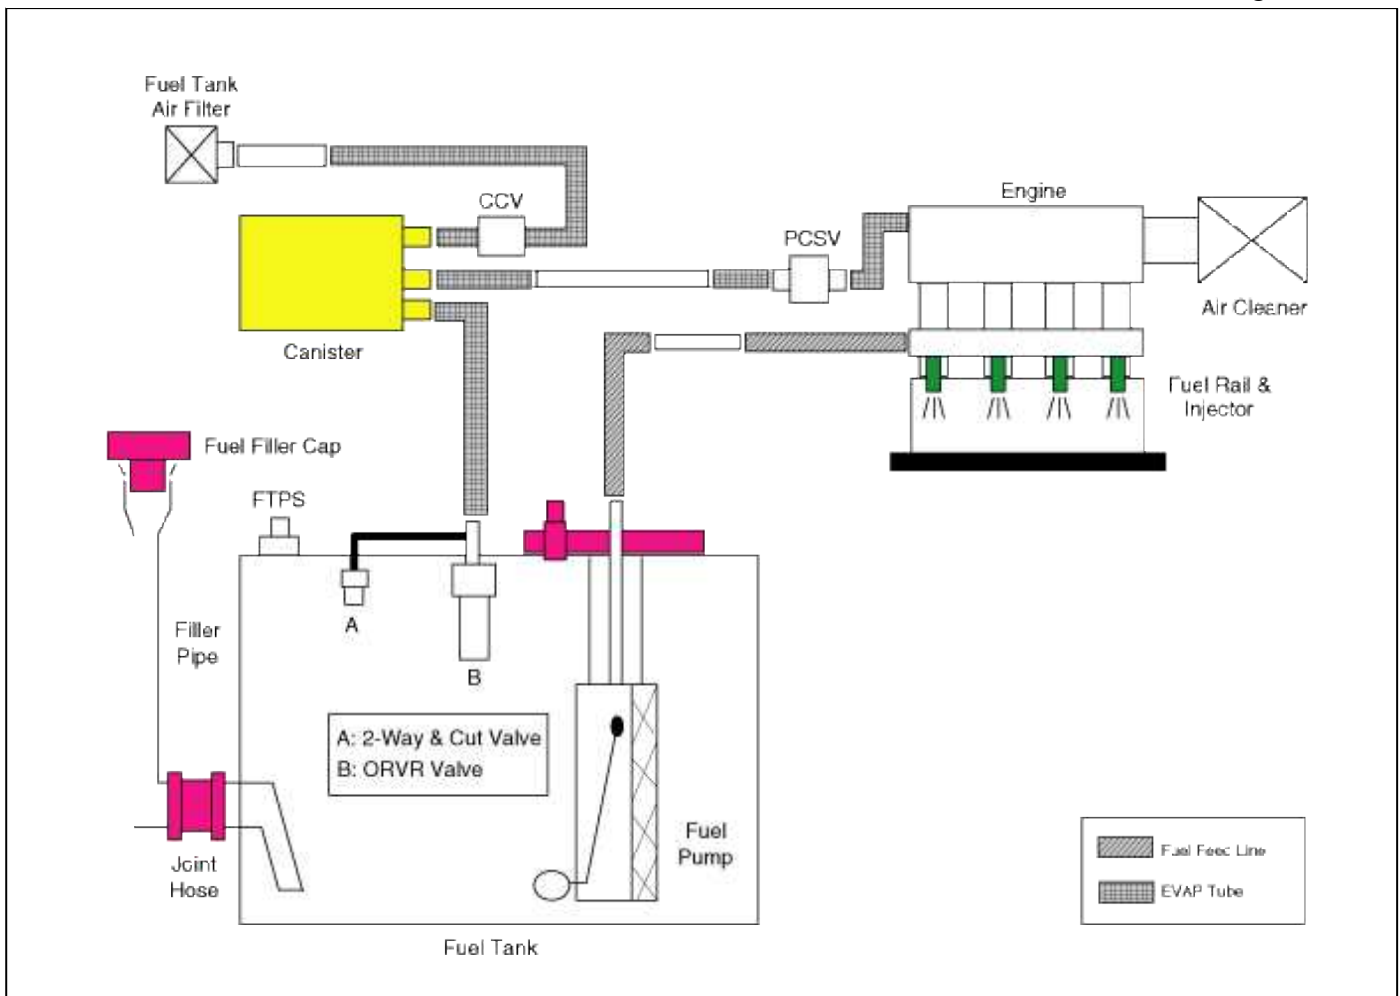

Canister

Canister is filled with charcoal and absorbs evaporated vapor in fuel tank. The gathered fuel vapor in canister is drawn into the intake manifold by the ECM/PCM when appropriate conditions are set.

Purge Control Solenoid Valve (PCSV)

Purge Control Solenoid Valve (PCSV) is installed in the passage connecting canister and intake manifold. It is a duty type solenoid valve and is operated by ECM/PCM signal.

To draw the absorbed vapor into the intake manifold, the ECM/PCM will open the PCSV, otherwise the passage remains closed.

Fuel Filler Cap

A ratchet tightening device on the threaded fuel filler cap reduces the chances of incorrect installation, seals the fuel filler. After the gasket on the fuel filler cap and the fill neck flange make contact, the ratchet produces a loud clicking noise indicating the seal has been set.

Fuel Tank Pressure Sensor (FTPS)

The Fuel Tank Pressure Sensor (FTPS) is an integral part of the monitoring system. The FTPS checks Purge Control Solenoid Valve (PCSV) operation and leaks in the Evaporative Emission Control System by monitoring pressure and vacuum level in the fuel tank during PCSV operating cycles.

Canister Close Valve (CCV)

The Canister Close Valve (CCV) is located between the canister and the fuel tank air filter. It closes off the air inlet to the canister for the Evaporative Emissions System and also prevents fuel vapors from escaping from the Canister when the vehicle is not operating.

Evaporative System Monitoring

Evaporative Emission Control Monitoring System consists of fuel vapor generation, evacuation, and leakage check step. At first, the OBD-II system checks if vapor generation due to fuel temperature is small enough to start monitoring. Then it evacuates the evaporative system by means of PCSV with ramp in order to maintain a certain vacuum level. The final step is to check if there is vacuum loss by any leakage of the system.

Vapor Generation Checking

During stabilization period, the PCSV and the CCV are closed. The system pressure is measured as starting pressure (DP_A). After a certain defined period (T1), the system pressure (DP_B) is measured again and the difference from the starting pressure is calculated. If this difference (DP_B - DP_A) is bigger than a threshold, there should be excessive vapor and the monitor is aborted for next checking. On the contrary, if the difference is lower than another negative threshold, PCSV is regarded as malfunction such as clogged at open position.


Evacuation

PCSV is opened with a certain ramp for the pressure to reach down to a certain level. If pressure can't be lowered below a threshold, the system is regarded as fuel cap-opened or having a large leakage.

Leaking Checking

PCSV is closed and the system waits for a period to get stabilized pressure. During checking period (T2), the system measures the beginning and the end of the system pressure (DP_C, DP_D). The diagnosis value is the pressure difference corrected by natural vapor generation (DP_B - DP_A) rate from the vapor generation checking step.

Evaporative System Monitoring

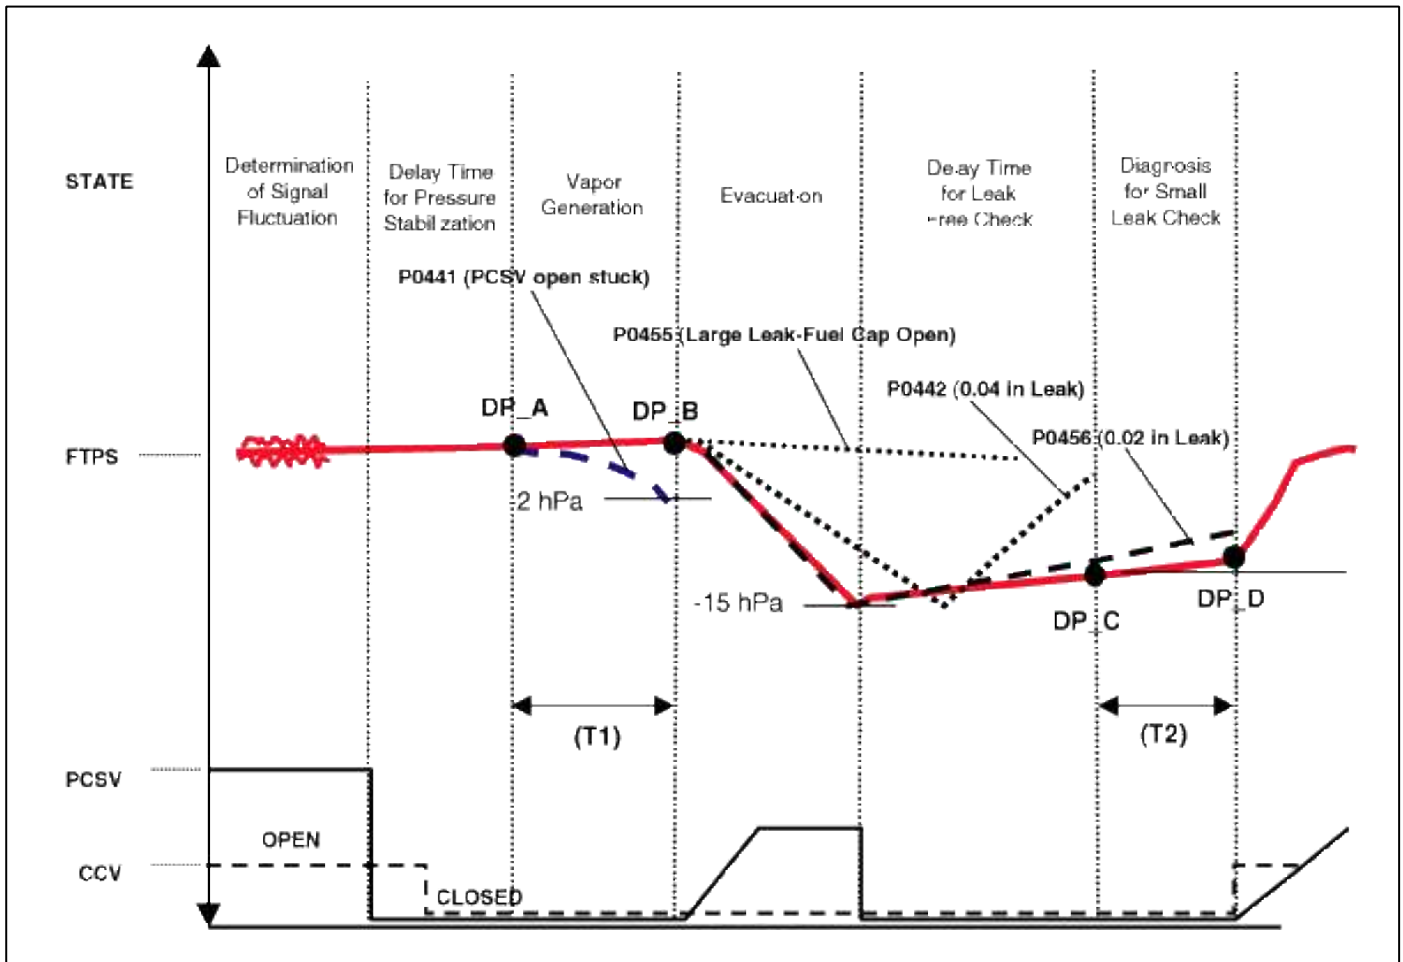


Evaporative And ORVR Emission Control System

This system consists of a fill vent valve, fuel shut-off valve, fuel cut valve (for roll over), two way valve (pressure/vacuum relief), fuel liquid/vapor separator which is installed beside the filler pipe, charcoal canister which is mounted under the rear floor LH side member and protector, tubes and miscellaneous connections.

While refueling, ambient air is drawn into the filler pipe so as not to emit fuel vapors in the air. The fuel vapor in the tank is then forced to flow into the canister via the fill vent valve. The fuel liquid/vapor separator isolates liquid fuel and passes the pure vapor to the charcoal canister.

While the engine is operating, the trapped vapor in the canister is drawn into the intake manifold and then into the engine combustion chamber. According to this purge process, the charcoal canister is purged and recovers its absorbing capability.

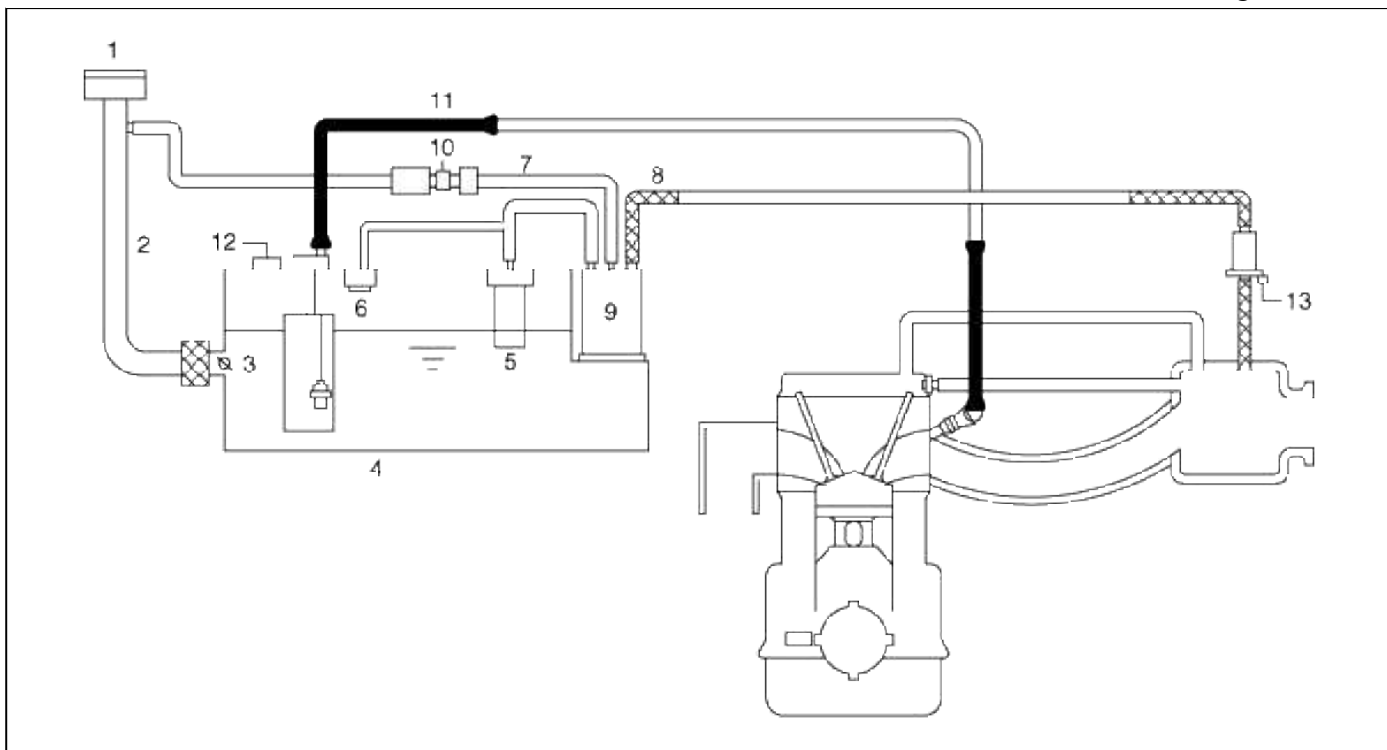

1. Fuel Filler Cap	8. Evaporative Hose
2. Fuel Filler Pipe	9. Canister
3. Fuel Shut-OFF Valve	10. Canister Close Valve (CCV)
4. Fuel Tank	11. Fuel Feed Line
5. ORVR Valve	12. Fuel Tank Pressure Sensor (FTPS)
6. 2-Way & Cut Valve	13. Purge Control Solenoid Valve (PCSV)
7. Evaporative Hose	

Emission Control System > Evaporative Emission Control System > Repair procedures

Inspection

[System Inspection]

1. Disconnect the vapor hose from the throttle body and connect a vacuum pump to the nipple on the throttle body.
2. Check the following points with applying vacuum using the vacuum pump.
 - At Cold Engine [Engine Coolant Temperature < 60°C(140°F)]


Engine Operating Condition	Applied Vacuum	Result
Idle	0.5kgf/cm ² (50kPa,7.3psi)	Vacuum is held
3,000rpm		

- At Warmed Engine [Engine Coolant Temperature > 80°C(176°F)]

Engine Operating Condition	Applied Vacuum	Result
Idle	0.5kgf/cm ² (50kPa,7.3psi)	Vacuum is held
Within 3 minutes after engine start at 3,000 rpm	Try to apply vacuum	Vacuum is released
In 3 minutes after engine start at 3,000 rpm	0.5kgf/cm ² (50kPa,7.3psi)	Vacuum will be held momentarily, after which, it will be released

[PCSV Inspection]

1. Turn ignition switch OFF and disconnect the negative (-) battery cable.
2. Disconnect the PCSV connector (A).
3. Disconnect the vapor hose (B) which is connected with the intake manifold from the PCSV.

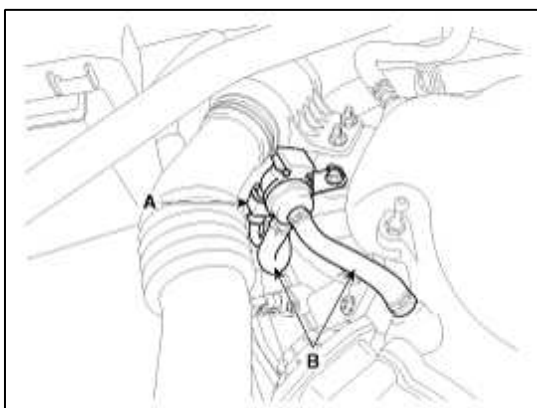

4. After connecting a vacuum pump to the nipple, apply vacuum.
5. With the PCSV control line grounded, check valve operation when applying battery voltage to the PCSV or not.

Battery Voltage	Valve	Vacuum
Connected	Open	Released
Disconnected	Close	Maintained

6. Measure the coil resistance of the PCSV.


Specification:

22.0 ~ 26.0Ω [20°C(68°F)]

Emission Control System > Evaporative Emission Control System > Canister > Repair procedures


Removal

1. Turn the ignition switch OFF and disconnect the negative (-) battery cable.
2. Remove the canister cover (A).

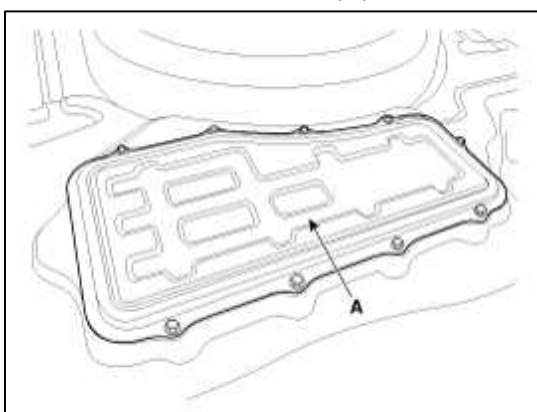

3. Disconnect the fuel tank pressure sensor connector (A) and the canister close valve connector (B).
4. Disconnect the vapor tube quick-connector (C), the vapor hose quick-connector (D), and the vapor hose (E) from the canister.
5. Remove the fuel tank pressure sensor hose clip (F).

6. Remove the canister after removing the installation bolt (G).

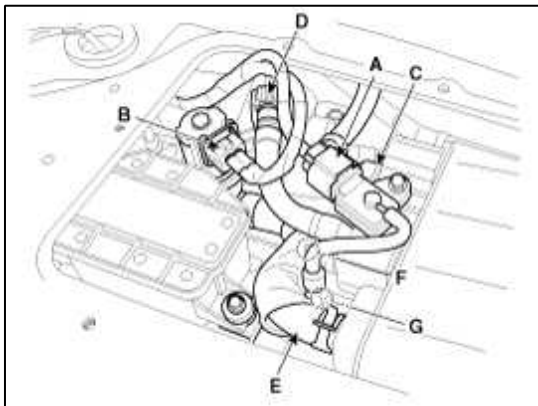


Inspection

1. Check for the following items visually.

A. Cracks or leakage of the canister

B. Loose connection, distortion, or damage of the vapor hose/tube

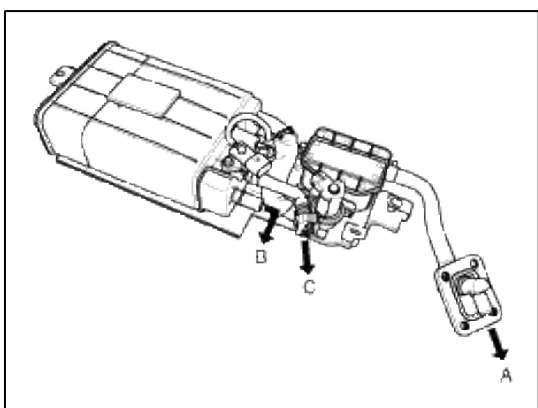

A: Canister ↔ Atmosphere (via Fuel Tank Air Filter)

B: Canister ↔ Fuel Tank

C: Canister ↔ Intake Manifold

Installation

Installation is reverse of removal.

Canister installation bolt :

3.9 ~ 5.9 N.m (0.4 ~ 0.6 kgf.m, 2.9 ~ 4.3 lb-ft)

Canister cover installation bolt :

7.8 ~ 11.8 N.m (0.8 ~ 1.2 kgf.m, 5.8 ~ 8.7 lb-ft)


Canister protector installation bolt :

19.6 ~ 29.4 N.m (2.0 ~ 3.0 kgf.m, 14.5 ~ 21.7 lb-ft)

Emission Control System > Evaporative Emission Control System > Fuel Filler Cap > Description and Operation

Description

A ratchet tightening device on the threaded fuel filler cap reduces the chances of incorrect installation, which would seal the fuel filler. After the gasket on the fuel filler cap and the filler neck flange contact each other, the ratchet produces a loud clicking noise indicating the seal has been set.

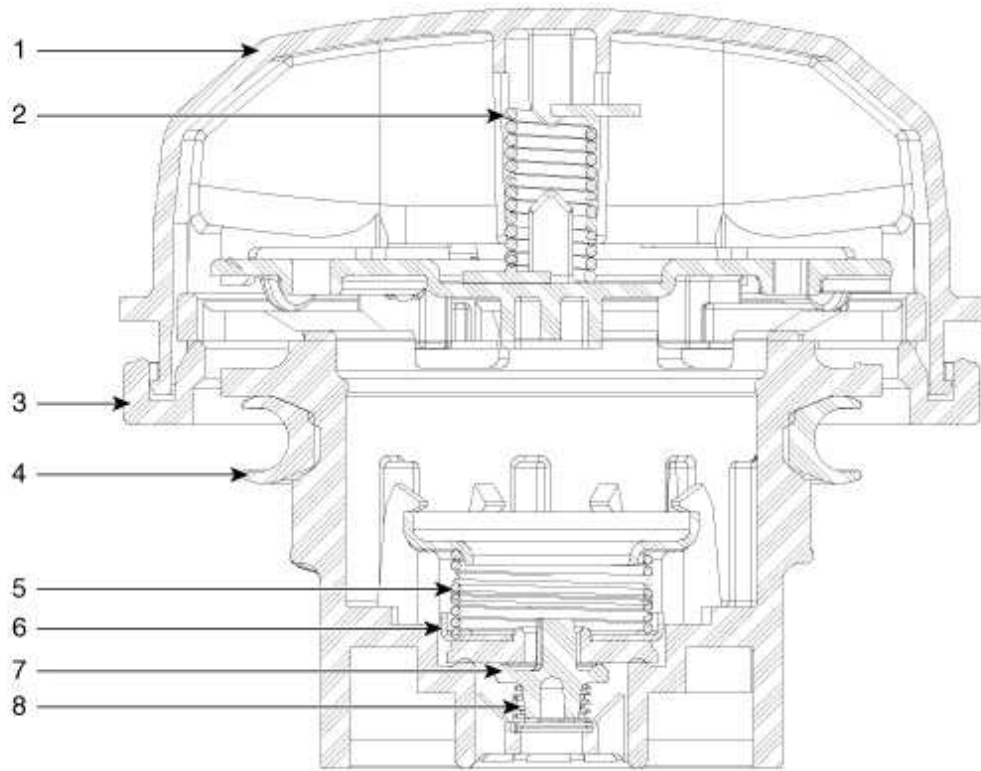


1. Cover	5. Spring
2. Torsion spring	6. Plate seal
3. Retainer	7. Vacuum valve
4. Gasket seal	8. Spring

Emission Control System > Evaporative Emission Control System > Fuel Tank Air Filter > Repair procedures


Replacement

1. Turn the ignition switch OFF and disconnect the negative (-) battery cable.
2. Remove the service cover (A).

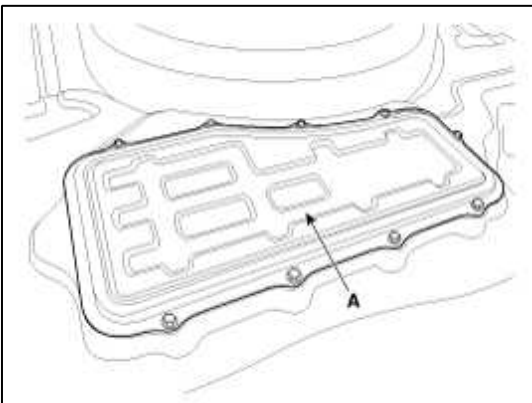


3. Disconnect the canister close valve connector (A).
4. Disconnect the vapor hose (B) from the canister.

5. Remove the insatallation bolt (C).

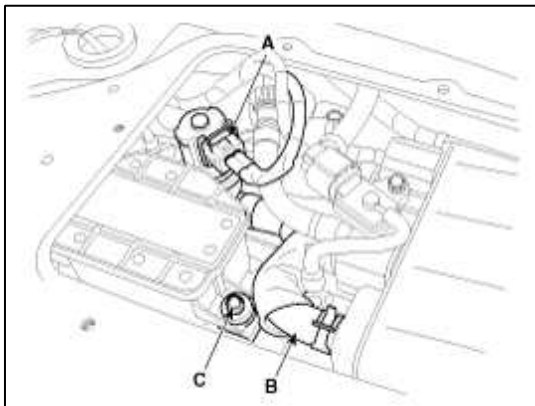

6. Disconnect the ventilation hose (A) from the connector assembly (B).

7. Remove the fuel tank air filter after removing the connector assembly installation bolts (C).

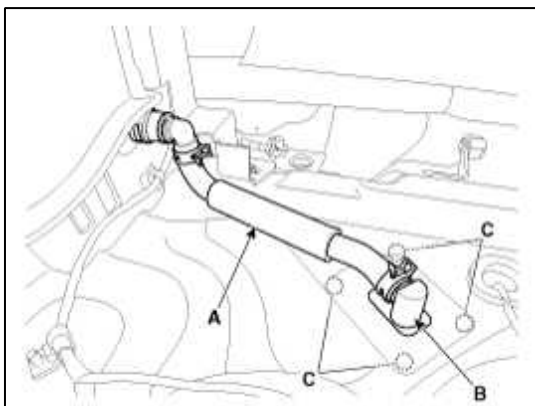

8. Install a new fuel tank assembly.

Ventilation hose connector assembly installation :

3.9 ~ 5.9 N.m (0.4 ~ 0.6 kgf.m, 2.9 ~4.3 lb-ft)

Emission Control System > Exhaust Emission Control System > Description and Operation

Description

Exhaust emissions (CO, HC, NO_x) are controlled by a combination of engine modifications and the addition of special control components.

Modifications to the combustion chamber, intake manifold, camshaft and ignition system form the basic control system.

These items have been integrated into a highly effective system which controls exhaust emissions while maintaining good drivability and fuel economy.

Air/Fuel Mixture Control System [Multiport Fuel Injection (MFI) System]

The MFI system uses signals from the heated oxygen sensor to activate and control the injector installed in the manifold for each cylinder, thus precisely regulating the air/fuel mixture ratio and reducing emissions.

This in turn allows the engine to produce exhaust gas of the proper composition to permit the use of a three way catalyst. The three way catalyst is designed to convert the three pollutants [hydrocarbons (HC), carbon monoxide (CO), and oxides of nitrogen (NO_x)] into harmless substances. There are two operating modes in the MFI system.



1. Open Loop air/fuel ratio is controlled by information programmed into the ECM.
2. Closed Loop air/fuel ratio is adjusted by the ECM based on information supplied by the oxygen sensor.

Emission Control System > Exhaust Emission Control System > Catalytic Converter > Description and Operation

Description

The catalytic converter of the gasoline engine is a three way catalyst. It oxidizes carbon monoxide and hydrocarbons (HC), and separates oxygen from the oxides of nitrogen (NO_x).

There are two types of three-way catalyst; Palette type and Monolith type.

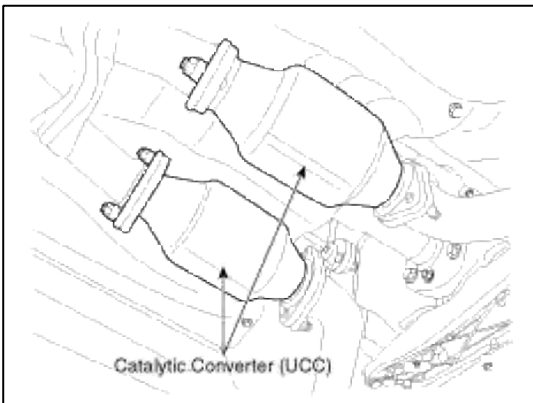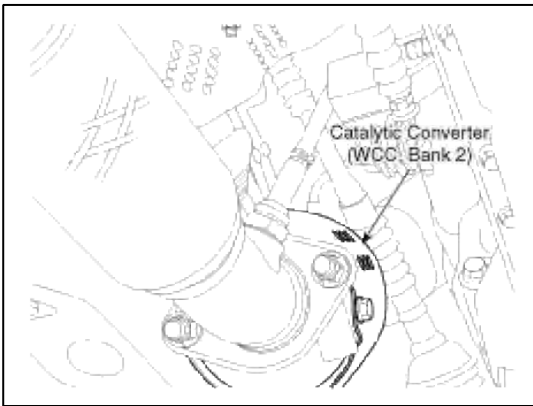

Emission Control System > Exhaust Emission Control System > CVVT (Continuously Variable Valve Timing) System > Description and Operation

Description


Continuous Variable Valve Timing (CVVT) system advances or retards the valve timing of the intake and exhaust valve in accordance with the ECM control signal which is calculated by the engine speed and load.

By controlling CVVT, the valve over-lap or under-lap occurs, which makes better fuel economy and reduces exhaust gases (NO_x, HC). CVVT improves engine performance through reduction of pump loss, internal EGR effect, improvement of combustion stability, improvement of volumetric efficiency, and increase of expansion work.

This system consist of


- the CVVT Oil Control Valve (OCV) which supplies the engine oil to the cam phaser or runs out the engine oil from the cam phaser in accordance with the ECM PWM (Pulse With Modulation) control signal,
- the CVVT Oil Temperature Sensor (OTS) which measures the engine oil temperature,
- and the Cam Phaser which varies the cam phase by using the hydraulic force of the engine oil.

The engine oil getting out of the CVVT oil control valve varies the cam phase in the direction (Intake Advance/Exhaust Retard) or opposite direction (Intake Retard/Exhaust Advance) of the engine rotation by rotating the rotor connected with the camshaft inside the cam phaser.


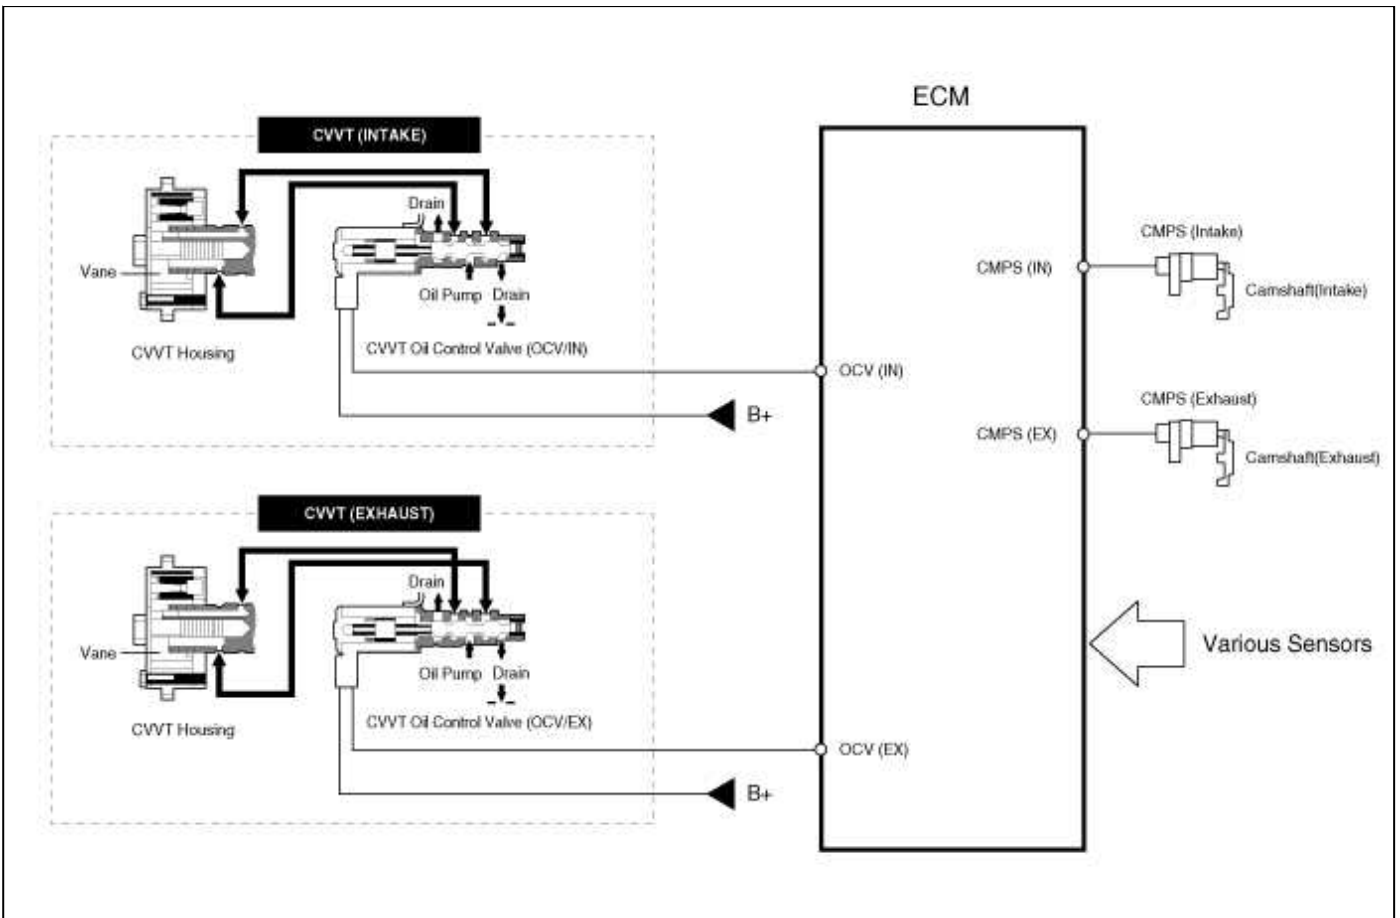


Operation Principle

The CVVT has the mechanism rotating the rotor vane with hydraulic force generated by the engine oil supplied to the advance or retard chamber in accordance with the CVVT oil control valve control.

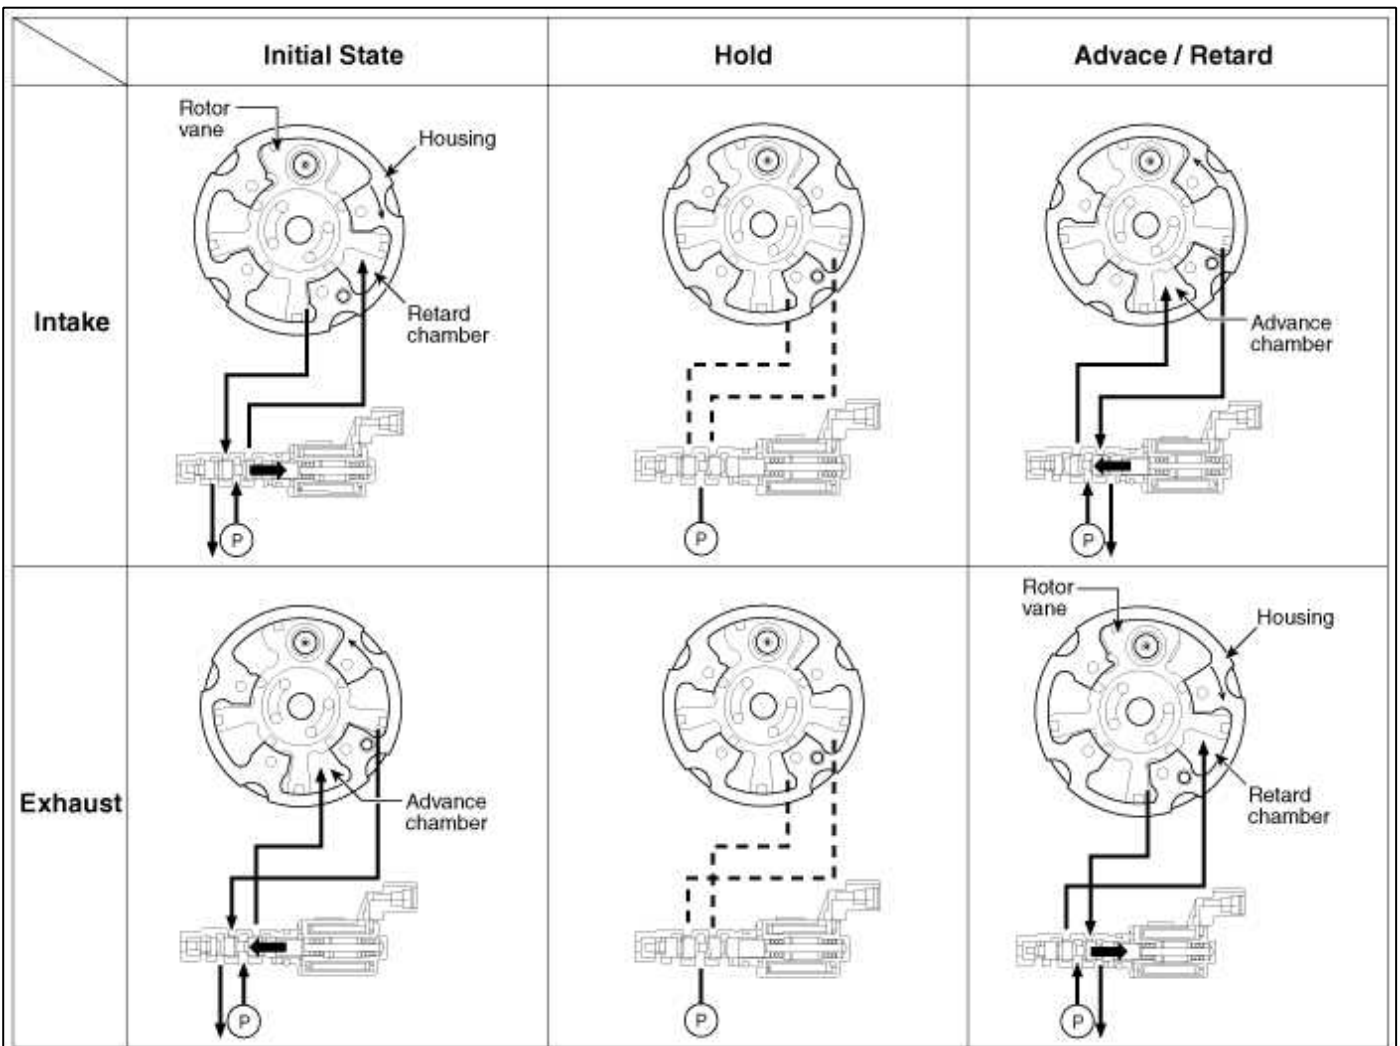

[CVVT System Mode]

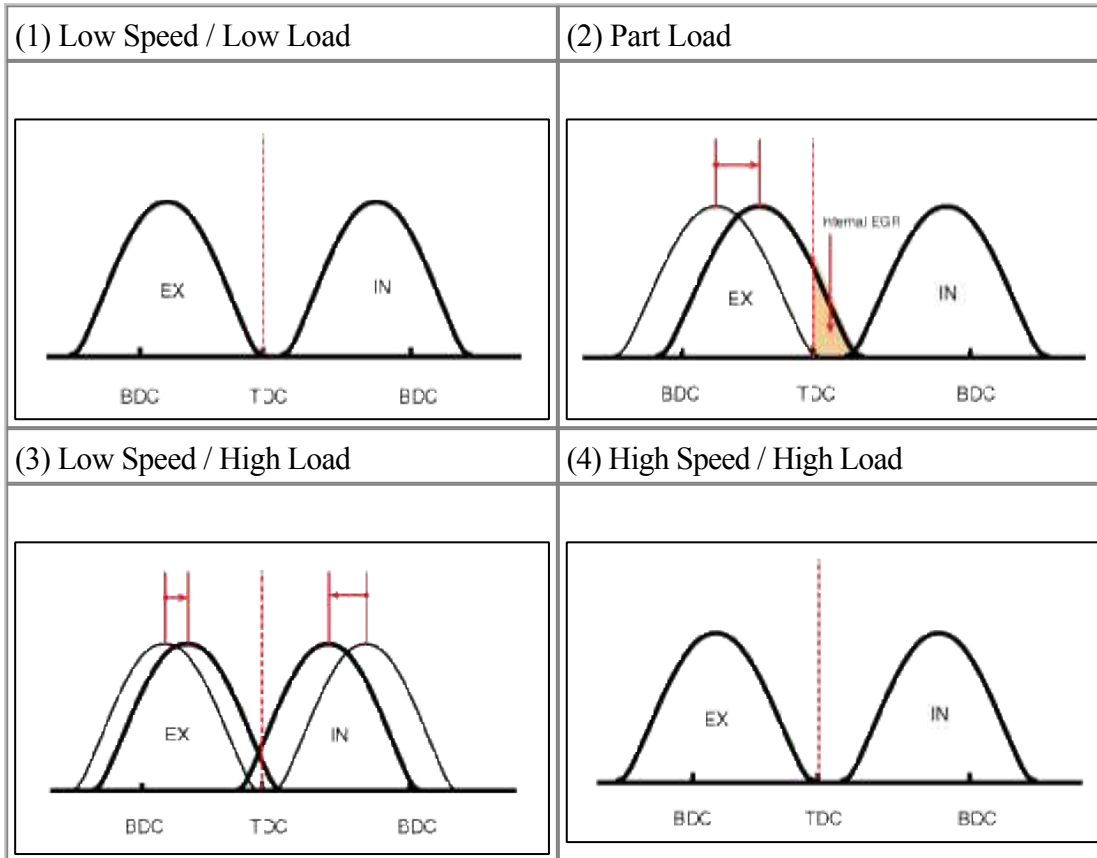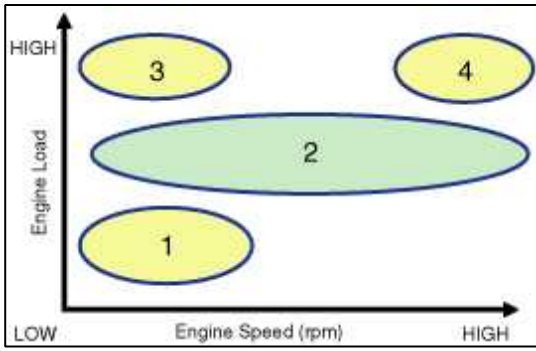

Driving Condition	Exhaust Valve		Intake Valve	
	Valve Timing	Effect	Valve Timing	Effect
(1) Low Speed /Low Load	Completely Advance	* Valve Under-lap * Improvement of combustion stability	Completely Retard	* Valve Under-lap * Improvement of combustion stability
(2) Part Load	Retard	* Increase of expansion work * Reduction of pumping loss * Reduction of HC	Retard	* Reduction of pumping loss
(3) Low Speed /High Load	Retard	* Increase of expansion work	Advance	* Prevention of intake back flow (Improvement of volumetric efficiency)
(4) High Speed /High Load	Advance	* Reduction of pumping loss	Retard	* Improvement of volumetric efficiency

GENESIS COUPE(BK) > 2013 > G 3.8 GDI > Engine Electrical System

Engine Electrical System > General Information > Specifications

Specifications

Ignition System

Items		Specification
Ignition coil	Primary resistance	0.62 ± 10 %
	Secondary resistance	7.0kΩ ± 15 %
Spark plugs	Type	SILZKR7B11
	Gap	1.0 ~ 1.1 mm (0.0394 ~ 0.0433 in.)

Starting System

Items		Specification	
Starter	Rated voltage	12 V, 1.7 kW	
	No. of pinion teeth	13	
	No-load characteristics	Voltage	11.5 V
		Ampere	85A, MAX
Speed		2,550 rpm, MIN	

Charging System

Items		Specification
Alternator	Rate voltage	13.5 V, 130A
	Speed in use	1,500 ~ 18,000 rpm
	Voltage regulator	IC regulator built-in type
	Regulator setting voltage	14.2 ~ 14.8V
Battery	Type	64 - 28 FL
	Cold cranking amperage [at -18°C(-0.4°F)]	660A
	Reserve capacity	145 min
	Specific gravity [at 25°C(77°F)]	1.280 ± 0.01


NOTE

- COLD CRANKING AMPERAGE is the amperage a battery can deliver for 30 seconds and maintain a terminal voltage of 7.2V or greater at a specified temperature.
- RESERVE CAPACITY RATING is amount of time a battery can deliver 25A and maintain a minimum terminal voltage of 10.5V at 26.7°C(80.1°F).

Battery type notation: MF 48 - 23 G L

① ② ③ ④ ⑤

- ① : Battery type
 - MF: Maintenance Free
- ② : Battery capacity (5HR)
 - 48: 48 AH
- ③ : Battery length (A)
 - 23: 230 mm (9.06 in.)
- ④ : Battery width (B)
 - A: 127 mm (5.00 in.)
 - B: 129 mm (5.08 in.)
 - C: 132 mm (5.20 in.)
 - D: 135 mm (5.31 in.)
 - E: 154 mm (6.06 in.)
 - F: 173 mm (6.81 in.)
 - G: 175 mm (6.89 in.)
 - H: 176 mm (6.93 in.) or above
- ⑤ : Terminal location (C)
 - L: Positive terminal is left
 - R: Positive terminal is right

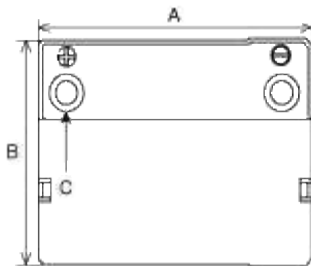

Engine Electrical System > General Information > Troubleshooting

Troubleshooting

Ignition System

Symptom	Suspect area	Remedy
Engine will not start or is hard to start (Crank OK)	Ignition lock switch	Inspect ignition lock switch, or replace as required
	Ignition coil	Inspect ignition coil, or replace as required
	Spark plugs	Inspect spark plugs, or replace as required
	Ignition wiring disconnected or broken	Repair wiring, or replace as required
Rough idle or stalls	Ignition wiring	Repair wiring, or replace as required
	Ignition coil	Inspect ignition coil, or replace as required
Engine hesitates/poor acceleration	Spark plugs and spark plug cables	Inspect spark plugs / cable, or replace as required
	Ignition wiring	Repair wiring, or replace as required
Poor mileage	Spark plugs and spark plug cables	Inspect spark plugs / cable, or replace as required

Charging System

Symptom	Suspect area	Remedy
Charging warning indicator does not light with ignition switch "ON" and engine off.	Fuse blown	Check fuses
	Light burned out	Replace light
	Wiring connection loose	Tighten loose connection
	Electronic voltage regulator	Replace alternator
	Communication error	Inspect wiring between ECM-Regulator Inspect ECM output signal /or replace alternator as required
Charging warning indicator does not go out with engine running. (Battery requires frequent recharging)	Drive belt loose or worn	Adjust belt tension or replace belt
	Battery cable loose, corroded or worn	Inspect cable connection, repair or replace cable
	Electronic voltage regulator or alternator	Replace alternator
	Wiring	Repair or replace wiring
	Battery condition detection error	Replace battery sensor
Overcharge	Electronic voltage regulator	Replace alternator
	Voltage sensing wire	Repair or replace wiring
Discharge	Drive belt loose or worn	Adjust belt tension or replace belt
	Wiring connection loose or short circuit	Inspect wiring connection, repair or replace wiring

	Electronic voltage regulator or alternator	Replace alternator
	Poor grounding	Inspect ground or repair
	Worn battery	Replace battery
	Bad electrical load	Replace electrical load

Starting System

Symptom	Suspect area	Remedy
Engine will not crank	Battery charge low	Charge or replace battery
	Battery cables loose, corroded or worn out	Repair or replace cables
	Transmission range switch (Vehicle with automatic transmission only)	Refer to AT group-automatic transmission
	Fuse blown	Replace fuse
	Starter motor faulty	Replace
	Ignition switch faulty	Replace
Engine cranks slowly	Battery charge low	Charge or replace battery
	Battery cables loose, corroded or worn out	Repair or replace cables
	Starter motor faulty	Replace
Starter keeps running	Starter motor	Replace
	Ignition switch	Replace
Starter spins but engine will not crank	Short in wiring	Repair wiring
	Pinion gear teeth broken or starter motor	Replace
	Ring gear teeth broken	Replace drive plate or torque converter

Engine Electrical System > General Information > General Information

The Micro 570 Analyzer (Canada only)

The Micro 570 Analyzer provides the ability to test the charging and starting systems, including the battery, starter and alternator.

CAUTION

Because of the possibility of personal injury, always use extreme caution and appropriate eye protection when working with batteries.


When charging battery by test result, Battery must be fully charged.

To get accurate test result, battery surface voltage must have subsided ahead before test when you test battery after charged. (See following Battery Test Results)




Keypad

The Micro 570 button on the key pad provide the following functions :

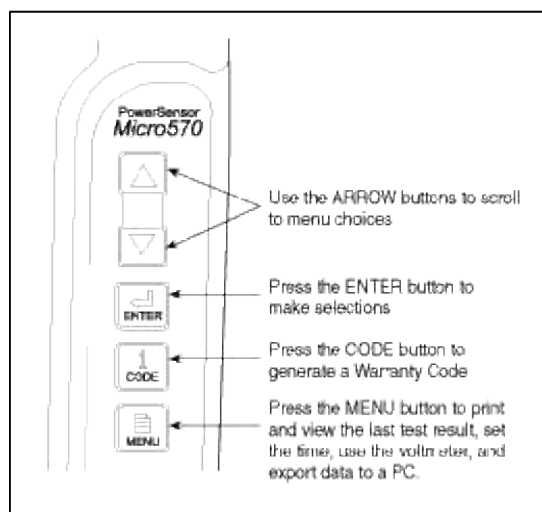

Battery Test Procedure


1. Connect the tester to the battery.
 - A. Red clamp to battery positive (+) terminal.
 - B. Black clamp to battery negative (-) terminal.

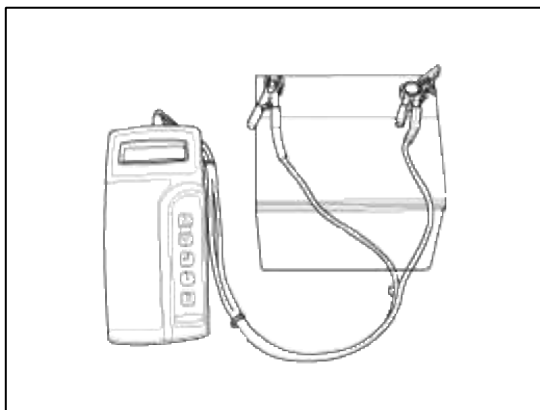


CAUTION

Connect clamps securely. If "CHECK CONNECTION" message is displayed on the screen, reconnect clamps securely.

2. The tester will ask if the battery is connected "IN-VEHICLE" or "OUT-OF-VEHICLE". Make your selection by pressing the arrow buttons; then press ENTER.

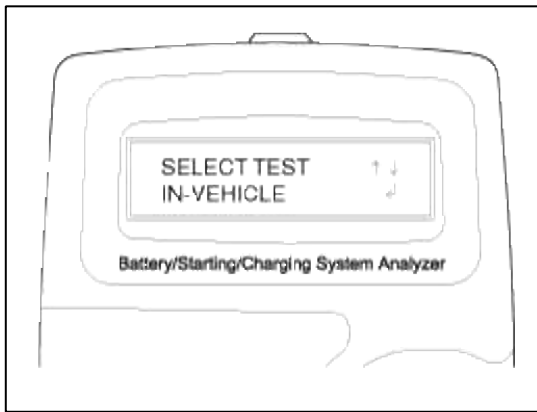


3. Select CCA and press the ENTER button.

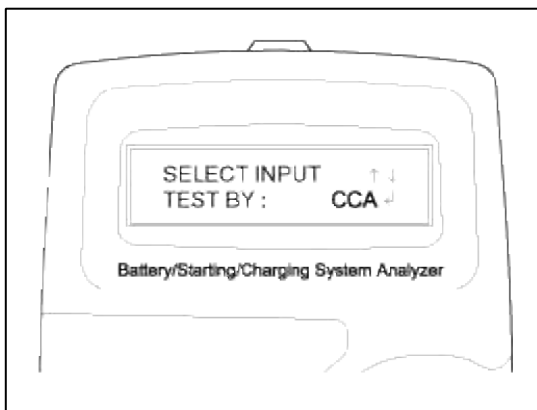**NOTE**


CCA : Cold cranking amps, is an SAE specification for cranking batteries at -0.4°F (-18°C).

4. Set the CCA value displayed on the screen to the CCA value marked on the battery label by pressing up and down buttons and press ENTER.

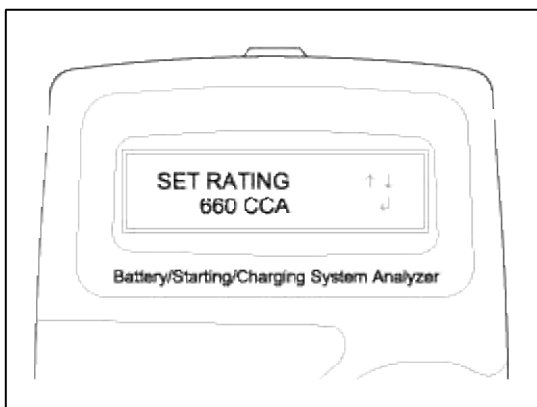
**NOTE**

The battery ratings(CCA) displayed on the tester must be identical to the ratings marked on battery label.

5. The tester will conduct battery test.

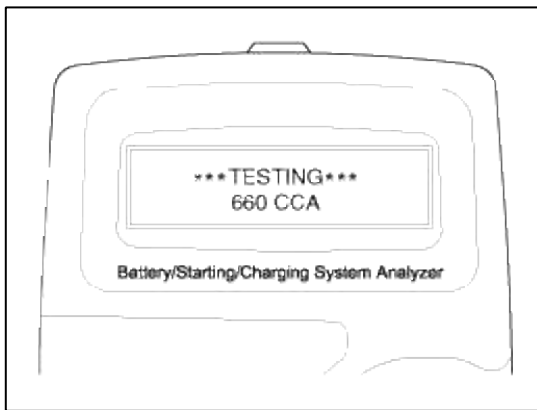

6. The tester displays battery test results including voltage and battery ratings. Refer to the following table and take the appropriate action as recommended by the Micro 570.

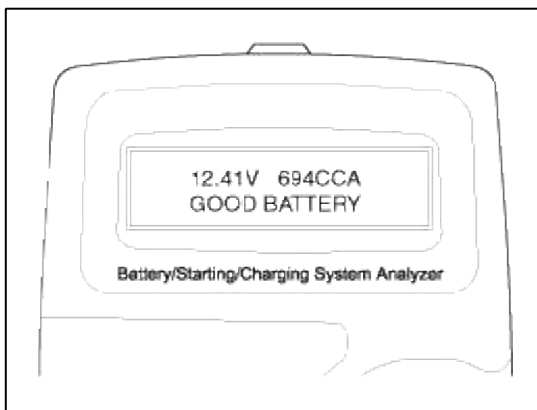

Battery Test Results

Result On Printer	Remedy
GOOD BATTERY	No action is required.
GOOD RECHARGE	Battery is in a good state. Recharge the battery and use. You have to follow instruction below when you charge battery and retest, otherwise test result can be inaccurate. (See 'Charge and Retest method after battery charge' below.)
CHARGE & RETEST	Battery is not charged properly. - Charge and test the battery again. You have to follow instruction below when you charge battery and retest, otherwise test result can be inaccurate. (See 'Charge and Retest method after battery charge' below.)
REPLACE BATTERY	Replace battery and recheck the charging system. - Improper connection between battery and vehicle cables may cause "REPLACE BATTERY". Retest the battery after removing cables and connecting the tester to the battery terminal directly prior to replacing the battery.
BAD CELL-REPLACE	Charge and retest the battery. - If the Micro 570 recommends "REPLACE BATTERY", replace the battery and recheck the charging system.

[Charge and Retest method after battery charge]

Battery charge

Set battery charger to 'Auto Mode' (The Mode that charging current drops as the battery charges.) and charge battery until charging current down close to zero or the charger alerts you with an alarm when charge is complete. (Minimum charging time recommended: More than 3 hours with Auto Mode that explained above)

A. If battery is not fully charged, battery surface voltage will be high while the amount of current charged (CCA) in battery is low. If you measure the battery under this condition, tester may misjudge that battery sulfation occurred because the amount of current in battery is too low in comparison with battery voltage.

* Surface voltage: When battery is charged electrolyte temperature increases and chemical reaction become active resulting in an excessive increase of battery voltage.

It is known that it takes approximate one day to subside this increased surface voltage completely.

Battery Test after charge

Do not test battery right after the charge. Test battery after battery surface voltage has subsided as instructed in the following procedure.


- (1) When battery charge is complete, install the battery in the vehicle.
- (2) Put IG key to ON position and turn on head lamp with low beam, and wait 5 minutes. (Discharge for 5 minutes)
- (3) Turn off the head lamp and IG key, and wait 5 minutes. (Waiting for 5 minutes)
- (4) Remove +, - cable from the battery and test battery.

WARNING


Whenever filing a claim for battery, the print out of the battery test results must be attached.

Starter Test Procedure

7. After the battery test, press ENTER immediately for the starter test.

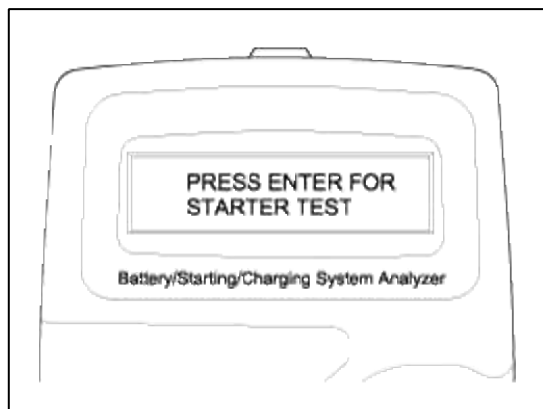


8. Start the engine.

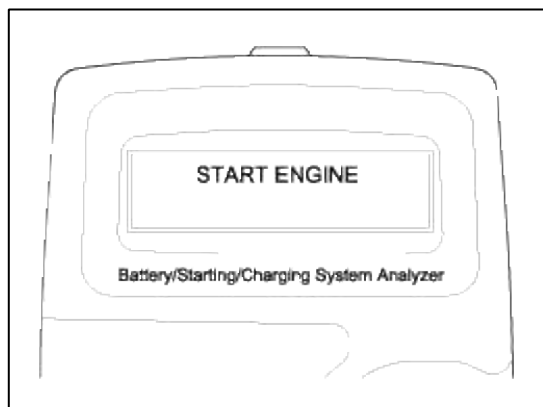

9. Cranking voltage and starter test results will be displayed on the screen.

Refer to the following table and take the appropriate action as recommended by the Micro 570.

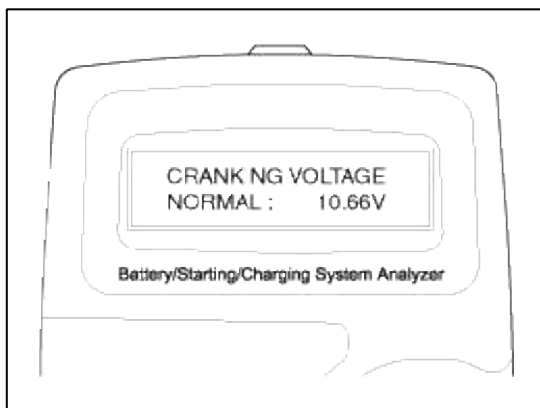

Starter Test Results


Result On Printer	Remedy
CRANKING VOLTAGE NORMAL	System shows a normal starter draw.
CRANKING VOLTAGE LOW	Cranking voltage is lower than normal level. - Check starter.
CHARGE BATTERY	The state of battery charge is too low to test. - Charge the battery and retest.
REPLACE BATTERY	Replace battery. - If the vehicle is not started though the battery condition of "GOOD BATTERY" is displayed, check wiring for open circuit, battery cable connection, starter and repair or replace as necessary. - If the engine does crank, check fuel system.

NOTE


When testing the vehicle with old diesel engines, the test result will not be favorable if the glow plug is not heated. Conduct the test after warming up the engine for 5 minutes.

Charging System Test Procedure




10. Press ENTER to begin charging system test.

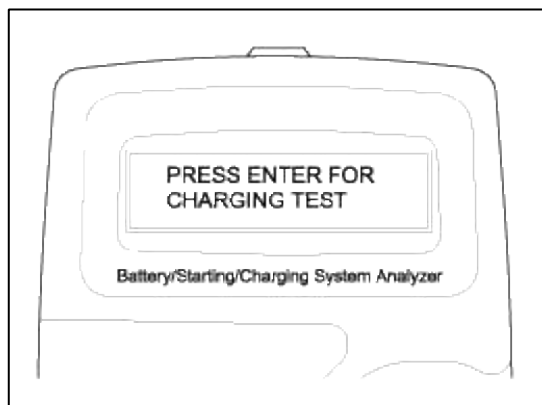


11. The tester displays the actual voltage of alternator.
Press ENTER to continue.

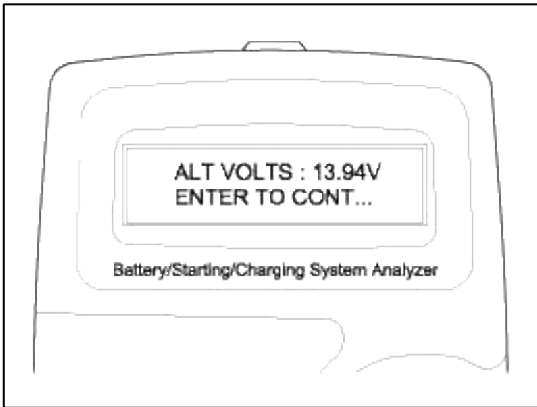


12. Turn off all electrical load and rev engine for 5 seconds with pressing the accelerator pedal. (Follow the instructions on the screen)

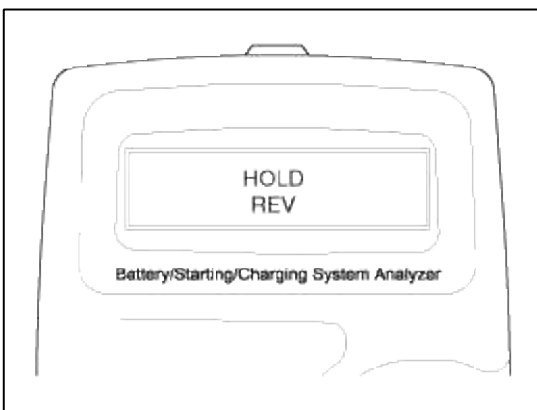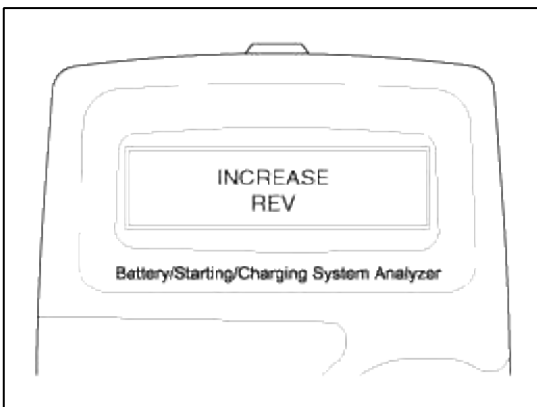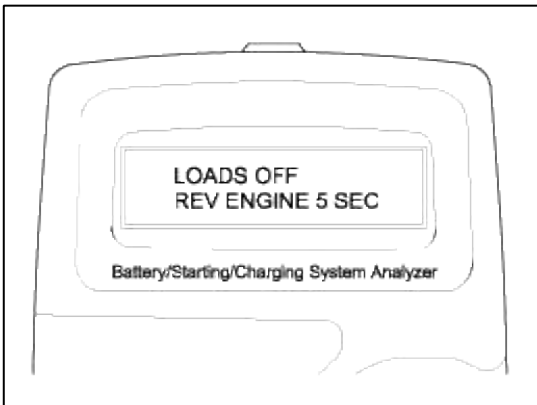



13. The message that engine RPM is detected will be displayed on the screen. Press ENTER to continue.

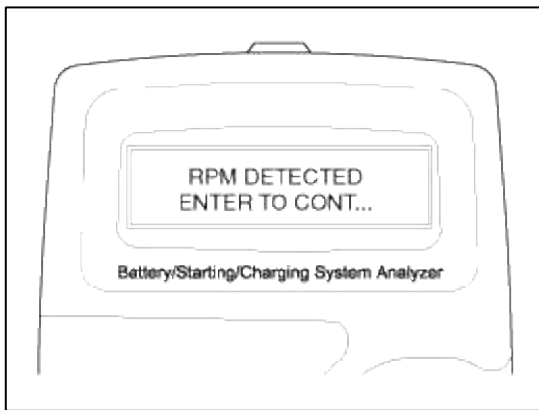


14. If the engine RPM is not detected, press ENTER after revving engine.

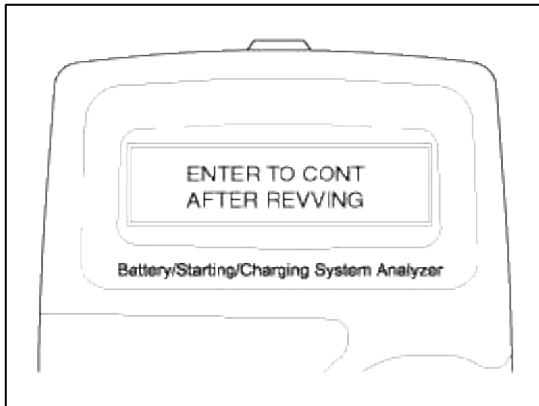


15. The tester will conduct charging system test during loads off.

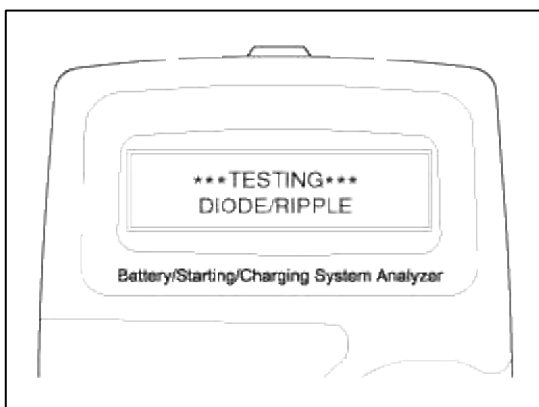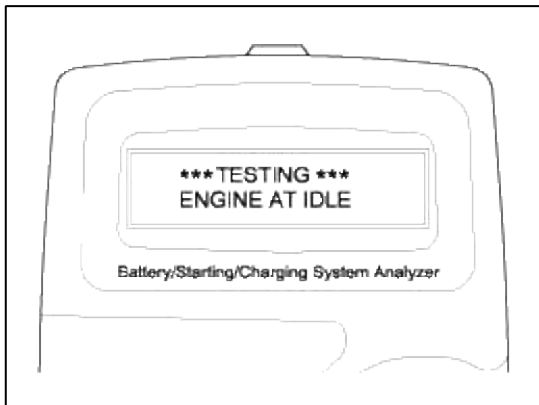



16. Turn on electrical loads (air conditioner, lamps, audio and etc). Press ENTER to continue.

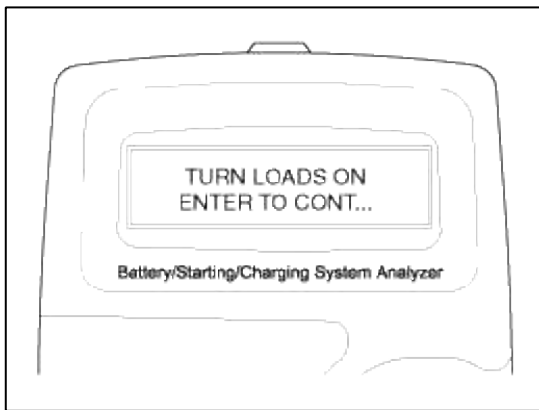


17. The tester will conduct charging system test during loads on.

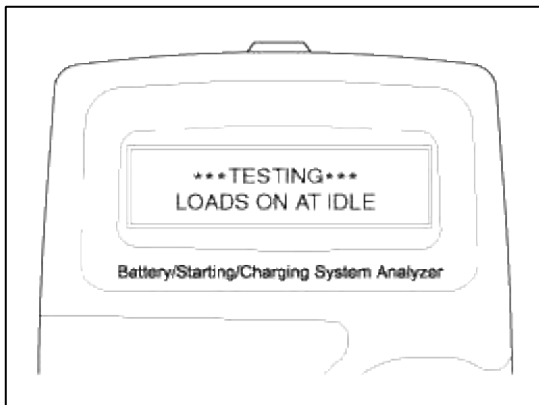


18. Rev engine for 5 seconds with pressing the accelerator pedal. (Follow the instructions on the screen)

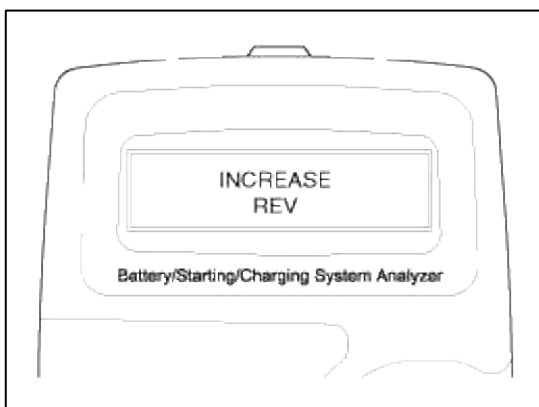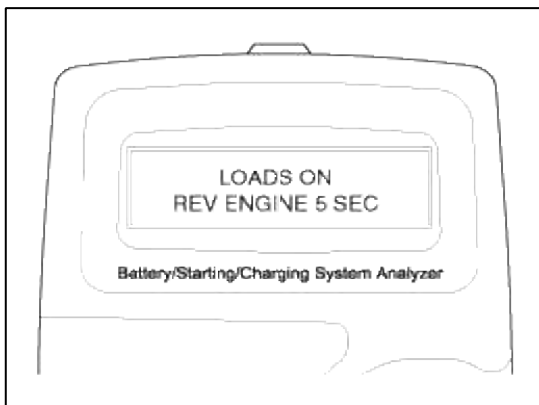


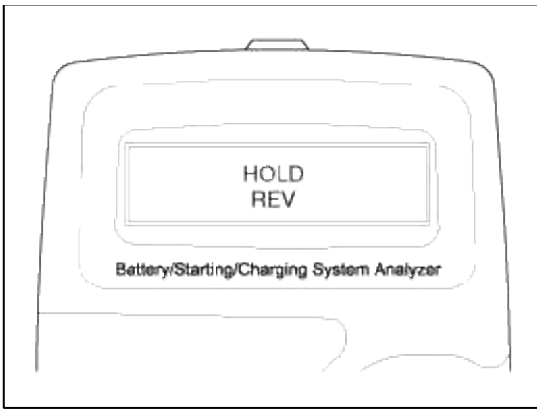


19. The message that engine RPM is detected will be displayed on the screen. Press ENTER to continue.

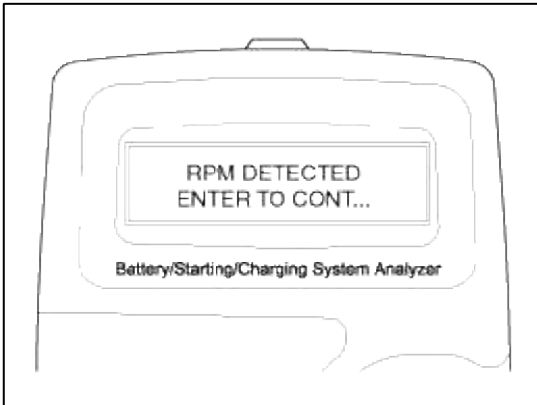




20. If the engine RPM is not detected, press ENTER after revving engine.

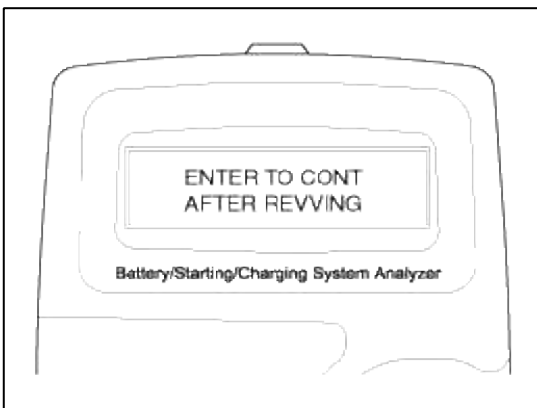

21. Turn off electrical loads (air conditioner, lamps, audio and etc). Turn the engine off.

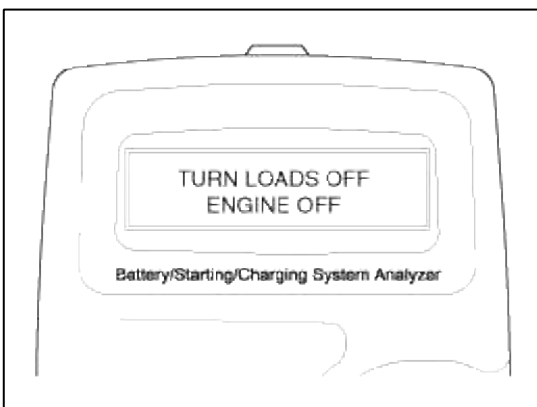

22. Charging voltage and charging system test results will be displayed on the screen. Shut off engine and disconnect the tester clamps from the battery. Refer to the following table and take the appropriate action as recommended by the Micro 570.

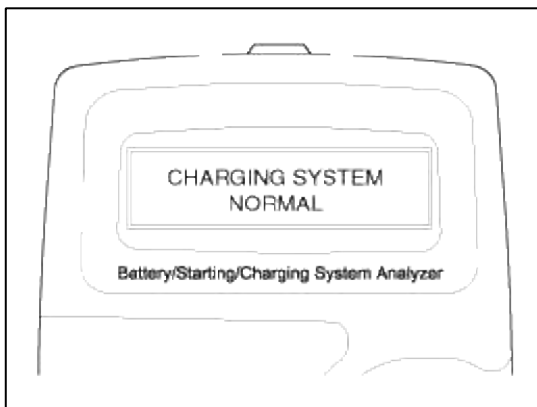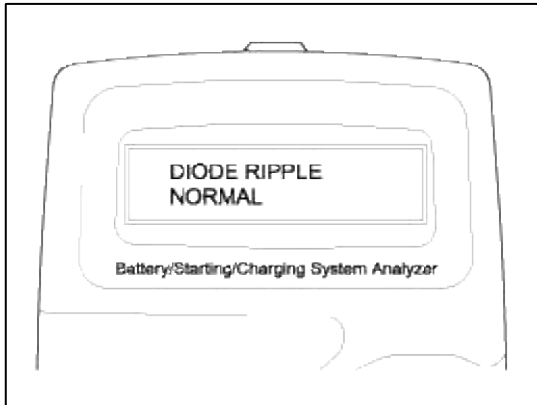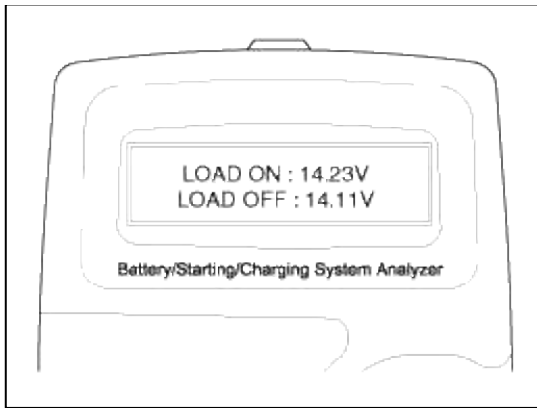

Charging System Test Results

Result On Printer	Remedy
CHARGING SYSTEM NORMAL / DIODE RIPPLE NORMAL	Charging system is normal.
NO CHARGING VOLTAGE	Alternator does not supply charging current to battery. - Check belts, connection between alternator and battery and replace belts or cable or alternator as necessary.
LOW CHARGING VOLTAGE	Alternator does not supply charging current to battery and electrical load to system fully. - Check belts and alternator and replace as necessary.
HIGH CHARGING VOLTAGE	The voltage from alternator to battery is higher than normal limit during voltage regulating. - Check connection and ground and replace regulator as necessary. - Check electrolyte level in the battery.
EXCESS RIPPLE DETECTED	One or more diodes in the alternator is not functioning properly. - Check alternator mounting and belts and replace as necessary.

Engine Electrical System > Ignition System > Description and Operation

Description

Ignition timing is controlled by the electronic control ignition timing system. The standard reference ignition timing data for the engine operating conditions are preprogrammed in the memory of the ECM (Engine Control Module). The engine operating conditions (speed, load, warm-up condition, etc.) are detected by the various sensors. Based on these sensor signals and the ignition timing data, signals to interrupt the primary current are sent to the ECM. The ignition coil is activated, and timing is controlled.

Engine Electrical System > Ignition System > Repair procedures

On-vehicle Inspection



Spark Test

1. Disconnect the battery negative cable.

Tightening torque :


7.8 ~ 9.8N.m (0.8 ~ 1.0kgf.m, 5.8 ~ 7.2lb-ft)

2. Remove the surge tank. (RH only)
(Refer to Engine Mechanical System - "Intake And Exhaust System")
3. Remove the LH/RH ignition coil connectors (A) and then, remove the ignition coil.

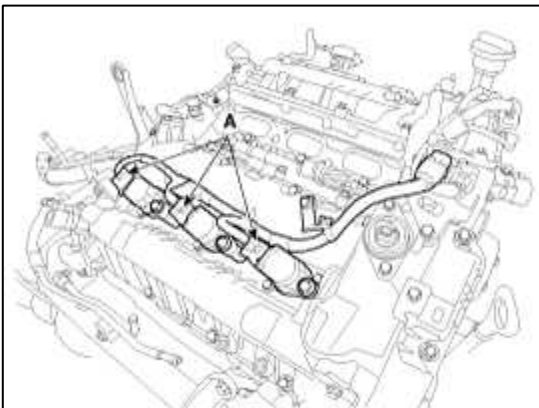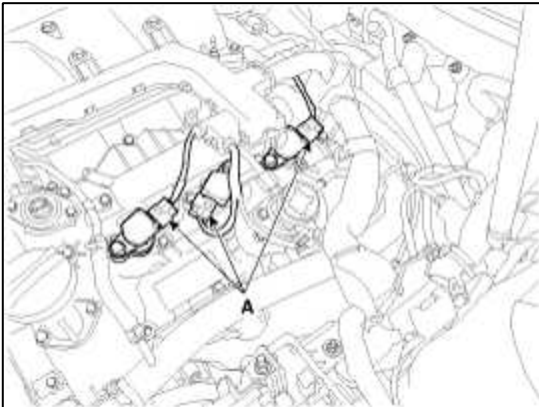


NOTE

When removing the ignition coil connector, pull the lock pin(A) and push the clip(B).

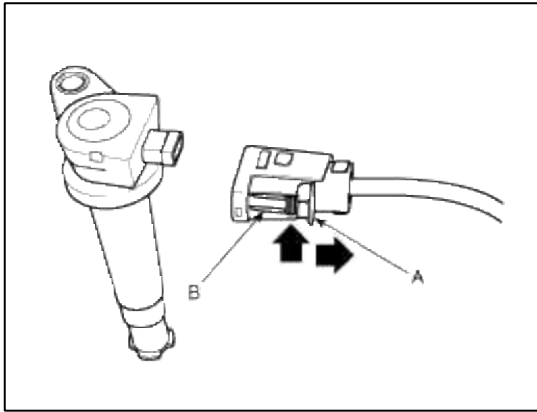

4. Using a spark plug socket, remove the spark plug.
5. Install the spark plug to the ignition coil.
6. Ground the spark plug to the engine.

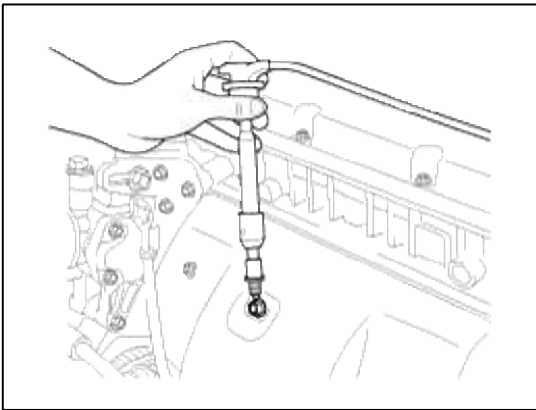

7. Check if spark occurs while engine is being cranked.

NOTE

To prevent fuel being injected from injectors while the engine is being cranked, disconnect the fuel pump connector.

Crank the engine for no more than 5 ~ 10 seconds.

8. Inspect all the spark plugs.
9. Using a spark plug socket, install the spark plugs.

Tightening torque :


14.7 ~ 24.5N.m (1.5 ~ 2.5kgf.m, 10.8 ~ 18.1lb-ft)

10. Install the ignition coils.

Tightening torque :



9.8 ~ 11.8N.m (1.0 ~ 1.2kgf.m, 7.2 ~ 8.7lb-ft)

11. Reconnect the ignition coil connector.

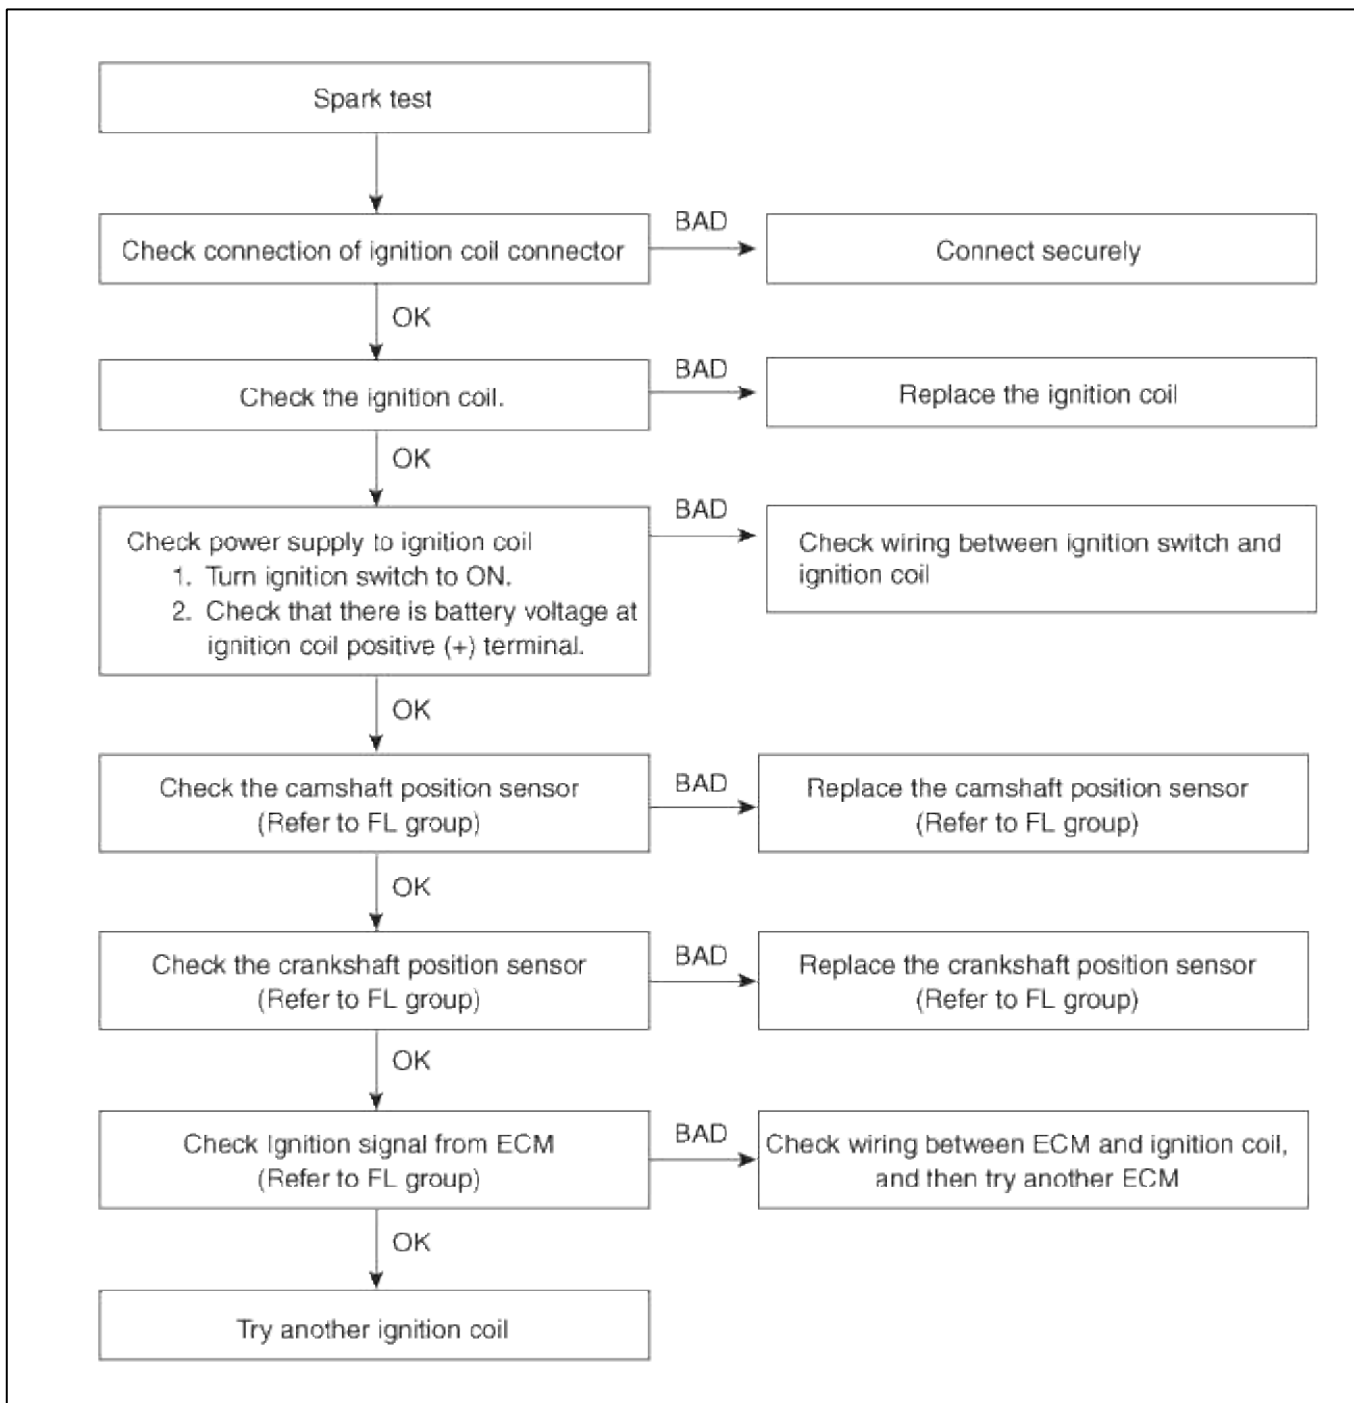


Inspect Spark Plug

1. Remove the LH/RH ignition coil connectors (A) and then, remove the ignition coil.

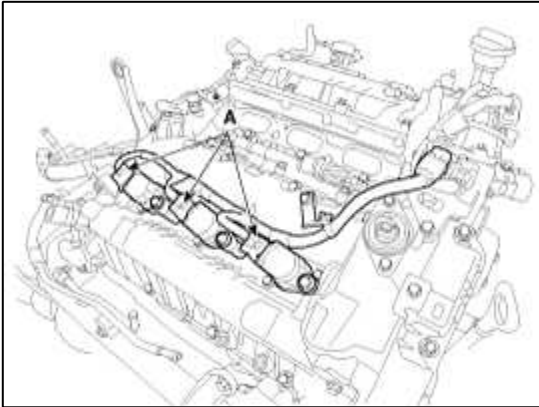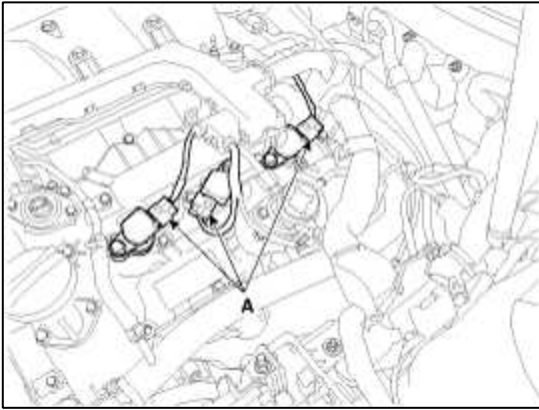**NOTE**

When removing the ignition coil connector, pull the lock pin(A) and push the clip(B).

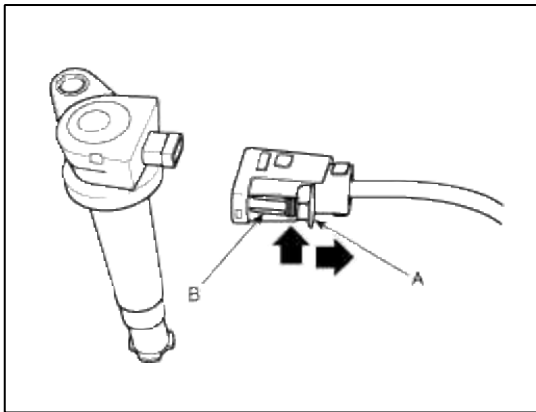


2. Using a spark plug socket, remove the spark plug.

CAUTION

Be careful that no contaminants enter through the spark plug holes.

3. Inspect the electrodes (A) and ceramic insulator (B).

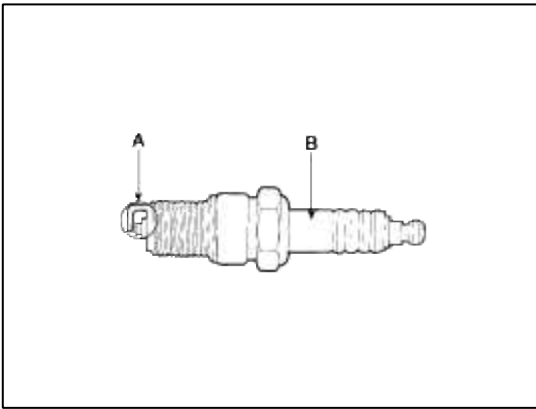


Inspection Of Electrodes

Condition	Dark deposits	White deposits
Description	<ul style="list-style-type: none"> - Fuel mixture too rich - Low air intake 	<ul style="list-style-type: none"> - Fuel mixture too lean - Advanced ignition timing - Insufficient plug tightening torque

4. Check the electrode gap (A).


Standard :

1.0 ~ 1.1 mm (0.0394 ~ 0.0433 in.)

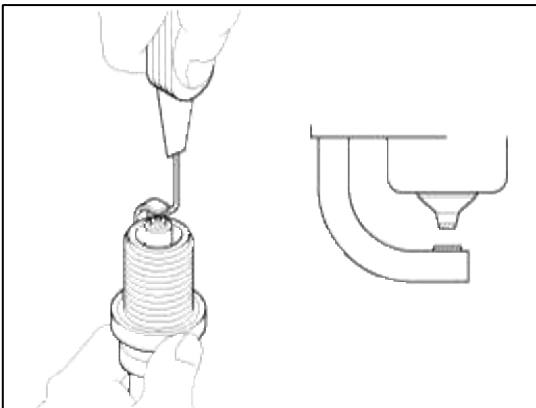

Inspect Ignition Coil

1. Measure the primary coil resistance between terminals (+) and (-).

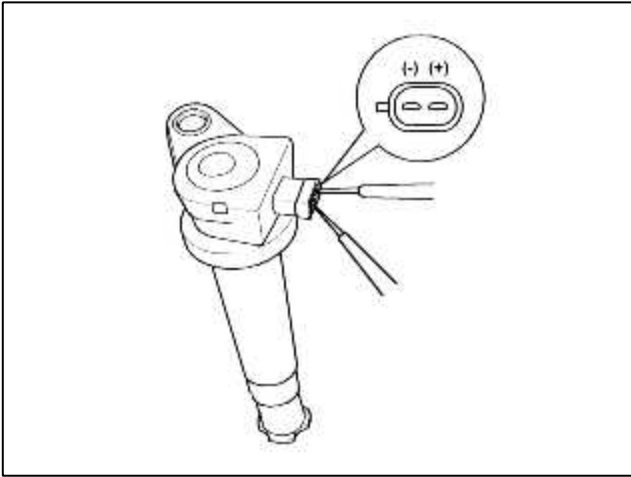

Standard value: $0.62\Omega \pm 10\%$



Removal and Installation

Ignition Coil

1. Remove the LH/RH ignition coil connectors (A) and then, remove the ignition coil.


Tightening torque :

9.8 ~ 11.8N.m (1.0 ~ 1.2kgf.m, 7.2 ~ 8.7lb-ft)

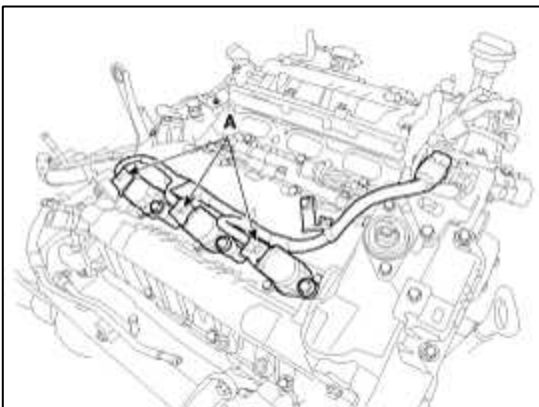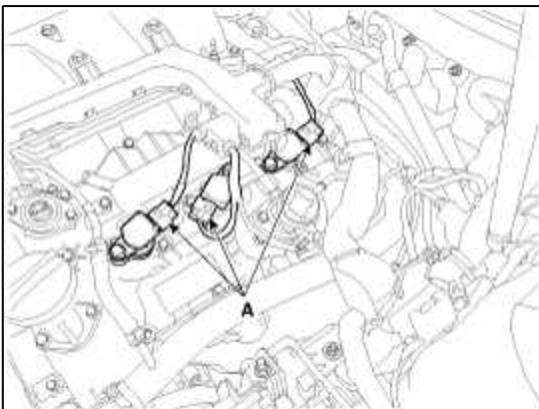

NOTE

When removing the ignition coil connector, pull the lock pin(A) and push the clip(B).

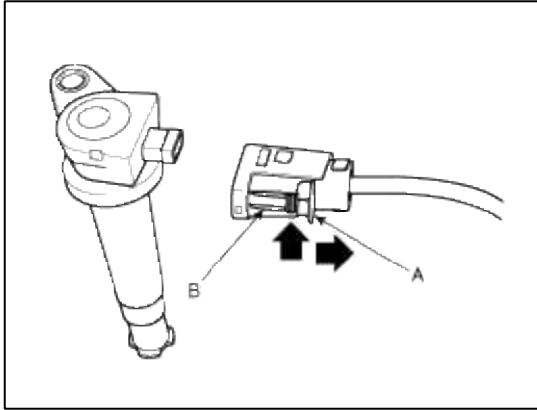

2. Installation is the reverse of removal.

Engine Electrical System > Charging System > Description and Operation

Description


The charging system includes a battery, an alternator with a built-in regulator, and the charging indicator light and wire.

The Alternator has built-in diodes, each rectifying AC current to DC current.

Therefore, DC current appears at alternator "B" terminal.

The regulator is regulates the charging voltage to maintain ECM signal.

The main components of the alternator are the rotor, stator, rectifier, capacitor brushes, bearings, regulator and V-ribbed belt pulley.

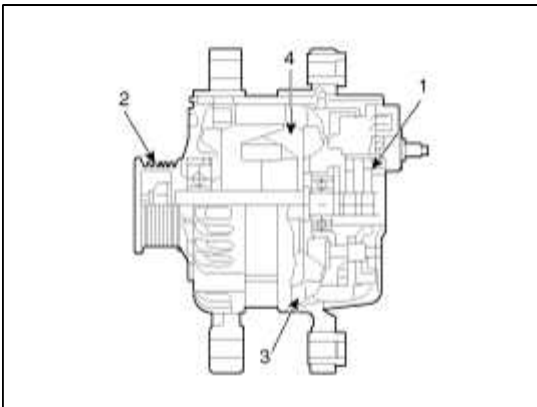

1. Brush
2. Drive belt pulley
3. Stator
4. Rotor

Engine Electrical System > Charging System > Repair procedures

On-vehicle Inspection

CAUTION

- Check that the battery cables are connected to the correct terminals.
- Disconnect the battery cables when the battery is given a quick charge.
- Never disconnect the battery while the engine is running.


Inspect Drive Belt

Visually check the belt for excessive wear, frayed cords etc.

If any defect has been found, replace the drive belt.

NOTE

Cracks on the rib side of a belt are considered acceptable. If the belt has chunks missing from the ribs, it should be replaced.

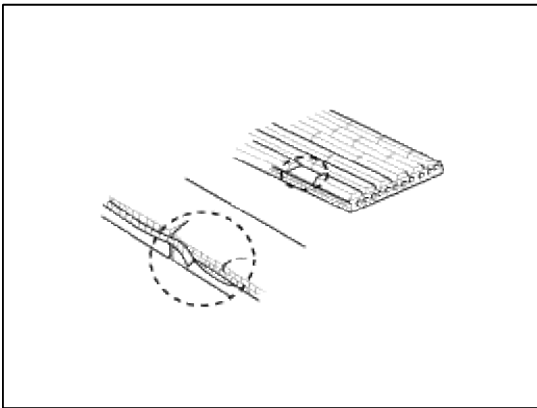**Visually Check Alternator Wiring And Listen For Abnormal Noises**

1. Check that the wiring is in good condition.
2. Check that there is no abnormal noise from the alternator while the engine is running.

Check Discharge Warning Light Circuit

1. Warm up the engine and then turn it off.
2. Turn off all accessories.
3. Turn the ignition switch "ON". Check that the discharge warning light is lit.
4. Start the engine and Check that the light goes off.

If the light does not go off as specified, troubleshoot the discharge light circuit, drive belt, battery cable, and signal between ECM-Regulator.


Voltage Drop Test Of Alternator Output Wire

This test determines whether or not the wiring between the alternator "B" terminal and the battery (+) terminal is good by the voltage drop method.

Preparation

1. Turn the ignition switch to "OFF".

- Disconnect the output wire from the alternator "B" terminal. Connect the (+) lead wire of ammeter to the "B" terminal of alternator and the (-) lead wire of ammeter to the output wire. Connect the (+) lead wire of voltmeter to the "B" terminal of alternator and the (-) lead wire of voltmeter to the (+) terminal of battery.

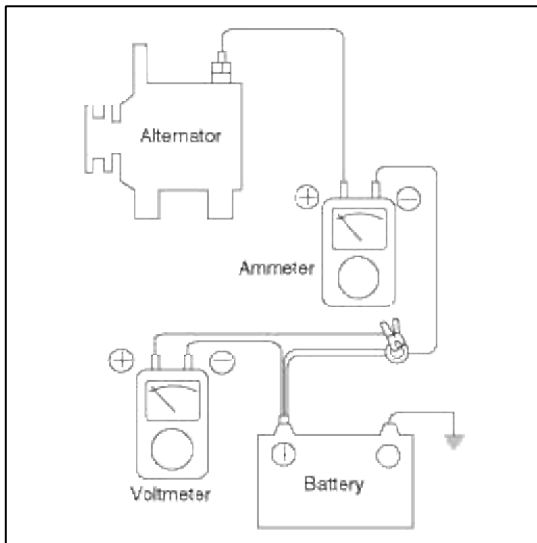

Test

- Start the engine.
- Turn on the headlamps and blower motor, and set the engine speed until the ammeter indicates 20A. And then, read the voltmeter at this time.

Result

- The voltmeter may indicate the standard value.

Standard value: 0.2V max

- If the value of the voltmeter is higher than expected (above 0.2V max.), poor wiring is suspected. In this case check the wiring from the alternator "B" terminal to the battery (+) terminal. Check for loose connections, color change due to an over-heated harness, etc. Correct them before testing again.
- Upon completion of the test, set the engine speed at idle. Turn off the headlamps, blower motor and the ignition switch.

Output Current Test

This test determines whether or not the alternator gives an output current that is equivalent to the normal output.


Preparation

- Prior to the test, check the following items and correct as necessary.
 - Check the battery installed in the vehicle to ensure that it is in good condition. The battery checking method is described in the section "Battery".
 - The battery that is used to test the output current should be one that has been partially discharged. With a fully charged battery, the test may not be conducted correctly.
 - Check the tension of the alternator drive belt. The belt tension check method is described in the section "Inspect drive belt".
- Turn off the ignition switch.
- Disconnect the battery ground cable.
- Disconnect the alternator output wire from the alternator "B" terminal.
- Connect a DC ammeter (0 to 150A) in series between the "B" terminal and the disconnected output wire. Be sure to connect the (-) lead wire of the ammeter to the disconnected output wire.

NOTE

Tighten each connection securely, as a heavy current will flow. Do not rely on clips.

6. Connect a voltmeter (0 to 20V) between the "B" terminal and ground. Connect the (+) lead wire to the alternator "B" terminal and (-) lead wire to a good ground.
7. Attach an engine tachometer and connect the battery ground cable.
8. Leave the engine hood open.

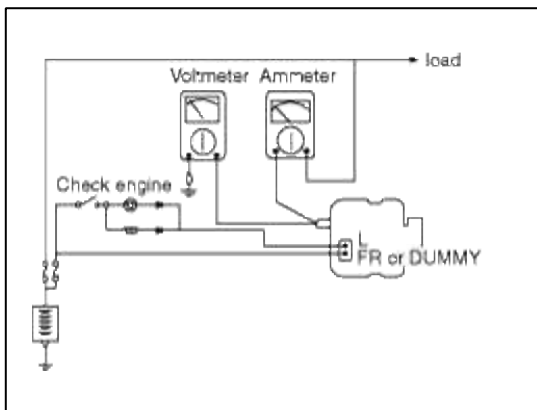

Test

1. Check to see that the voltmeter reads as the same value as the battery voltage. If the voltmeter reads 0V, and the open circuit in the wire between alternator "B" terminal and battery (+) terminal or poor grounding is suspected.
2. Start the engine and turn on the headlamps.
3. Set the headlamps to high beam and the heater blower switch to HIGH, quickly increase the engine speed to 2,500 rpm and read the maximum output current value indicated by the ammeter.

NOTE

After the engine start up, the charging current quickly drops. Therefore, the above operation must be done quickly to read the maximum current value correctly.

Result

1. The ammeter reading must be higher than the limit value. If it is lower but the alternator output wire is in good condition, remove the alternator from the vehicle and test it.

Limit value : 60% of the voltage rate

NOTE

- The output current value changes with the electrical load and the temperature of the alternator itself. Due to temperature the maximum output current may not be obtained. If such is the case, keep the headlamps on to increase the electrical load. The nominal output current may not be obtained if the temperature of the alternator itself or ambient temperature is too high. In such a case, reduce the temperature before testing again.


2. Upon completion of the output current test, lower the engine speed to idle and turn off the ignition switch.
3. Disconnect the battery ground cable.
4. Remove the ammeter and voltmeter and the engine tachometer.
5. Connect the alternator output wire to the alternator "B" terminal.
6. Connect the battery ground cable.

Regulated Voltage Test

The purpose of this test is to check that the electronic voltage regulator controls voltage correctly.

Preparation

- Prior to the test, check the following items and correct if necessary.
 - Check that the battery installed on the vehicle is fully charged. The battery checking method is described in the section "Battery".
 - Check the alternator drive belt tension. The belt tension check method is described in the section "Inspect drive belt".
- Turn ignition switch to "OFF".
- Disconnect the battery ground cable.
- Connect a digital voltmeter between the "B" terminal of the alternator and ground. Connect the (+) lead of the voltmeter to the "B" terminal of the alternator. Connect the (-) lead to good ground or the battery (-) terminal.
- Disconnect the alternator output wire from the alternator "B" terminal.
- Connect a DC ammeter (0 to 150A) in series between the "B" terminal and the disconnected output wire. Connect the (-) lead wire of the ammeter to the disconnected output wire.
- Attach the engine tachometer and connect the battery ground cable.

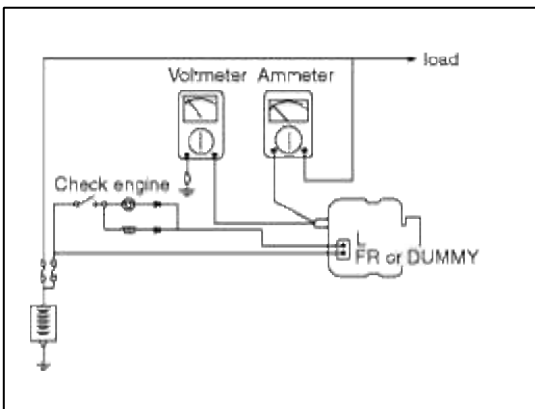

Test

- Turn on the ignition switch and check to see that the voltmeter indicates the following value.

Voltage: Battery voltage

If it reads 0V, there is an open circuit in the wire between the alternator "B" terminal and the battery (-) terminal/ or bad ground.

- Start the engine. Keep all lights and accessories off.
- Run the engine at a speed of about 2,500 rpm and read the voltmeter when the alternator output current drops to 10A or less

Result

- If the voltmeter reading doesn't agree with the standard value, the voltage regulator or the alternator is faulty.

Regulating voltage : 14.2 ~ 14.8V

- Upon completion of the test, reduce the engine speed to idle, and turn off the ignition switch.
- Disconnect the battery ground cable.
- Remove the voltmeter and ammeter and the engine tachometer.
- Connect the alternator output wire to the alternator "B" terminal.
- Connect the battery ground cable.

Engine Electrical System > Charging System > Alternator > Repair procedures


Removal and Installation

1. Disconnect the battery negative cable


Tightening torque:

7.8 ~ 9.8N.m (0.8 ~ 1.0kgf.m, 5.8 ~ 7.2lb-ft)


2. Remove the air cleaner assembly. (Refer to Engine Mechanical System - "Intake And Exhaust System")
3. Turn the tensioner counterclockwise and loosen, then remove the drive belt (A).

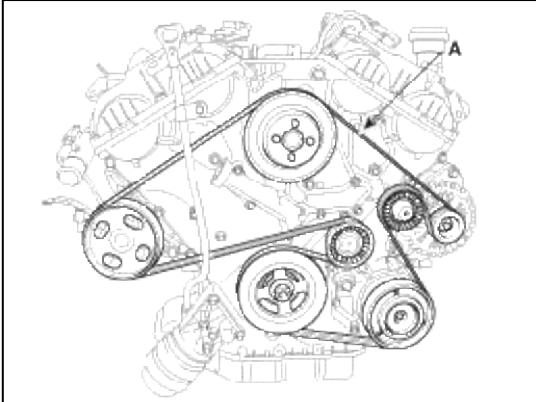

4. Disconnect the alternator connector (A) and cable (B) from the 'B' terminal.

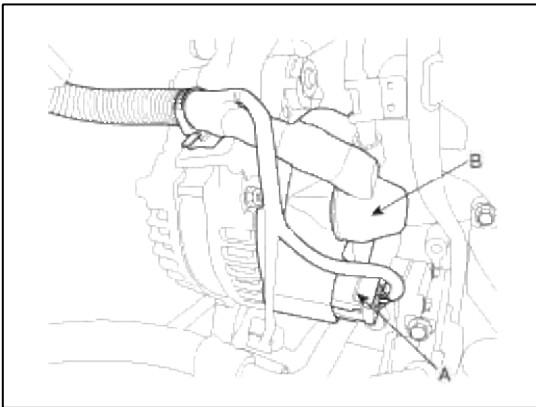


5. Remove the reservoir tank (A).

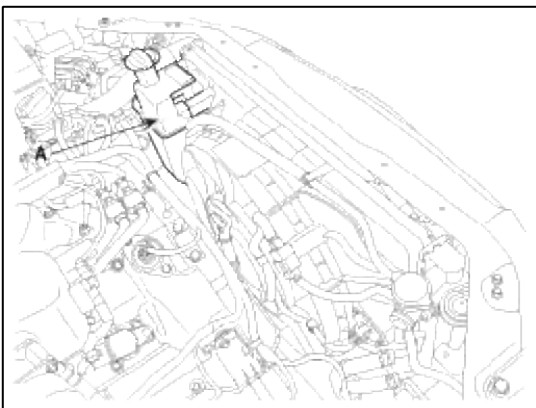

6. Remove the alternator (A).

Tightening torque :

26.5 ~ 33.3 N.m (2.7 ~ 3.4 kgf.m, 19.5 ~ 24.6 lb-ft)

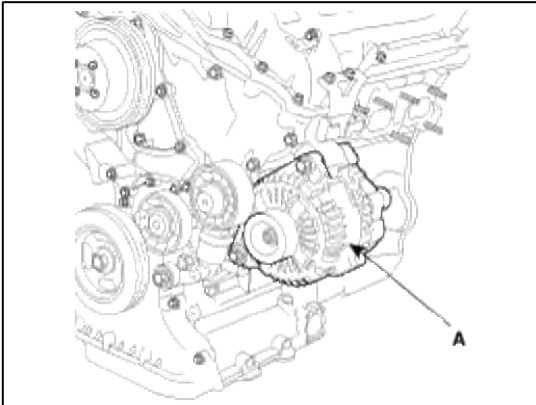


7. Installation is reverse order of removal.

Engine Electrical System > Charging System > Battery > Description and Operation

Description

1. The maintenance-free battery is, as the name implies, totally maintenance free and has no removable battery cell caps.
2. Water never needs to be added to the maintenance-free battery.
3. The battery is completely sealed, except for small vent holes in the cover.

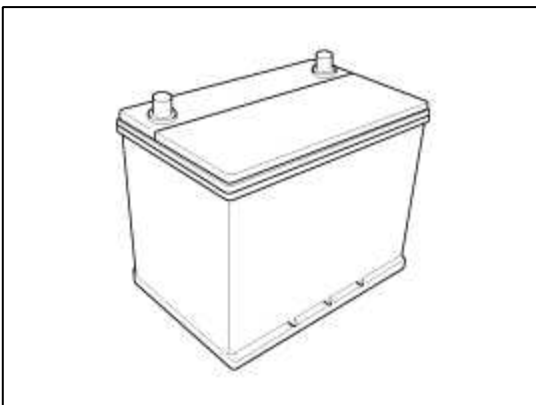


NOTE

After disconnecting then reconnecting the battery negative cable, reset some parts that require the reset procedures. (Refer to BE group - General information)

Engine Electrical System > Charging System > Battery > Components and Components Location

Components

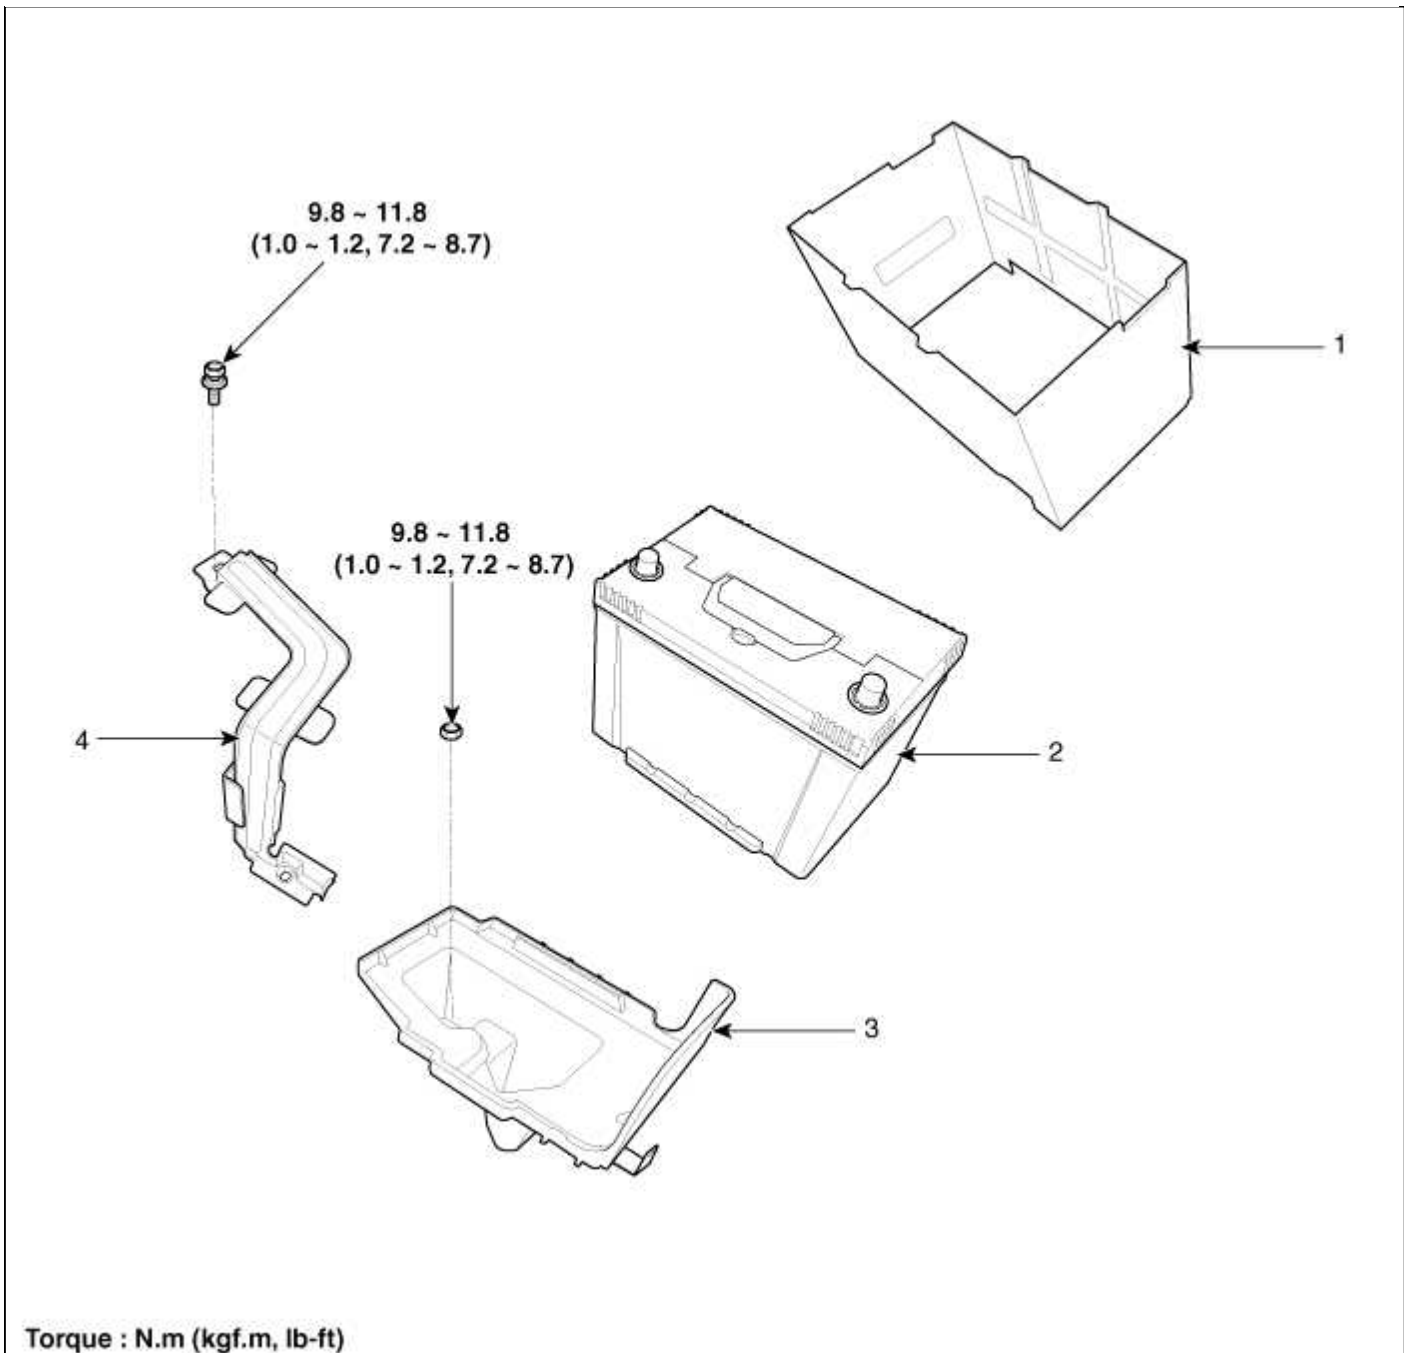

- | | |
|---------------------------|-----------------------------|
| 1. Battery insulation pad | 3. Battery tray |
| 2. Battery | 4. Battery mounting bracket |

Engine Electrical System > Charging System > Battery > Repair procedures

Removal and Installation

1. Remove the battery.
 - (1) Disconnect the battery negative terminal (A).
 - (2) Disconnect the battery positive terminal (B).
-

Tightening torque

(-) terminal :

7.8 ~ 9.8 N.m (0.8 ~ 1.0 kgf.m, 5.8 ~ 7.2 lb-ft)

(+) terminal :


9.8 ~ 11.8 N.m (1.0 ~ 1.2 kgf.m, 7.2 ~ 8.7 lb-ft)

- (3) Remove the battery mounting bracket (C).
-

Tightening torque :

9.8 ~ 11.8 N.m (1.0 ~ 1.2 kgf.m, 7.2 ~ 8.7 lb-ft)


- (4) Remove the battery (D).

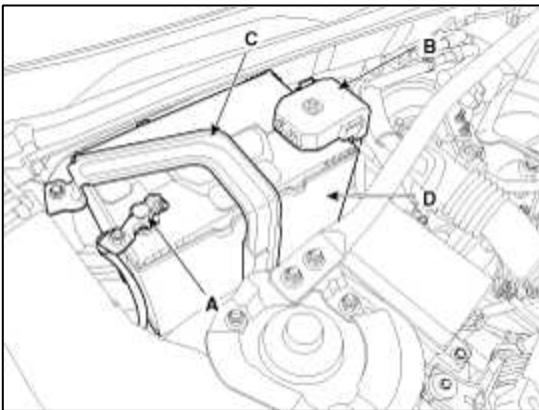

2. Remove the battery tray (A).
-

Tightening torque :

9.8 ~ 11.8 N.m (1.0 ~ 1.2 kgf.m, 7.2 ~ 8.7 lb-ft)

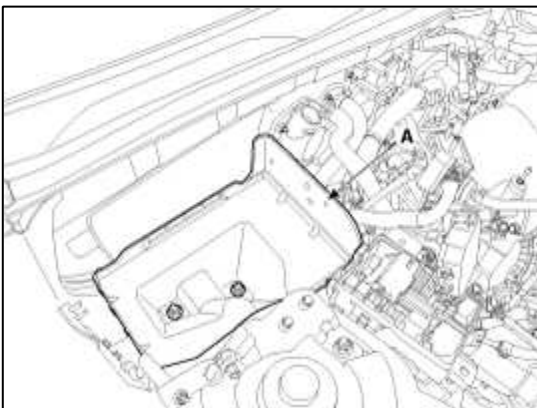


3. Installation is the reverse order of removal.

CAUTION

When installing the battery, fix the mounting bracket on the tray correctly.

Inspection

Battery Diagnostic Flow

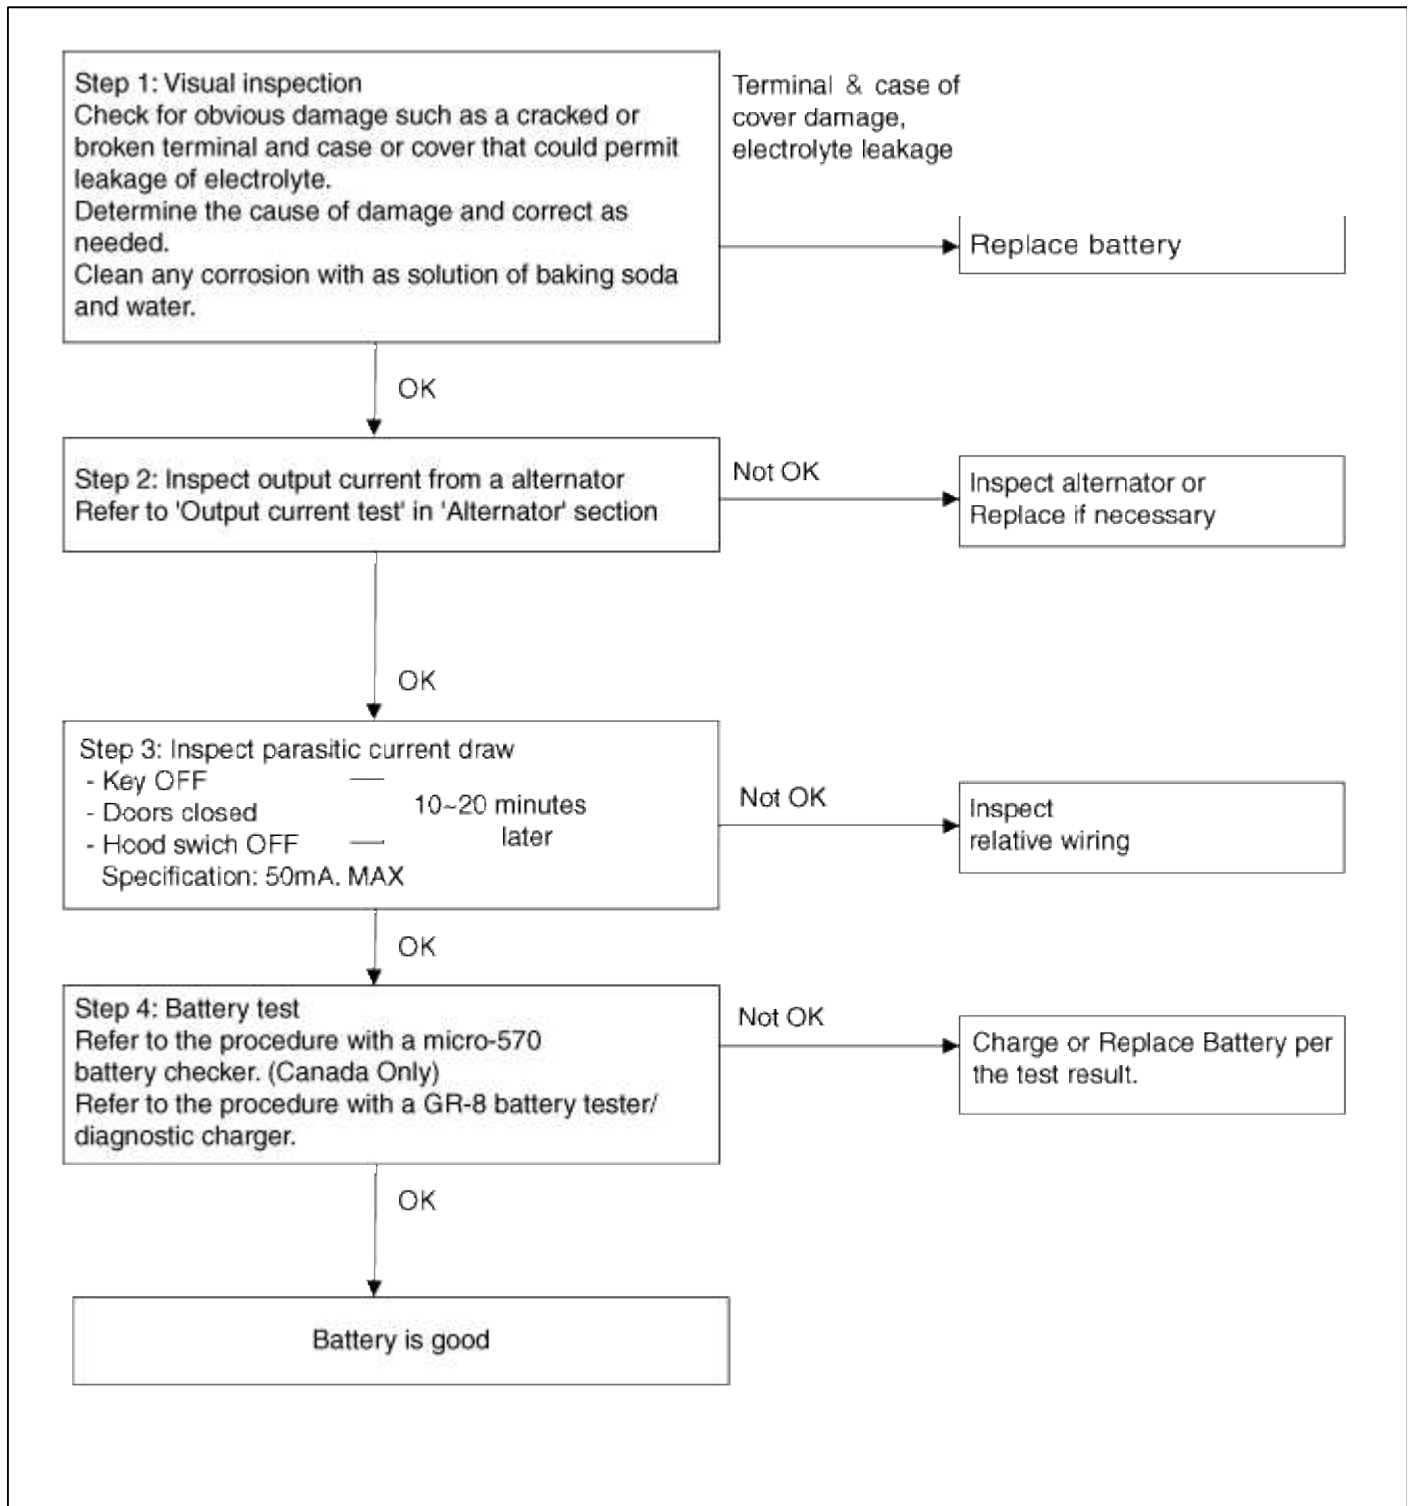

Vehicle parasitic current inspection

1. Turn the all electric devices OFF, and then turn the ignition switch OFF.
2. Close all doors except the engine hood, and then lock all doors.
 - (1) Disconnect the hood switch connector.
 - (2) Close the trunk lid.
 - (3) Close the doors or remove the door switches.

3. Wait a few minutes until the vehicle's electrical systems go to sleep mode.

NOTE

For an accurate measurement of a vehicle parasitic current, all electrical systems should go to sleep mode. (It takes at least one hour or at most one day.) However, an approximate vehicle parasitic current can be measured after 10~20 minutes.


4. Connect an ammeter in series between the battery (-) terminal and the ground cable, and then disconnect the clamp from the battery (-) terminal slowly.

CAUTION

Be careful that the lead wires of an ammeter do not come off from the battery (-) terminal and the ground cable to prevent the battery from being reset. In case the battery is reset, connect the battery cable again, and then start the engine or turn the ignition switch ON for more than 10 sec. Repeat the procedure from No. 1.

To prevent the battery from being reset during the inspection,

- 1) Connect a jump cable between the battery (-) terminal and the ground cable.
- 2) Disconnect the ground cable from the battery (-) terminal.
- 3) Connect an ammeter between the battery (-) terminal and the ground cable.
- 4) After disconnecting the jump cable, read the current value of the ammeter.

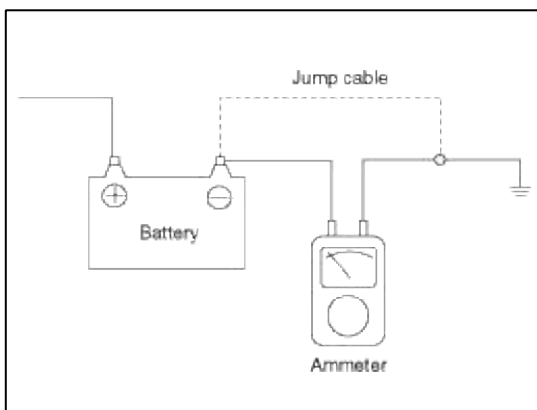

5. Read the current value of the ammeter.

- A. If the parasitic current is over the limit value, search for abnormal circuit by removing a fuse one by one and checking the parasitic current.
- B. Check the parasitic current again, and search for suspected unit by removing a unit connected with the abnormal circuit one by one.

Limit value (after 10~20 min.) : Below 50mA

Cleaning


1. Make sure the ignition switch and all accessories are in the OFF position.

2. Remove the battery from the vehicle.(Refer to Battery Removal in this group)

CAUTION

Care should be taken in the event the battery case is cracked or leaking, to protect your skin from the electrolyte.

Heavy rubber gloves (not the household type) should be worn when removing the battery.

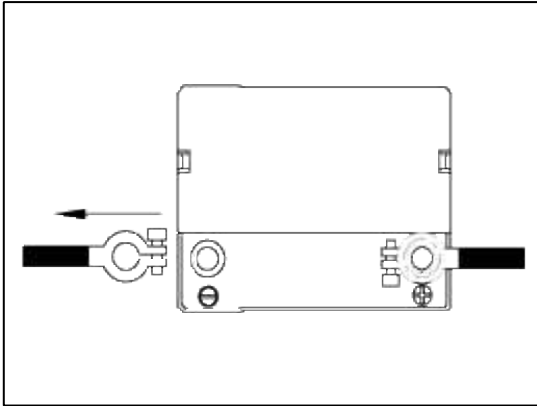

3. Inspect the battery tray for damage caused by the loss of electrolyte. If acid damage is present, it will be necessary to clean the area with a solution of clean warm water and baking soda. Scrub the area with a stiff brush and wipe off with a cloth moistened with baking soda and water.
4. Clean the top of the battery with the same solution as described above.
5. Inspect the battery case and cover for cracks. If cracks are present, the battery must be replaced.
6. Clean the battery posts with a suitable battery post tool.
7. Clean the inside surface of the terminal clamps with a suitable battery cleaning tool. Replace damaged or frayed cables and broken terminal clamps.
8. Install the battery in the vehicle.
9. Connect the cable terminals to the battery post, making sure tops of the terminals are flush with the tops of the posts.
10. Tighten the terminal nuts securely.
11. Coat all connections with light mineral grease after tightening.

CAUTION

When batteries are being charged, an explosive gas forms beneath the cover of each cell. Do not smoke near batteries being charged or which have recently been charged. Do not break live circuit at the terminals of batteries being charged.

A spark will occur when the circuit is broken. Keep open flames away from battery.

Engine Electrical System > Starting System > Description and Operation


Description

The starting system includes the battery, starter, solenoid switch, ignition switch, inhibitor switch (A/T), ignition lock switch, connection wires and the battery cable.

When the ignition key is turned to the start position, current flows and energizes the starter motor's solenoid coil.

The solenoid plunger and clutch shift lever are activated, and the clutch pinion engages the ring gear.

The contacts close and the starter motor cranks. In order to prevent damage caused by excessive rotation of the starter armature when the engine starts, the clutch pinion gear overruns.

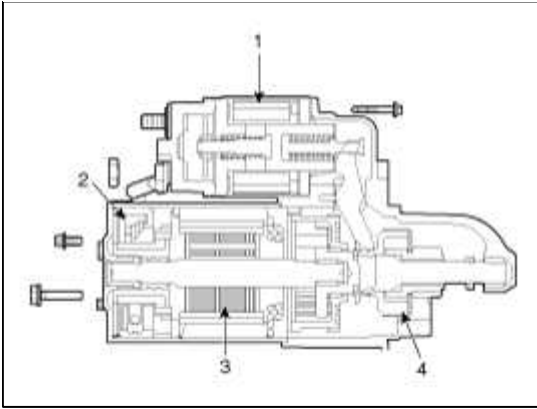

1. Solenoid
2. Brush
3. Armature
4. Overrun clutch

Engine Electrical System > Starting System > Repair procedures

Troubleshooting Starter Circuit

NOTE


The battery must be in good condition and fully charged.

1. Disconnect the fuel pump connector
2. With the shift lever in N or P (A/T) or clutch pedal pressed (M/T), turn the ignition switch to "START"
If the starter normally cranks the engine, starting system is OK. If the starter will not crank the engine at all, go to next step.
If it won't disengage from the ring gear when you release key, check for the following until you find the cause.
 - A. Solenoid plunger and switch malfunction.
 - B. Dirty pinion gear or damaged overrunning clutch.
3. Check the battery condition. Check electrical connections at the battery, battery negative cable connected to the body, engine ground cables, and the starter for looseness and corrosion. Then try starting the engine again.
If the starter cranks normally the engine, repairing the loose connection repaired the problem. The starting system is now OK.
If the starter still does not crank the engine, go to next step.
4. Disconnect the connector from the S-terminal of solenoid. Connect a jumper wire from the B-terminal of solenoid to the S-terminal of solenoid.
If the starter cranks the engine, go to next step.
If the starter still does not crank the engine, remove the starter, and repair or replace as necessary.
5. Check the following items in the order listed until you find the open circuit.
 - A. Check the wire and connectors between the driver's under-dash fuse/relay box and the ignition switch, and between the driver's under-dash fuse/relay box and the starter.
 - B. Check the ignition switch (Refer to ignition system in BE Group).
 - C. Check the transaxle range switch connector or ignition lock switch connector.
 - D. Inspect the starter relay.

Starter Solenoid Test


1. Disconnect the field coil wire from the M-terminal of solenoid switch.

2. Connect the battery as shown. If the starter pinion pops out, it is working properly. To avoid damaging the starter, do not leave the battery connected for more than 10 seconds.

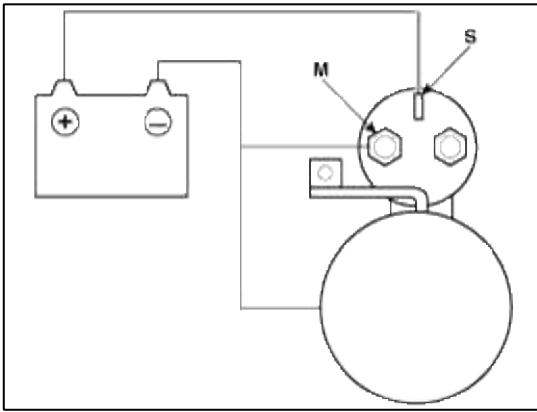


3. Disconnect the battery from the M terminal.

If the pinion does not retract, the hold-in coil is working properly. To avoid damaging the starter, do not leave the battery connected for more than 10 seconds.

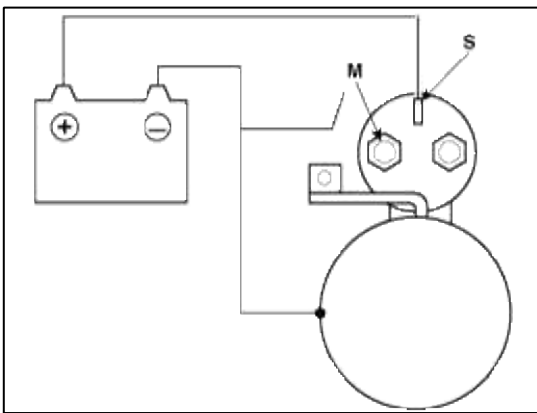


4. Disconnect the battery also from the body. If the pinion retracts immediately, it is working properly. To avoid damaging the starter, do not leave the battery connected for more than 10 seconds.

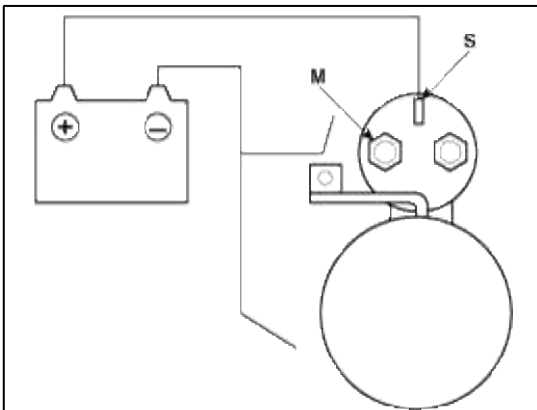

Free Running Test

1. Place the starter motor in a vise equipped with soft jaws and connect a fully-charged 12-volt battery to starter motor as follows.
2. Connect a test ammeter (100-ampere scale) and carbon pile rheostats as shown in the illustration.

3. Connect a voltmeter (15-volt scale) across starter motor.

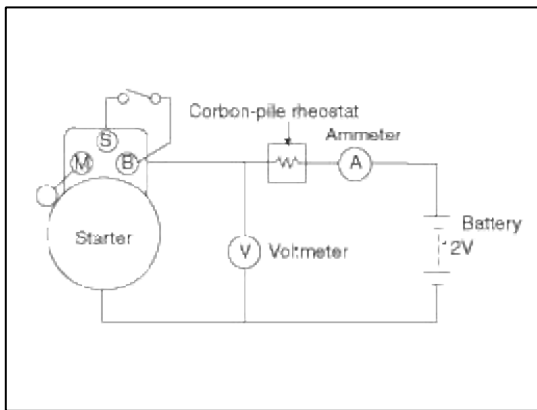

4. Rotate carbon pile to the off position.

5. Connect the battery cable from battery's negative post to the starter motor body.

6. Adjust until battery voltage shown on the voltmeter reads 11.5volts.


7. Confirm that the maximum amperage is within the specifications and that the starter motor turns smoothly and freely.

Current : 85A MAX

Speed : 2,550 rpm MIN

Engine Electrical System > Starting System > Starter > Components and Components Location

Components

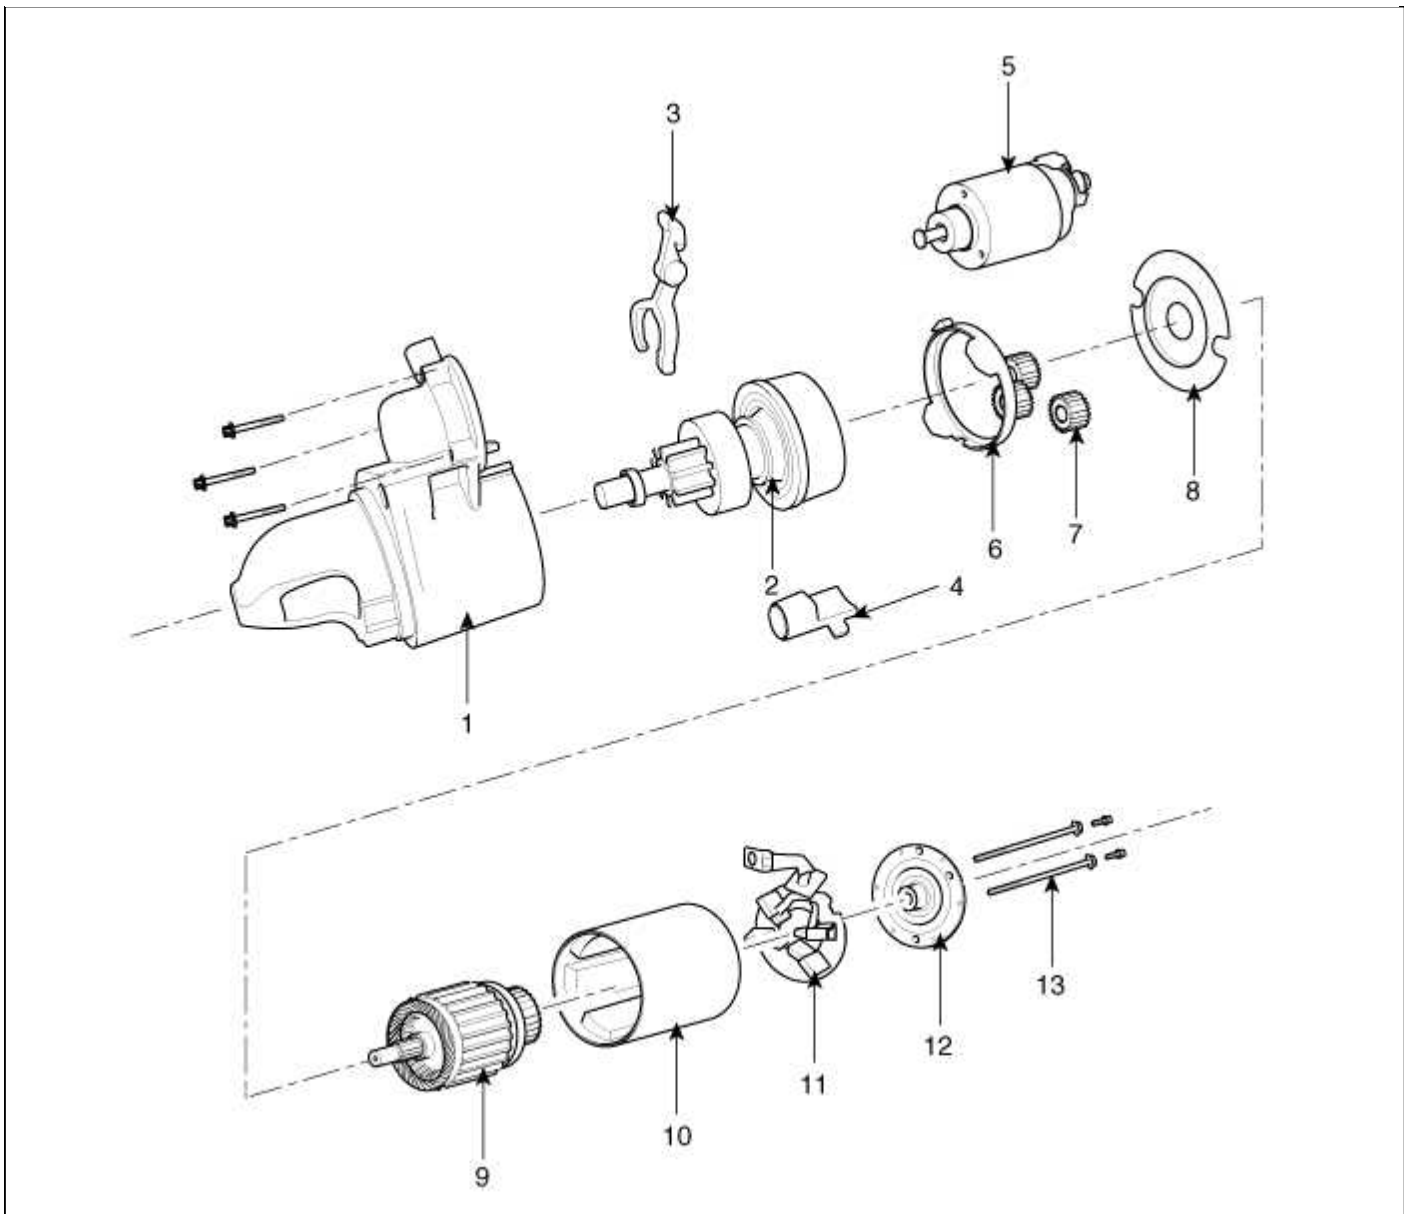

1 . Front bracket	8 . Shield
2 . Planet gear shaft assembly	9 . Armature assembly
3 . Lever	10 . York assembly
4 . Lever packing	11 . Brush holder assembly
5 . Magnet switch	12 . Rear bracket
6 . Packing	13 . Through bolt
7 . Planet gear	

Engine Electrical System > Starting System > Starter > Repair procedures

Removal and Installation

1. Disconnect the battery negative cable.


Tightening torque :

7.8 ~ 9.8 N.m (0.8 ~ 1.0 kgf.m, 5.8 ~ 7.2 lb-ft)


2. Remove the air cleaner assembly.
(Refer to Engine Mechanical System - “Engine And Transmission Assembly”)
 3. Remove the under cover.
(Refer to Engine Mechanical System - “Engine And Transmission Assembly”)
 4. Remove the starter cover (A).
-

Tightening torque :

8.8 ~ 13.7 N.m (0.9 ~ 1.4 kgf.m, 6.5 ~ 10.1 lb-ft)

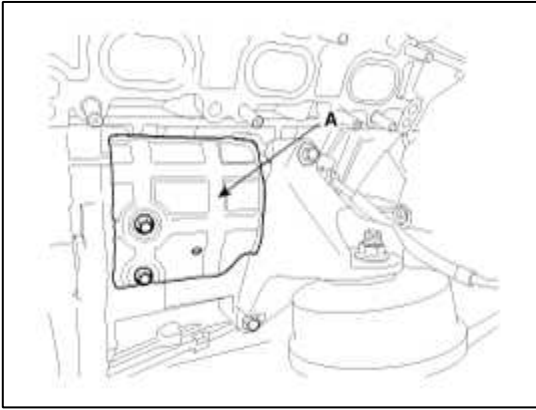

5. Disconnect the starter connector (A) and cable (B) from the 'B' terminal.

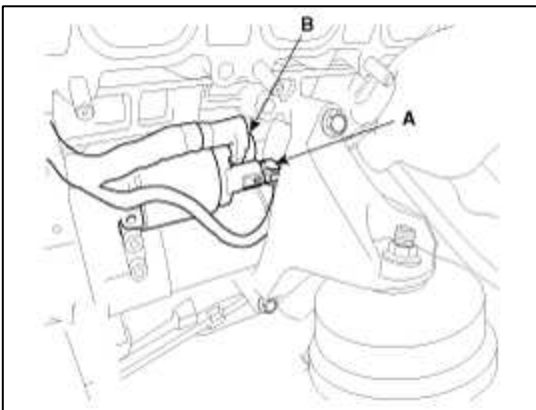

6. Set a jack to the oil pan.


CAUTION

Insert a rubber block between jack and oil pan to prevent the oil pan damage.

7. Loosen the engine mounting nut (A).

Tightening torque :

63.7 ~ 83.4 N.m (6.5 ~ 8.5 kgf.m, 47.0 ~ 61.5 lb-ft)

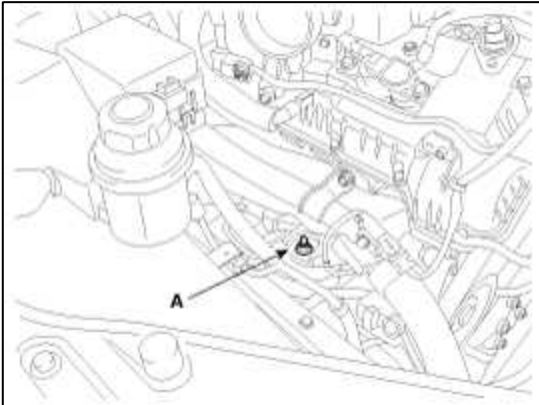

NOTE

Lift up the engine assembly slightly by using a jack to get access to the side of engine.

8. Remove the RH engine support bracket (A).

9. Remove the starter (B).

Tightening torque :

Support bracket bolt :


63.7 ~ 83.4 N.m (6.5 ~ 8.5 kgf.m, 47.0 ~ 61.5 lb-ft)

Starter bolt :

49.0 ~ 63.7 N.m (5.0 ~ 6.5 kgf.m, 36.2 ~ 47.0 lb-ft)


Starter nut :

42.1 ~ 53.9 N.m (4.3 ~ 5.5 kgf.m, 31.2 ~ 39.8 lb-ft)

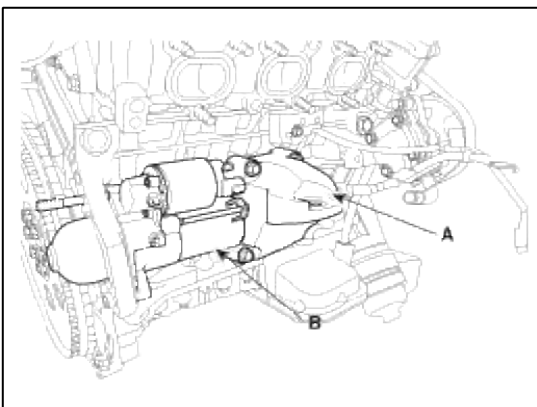


Disassembly


1. Disconnect the M-terminal on the magnet switch assembly.

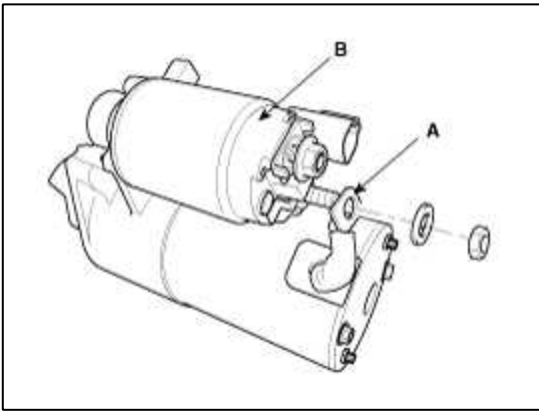


2. After loosening the 3 screws (A), detach the magnet switch assembly (B).

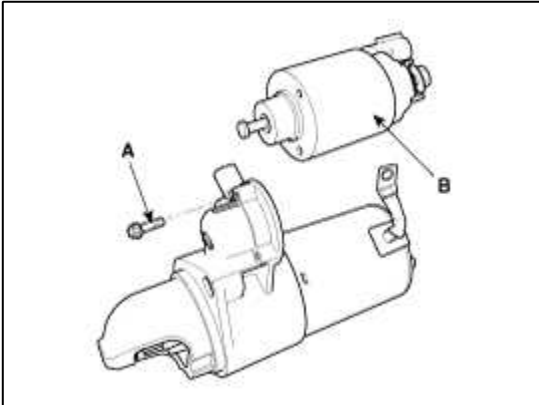


3. Loosen the through bolts (A).

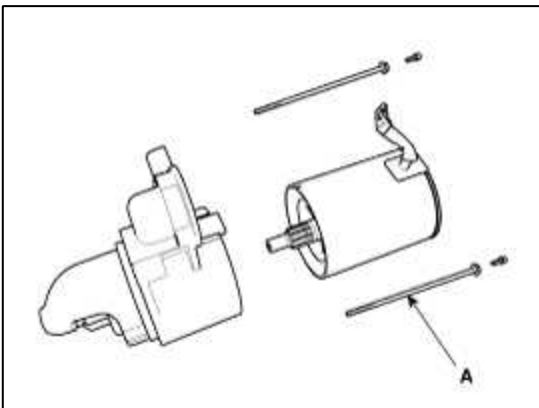


4. Remove the brush holder assembly (A), yoke (B) and armature (C).

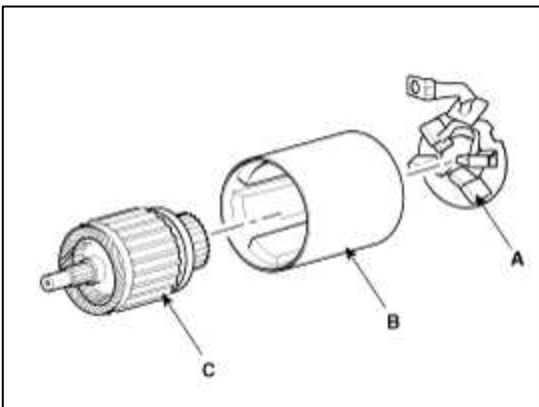


5. Remove the shield (A) and packing (B).

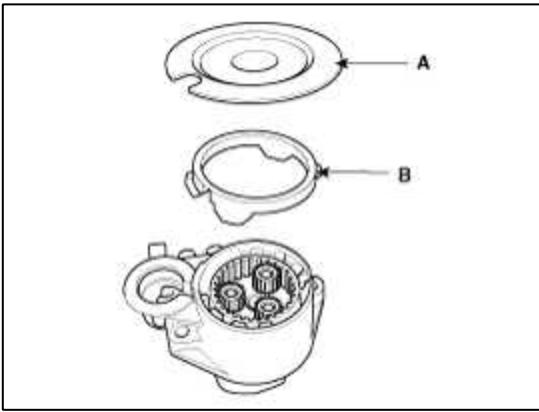


6. Remove the lever plate (A) and lever packing (B).

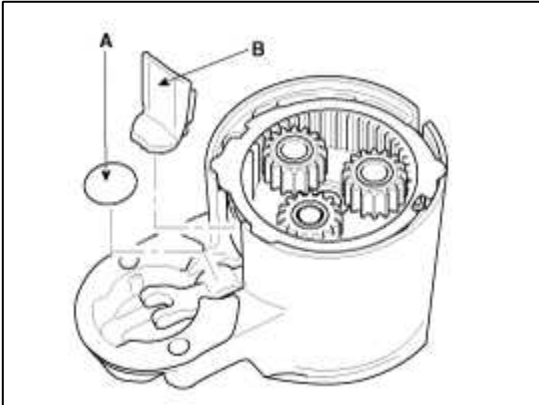


7. Disconnect the planet gear (A).

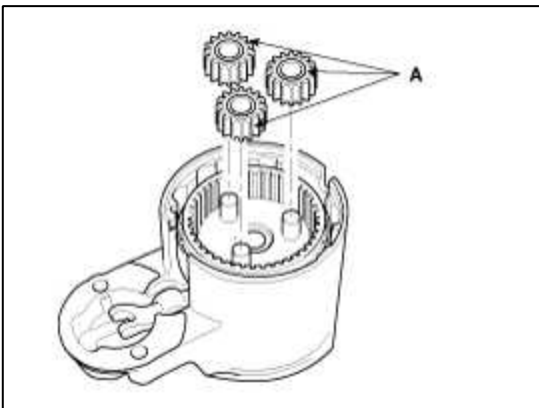


8. Disconnect the planet shaft assembly (A) and lever (B).

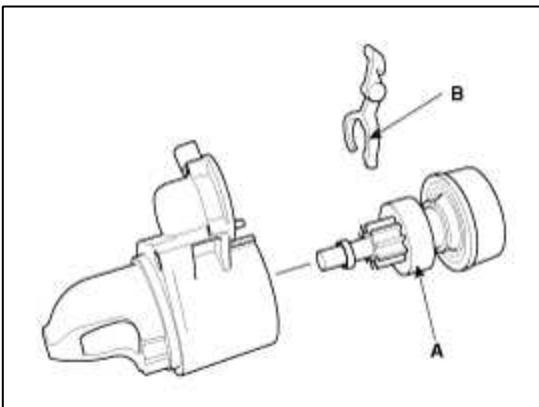


9. Press the stopper (A) using a socket (B).

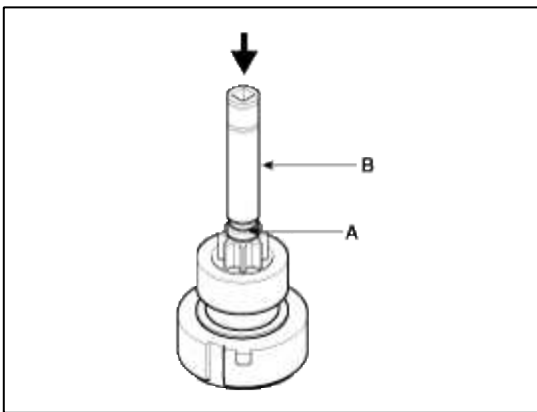

10. After removing the stop ring (A) using stop ring pliers (B).

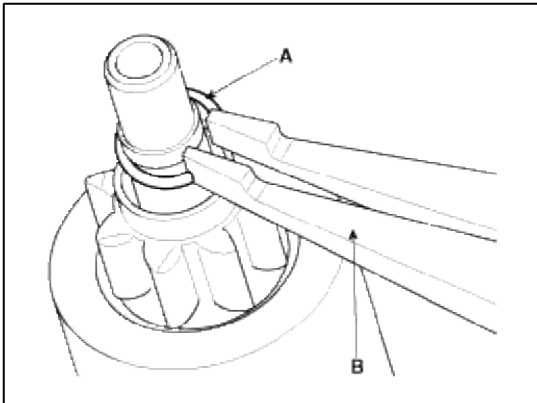


11. Disconnect the stopper (A), overrunning clutch (B), internal gear (C) and planet shaft (D).

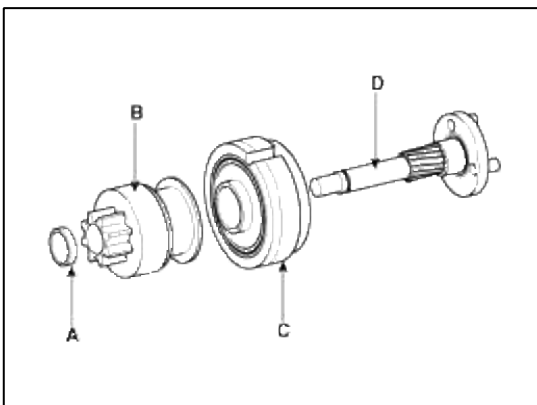

12. Reassembly is the reverse of disassembly.

NOTE


Using a suitable pulling tool (A), pull the overrunning clutch stopper (C) over the stop ring (B).

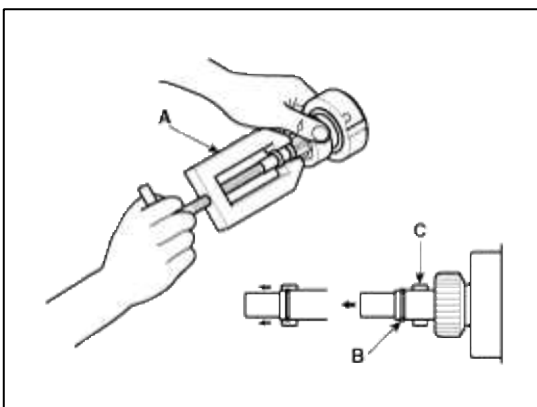


Inspection

Armature Inspection And Test

1. Remove the starter.
2. Disassemble the starter as shown at the beginning of this procedure.
3. Inspect the armature for wear or damage from contact with the permanent magnet. If there is wear or damage, replace the armature.

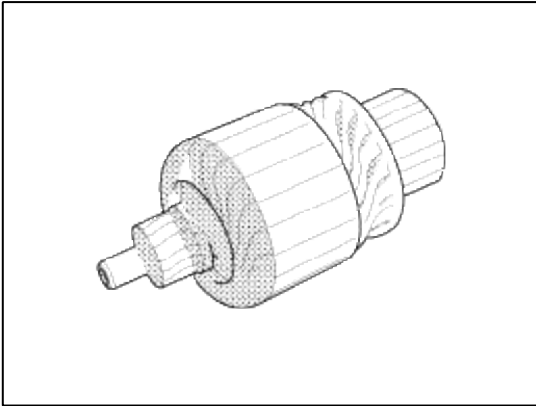

4. Check the commutator (A) surface. If the surface is dirty or burnt, resurface with emery cloth or a lathe within the following specifications, or recondition with #500 or #600 sandpaper (B).

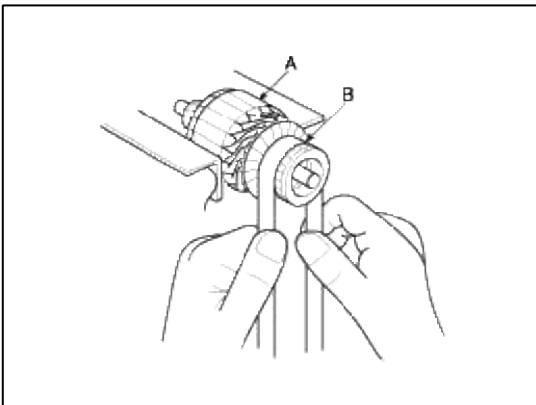


5. Measure the commutator (A) runout.
 - A. If the commutator runout is within the service limit, check the commutator for carbon dust or brass chips between the segments.
 - B. If the commutator run out is not within the service limit, replace the armature.

Commutator runout

Standard (New): 0.05mm (0.0019in.) max

Service limit: 0.08mm (0.0031in.)

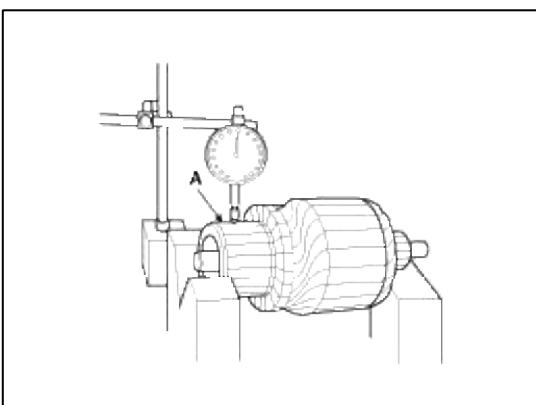


6. Check the mica depth (A). If the mica is too high (B), undercut the mica with a hacksaw blade to the proper depth. Cut away all the mica (C) between the commutator segments. The undercut should not be too shallow, too narrow, or v-shaped (D).


Commutator mica depth

Standard (New) : 0.7 mm (0.0275in.)


Limit : 0.2mm (0.0079 in.)

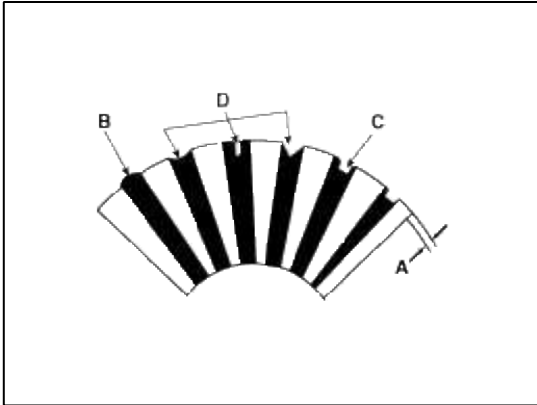

7. Check for continuity between the segments of the commutator. If an open circuit exists between any segments, replace the armature.

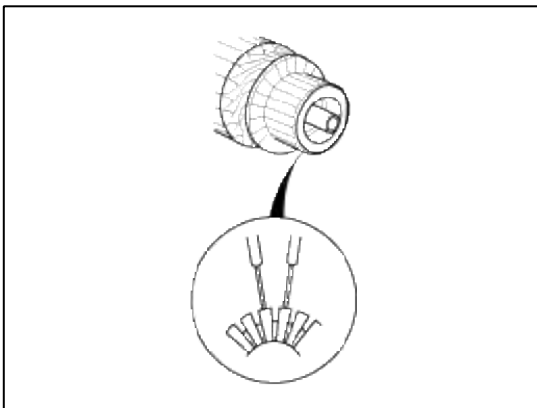


8. Check with an ohmmeter that no continuity exists between the commutator (A) and armature coil core (B), and between the commutator and armature shaft (C). If continuity exists, replace the armature.

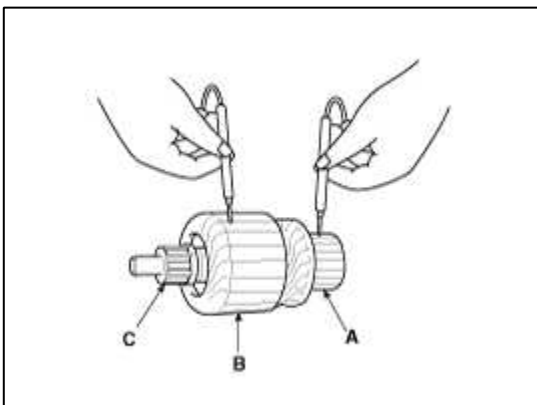


Inspect Starter Brush

Brushes that are worn out, or oil-soaked, should be replaced.

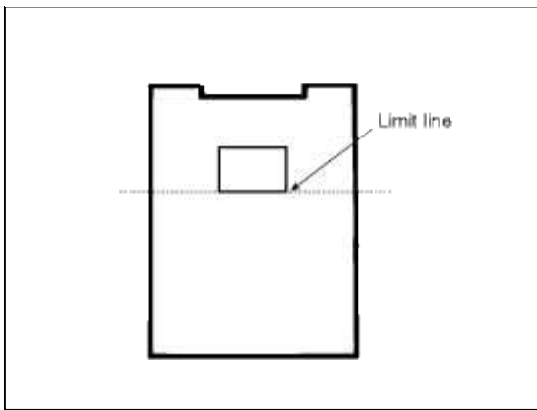


Starter Brush Holder Test

1. Make sure there is no continuity between the (+) brush holder (A) and (-) plate (B). If there is continuity, replace the brush holder assembly.

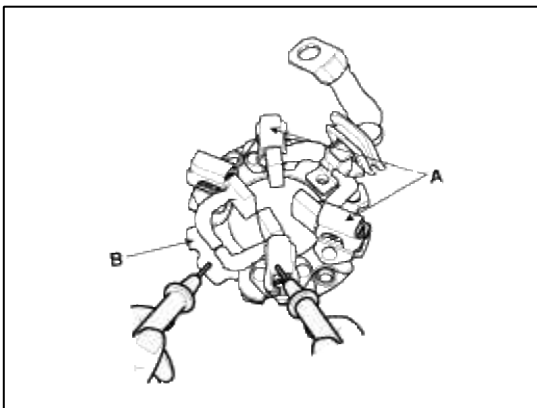

Overrunning Clutch

1. Slide the overrunning clutch along the shaft.
Replace it if it does not slide smoothly.
2. Rotate the overrunning clutch both ways.
Does it lock in one direction and rotate smoothly in reverse? If it does not lock in either direction or it locks in both directions, replace it.

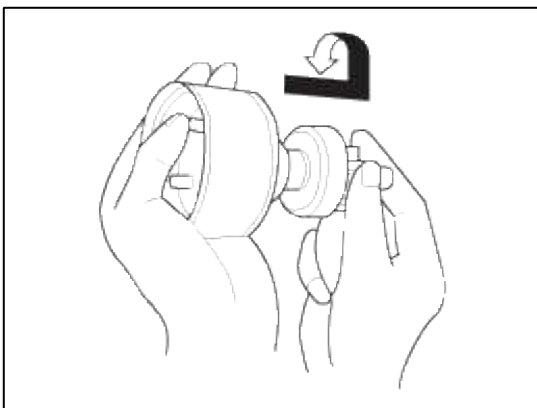

3. If the starter drive gear is worn or damaged, replace the overrunning clutch assembly. (the gear is not available separately).
Check the condition of the flywheel or torque converter ring gear if the starter drive gear teeth are damaged.

Cleaning

1. Do not immerse parts in cleaning solvent. Immersing the yoke assembly and/or armature will damage the insulation. Wipe these parts with a cloth only.
2. Do not immerse the drive unit in cleaning solvent. The overrun clutch is pre-lubricated at the factory and solvent will wash lubrication from the clutch.
3. The drive unit may be cleaned with a brush moistened with cleaning solvent and wiped dry with a cloth.

Engine Electrical System > Starting System > Starter Relay > Repair procedures
Inspection


1. Remove the fuse box cover.
2. Remove the starter relay (A).



3. Using an ohmmeter, check that there is continuity between each terminal.


Terminal	Continuity
30 - 87	NO
85 - 86	YES

4. Apply 12V to terminal 85 and ground to terminal 86.
Check for continuity between terminals 30 and 87.

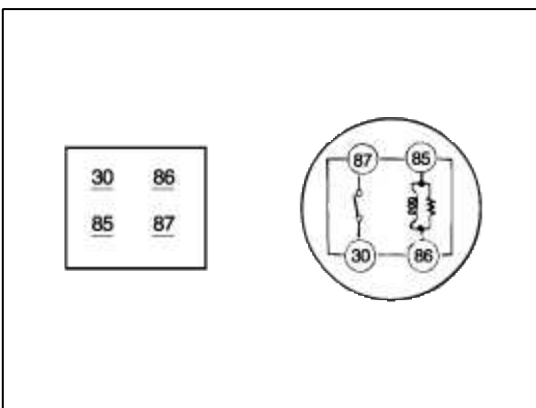

5. If there is no continuity, replace the starter relay.
6. Install the starter relay.
7. Install the fuse box cover.

Engine Electrical System > Cruise Control System > Schematic Diagrams
System Block Diagram

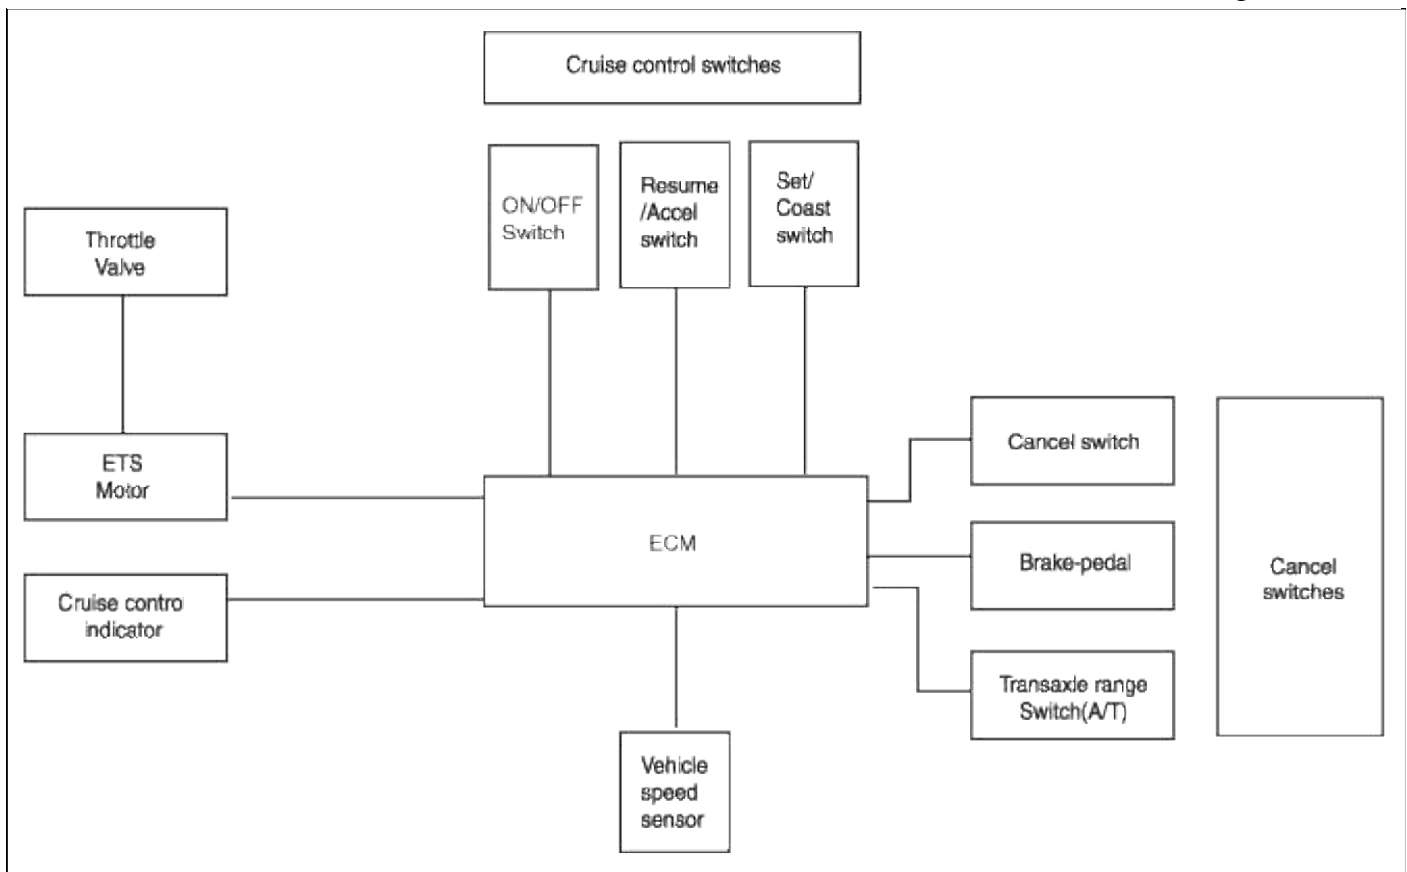

Component Parts And Function Outline

Component part		Function
Vehicle-speed sensor		Converts vehicle speed to pulse.
ECM		Receives signals from sensor and control switches.
Cruise control indicator		Illuminate when CRUISE main switch is ON (Built into cluster)
Cruise Control switches	ON/OFF switch	Switch for automatic speed control power supply.
	Resume/Accel switch	Controls automatic speed control functions by Resume/Accel switch (Set/Coast switch)
	Set/Coast switch	
Cancel switch	Cancel switch	Sends cancel signals to ECM.
	Brake-pedal switch	
	Transaxle range switch (A/T)	
ETS motor		Regulates the throttle valve to the set opening by ECM.

* ETS : Electronic Throttle System

Engine Electrical System > Cruise Control System > Description and Operation

Cruise Control

Cruise control system is engaged by the "ON/OFF" main switch located on right of steering wheel column. The system has the capability to cruise, coast, resume speed, and accelerate, and raise "tab-up" or lower "tab-down" set speed.

It also has a safety interrupt, engaged upon depressing brake or shifting select lever.

The ECM is the control module for this system.

The main components of cruise control system are mode control switches, transaxle range switch, brake switch, vehicle speed sensor, ECM and ETS motor that connect throttle body.

The ECM contains a low speed limit which will prevent system engagement below a minimum speed of 40km/h (25mph).

The operation of the controller is controlled by mode control switches located on steering wheel.

Transaxle range switch and brake switch are provided to disengage the cruise control system. When the brake pedal is depressed or select lever shifted, the cruise control system is electrically disengaged and the throttle is returned to the idle position.

Cruise main switch

Cruise control system is engaged by pressing the "ON/OFF" push button. Releasing the "ON/OFF" push button will release throttle, clears cruise memory speed, and puts vehicle in a non-cruise mode.

Coast/Set switch

COAST/SET switch located on right of steering wheel column has two positions - "Normal" and "Depressed". The set position - With COAST/SET switch depressed and then released the cruise speed will be set at the speed the vehicle was going when COAST/SET switch was released. The coast position - With COAST/SET switch fully depressed, driver can lower cruise speed. To decrease cruise speed, COAST/SET switch is held in, disengaging cruise control system. When vehicle has slowed to required cruise speed, releasing COAST/SET switch will re-engage system at new selected speed.

The tab down - To lower vehicle speed, cruise must be engaged and operating. Tab down is done by quickly pressing and releasing COAST/SET switch. Do not hold COAST/SET switch in depressed position.

Tab down is a function in which vehicle speed is decrease by 1 mph (1.6km/h)

Resume/Accel switch

RES/ACCEL switch located on right of steering wheel column has two positions - "Normal" and "Depressed".

The resume position - With RES/ACCEL switch depressed and then release, this switch also returns cruise control operation to last speed (Which is temporarily disengaged by Cancel switch or Brake pedal), setting when momentarily operating RES/ACCEL switch by constant acceleration.

The accel position - With RES/ACCEL switch depressed and held in, disengaging cruise control system, when vehicle has accelerated to required cruise speed, releasing RES/ACCEL switch will re-engage speed at new selected speed.

The tab up - To increase vehicle speed, the cruise must be engaged and operating.

Tab up is done by quickly pressing and releasing RES/ACCEL switch less than 0.5 second. Do not hold RES/ACCEL switch in depressed position. Tab up is a function in which cruise speed can be increased by 1mph (1.6km/h).

Cancel switch


Cruise control system is temporarily disengaged by pressing "CANCEL" switch.

Cruise speed canceled by this switch will be recovered by RES/ACCEL switch

Engine Electrical System > Cruise Control System > Troubleshooting

Trouble Symptom Charts

Trouble Symptom 1

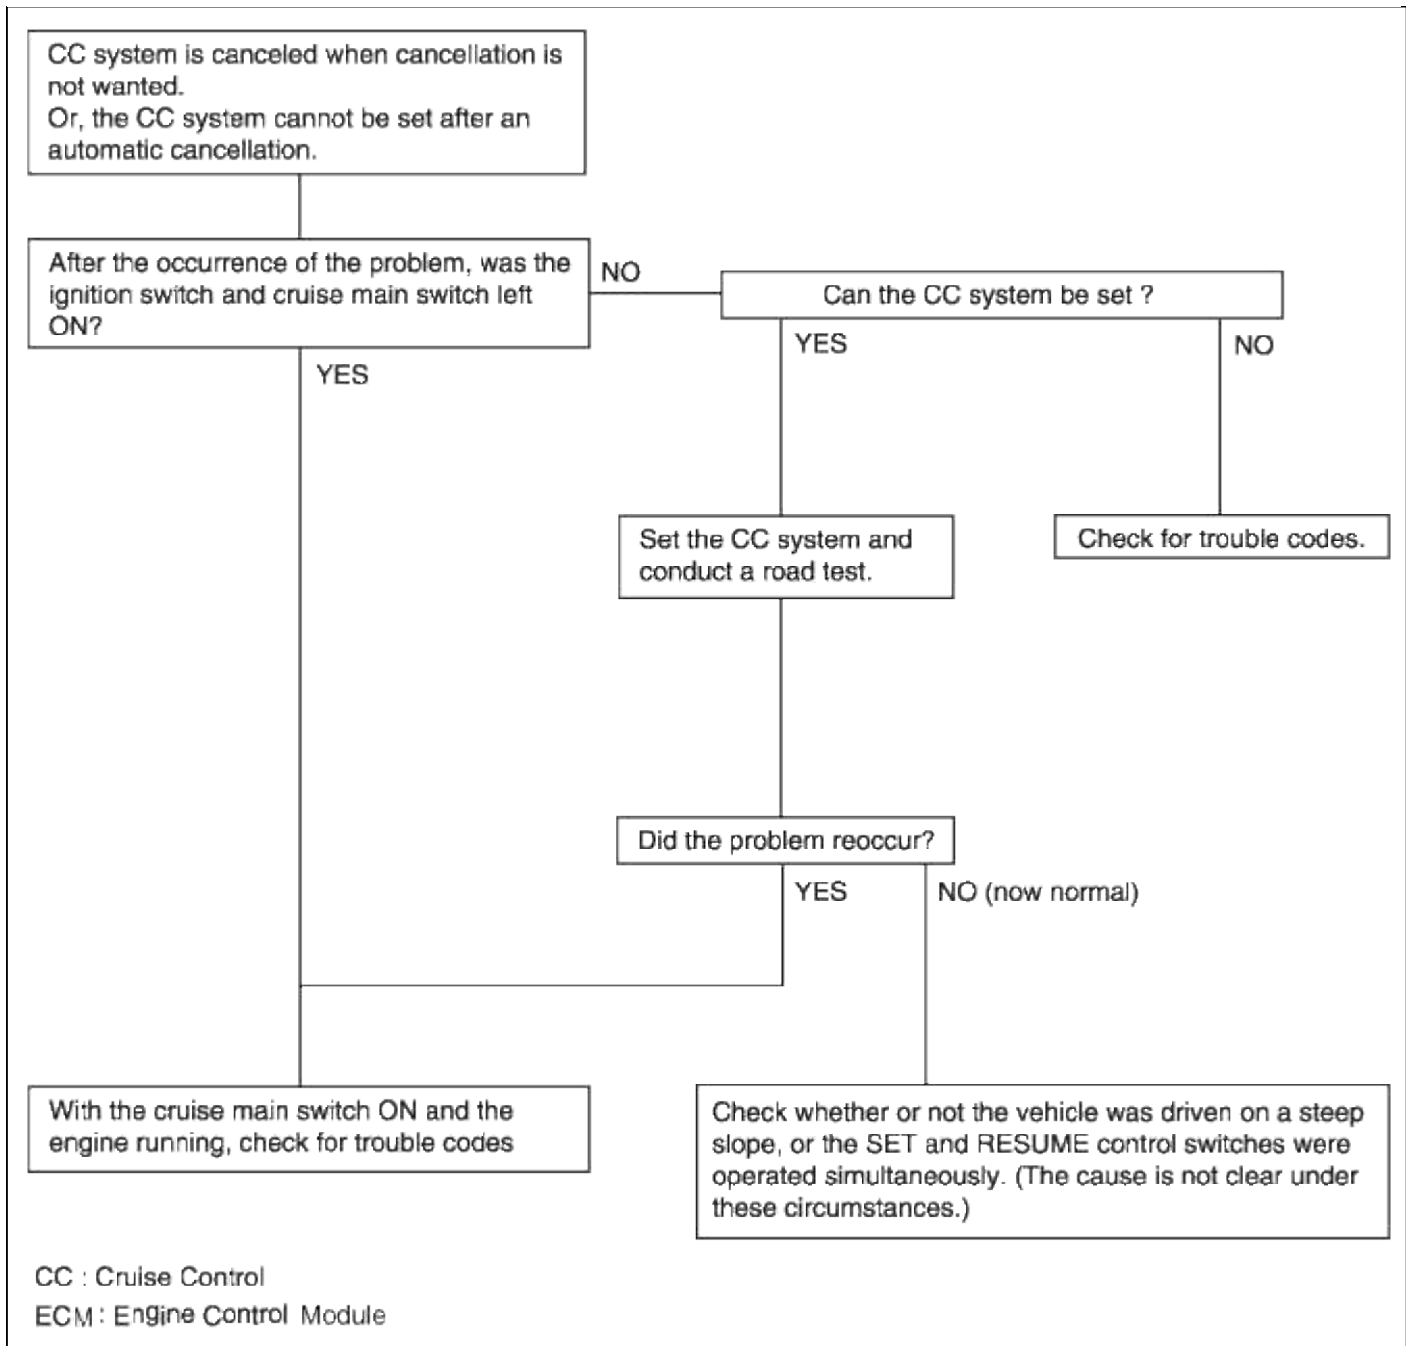

Trouble Symptom 2

Trouble symptom	Probable cause	Remedy
The set vehicle speed varies greatly upward or downward "Surging" (repeated alternating acceleration and deceleration) occurs after setting	Malfunction of the vehicle speed sensor circuit	Repair the vehicle speed sensor system, or replace the part
	Malfunction of ECM	Check input and output signals at ECM

Trouble Symptom 3

Trouble symptom	Probable cause	Remedy
The CC system is not canceled when the brake pedal is depressed	Damaged or disconnected wiring of the brake pedal switch	Repair the harness or replace the brake pedal switch
	Malfunction of the ECM signals	Check input and output signals at ECM

Trouble Symptom 4

Trouble symptom	Probable cause	Remedy
The CC system is not canceled when the shift lever is moved to the "N" position (It is canceled, however, when the brake pedal is depressed)	Damaged or disconnected wiring of inhibitor switch input circuit	Repair the harness or repair or replace the inhibitor switch
	Improper adjustment of inhibitor switch	
	Malfunction of the ECM signals	Check input and output signals at ECM

Trouble Symptom 5

Trouble symptom	Probable cause	Remedy
Cannot decelerate (coast) by using the SET switch	Temporary damaged or disconnected wiring of SET switch input circuit	Repair the harness or replace the SET switch
	Malfunction of the ECM signals	Check input and output signals at ECM

Trouble Symptom 6

Trouble symptom	Probable cause	Remedy
Cannot accelerate or resume speed by using the RESUME switch	Damaged or disconnected wiring, or short circuit, or RESUME switch input circuit	Repair the harness or replace the RESUME switch
	Malfunction of the ECM signals	Check input and output signals at ECM

Trouble Symptom 7



Trouble symptom	Probable cause	Remedy
CC system can be set while driving at a vehicle speed of less than 40km/h (25mph), or there is no automatic cancellation at that speed	Malfunction of the vehicle-speed sensor circuit	Repair the vehicle speed sensor system, or replace the part
	Malfunction of the ECM signals	Check input and output signals at ECM

Trouble Symptom 8

Trouble symptom	Probable cause	Remedy
The cruise main switch indicator lamp does not illuminate (But CC system is normal)	Damaged or disconnected bulb of cruise main switch indicator lamp	Repair the harness or replace the part.
	Harness damaged or disconnected	


Engine Electrical System > Cruise Control System > Cruise Control Switch > Schematic Diagrams

Circuit Diagram

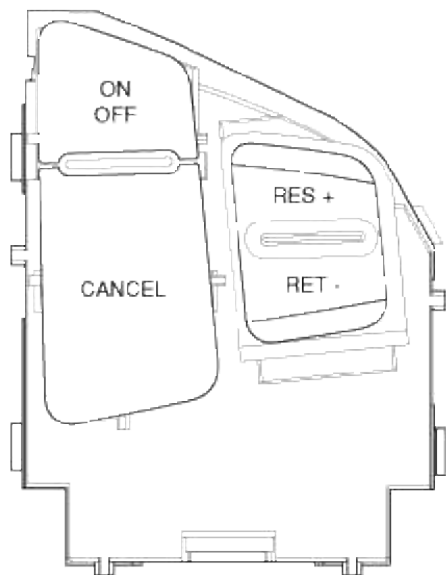

CONNECTOR

NO	CONNECTOR
1	ILL(+)
2	ILL(-)
3	ACC(-)
4	ACC ON/OFF
5	ACC(-)
6	-
7	-
8	-

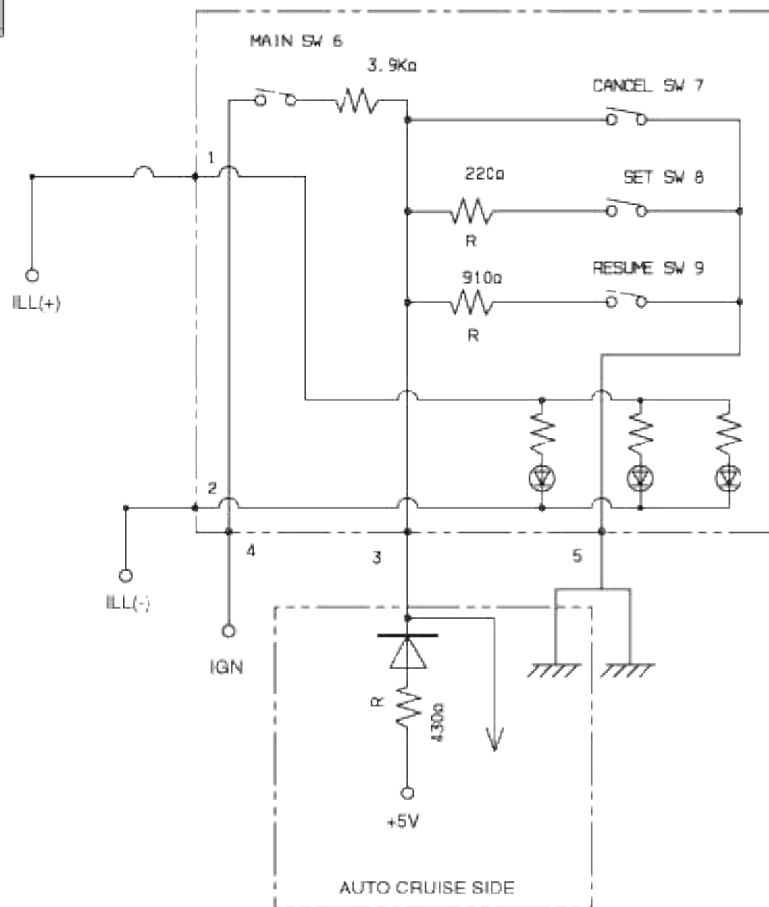


Engine Electrical System > Cruise Control System > Cruise Control Switch > Repair procedures

Inspection

Measuring Resistance

1. Disconnect the cruise control switch connector from the control switch.

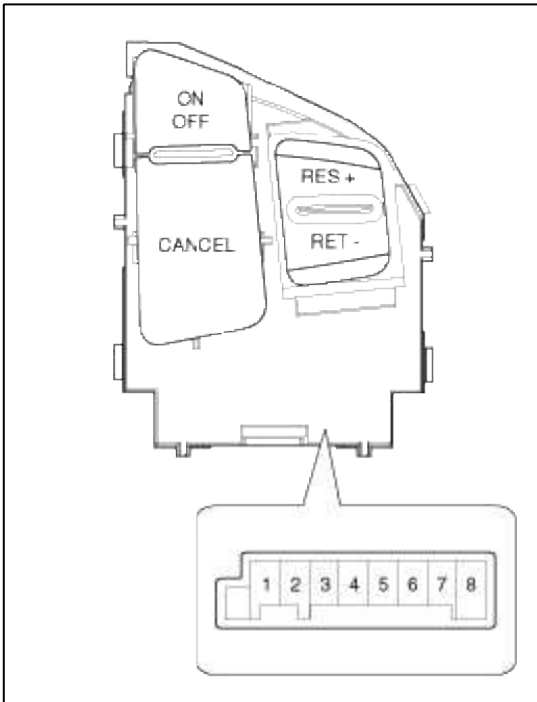


2. Measure resistance between terminals on the control switch when each function switch is ON (switch is depressed).

Function switch	Terminal	Resistance
Cruise Main	RH 3-4	$3.9\text{k}\Omega \pm 1\%$
Cancel	RH 3-5	$0\Omega \pm 1\%$
Set/Coast	RH 3-5	$220\Omega \pm 1\%$
Resume/Accel	RH 3-5	$910\Omega \pm 1\%$

3. If not within specification, replace switch.

Measuring Voltage

1. Connect the cruise control switch connector to the control switch.

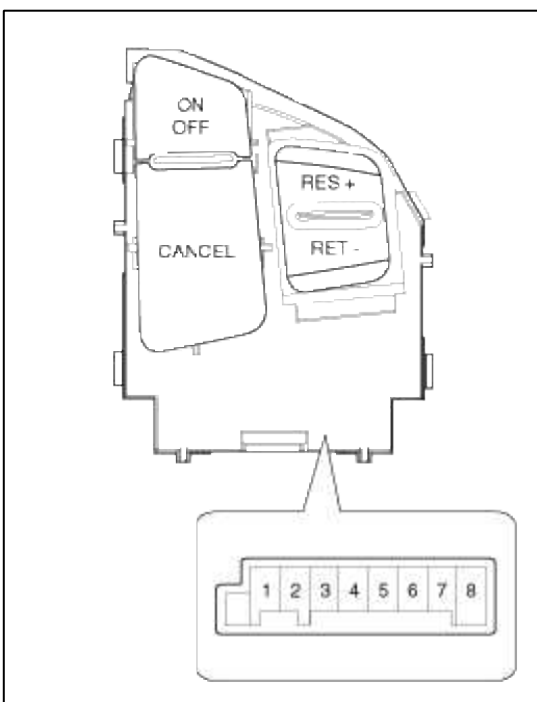

2. Measure voltage between terminals on the harness side connector when each function switch is ON (switch is depressed).

Function switch	Terminal	Voltage
Cruise Main	RH 3-4	-
Cancel	RH 3-5	$0.0V \pm 0.22V$
Set/Coast	RH 3-5	$1.5V \pm 0.22V$
Resume/Accel	RH 3-5	$3.0V \pm 0.22V$

3. If not within specification, replace switch.

GENESIS COUPE(BK) > 2013 > G 3.8 GDI > Engine Mechanical System

Engine Mechanical System > General Information > Specifications

Specifications

Description		Specifications	Limit
General			
Type		V-type, DOHC	
Number of cylinders		6	
Bore		96mm(3.7795in.)	
Stroke		87.0mm(3.4252in.)	
Total displacement		3,778cc(230.55cu.in.)	
Compression ratio		11.5:1	
Firing order		1-2-3-4-5-6	
Valve timing			
Intake	Opens(ATDC)	10°	
	Closes(ABDC)	78°	
Exhaust	Opens(BBDC)	52°	
	Closes(ATDC)	0°	
Cylinder head			
Flatness of gasket surface		Less than 0.05mm (0.0019in.) [Less than 0.02mm (0.0008in.) / 150x150]	
Flatness of manifold mounting	Intake	Less than 0.1mm(0.0039in.) [Less than 0.03mm(0.001in.) / 110x110]	
	Exhaust	Less than 0.1mm(0.0039in.) [Less than 0.03mm(0.001in.) / 110x110]	
Camshaft			
Cam height	LH Camshaft	Intake	47.2mm (1.8583in.)
		Exhaust	45.8mm (1.8031in.)
	RH Camshaft	Intake	47.2mm (1.8583in.)
		Exhaust	45.8mm (1.8031in.)
		Intake	No.1: 27.964 ~ 27.978mm (1.1009 ~ 1.1015in.) No.2,3,4: 23.954 ~ 23.970mm(0.9430 ~

Journal outer diameter	LH, RH camshaft		0.9437in.)	
		Exhaust	No.1: 27.964 ~ 27.978mm(1.1009 ~ 1.1015in.) No.2,3,4: 23.954 ~ 23.970mm(0.9430 ~ 0.9437in.)	
Bearing oil clearance	LH, RH camshaft	Intake	No.1: 0.027 ~ 0.057mm (0.0011 ~ 0.0022in.) No.2,3,4: 0.030 ~ 0.067mm (0.0012 ~ 0.0026in.)	
		Exhaust	No.1: 0.027 ~ 0.057mm (0.0011 ~ 0.0022in.) No.2,3,4: 0.030 ~ 0.067mm (0.0012 ~ 0.0026in.)	
End play			0.02 ~ 0.18mm (0.0008 ~ 0.0071in.)	
Valve				
Valve length	Intake		105.27mm(4.1445in.)	
	Exhaust		105.50mm (4.1535in.)	
Stem outer diameter	Intake		5.465 ~ 5.480mm (0.2151 ~ 0.2157in.)	
	Exhaust		5.458 ~ 5.470mm (0.2149 ~ 0.2153in.)	
Face angle			45.25° ~ 45.75°	
Thickness of valvehead(margin)	Intake		1.56 ~ 1.86mm (0.06142 ~ 0.07323in.)	
	Exhaust		1.73 ~ 2.03mm (0.06811 ~ 0.07992in.)	
Valve stem to valve guide clearance	Intake		0.020 ~ 0.047mm (0.00078 ~ 0.00185in.)	0.07mm (0.00275in.)
	Exhaust		0.030 ~ 0.054mm (0.00118 ~ 0.00212in.)	0.09mm (0.00354in.)
Valve guide				
Inner diameter	Intake		5.500 ~ 5.512mm (0.2165 ~ 0.2170in.)	
	Exhaust		5.500 ~ 5.512mm (0.2165 ~ 0.2170in.)	
Length	Intake		41.8 ~ 42.2mm (1.6457 ~ 1.6614in.)	
	Exhaust		41.8 ~ 42.2mm (1.6457 ~ 1.6614in.)	
Valve seat				

Width of seat contact	Intake	1.15 ~ 1.45mm(0.05118 ~ 0.05709in.)	
	Exhaust	1.35 ~ 1.65mm(0.05315 ~ 0.06496in.)	
Seat angle	Intake	44.75° ~ 45.20°	
	Exhaust	44.75° ~ 45.20°	
Valve spring			
Free length		45.5mm (1.7913in.)	
Load		19.3±0.8kg/34.0mm (42.7±1.8 lb/1.3386in.)	
		41.5±1.3kg/24.2mm (91.5±2.9 lb/0.9527in.)	
Out of squareness		Less than 1.5°	
MLA			
MLA outer diameter	Intake	34.964 ~ 34.980mm (1.3765 ~ 1.3772in.)	
	Exhaust	34.964 ~ 34.980mm (1.3765 ~ 1.3772in.)	
Cylinder head tappet bore inner diameter	Intake	35.000 ~ 35.025mm (1.3779 ~ 1.3789in.)	
	Exhaust	35.000 ~ 35.025mm (1.3779 ~ 1.3789in.)	
MLA to tappet bore clearance	Intake	0.020 ~ 0.061mm (0.0008 ~ 0.0024in.)	0.07mm (0.0027in.)
	Exhaust	0.020 ~ 0.061mm (0.0008 ~ 0.0024in.)	0.07mm (0.0027in.)
Valve clearance (At 20°C [68°F])			
Intake		0.17 ~ 0.23mm (0.0067 ~ 0.0090in.)	0.10 ~ 0.30mm (0.0039 ~ 0.0118in.)
Exhaust		0.27 ~ 0.33mm (0.0106 ~ 0.0129in.)	0.20 ~ 0.40mm (0.0078 ~ 0.0157in.)
Cylinder block			
Cylinder bore		96.00 ~ 96.03mm (3.7795 ~ 3.7807in.)	
Flatness of gasket surface		Less than 0.05mm (0.0019in.) [Less than 0.02mm (0.0008in.) / 150x150]	
Piston			
Piston outer diameter		95.96 ~ 95.99mm(3.7779 ~ 3.7791in.)	

Piston to cylinder clearance		0.03 ~ 0.05mm(0.0012 ~ 0.0020in.)	
Ring groove width	No. 1 ring groove	1.23 ~ 1.25mm (0.0484 ~ 0.0492in.)	1.26mm (0.0496in.)
	No. 2 ring groove	1.23 ~ 1.25mm (0.0484 ~ 0.0492in.)	1.26mm (0.0496in.)
	Oil ring groove	2.01 ~ 2.03mm (0.0791 ~ 0.0799in.)	2.05mm (0.0807in.)
Piston ring			
Side clearance	No. 1 ring	0.03 ~ 0.07mm (0.0012 ~ 0.0027in.)	0.1mm (0.004in.)
	No. 2 ring	0.03 ~ 0.07mm (0.0012 ~ 0.0027in.)	0.1mm (0.004in.)
	Oil ring	0.02 ~ 0.065mm (0.0008 ~ 0.0026in.)	0.2mm (0.008in.)
End gap	No. 1 ring	0.17 ~ 0.32mm (0.0067 ~ 0.0126in.)	0.6mm (0.0236in.)
	No. 2 ring	0.32 ~ 0.47mm (0.0126 ~ 0.0185in.)	0.7mm (0.0275in.)
	Oil ring	0.2 ~ 0.5mm (0.0078 ~ 0.0196in.)	0.8mm (0.0315in.)
Piston pin			
Piston pin outer diameter		21.097 ~ 22.000mm (0.8306 ~ 0.8661in.)	
Piston pin hole inner diameter		22.004 ~ 22.010mm (0.8662 ~ 0.8665in.)	
Piston pin hole clearance		0.004 ~ 0.013mm (0.00016 ~ 0.00051in.)	
Connecting rod small end inner diameter		22.005 ~ 22.016mm (0.8663 ~ 0.8667in.)	
Connecting rod small end hole clearance		0.005 ~ 0.019mm (0.0002 ~ 0.0007in.)	
Connecting rod			
Connecting rod big end inner diameter		58.000 ~ 58.018mm(2.2834 ~2.2842in.)	
Connecting rod bearing oil clearance		0.044 ~ 0.062mm (0.0017 ~ 0.0024in.)	
Side clearance		0.1 ~ 0.25mm (0.0039 ~ 0.0098in.)	
Crankshaft			

Main journal outer diameter		68.942 ~ 68.960mm (2.7142 ~ 2.7149in.)	
Pin journal outer diameter		54.954 ~ 54.972mm (2.1635 ~ 2.1642in.)	
Main bearing oil clearance		0.022 ~ 0.040mm (0.0008 ~ 0.0016in.)	
End play		0.10 ~ 0.28mm (0.0039 ~ 0.0110in.)	
Oil pump			
Relief valve opening pressure		5.0 ~ 5.5 bar	
Engine oil			
Oil quantity	Total	6.5L (6.87US.qt, 5.72Imp.qt, 1.72 US.gal)	Total engine oil
	Oil pan	6.0L (6.34US.qt, 5.28Imp.qt, 1.58 US.gal)	
	Drain and refill	5.7L (6.02US.qt, 5.01Imp.qt, 1.50 US.gal)	Including oil filter
Oil grade	Recommendation	5W-20 / GF4 & SM 5W-30 / ACEA A5	If not available, refer to the recommended API or ILSAC or ACEA clasification and SAE viscosity number
	Classification	API SL, SM or above ILSAC GF3, GF4 or above ACEA A3, A5 or above	Satisfy the requirement of the API or ILSAC or ACEA clasification
	SAE viscosity grade	Recommended SAE viscosity number	Refer to the "Lubrication System"
Oil pressure (at 1000rpm)		130kPa (1.22kg/cm ² , 18.77psi) or above	Oil temperature in oil pan : 110±2°C (230±36°F)
Cooling system			
Cooling method		Forced circulation with water pump	
Coolant quantity		MT : 9.0L (9.5US.qt, 7.9Imp.qt, 2.4 US.gal) AT : 8.8L (9.3US.qt, 7.7Imp.qt, 2.3 US.gal)	
Thermostat	Type	Wax pellet type	
	Opening temperature	82±2°C (179.6±3.6°F)	
	Fully opened temperature	95°C (203°F)	
	Full lift	10mm (0.3937in.) MIN	
	Main valve opening	93.16 ~ 122.58kpa (0.95 ~ 1.25kg/cm ² , 13.51	

Radiator cap	pressure	~ 17.78psi)	
	Vacuum valve opening pressure	0 ~ 6.86 kpa (0 ~ 0.07kg/cm ² , 0 ~ 0.99psi)	
Water temperature sensor			
Type		Thermister type	
Resistance	20°C (68°F)	2.31 ~ 2.59KΩ	
	80°C(176°F)	0.3222 KΩ	

Tightening Torques

Item	Quantity	Nm	kgf.m	lb-ft
Engine Mounting				
Engine mounting insulator to engine mounting support bracket fixing nut	2	63.7 ~ 83.3	6.5 ~ 8.5	47.0 ~ 61.5
Engine mounting support bracket to cylinder block fixing bolt	8	49.0 ~ 63.7	5.0 ~ 6.5	36.2 ~ 47.0
Timing system				
Drive belt idler bolt	1	53.9 ~ 57.9	5.5 ~ 5.9	39.8 ~ 42.7
Drive belt auto tensioner bolt(M12)	1	81.4 ~ 85.3	8.3 ~ 8.7	60.0 ~ 62.9
Drive belt auto tensioner bolt(M8)	1	17.7 ~ 21.6	1.8 ~ 2.2	13.0 ~ 15.9
Crankshaft pulley bolt	1	284.4 ~ 304.0	29.0 ~ 31.0	209.8 ~ 224.2
Timing chain cover bolt A	16	18.6 ~ 21.6	1.9 ~ 2.2	13.7 ~ 15.9
Timing chain cover bolt B	2	24.5 ~ 26.5	2.5 ~ 2.7	18.1 ~ 19.5
Timing chain cover bolt C	2	58.8 ~ 68.6	6.0 ~ 7.0	43.4 ~ 50.6
Timing chain cover bolt D	3	9.8 ~ 11.8	1.0 ~ 1.2	7.2 ~ 8.7
Timing chain auto tensioner bolt	2	9.8 ~ 11.8	1.0 ~ 1.2	7.2 ~ 8.7
Timing chain auto tensioner nut	2	9.8 ~ 11.8	1.0 ~ 1.2	7.2 ~ 8.7
Timing chain auto tensioner arm bolt	2	18.6 ~ 21.6	1.9 ~ 2.2	13.7 ~ 15.9
Timing chain guide bolt	4	19.6 ~ 24.5	2.0 ~ 2.5	14.5 ~ 18.1
Timing chain cam to cam guide bolt	4	9.8 ~ 11.8	1.0 ~ 1.2	7.2 ~ 8.7
Cylinder head				
Ignition coil bolt (LH/RH)	6	9.8 ~ 11.8	1.0 ~ 1.2	7.2 ~ 8.7
Spark plug (LH/RH)	6	14.7 ~ 24.5	1.5 ~ 2.5	10.8 ~ 18.1
Cylinder head cover bolt (LH/RH)	38	[4.9~5.9] + [9.8~11.8]	[0.5~0.6] + [1.0~1.2]	[3.6~4.3] + [7.2~8.7]

CVVT bolt (LH/RH)	4	64.7 ~ 76.5	6.6 ~ 7.8	47.7 ~ 56.4
Camshaft bearing cap bolt (LH/RH)	32	[5.9] + [9.8~11.8]	[0.6] + [1.0~1.2]	[4.3] + [7.2~8.7]
Cylinder head bolt (LH/RH)	16	[37.3~41.2] + [118~122°] + [88~92°]	[3.8~4.2] + [118~122°] + [88~92°]	[27.5~30.4] + [118~122°] + [88~92°]
Cylinder head bolt (RH rear)	2	18.6 ~ 23.5	1.9 ~ 2.4	13.7 ~ 17.4
Engine hanger bolt (LH)	1	44.1 ~ 53.6	4.5 ~ 5.5	32.5 ~ 39.8
Engine hanger bolt (RH)	2	18.6 ~ 23.5	1.9 ~ 2.4	13.7 ~ 17.4
Exhaust OCV(oil control valve) bolt (LH/RH)	2	9.8 ~ 11.8	1.0 ~ 1.2	7.2 ~ 8.7
Intake OCV(oil control valve) bolt (LH/RH)	2	9.8 ~ 11.8	1.0 ~ 1.2	7.2 ~ 8.7
Fuel pump adapter bolt	4	18.6 ~ 23.5	1.9 ~ 2.4	13.7 ~ 17.4
High pressure fuel pump bolt	2	12.7 ~ 14.7	1.3 ~ 1.5	9.4 ~ 10.8
Cylinder block				
Connecting rod bolt	12	[27.5~31.3] + [68~72°]	[2.8~3.2] + [68~72°]	[20.2~23.1] + [68~72°]
Main bearing cap inner bolt(M11)	8	[49.0] + [90°]	[5.0] + [90°]	[36.2] + [90°]
Main bearing cap outer bolt(M8)	8	[19.6] + [120°]	[2.0] + [120°]	[14.5] + [120°]
Main bearing cap side bolt(M8)	8	29.4 ~ 31.4	3.0 ~ 3.2	21.7 ~ 23.1
Plug bolt	1	83.4 ~ 102.9	8.5 ~ 10.5	61.5 ~ 75.9
Oil jet bolt	3	27.5 ~ 31.3	2.8 ~ 3.2	20.2 ~ 23.1
Rear oil seal case bolt	6	9.8 ~ 11.8	1.0 ~ 1.2	7.2 ~ 8.7
Baffle plate bolt	6	9.8 ~ 11.8	1.0 ~ 1.2	7.2 ~ 8.7
Knock sensor bolt (LH/RH)	2	15.7 ~ 23.5	1.6 ~ 2.4	11.6 ~ 17.4
Drive plate bolt	8	71.5 ~ 75.5	7.3 ~ 7.7	52.8 ~ 55.7
Flywheel bolt	8	71.5 ~ 75.5	7.3 ~ 7.7	52.8 ~ 55.7
Dual mass flywheel (DMF)	8	71.5 ~ 75.5	7.3 ~ 7.7	52.8 ~ 55.7
Upper oil pan bolt	18	9.8 ~ 11.8	1.0 ~ 1.2	7.2 ~ 8.7
Lubrication system				
Oil drain bolt	1	34.3 ~ 44.1	3.5 ~ 4.5	25.3 ~ 32.5
Oil pump bolt	3	20.6 ~ 22.6	2.1 ~ 2.3	15.2 ~ 16.6
Oil filter body bolt	4	19.6 ~ 21.6	2.0 ~ 2.2	14.5 ~ 15.9
Oil filter cap	1	34.3	3.5	25.3
Oil level gauge & water inlet pipe bolt	1	18.6 ~ 22.6	1.9 ~ 2.3	13.7 ~ 16.6

Lower oil pan bolt	13	9.8 ~ 11.8	1.0 ~ 1.2	7.2 ~ 8.7
Oil pump chain cover bolt	2	9.8 ~ 11.8	1.0 ~ 1.2	7.2 ~ 8.7
Oil pump chain tensioner bolt	1	9.8 ~ 11.8	1.0 ~ 1.2	7.2 ~ 8.7
Oil pump chain sprocket bolt	1	18.6 ~ 21.6	1.9 ~ 2.2	13.7 ~ 15.9
Cooling system				
Water pump bolt A	3	9.8 ~ 11.8	1.0 ~ 1.2	7.2 ~ 8.7
Water pump bolt B	1	9.8 ~ 11.8	1.0 ~ 1.2	7.2 ~ 8.7
Water pump bolt C	1	21.6 ~ 26.5	2.2 ~ 2.7	15.9 ~ 19.5
Water pump bolt D	1	9.8 ~ 11.8	1.0 ~ 1.2	7.2 ~ 8.7
Water pump bolt E	1	9.8 ~ 11.8	1.0 ~ 1.2	7.2 ~ 8.7
Water pump bolt F	1	9.8 ~ 11.8	1.0 ~ 1.2	7.2 ~ 8.7
Water pump bolt G	4	21.6 ~ 23.5	2.2 ~ 2.4	15.9 ~ 17.4
Water pump pulley bolt	4	7.8 ~ 9.8	0.8 ~ 1.0	5.8 ~ 7.2
Water temp. control nut	4	18.6 ~ 23.5	1.9 ~ 2.4	13.7 ~ 17.4
Water temp. control bolt	2	18.6 ~ 23.5	1.9 ~ 2.4	13.7 ~ 17.4
Water center pipe bolt	1	9.8 ~ 11.8	1.0 ~ 1.2	7.2 ~ 8.7
Water outlet pipe bolt	1	19.6 ~ 23.5	2.0 ~ 2.4	14.5 ~ 17.4
Water in/outlet pipe to water temp. control bolt	2	19.6 ~ 23.5	2.0 ~ 2.4	14.5 ~ 17.4
Intake and exhaust system				
Intake air hose clamp bolt	1	2.9 ~ 4.9	0.3 ~ 0.5	2.2 ~ 3.6
Air cleaner assembly bolt	3	7.8 ~ 9.8	0.8 ~ 1.0	5.8 ~ 7.2
Intake manifold bolt	8	[3.9~5.9] + [26.5~31.4]	[0.4~0.6] + [2.7~3.2]	[2.9~4.3] + [19.5~23.1]
Surge tank long bolt	2	9.8 ~ 11.8	1.0 ~ 1.2	7.2 ~ 8.7
Surge tank short bolt	4	18.6 ~ 23.5	1.9 ~ 2.4	13.7 ~ 17.4
Surge tank nut	2	18.6 ~ 23.5	1.9 ~ 2.4	13.7 ~ 17.4
Exhaust manifold nut (LH/RH)	16	49.0 ~ 53.9	5.0 ~ 5.5	36.2 ~ 39.8
Heat protector bolt (LH/RH)	6	9.8 ~ 11.8	1.0 ~ 1.2	7.2 ~ 8.7
Exhaust manifold stay bolt (LH/RH)	4	34.3 ~ 41.2	3.5 ~ 4.2	25.3 ~ 30.4
Muffler nut	16	39.2 ~ 58.8	4.0 ~ 6.0	28.9 ~ 43.4

Engine Mechanical System > General Information > Repair procedures

Inspection

Compression Pressure

NOTE

If there is lack of power, excessive oil consumption or poor fuel economy, measure the compression pressure.

1. Warm up engine until the normal operating temperature(80~95°C(176-203°F)).
2. Remove the surge tank. (Refer to Intake and exhaust system in this group)
3. Disconnect the LH/RH ignition coil connectors and then remove the ignition coils. (Refer to Engine Electrical System - "Ignition System")
4. Remove the spark plugs.
Using a 16mm plug wrench, remove the 6 spark plugs.
5. Check cylinder compression pressure.
 - (1) Insert a compression gauge into the spark plug hole.
 - (2) Fully open the throttle.
 - (3) Crank the engine over 7 times to measure compression pressure.

NOTE

Always use a fully charged battery to obtain engine speed of 250 rpm or more.

- (4) Repeat step 1) through 3) for each cylinder.

NOTE

This measurement must be done in as short a time as possible.

Compression pressure :

1,029kPa (10.5kgf/cm², 149psi) (250~400 rpm)

Minimum pressure :

882kPa (9.0kgf/cm², 128psi)

Difference between each cylinder :

98kPa (1.0kg/cm², 14psi) or less

- (5) If the cylinder compression in 1 or more cylinders is low, pour a small amount of engine oil into the cylinder through the spark plug hole and repeat step 1) through 3) for cylinders with low compression.
 - A. If adding oil helps the compression, it is likely that the piston rings and/or cylinder bore are worn or damaged.
 - B. If pressure stays low, a valve may be sticking or seating is improper, or there may be leakage past the gasket.
6. Reinstall the spark plugs.

Tightening torque:

14.7 ~ 24.5 N.m (1.5 ~ 2.5 kgf.m, 10.8 ~ 18.1 lb-ft)

7. Install the ignition coils and ignition connectors.

Tightening torque:

9.8 ~ 11.8 N.m (1.0 ~ 1.2 kgf.m, 7.2 ~ 8.7 lb-ft)


8. Install the surge tank. (Refer to Intake and exhaust system in this group)

Valve Clearance Inspection And Adjustment


NOTE

Inspect and adjust the valve clearance when the engine is cold (Engine coolant temperature : 20°C(68°F)) and cylinder head is installed on the cylinder block.

1. Remove the engine cover.
2. Remove air cleaner assembly. (Refer to Intake and exhaust system in this group)
3. Remove the surge tank. (Refer to Intake and exhaust system in this group)
4. Remove the cylinder head cover. (Refer to Timing system in this group)
5. Set No.1 cylinder to TDC/compression.
 - (1) Turn the crankshaft pulley clockwise and align its groove with the timing mark "T" of the lower timing chain cover.

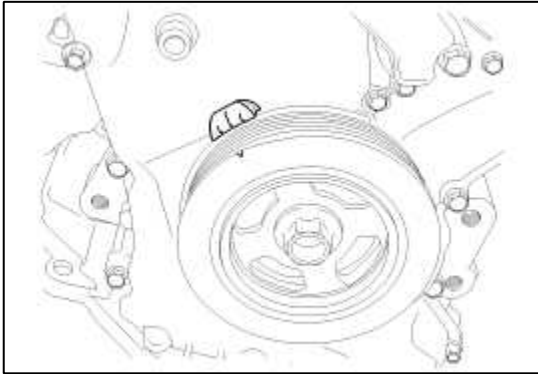


- (2) Check that the mark of the camshaft timing sprockets are in straight line on the cylinder head surface as shown in the illustration.
If not, turn the crankshaft clockwise one revolution (360°).

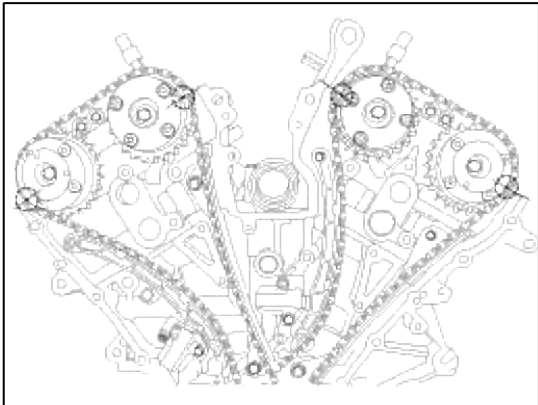**NOTE**

Do not rotate engine counterclockwise.

6. Inspect the valve clearance.

- (1) With No.1 cylinder at TDC inspect clearances only on the valves shown in diagram below.

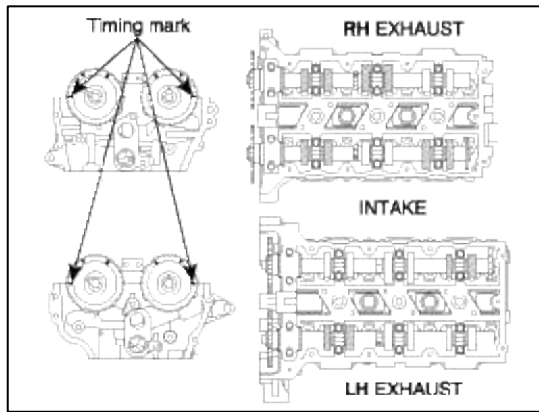

Measurement method.

- A. Using a thickness gauge, measure the clearance between the tappet and the base circle of camshaft.
 B. Record the out-of-specification valve clearance measurements. They will be used later to determine the required replacement adjusting tappet.

Valve clearance

Specification


Engine coolant temperature : 20°C [68°F]

Limit

Intake : 0.10 ~ 0.30mm (0.0039 ~ 0.0118in.)

Exhaust : 0.20 ~ 0.40mm (0.0078 ~ 0.0157in.)

- (2) Turn the crankshaft pulley clockwise one revolution (360°) and align the groove with timing mark "T" of the lower timing chain cover.
 (3) With No.4 cylinder at TDC inspect clearances only the valves shown in diagram below. (Refer to procedure step 1.)

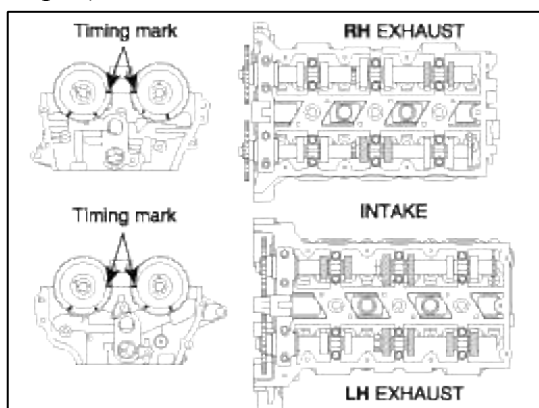





7. Adjust the intake and exhaust valve clearance.

- (1) Set the No.1 cylinder to the TDC/compression.


(2) Remove the timing chain. (Refer to timing system in this group)

NOTE



Before removing the timing chain, mark the RH/LH timing chain with an identification based on the location of the sprocket because the identification mark on the chain for TDC (Top Dead Center) can be erased.

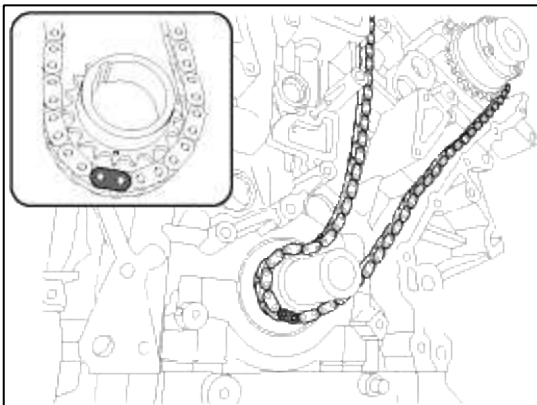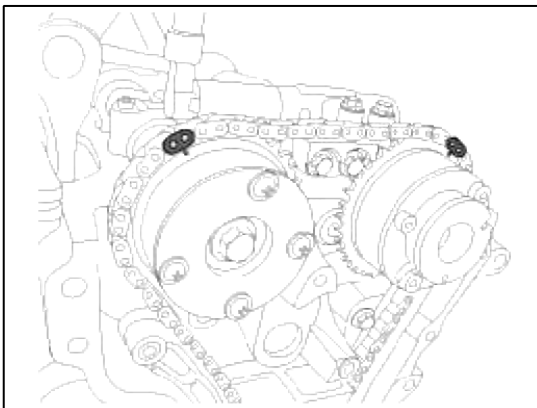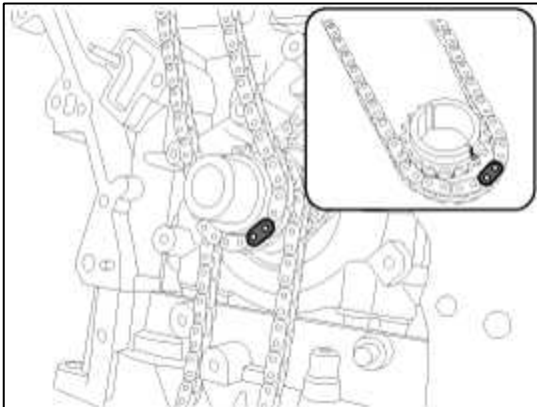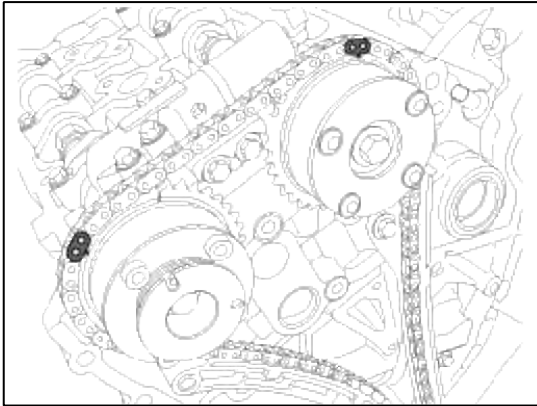


(3) Remove the fuel pump adapter (A).

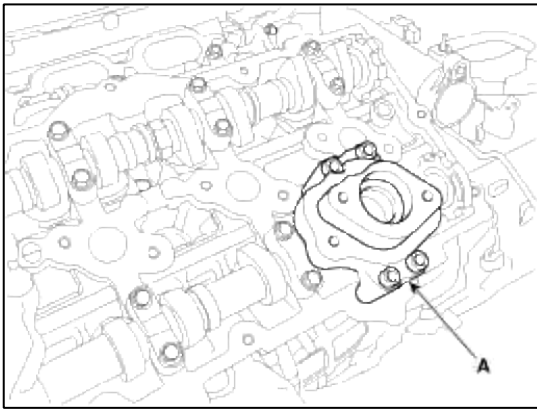


(4) Remove the LH/RH camshaft bearing cap (A) and thrust bearing cap (B).

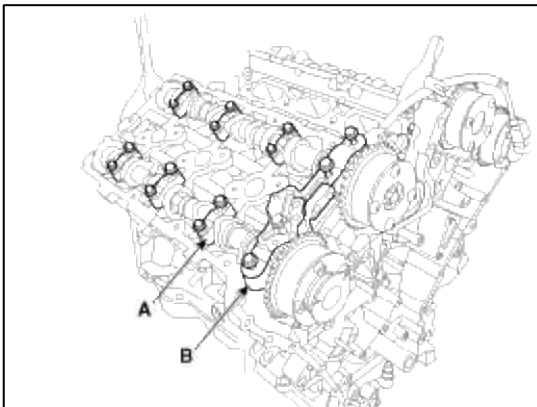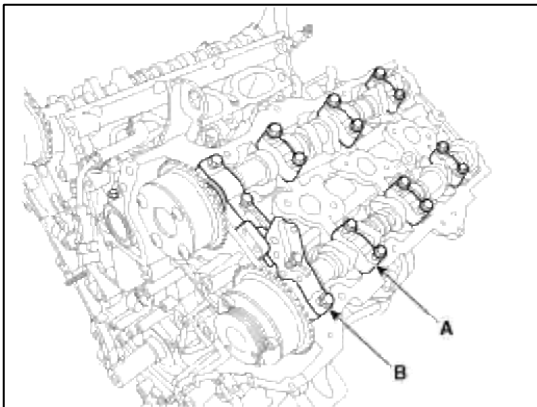


(5) Remove the LH/RH camshaft assembly (A).

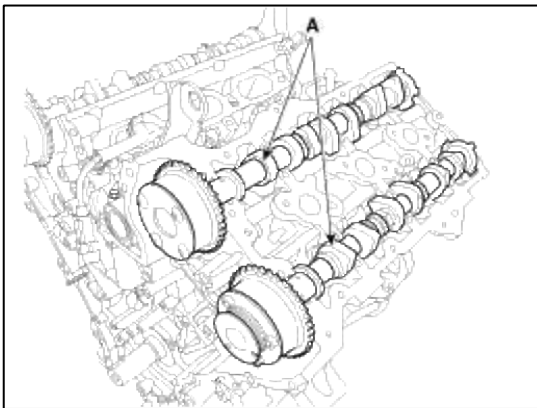

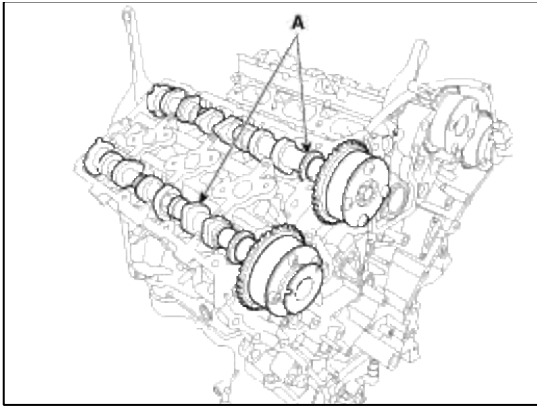

- (6) Remove the tappets.
- (7) Measure the thickness of the removed tappet using a micrometer.

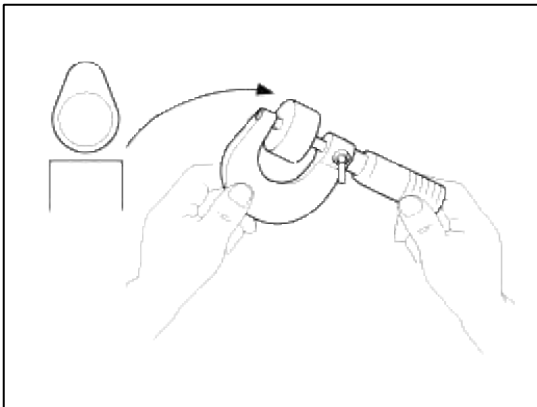

- (8) Calculate the thickness of a new tappet so that the valve clearance comes within the specified value.

T : Thickness of removed tappet

A : Measured valve clearance

N : Thickness of new tappet

Intake : $N = T + [A - 0.20\text{mm}(0.0079\text{in.})]$

Exhaust : $N = T + [A - 0.30\text{mm}(0.0118\text{in.})]$

- (9) Select a new tappet with a thickness as close as possible to the calculated value.

NOTE

Shims are available in 41 size increments of 0.015mm (0.0006in.) from 3.00mm (0.118in.) to 3.600mm (0.1417in.)


- (10) Place a new tappet on the cylinder head.

NOTE

Apply engine oil at the selected tappet on the periphery and top surface.

- (11) Install the intake and exhaust camshaft.
- (12) Install the bearing caps. (Refer to Cylinder head assembly in this Group)
- (13) Install the timing chain. (Refer to Timing system in this Group)

- (14) Turn the crankshaft two turns in the operating direction (clockwise) and realign crankshaft sprocket and camshaft sprocket timing marks.

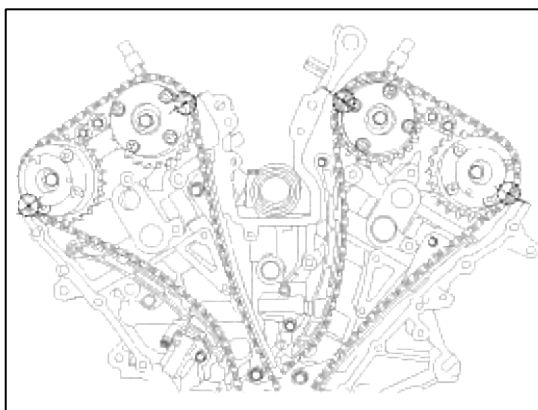

- (15) Recheck the valve clearance.

Valve clearance (Engine coolant temperature : 20°C [68°F])

[Specification]

Intake : 0.17 ~ 0.23mm (0.0067 ~ 0.0090in.)

Exhaust : 0.27 ~ 0.33mm (0.0106 ~ 0.0129in.)

Engine Mechanical System > General Information > Troubleshooting








Troubleshooting



Symptom	Suspect area	Remedy
Engine misfire with abnormal internal lower engine noises.	Worn crankshaft bearings. Loose or damaged engine drive plate.	Replace the crankshaft and bearings as required. Repair or replace the drive plate as required.
	Worn piston rings. (Oil consumption may or may not cause the engine to misfire.)	Inspect the cylinder for a loss of compression. Repair or replace as required.
	Worn crankshaft thrust bearings	Replace the crankshaft and bearings as required.
Engine misfire with abnormal valve train noise.	Stuck valves. (Carbon buildup on the valve stem)	Repair or replace as required.
	Excessive worn or mis-aligned timing chain.	Replace the timing chain and sprocket as required.
	Worn camshaft lobes.	Replace the camshaft and valve lifters.
Engine misfire with coolant consumption.	<ul style="list-style-type: none"> Faulty cylinder head gasket and/or cranking or other damage to the cylinder head and engine block cooling system Coolant consumption may or may not cause the engine to overheat. 	<ul style="list-style-type: none"> Inspect the cylinder head and engine block for damage to the coolant passages and/or a faulty head gasket. Repair or replace as required.
Engine misfire with excessive oil	Worn valves, guides and/or valve stem oil seals.	Repair or replace as required.

consumption.	Worn piston rings. (Oil consumption may or may not cause the engine to misfire)	<ul style="list-style-type: none"> • Inspect the cylinder for a loss of compression. • Repair or replace as required.
Engine noise on start-up, but only lasting a few seconds.	Incorrect oil viscosity.	<ul style="list-style-type: none"> • Drain the oil. • Install the correct viscosity oil.
	<div style="border: 1px solid black; padding: 5px;"> <p style="text-align: center; background-color: #008000; color: white; margin: 0;">NOTE</p> <p>Minor engine clatter sound immediately upon cold start for very brief period may be normal.</p> </div>	
Upper engine noise, regardless of engine speed.	Low oil pressure.	Repair or replace as required.
	Broken valve spring.	Replace the valve spring.
	Worn or dirty valve lifters.	Replace the valve lifters.
	Stretched or broken timing chain and/or damaged sprocket teeth.	Replace the timing chain and sprockets.
	Worn timing chain tensioner, if applicable.	Replace the timing chain tensioner as required.
	Worn camshaft lobes.	<ul style="list-style-type: none"> • Inspect the camshaft lobes. • Replace the timing camshaft and valve lifters as required.
	Worn valve guides or valve stems.	Inspect the valves and valve guides, then repair as required.
	Stuck valves. Carbon on the valve stem or valve seat may cause the valve to stay open.	Inspect the valves and valve guides, then repair as required.
Worn drive belt, idler, tensioner and bearing.	Replace as required.	
Lower engine noise, regardless of engine speed.	Low oil pressure.	Repair as required.
	Loose or damaged drive plate.	Repair or replace the drive plate.
	Damaged oil pan, contacting the oil pump screen.	<ul style="list-style-type: none"> • Inspect the oil pan. • Inspect the oil pump screen. • Repair or replace as required.
	Oil pump screen loose, damaged or restricted.	<ul style="list-style-type: none"> • Inspect the oil pump screen. • Repair or replace as required.
	Excessive piston-to-cylinder bore clearance.	<ul style="list-style-type: none"> • Inspect the piston, piston pin and cylinder bore. • Repair as required.
	Excessive piston pin-to-piston clearance.	<ul style="list-style-type: none"> • Inspect the piston, piston pin and the connecting rod. • Repair or replace as required.
	Excessive connecting rod bearing clearance	Inspect the following components and repair as required. <ul style="list-style-type: none"> • The connecting rod bearings.

		<ul style="list-style-type: none"> • The connecting rods. • The crankshaft pin journals.
	Excessive crankshaft bearing clearance.	<p>Inspect the following components, and repair as required.</p> <ul style="list-style-type: none"> • The crankshaft bearings. • The crankshaft main journals. • The cylinder block.
	Incorrect piston, piston pin and connecting rod installation	<ul style="list-style-type: none"> • Verify the piston pins and connecting rods are installed correctly. • Repair as required.
Engine noise under load.	Low oil pressure	Repair or replace as required.
	Excessive connecting rod bearing clearance .	<p>Inspect the following components and repair as required :</p> <ul style="list-style-type: none"> • The connecting rod bearings. • The connecting rods. • The crankshaft.
	Excessive crankshaft bearing clearance.	<p>Inspect the following components, and repair as required.</p> <ul style="list-style-type: none"> • The crankshaft bearings. • The crankshaft main journals. • The cylinder block.
Engine will not crank- crankshaft will not rotate.	<p>Hydraulically locked cylinder.</p> <ul style="list-style-type: none"> • Coolant/antifreeze in cylinder. • Oil in cylinder. • Fuel in cylinder. 	<ol style="list-style-type: none"> 1. Remove spark plugs and check for fluid. 2. Inspect for broken head gasket. 3. Inspect for cracked engine block or cylinder head. 4. Inspect for a sticking fuel injector and/or leaking fuel regulator.
	Broken timing chain and/or timing chain and/or timing chain gears.	<ol style="list-style-type: none"> 1. Inspect timing chain and gears. 2. Repair as required.
	<p>Material in cylinder.</p> <ul style="list-style-type: none"> • Broken valve • Piston material • Foreign material 	<ol style="list-style-type: none"> 1. Inspect cylinder for damaged components and/or foreign materials. 2. Repair or replace as required.
	Seized crankshaft or connecting rod bearings.	<ol style="list-style-type: none"> 1. Inspect crankshaft and connecting rod bearing. 2. Repair as required.
	Bent or broken connecting rod.	<ol style="list-style-type: none"> 1. Inspect connecting rods. 2. Repair as required.
	Broken crankshaft.	<ol style="list-style-type: none"> 1. Inspect crankshaft. 2. Repair as required.


Engine Mechanical System > General Information > Special Service Tools
Special Service Tools

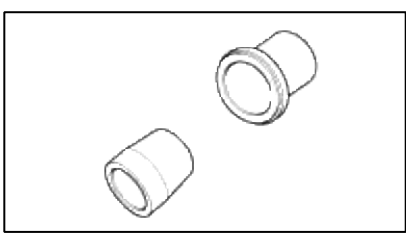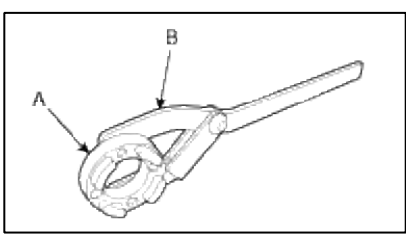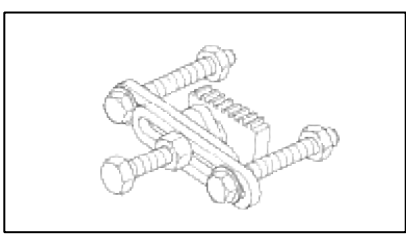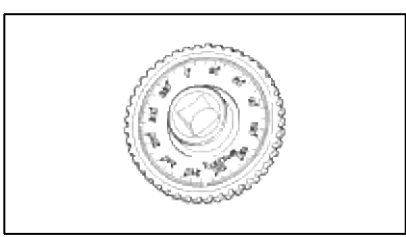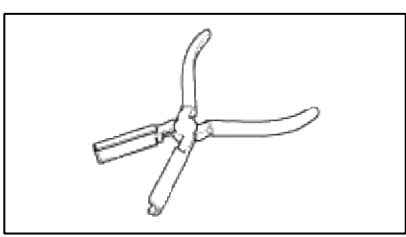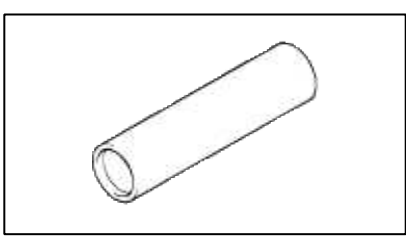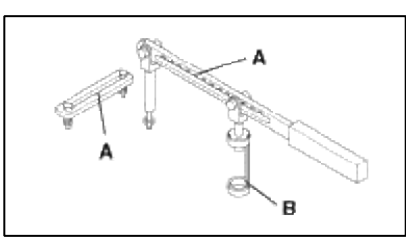Tool (Number and name)	Illustration	Use
Crankshaft front oil seal installer (09231-3C100)		Installation of the front oil seal
Crankshaft pulley adapter holder (09231-2J210) Crankshaft pulley adapter (09231-2J200)		Removal and installation of the crankshaft pulley. (In vehicle use) A : 09231-2J200 B : 09231-2J210 (Holder)
Ring gear stopper (09231-2B100)		Removal and installation of the flywheel and crankshaft pulley (Engine disassembly)
Torque angle adapter (09221-4A000)		Installation of bolts & nuts needing an angular method
Valve stem seal remover (09222-29000)		Removal of the valve stem seal
Valve stem seal installer (09222-3C100)		Installation of the valve stem seal
Valve spring compressor & holder (09222-3K000) (09222-3K100)		Removal and installation of the intake or exhaust valves A : 09222-3K000 B : 09222-3K100 (holder)
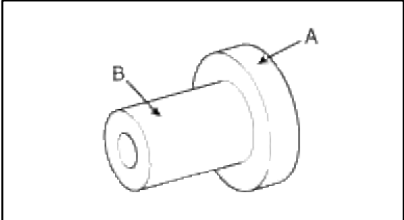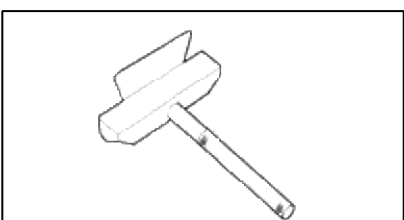
<p>Crankshaft rear oil seal installer (09231-3C200) (09231-H1100)</p>		<p>Installation of the crankshaft rear oil seal A : 09231-3C200 B : 09231-H1100</p>
<p>Oil pan remover (09215-3C000)</p>		<p>Removal of oil pan</p>

Engine Mechanical System > Engine And Transmission Assembly > Engine Mounting > Components and Components Location

Components

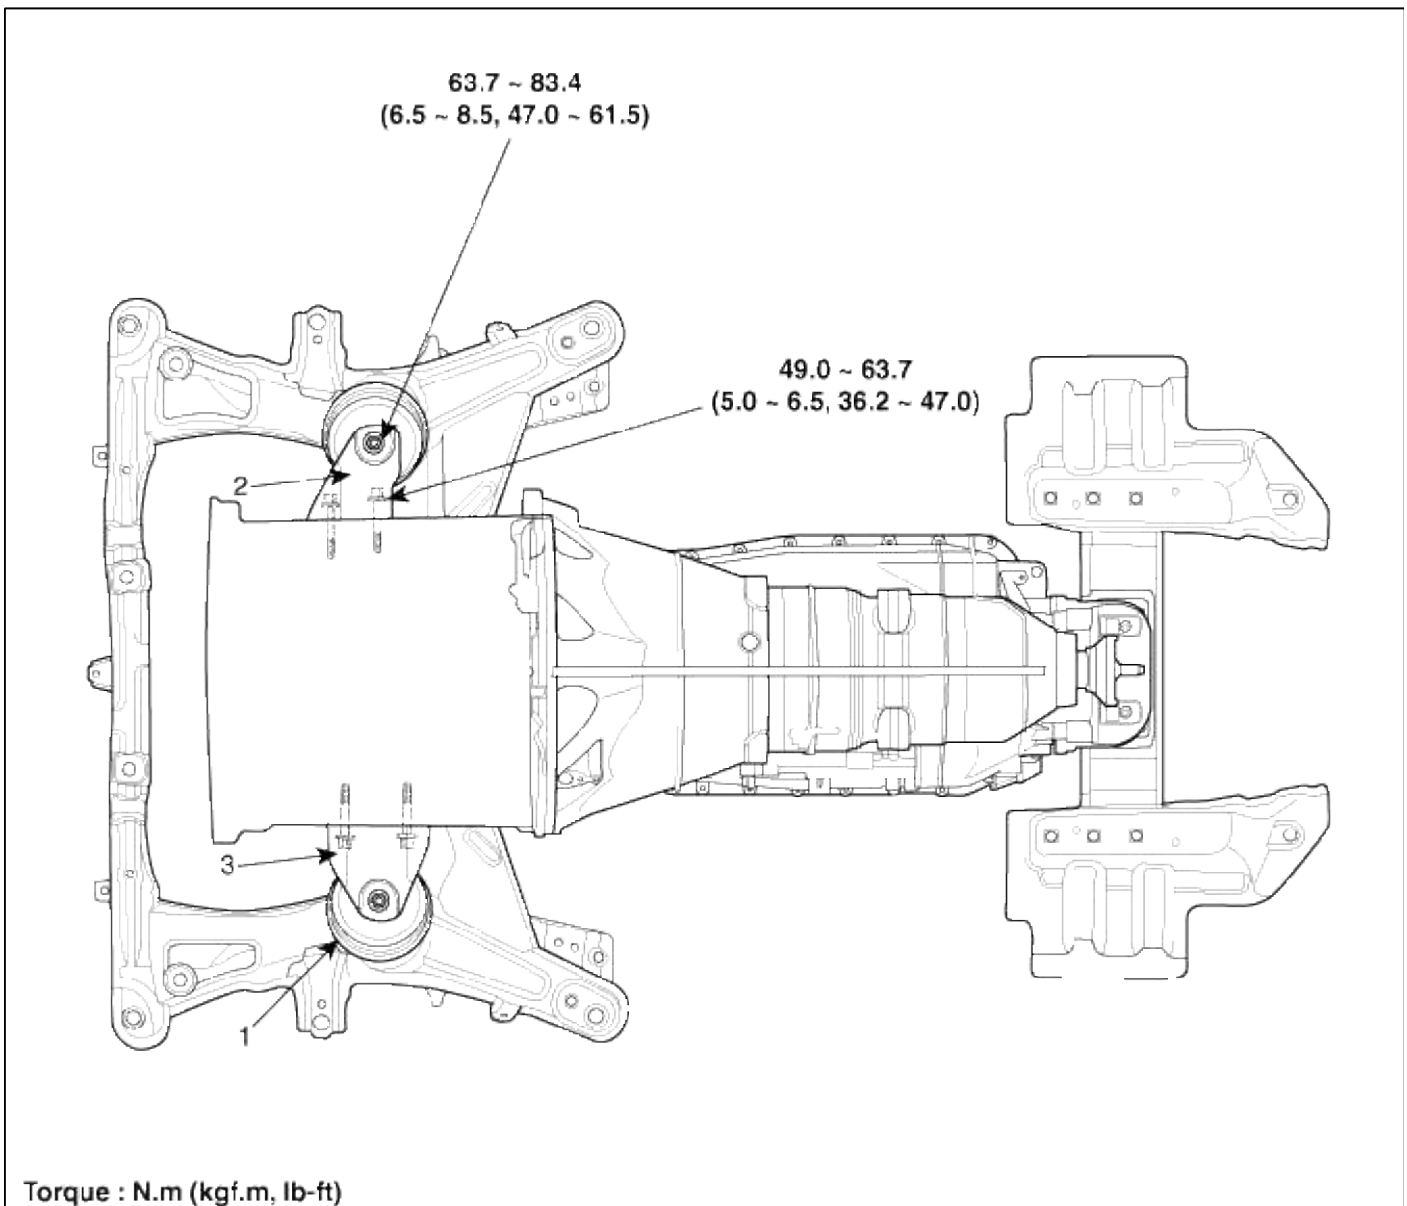

- | | |
|------------------------------|------------------------------|
| 1. Engine mounting insulator | 3. Engine support bracket LH |
| 2. Engine support bracket RH | |

Engine Mechanical System > Engine And Transmission Assembly > Engine And Transmission Assembly > Repair procedures

Removal

CAUTION

- Use fender covers to avoid damaging painted surfaces.
- To avoid damage, unplug the wiring connectors carefully while holding the connector portion.


NOTE

- Mark all wiring and hoses to avoid misconnection.
- For release the fuel system pressure before remove the engine assembly, start the engine without fuel pump relay. And then turn off the ignition switch after engine stops.


1. Remove the transmission before removing the engine. (Refer to Manual/Automatic Transmission System)
2. Disconnect the battery negative cable (A).

Tightening torque :

7.8 ~ 9.8N.m (0.8 ~ 1.0kgf.m, 5.8 ~ 7.2lb-ft)

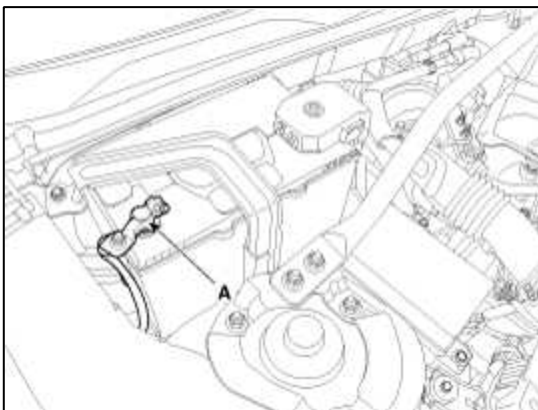

3. Remove the engine cover (A).
4. Remove the strut bar (B).

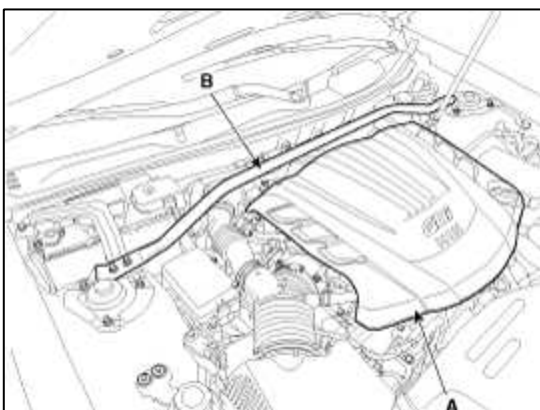

5. Loosen the drain plug and drain the engine coolant.

WARNING

Never remove the radiator cap when the engine is hot. Serious scalding could be caused by hot fluid under high pressure escaping from the radiator.

6. After recovering refrigerant, remove the high & low pressure pipe. (Refer to Heating, Ventilation, Air Conditioning - "Compressor")

7. Remove the intake air hose and air cleaner assembly.

- (1) Remove the air duct (A).
- (2) Disconnect the Barometric Pressure Sensor(BPS) connector (B).
- (3) Disconnect the breather hose (C).
- (4) Disconnect the vacuum hose (D).
- (5) Remove the intake air hose (E) and air cleaner assembly (F).


Tightening torque

Hose clamp bolt :

2.9 ~ 4.9 N.m (0.3 ~ 0.5 kgf.m, 2.2 ~ 3.6 lb-ft)

Air cleaner assembly bolts :

7.8 ~ 9.8 N.m (0.8 ~ 1.0 kgf.m, 5.8 ~ 7.2 lb-ft)

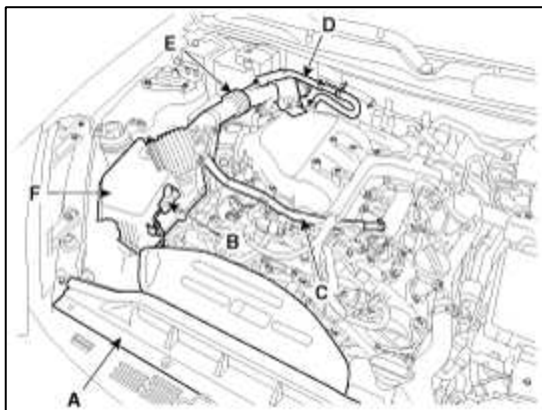


8. Remove the front wheels.



9. Remove the under covers. (A)

Tightening torque :

7.8 ~ 11.8N.m (0.8 ~ 1.2kgf.m, 5.8 ~ 8.7lb-ft)

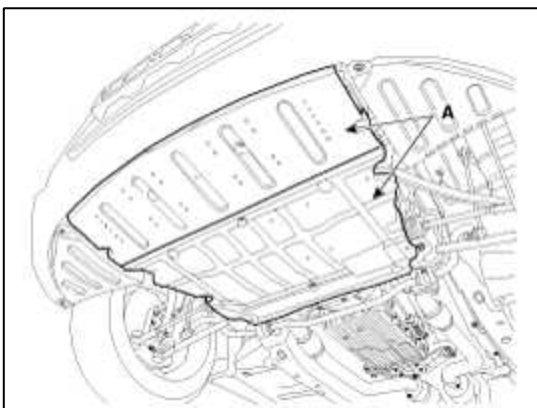


10. Remove the radiator upper hose (A) and lower hose (B).

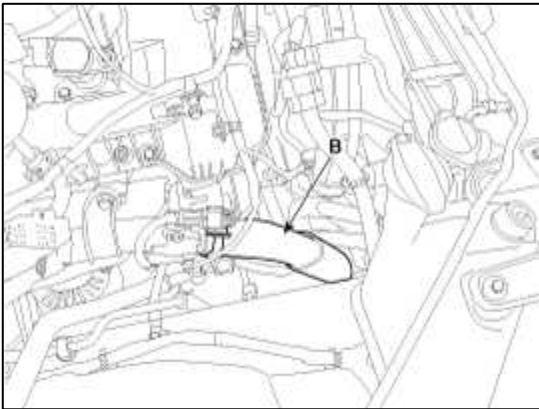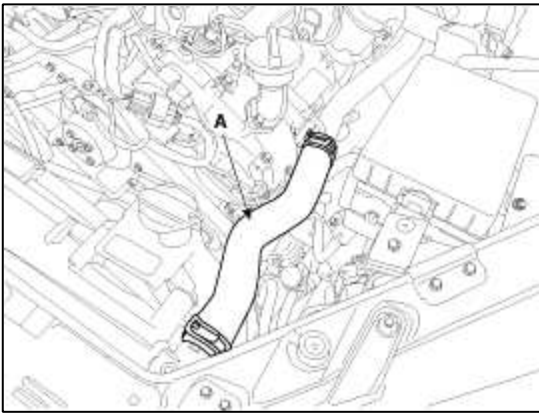

11. Disconnect the ATF cooler hoses. (Refer to Automatic Transaxle System - "Automatic Transaxle System ")

12. Disconnect the heater hoses (A).

13. Disconnect the PCSV hose (B).

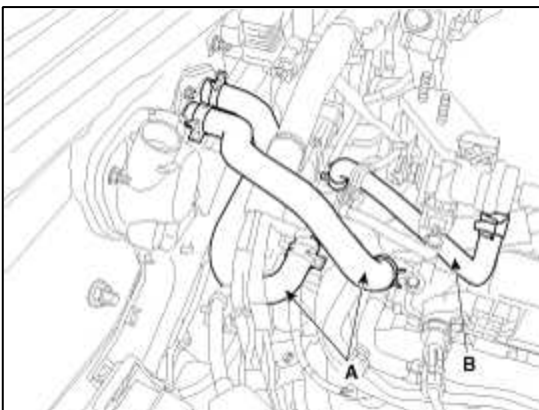


14. Disconnect the ECM connector (A), TCM connector (B), IDB connector (C), brake fluid level switch connector (D) and the ground (E).


Tightening torque

Ground (E) :

10.8 ~ 13.7 N.m (1.1 ~ 1.4 kgf.m, 7.9 ~ 10.1 lb-ft)

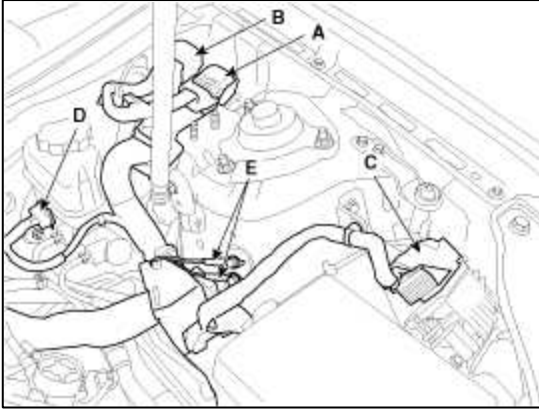


15. Disconnect the wiring (A) from the fuse box.

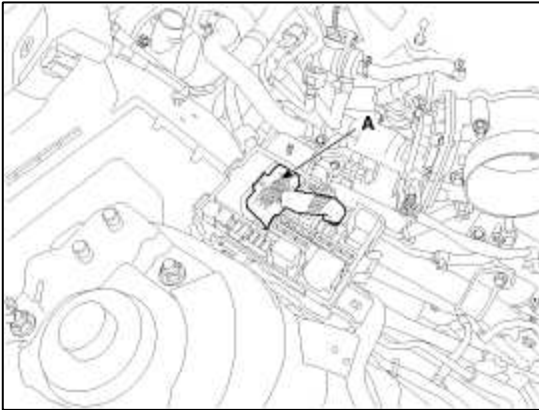

16. Disconnect the fuel hose (A). (Refer to Fuel System - "High Pressure Fuel Pump")


17. Disconnect the brake booster vacuum hose (B).

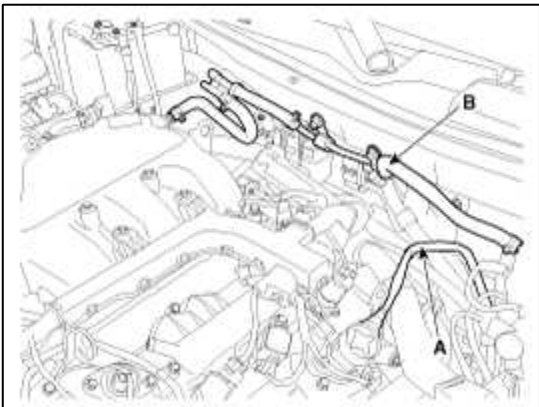

18. Disconnect the engine ground line (A).

Tightening torque :

10.8 ~ 13.7N.m (1.1 ~ 1.4kgf.m, 8.0 ~ 10.1lb-ft)

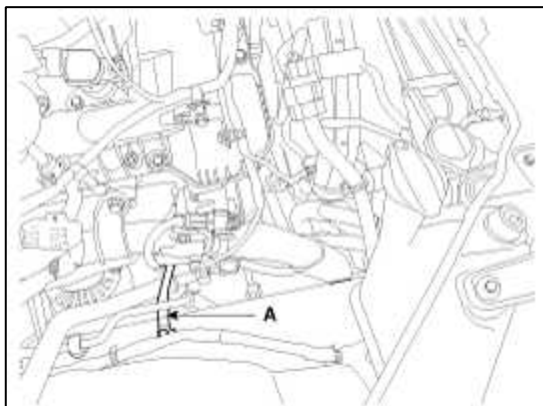

19. Remove the cooling fan. (Refer to Cooling System in this group)

20. Remove the oil hose fro the power steering pump. (Refer to Steering System - "Power Steering Oil pump")

21. Disconnect the steering gear box. (Refer to Steering System - "Power Steering Gear Box")


22. Remove the engine mounting bracket nut.

Tightening torque :

66.7 ~ 83.4N.m (6.8 ~ 8.5kgf.m, 49.2 ~ 61.5lb-ft)

23. Remove the hood. (Refer to Body - "Hood")

24. Remove the engine assembly by lifting the engine jack.

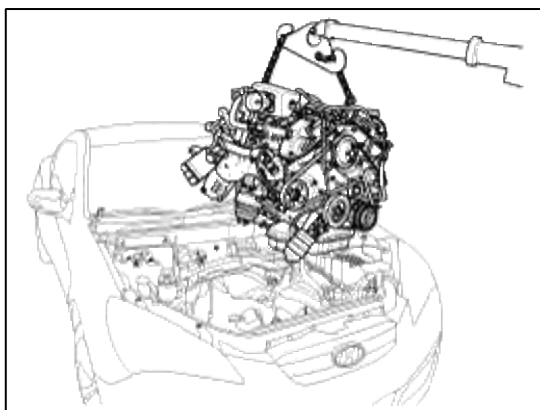

CAUTION

When removing the engine and transmission assembly, be careful not to damage any surrounding parts or body components.

Installation

Installation is in the reverse order of removal.


Perform the following :

- Adjust a shift cable.
- Refill engine with engine oil.
- Refill a transmission with fluid.
- Clean battery posts and cable terminals with sandpaper. Reassemble, then apply grease to prevent corrosion.
- Inspect for fuel leakage.


- After assembling the fuel line, turn on the ignition switch (do not operate the starter) so that the fuel pump runs for approximately two seconds and fuel line pressurizes.
- Repeat this operation two or three times, then check for fuel leakage at any point in the fuel line.
- Refill a radiator and a reservoir tank with engine coolant.
- Bleed air from the cooling system.
- Start engine and let it run until it warms up. (until the radiator fan operates 3 or 4 times.)
- Turn Off the engine. Check the level in the radiator, add coolant if needed. This will allow trapped air to be removed from the cooling system.
- Put radiator cap on tightly, then run the engine again and check for leaks.

Engine Mechanical System > Timing System > Timing Chain > Components and Components Location

Components

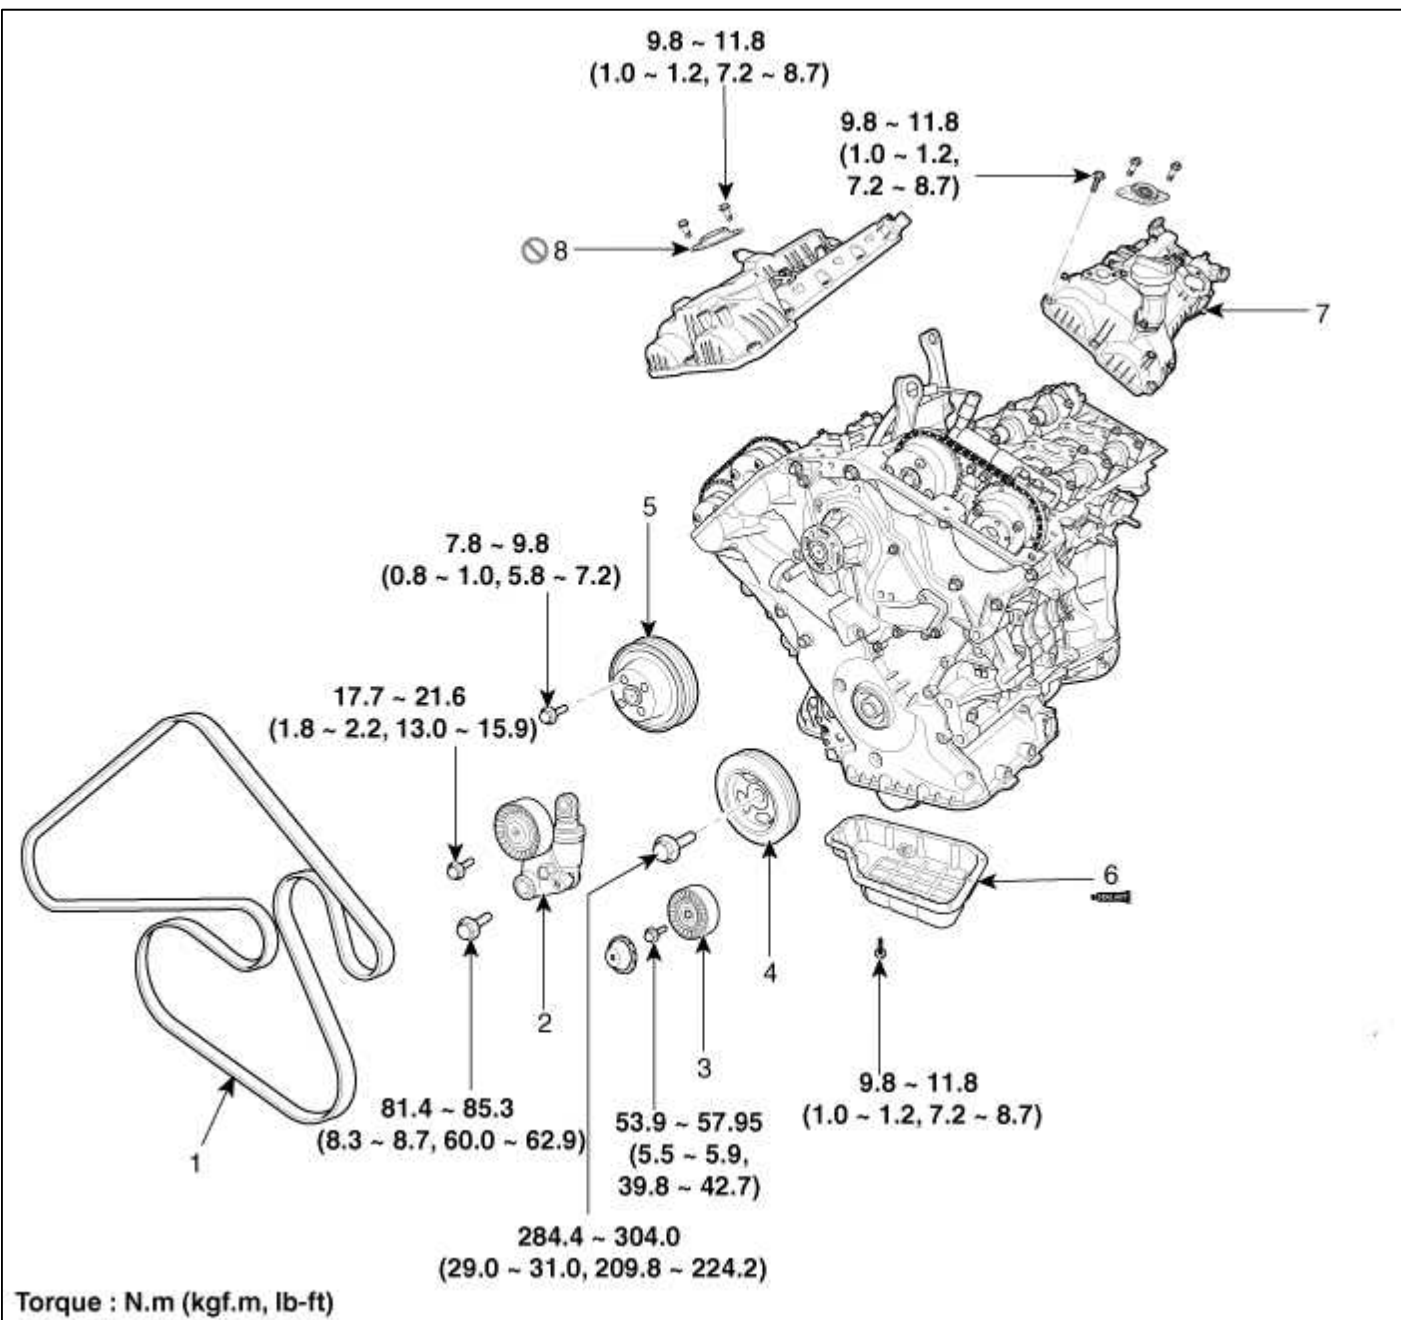

- | | |
|-------------------------|---|
| 1. Drive belt | 5. Water pump pulley |
| 2. Drive belt tensioner | 6. Oil pan |
| 3. Idler | 7. Cylinder head cover |
| 4. Crank shaft pulley | 8. Exhaust camshaft oil control valve (OCV) cap |

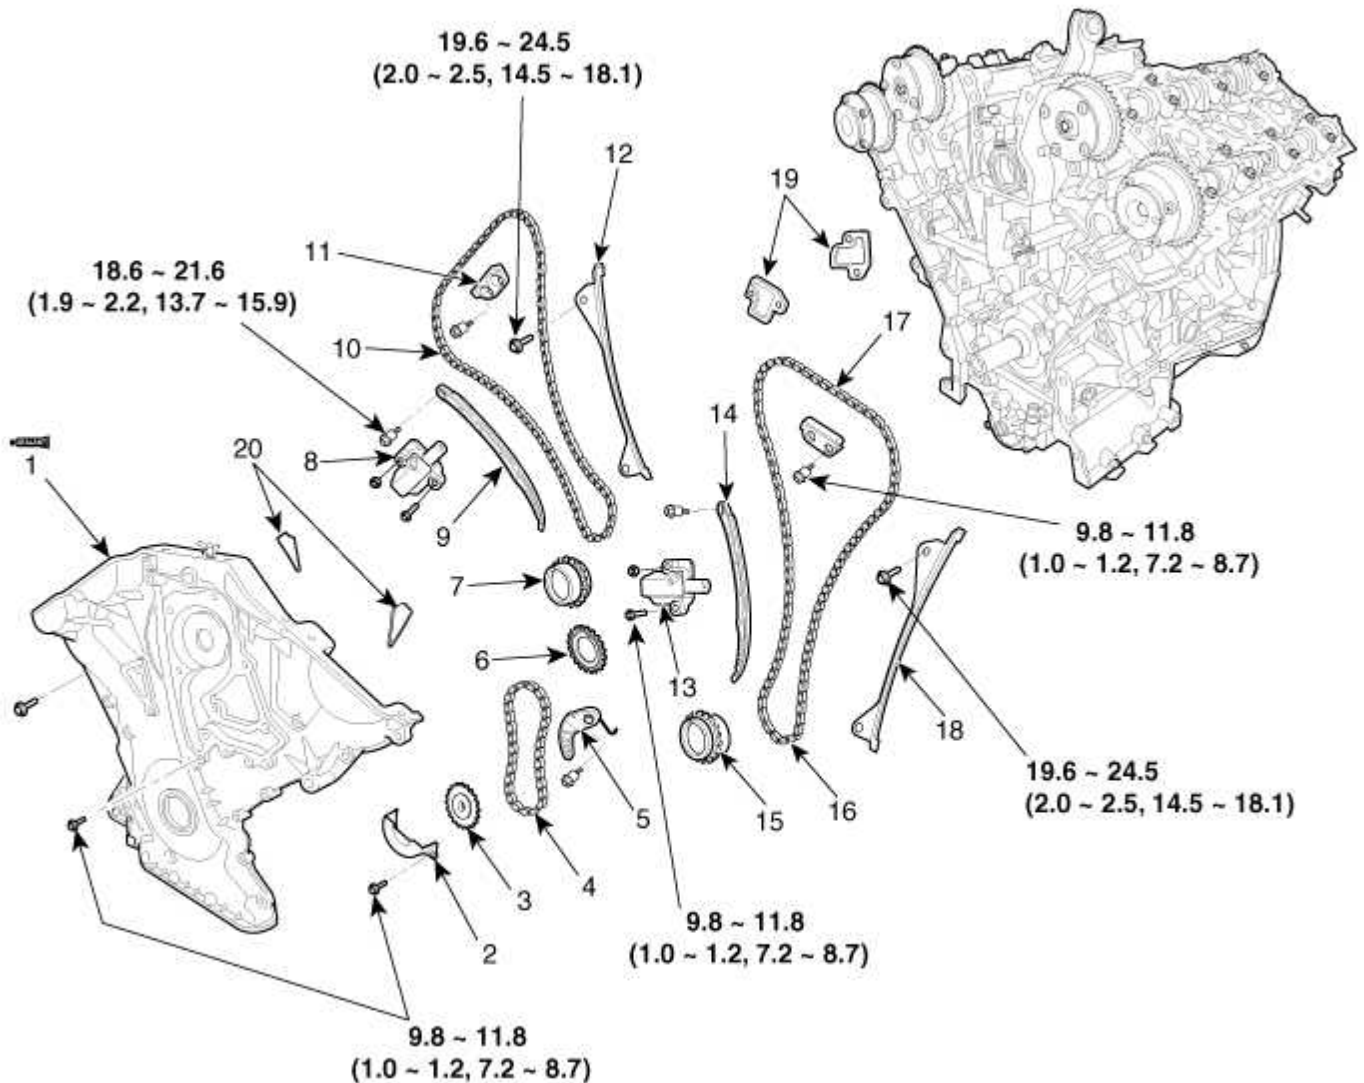

Torque : N.m (kgf.m, lb-ft)

- | | | |
|---------------------------------|------------------------------------|----------------------------------|
| 1. Timing chain cover | 8. RH Timing chain auto tensioner | 15. Crankshaft LH chain sprocket |
| 2. Oil pump chain cover | 9. RH Timing chain tensioner arm | 16. LH Timing chain |
| 3. Oil pump sprocket | 10. RH Timing chain | 17. LH cam to cam guide |
| 4. Oil pump chain | 11. RH cam to cam guide | 18. LH Timing chain guide |
| 5. Oil pump tensioner assembly | 12. RH Timing chain guide | 19. Tensioner adapter |
| 6. Crankshaft oil pump sprocket | 13. LH Timing chain auto tensioner | 20. Gasket |
| 7. Crankshaft RH chain sprocket | 14. LH Timing chain tensioner arm | |

Removal



CAUTION

- Use fender covers to avoid damaging painted surfaces.
- To avoid damage, unplug the wiring connectors carefully while holding the connector portion.


NOTE

- Mark all wiring and hoses to avoid misconnection.
- Turn the crankshaft pulley so that the No.1 piston is at top dead center.

1. Disconnect the battery negative cable.
2. Loosen the drain plug and drain the engine coolant.
3. Remove the intake air hose and air cleaner assembly. (Refer to Intake And Exhaust System in this group)
4. Remove the radiator upper hose (A) and lower hose (B).

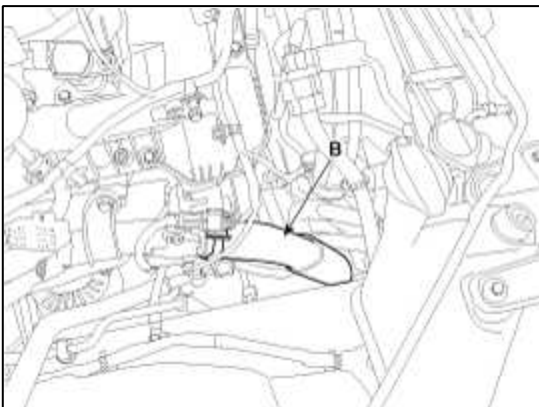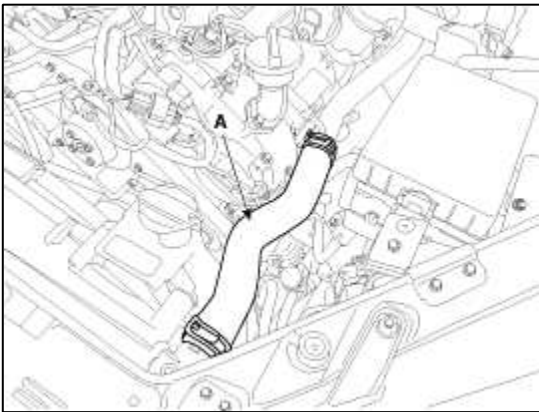


5. Disconnect the fuel hose (A). (Refer to FL group - "High Pressure Fuel Pump")
6. Disconnect the brake booster vacuum hose (B).

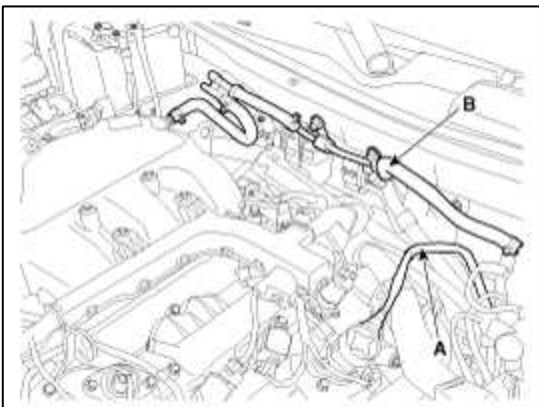


7. Remove the cooling fan. (Refer to Cooling System in this group)
8. Disconnect the engine wiring harness connectors and hoses.
 - (1) RH knock sensor connector (A)

(2) Power steering switch connector (B)

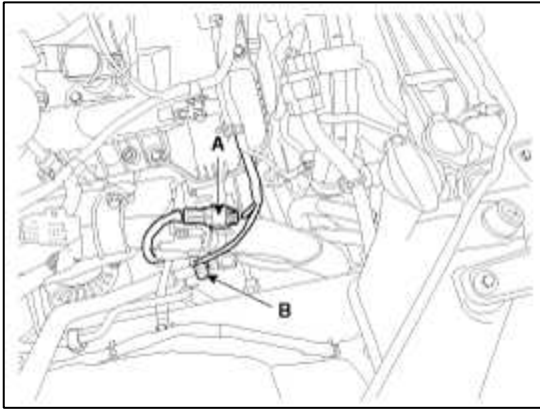

(3) PCSV connector (A)

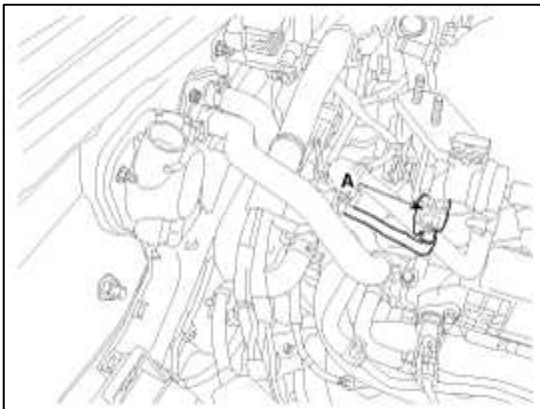


(4) ETC connector (A)

(5) MAP sensor connector (B)

(6) RH exhaust camshaft oil control valve (OCV) connector (C)

(7) RH ignition connector (D)

(8) RH injector connector (E)

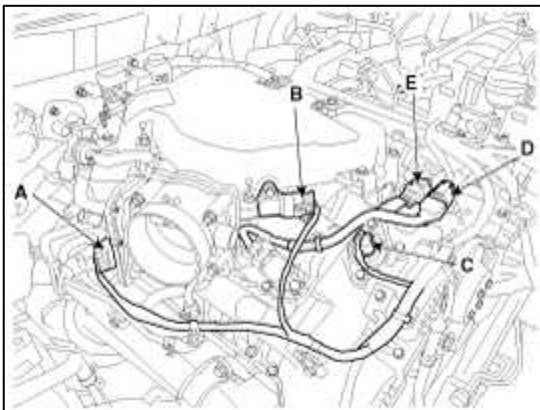

(9) LH exhaust camshaft oil control valve (OCV) connector (A)


(10) Oil pressure connector (B)

(11) LH injector connector (C)

(12) LH/RH intake camshaft oil control valve connector (D)


(13) Ignition coil condenser connector (E)

(14) Ground line (F)

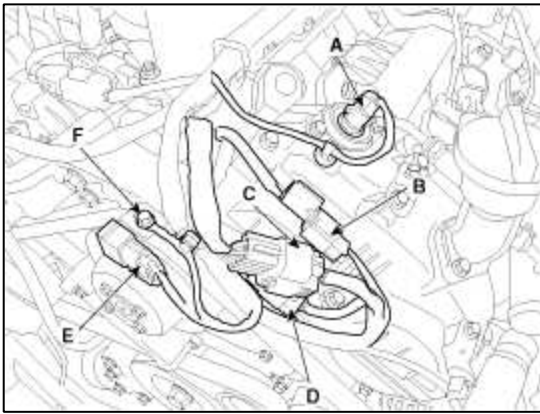

(15) LH ignition coil connector (A)

(16) Fuel pressure control valve (B)

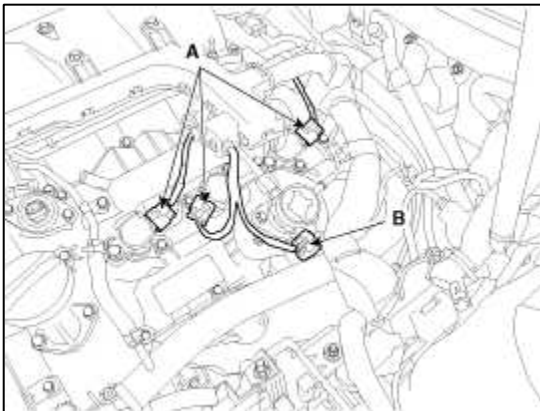


(17) LH intake camshaft position sensor (CMPS) connector (A)

(18) LH exhaust camshaft position sensor (CMPS) connector (B)

(19) LH front oxygen sensor connector (C)

(20) Crankshaft position sensor connector

(21) LH knock sensor connector

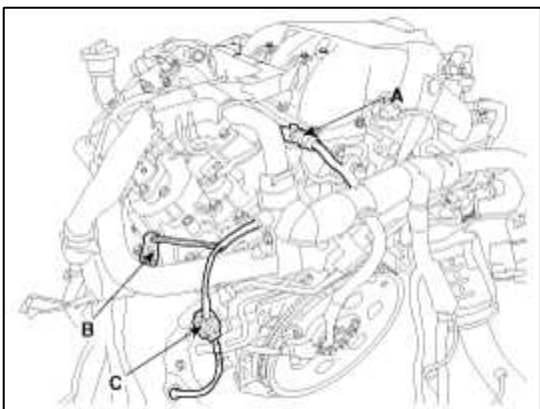

(22) Water temperature sensor connector (A)


(23) RH intake camshaft position sensor (CMPS) connector (B)

(24) RH exhaust camshaft position sensor (CMPS) connector (C)

(25) Oil temperature sensor connector (D)


(26) RH front oxygen sensor connector (E)

(27) Ignition coil condenser connector (F)

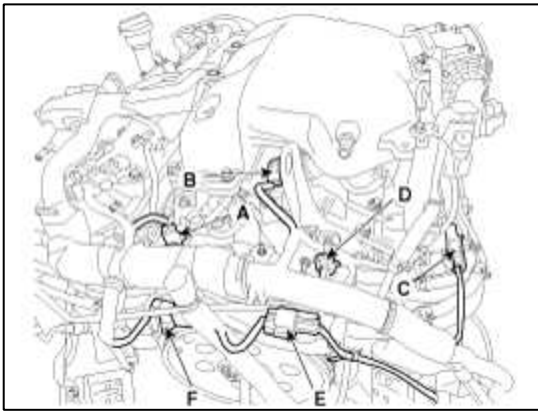


(28) PCSV hose (A), PCV hose (B)


(29) Throttle body water hose (C)

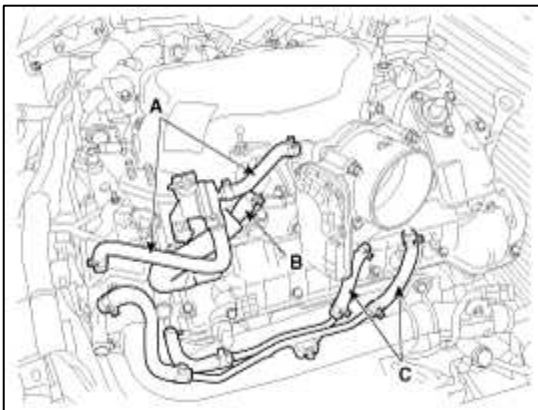


9. Remove the surge tank assembly (A).

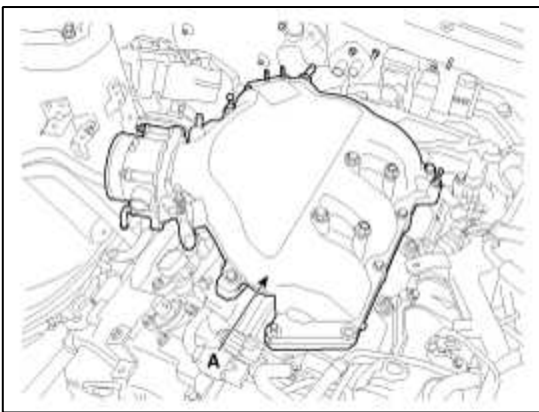

10. Remove the breather pipe & hose (A).

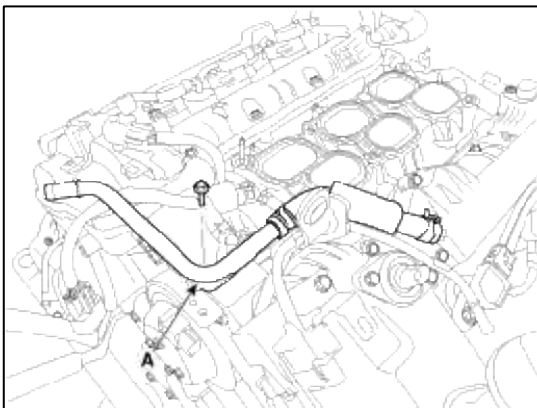

11. Disconnect the water hose & pipe (A) and then remove the intake manifold (B).

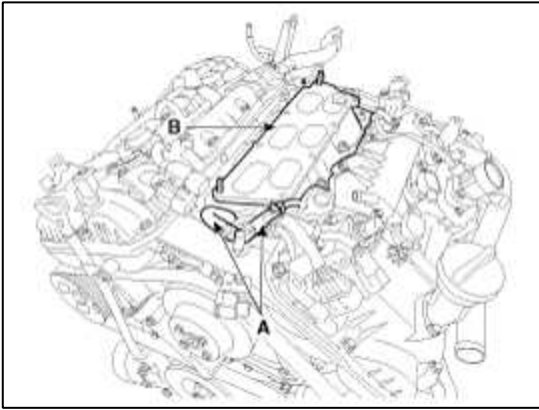


CAUTION

- Be sure to drain the engine coolant before removing the intake manifold.
- If any coolant drained from the cylinder head vent hole has entered the intake port. This can potentially lead to engine trouble.


12. Remove the high pressure fuel pipe. (Refer to FL group - "High Pressure Fuel Pump")

13. Remove the RH ignition coils (A) and the wiring.

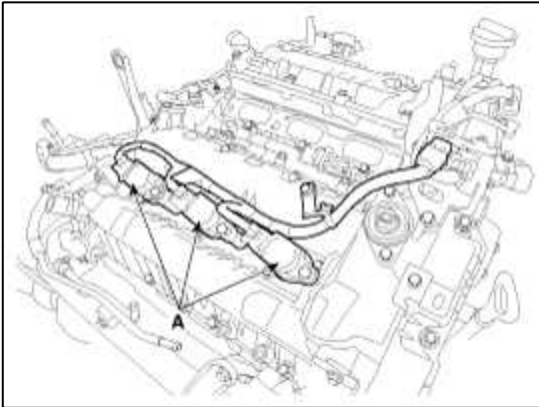


14. Remove the LH ignition coils (A) and the wiring.

15. Remove the fuel pump (B) and the roller tappet (C). (Refer to FL group - "High Pressure Fuel Pump")

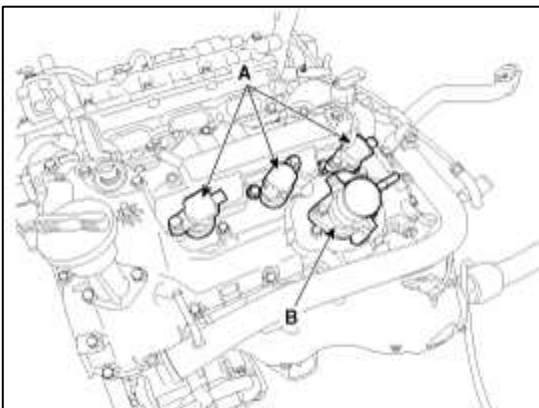


16. Remove the LH cylinder head cover (B) after remove the OCV cap (A).

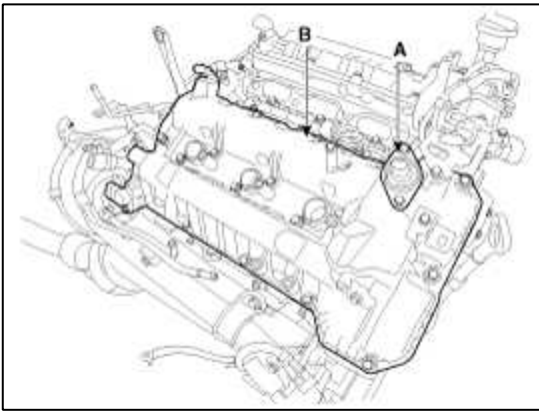

17. Disconnect the water outlet pipe (A).

18. Remove the RH cylinder head cover (C) after remove the OCV cap (B).

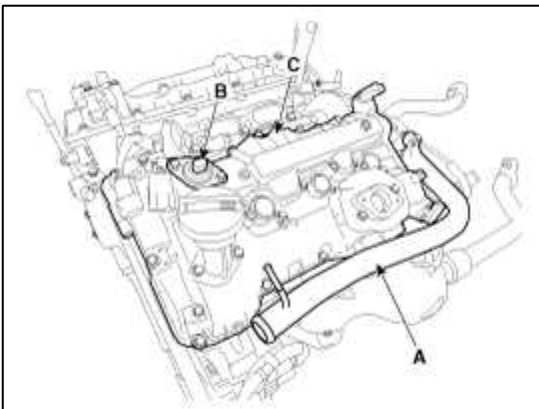


NOTE

Cover the cylinder head with a clean woven stuff or vinyl cover to prevent foreign materials from entering.

19. Drain the engine oil. (Refer to Lubrication system in this group)

20. Remove the lower oil pan (A).


Insert the blade of SST(09215-3C000) between the upper oil pan and lower oil pan. Cut off applied sealer and remove the lower oil pan.

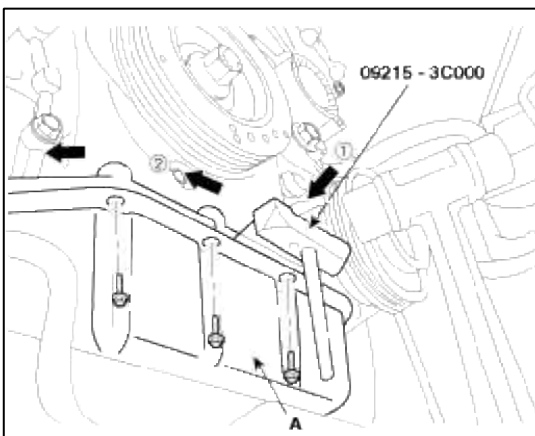


NOTE

- Insert the SST between the oil pan and the ladder frame by tapping it with a plastic hammer in the direction of arrow.
- After tapping the SST with a plastic hammer along the direction of arrow around more than 2/3 edge of the oil pan, remove it from the ladder frame.
- Do not turn over the SST abruptly without tapping. It be result in damage of the SST.
- Be careful not to damage the contact surfaces of Upper oil pan and lower oil pan.


21. Remove the drive belt (B) after removing the oil level gauge (A).

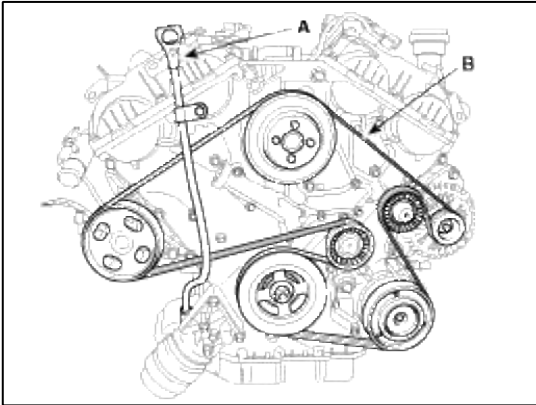


22. Remove the air conditioner compressor (A). (Refer to Heating, Ventilation, Air Conditioning - "Compressor")

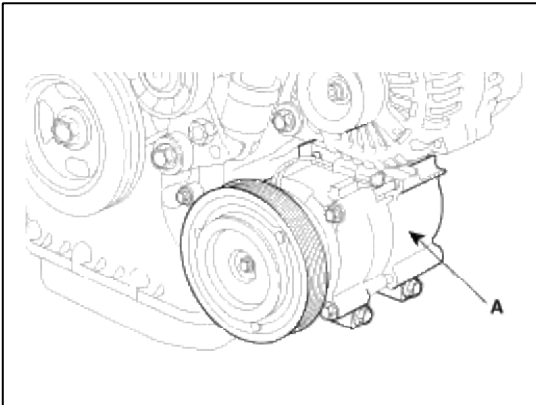


23. Remove the alternator (A). (Refer to Engine Electrical System - "Alternator")

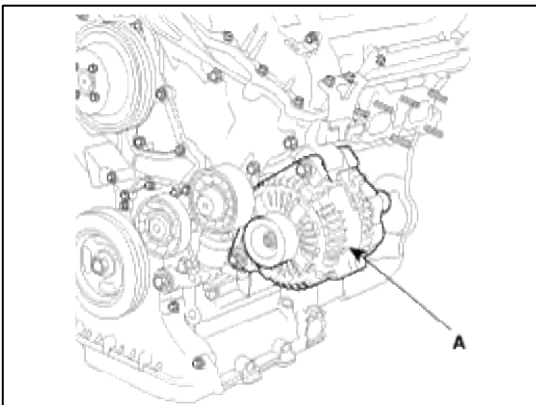


24. Remove the oil filter body (A).

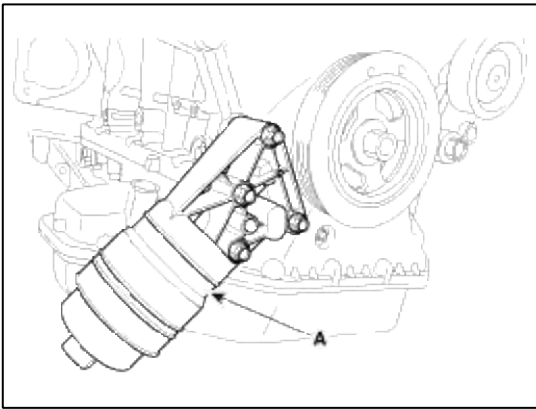


25. Remove the water pump pulley (A).

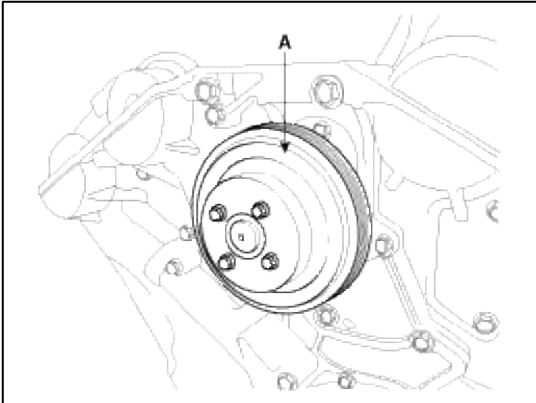

26. Remove the drive belt idler (A).

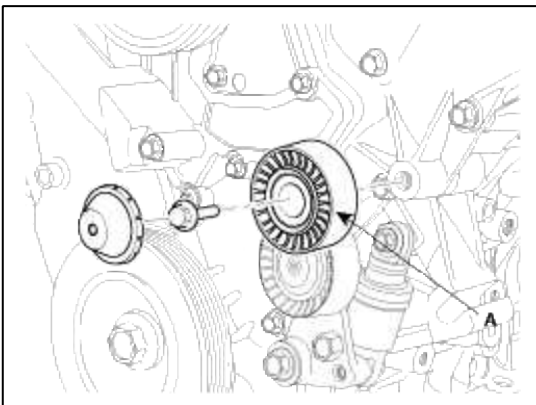


27. Remove the drive belt auto tensioner (A).

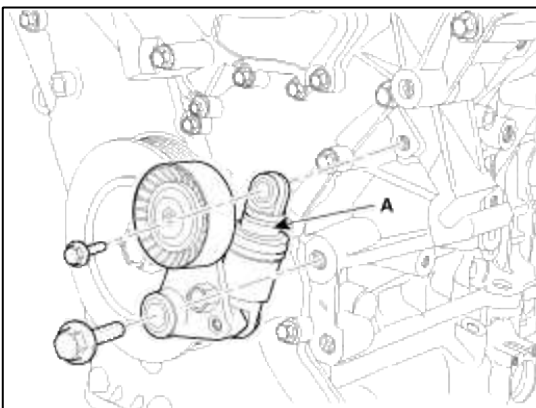


28. Set No.1 cylinder to TDC/compression.

- (1) Turn the crankshaft pulley clockwise and align its groove with the timing mark "T" of the lower timing chain cover.

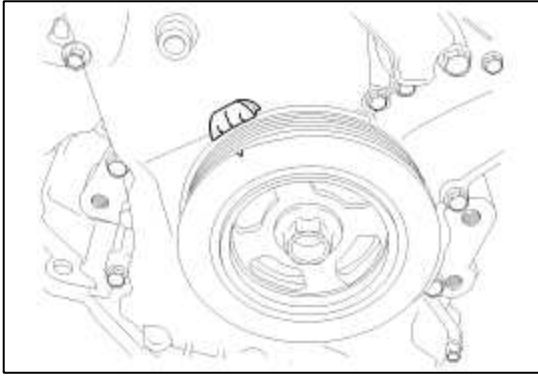


- (2) Check that the mark of the camshaft timing sprockets are in straight line on the cylinder head surface as shown in the illustration. If not, turn the crankshaft clockwise one revolution (360°).

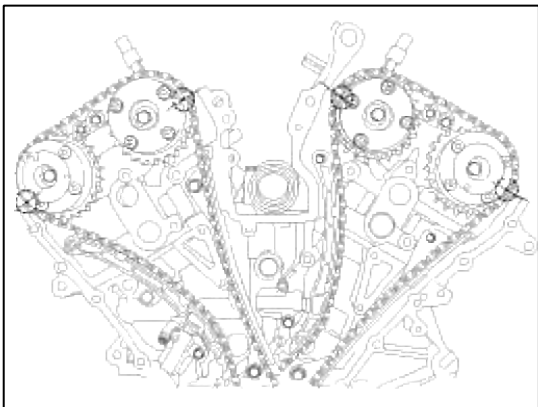

NOTE


Do not rotate engine counterclockwise.

29. Remove the crankshaft pulley (A).


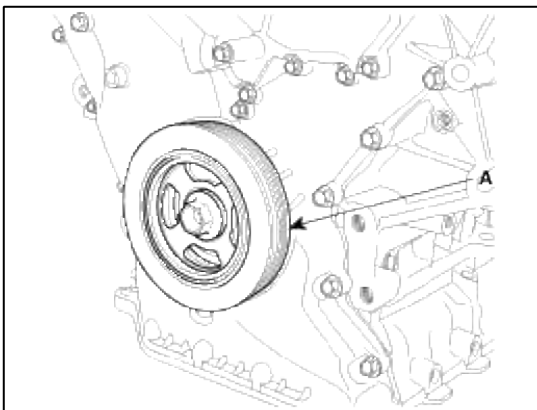


NOTE


Use the SST(09231-2J210, 09231-2J200) fix the crankshaft pulley.

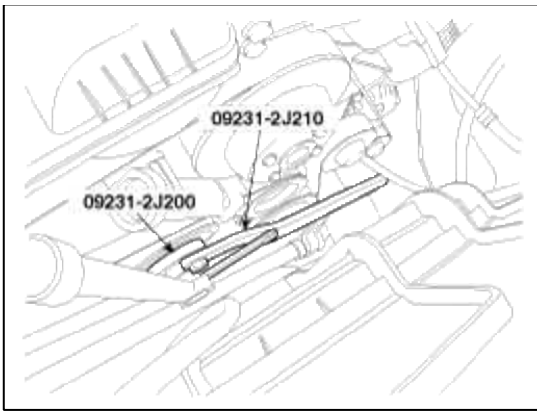

30. Remove the water pump (A) and the gaskets (B).

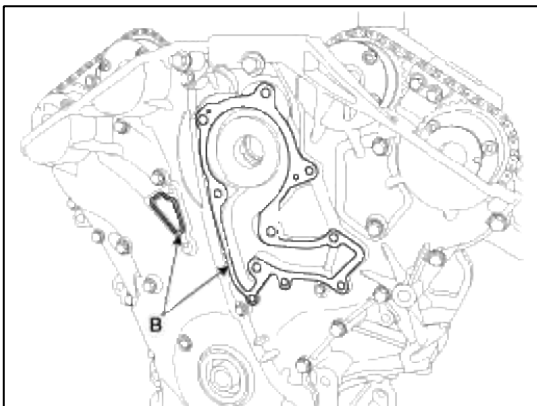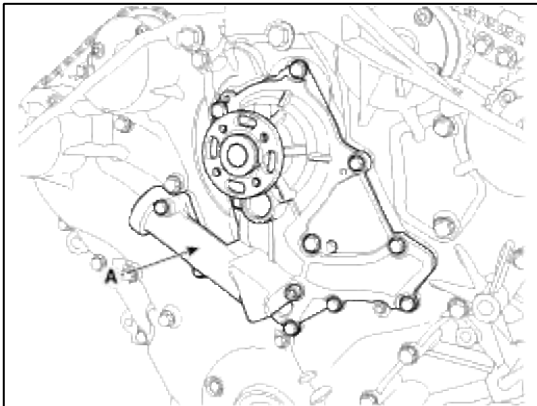




31. Remove the timing chain cover (A).

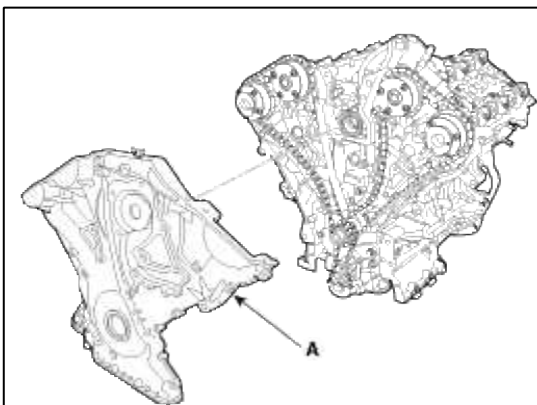


CAUTION
Be careful not to damage the contact surfaces of cylinder block, cylinder head and timing chain cover.

NOTE


Before removing the timing chain, mark the RH/LH timing chain with an identification based on the location of the sprocket because the identification mark on the chain for TDC (Top Dead Center) can be erased.

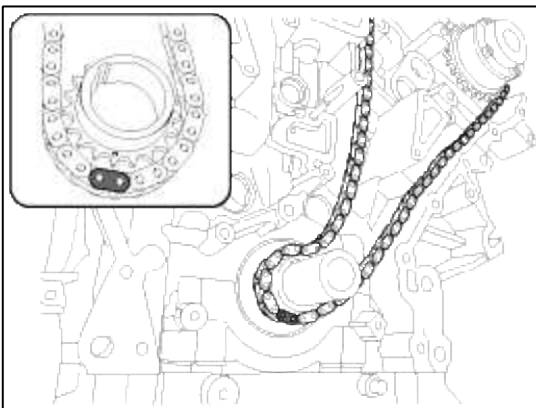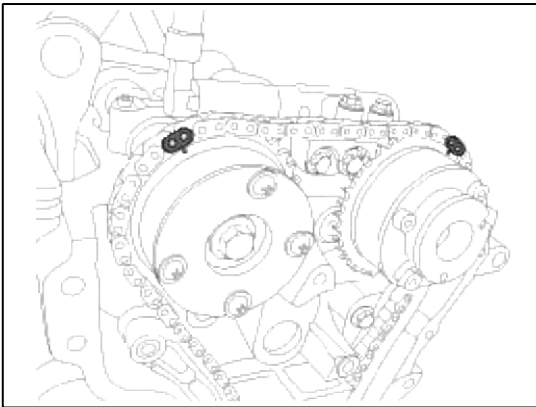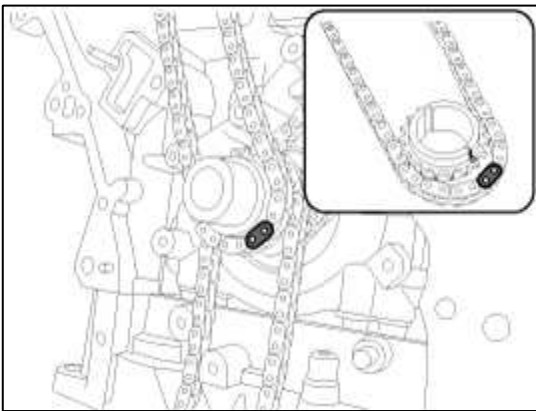

32. Remove the oil pump chain cover (A).

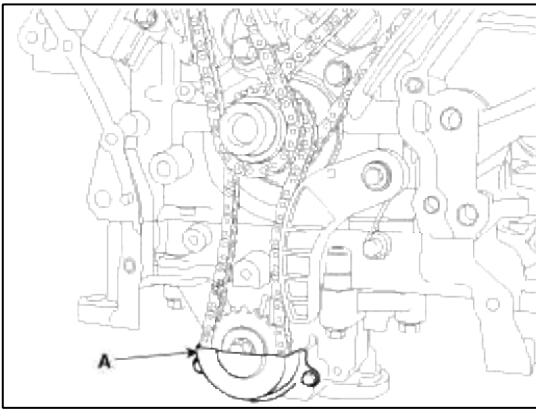


33. Remove the oil pump chain tensioner assembly (A).

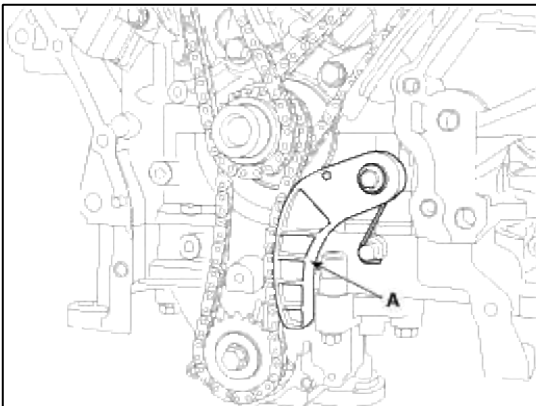


34. Release the ratchet using a thin rod.


Compress the piston and then insert a stopper pin into the hole on the ratchet to hold the compressed piston.

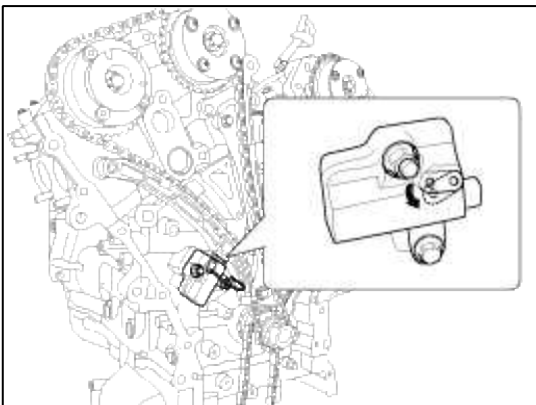


35. Remove the RH timing chain cam to cam guide (A).

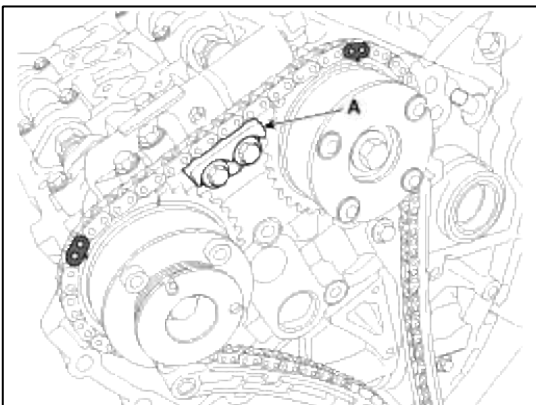


36. Remove the RH timing chain auto tensioner (A) and the RH timing chain tensioner arm (B).

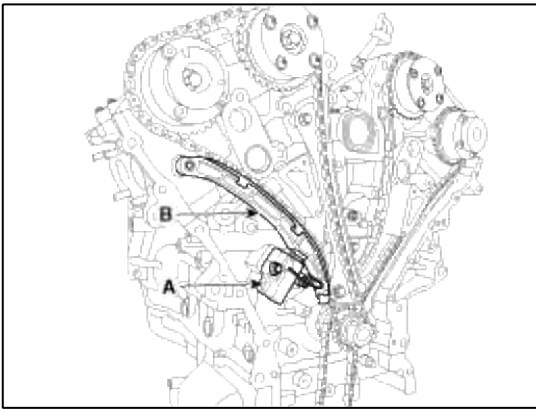


37. Remove the RH timing chain guide (A).

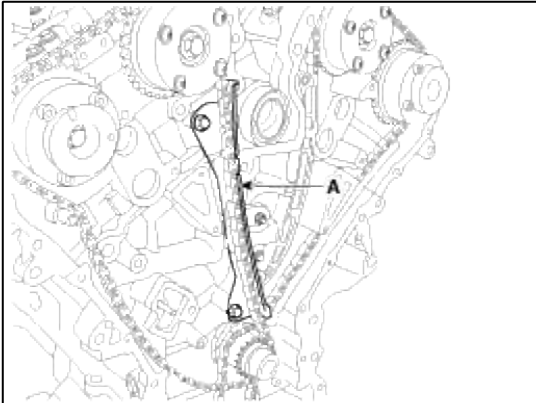


38. Remove the RH timing chain (A).

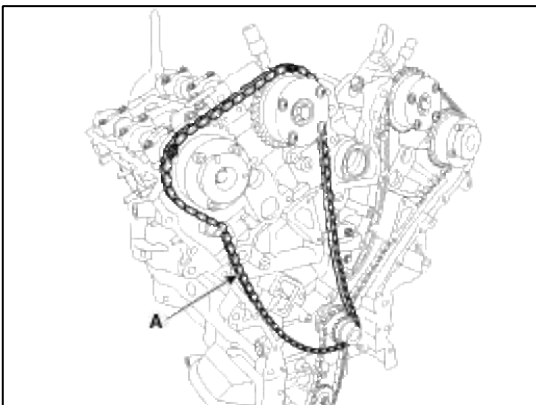

39. Remove the crankshaft RH timing chain sprocket (A).

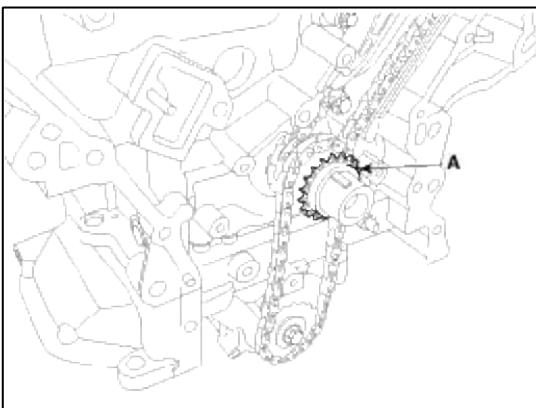

40. Remove the oil pump chain sprocket (A) and oil pump chain (B).

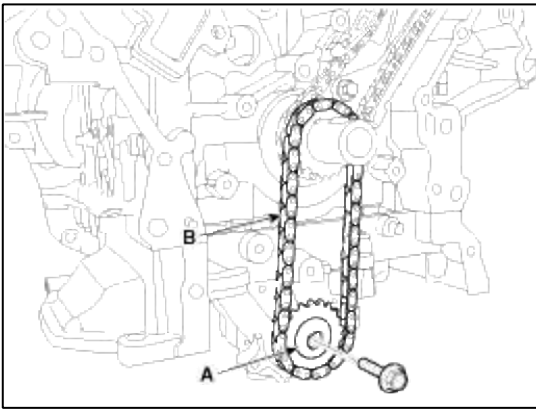


41. Remove the crankshaft oil pump chain sprocket (A).




42. Release the ratchet using a thin rod.


Compress the piston and then insert a stopper pin into the hole on the ratchet to hold the compressed piston.

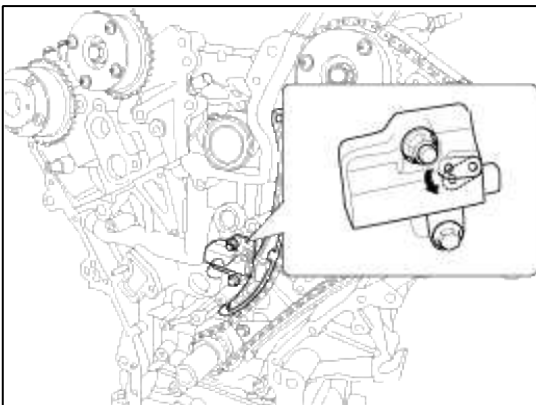


43. Remove the LH timing chain cam to cam guide (A).

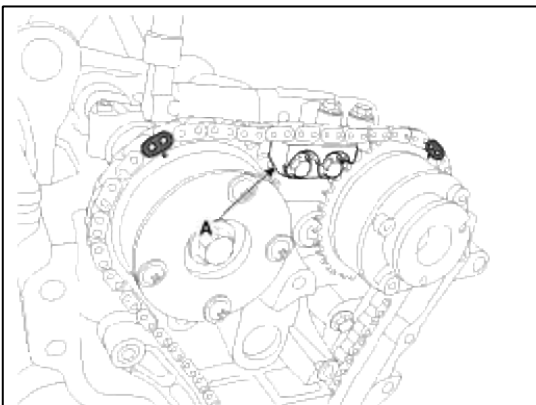


44. Remove the LH timing chain auto tensioner (A) and LH timing chain tensioner arm (B).

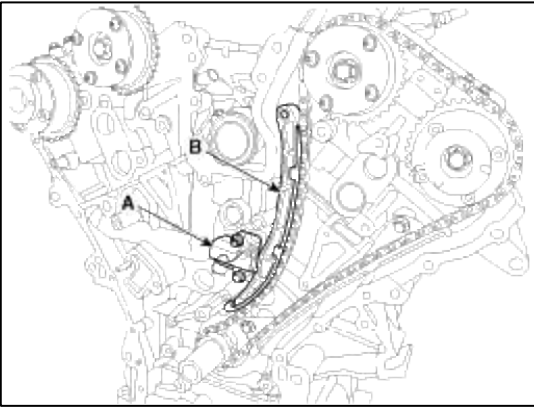


45. Remove the LH timing chain guide (A).

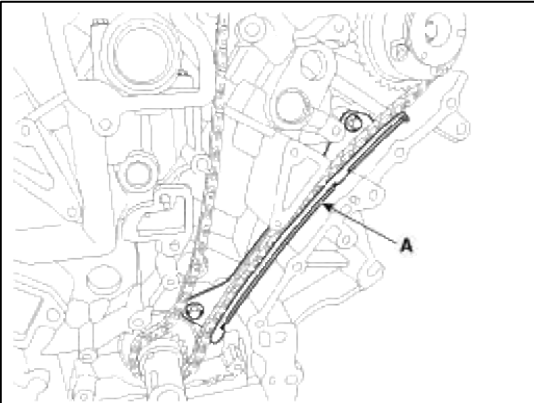


46. Remove the timing chain (A).

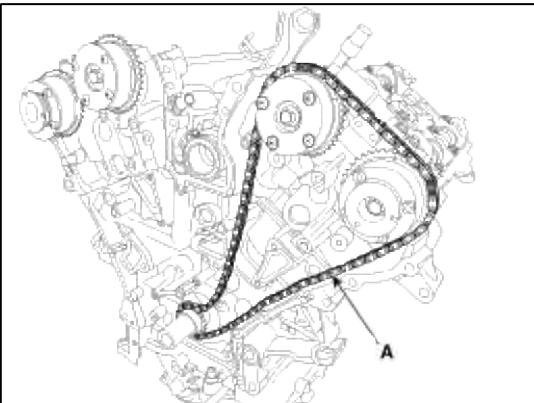

47. Remove the crankshaft LH timing chain sprocket (A).

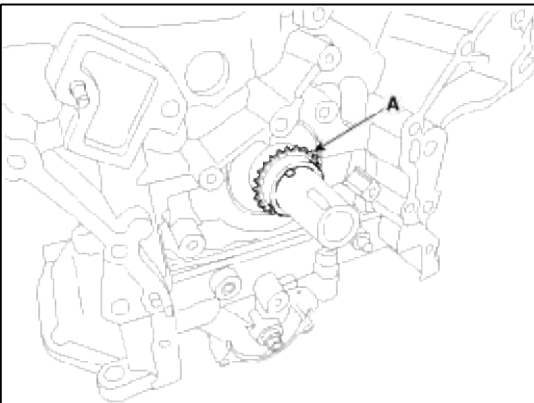

48. Remove the tensioner adapter assembly (A).

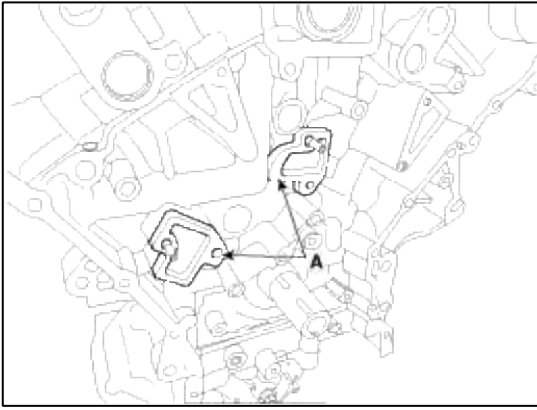


Inspection

Sprockets, Chain Tensioner, Chain Guide, Chain Tensioner Arm


1. Check the camshaft sprocket and crankshaft sprocket for abnormal wear, cracks, or damage. Replace as necessary.
2. Inspect the tensioner arm and chain guide for abnormal wear, cracks, or damage. Replace as necessary.
3. Check that the tensioner piston moves smoothly when the ratchet pawl is released with thin rod.

Installation


1. The key (A) of crankshaft should be aligned with the timing mark (B) of cylinder block. As a result of this, the piston of No.1 cylinder is placed at the top dead center on compression stroke.

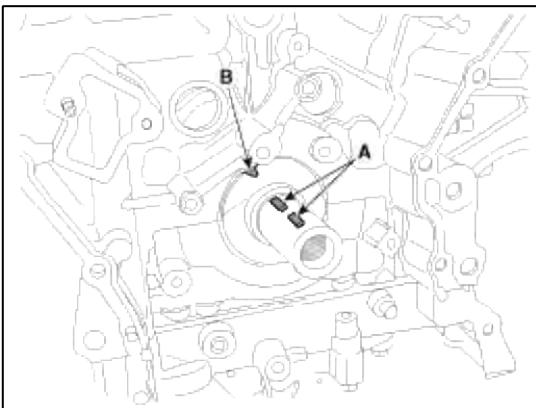



2. Install the tensioner adapter assembly (A).

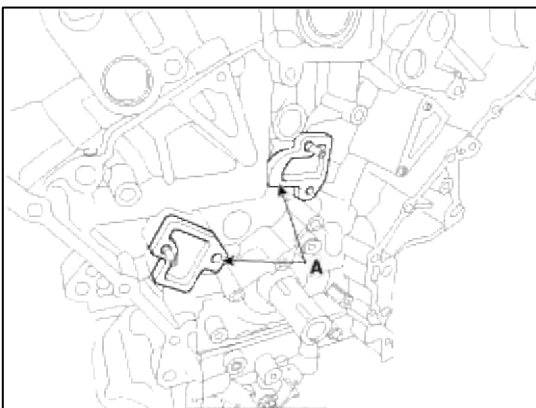

3. Install the crankshaft LH timing chain sprocket (A).

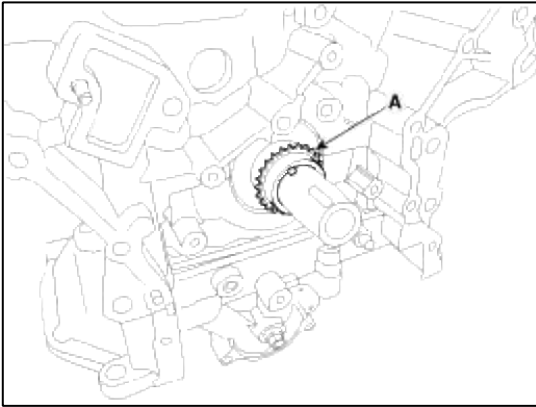

4. Install the LH timing chain (A).

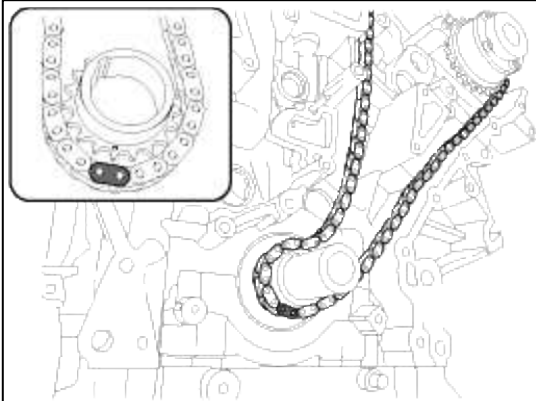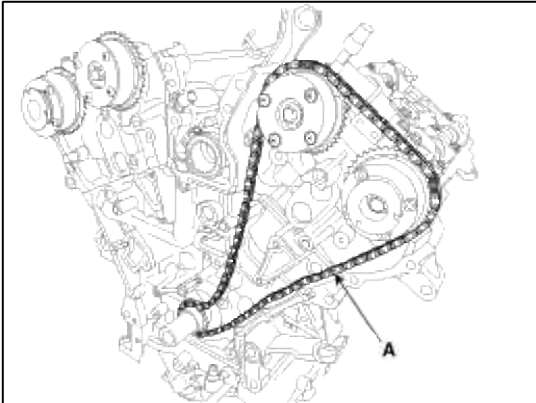


NOTE

To install the timing chain with no slack between each shaft (cam, crank), follow the below procedure.
Crankshaft sprocket → Timing chain guide → Exhaust camshaft sprocket → Intake camshaft sprocket.
The timing mark of each sprockets should be matched with timing mark (color link) of timing chain at installing timing chain.

5. Install the LH timing chain guide (A).

Tightening torque :

19.6 ~ 24.5N.m (2.0 ~ 2.5kgf.m, 14.5 ~ 18.1lb-ft)

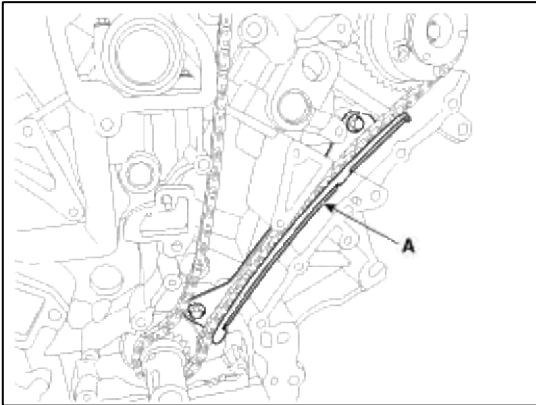


6. Install the LH timing chain tensioner arm (B) and LH timing chain auto tensioner (A).

Tightening torque

A : 9.8 ~ 11.8N.m (1.0 ~ 1.2kgf.m, 7.2 ~ 8.7lb-ft)


B : 18.6 ~ 21.6N.m (1.9 ~ 2.2kgf.m, 13.7 ~ 15.9lb-ft)

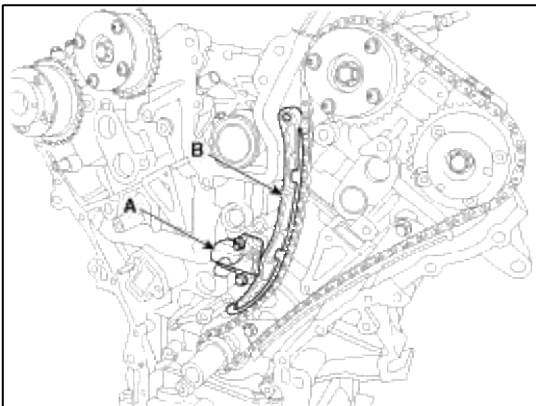


7. Install the LH timing chain cam to cam guide (A).

Tightening torque :


9.8 ~ 11.8 N.m (1.0 ~ 1.2 kgf.m, 7.2 ~ 8.7 lb-ft)

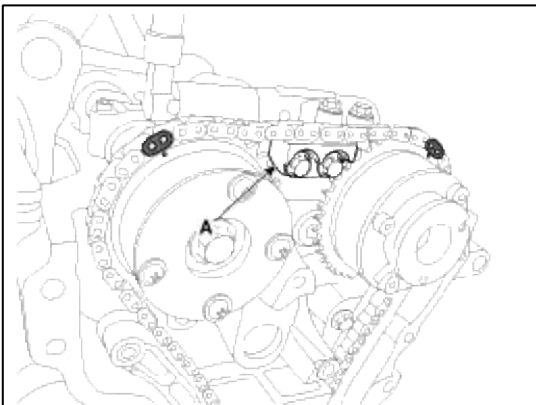

8. Remove the tensioner stopper pin (A).

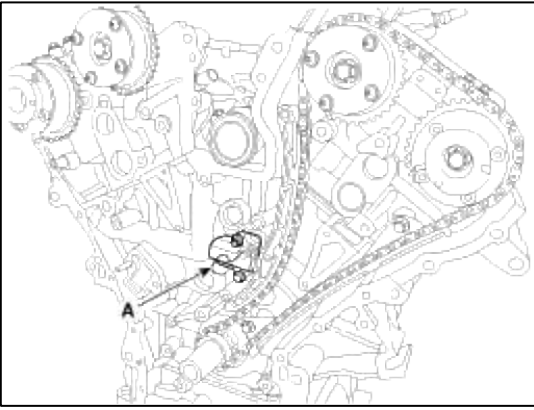


9. Install the crankshaft oil pump chain sprocket (A).

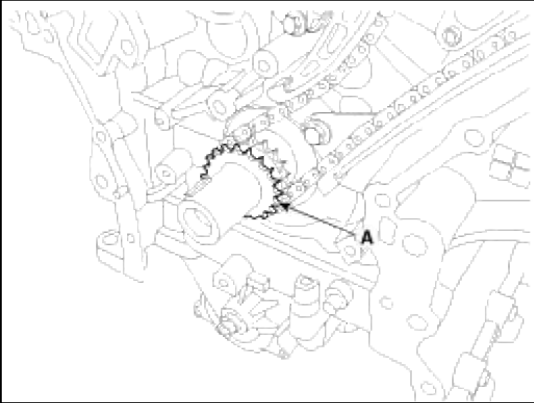


10. Install the oil pump chain sprocket (A) with oil pump chain (B).

Tightening torque :

18.6 ~ 21.6N.m (1.9 ~ 2.2kgf.m, 13.7 ~ 15.9lb-ft)

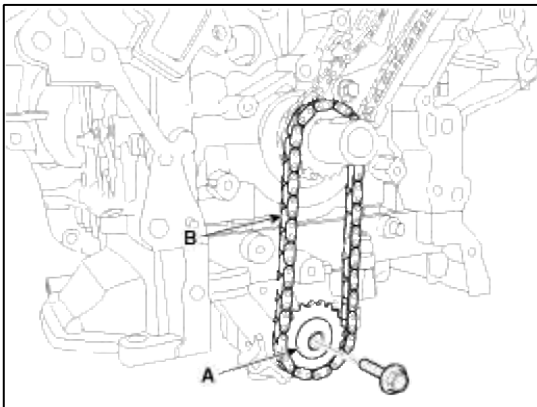

11. Install the RH timing chain (A).

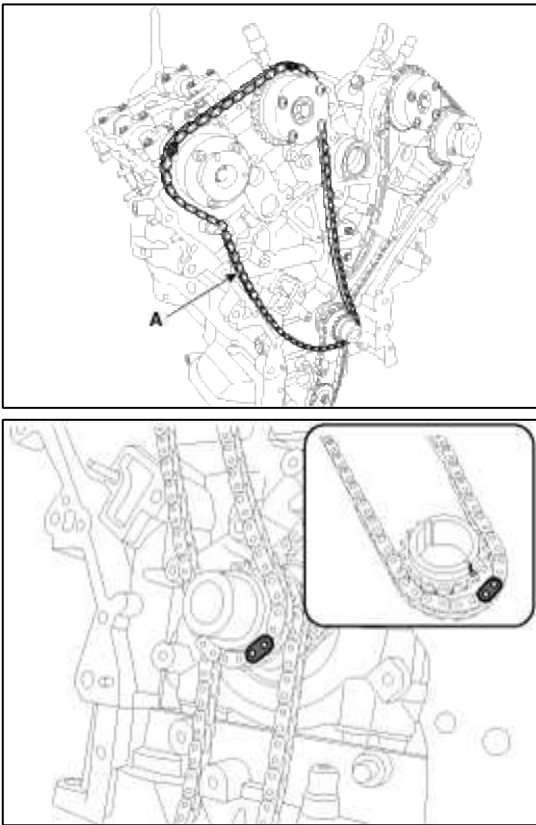
**NOTE**

To install the timing chain with no slack between each shaft (cam, crank), follow the below procedure.
 Crankshaft sprocket → Timing chain guide → Intake camshaft sprocket → Exhaust camshaft sprocket.
 The timing mark of each sprockets should be matched with timing mark (color link) of timing chain at installing timing chain.

12. Install the RH timing chain guide (A).

Tightening torque :

A : 19.6 ~ 24.5N.m (2.0 ~ 2.5kgf.m, 14.5 ~ 18.1lb-ft)

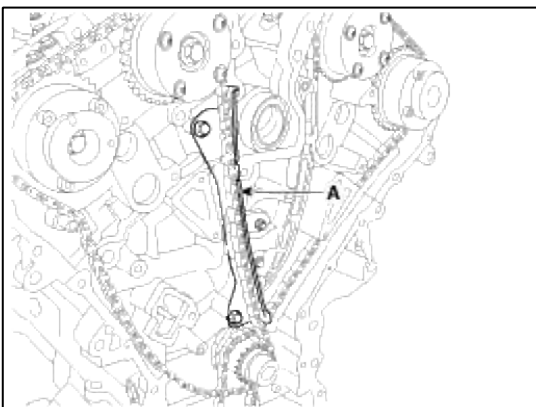


13. Install the RH timing chain tensioner arm (B) and RH timing chain auto tensioner (A).
-

Tightening torque

A : 9.8 ~ 11.8N.m (1.0 ~ 1.2kgf.m, 7.2 ~ 8.7lb-ft)

B : 18.6 ~ 21.6N.m (1.9 ~ 2.2kgf.m, 13.7 ~ 15.9lb-ft)

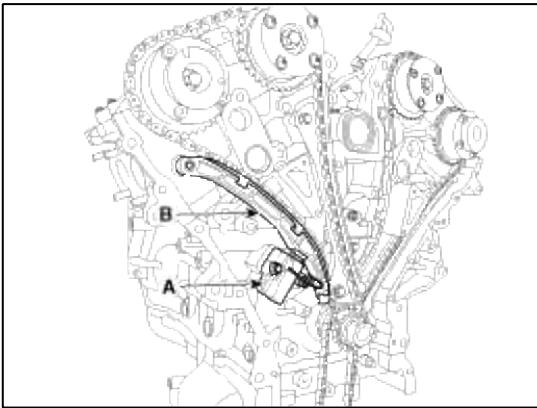


14. Install the RH timing cam to cam guide (A).
-

Tightening torque :

9.8 ~ 11.8 N.m (1.0 ~ 1.2 kgf.m, 7.2 ~ 8.7 lb-ft)




15. Remove the tensioner stopper pin (A).

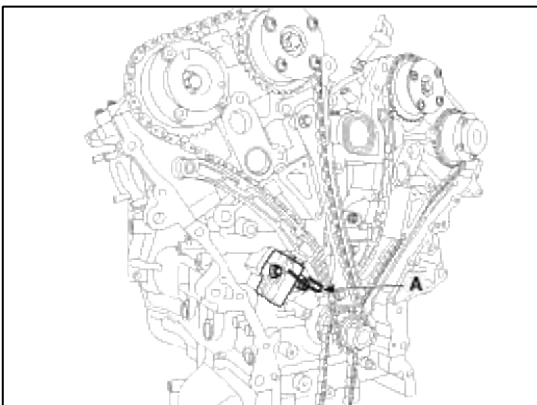

16. Install the oil pump chain tensioner assembly (A).

Tightening torque :

9.8 ~ 11.8N.m (1.0 ~ 1.2kgf.m, 7.2 ~ 8.7lb-ft)

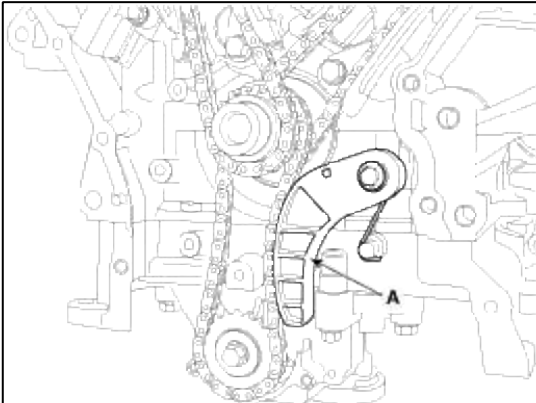


NOTE

The hook of tensioner must be around the guide.

17. Install the oil pump chain cover (A).

Tightening torque :

9.8 ~ 11.8N.m (1.0 ~ 1.2kgf.m, 7.2 ~ 8.7lb-ft)

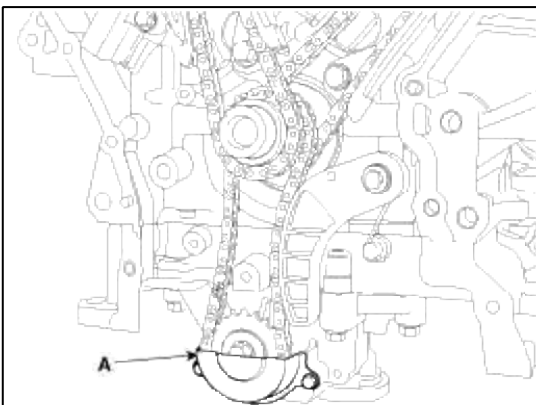

18. After rotating the crankshaft 2 revolutions in regular direction (clockwise viewed from front), confirm the timing mark.

NOTE

Always turn the crankshaft clockwise.


Turning the crankshaft counter clockwise before building up oil pressure in the hydraulic timing chain tensioner may result in the chain disengaging from the sprocket teeth.

19. Install the timing chain cover.


(1) The sealant locations on chain cover and on counter parts (cylinder head, cylinder block, and lower oil pan) must be free of engine oil and etc.

- (2) Before assembling the timing chain cover, the liquid sealant TB 1217H (Hyundai Gray RTV) should be applied on the gap between cylinder head and cylinder block.
The part must be assembled within 5 minutes after sealant was applied.

Bead width : 2.5mm(0.1in.)

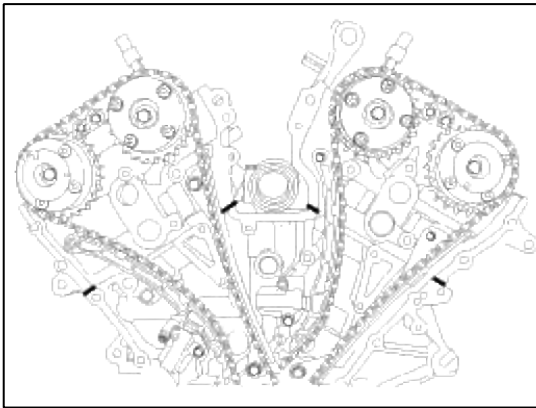


- (3) After applying liquid sealant TB 1217H (Hyundai Gray RTV) on timing chain cover. The part must be assembled within 5 minutes after sealant was applied.
Sealant should be applied without discontinuity.

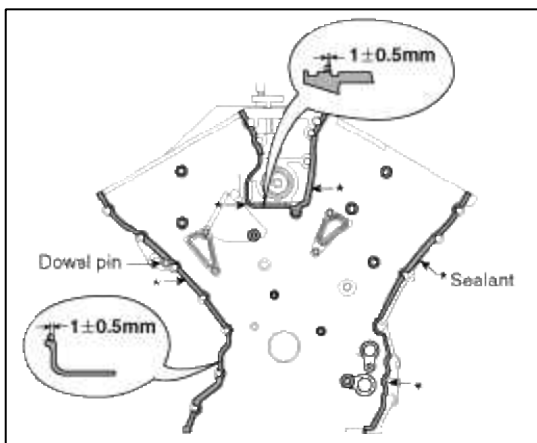

NOTE

- Fill the T-joint area (6EA*) with sealant.
- Apply sealant all around the dowel pin hole (2EA).

- (4) Install the new gasket (A) to the timing chain cover.

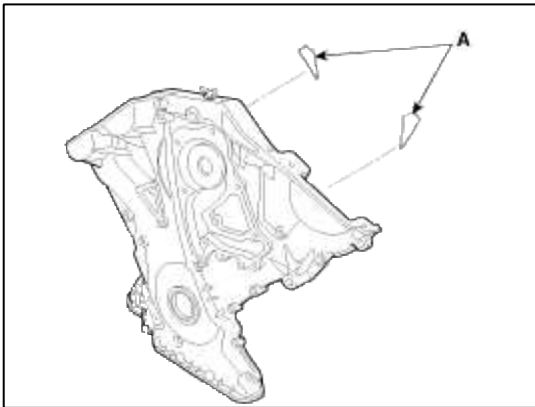

NOTE

During timing cover installation, care not to take off applied sealant on the timing cover by contact with other parts.

- (5) The dowel pins on the cylinder block and holes on the timing chain cover should be used as a reference in order to assemble the timing chain cover to be in exact position.

Tightening torque

A (16EA) :

18.6 ~ 21.6N.m (1.9 ~ 2.2kgf.m, 13.7 ~ 15.9lb-ft)

B (2EA) :


24.5 ~ 26.5N.m (2.5 ~ 2.7kgf.m, 18.1 ~ 19.5lb-ft)

C (2EA) :

58.8 ~ 68.6N.m (6.0 ~ 7.0kgf.m, 43.4 ~ 50.6lb-ft)

D (3EA) :



9.8 ~ 11.8N.m (1.0 ~ 1.2kgf.m, 7.2 ~ 8.7lb-ft)

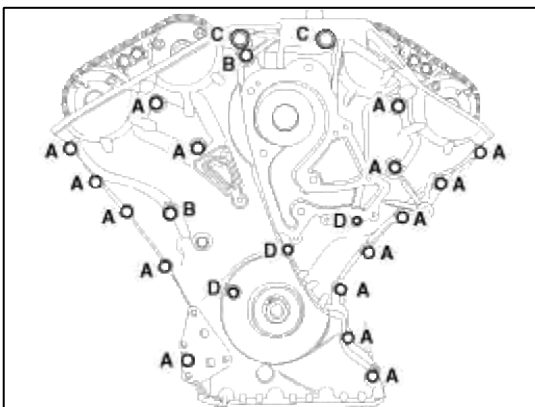

- (6) The firing and/or blow out test should not be performed within 30 minutes after the timing chain cover was assembled.

20. Install the water pump.

Install the new gaskets (B) and then install the water pump (A).

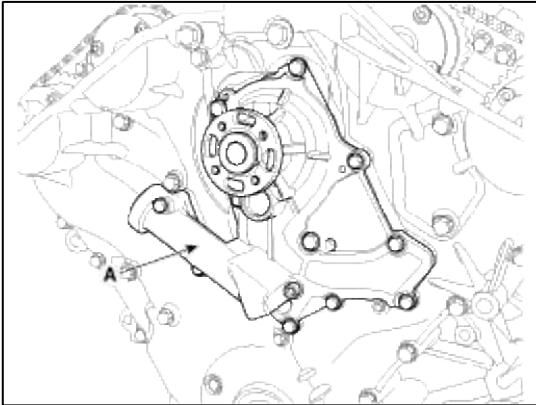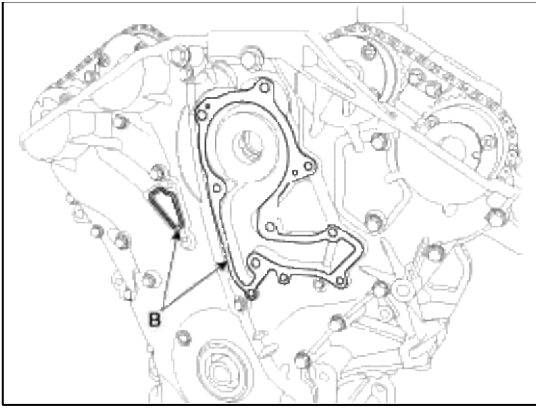

NOTE

- Clean the contact face before assemble.
- Always use a new seal bolt (Bolt C) and the gaskets.

Tightening torque

A (3EA) :

9.8 ~ 11.8 N.m (1.0 ~ 1.2 kgf.m, 7.2 ~ 8.7 lb-ft)

B (1EA) :

9.8 ~ 11.8 N.m (1.0 ~ 1.2 kgf.m, 7.2 ~ 8.7 lb-ft)

C (1EA) :

19.6 ~ 26.5 N.m (2.0 ~ 2.7 kgf.m, 14.5 ~ 19.5 lb-ft)

D (1EA) :

9.8 ~ 11.8 N.m (1.0 ~ 1.2 kgf.m, 7.2 ~ 8.7 lb-ft)

E (1EA) :


9.8 ~ 11.8 N.m (1.0 ~ 1.2 kgf.m, 7.2 ~ 8.7 lb-ft)

F (1EA) :


9.8 ~ 11.8 N.m (1.0 ~ 1.2 kgf.m, 7.2 ~ 8.7 lb-ft)

G (4EA) :

19.6 ~ 23.5 N.m (2.0 ~ 2.4 kgf.m, 14.5 ~ 17.4 lb-ft)

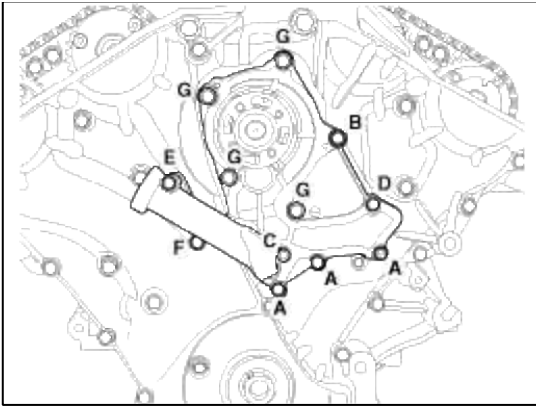


21. Using SST(09231-3C100), install timing chain cover oil seal.

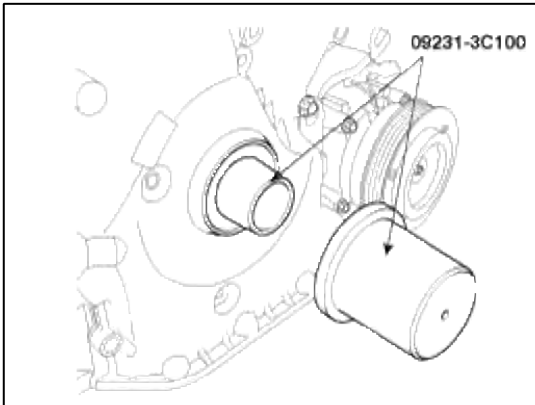

22. Install the crankshaft pulley (A).


Tightening torque :

284.4 ~304.0N.m (29.0~31.0kgf.m, 209.8~224.2lb-ft)

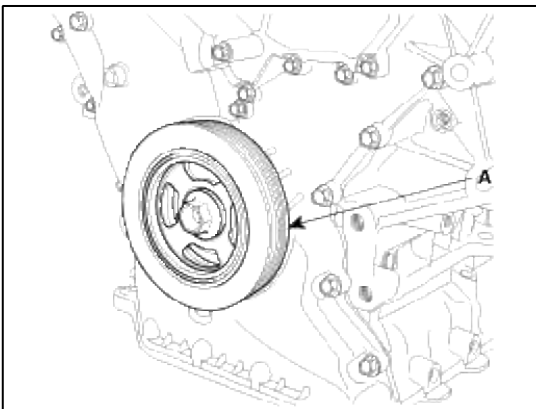

NOTE

- Use the SST(09231-2J210, 09231-2J200) to fix the crankshaft pulley.

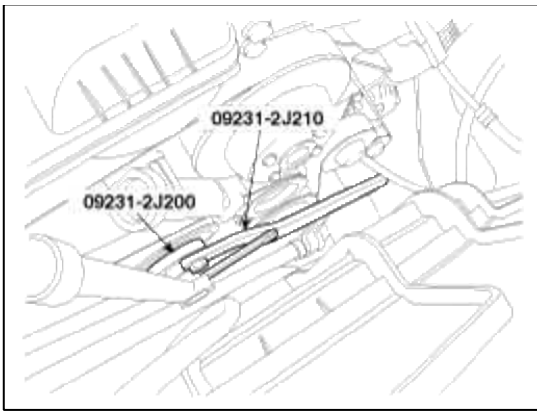

23. Install the drive belt auto tensioner (A).


Tightening torque

Bolt (B) :

81.4 ~ 85.3N.m (8.3 ~ 8.7kgf.m, 60.0 ~ 62.9lb-ft)

Bolt (C) :


17.7 ~ 21.6N.m (1.8 ~ 2.2kgf.m, 13.0 ~ 15.9lb-ft)

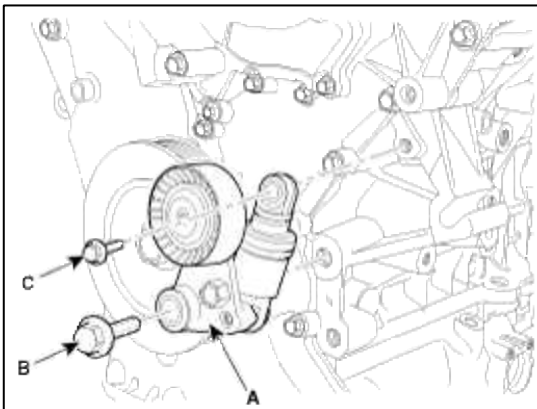

24. Install the drive belt idler (A).

Tightening torque :


53.9 ~ 57.9N.m (5.5 ~ 5.9kgf.m, 39.8 ~ 42.7lb-ft)

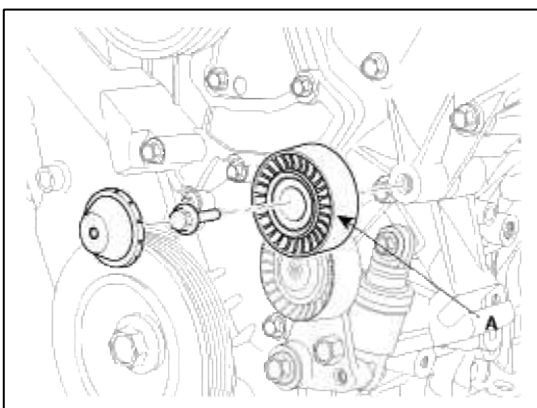

25. Install the water pump pulley (A).

Tightening torque :


7.8 ~ 9.8N.m (0.8 ~ 1.0kgf.m, 5.8 ~ 7.2lb-ft)

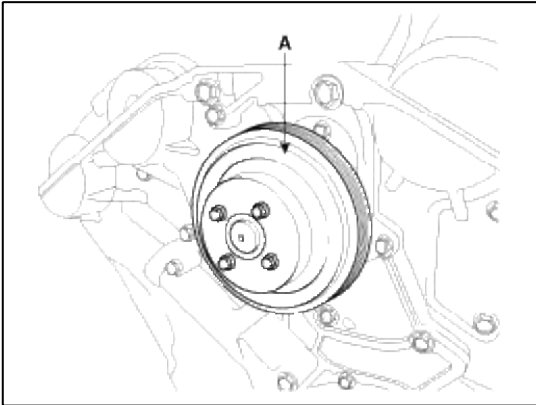


26. Install the oil filter body (A).

Tightening torque :

19.6 ~ 21.6N.m (2.0 ~ 2.2kgf.m, 14.5 ~ 15.9lb-ft)

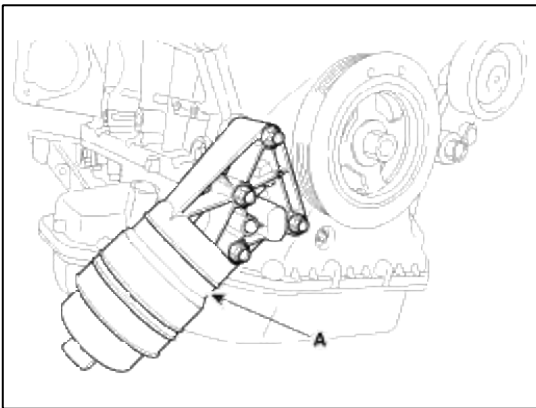


27. Install the air conditioner compressor (A). (Refer to Heating, Ventilation, Air Conditioning - "Compressor")

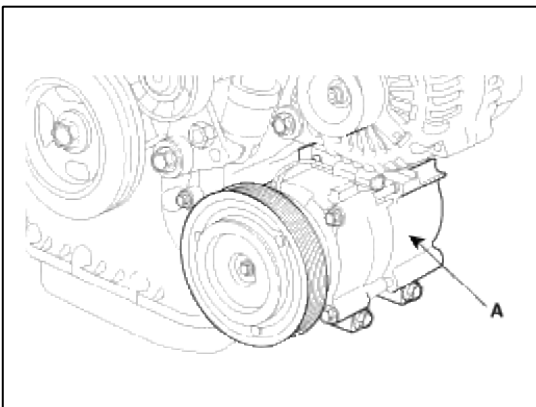

28. Install the alternator (A). (Refer to Engine Electrical System - "Alternator")

Tightening torque :

26.5 ~ 33.3N.m (2.7 ~ 3.4kgf.m, 19.5 ~ 24.6lb-ft)

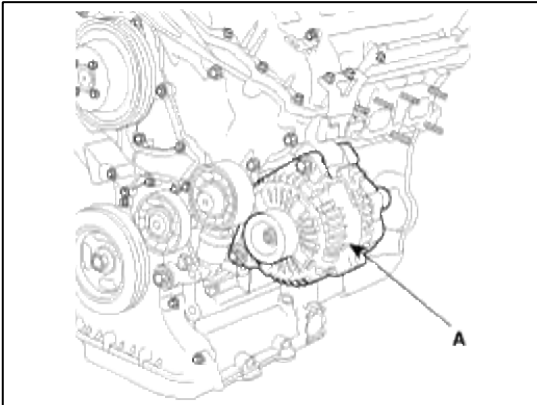


29. Install the drive belt (B).

30. Install the oil level gauge (A).

Tightening torque :

18.6 ~ 22.6N.m (1.9 ~ 2.3kgf.m, 13.7 ~ 16.6lb-ft)

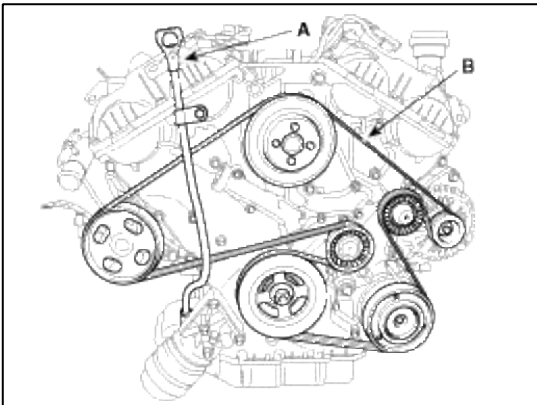


31. Install the lower oil pan (A).

(1) Using a gasket scraper, remove all the old packing material from the gasket surfaces.

- (2) Before assembling the oil pan, the liquid sealant TB 1217H (Hyundai Gray RTV) should be applied on oil pan. The part must be assembled within 5 minutes after the sealant was applied.

Bead width : 2.5mm(0.1in.)

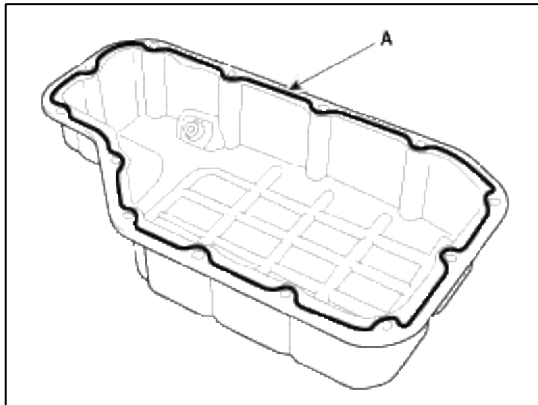


CAUTION

- Clean the sealing face before assembling two parts.
- Remove harmful foreign matters on the sealing face before applying sealant.
- When applying sealant gasket, sealant must not be protruded into the inside of oil pan.
- To prevent leakage of oil, apply sealant gasket to the inner threads of the bolt holes.

- (3) Install the oil pan (A).
Uniformly tighten the bolts in several passes.

Tightening torque :

9.8 ~ 11.8N.m (1.0 ~ 1.2kgf.m, 7.2 ~ 8.7lb-ft)

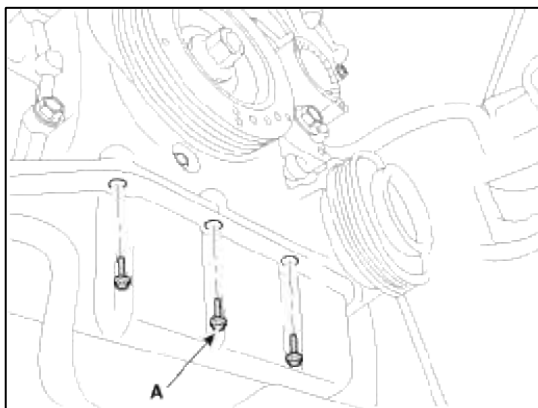

32. Install the LH/RH cylinder head cover (A).


CAUTION

- Install the cylinder head cover under the exhaust OCV cup is removed.
- To prevent engine oil leakage, surely install the exhaust OCV cap after installing the cylinder head cover.

- (1) The hardening sealant located on the upper area between timing chain cover and cylinder head should be removed before assembling cylinder head cover.

(2) After applying sealant TB 1217H (Hyundai Gray RTV), it should be assembled within 5 minutes.

Bead width : 2.5mm(0.1in.)

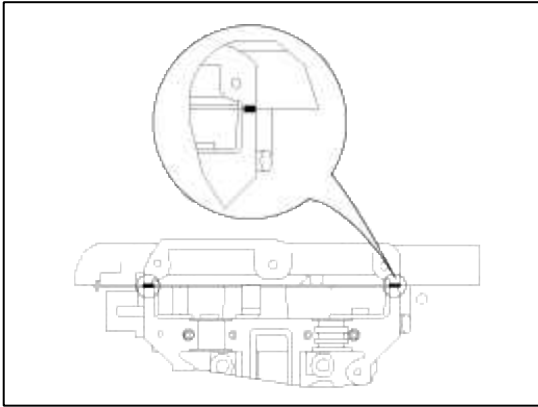

(3) The firing and/or blow out test should not be performed within 30 minutes after the cylinder head cover was assembled.


(4) Install the cylinder head cover bolts as following method.

Tightening torque :

9.8 ~ 11.8N.m (1.0 ~ 1.2kgf.m, 7.2 ~ 8.7lb-ft)

CAUTION

Do not reuse cylinder head cover gasket.

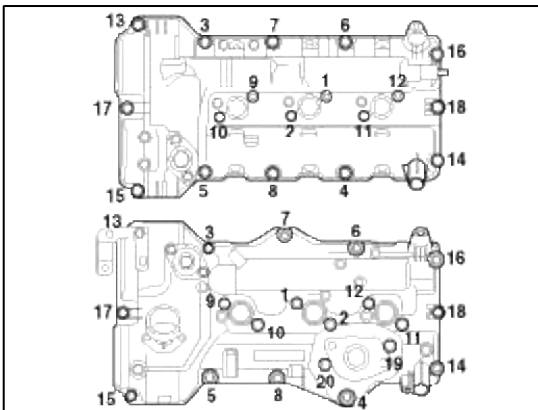

(5) Install the exhaust OCV cap.

Tightening torque :

9.8 ~ 11.8N.m (1.0 ~ 1.2kgf.m, 7.2 ~ 8.7lb-ft)

33. Install the other parts reverse order of removal.

34. Connect the battery negative cable.

Tightening torque :


7.8 ~ 9.8 N.m (0.8 ~ 1.0 kgf.m, 5.8 ~ 7.2 lb-ft)

NOTE

- Refill engine oil.
- Clean the battery posts and cable terminals with sandpaper. Assemble and then apply grease to prevent corrosion.
- Inspect for fuel leakage.
 - After assembling the fuel line, turn on the ignition switch (do not operate the starter) so that the fuel pump runs for approximately two seconds and fuel line pressurizes.
 - Repeat this operation two or three times, then check for fuel leakage at any point in the fuel lines.
- Refill radiator and reservoir tank with engine coolant.
- Bleed air from the cooling system.
 - Start engine and let it run until it warms up. (Until the radiator fan operates 3 or 4 times.)
 - Turn Off the engine. Check the level in the radiator, add coolant if needed. This will allow trapped air to be removed from the cooling system.
 - Put radiator cap on tightly, then run the engine again and check for leaks.


Engine Mechanical System > Cylinder Head Assembly > Cylinder Head > Components and Components Location

Components

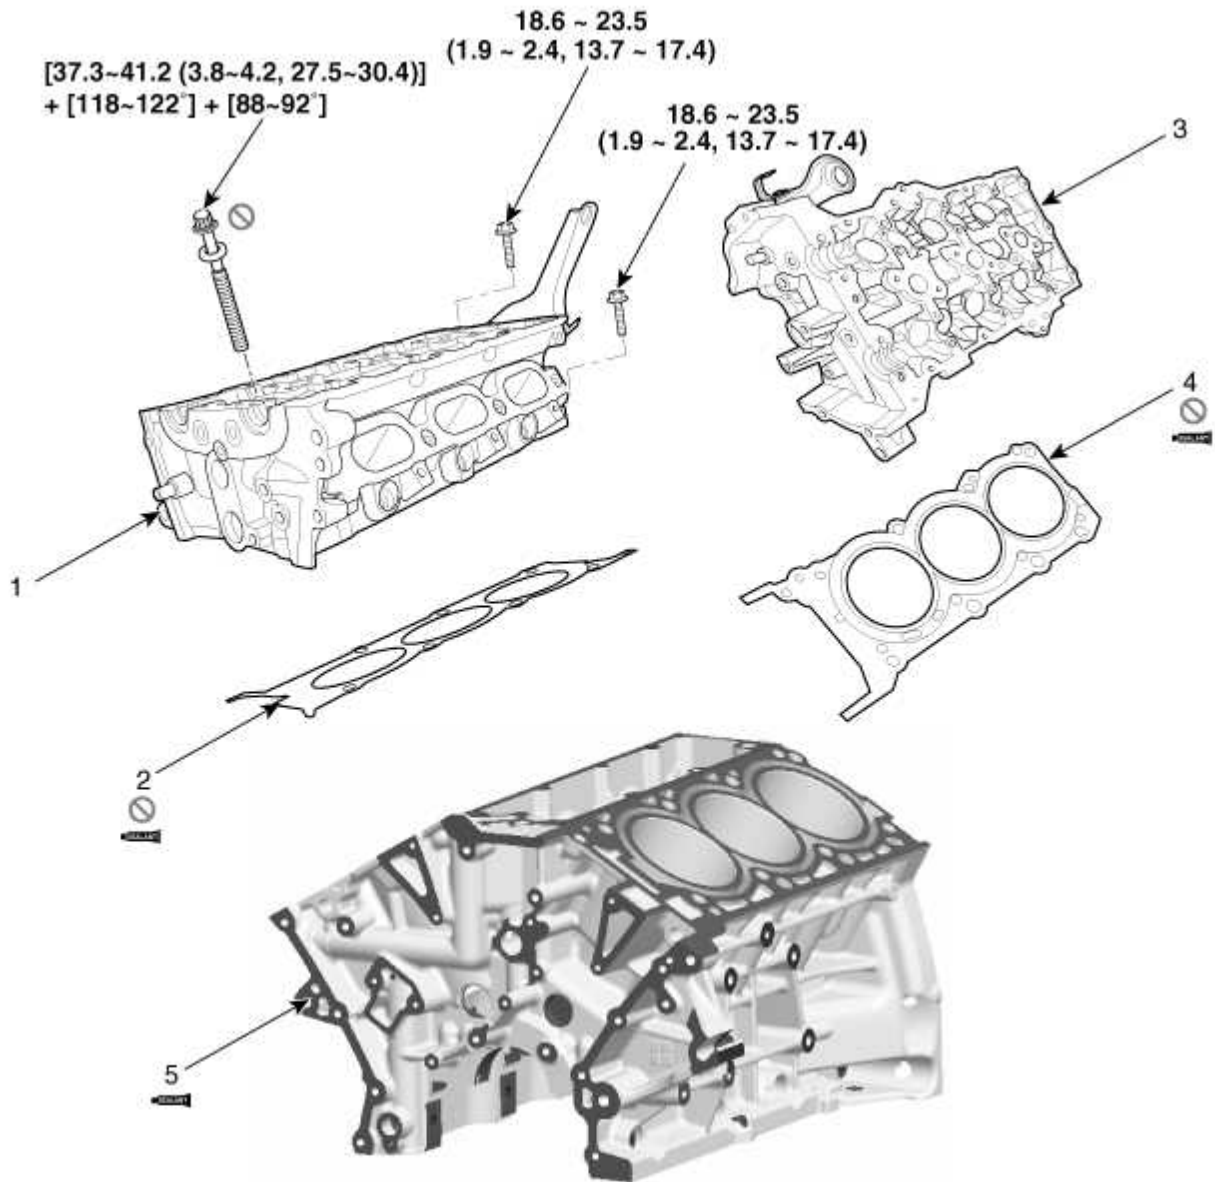

Torque : N.m (kgf.m, lb-ft)

1. RH Cylinder head	4. LH Cylinder head gasket
2. RH Cylinder head gasket	5. Cylinder block
3. LH Cylinder head	

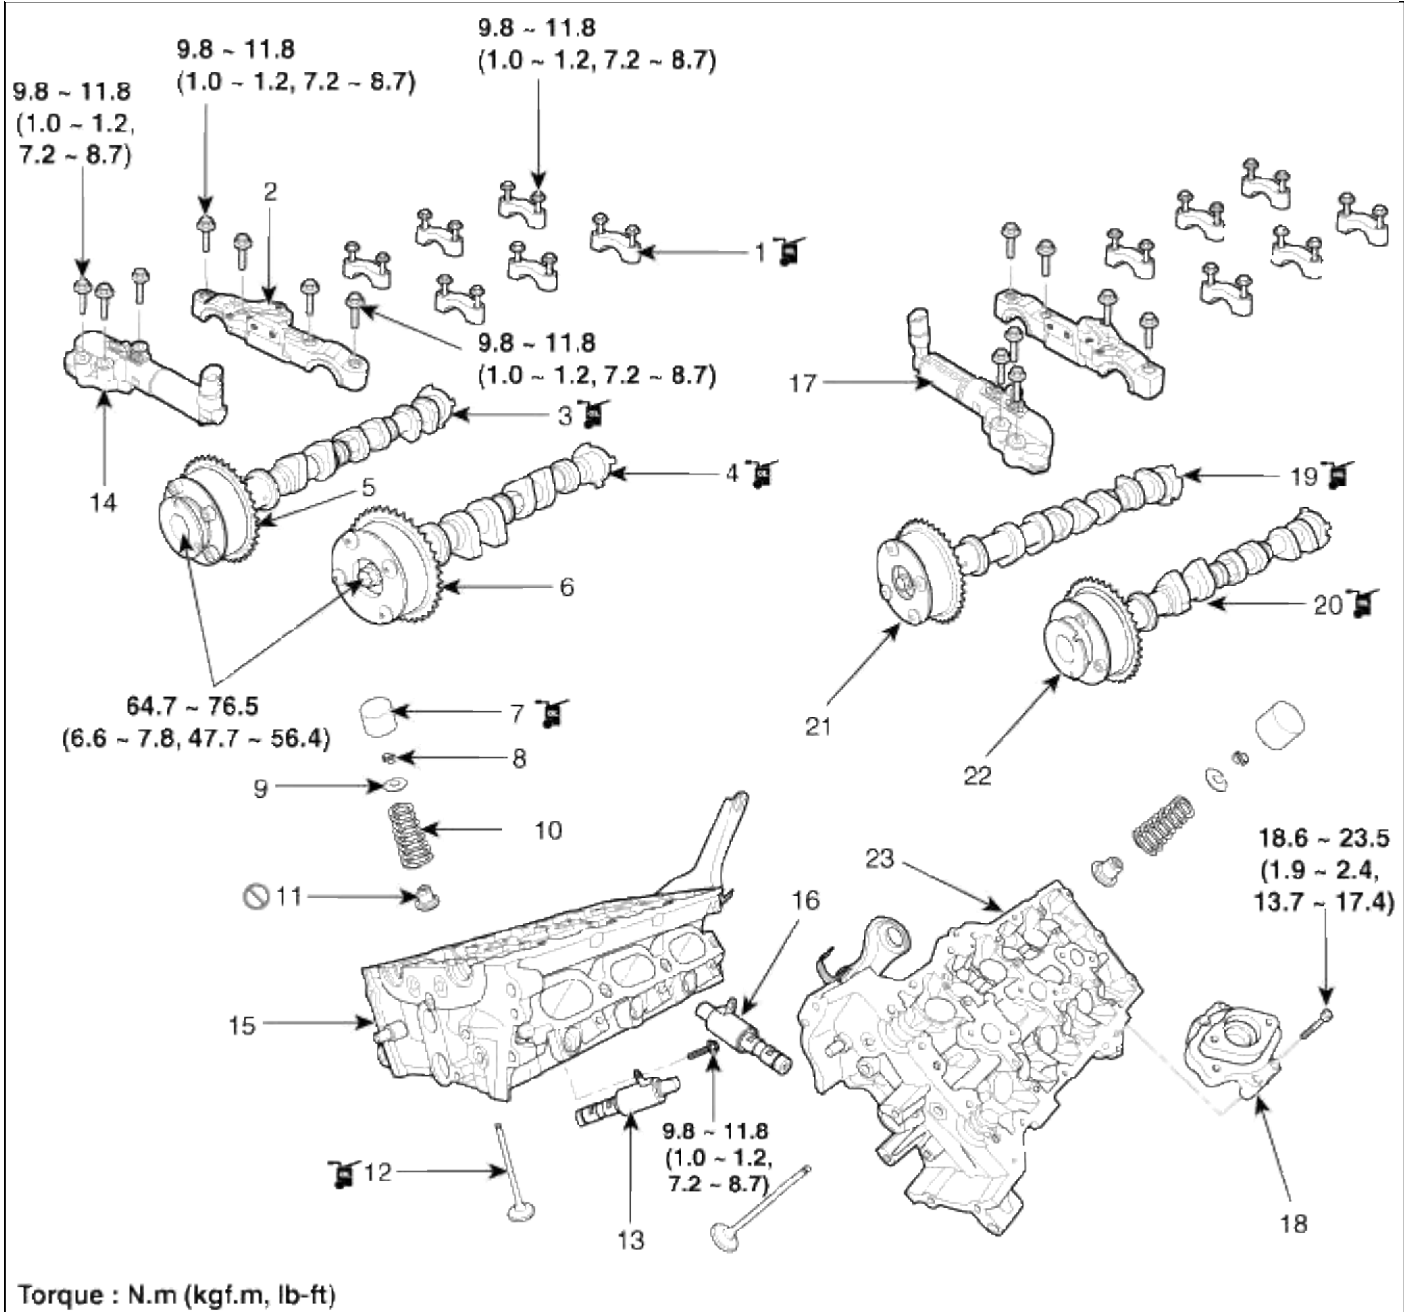

1. Camshaft bearing cap	9. Retainer	17. LH exhaust camshaft OCV
2. Camshaft thrust bearing cap	10. Valve spring	18. Fuel pump bracket
3. RH exhaust camshaft	11. Valve stem seal	19. LH intake camshaft
4. RH intake camshaft	12. Valve	20. LH exhaust camshaft
5. RH exhaust CVVT assembly	13. RH exhaust camshaft OCV	21. LH intake CVVT assembly
6. RH intake CVVT assembly	14. RH intake camshaft OCV	22. LH exhaust CVVT assembly
7. Mechanical lash adjuster (MLA)	15. RH cylinder head	23. LH cylinder head
8. Retainer lock	16. LH intake camshaft OCV	

Engine Mechanical System > Cylinder Head Assembly > Cylinder Head > Repair procedures

Removal


CAUTION

- Use fender covers to avoid damaging painted surfaces.
- To avoid damaging the cylinder head, wait until the engine coolant temperature drops below normal temperature (20°C [68°F]) before removing it.
- When handling a metal gasket, take care not to fold the gasket or damage the contact surface of the gasket.
- To avoid damage, unplug the wiring connectors carefully while holding the connector portion.



NOTE

- Mark all wiring and hoses to avoid misconnection.
- Turn the crankshaft pulley so that the No. 1 piston is at top dead center.



1. Remove the intake and exhaust manifolds. (Refer to Intake and exhaust system in this group)
2. Remove the timing chain. (Refer to Timing system in this group)
3. Disconnect the heater hoses and then remove the water temperature control assembly. (Refer to Cooling system in this group)
4. Remove the injector & rail assembly. (Refer to Fuel System - "Delivery Pipe")
5. Remove the fuel pump adapter (A).

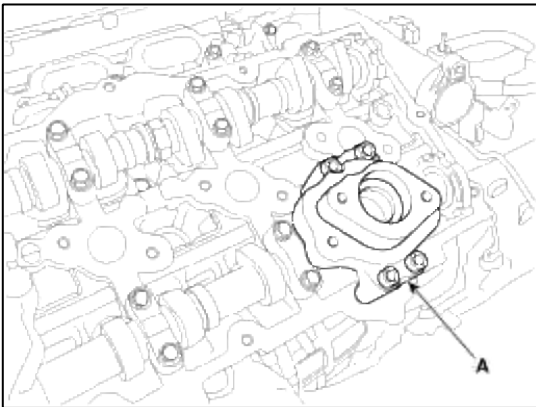



6. Remove the LH/RH exhaust camshaft oil control valve(OCV) (A).

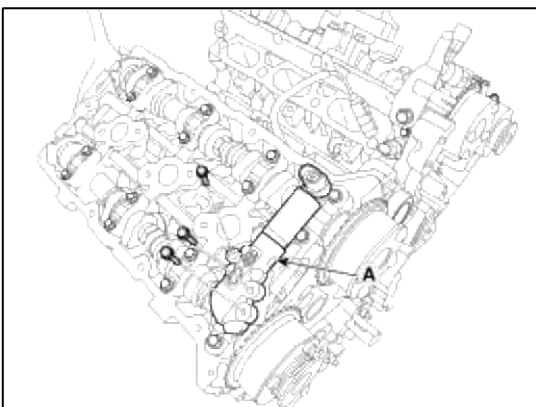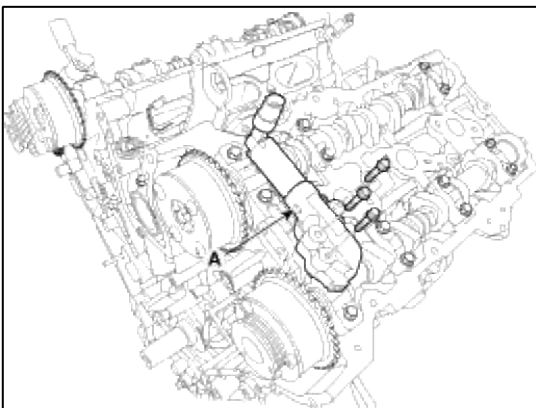

7. Remove the LH/RH camshaft bearing cap (A) and thrust bearing cap (B).

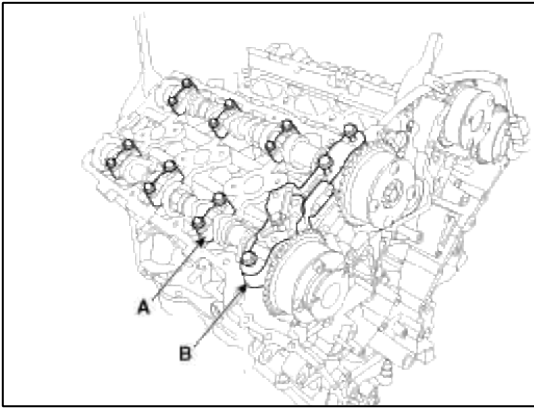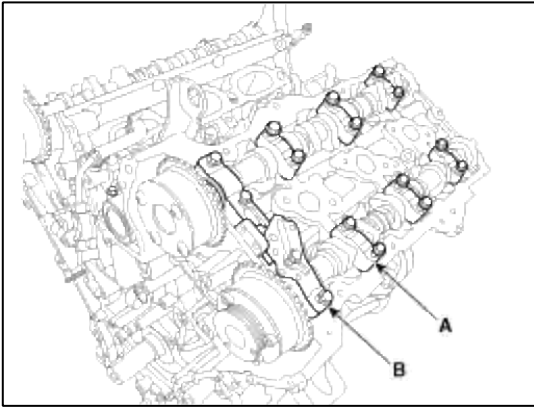


8. Remove the LH/RH camshaft assembly (A).

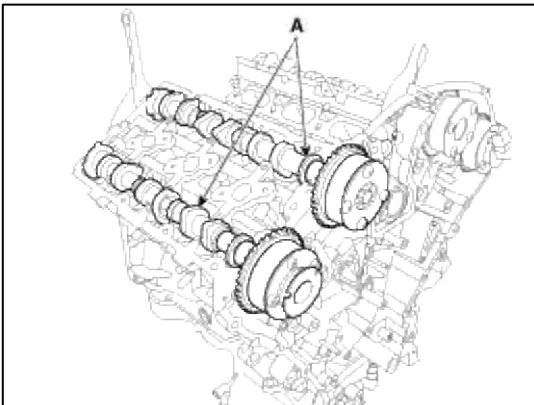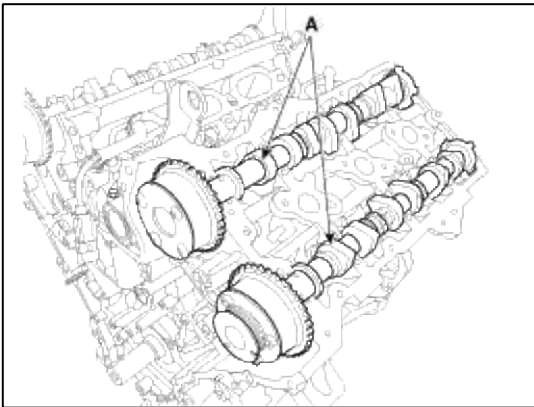


9. Remove the cylinder head.

(1) Remove the RH cylinder head rear bolts (A).

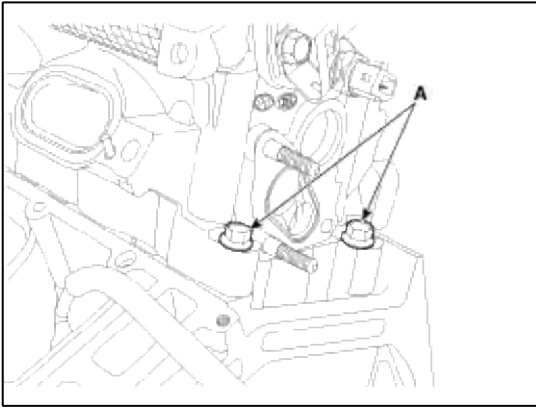


(2) Uniformly loosen and remove the cylinder head bolts, in several passes, in the sequence shown.

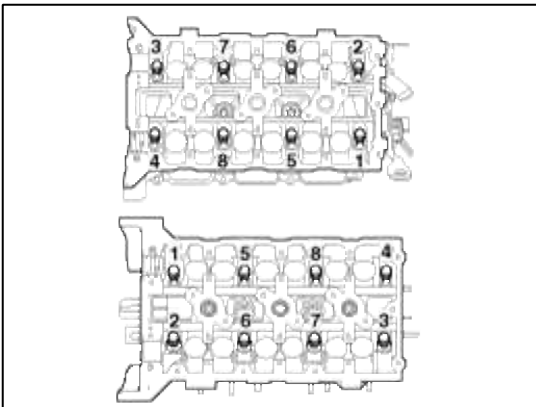

CAUTION

Head warpage or cracking could result from removing bolts in an incorrect order.


(3) Lift the cylinder head from the dowels on the cylinder block and place the cylinder head on wooden blocks on a bench.

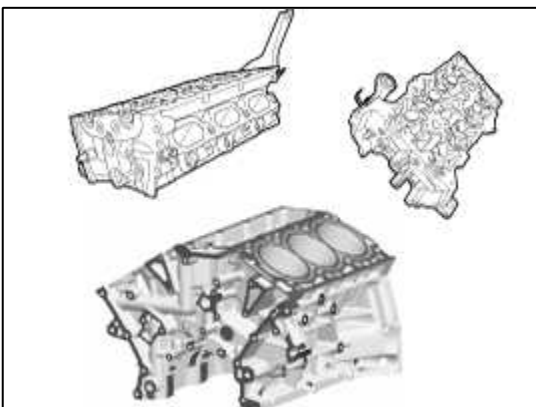

CAUTION

Be careful not to damage the contact surfaces of the cylinder head and cylinder block.

(4) Remove the LH/RH cylinder head gaskets.

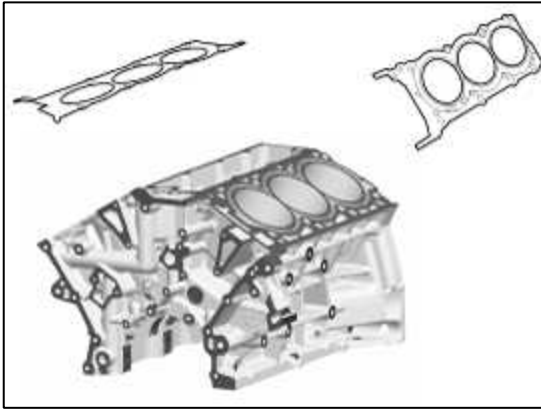


Disassembly

NOTE


Identify MLA, valves and valve springs as they are removed so that each item can be reinstalled in its original position.

1. Remove the MLAs(A).

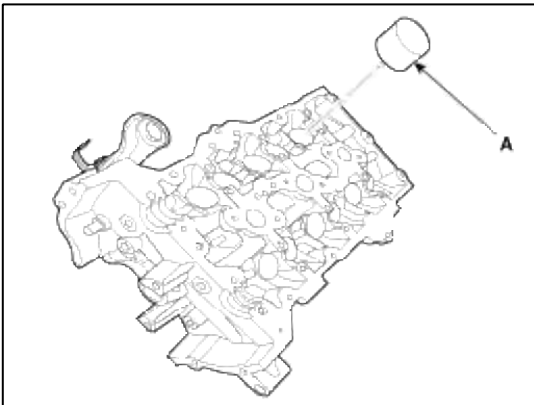

2. Remove the valves.

(1) Using the SST(09222-3K000, 09222-3K100), compress the valve spring and remove retainer lock.

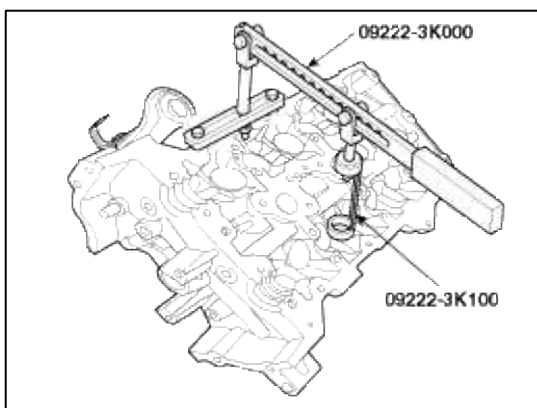


(2) Remove the spring retainer.

(3) Remove the valve spring.

(4) Remove the valve.



(5) Using the SST(09222-29000), remove the valve stem seal.

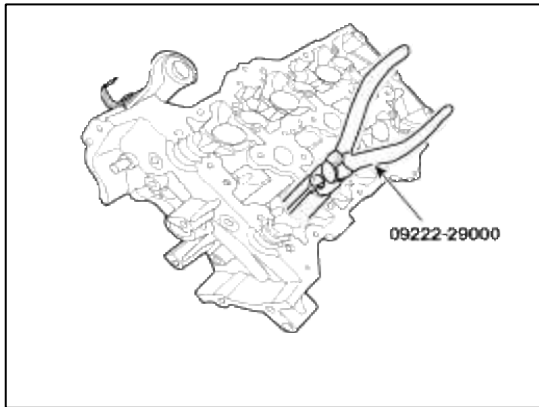

NOTE

Do not reuse old valve stem seals.

3. Remove the LH/RH intake OCV(A).

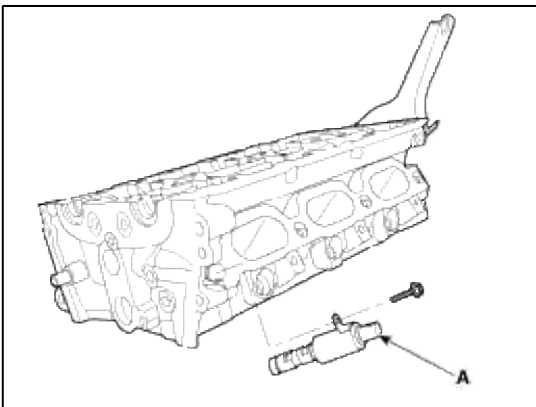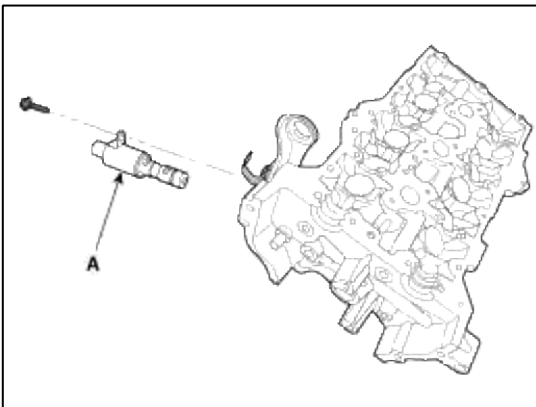

Inspection

Cylinder Head

1. Inspect for flatness.

Using a precision straight edge and feeler gauge, measure the surface contacting cylinder block and the manifolds for warpage.


Flatness of cylinder head gasket surface

Standard : Less than 0.05mm(0.002in.)

[Less than 0.02mm(0.0008in.)/150x150]

Flatness of manifold gasket surface

Standard : Less than 0.03mm(0.001in.)/110x110

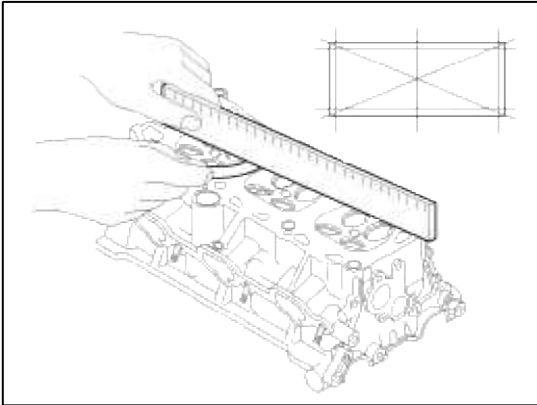

2. Inspect for cracks.

Check the combustion chamber, intake ports, exhaust ports and cylinder block surface for cracks. If cracked, replace the cylinder head.


Valve And Valve Spring

1. Inspect valve stems and valve guides.

(1) Using a caliper gauge, measure the inside diameter of the valve guide.

Valve guide I.D.

Intake / Exhaust : 5.500 ~ 5.512mm (0.216 ~ 0.217in.)

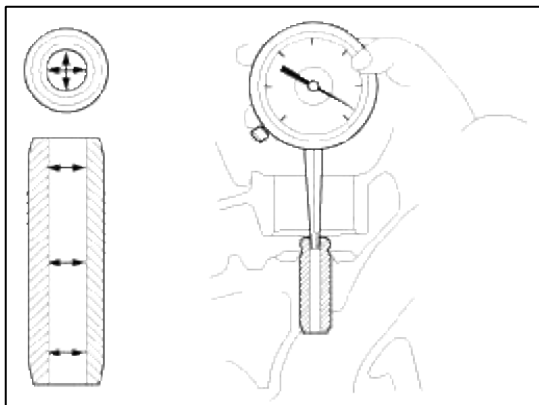


- (2) Using a micrometer, measure the diameter of the valve stem.

Valve stem O.D.

Intake : 5.465 ~ 5.480mm (0.2151 ~ 0.2157in.)

Exhaust : 5.458 ~ 5.470mm (0.2149 ~ 0.2153in.)

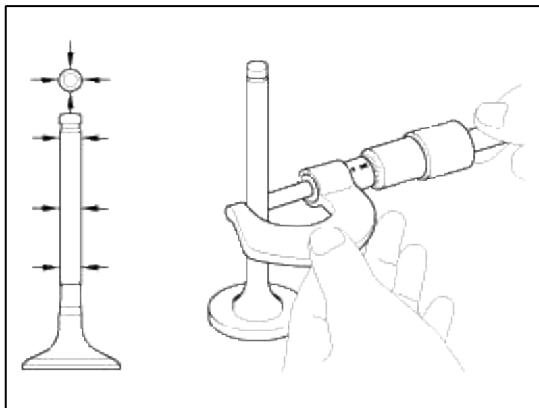

- (3) Subtract the valve stem diameter measurement from the valve guide inside diameter measurement.

Valve stem-to-guide clearance

[Standard]

Intake : 0.020 ~ 0.047mm (0.0008 ~ 0.0018in.)

Exhaust : 0.030 ~ 0.054mm (0.0012 ~ 0.0021in.)

[Limit]

Intake : 0.07mm (0.0027in.)

Exhaust : 0.09mm (0.0035in.)

2. Inspect valves.


- (1) Check the valve is ground to the correct valve face angle.
- (2) Check that the surface of the valve for wear.
If the valve face is worn, replace the valve.
- (3) Check the valve head margin thickness.
If the margin thickness is less than minimum, replace the valve.

Margin

[Standard]

Intake : 1.56 ~ 1.86mm (0.06142 ~ 0.07323in.)

Exhaust : 1.73 ~ 2.03mm (0.06811 ~ 0.07992in.)

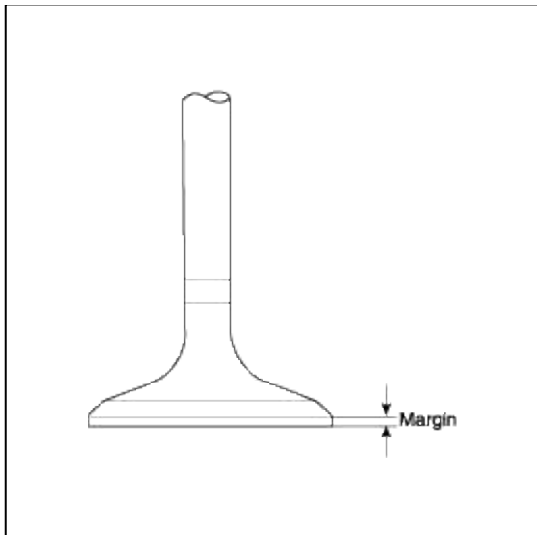

(4) Check the valve length.

Length

Intake : 105.27mm (4.1445in)

Exhaust : 105.50mm (4.1535in)

(5) Check the surface of the valve stem tip for wear.

If the valve stem tip is worn, replace the valve.

3. Inspect valve seats

Check the valve seat for evidence of overheating and improper contact with the valve face.

If the valve seat is worn, replace cylinder head.

Before reconditioning the seat, check the valve guide for wear. If the valve guide is worn, replace cylinder head.

Recondition the valve seat with a valve seat grinder or cutter. The valve seat contact width should be within specifications and centered on the valve face.

4. Inspect valve springs.

(1) Using a steel square, measure the out-of-square of the valve spring.


(2) Using vernier calipers, measure the free length of the valve spring.

Valve spring

[Standard]

Free height : 45.5mm (1.7913in.)

Out-of-square : 1.5°

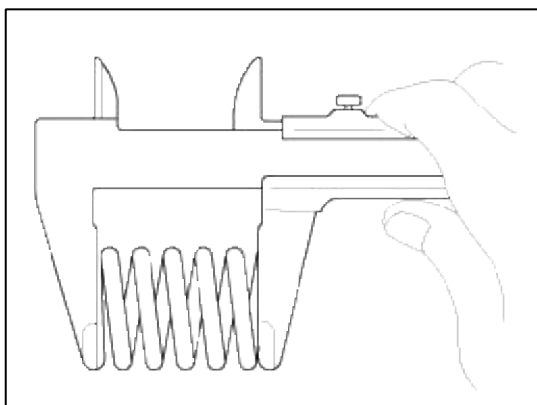

1. Inspect MLAs.

Using a micrometer, measure the MLA outside diameter.

MLA O.D.

Intake/Exhaust :

34.964 ~ 34.980mm(1.3765 ~ 1.3771in.)

2. Using a caliper gauge, measure MLA tappet bore inner diameter of cylinder head.

Tappet bore I.D.

Intake/Exhaust :

35.000 ~ 35.025mm(1.3779 ~ 1.3789in.)

3. Subtract MLA outside diameter measurement from tappet bore inside diameter measurement.

MLA to tappet bore clearance

[Standard]

Intake/Exhaust : 0.020 ~ 0.061mm(0.0008 ~ 0.0024in.)

[Limit]

Intake/Exhaust : 0.07mm(0.0027in.)

Camshaft

1. Inspect cam lobes.


Using a micrometer, measure the cam lobe height.

Cam height

[Standard value]

Intake : 47.2mm (1.8582in.)

Exhaust : 45.8mm (1.8031in.)

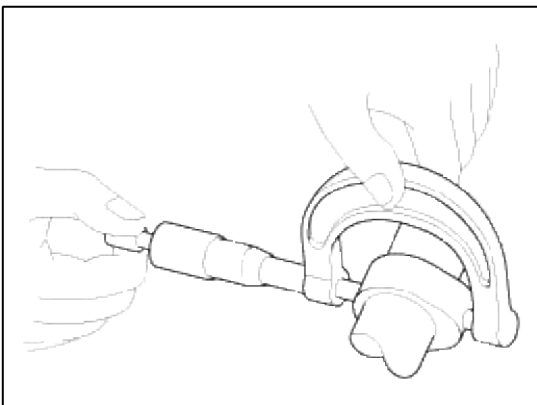


If the cam lobe height is less than standard, replace the camshaft.

2. Inspect the camshaft journal clearance.

(1) Clean the bearing caps and camshaft journals.

(2) Place the camshafts on the cylinder head.

(3) Lay a strip of plastigage across each of the camshaft journals.


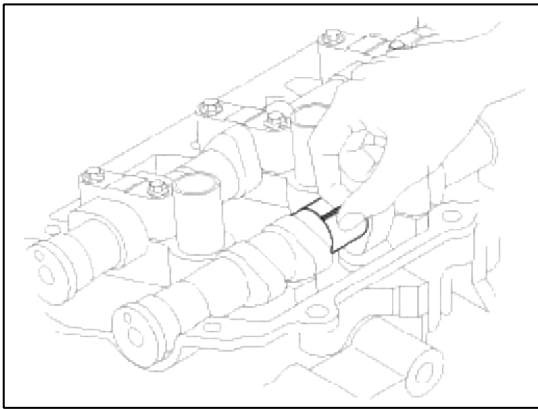


(4) Install the bearing cap (A) and thrust bearing cap (B) with specified torque.

Tightening torque :

1st step : 5.8N.m (0.6kgf.m, 4.3lb-ft)

2nd step : 9.8 ~ 11.8N.m (1.0 ~ 1.2kgf.m, 7.2 ~ 8.7lb-ft)

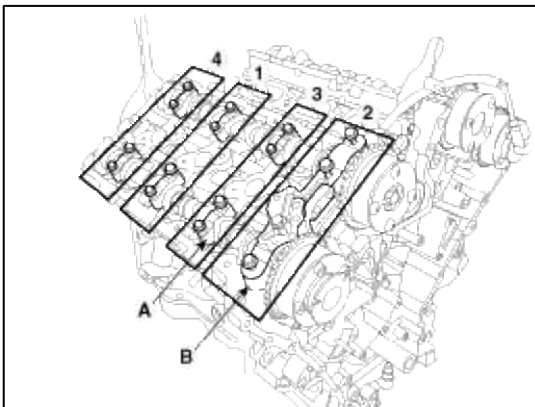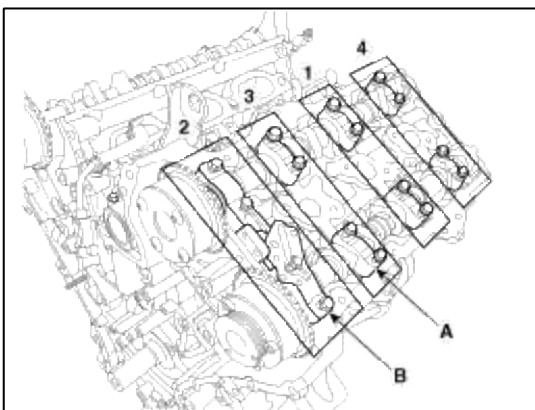

CAUTION

Do not turn the camshaft.

(5) Remove the bearing caps.

(6) Measure the plastigage at its widest point.

Bearing oil clearance

[Standard value]

Intake


No.1 journal : 0.027 ~ 0.057mm (0.0010 ~ 0.0022in.)

No.2,3,4 journal : 0.030 ~ 0.067mm (0.0012 ~ 0.0026in.)

Exhaust

No.1 journal : 0.027 ~ 0.057mm (0.0010 ~ 0.0022in.)

No.2,3,4 journal : 0.030 ~ 0.067mm (0.0012 ~ 0.0026in.)

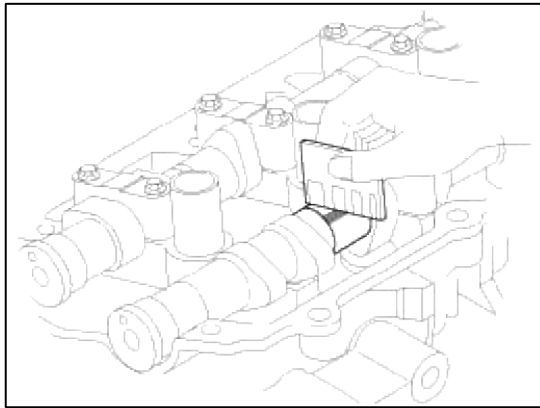

If the oil clearance is greater than maximum, replace the camshaft. If necessary, replace cylinder head.

(7) Completely remove the plastigage.

(8) Remove the camshafts.


3. Inspect the camshaft end play.


(1) Install the camshafts.

(2) Using a dial indicator, measure the end play while moving the camshaft back and forth.

Camshaft end play

[Standard value] : 0.02 ~ 0.18mm(0.0008 ~ 0.0071in.)

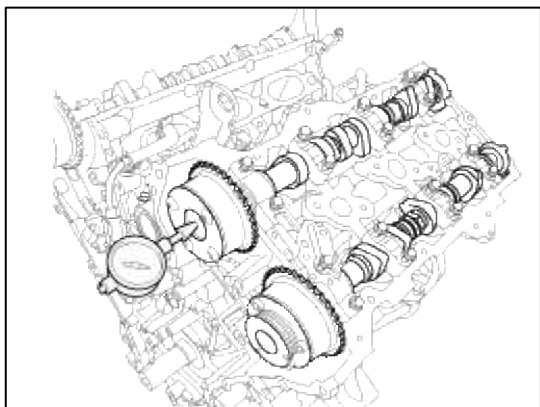

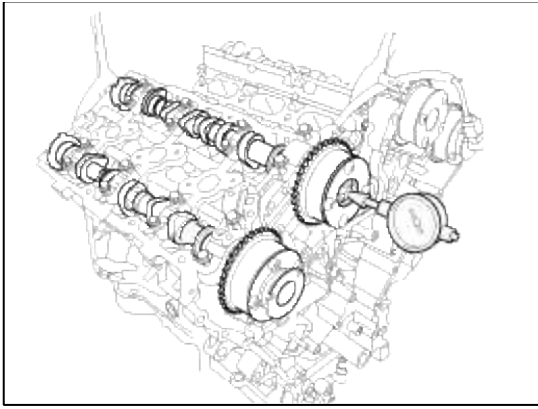

If the end play is greater than maximum, replace the camshaft. If necessary, replace cylinder head.

(3) Remove the camshafts.


CVVT Assembly

1. Inspect the CVVT assembly.


(1) Check that the CVVT assembly will not turn.

(2) Apply vinyl tape to the retard hole except the one indicated by the arrow in the illustration.

[Intake]

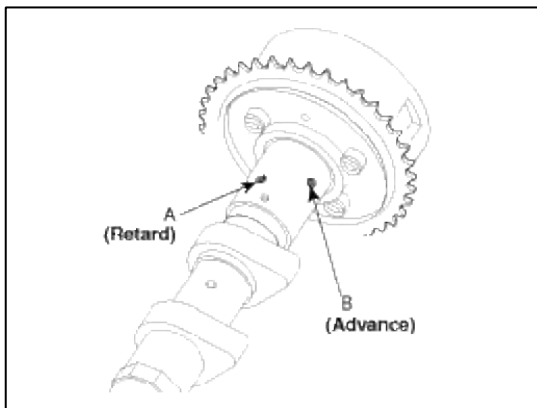

[Exhaust]

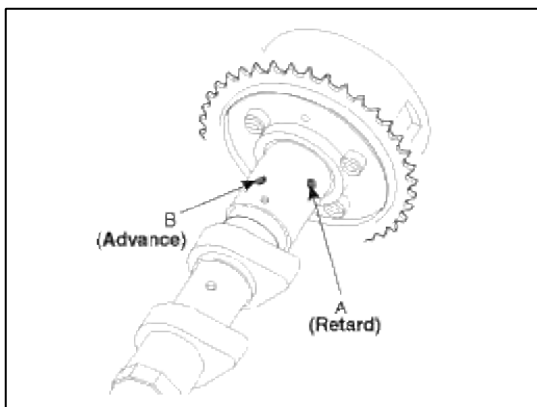

(3) Wrap tape around the tip of the air gun and apply air of approx. 150kpa(1.5kgf/cm², 21psi) to the port of the camshaft.


(Perform this in order to release the lock pin for the maximum delay angle locking.)

NOTE

When the oil splashes, wipe it off with a shop rag.

- (4) Under the condition of (3), turn the CVVT assembly to the advance angle side (the arrow marked direction in the illustration) with your hand.

Depending on the air pressure, the CVVT assembly will turn to the advance side without applying force by hand.

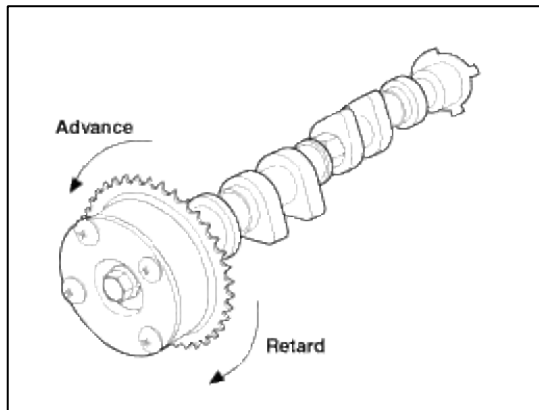

- (5) Except the position where the lock pin meets at the maximum delay angle, let the CVVT assembly turn back and forth and check the movable range and that there is no interference.

Standard: Movable smoothly in the range about 25°

- (6) Turn the CVVT assembly with your hand and lock it at the maximum delay angle position (clockwise).

Reassembly

NOTE


Thoroughly clean all parts to be assembled.
Before installing the parts, apply fresh engine oil to all sliding and rotating surfaces.
Replace oil seals with new ones.

1. Install the valves.

- (1) Using the SST(09222-3C100), push in a new valve stem seal.

NOTE

Do not reuse old valve stem seals.
Incorrect installation of the seal could result in oil leakage past the valve guides.

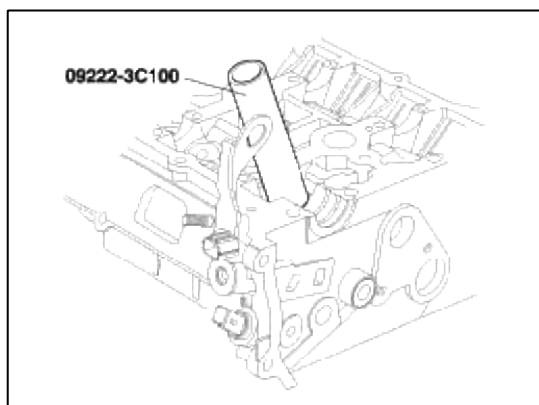


(2) Install the valve, valve spring and spring retainer.

NOTE

Place valve springs so that the side coated with enamel faces toward the valve spring retainer and then install the retainer.


(3) Using the SST(09222 - 3K000, 09222-3K100), compress the spring and install the retainer locks. After installing the valves, ensure that the retainer locks are correctly in place before releasing the valve spring compressor.

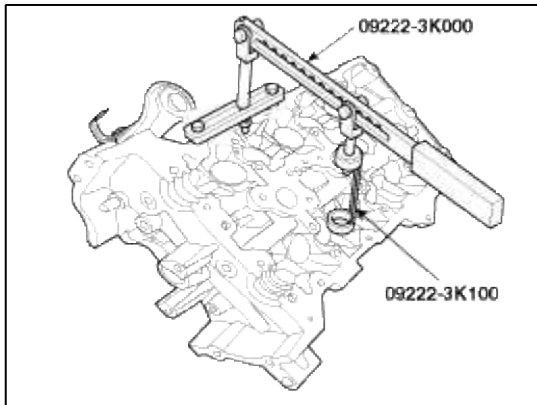

(4) Lightly tap the end of each valve stem two or three times with the wooden handle of a hammer to ensure proper seating of the valve and retainer lock.

2. Install the MLAs.

Check that the MLA rotates smoothly by hand.

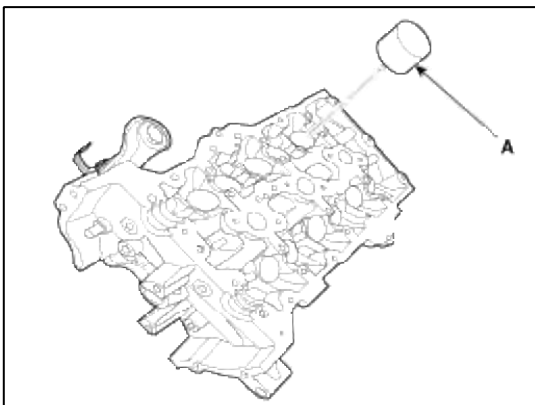



NOTE

MLA can be reinstalled in its original position.

3. Install the LH/RH intake oil control valve(OCV) (A).

Tightening torque :

9.8 ~ 11.8Nm(1.0 ~ 1.2kgf.m, 7.2 ~ 8.7lb-ft)

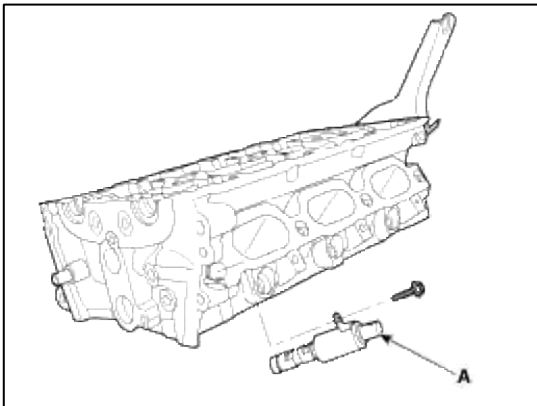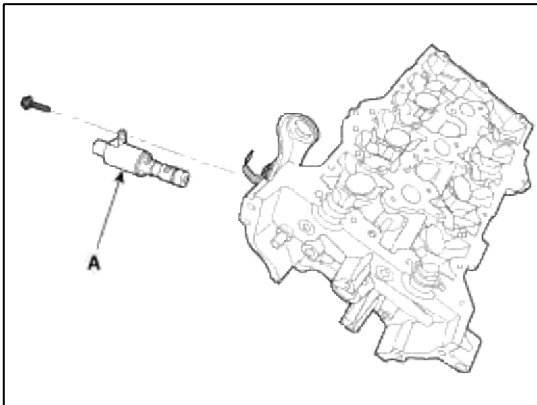

NOTE

- Install OCV with gray colored connector into RH bank.
- Install OCV with black colored connector into LH bank.

CAUTION

- Do not reuse the OCV when dropped.
- Keep the OCV clean.
- Do not hold the OCV sleeve during servicing.
- When the OCV is installed on the engine, do not move the engine while holding the OCV yoke.

Installation


NOTE

- Thoroughly clean all parts to be assembled.
- Always use a new head and manifold gasket.
- The cylinder head gasket is a metal gasket. Take care not to bend it.
- Rotate the crankshaft, set the No.1 piston at TDC.

1. Install the cylinder head.

A. The sealant locations on cylinder head and cylinder block must be free of engine oil and ETC.

- B. Apply sealant on cylinder block top face before assembling cylinder head gaskets.
The part must be assembled within 5 minutes after sealant was applied.

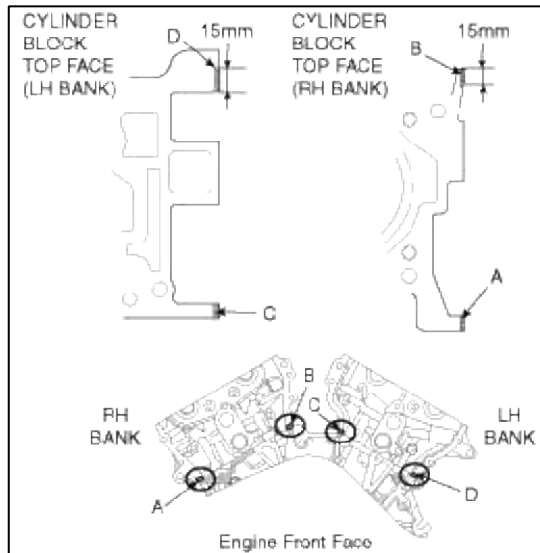

NOTE

Refer to below illustration to apply the sealant.

Bead width :


2.0~3.0 mm (0.078 ~ 0.118 in.)

Sealant locations :


1.0~1.5mm (0.039 ~ 0.059 in.) from block surface

Recommended sealant :


Liquid sealant TB 1217H (Hyundai Gray RTV)

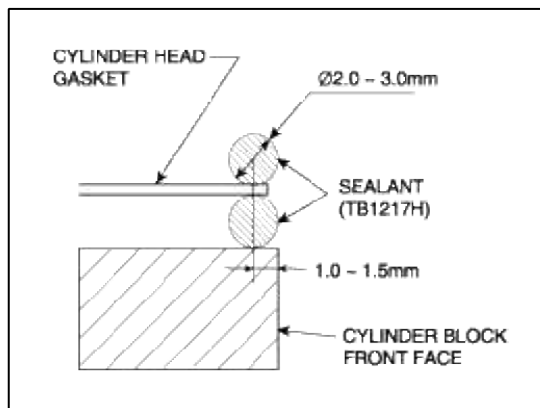

C. Apply sealant on cylinder head gaskets after assembling cylinder head gaskets on cylinder block.

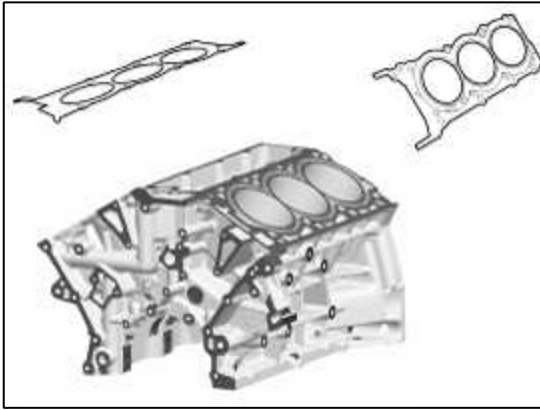


The part must be assembled within 5 minutes after sealant was applied.

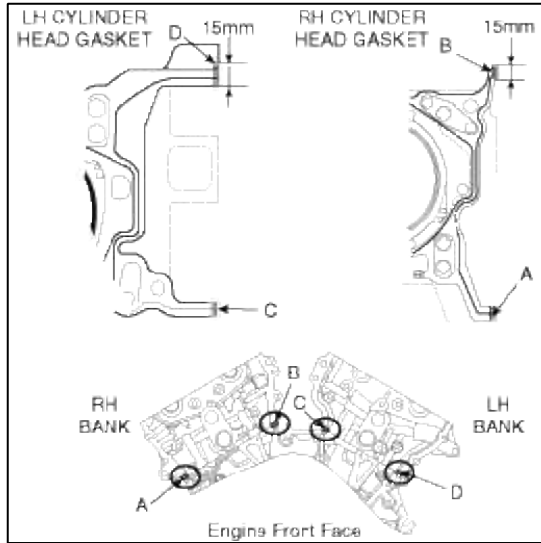

NOTE


Be careful of the installation direction.

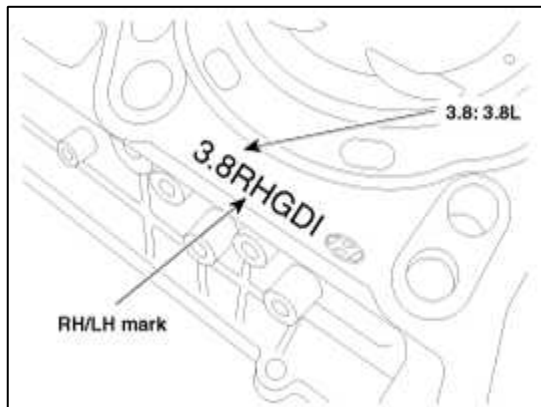

D. Install the cylinder head.

NOTE

Remove the extruded sealant after assembling cylinder heads.

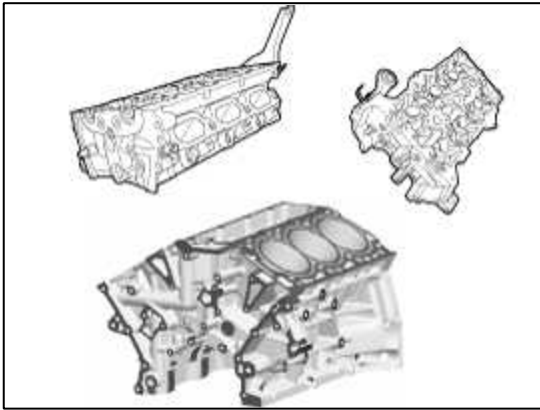

2. Install cylinder head bolts.

- (1) Do not apply engine oil on the threads and under the heads of the cylinder head bolts.
- (2) Using SST(09221-4A000), install and tighten the cylinder head bolts and plate washers, in several passes, in the sequence shown.


Tightening torque


Head bolt:

37.3~41.2Nm (3.8~4.2kgf.m, 27.5~30.4lb-ft) + 118~122° + 88~92°

Bolts (A):

18.6 ~ 23.5Nm (1.9 ~ 2.4kgf.m, 13.7 ~ 17.4lb-ft)

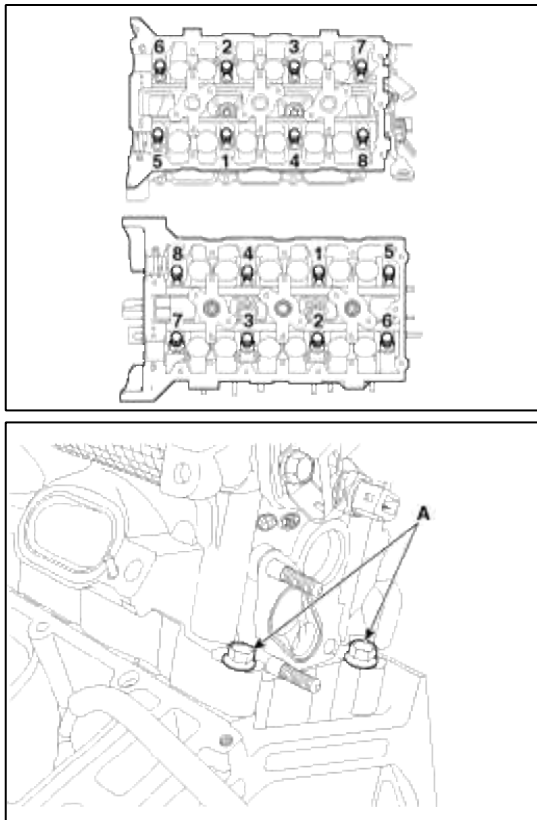


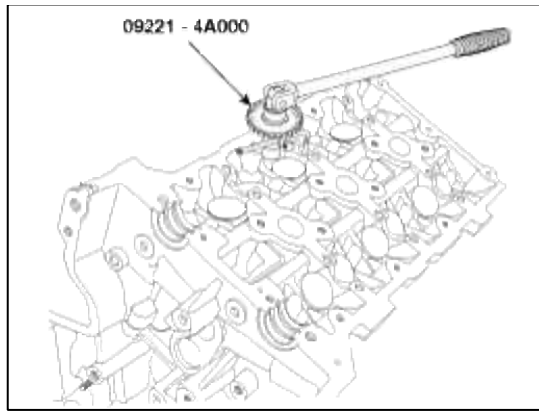

3. Install the CVVT assembly.

Tightening torque :


64.7 ~ 76.5N.m (6.6 ~ 7.8kgf.m, 47.7 ~ 56.4lb-ft)

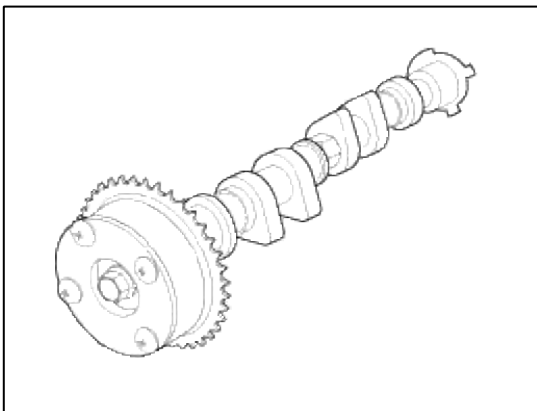


CAUTION


- Install camshaft-inlet to dowel pin of CVVT assembly.
At this time, attend not to be installed to oil hole of camshaft-inlet.
- Hold the hexagonal head wrench portion of the camshaft with a vise, and install the bolt and CVVT assembly.
- Do not rotate CVVT assembly when camshaft is installed to dowel pin of CVVT assembly.

4. Install the LH/RH camshaft assembly (A).

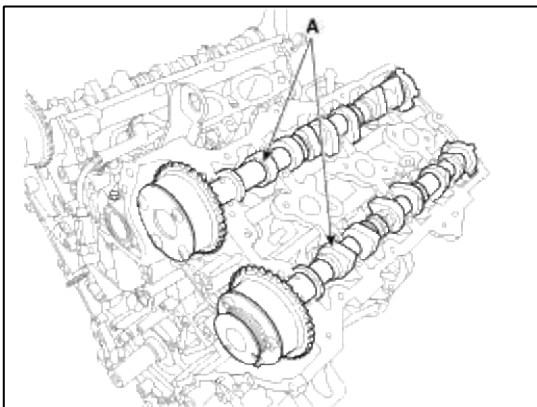

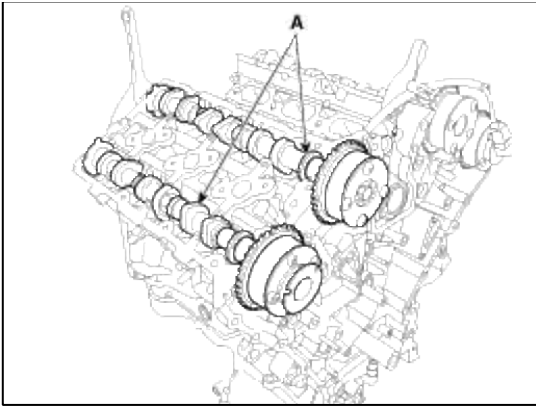
CAUTION


- Apply a light coat of engine oil on camshaft journals.
- Assemble the key groove of camshaft rear side to the same level of head top surface.
- Be careful the right, left bank, intake, exhaust side before assembling.

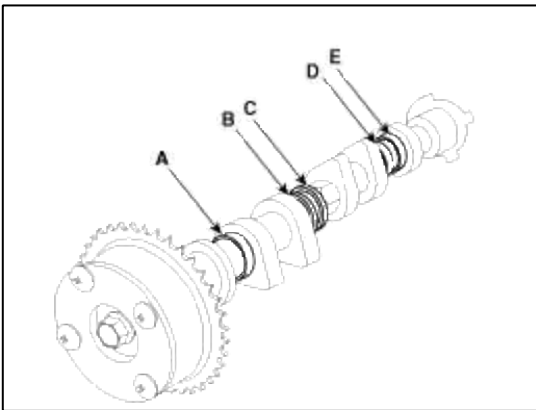Intake Camshaft


As for camshaft identification, refer to the table below.

Displacement	Outer diameter	
	LH	RH
3.8L	A : 30mm (1.1811in.)	A : 30mm (1.1811in.)
	B : 30mm (1.1811in.)	B : 30mm (1.1811in.)
	C : 30mm (1.1811in.)	C : 30mm (1.1811in.)
	D : 30mm (1.1811in.)	D : 27mm (1.0630in.)
	E : 27mm (1.0630in.)	E : 30mm (1.1811in.)

Exhaust Camshaft

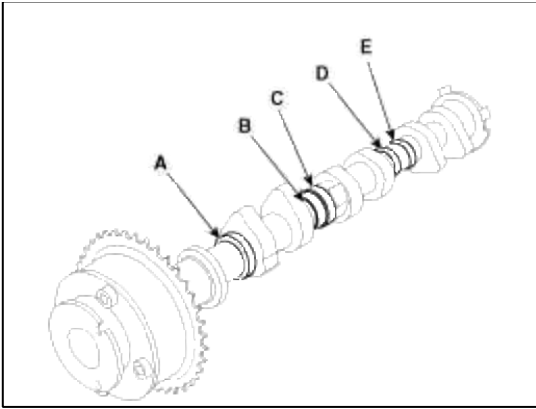

As for camshaft identification, refer to the table below.



Displacement	Outer diameter	
	LH	RH
3.8L	A : -	A : 27mm (1.0630in.)
	B : -	B : 27mm (1.0630in.)
	C : -	C : 30mm (1.1811in.)
	D : -	D : 30mm (1.1811in.)
	E : 31mm (1.2204in.)	E : -

5. Install the LH/RH camshaft bearing cap (A) and thrust bearing cap (B).

Tightening torque

1st step : 5.8N.m (0.6kgf.m, 4.3lb-ft)

2nd step : 9.8 ~ 11.8N.m (1.0 ~ 1.2kgf.m, 7.2 ~ 8.7lb-ft)

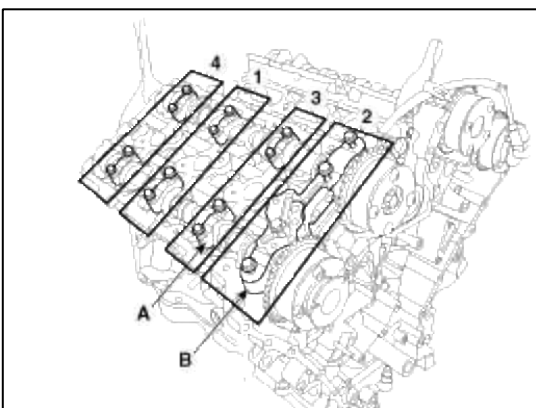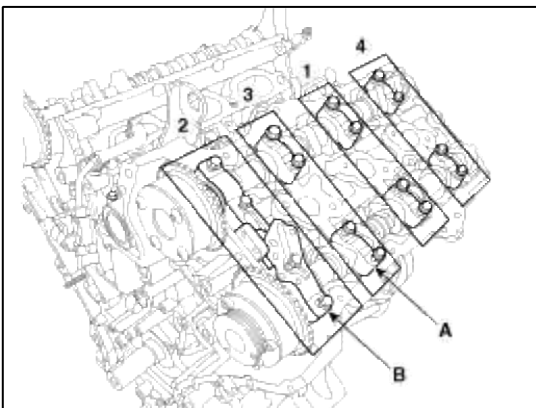


CAUTION

Be sure to install the thrust bearing cap bolts and the bearing cap bolts in the correct place.

NOTE

Be careful the right, left bank, intake, exhaust side before assembling.

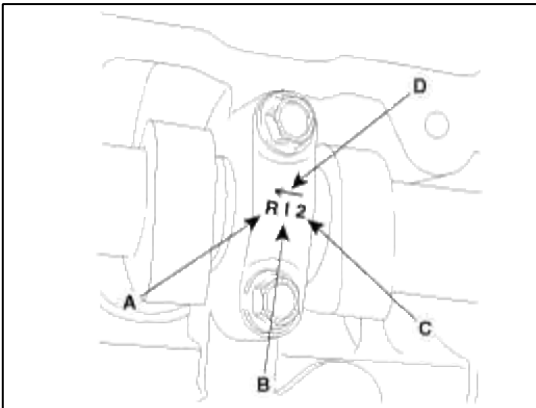

A : L(LH),R(RH)

B : I(Intake), None(Exhaust)

C : Journal number

D : Front mark


CAUTION


Rotate the crankshaft not to contact the valves to the pistons by making the pistons below 10mm(0.3937in.) from the top of cylinder block.

6. Install the LH/RH exhaust camshaft oil control valve(OCV) (A).

Tightening torque :

9.8 ~ 11.8N.m (1.0 ~ 1.2kgf.m, 7.2 ~ 8.7lb-ft)

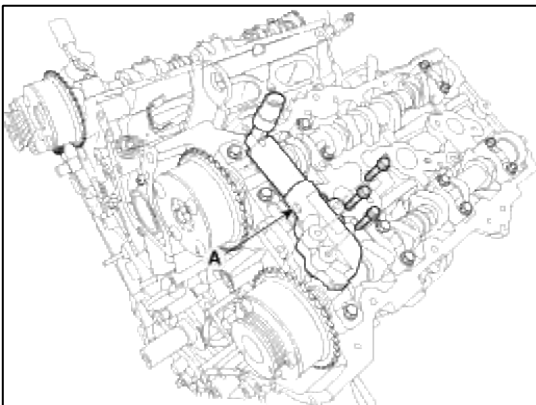


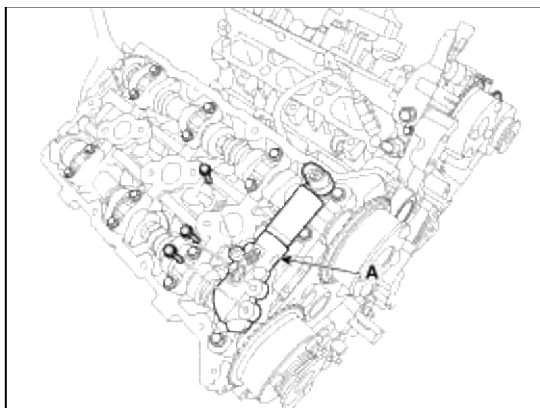

7. Install the fuel pump bracket (A).

Tightening torque :

18.6 ~ 23.5 N.m (1.9 ~ 2.4 kgf.m, 13.7 ~ 17.4 lb-ft)

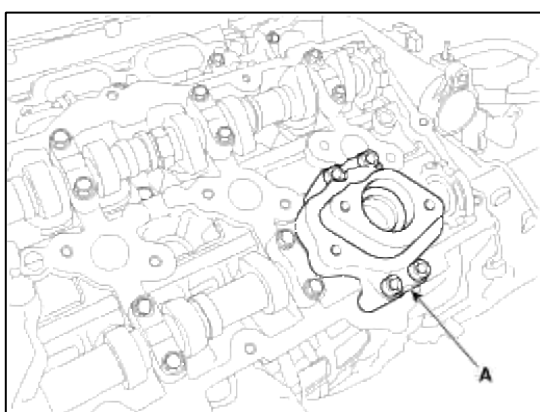

8. Install the water temperature control assembly and then connect the heater hoses. (Refer to Cooling system in this group)

9. Install the timing chain. (Refer to Timing system in this group)


10. Install the cylinder head cover. (Refer to Timing system in this group)

11. Install the intake and exhaust manifolds. (Refer to Intake and exhaust system in this group)


NOTE

- Refill engine oil.
- Clean the battery posts and cable terminals with sandpaper. Assemble and then apply grease to prevent corrosion.
- Inspect for fuel leakage.
 - After assembling the fuel line, turn on the ignition switch (do not operate the starter) so that the fuel pump runs for approximately two seconds and fuel line pressurizes.
 - Repeat this operation two or three times, then check for fuel leakage at any point in the fuel lines.
- Refill radiator and reservoir tank with engine coolant.
- Bleed air from the cooling system.
 - Start engine and let it run until it warms up. (Until the radiator fan operates 3 or 4 times.)
 - Turn Off the engine. Check the level in the radiator, add coolant if needed. This will allow trapped air to be removed from the cooling system.
 - Put radiator cap on tightly, then run the engine again and check for leaks.

Components

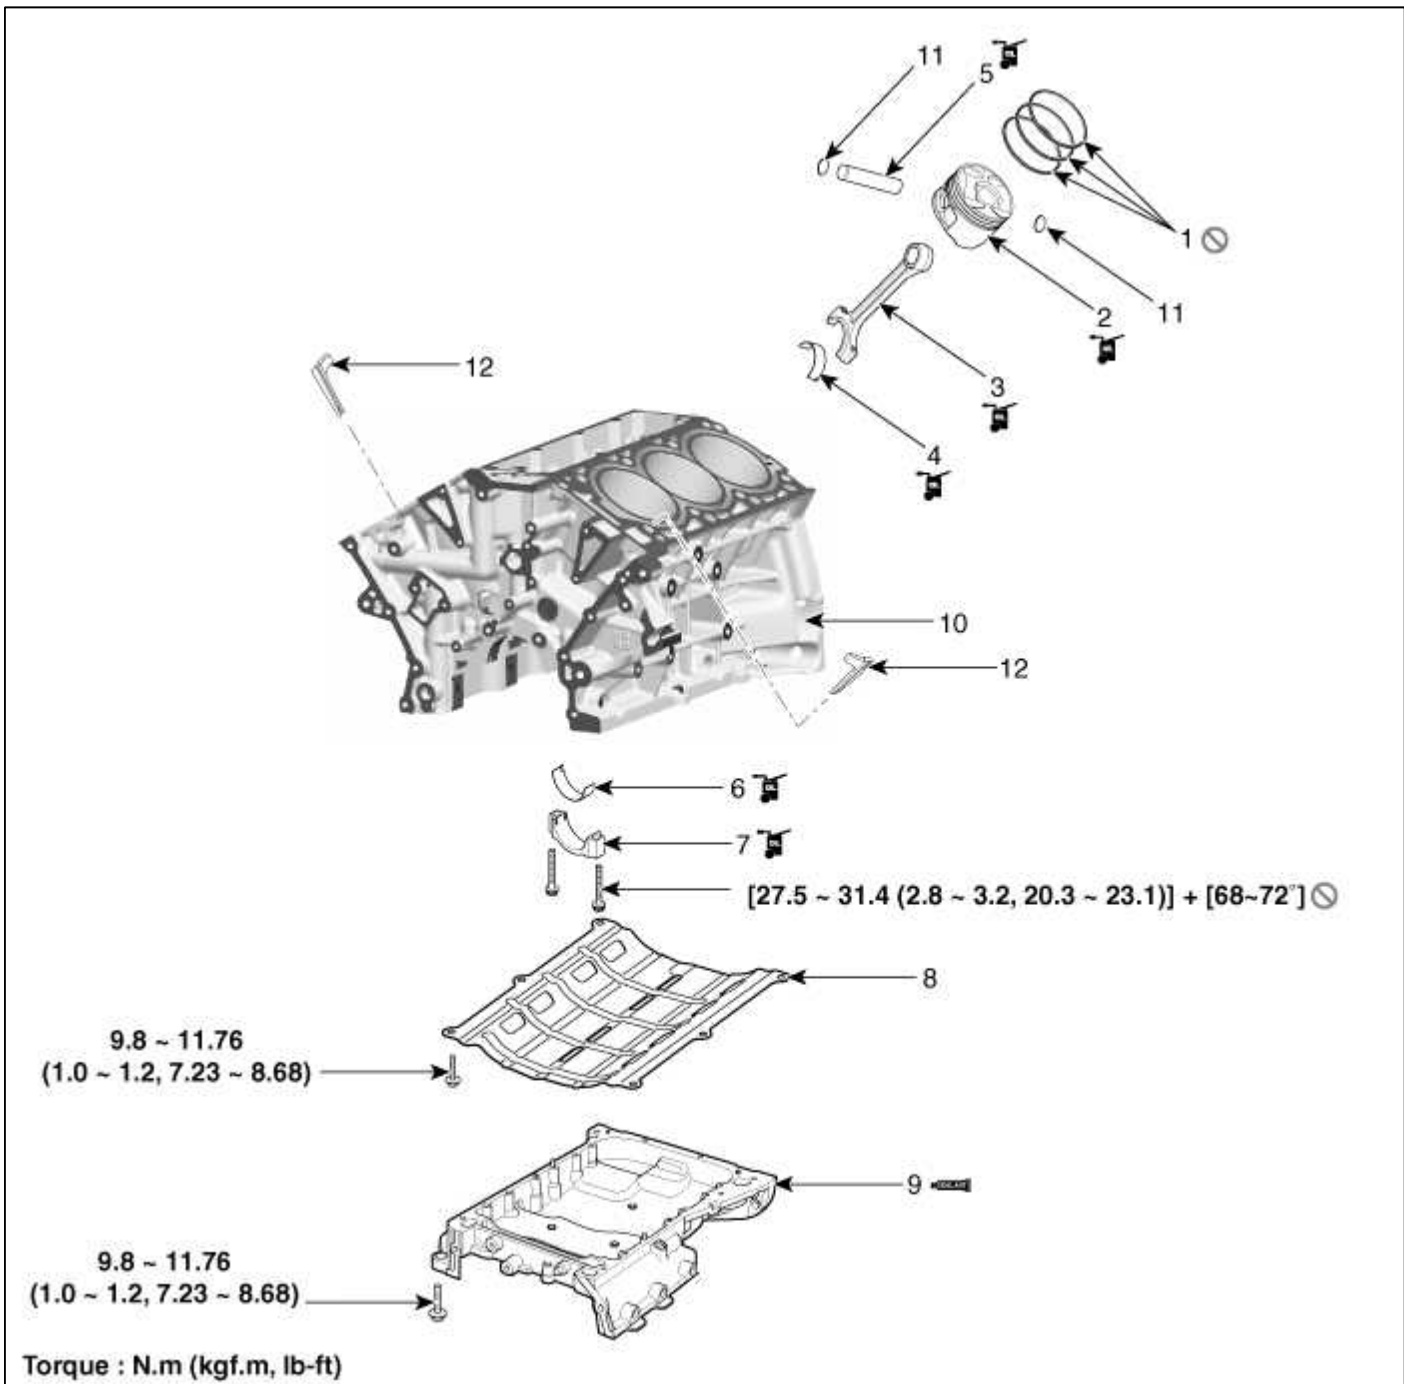

1. Piston ring	5. Piston pin	9. Upper oil pan
2. Piston	6. Connecting rod lower bearing	10. Cylinder block
3. Connecting rod	7. Connecting rod bearing cap	11. Snap ring
4. Connecting rod upper bearing	8. Baffle plate	12. Water jacket separator

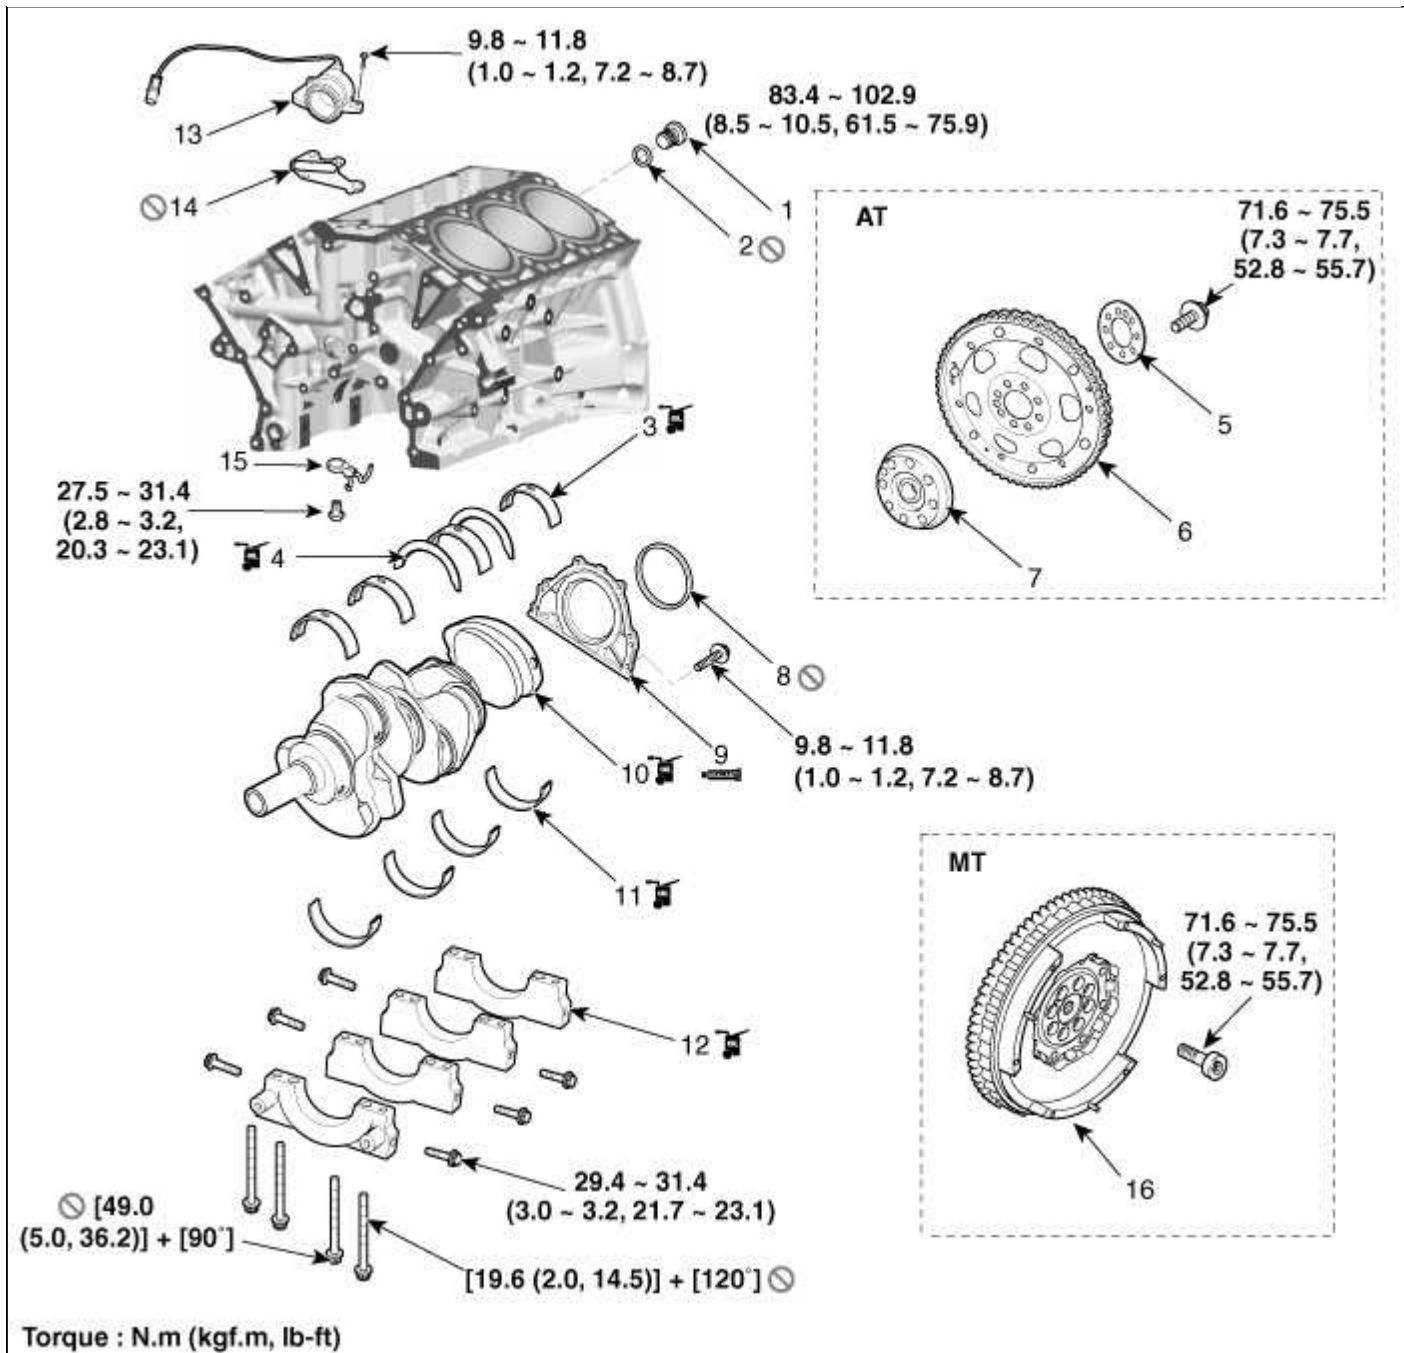

1. Plug bolt	7. Crankshaft adapter (AT)	13. Oil cover
2. Washer gasket	8. Rear oil seal	14. Oil cover gasket
3. Crank shaft upper bearing	9. Rear oil seal case	15. Piston cooling jet
4. Thrust bearing	10. Crankshaft	16. Dual mass flywheel (DMF) (MT)
5. Adapter plate (AT)	11. Crankshaft lower bearing	
6. Drive plate (AT)	12. Main bearing cap	

Engine Mechanical System > Cylinder Block > Repair procedures

Disassembly


CAUTION

- Use fender covers to avoid damaging painted surfaces.
- To avoid damage, unplug the wiring connectors carefully while holding the connector portion.


NOTE

- Mark all wiring and hoses to avoid misconnection.
- Inspect the timing belt before removing the cylinder head.
- Turn the crankshaft pulley so that the No.1 piston is at top dead center.
- Engine removal is required for this procedure.


1. Remove the engine assembly from the vehicle. (Refer to Engine and transmission assembly in this group)
2. Install the engine to engine stand for disassembly.
3. Remove the intake manifold and exhaust manifold. (Refer to Intake and exhaust system in this group)
4. Remove the timing chain. (Refer to Timing system in this group)
5. Remove the water temperature control assembly. (Refer to Cooling system in this group)
6. Remove the cylinder head. (Refer to Cylinder head in this group)
7. Remove the oil pump. (Refer to Lubrication system in this group)
8. Remove the oil filter assembly. (Refer to Lubrication system in this group)
9. Remove the drive plate (A) and adapter plate (B). (AT)

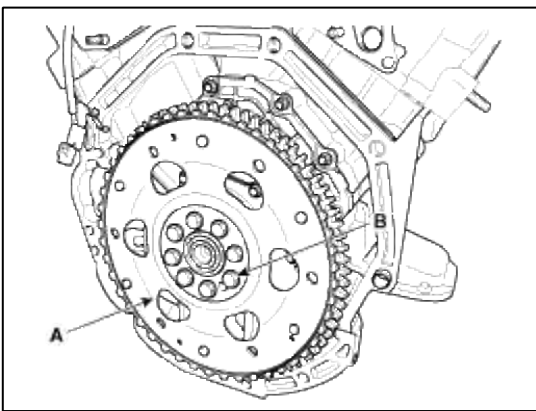


10. Remove the crankshaft adapter (A). (AT)

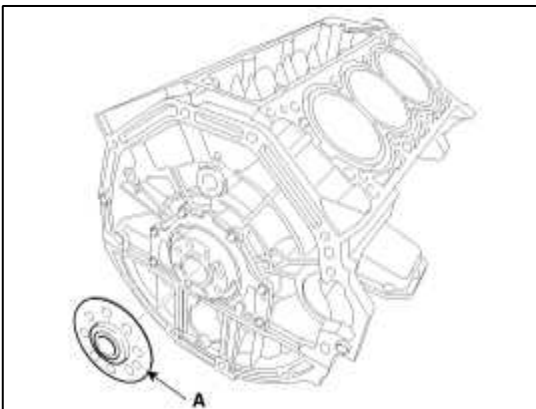


11. Remove the dual mass flywheel (DMF) (A). (MT)

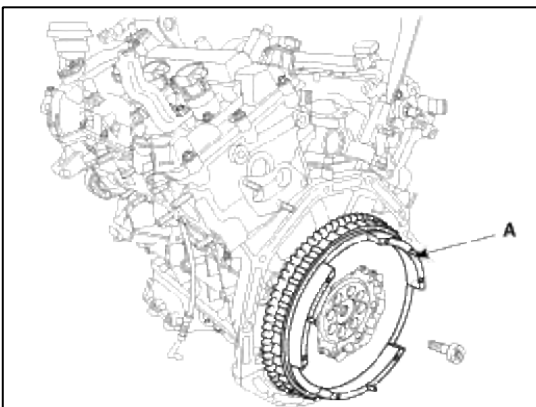



12. Remove the water jacket separator (A).

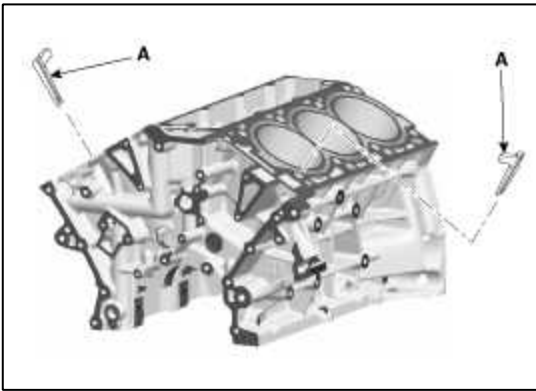


13. Remove the oil cover (A) and the gasket (B).

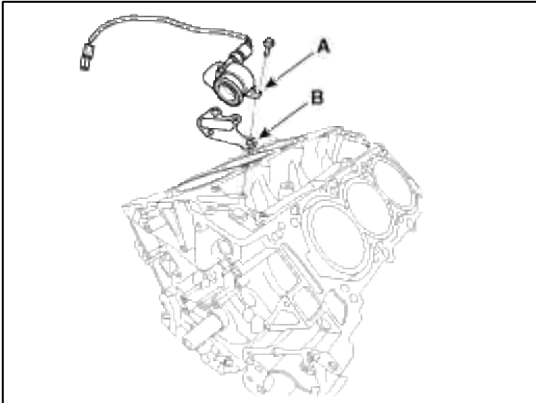


14. Remove the knock sensor (A).

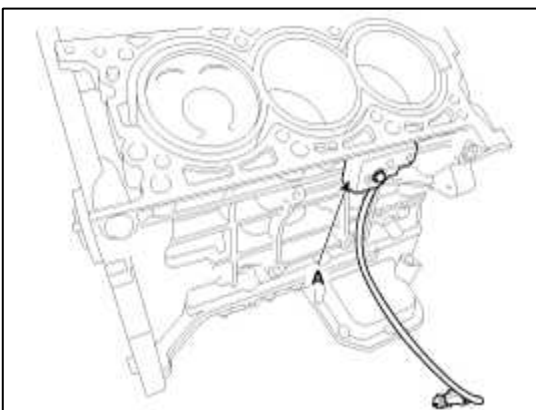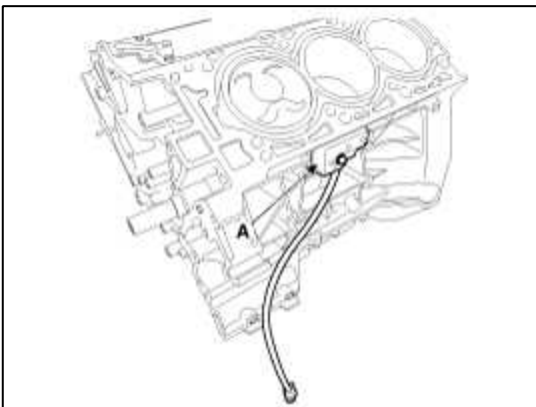


15. Remove the upper oil pan (A).

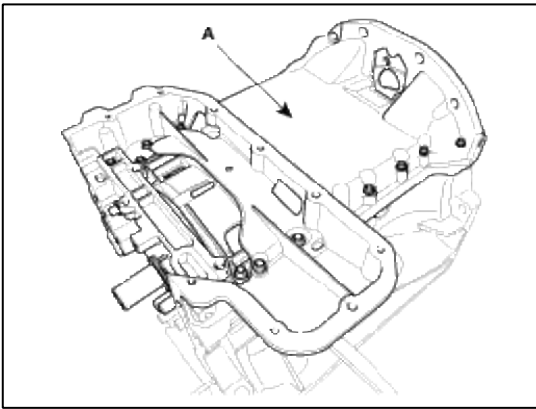


16. Remove the baffle plate (A).

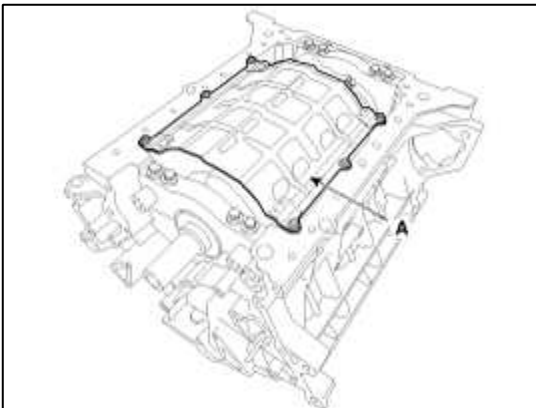

17. Remove the rear oil seal case (A).

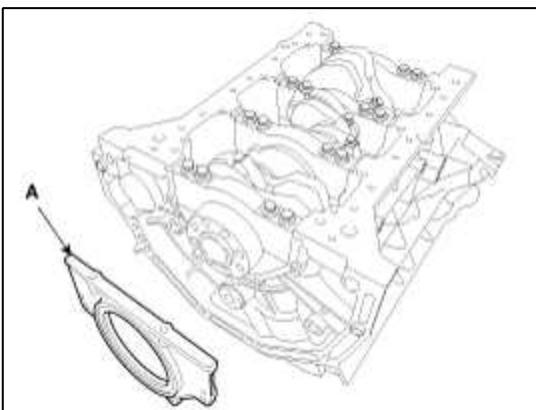

18. Remove the plug bolt (A) and the washer gasket (B).

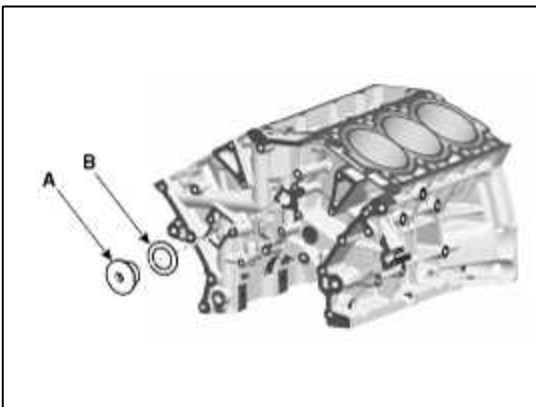

19. Check the connecting rod end play.

20. Check the connecting rod cap oil clearance.

21. Remove the piston and connecting rod assemblies.

(1) Using a ridge reamer, remove all the carbon from the top of the cylinder.

(2) Push the piston, connecting rod assembly and upper bearing through the top of the cylinder block.


NOTE

- Keep the bearings, connecting rod and cap together.
- Arrange the piston and connecting rod assemblies in the correct order.

22. Remove the crankshaft main bearing cap and check oil clearance.

23. Check the crankshaft end play.


24. Lift the crankshaft (A) out of engine, being careful not to damage journals.

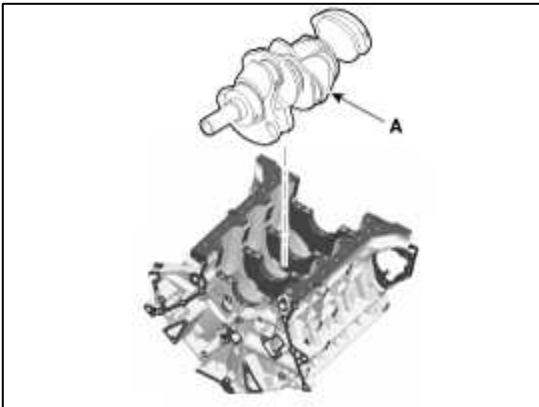

NOTE

Arrange the main bearings and thrust bearings in the correct order.

25. Remove the oil jets (A).

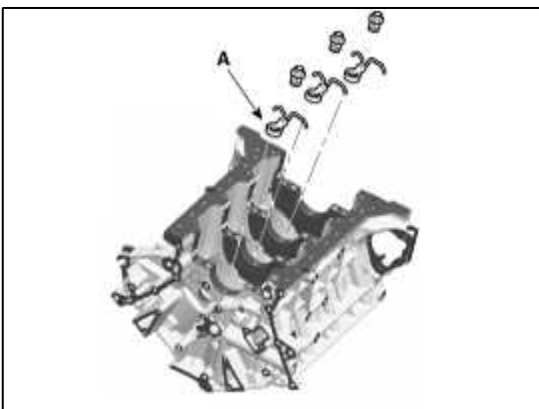

26. Remove the piston rings.

(1) Using a piston ring expander, remove the 2 compression rings.

(2) Remove oil ring and coil spring by hand.

NOTE

Arrange the piston rings in the correct order only.

27. Disconnect connecting rod from piston. Remove the snap ring at both ends of piston pin.

And push the piston pin to separate from piston and connecting rod.


Inspection

Connecting Rod And Crankshaft

1. Check the connecting rod end play.

Using a feeler gauge, measure the end play while moving the connecting rod back and forth.

Standard end play : 0.1~ 0.25mm(0.004 ~ 0.010in.)

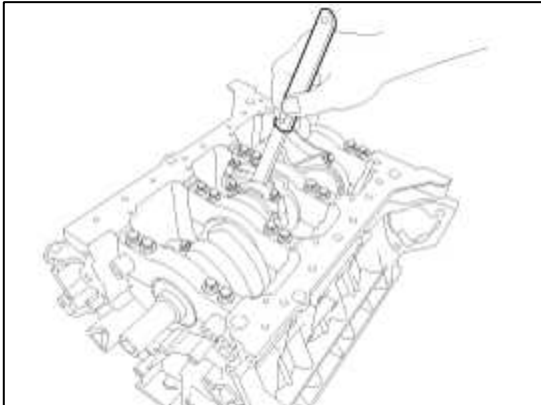

A. If out-of-tolerance, install a new connecting rod.

B. If still out-of-tolerance, replace the crankshaft.

2. Check the connecting rod bearing oil clearance.

(1) Check the matchmarks on the connecting rod and cap are aligned to ensure correct reassembly.

(2) Remove 2 connecting rod cap bolts.

(3) Remove the connecting rod cap and bearing half.


(4) Clean the crank pin and bearing.

(5) Place plastigage across the crank pin.

(6) Reinstall the bearing half and cap, and torque the bolts.

Tightening torque :

27.5 ~ 31.4N.m (2.8 ~ 3.2kgf.m, 20.3 ~ 23.1 lb-ft) + 68~72°

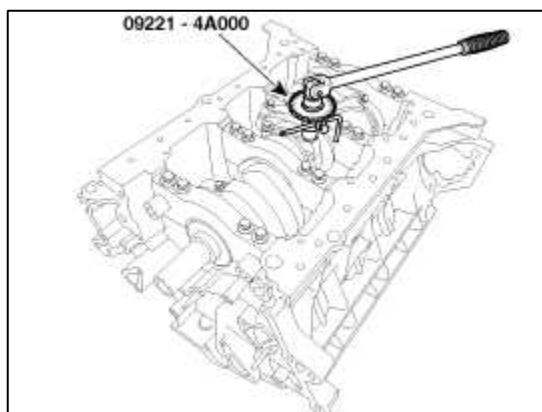

NOTE


Do not turn the crankshaft.

(7) Remove the bolts, connecting rod cap and bearing half.

(8) Measure the plastigage at its widest point.

Standard oil clearance :

0.044 ~ 0.062mm (0.0017 ~ 0.0024in.)

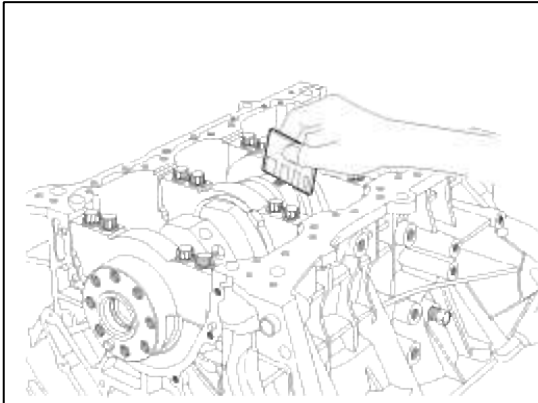

(9) If the plastigage measures too wide or too narrow, remove the upper half of the bearing, install a new, complete bearing with the same color mark (select the color as shown in the next column), and recheck the clearance.

CAUTION

Do not file, shim, or scrape the bearings or the caps to adjust clearance.

(10) If the plastigage shows the clearance is still incorrect, try the next larger or smaller bearing (the color listed above or below that one), and check clearance again.


NOTE

If the proper clearance cannot be obtained by using the appropriate larger or smaller bearings, replace the crankshaft and start over.

CAUTION

If the marks are indecipherable because of an accumulation of dirt and dust, do not scrub them with a wire brush or scraper. Clean them only with solvent or detergent.

Connecting Rod Mark Location

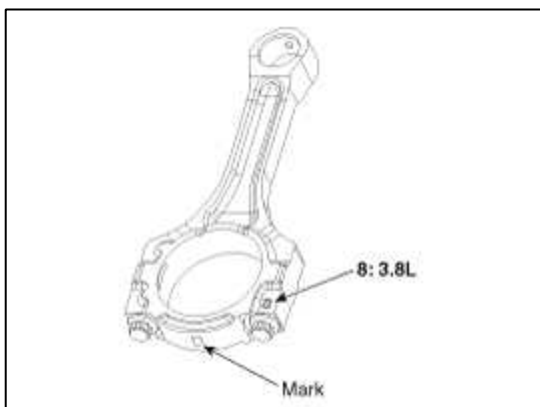


Identification Of Connecting Rod

Class	Mark	Inside Diameter
0	a	58.000 ~ 58.006mm (2.2834 ~ 2.2837in.)
1	b	58.006 ~ 58.012mm (2.2837 ~ 2.2839in.)
2	c	58.012 ~ 58.018mm (2.2839 ~ 2.2842in.)

Crankshaft Pin Mark Location


Identification Of Crankshaft

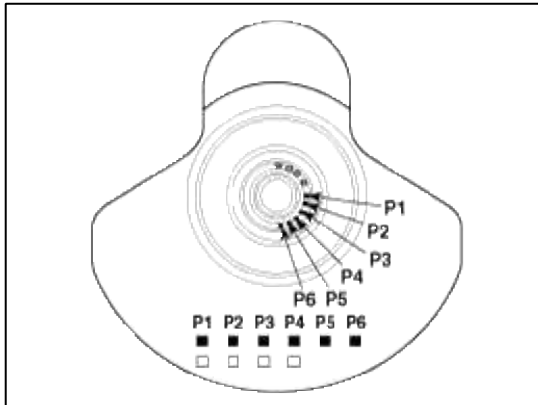

Discrimination Of Crankshaft

Class	Mark	Outside Diameter Of Pin
I	1 or A	54.966 ~ 54.972mm (2.1640 ~ 2.1642in.)
II	2 or B	54.960 ~ 54.966mm (2.1638 ~ 2.1640in.)
III	3 or C	54.954 ~ 54.960mm (2.1635 ~ 2.1638in.)

Place Of Identification Mark (Connecting Rod Bearing)

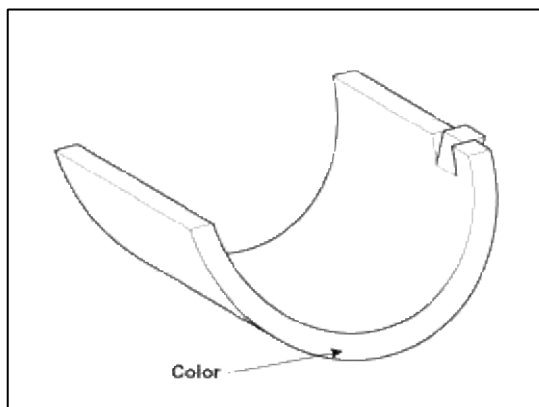

Identification Of Connecting Rod Bearing

Class	Mark	Thickness Of Bearing
E	BLUE	1.511 ~ 1.514mm (0.0595 ~ 0.0596in.)
D	BLACK	1.508 ~ 1.511mm (0.0594 ~ 0.0595in.)
C	RED	1.505 ~ 1.508mm (0.0593 ~ 0.0594in.)
B	GREEN	1.502 ~ 1.505mm (0.0591 ~ 0.0593in.)
A	YELLOW	1.499 ~ 1.502mm (0.0590 ~ 0.0591in.)

(11) Selection

		Connecting Rod Identification Mark		
		0(a)	1(b)	2(c)
Crankshaft Identification Mark	1 or A	A (YELLOW)	B (GREEN)	C (RED)
	2 or B	B (GREEN)	C (RED)	D (BLACK)
	3 or C	C (RED)	D (BLACK)	E (BLUE)

3. Check the crankshaft bearing oil clearance.

- (1) To check main bearing-to-journal oil clearance, remove the main bearing caps and bearing halves.
- (2) Clean each main journal and bearing half with a clean shop towel.
- (3) Place one strip of plastigage across each main journal.
- (4) Reinstall the bearings and caps, then torque the bolts.


Tightening torque :

49.0Nm(5.0 kgf.m, 36.2lb-ft) + 90° (No. 1 ~ 8)

19.6Nm(2.0 kgf.m, 14.5lb-ft)+ 120° (No. 9 ~ 16)

29.4 ~ 31.4Nm(3.0 ~ 3.2 kgf.m, 21.7 ~ 23.1lb-ft)

(No. 17 ~ 24)

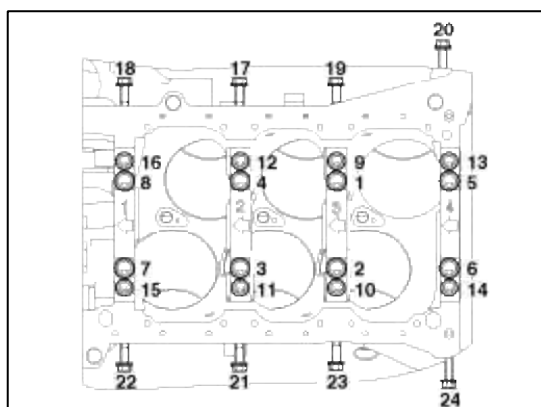


NOTE

Do not turn the crankshaft.

- (5) Remove the cap and bearing again, and measure the widest part of the plastigage.

Standard oil clearance :

0.022 ~ 0.040mm (0.0009 ~ 0.0016in.)

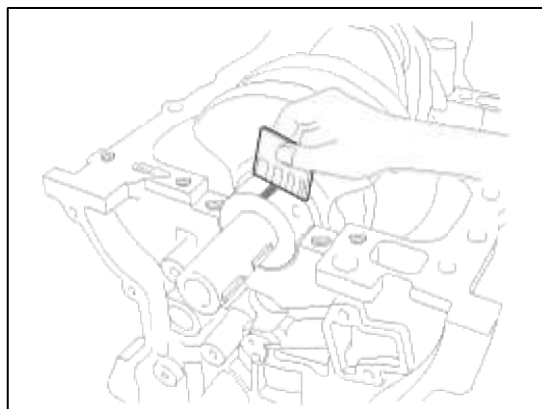

- (6) If the plastigage measures too wide or too narrow, remove the upper half of the bearing, install a new, complete bearing with the same color mark (select the color as shown in the next column), and recheck the clearance.

CAUTION

Do not file, shim, or scrape the bearings or the caps to adjust clearance.

- (7) If the plastigage shows the clearance is still incorrect, try the next larger or smaller bearing (the color listed above or below that one), and check clearance again.

NOTE

If the proper clearance cannot be obtained by using the appropriate larger or smaller bearings, replace the crankshaft and start over.


CAUTION

If the marks are indecipherable because of an accumulation of dirt and dust, do not scrub them with a wire brush or scraper. Clean them only with solvent or detergent.

Crankshaft bore mark location

Letters have been stamped on the block as a mark for the size of each of the 4 main journal bores.

Use them, and the numbers or bar stamped on the crank (marks for main journal size), to choose the correct bearings.

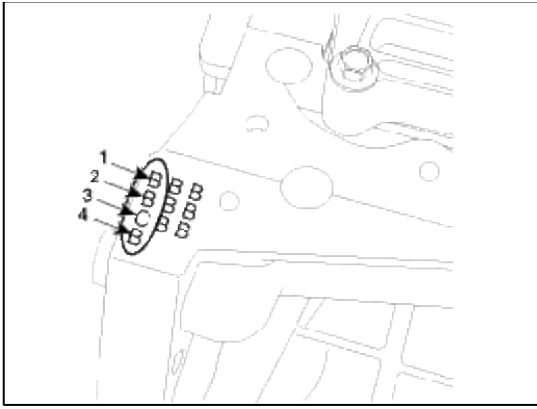


Discrimination Of Cylinder Block

Class	Mark	Inside Diameter
a	A	73.500 ~ 73.506mm (2.8937 ~ 2.8939in.)
b	B	73.506 ~ 73.512mm (2.8939 ~ 2.8942in.)
c	C	73.512 ~ 73.518mm (2.8942 ~ 2.8944in.)

Crankshaft Journal Mark Location


Discrimination Of Crankshaft

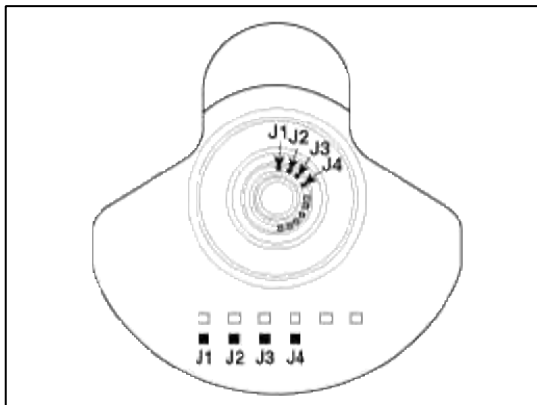

Discrimination Of Crankshaft

Class	Mark	Outside Diameter Of Journal
I	1 or A	68.954 ~ 68.960mm (2.7147 ~ 2.7150in.)
II	2 or B	68.948 ~ 68.954mm (2.7145 ~ 2.7147in.)
III	3 or C	68.942 ~ 68.948mm (2.7142 ~ 2.7145in.)

Place Of Identification Mark (Crankshaft Bearing)

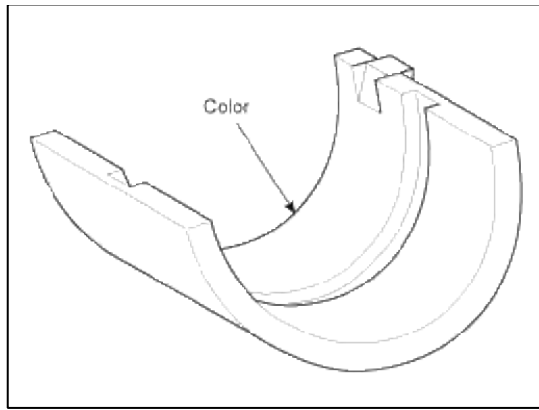

Discrimination Of Crankshaft Bearing

Class	Mark	Thickness Of Bearing
E	BLUE	2.277 ~ 2.280mm (0.0896 ~ 0.0897in.)
D	BLACK	2.274 ~ 2.277mm (0.0895 ~ 0.0896in.)
C	RED	2.271 ~ 2.274mm (0.0894 ~ 0.0895in.)
B	GREEN	2.268 ~ 2.271mm (0.0893 ~ 0.0894in.)
A	YELLOW	2.265 ~ 2.268mm (0.0892 ~ 0.0893in.)

Selection


		Crankshaft Bore Identification Mark		
		a(A)	b(B)	c(C)
Crankshaft Identification Mark	1 or A	A (YELLOW)	B (GREEN)	C (RED)
	2 or B	B (GREEN)	C (RED)	D (BLACK)
	3 or C	C (RED)	D (BLACK)	E (BLUE)

4. Check crankshaft end play.

Using a dial indicator, measure the thrust clearance while prying the crankshaft back and forth with a screwdriver.

Standard end play :

0.10 ~ 0.28mm (0.0039 ~ 0.0110in.)

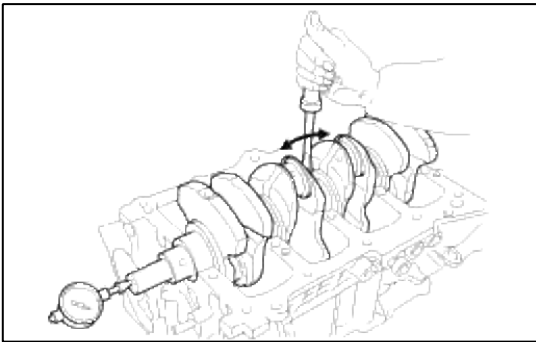

If the end play is greater than maximum, replace the thrust bearings as a set.

Thrust bearing thickness :

2.41 ~ 2.45mm(0.0949 ~ 0.0964in.)

5. Inspect main journals and crank pins


Using a micrometer, measure the diameter of each main journal and crank pin.

Main journal diameter :

68.942 ~ 68.960mm (2.7142 ~ 2.7149in.)

Crank pin diameter :

54.954 ~ 54.972mm (2.1635 ~ 2.1642in.)

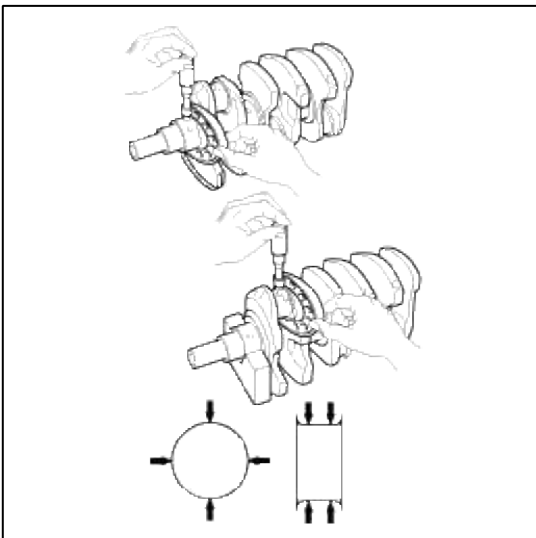

Connecting Rods

1. When reinstalling, make sure that cylinder numbers put on the connecting rod and cap at disassembly match. When a new connecting rod is installed, make sure that the notches for holding the bearing in place are on the same side.
2. Replace the connecting rod if it is damaged on the thrust faces at either end. Also if step wear or a severely rough surface of the inside diameter of the small end is apparent, the rod must be replaced as well.

- Using a connecting rod aligning tool, check the rod for bend and twist. If the measured value is close to the repair limit, correct the rod by a press. Any connecting rod that has been severely bent or distorted should be replaced.
-

Allowable bend of connecting rod :

0.05mm / 100mm (0.0020 in./3.94 in.) or less

Allowable twist of connecting rod :

0.1mm / 100mm (0.0039 in./3.94 in.) or less


Cylinder Block

- Remove the gasket material.
Using a gasket scraper, remove all the gasket material from the top surface of the cylinder block.
 - Clean the cylinder block
Using a soft brush and solvent, thoroughly clean the cylinder block.
 - Inspect the top surface of the cylinder block for flatness.
Using a precision straight edge and feeler gauge, measure the surface contacting the cylinder head gasket for warpage.
-

Flatness of cylinder block gasket surface

Standard : Less than 0.05mm(0.0020 in.),

Less than 0.02mm(0.0008in.) / 150 x 150

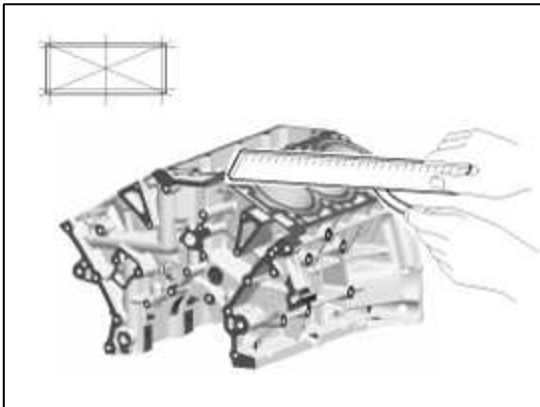

- Inspect cylinder bore diameter
Visually check the cylinder for vertical scratches.
If deep scratches are present, replace the cylinder block.


5. Inspect cylinder bore diameter

Using a cylinder bore gauge, measure the cylinder bore diameter at position in the thrust and axial directions.


Standard diameter :

[3.0L / 3.3L] 92.00 ~ 92.03mm (3.6220 ~ 3.6232in.)

[3.8L] 96.00 ~ 96.03mm (3.7795 ~ 3.7807in.)

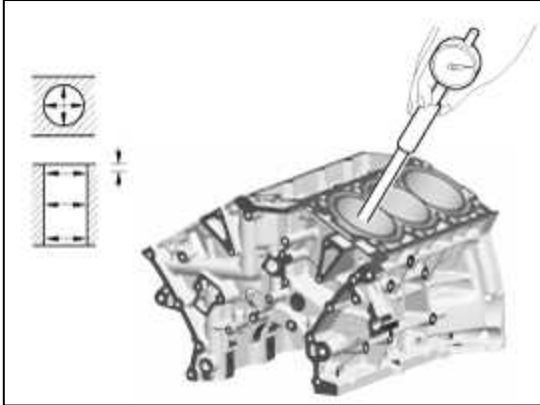


6. Check the cylinder bore size code on the cylinder block.

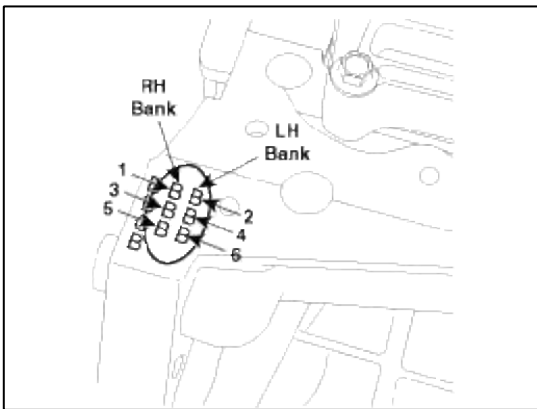

Class	Size code	Cylinder bore inner diameter
A	A	96.00~96.01mm (3.7795~3.7799in.)
B	B	96.01~96.02mm (3.7799~3.7803in.)
C	C	96.02~96.03mm (3.7803~3.7807in.)

Maximum limit size : 96.28mm (3.7906in.)

7. Check the piston size code(A) and the front mark(B) on the piston top face.

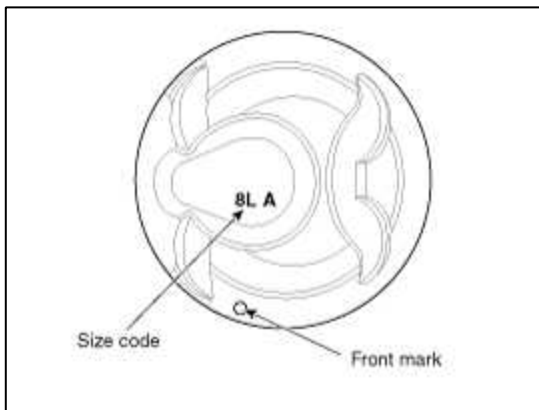

Class	Size code	Piston outer diameter
A	A	95.96~95.97mm (3.7779~3.7783in.)
B	B	95.97~95.98mm (3.7783~3.7787in.)
C	C	95.98~95.99mm (3.7787~3.7791in.)

8. Select the piston related to cylinder bore class.

Clearance : 0.03 ~ 0.05mm(0.0012 ~ 0.0020in.)

Boring Cylinder

1. Oversize pistons should be selected according to the largest bore cylinder.

Identification Mark	Size
0.1	0.1 mm (0.004 in)
0.25	0.25 mm (0.010 in)

NOTE

The size of piston is stamped on top of the piston.

2. Measure the outside diameter of the piston to be used.
3. According to the measured O.D(Outer Diameter), calculate the new bore size.

New bore size = piston O.D + 0.03 to 0.05mm (0.0012 to 0.0020in) (clearance between piston and cylinder) - 0.01mm (0.0004in) (honing margin.)

4. Bore each of the cylinders to the calculated size.

CAUTION

To prevent distortion that may result from temperature rise during honing, bore the cylinder holes in the firing order.

5.hone the cylinders, finishing them to the proper dimension (piston outside diameter + gap with cylinder).

6. Check the clearance between the piston and cylinder.
-

Standard : 0.03 ~ 0.05mm (0.0012 ~ 0.0020in)

NOTE

When boring the cylinders, finish all of the cylinders to the same oversize. Do not bore only one cylinder to the oversize.

Piston And Rings

1. Clean piston
 - (1) Using a gasket scraper, remove the carbon from the piston top.
 - (2) Using a groove cleaning tool, clean the piston ring grooves.
 - (3) Using solvent and a brush, thoroughly clean the piston.


NOTE

Do not use a wire brush.

2. The standard measurement of the piston outside diameter is taken 12mm (0.4724in.) from the bottom of the piston.
-

Standard diameter

95.96 ~ 95.99mm (3.7779 ~ 3.7791in.)

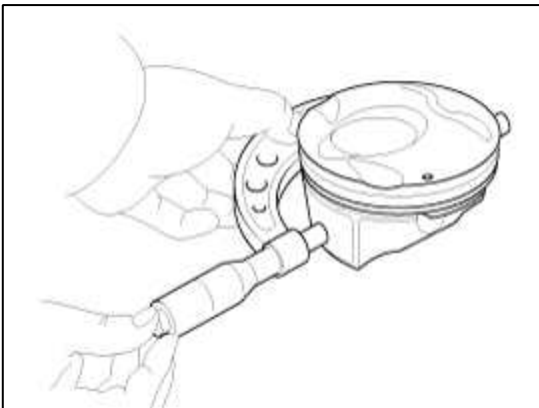

3. Calculate the difference between the cylinder bore diameter and the piston diameter.
-

Piston-to-cylinder clearance :

0.03 ~ 0.05mm (0.0012 ~ 0.0020in.)

4. Inspect the piston ring side clearance.

Using a feeler gauge, measure the clearance between new piston ring and the wall of the ring groove.

Piston ring side clearance

Standard

No.1 : 0.04 ~ 0.08mm (0.0016 ~ 0.0031in.)

No.2 : 0.04 ~ 0.08mm (0.0016 ~ 0.0031in.)


Oil ring : 0.02~0.065mm (0.0008~0.0026in.)

Limit

No.1 : 0.1mm (0.004in.)

No.2 : 0.1mm (0.004in.)

Oil ring : 0.2mm (0.008in.)

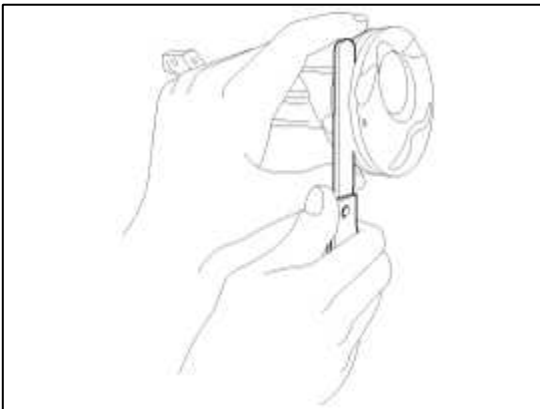

If the clearance is greater than maximum, replace the piston.

5. Inspect piston ring end gap.

To measure the piston ring end gap, insert a piston ring into the cylinder bore. Position the ring at right angles to the cylinder wall by gently pressing it down with a piston. Measure the gap with a feeler gauge. If the gap exceeds the service limit, replace the piston ring. If the gap is too large, recheck the cylinder bore diameter against the wear limits. If the bore is over the service limit, the cylinder block must be replaced.

Piston ring end gap

Standard

No.1 : 0.17 ~ 0.32mm (0.0067 ~ 0.0126in.)

No.2 : 0.32~0.047mm (0.0126~0.0185in.)


Oil ring : 0.2~0.5mm (0.0078~0.0196in.)

Limit

No.1 : 0.6mm (0.0236in.)

No.2 : 0.7mm (0.0275in.)

Oil ring : 0.8mm (0.0315in.)

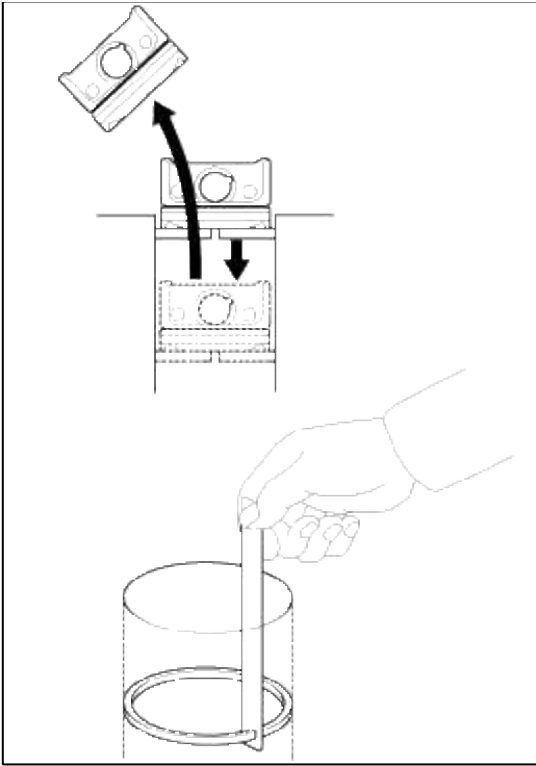


Piston Pins

1. Measure the diameter of the piston pin.

Piston pin diameter :

21.097 ~ 22.000mm (0.8305 ~ 0.8661in.)

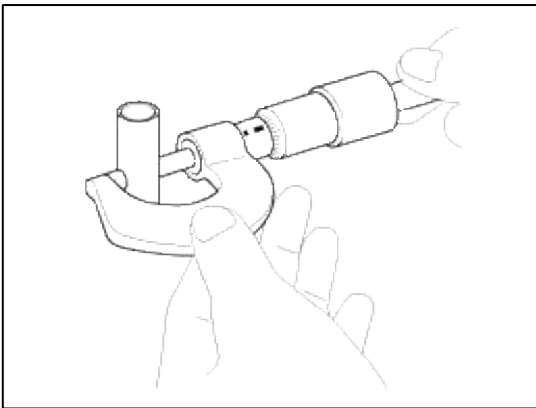

2. Measure the piston pin-to-piston clearance.

Piston pin-to-piston clearance :

0.004 ~ 0.013mm (0.00016 ~ 0.00051in.)

3. Check the difference between the piston pin diameter and the connecting rod small end diameter.

Piston pin-to-connecting rod interference :

0.005 ~ 0.019mm (0.0002 ~ 0.0007in.)

Reassembly

NOTE

- Thoroughly clean all parts to be assembled.
- Before installing the parts, apply fresh engine oil to all sliding and rotating surfaces.
- Replace all gaskets, O-rings and oil seals with new parts.


1. Assemble the piston and the connecting rod.

- (1) Install the piston pin with snap ring 2EA and check the snap ring assembly thoroughly.
- (2) The piston front mark and the connecting rod front mark must face the timing belt side of the engine.



2. Install the piston rings.


- (1) Install the 2 oil rings and coil spring by hand.
- (2) Using a piston ring expander, install the 2 compression rings with the code mark facing upward.
- (3) Position the piston rings so that the ring ends are as shown.

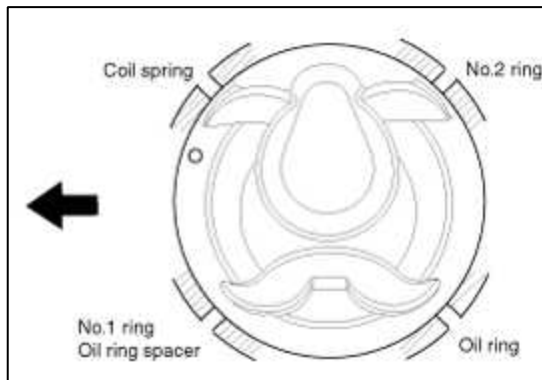

3. Install the oil jets (A).


Tightening torque :

27.5 ~ 31.4N.m (2.8 ~ 3.2kgf.m, 20.3 ~ 23.1 lb-ft)

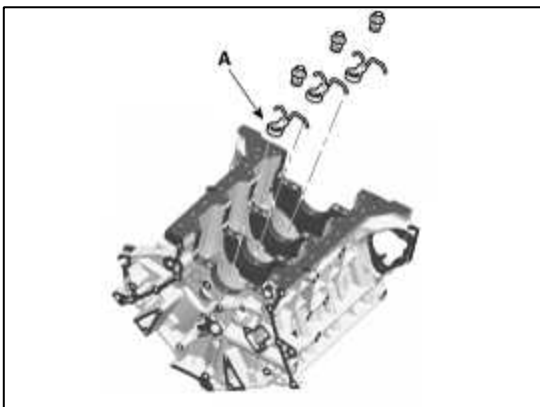

4. Install the connecting rod bearings.

- (1) Align the bearing claw with the groove of the connecting rod or connecting rod cap.
- (2) Install the bearings(A) in the connecting rod and connecting rod cap(B).

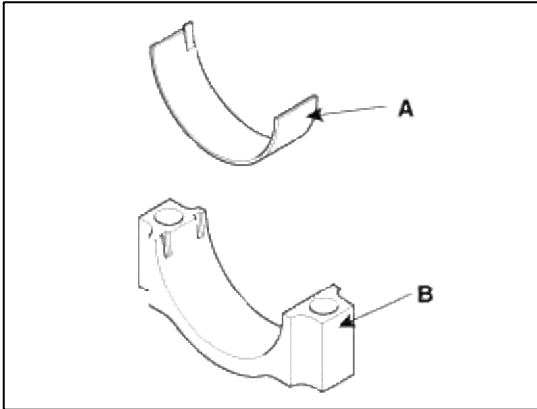


5. Install the main bearings.

NOTE

Upper bearings have an oil groove or oil holes; Lower bearings do not.


- (1) Align the bearing claw with the claw groove of the cylinder block, push in the 4 upper bearings(A).

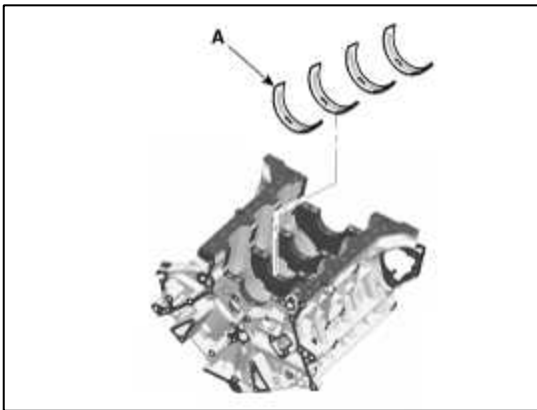


- (2) Align the bearing claw with the claw groove of the main bearing cap, and push in the 4 lower bearings.

6. Install the thrust bearings.

Install the 2 thrust bearings(A) under the No.3 journal position of the cylinder block with the oil grooves facing outward.

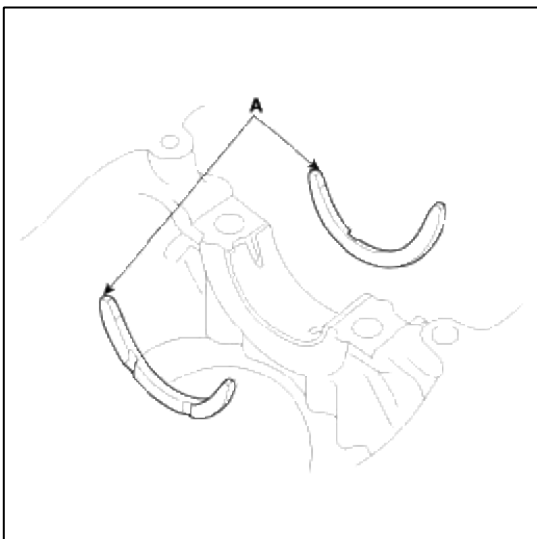

7. Place the crankshaft(A) on the cylinder block.

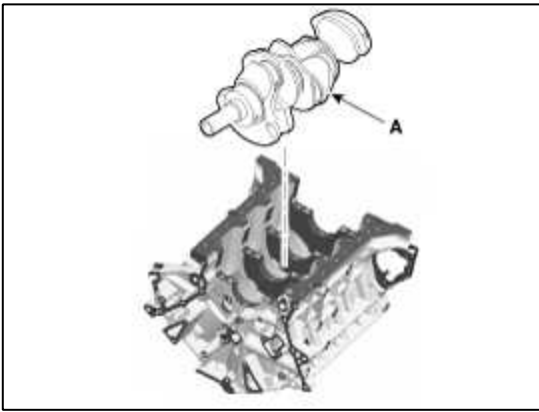

8. Place the main bearing caps on cylinder block.

9. Install the main bearing cap bolts.

(1) Install and uniformly tighten the bearing cap bolts, in several passes, in the sequence shown.

Tightening torque

Main bearing cap bolt

49.0N.m (5.0 kgf.m, 36.2lb-ft) + 90° (1 ~ 8)


19.6N.m (2.0 kgf.m, 14.5lb-ft) + 120° (9 ~ 16)

29.4 ~ 31.4N.m (3.0 ~ 3.2 kgf.m, 21.7 ~ 23.1lb-ft)

(17 ~ 24)

NOTE

- Always use new main bearing cap bolts.
- If any of the bearing cap bolts are broken or deformed, replace it.

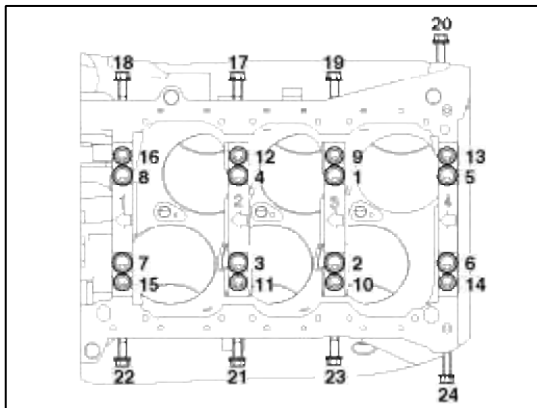

Use the SST(09221-4A000), install main bearing cap bolts.



(2) Check that the crankshaft turns smoothly.

10. Check crankshaft end play.
11. Install the piston and connecting rod assemblies.

NOTE


Before installing the pistons, apply a coat of engine oil to the ring grooves and cylinder bores.

- (1) Install the ring compressor, check that the bearing is securely in place, then position the piston in the cylinder, and tap it in using the wooden handle of a hammer.
- (2) Stop after the ring compressor pops free, and check the connecting rod-to-check journal alignment before pushing the piston into place.
- (3) Apply engine oil to the bolt threads. Install the rod caps with bearings, and torque the bolts.


Tightening torque :

27.5 ~ 31.4N.m (2.8 ~ 3.2kgf.m, 20.3 ~ 23.1 lb-ft) + 68~72°

Use SST(09221-4A000), install connecting rod bearing cap bolts.

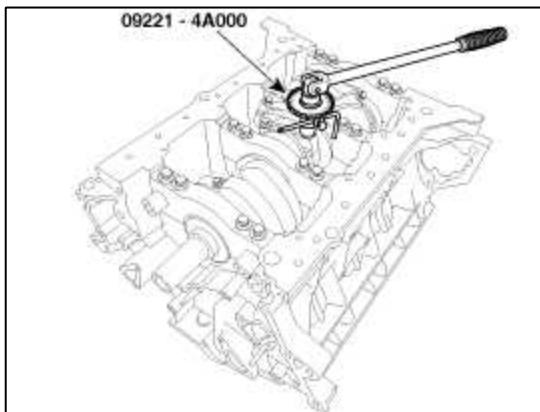**NOTE**

- Always use new connecting rod bearing cap bolts.
- Maintain downward force on the ring compressor to prevent the rings from expanding before entering the cylinder bore.

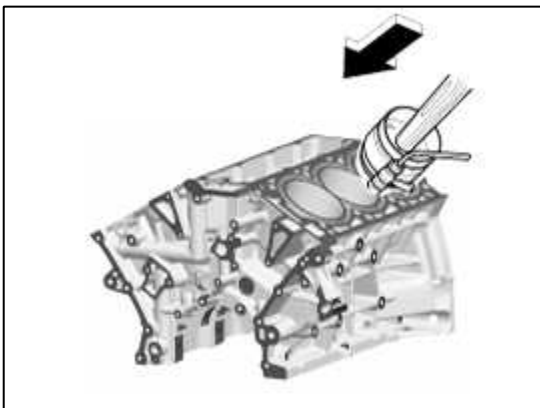


12. Check the connecting rod end play.

13. Install the plug bolt (A) and the washer gasket (B).

Tightening torque :


83.4 ~ 102.9N.m (8.5 ~ 10.5kgf.m, 61.5 ~ 75.9lb-ft)

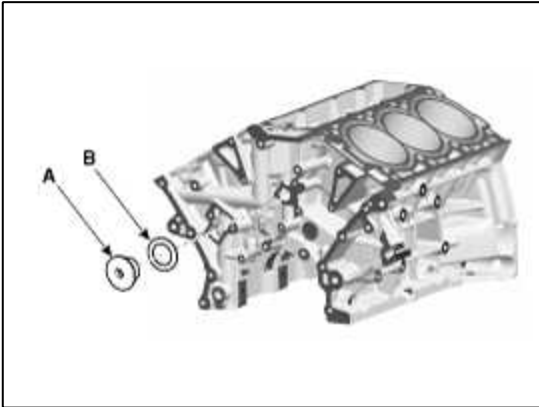

14. Install the rear oil seal case(A).


Tightening torque :

9.8 ~ 11.8Nm (1.0 ~ 1.2kgf.m, 7.2 ~ 8.7lb-ft)

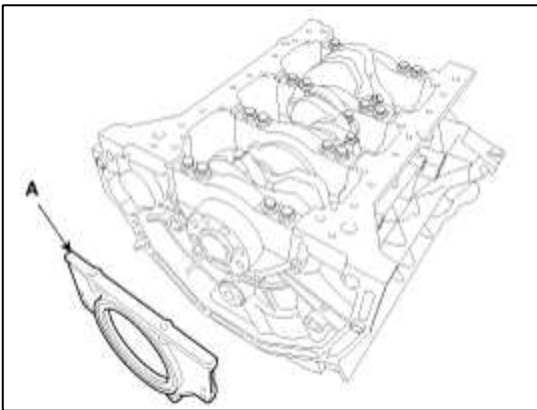


NOTE

- Clean the sealing face before assembling two parts.
- Remove harmful foreign materials on the sealing face before applying sealant
- Before assembling rear oil seal case, the liquid sealant TB 1217H (Hyundai Gray RTV) should be applied to the rear oil seal case.
- The part must be assembled within 5 minutes after sealant was applied.
- Apply sealant to the inner threads of the bolt holes.

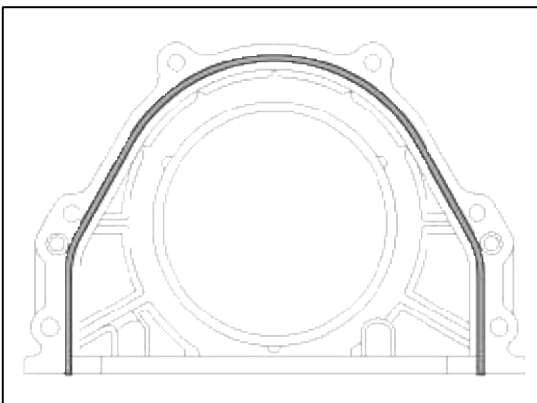


15. Using the SST(09231-3C200, 09231-H1100), install rear oil seal.

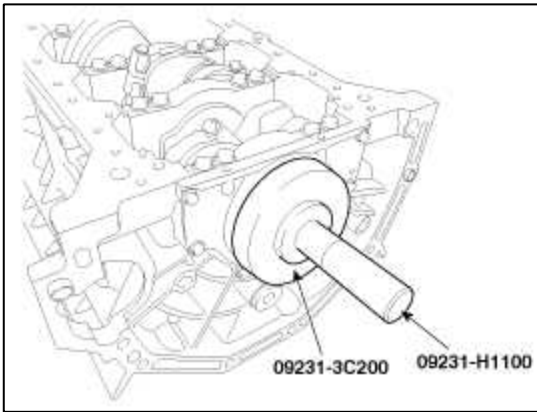

16. Install the baffle plate.
Install and uniformly tighten the baffle plate bolts, in several passes, in the sequence shown.


Tightening torque :

9.8 ~ 11.8Nm (1.0 ~ 1.2kgf.m, 7.2 ~ 8.7lb-ft)

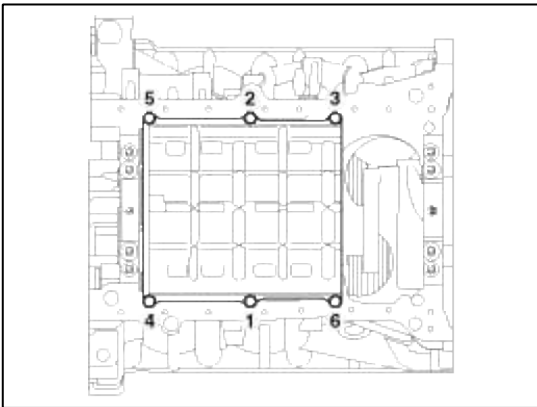

17. Install the upper oil pan.
- Using a gasket scraper, remove all the old packing material from the gasket surfaces.
 - Before assembling the oil pan, the liquid sealant TB 1217H (Hyundai Gray RTV) should be applied on upper oil pan.
The part must be assembled within 5 minutes after the sealant was applied.

Bead width : 2.5mm(0.1in.)

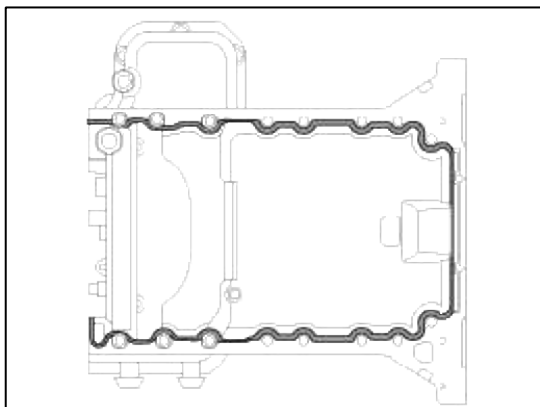

NOTE


- Clean the sealing face before assembling two parts.
- Remove harmful foreign materials on the sealing face before applying sealant
- When applying sealant gasket, sealant must not protrude into the inside of oil pan.
- To prevent leakage of oil, apply sealant gasket to the inner threads of the bolt holes.

C. Install the upper oil pan.

Uniformly tighten the bolts in several passes.

Tightening torque :


9.8 ~ 11.8Nm (1.0 ~ 1.2kgf.m, 7.2 ~ 8.7lb-ft)

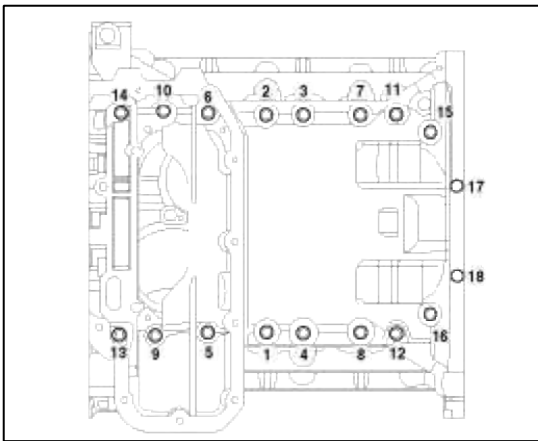

18. Install the oil cover (A) and new gasket (B).

Tightening torque :



9.8 ~ 11.8 N.m (1.0 ~ 1.2 kgf.m, 7.2 ~ 8.7 lb-ft)

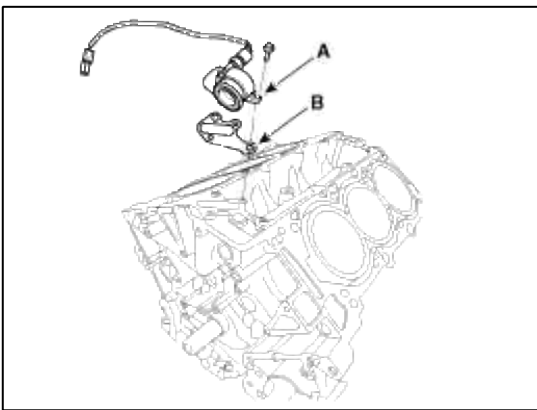


19. Install the knock sensor(A).

Tightening torque :

15.7 ~ 23.5Nm (1.6 ~ 2.4kgf.m, 11.6 ~ 17.3lb-ft)

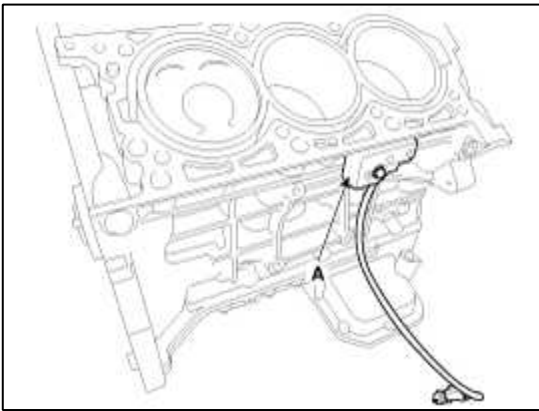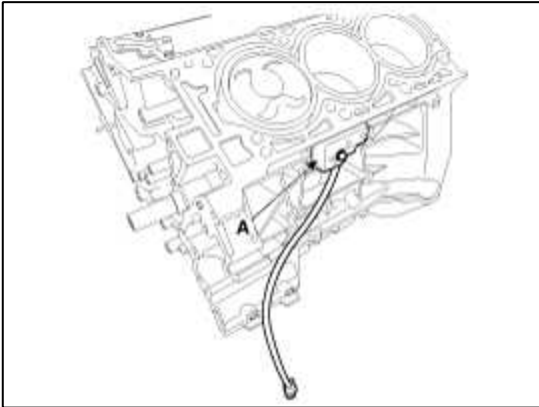


20. Install the crankshaft adapter (A). (AT)

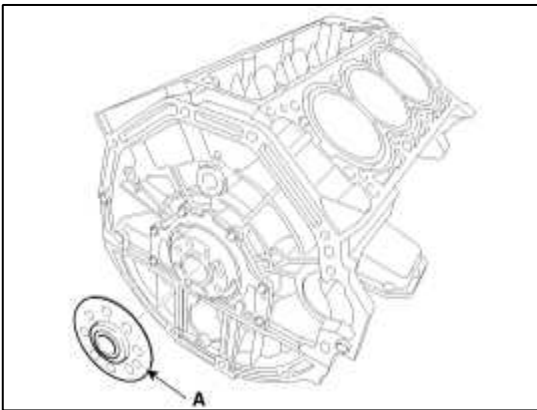

21. Install the drive plate (A) and adapter plate (B). (AT)

Tightening torque :


71.6 ~ 75.5N.m (7.3 ~ 7.7kgf.m, 52.8 ~ 55.7lb-ft)

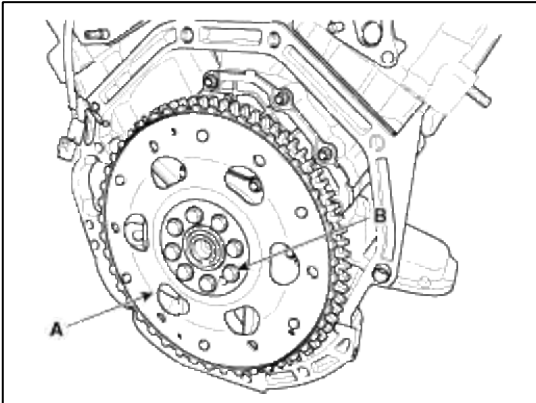


22. Install the dual mass flywheel (DMF) (A). (MT)

Tightening torque :

71.5 ~ 75.5N.m (7.3 ~ 7.7kgf.m, 52.8 ~ 55.7lb-ft)

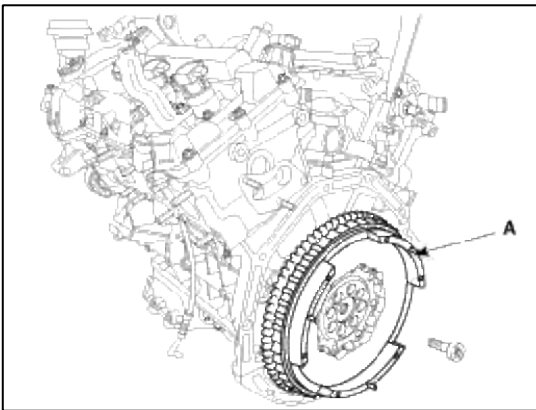


23. Install the #1, #2 cylinder bore water jacket separator (A).

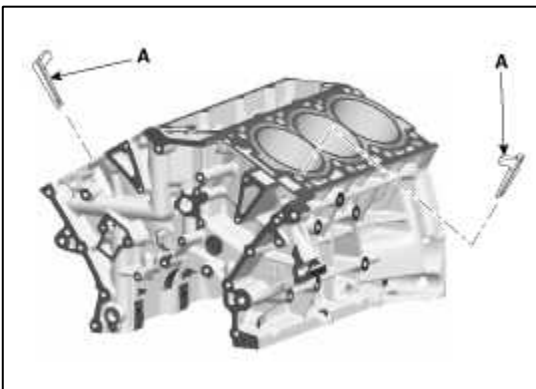

NOTE

Insert the separator align with block inner side protrusion, and it must be located under the cylinder head installing surface.

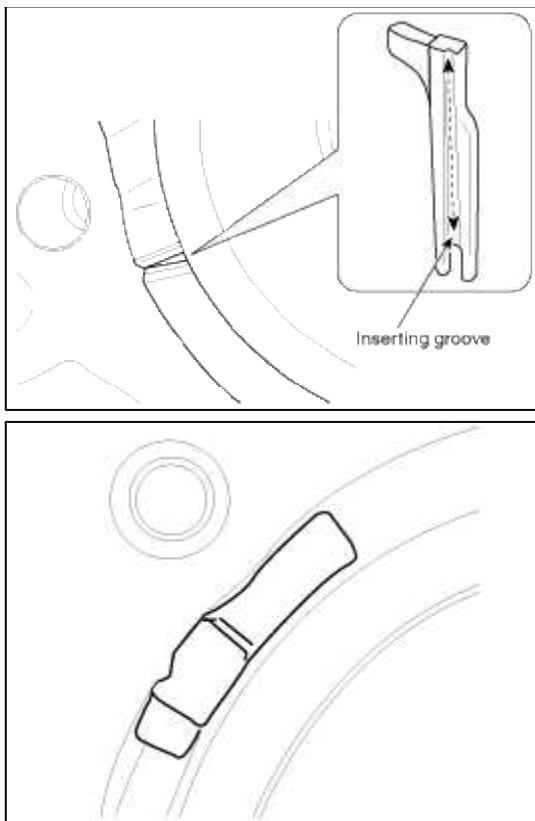

24. Install the oil filter assembly. (Refer to Lubrication system in this group)
25. Install the oil pump. (Refer to Lubrication system in this group)
26. Install the cylinder head. (Refer to Cylinder head in this group)
27. Install the water temperature control assembly. (Refer to Cooling system in this group)
28. Install the timing chain. (Refer to Timing system in this group)
29. Install the intake manifold and exhaust manifold. (Refer to Intake and exhaust system in this group)
30. Install the engine assembly to the vehicle. (Refer to Engine and transmission assembly in this group)

Engine Mechanical System > Cooling System > Coolant > Repair procedures

Replacement And Air Bleeding

CAUTION


Never remove the radiator cap when the engine is hot. Serious scalding could be caused by hot fluid under high pressure escaping from the radiator.

NOTE

When pouring engine coolant, be sure to shut the relay box lid and not to let coolant spill on the electrical parts or the paint. If any coolant spills, rinse it off immediately.

1. Make sure the engine and radiator are cool to the touch.
2. Remove the radiator cap.

3. Loosen the drain plug (A), and drain the coolant.

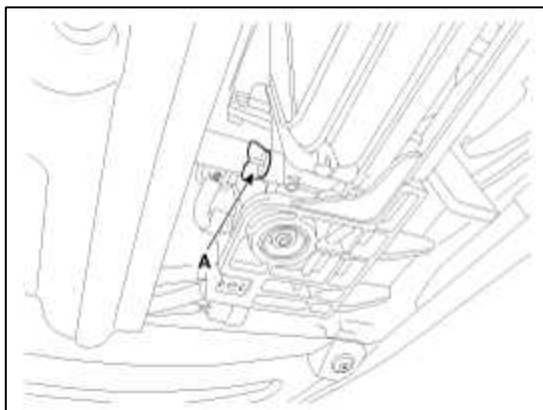

4. Tighten the radiator drain plug securely.
 5. Remove, drain and reinstall the reservoir. Fill the tank halfway to the MAX mark with water, then up to the MAX mark with antifreeze.
 6. Fill the radiator with water through the radiator cap and tighten the cap.

NOTE

To most effectively bleed the air, pour the water slowly and press on the upper / lower radiator hoses.

7. Start the engine and allow to come to normal operating temperature. Wait for the cooling fans to turn on several times. Accelerate the engine to aid in purging trapped air. Shut engine off.
 8. Wait until the engine is cool.
 9. Repeat steps 1 to 8 until the drained water runs clear.
 10. Fill fluid mixture with coolant and water (55~60%) (except for North America, Europe and China : 45~50%) slowly through the radiator cap. Push the upper/lower hoses of the radiator so as bleed air easily.

NOTE

- Use only genuine antifreeze/coolant.
- For best corrosion protection, the coolant concentration must be maintained year-round at 55% (except for North America, Europe and China : 45%) minimum. Coolant concentrations less than 55% (except for North America, Europe and China : 45%) may not provide sufficient protection against corrosion or freezing.
- Coolant concentrations greater than 60% will impair cooling efficiency and are not recommended.

CAUTION

- Do not mix different brands of antifreeze/coolants.
- Do not use additional rust inhibitors or antirust products; they may not be compatible with the coolant.

11. Start the engine and run coolant circulates.
 12. When the cooling fan operates and coolant circulates, refill coolant through the radiator cap.
 13. Repeat step.11 until the cooling fan 3 ~ 5times and bleed air sufficiently out of the cooling system.
 14. Install the radiator cap and fill the reservoir tank to the "MAX" line with coolant.
 15. Run the vehicle under idle until the cooling fan operates 2 ~ 3 times.
 16. Stop the engine and wait coolant gets cool.

17. Repeat 10 to 15 until the coolant level doesn't fall any more, bleed air out of the cooling system.


NOTE

As it is to bleed air out to the cooling system and refill coolant when coolant gets cool completely, recheck the coolant level in the reservoir tank for 2 ~ 3 days after replacing coolant.

Coolant capacity :

MT : 9.0L (9.5US.qt, 7.9Imp.qt, 2.4 US.gal)



AT : 8.8L (9.3US.qt, 7.7Imp.qt, 2.3 US.gal)

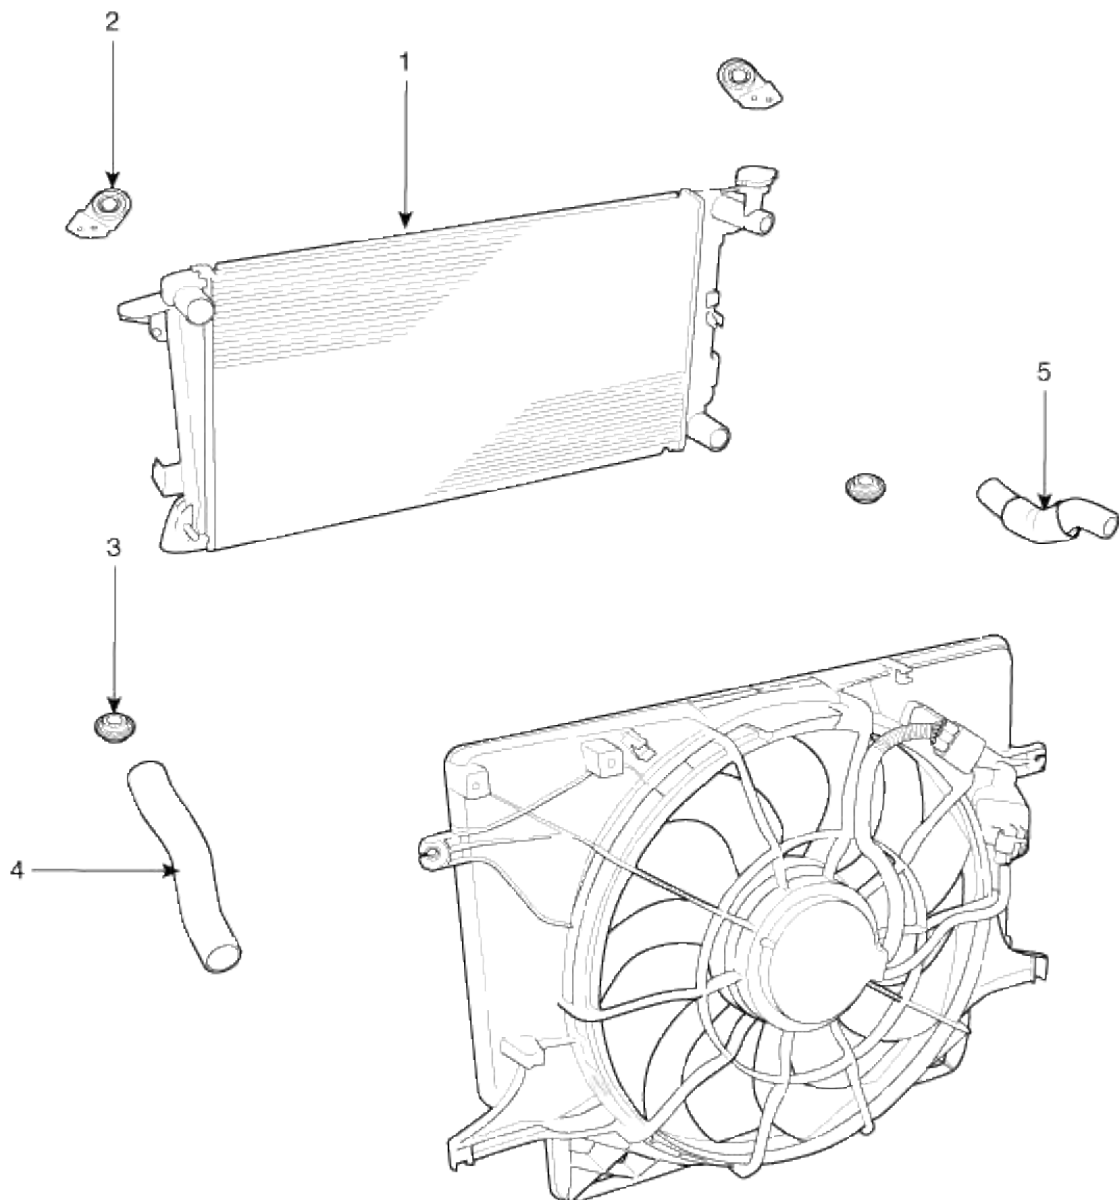Engine Mechanical System > Cooling System > Radiator > Components and Components Location**Components**

1. Radiator assembly	4. Radiator upper hose
2. Radiator upper mounting bracket	5. Radiator lower hose
3. Lower mounting insulator	

Engine Mechanical System > Cooling System > Radiator > Repair procedures**Removal and Installation**


1. Disconnect the battery negative cable.
2. Loosen the drain plug and drain the engine coolant.
3. Remove the air cleaner assembly. (Refer to Engine And Transmission Assembly in this group)
4. Remove the radiator upper hose (A) and radiator lower hose (B).

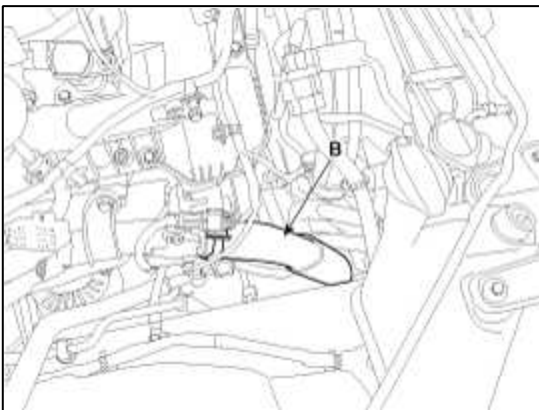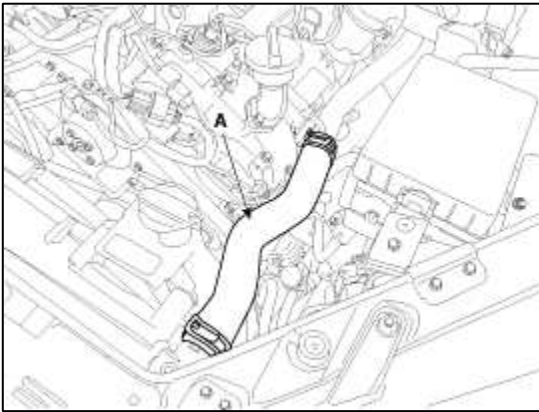

5. Disconnect the ATF cooler hoses. (Refer to AT group)

6. Remove the radiator.

- (1) Remove the cooling fan connector (A).
- (2) Remove the reservoir tank (B).
- (3) Remove the fan assembly (C).
- (4) Remove the radiator upper mounting bracket and radiator from the vehicle.

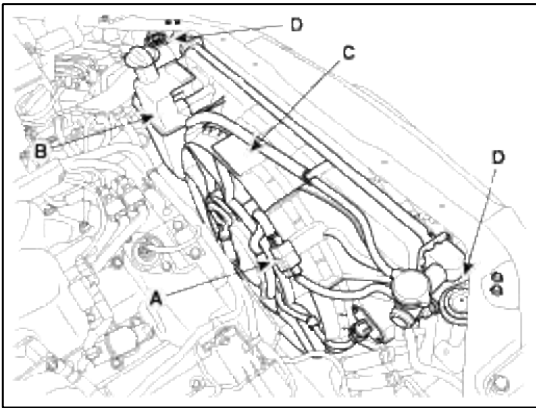

7. Installation is reverse order of removal.

8. Connect the fan motor connector.


9. Install the radiator upper hose & lower hose, and connect the ATF cooler hoses.

10. Fill the radiator with coolant and check for leaks.

Inspection

Cap Testing

1. Remove the radiator cap, wet its seal with engine coolant, then install it to pressure tester.

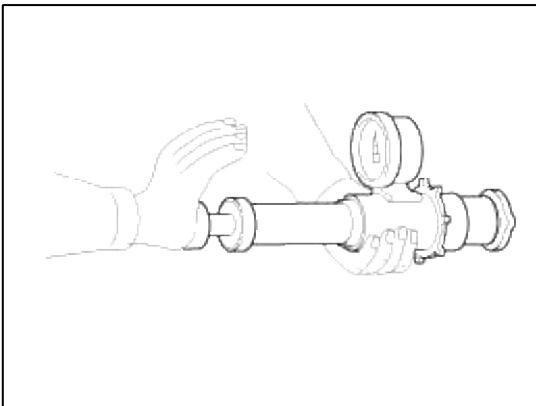


2. Apply a pressure of 93 ~ 123kPa (0.95 ~ 1.25kgf/cm², 14 ~ 19psi).

3. Check for a drop in pressure.

4. If the pressure drops, replace the cap.

Radiator Leakage

1. Wait until engine is cool, then carefully remove the radiator cap and fill the radiator with engine coolant, then install a pressure tester on it.

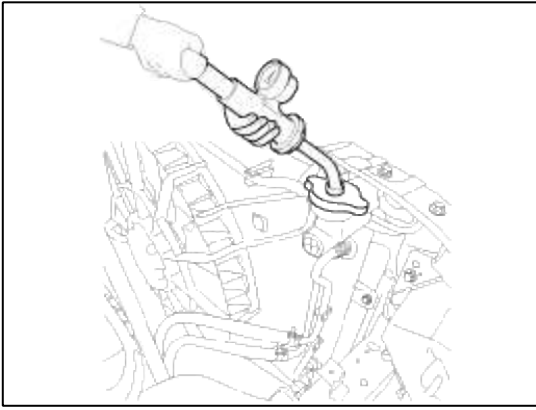


2. Apply a pressure of 93 ~ 123kPa (0.95 ~ 1.25kgf/cm², 14 ~ 19psi).
3. Inspect for engine coolant leaks and a drop in pressure.
4. If the pressure drops, check hoses, the radiator and the water pump for leakage. If there is no leakage, inspect the heater core, the cylinder block and the cylinder head.
5. Remove the tester and reinstall the radiator cap.

NOTE

Check for engine oil in coolant and/or coolant in engine oil.

Engine Mechanical System > Cooling System > Water pump > Components and Components Location**Components**

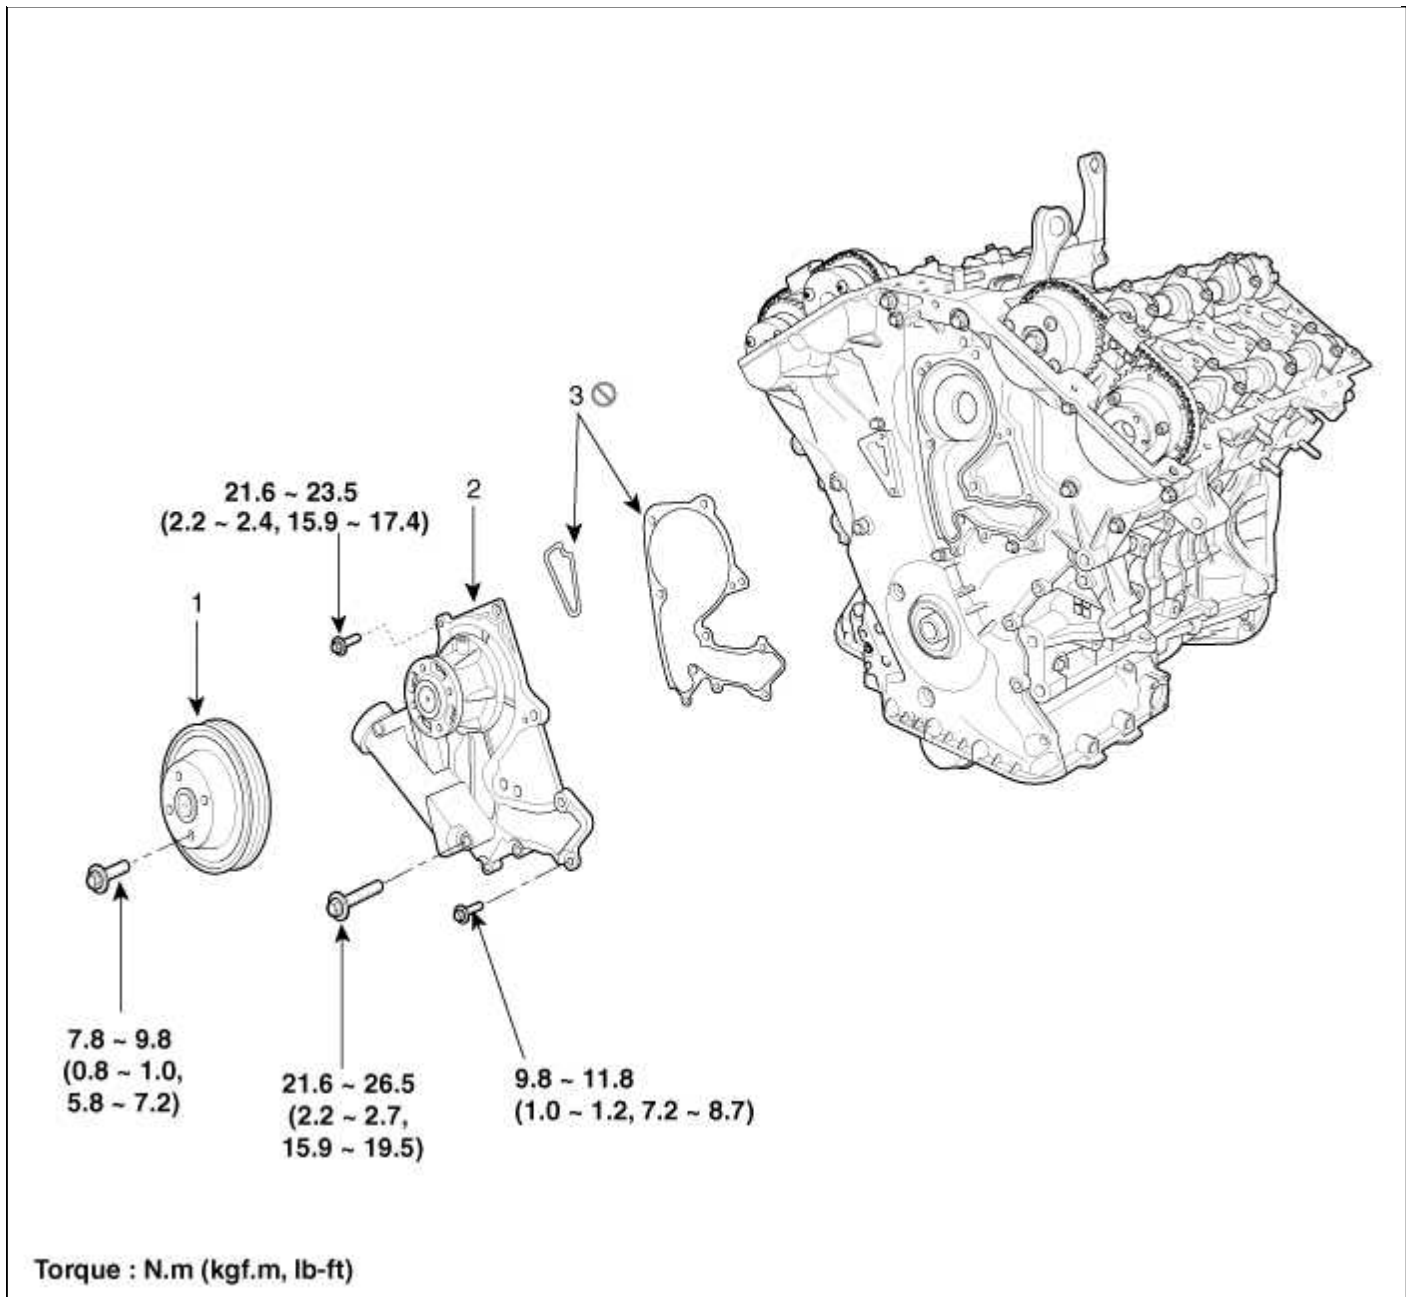

- | | |
|----------------------|----------------------|
| 1. Water pump pulley | 3. Water pump gasket |
| 2. Water pump | |

Engine Mechanical System > Cooling System > Water pump > Repair procedures


Removal

1. Loosen the drain plug, and drain the engine coolant.


WARNING

Never remove the radiator cap when the engine is hot. Serious scalding could be caused by hot fluid under high pressure escaping from the radiator.



2. Remove the drive belt (A).

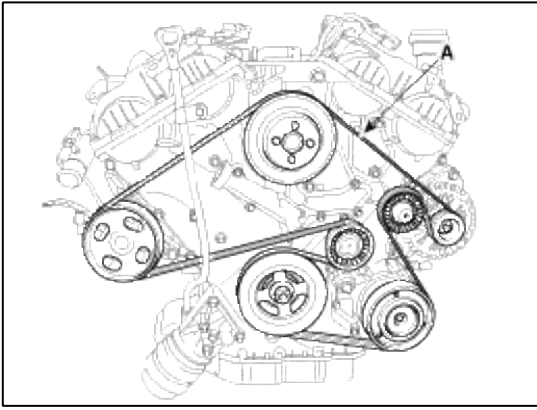

3. Remove the drive belt (A).

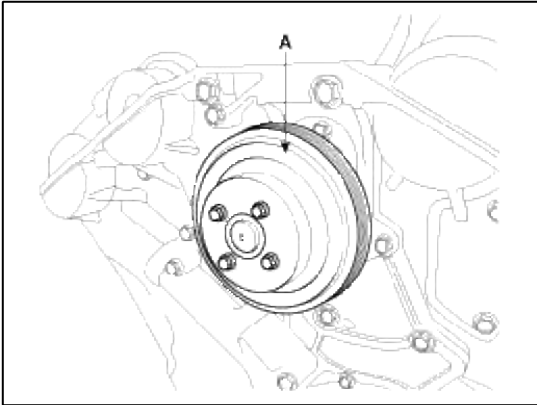

4. Remove the water pump (A) and the gaskets (B).

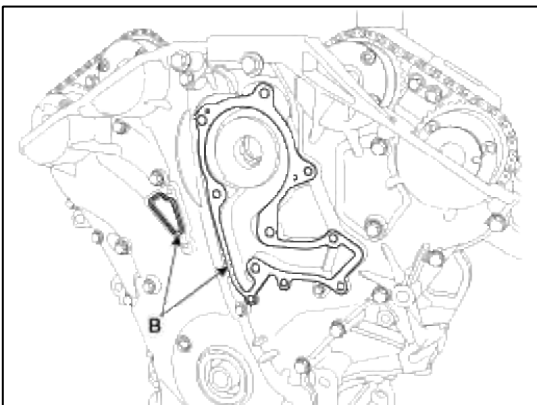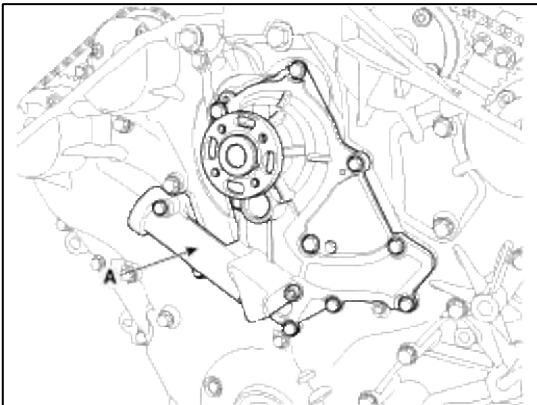

Inspection

1. Check each part for cracks, damage or wear, and replace the coolant pump assembly if necessary.
2. Check the bearing for damage, abnormal noise and sluggish rotation, and replace the coolant pump assembly if necessary.



3. Check for coolant leakage. If coolant leaks from hole, the seal is defective. Replace the coolant pump assembly.

NOTE

A small amount of "weeping" from the bleed hole is normal.

Installation

1. Install the water pump (A) with the new gaskets (B).

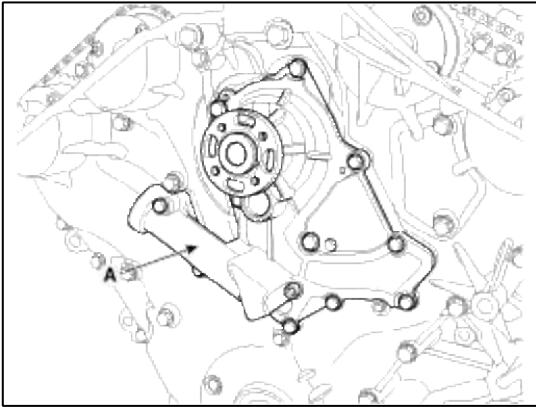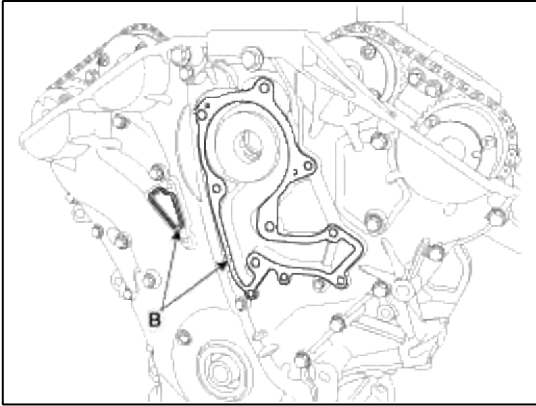

NOTE

- Clean the contact face before assemble.
- Always use a new gaskets.

Tightening torque

A(3EA) : 9.8 ~ 11.8N.m (1.0 ~ 1.2kgf.m, 7.2 ~ 8.7lb-ft)

B(1EA): 9.8 ~ 11.8N.m (1.0 ~ 1.2kgf.m, 7.2 ~ 8.7lb-ft)


C(1EA): 21.6 ~ 26.5N.m (2.2 ~ 2.7kgf.m, 15.9 ~ 19.5lb-ft)

D(1EA): 9.8 ~ 11.8N.m (1.0 ~ 1.2kgf.m, 7.2 ~ 8.7lb-ft)

E(1EA): 9.8 ~ 11.8N.m (1.0 ~ 1.2kgf.m, 7.2 ~ 8.7lb-ft)

F(1EA): 9.8 ~ 11.8N.m (1.0 ~ 1.2kgf.m, 7.2 ~ 8.7lb-ft)


G(4EA) :21.6 ~ 23.5N.m (2.2 ~ 2.4kgf.m, 15.9 ~ 17.4lb-ft)

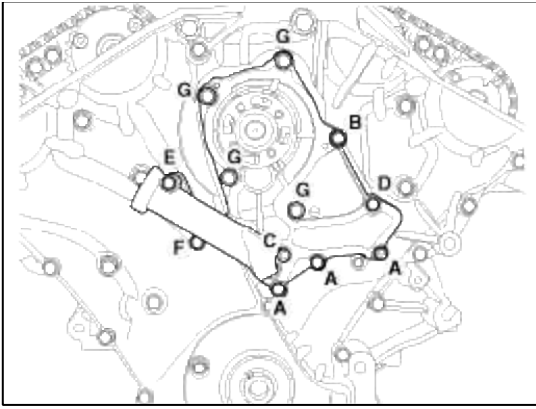


2. Install the water pump pulley (A).

Tightening torque :

7.8 ~ 9.8N.m (0.8 ~ 1.0kgf.m, 5.8 ~ 7.2lb-ft)

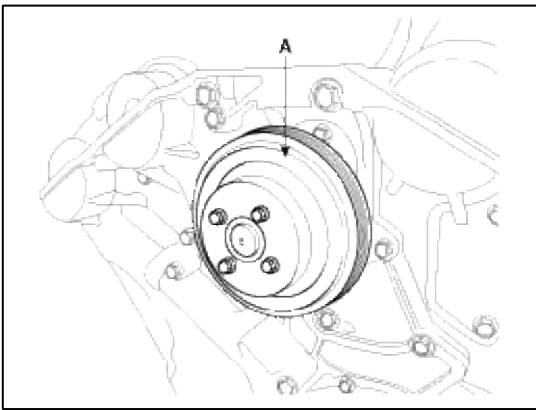

3. Install the drive belt (A).

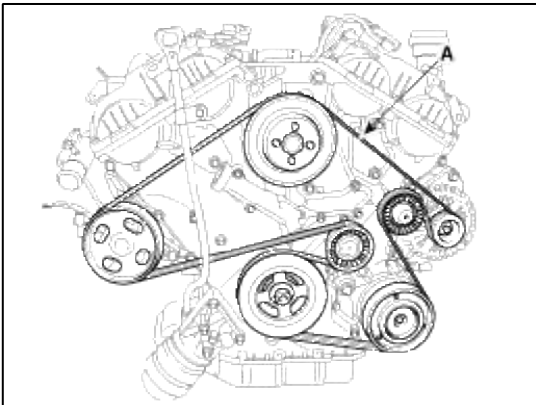

4. Fill the radiator with coolant and check for leaks.


Engine Mechanical System > Cooling System > Water pump > Troubleshooting

Troubleshooting

Symptoms		Possible Causes		Remedy
Coolant leakage	<ul style="list-style-type: none"> From the bleed hole of the water pump 	Visually check	<ul style="list-style-type: none"> Check leaks after about ten-minute warming up. 	<ul style="list-style-type: none"> If coolant still leaks, replace a water pump. If leakage stops, reuse the water pump (Do not replace the pump with a new one).
	<ul style="list-style-type: none"> From gaskets or bolts 		<ul style="list-style-type: none"> Check the tightening of the water pump mounting bolts. 	<ul style="list-style-type: none"> Retighten the mounting bolts.
	<ul style="list-style-type: none"> From damage of gaskets or inflow of dust. 		<ul style="list-style-type: none"> Check damage of gaskets or inflow of dust. 	<ul style="list-style-type: none"> Replace the gasket and clean dust off.
	<ul style="list-style-type: none"> From outer surface of water pump 		<ul style="list-style-type: none"> Check the material or any cracks of the water pump. 	<ul style="list-style-type: none"> Poor material. If any crack found, replace the water pump.
Noise	<ul style="list-style-type: none"> From bearings From mechanical seals Impeller interference 	Inspection with a stethoscope	<ul style="list-style-type: none"> After starting the engine, check noise with a stethoscope. 	<ul style="list-style-type: none"> If there is no noise, reuse the water pump(do not replace it). If there is any noise from the water pump, remove the drive belt and recheck.
		Inspection after removing a drive belt	<ul style="list-style-type: none"> After removing a water pump and a drive belt, check noise again. 	<ul style="list-style-type: none"> If there is noise, reuse the water pump. Check other drive line parts. If there is no noise, replace the water pump with a new one.
		Inspection after removing a water pump	<ul style="list-style-type: none"> After removing a water pump and a drive belt, check noise again. 	<ul style="list-style-type: none"> If there is any interference between them, replace the water pump with a new one.
Overheating	<ul style="list-style-type: none"> Damaged impeller Loosened impeller 	Loosened impeller	<ul style="list-style-type: none"> Corrosion of the impeller wing 	<ul style="list-style-type: none"> Check engine coolant. Poor coolant quality / Maintenance check
			<ul style="list-style-type: none"> Impeller separation from the shaft 	<ul style="list-style-type: none"> Replace the water pump.

Engine Mechanical System > Cooling System > Water Temperature Control Assembly > Components and Components Location

Components

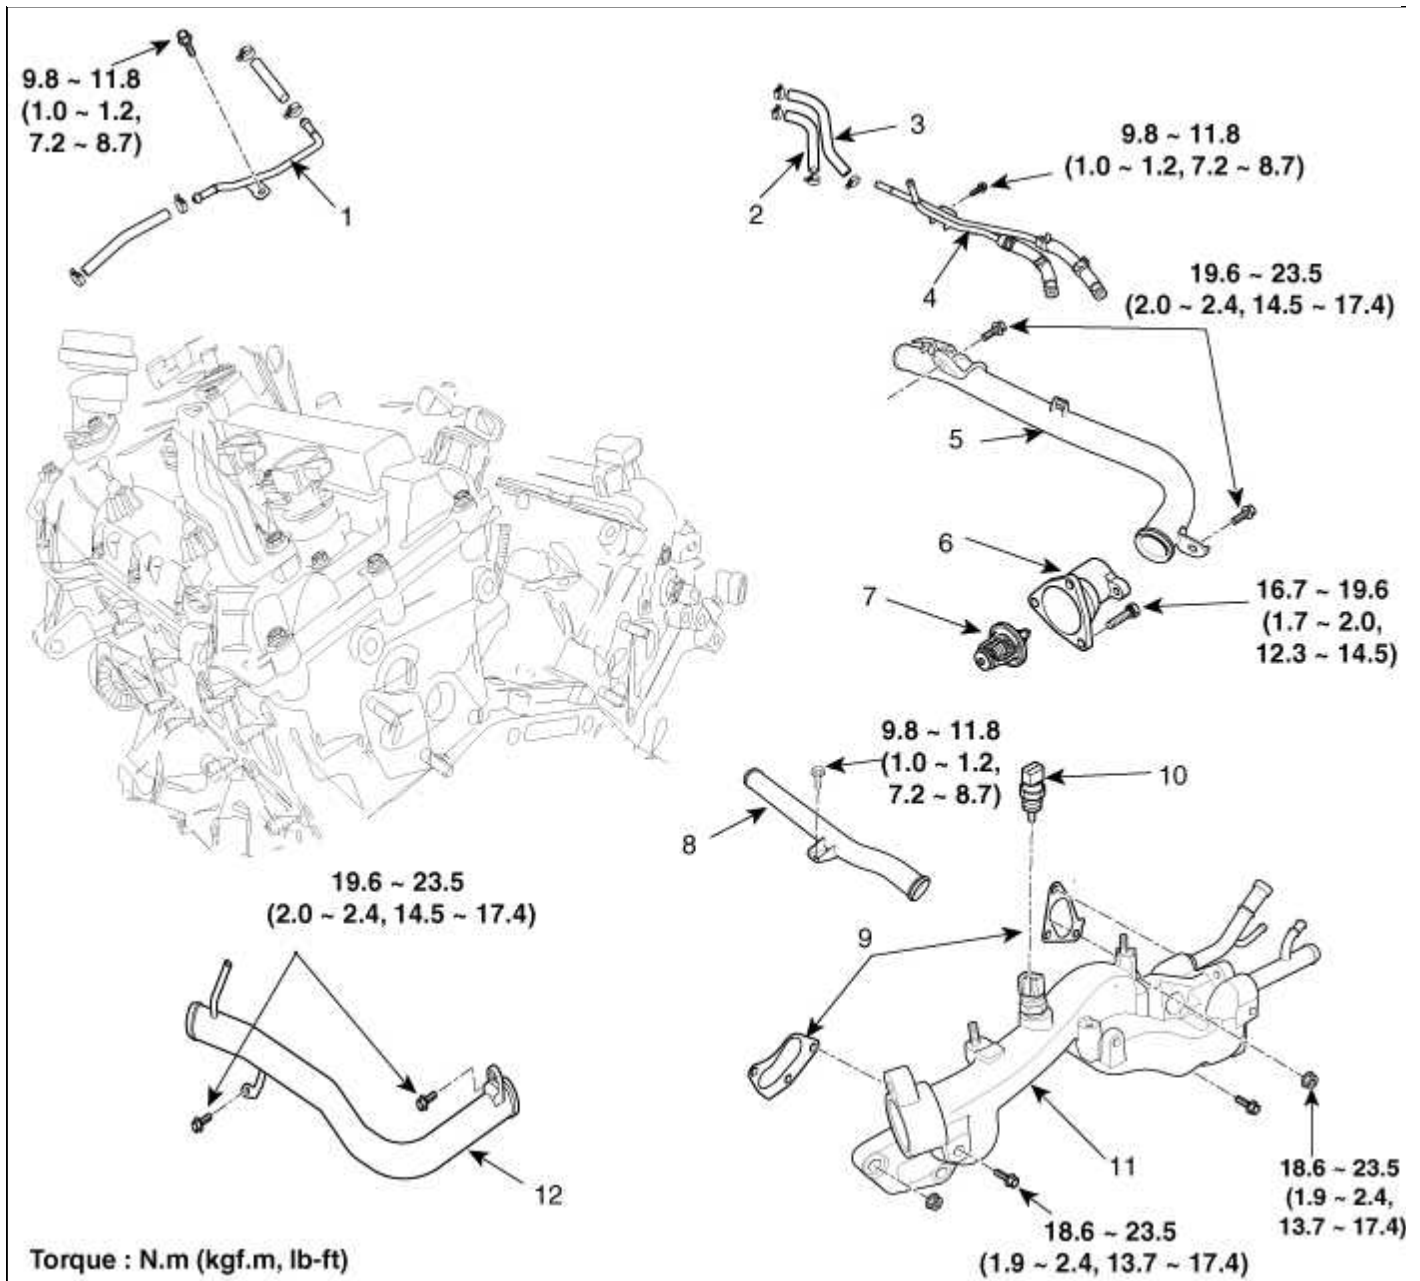

- | | |
|--------------------------------------|--|
| 1. Water vent hose & pipe | 7. Thermostat |
| 2. Throttle body coolant hose A | 8. Center pipe |
| 3. Throttle body coolant hose B | 9. Gasket |
| 4. Throttle body coolant hose & pipe | 10. Water temperature sensor (ECT) |
| 5. RH coolant pipe | 11. Water temperature control assembly |
| 6. Coolant inlet parting | 12. LH coolant pipe |

Engine Mechanical System > Cooling System > Water Temperature Control Assembly > Repair procedures



Removal

1. Loosen the drain plug, and drain the engine coolant.


WARNING

Never remove the radiator cap when the engine is hot. Serious scalding could be caused by hot fluid under high pressure escaping from the radiator.


2. Never remove the radiator cap when the engine is hot. Serious scalding could be caused by hot fluid under high pressure escaping from the radiator.
3. Remove the radiator upper hose (A) and radiator lower hose (B).

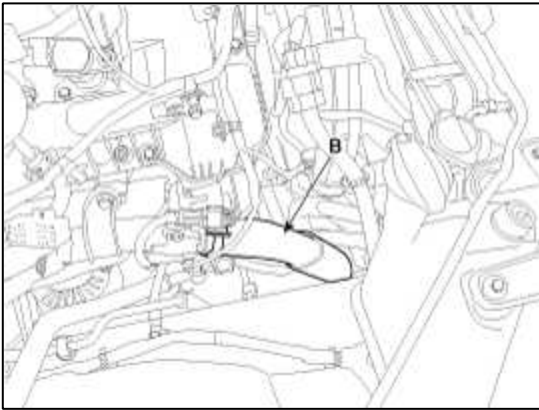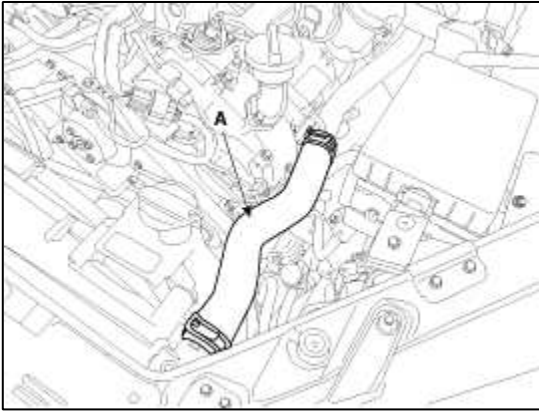


4. Disconnect the heater hoses (A).

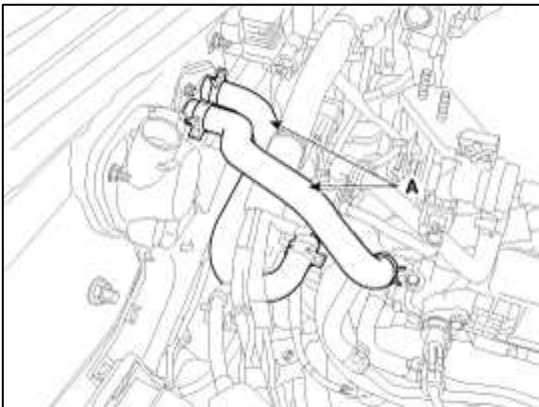


5. Remove the throttle body coolant hose & pipe (A).

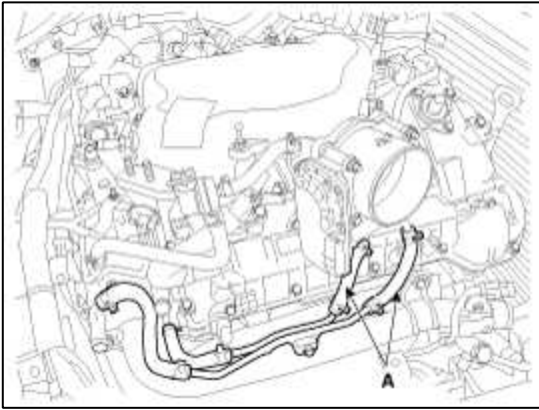


6. Remove the water inlet pipe & hose (A).

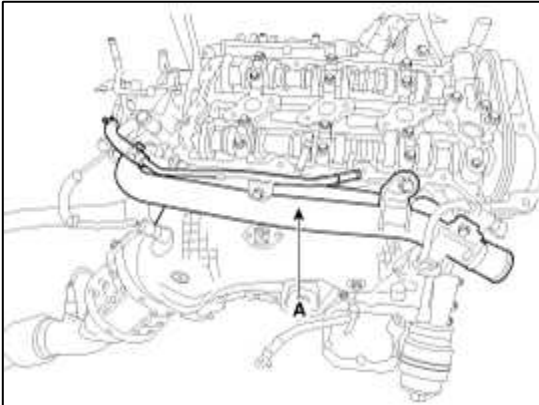

7. Remove the water outlet pipe (A).

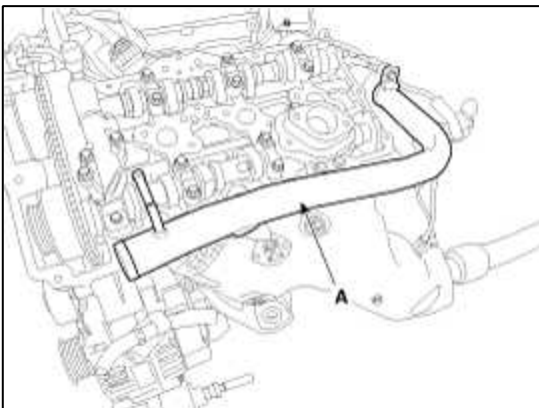

8. Remove the water temperature control assembly (A) and the gaskets.

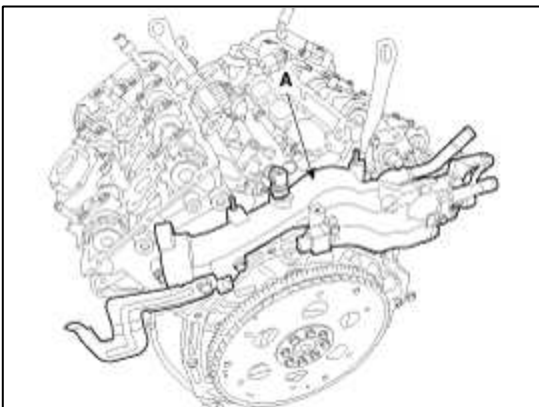


Installation

1. Install the water temperature control assembly (A) with a new gasket.

Tightening torque :


19.6 ~ 23.5Nm (2.0 ~ 2.4kgf.m, 14.5 ~ 17.4lb-ft)

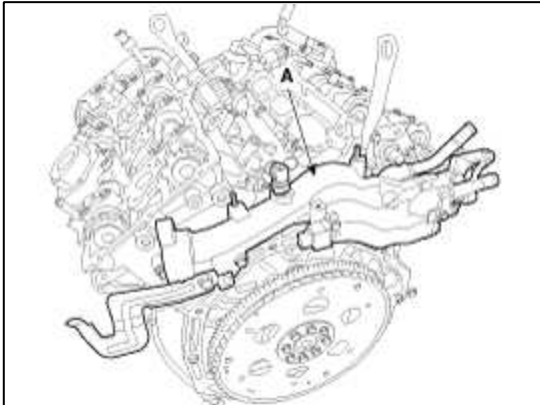

2. Install the water outlet pipe (A).

Tightening torque :


19.6 ~ 23.5N.m (2.0 ~ 2.4kgf.m, 14.5 ~ 17.4lb-ft)

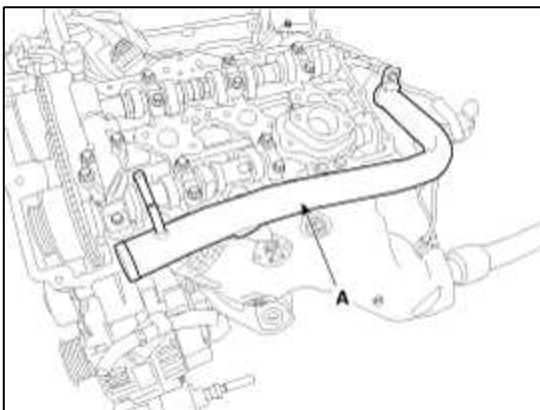

3. Install the water inlet pipe & hose (A).

Tightening torque :


19.6 ~ 23.5N.m (2.0 ~ 2.4kgf.m, 14.5 ~ 17.4lb-ft)

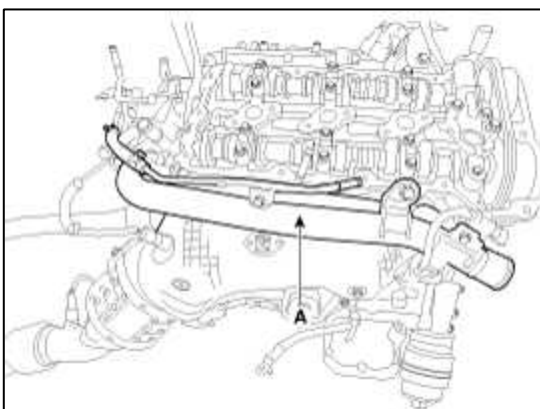


4. Install the throttle body coolant hose & pipe (A).

Tightening torque :



9.8 ~ 11.8N.m (1.0 ~ 1.2kgf.m, 7.2 ~ 8.7lb-ft)

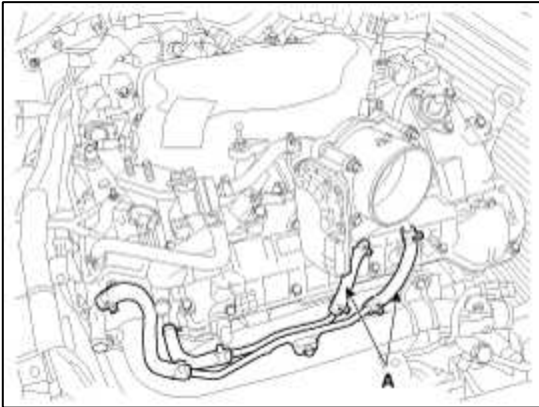

5. Connect the heater hoses (A).

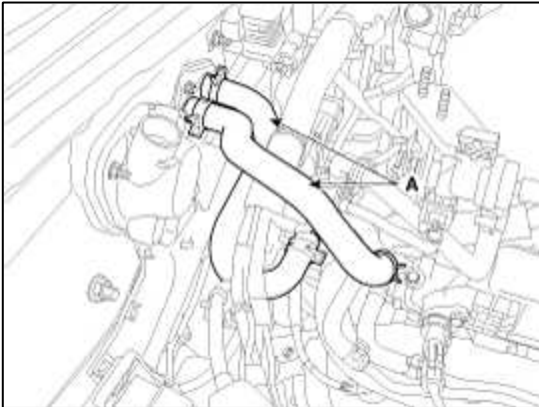

6. Install the radiator upper hose (A) and radiator lower hose (B).

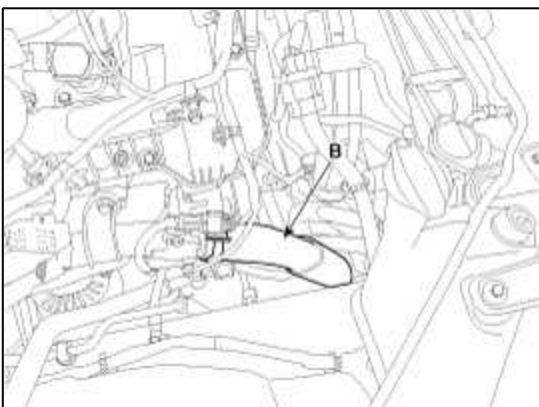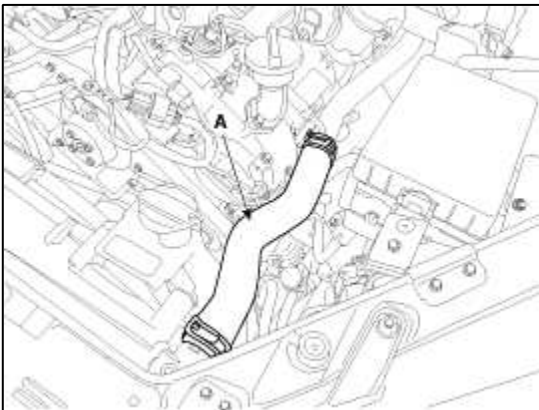

7. Install the air cleaner assembly. (Refer to Engine And Transmission Assembly in this group)

8. Fill the engine coolant.

9. Start the engine and check for leaks.
10. Recheck the coolant level.


Engine Mechanical System > Cooling System > Thermostat > Repair procedures

Removal

NOTE


Removal of the thermostat would have an adverse effect, causing a lowering of cooling efficiency. Do not remove the thermostat, even if the engine tends to overheat.

1. Drain engine coolant so its level is below thermostat.
2. Remove the water inlet fitting (A) and the thermostat (B).

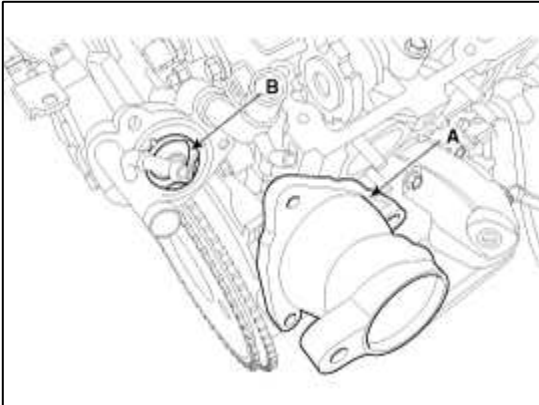

Inspection

1. Immerse the thermostat in water and gradually heat the water.

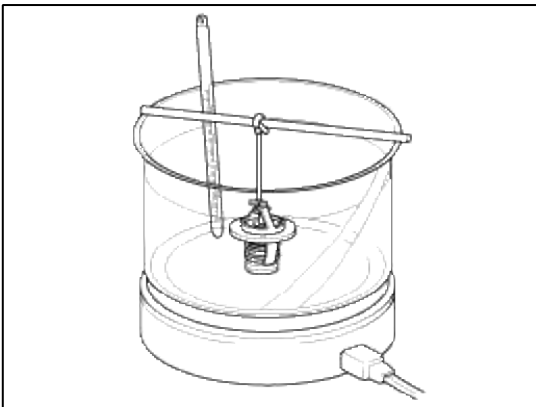

2. Check the valve opening temperature.

Valve opening temperature:

$82 \pm 1.5^{\circ}\text{C}$ ($179.6 \pm 2.7^{\circ}\text{F}$)

Full opening temperature: 95°C (203°F)

If the valve opening temperature is not as specified, replace the thermostat.

3. Check the valve lift.

Valve lift : 10mm (0.3937in.) or more at 95°C (203°F)


If the valve lift is not as specified, replace the thermostat.

Installation

1. Place the thermostat in thermostat housing.
 - (1) Install the thermostat with the jiggle valve upward.
 - (2) Install a new thermostat (B).
2. Install the water inlet fitting (A).

Tightening torque :

16.7 ~ 19.6N.m (1.7 ~ 2.0kgf.m, 12.3 ~ 14.5lb-ft)

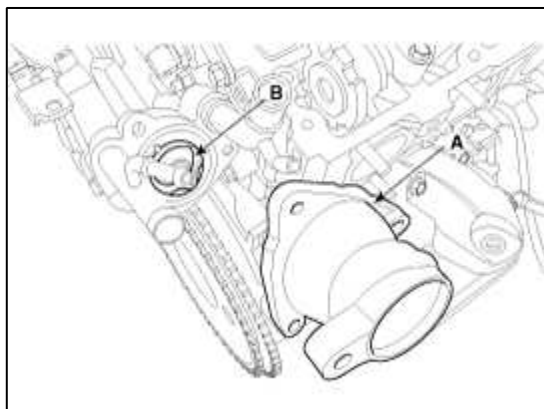

3. Fill with engine coolant.
4. Start engine and check for leaks.

Engine Mechanical System > Cooling System > Thermostat > Troubleshooting

Troubleshooting

Symptoms		Possible Causes		Remedy
Coolant leakage	<ul style="list-style-type: none"> • From the thermostat gasket 	Check the mounting bolts	<ul style="list-style-type: none"> • Check the torque of the mounting bolts 	<ul style="list-style-type: none"> • Retighten the bolts and check leakage again.
		Check the gasket for damage	<ul style="list-style-type: none"> • Check gasket or seal for damage 	<ul style="list-style-type: none"> • Replace gaskets and reuse the thermostat.
Cooled excessively	<ul style="list-style-type: none"> • Low heater performance (cool air blowed-out) • Thermogauge indicates 'LOW' 	Visually check after removing the radiator cap.	<ul style="list-style-type: none"> • Insufficient coolant or leakage. 	<ul style="list-style-type: none"> • After refilling coolant, recheck.
		GDS check & Starting engine	<ul style="list-style-type: none"> • Check DTCs • Check connection of the fan clutch or the fan motor. <p>If the fan clutch is always connected, there will be a noise at idle.</p>	<ul style="list-style-type: none"> • Check the engine coolant sensor, wiring and connectors. • Replace the components.
		Remove the thermostat and inspect	<ul style="list-style-type: none"> • Check if there are dusts or chips in the thermostat valve. • Check adherence of the thermostat. 	<ul style="list-style-type: none"> • Clean the thermostat valve and reuse the thermostat. • Replace the thermostat, if it doesn't work properly.

Heated excessively	<ul style="list-style-type: none"> • Engine overheated • Thermogauge indicates 'HI' 	Visually check after removing the radiator cap.	<ul style="list-style-type: none"> • Insufficient coolant or leakage. Be careful when removing a radiator cap of the overheated vehicle. • Check air in cooling system. 	<ul style="list-style-type: none"> • After refilling coolant, recheck. • Check the cylinder head gaskets for damage and the tightening torque of the mounting bolts.
		GDS check & Starting engine	<ul style="list-style-type: none"> • Check DTCs • Check the fan motor performance as temperature varies. • Check if the fan clutch slips. • Check the water pump adherence or impeller damaged. 	<ul style="list-style-type: none"> • Check the engine coolant sensor, wiring and connectors. • Check the fan motor, the relay and the connector. • Replace the fan clutch, if it doesn't work properly. • Replace the water pump, if it doesn't work properly.
		Immerse the thermostat in boiling water and inspection.	<ul style="list-style-type: none"> • After removing the thermostat, check it works properly. Check the thermostat opens at the valve opening temperature. 	<ul style="list-style-type: none"> • Replace the thermostat, if it doesn't work properly.

Engine Mechanical System > Lubrication System > Engine Oil > Repair procedures

Replacement


CAUTION

- Prolonged and repeated contact with mineral oil will result in the removal of natural fats from the skin, leading to dryness, irritation and dermatitis. In addition, used engine oil contains potentially harmful contaminants which may cause skin cancer.
- Exercise caution in order to minimize the length and frequency of contact of your skin to used oil. Wear protective clothing and gloves. Wash your skin thoroughly with soap and water, or use water-less hand cleaner, to remove any used engine oil. Do not use gasoline, thinners, or solvents.
- In order to preserve the environment, used oil and used oil filter must be disposed of only at designated disposal sites.

1. Park the car on level ground.
Start the engine and let it warm up.
2. Turn the engine off and open the hood.
Remove the engine cover.
3. Wait for 5 minutes after loosening the oil filter cap to drain fully the oil in the oil filter.
4. Drain engine oil.
 - (1) Remove the oil filler cap.
 - (2) After lifting the car, remove the oil drain plug and drain oil into a container.

5. Replace the oil filter.

- (1) Disconnect the oil filter cap from the oil filter body.
- (2) Remove the oil filter element.
- (3) Check and clean the oil filter installation surface.
- (4) Check the part number of a new oil filter is same as old one.
- (5) Install a new oil filter element (A) and new O-ring (B).

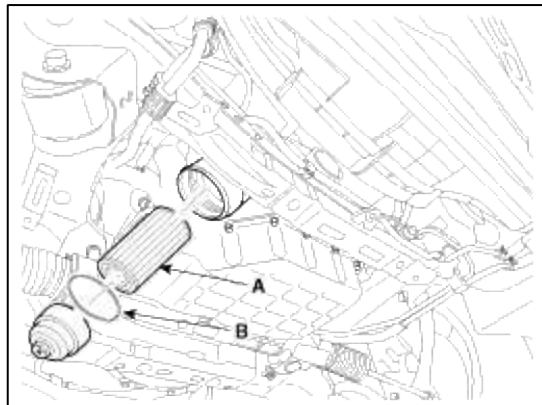

- (6) Apply clean engine oil to the new O-rings.
Lightly screw the oil filter cap into place, and tighten it until the O-ring contacts the seat.
- (7) Finally tighten it again by specified tightening torque.

Tightening torque :

34.3N.m (3.5kgf.m, 25.3lb-ft)

6. Fill new engine oil.

- (1) Install the oil drain plug with a new gasket.

Tightening torque :

34.3 ~ 44.1N.m (3.5 ~ 4.5kgf.m, 25.3 ~ 32.5lb-ft)

- (2) Fill with new engine oil, after removing the engine oil level gauge.

Capacity :

Total : 6.5L (6.87US.qt, 5.72Imp.qt, 1.72 US.gal)

Oil pan : 6.0L (6.34US.qt, 5.28Imp.qt, 1.58 US.gal)

Drain and refill including oil filter :

5.7L (6.02US.qt, 5.01Imp.qt, 1.50 US.gal)

CAUTION

- Fill the crankcase to about half the capacity and then fill the remainder after waiting.
- Do not fill oil over the 'F' line, checking the level with the oil level gauge. frequently to ensure no overfilling.

- (3) Install the oil filler cap and oil level gauge.

7. Start the engine and check to be sure no oil is leaking from the drain plug or oil filter.

8. Recheck the engine oil level.

Inspection

1. Check the engine oil quality. Check the oil deterioration, entry of water, discoloring or thinning. If the quality is visibly poor, replace the oil.
2. Check the engine oil level.
After warming up the engine and then 5 minutes after the engine stop, oil level should be between the “L” and “F” marks in the dipstick.
If low, check for leakage and add oil up to the “F” mark.

NOTE

Do not fill with engine oil above the “F” mark.

Selection Of Engine Oil


Recommendation : 5W-20 / GF&SM, 5W-30 / ACEA A5 (If not available, refer to the recommended ACEA, API or ILSAC classification)

API classification : SL, SM or above

ILSAC classification : GF3, GF4 or above

ACEA Classification : A3, A5 or above

SAE viscosity grade : Refer to the recommended SAE viscosity number.

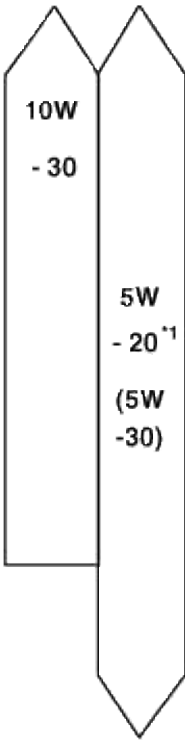Temperature range anticipated before next oil change	Recommended SAE viscosity number
<p>- 18°C - 0.4°F</p>	
<p>*1 If 5W-20 / GF4 engine oil is not available, 5W-30 or secondary recommended engine oil for corresponding temperature range can be used.</p>	


NOTE

For best performance and maximum protection of all types of operation, select only those lubricants which :


1. Satisfy the requirement of the ACEA, API or ILSAC classification.
2. Have proper SAE grade number for expected ambient temperature range.
3. Lubricants that do not have both an SAE grade number and ACEA, API or ILSAC service classification on the container should not be used.

Engine Mechanical System > Lubrication System > Engine Oil > Flow Diagram

Engine Oil Flow Diagram

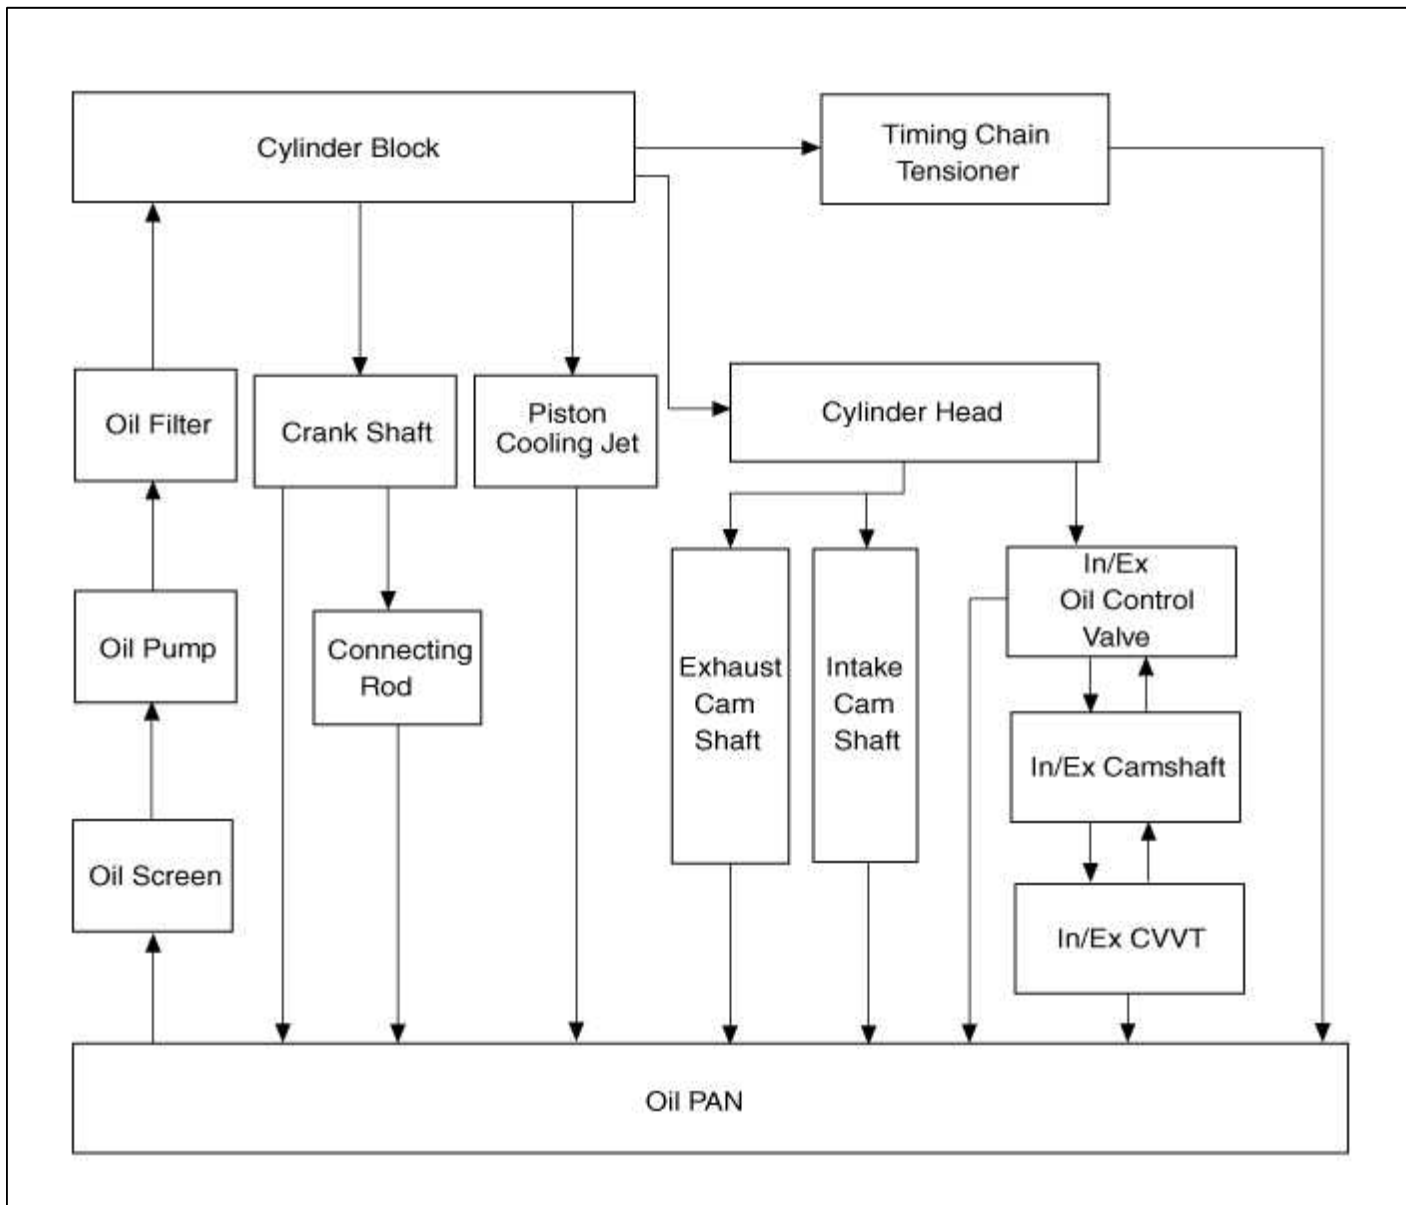
Engine Mechanical System > Lubrication System > Oil Pump > Components and Components Location

Components

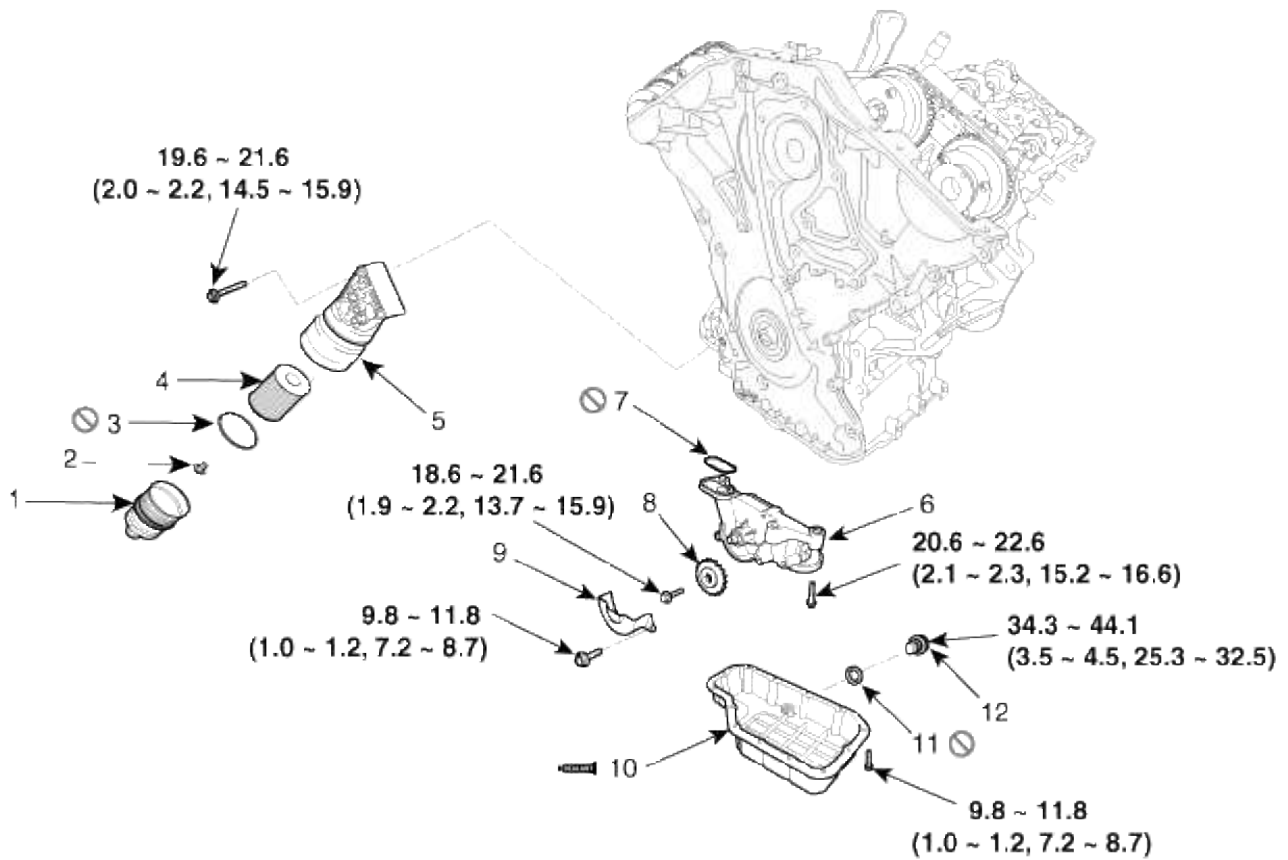

Torque : N.m (kgf.m, lb-ft)

1. Oil filter cap	5. O-ring	9. Oil pump chain cover
2. Relief valve	6. Oil pump	10. Lower oil pan
3. Oil filter element	7. O-ring	11. Oil drain plug gasket
4. Oil filter body	8. Oil pump sprocket	12. Oil drain plug

Engine Mechanical System > Lubrication System > Oil Pump > Repair procedures


Removal

Oil Pump

1. Drain the engine oil.


2. Remove the lower oil pan (A).

Insert the blade of SST(09215-3C000) between the upper oil pan and lower oil pan. Cut off applied sealer and remove the lower oil pan.

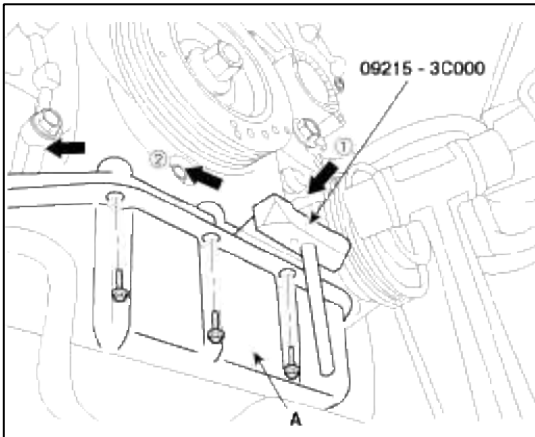
**NOTE**

- Insert the SST between the oil pan and the ladder frame by tapping it with a plastic hammer in the direction of arrow.
- After tapping the SST with a plastic hammer along the direction of arrow around more than 2/3 edge of the oil pan, remove it from the ladder frame.
- Do not turn over the SST abruptly without tapping. It be result in damage of the SST.
- Be careful not to damage the contact surfaces of Upper oil pan and lower oil pan.


3. Remove the oil pump chain cover (A).

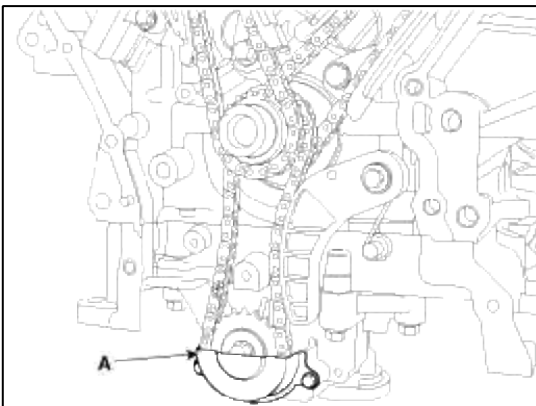

4. Remove the bolt (A) and then separate the chain with sprocket from the oil pump.

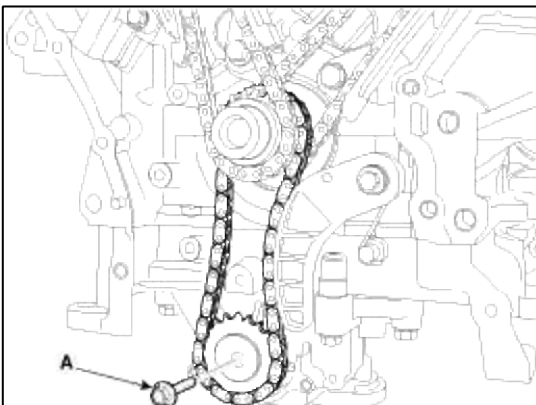


5. Remove the oil pump (A).

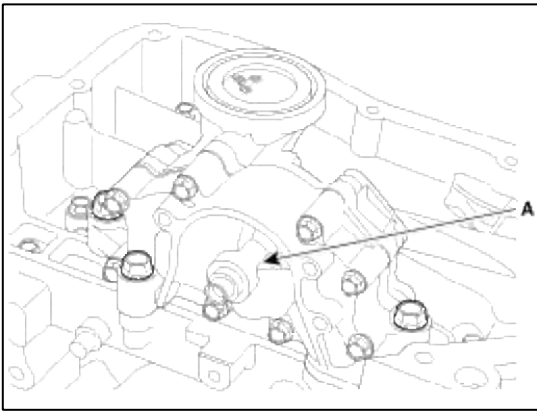


Oil Filter Assembly

1. Wait for 5 minutes after loosening the oil filter cap (A) to drain well the oil in the oil filter.

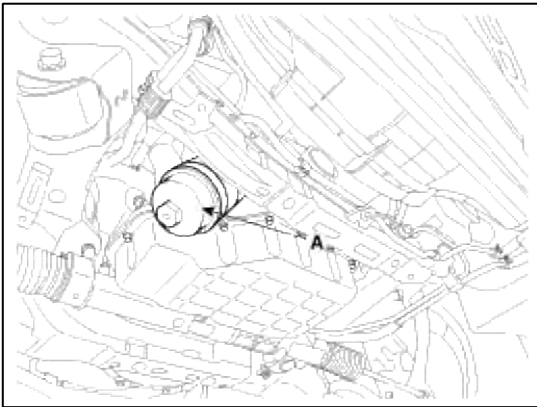

2. Remove the oil filter body (A).

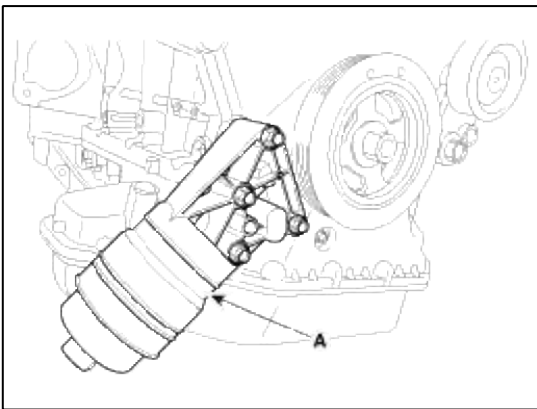


Installation

Oil Pump

1. Install the oil pump (A).

Tightening torque :

20.6 ~ 22.6N.m (2.1 ~ 2.3kgf.m, 15.2 ~ 16.6lb-ft)

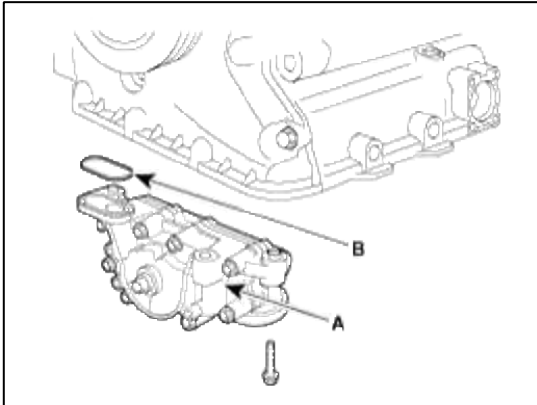
**NOTE**

Always use a new O-ring (B).

2. Install the oil pump sprocket (A) with oil pump chain to the oil pump.

Tightening torque :


18.6 ~ 21.6N.m (1.9 ~ 2.2kgf.m, 13.7 ~ 15.9lb-ft)

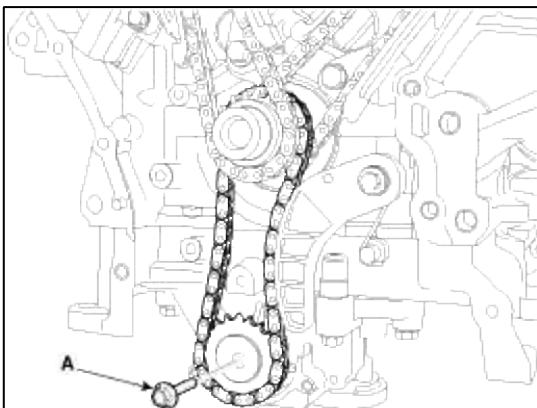

3. Install the oil pump chain cover (A).

Tightening torque :


9.8 ~ 11.8N.m (1.0 ~ 1.2kgf.m, 7.2 ~ 8.7lb-ft)

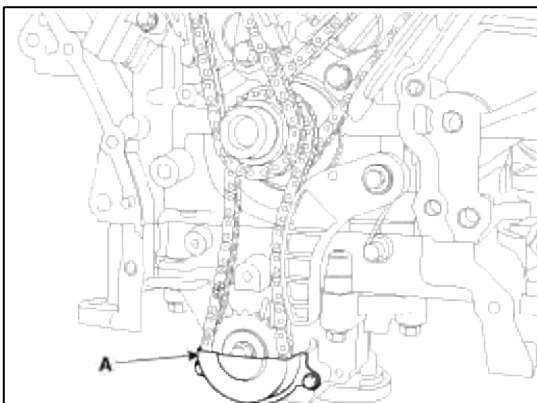

4. Install the lower oil pan (A).

- (1) Using a gasket scraper, remove all the old packing material from the gasket surfaces.
- (2) Before assembling the oil pan, the liquid sealant TB 1217H (Hyundai Gray RTV) should be applied on oil pan. The part must be assembled within 5 minutes after the sealant was applied.

Bead width : 2.5mm(0.1in.)

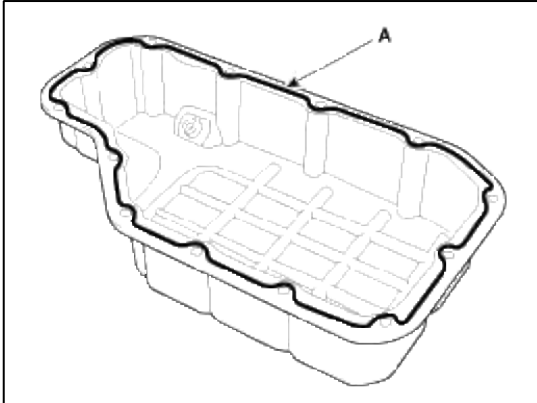

CAUTION


- Clean the sealing face before assembling two parts.
- Remove harmful foreign matters on the sealing face before applying sealant.
- When applying sealant gasket, sealant must not be protruded into the inside of oil pan.
- To prevent leakage of oil, apply sealant gasket to the inner threads of the bolt holes.

(3) Install the oil pan (A).

Uniformly tighten the bolts in several passes.

Tightening torque :

9.8 ~ 11.8N.m (1.0 ~ 1.2kgf.m, 7.2 ~ 8.7lb-ft)

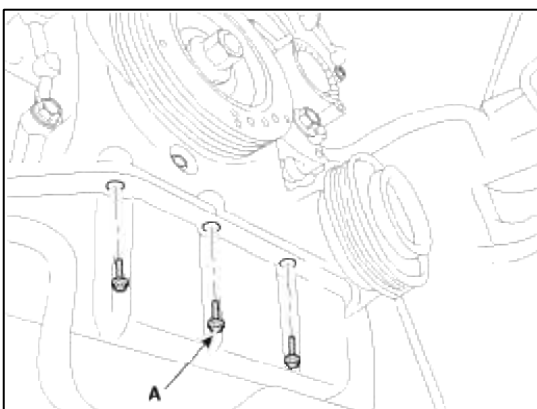


5. After assembly, wait at least 30 minutes before filling the engine with oil.

Oil Filter Assembly

1. Install the oil filter body.

Tightening torque :

19.6 ~ 21.6N.m (2.0 ~ 2.2kgf.m, 14.5 ~ 15.9lb-ft)

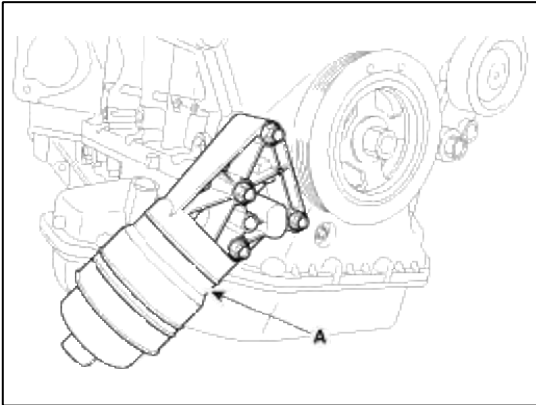


CAUTION

- All rubber gaskets must not be damaged by assembling parts.
- Always use a new gasket.


Engine Mechanical System > Lubrication System > Oil Pressure Switch > Repair procedures

Inspection

1. Check the continuity between the terminal and the body with an ohmmeter.
If there is no continuity, replace the oil pressure switch.

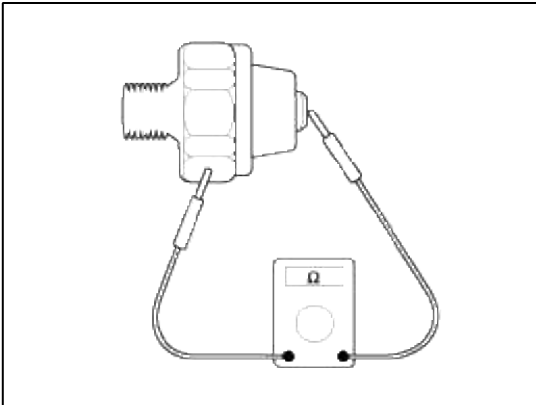


2. Check the continuity between the terminal and the body when the fine wire is pushed. If there is continuity even when the fine wire is pushed, replace the switch.

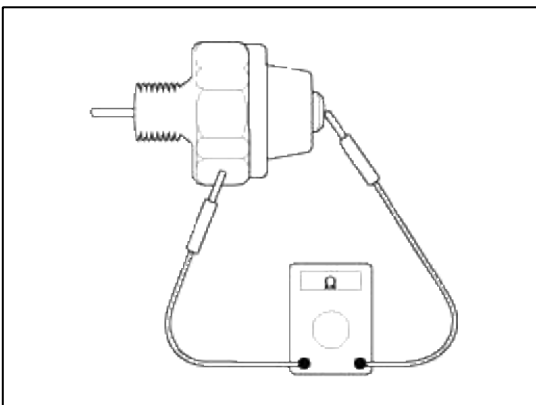

Engine Mechanical System > Intake And Exhaust System > Intake Manifold > Components and Components Location

Components

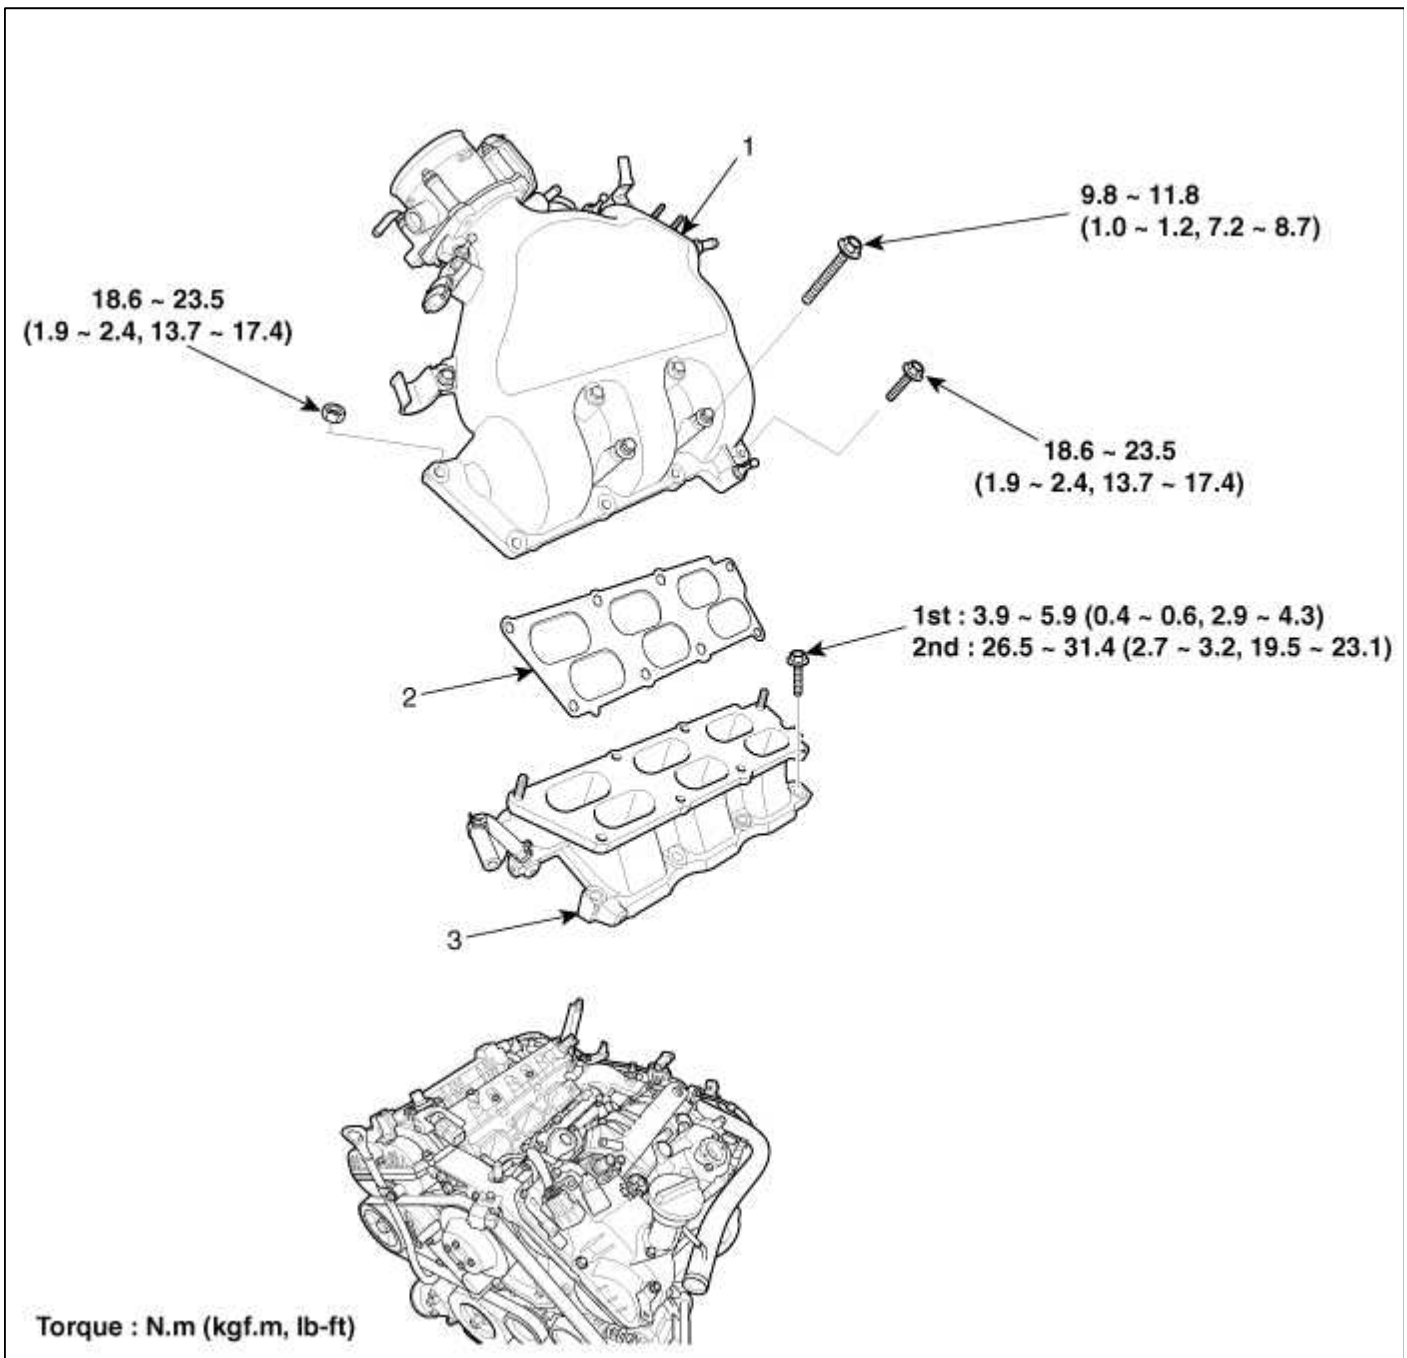

1. Surge tank	3. Intake manifold
2. Surge tank gasket	

Engine Mechanical System > Intake And Exhaust System > Intake Manifold > Repair procedures

Removal and Installation

CAUTION

To avoid damage, unplug the wiring connectors carefully while holding the connector portion.

NOTE


Mark all wiring and hoses to avoid misconnection.

1. Disconnect the battery negative cable.

Tightening torque :

7.8 ~ 9.8 N.m (0.8 ~ 1.0 kgf.m, 5.8 ~ 7.2 lb-ft)

2. Remove the engine cover (A).
3. Remove the strut bar (B).

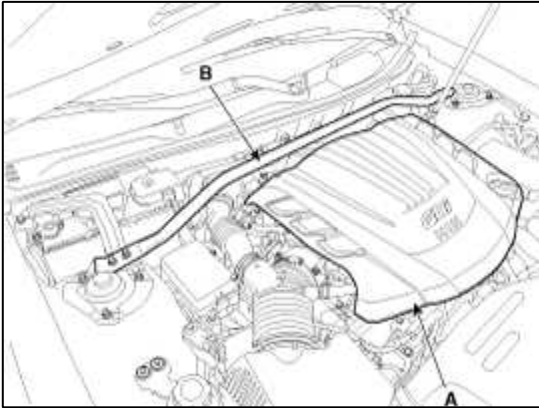

4. Loosen the drain plug and drain the engine coolant.
5. Remove the intake air hose and air cleaner assembly.
 - (1) Remove the air duct (A).
 - (2) Disconnect the Barometric Pressure Sensor (BPS) connector (B).
 - (3) Disconnect the breather hose (C).
 - (4) Disconnect the vacuum hose (D).
 - (5) Remove the intake air hose (E) and air cleaner assembly (F).


Tightening torque

Hose clamp bolt :


2.9 ~ 4.9 N.m (0.3 ~ 0.5 kgf.m, 2.2 ~ 3.6 lb-ft)

Air cleaner assembly bolts :


7.8 ~ 9.8 N.m (0.8 ~ 1.0 kgf.m, 5.8 ~ 7.2 lb-ft)

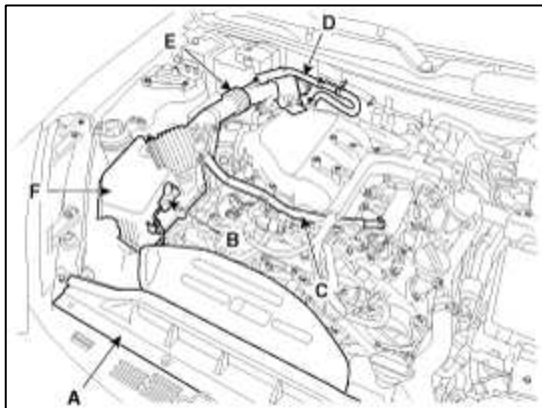

6. Disconnect the brake booster vacuum hose (A).

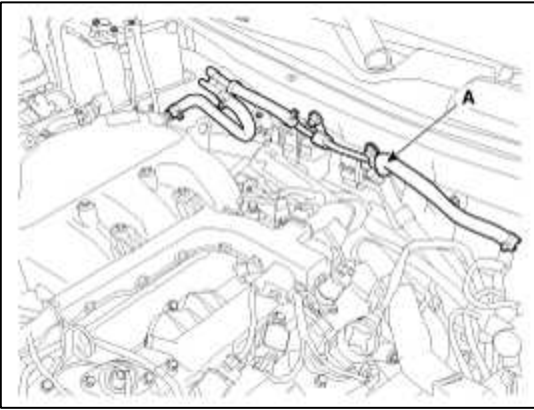

7. Disconnect the engine wiring connectors and harness protector on the surge tank. (Refer to Timing System in this group)
8. Disconnect the purge control solenoid valve (PCSV) hoses (A), positive crankcase ventilation (PCV) and the throttle body coolant hoses (C).

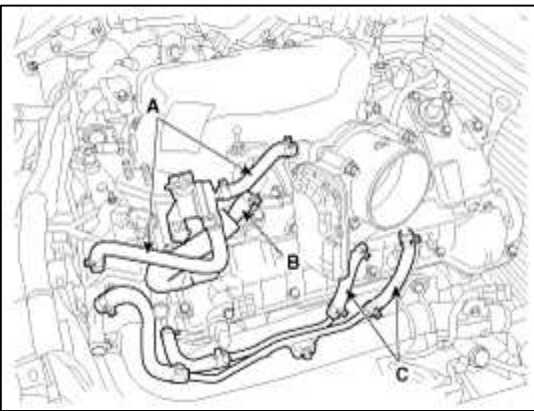

9. Remove the surge tank (A).

Tightening torque

Long bolt (2ea) :


9.8 ~ 11.8N.m (1.0 ~ 1.2kgf.m, 7.2 ~ 8.7lb-ft)

Short bolt (4ea) :

18.6 ~ 23.5N.m (1.9 ~ 2.4kgf.m, 13.7 ~ 17.4lb-ft)

Nut (2ea) :


18.6 ~ 23.5N.m (1.9 ~ 2.4kgf.m, 13.7 ~ 17.4lb-ft)

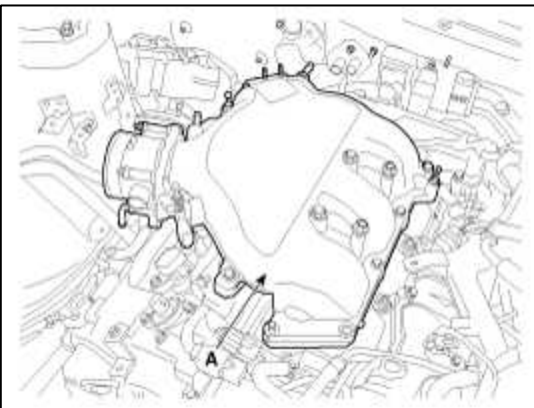


10. Remove the breather pipe & hose (A).

Tightening torque :

9.8 ~ 11.8 N.m (1.0 ~ 1.2 kgf.m, 7.2 ~ 8.7 lb-ft)

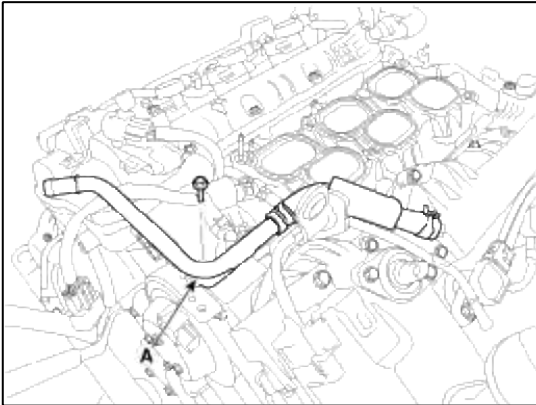

11. Disconnect the water hose & pipe (A) and then remove the intake manifold (B).

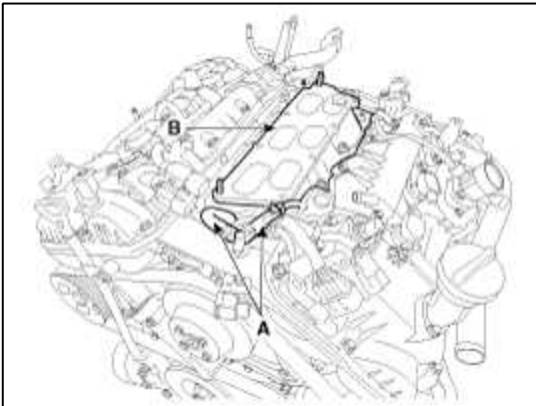**WARNING**

- Be sure to drain the engine coolant before removing the intake manifold.
- If any coolant drained from the cylinder head vent hole has entered the intake port. This can potentially lead to engine trouble.

12. Installation is reverse order of removal.

NOTE

Tighten the intake manifold bolts, in several passes as below.

a~h : 1st step order


1~8 : 2nd step order

Tightening torque

Step 1 : 3.9 ~ 5.9 N.m (0.4 ~ 0.6 kgf.m, 2.9 ~ 4.3 lb-ft)

Step 2 : 26.5 ~ 31.4 N.m (2.7 ~ 3.2 kgf.m, 19.5 ~ 23.1 lb-ft)


Step 3 : Repeat 2nd step twice or more

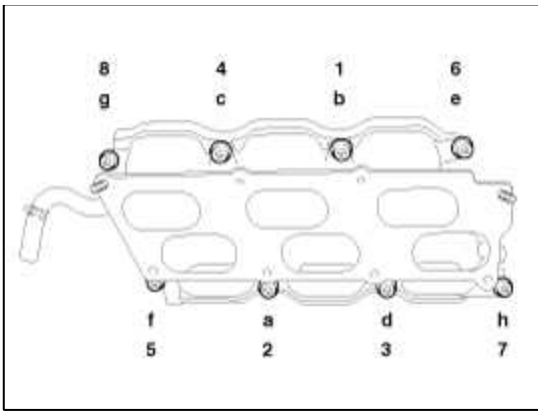**NOTE**

- When installing, replace with new gaskets.
- When replacing the LH gasket, tighten the screw(A) with specified torque.


Tightening torque :

2.9 ~ 3.9 N.m (0.3 ~ 0.4 kgf.m, 2.2 ~ 2.9 lb-ft)

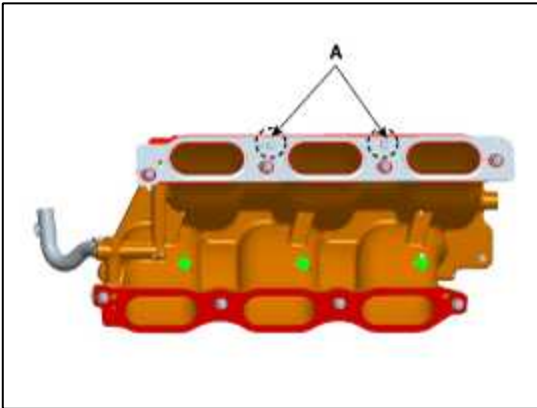

Engine Mechanical System > Intake And Exhaust System > Exhaust Manifold > Components and Components Location

Components

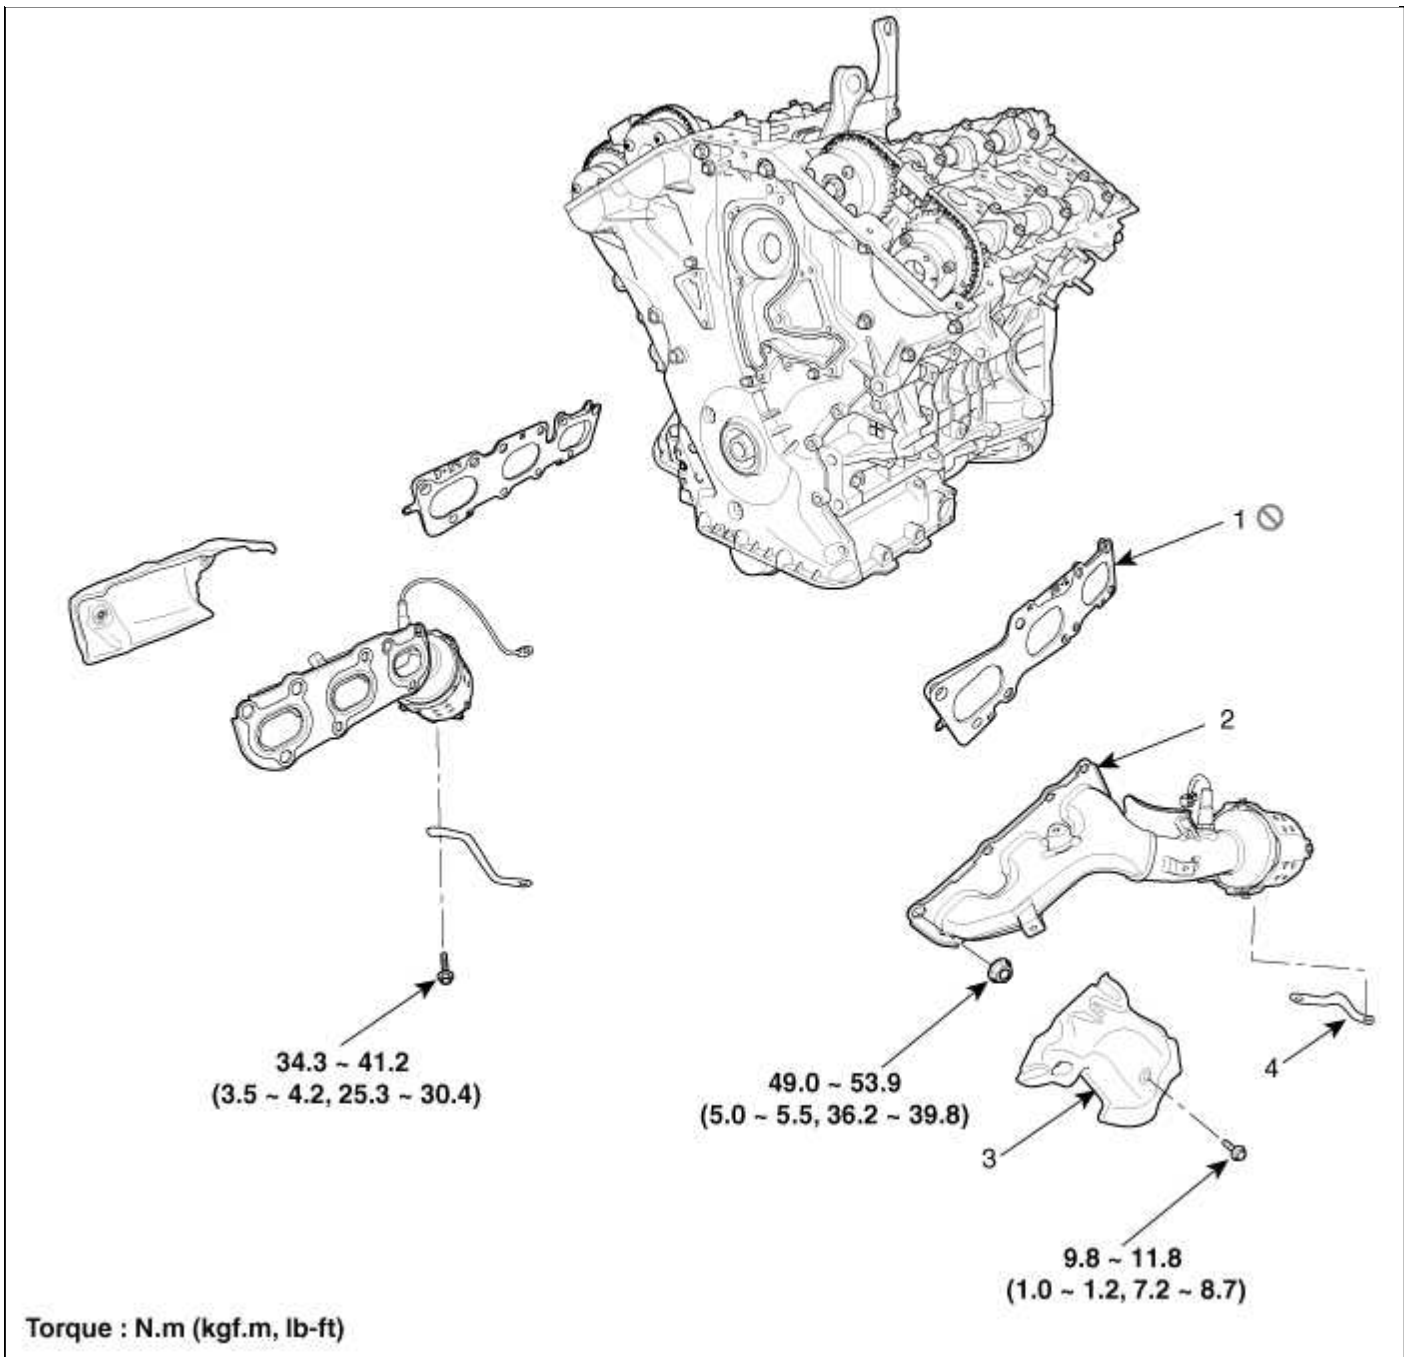

1. Exhaust manifold gasket
2. Exhaust manifold

3. Heat protector
4. Exhaust manifold stay

Engine Mechanical System > Intake And Exhaust System > Exhaust Manifold > Repair procedures

Removal and Installation

CAUTION


- To avoid damage, unplug the wiring connectors carefully while holding the connector portion.

NOTE


- Mark all wiring and hoses to avoid misconnection.

1. Disconnect the battery negative cable.

2. Loosen the drain plug and drain the engine coolant.
3. Remove the engine cover.
4. Remove the air duct and air cleaner assembly. (Refer to Intake and exhaust system in this group)
5. Remove the radiator upper hose and lower hose. (Refer to Cooling System in this group)
6. Disconnect the LH front oxygen sensor connector (A).

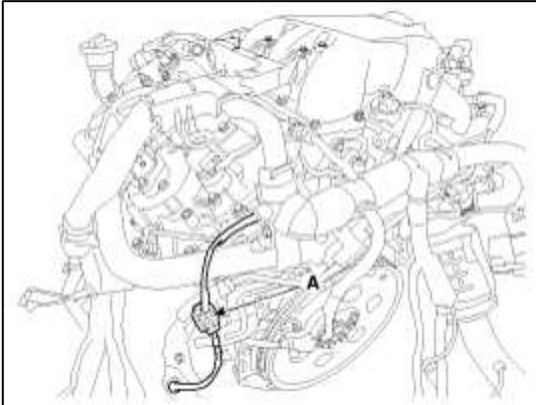


7. Disconnect the RH front oxygen sensor connector (A).

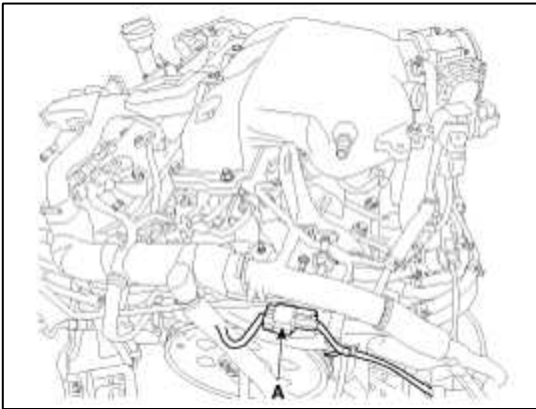

8. Remove the LH/RH exhaust manifold stays (A).

Tightening torque :


34.3 ~ 41.2 N.m (3.5 ~ 4.2 kgf.m, 25.3 ~ 30.4 lb-ft)

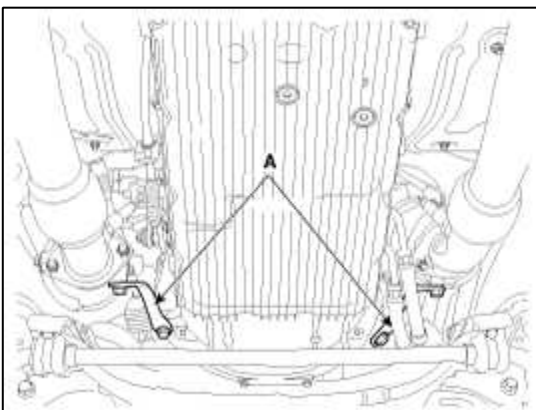

9. Remove the front muffler (A).

Tightening torque :

39.2 ~ 58.8N.m (4.0 ~ 6.0kgf.m, 28.9 ~ 43.4lb-ft)

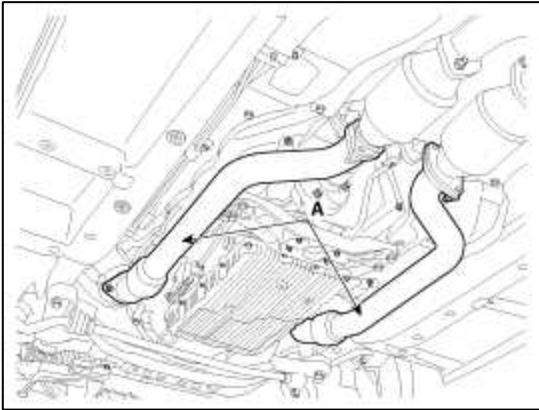

10. Remove the water outlet pipe (A) and the LH exhaust manifold heat protector (B).


Tightening torque

Water inlet pipe bolt :

19.6 ~ 23.5N.m (2.0 ~ 2.4kgf.m, 14.5 ~ 17.4lb-ft)

Heat protector bolts :

9.8 ~ 11.8 N.m (1.0 ~ 1.2 kgf.m, 7.2 ~ 8.7 lb-ft)

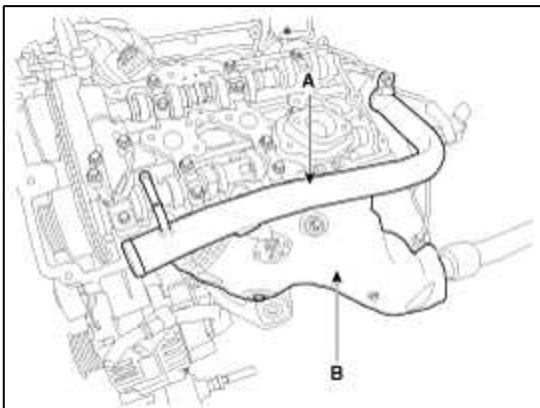

11. Remove the water inlet pipe (A) and the RH exhaust manifold heat protector (B).


Tightening torque

Water outlet pipe bolt :

19.6 ~ 23.5N.m (2.0 ~ 2.4kgf.m, 14.5 ~ 17.4lb-ft)

Heat protector bolts :



9.8 ~ 11.8 N.m (1.0 ~ 1.2 kgf.m, 7.2 ~ 8.7 lb-ft)

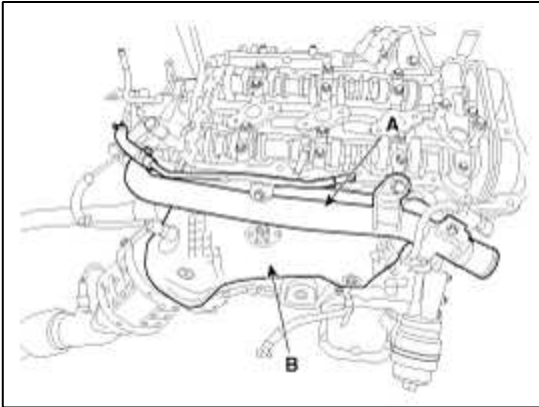

12. Remove the LH/RH exhaust manifolds (A).

Tightening torque :

49.0 ~ 53.9N.m (5.0 ~ 5.5kgf.m, 36.2 ~ 39.8lb-ft)

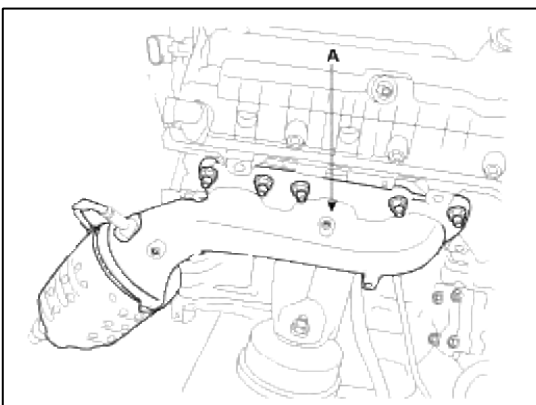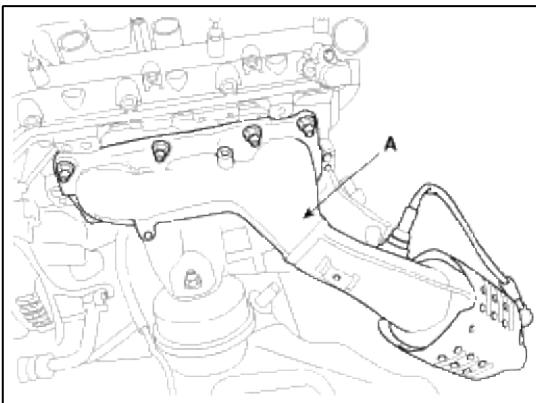


13. Remove the LH/RH exhaust manifold gaskets.

14. Installation is reverse order of removal.


NOTE

When installing the intake manifold, tighten the nuts with pre-torque first and then tighten the nuts with specified torque in the sequence shown.

[LH]

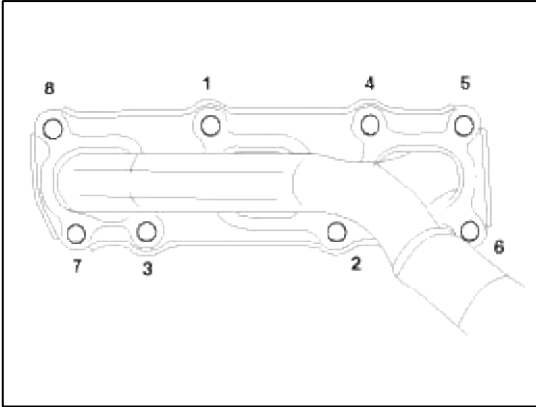


[RH]

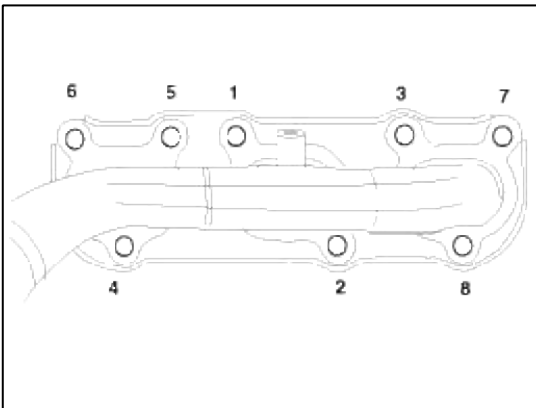

Engine Mechanical System > Intake And Exhaust System > Muffler > Components and Components Location

Components

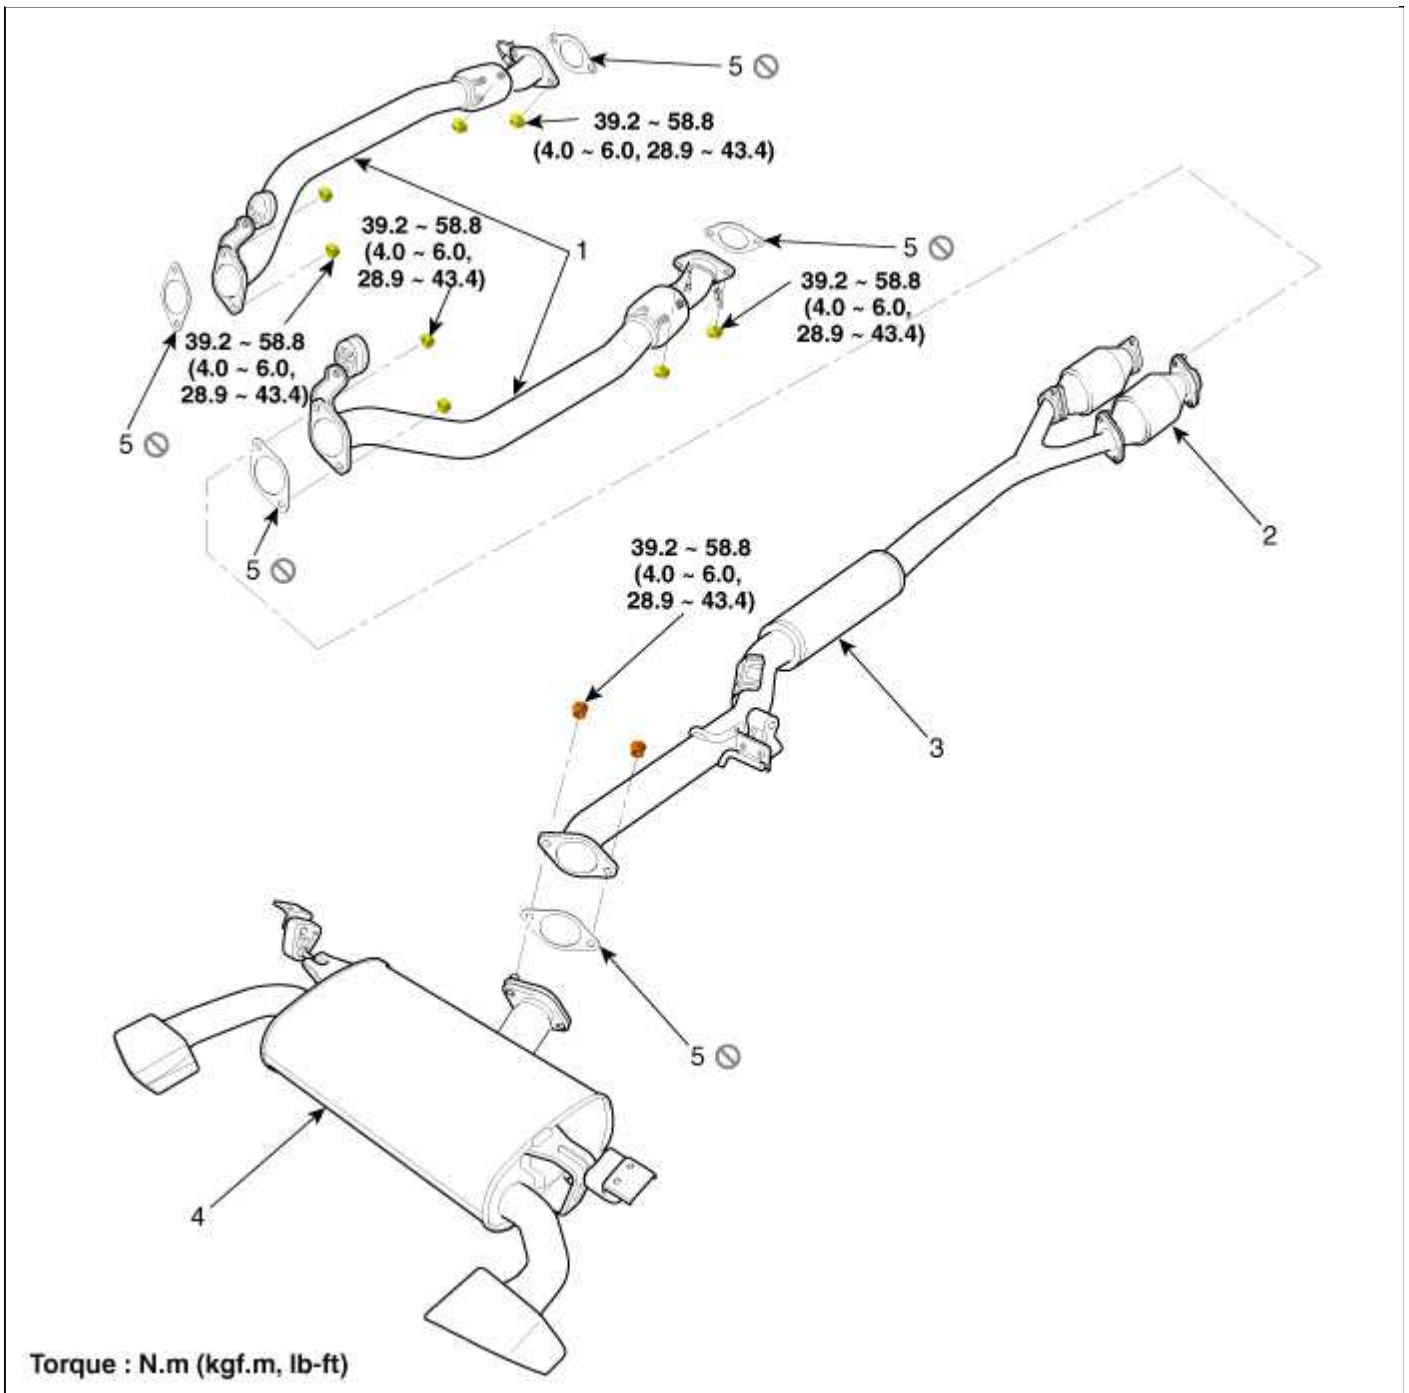


1. Front muffler	3. Center muffler
2. Catalytic converter	4. Main muffler
	5. Gasket

Engine Mechanical System > Intake And Exhaust System > Muffler > Repair procedures

Removal and Installation


1. Disconnect the rear oxygen sensor (HO2S) connector (A) on LH and RH side.

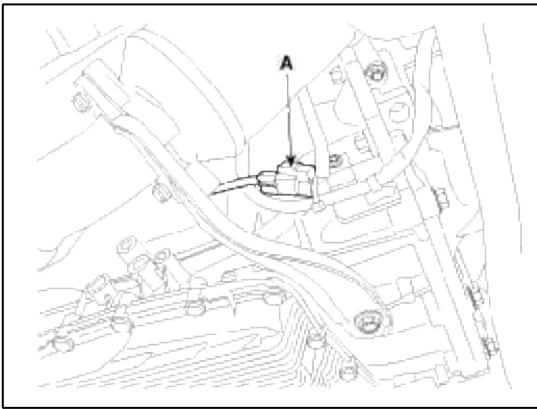

2. Remove the front muffler (A) on LH and RH side.

Tightening torque :


39.2 ~ 58.8N.m (4.0 ~ 6.0kgf.m, 28.9 ~ 43.4lb-ft)

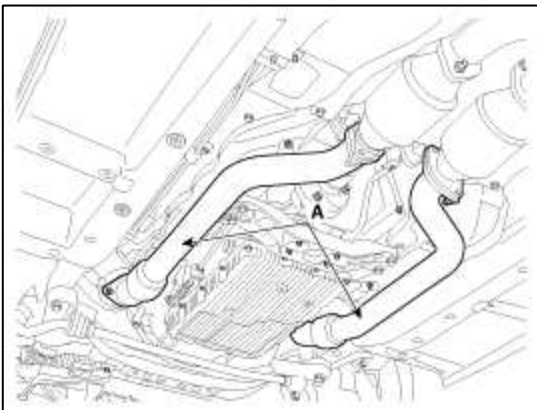


3. Remove the center muffler (B) after removing the tunnel stay (A).

Tightening torque :

39.2 ~ 58.8N.m (4.0 ~ 6.0kgf.m, 28.9 ~ 43.4lb-ft)

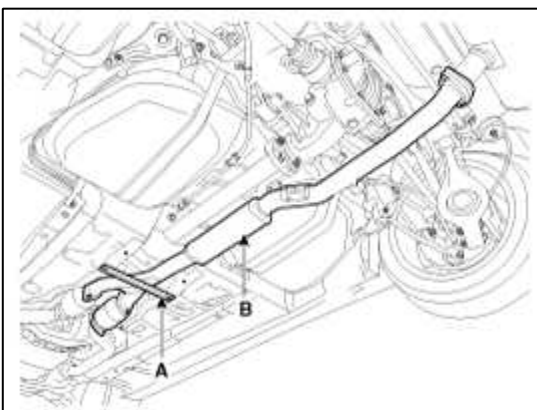

4. Remove the main muffler (A).

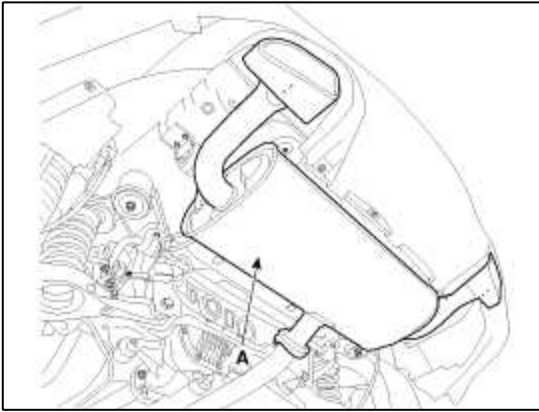

5. Installation is reverse order of removal.

GENESIS COUPE(BK) > 2013 > G 3.8 GDI > Fuel System**Fuel System > General Information > Specifications**

Specifications

Fuel Delivery System

Items	Specification	
Fuel Tank	Capacity	65 lit. (17.2 U.S.gal., 68.7 U.S.qt., 57.2 Imp.qt.)
Fuel Filter	Type	Paper type
Fuel Pressure	Low Pressure Fuel Line	480 ~ 520 kPa (4.9 ~ 5.3 kgf/cm ² , 69.6 ~ 75.4 psi)
	High Pressure Fuel Line	2.0 ~ 15.0 MPa (20.0 ~ 152.9 kgf/cm ² , 290.0 ~ 2175.0 psi)
Fuel Pump	Type	Electrical, in-tank type
	Driven by	Electric motor
High Pressure Fuel Pump	Type	Mechanical type
	Driven by	Camshaft

Sensors

Barometric Pressure Sensor (BPS)

Type: Piezo-resistive pressure sensor

Specification

Pressure (kPa)	Output Voltage (V)
10.0	0.50
55.0	2.21
100.0	3.93
115.0	4.50

Intake Air Temperature Sensor (IATS)

Type: Thermistor type

Specification

Temperature		Resistance (k Ω)
$^{\circ}\text{C}$	$^{\circ}\text{F}$	
-40	-40	40.93 ~ 48.35
-20	-4	13.89 ~ 16.03
0	32	5.38 ~ 6.09
10	50	3.48 ~ 3.90
20	68	2.31 ~ 2.57
40	104	1.08 ~ 1.21
60	140	0.54 ~ 0.66
80	176	0.29 ~ 0.34

Manifold Absolute Pressure Sensor (MAPS)

Type: Piezo-resistive pressure sensor

Specification

Pressure (kPa)	Output Voltage (V)
20.0	0.79
46.66	1.84
101.32	4.0

Engine Coolant Temperature Sensor (ECTS)

Type: Thermistor type

Specification

Temperature		Resistance (k Ω)
$^{\circ}\text{C}$	$^{\circ}\text{F}$	
-40	-40	48.14
-20	-4	14.13 ~ 16.83
0	32	5.79
20	68	2.31 ~ 2.59
40	104	1.15
60	140	0.59
80	176	0.32

Throttle Position Sensor (TPS) [integrated into ETC module]

Type: Hall IC Non-contact sensor type

Specification

Throttle angle(°)	Output Voltage (V)	
	TPS1	TPS2
0	0.5	4.5
10	0.96	4.05
20	1.41	3.59
30	1.87	3.14
40	2.32	2.68
50	2.78	2.23
60	3.23	1.77
70	3.69	1.32
80	4.14	0.86
90	4.6	0.41
98	4.65	0.35
C.T (0)	0.5	4.5
W.O.T (86)	4.41	0.59

Crankshaft Position Sensor (CKPS)

Type: Magnetic field sensitive sensor

Specification

Item	Specification
Coil Resistance (Ω)	774 ~ 946 [20°C(68°F)]
Air Gap (mm)	0.5 ~ 1.5

Camshaft Position Sensor (CMPS)

Type: Hall effect type

Specification

Item	Specification
Output Voltage (V)	High: 5.0V
	Low: 0.7V
Air Gap (mm)	0.5 ~ 1.5

Knock Sensor (KS)

Type: Piezo-electricity type

Specification

Item	Specification
Capacitance (pF)	950 ~ 1,350
Resistance (M Ω)	4.87

Heated Oxygen Sensor (HO2S)

Type: Zirconia (ZrO₂) Type

Specification


A/F Ratio (λ)	Output Voltage(V)
RICH	Min. 0.8
LEAN	Max. 0.1

Item	Specification
Heater Resistance (Ω)	3.3 ~ 4.1[20°C(68°F)]

Rail Pressure Sensor (RPS)

Type: Piezo-electricity type

Specification

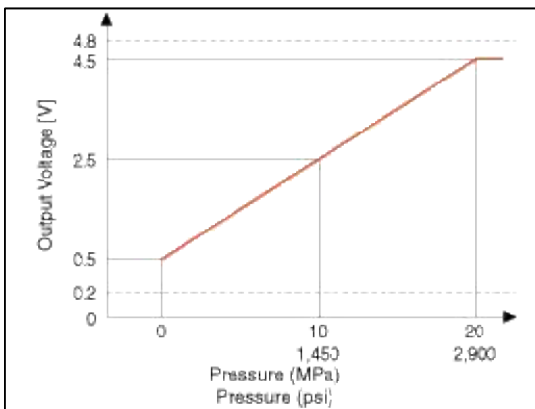

CVVT Oil Temperature Sensor (OTS)

Type: Thermistor type

Specification

Temperature		Resistance (k Ω)
°C	°F	
-40	-40	52.15
-20	-4	16.52
0	32	6.0
20	68	2.45
40	104	1.11
60	140	0.54
80	176	0.29

Accelerator Position Sensor (APS)

Type: Variable resistor type

Specification

Accelerator Position	Output Voltage (V)	
	APS1	APS2
C.T	0.7 ~ 0.8	0.33 ~ 0.43
W.O.T	3.85 ~ 4.35	1.93 ~ 2.18

Fuel Tank Pressure Sensor (FTPS)

Type: Piezo - Resistivity type

Specification

Pressure (kPa)	Output Voltage (V)
-6.67	0.5
0	2.5
+6.67	4.5

Actuators

Injector

Specification

Item	Specification
Coil Resistance (Ω)	0.98 ~ 1.14 [20°C(68°F)]

ETC Motor [integrated into ETC Module]

Specification

Item	Specification
Coil Resistance (Ω)	0.3 ~ 100 [20°C(68°F)]

Purge Control Solenoid Valve (PCSV)

Specification

Item	Specification
Coil Resistance (Ω)	22.0 ~ 26.0 [20°C(68°F)]

CVVT Oil Control Valve (OCV)

Specification

Item	Specification
Coil Resistance (Ω)	9.4 ~ 10.4 [20°C(68°F)]

Ignition Coil

Type: Stick type

Specification

Item	Specification
Primary Coil Resistance (Ω)	0.62 ± 10 [20°C(68°F)]
Secondary Coil Resistance (k Ω)	7.0 ± 15 [20°C(68°F)]

Fuel Pressure Control Valve (FPCV)

Specification

Item	Specification
Coil Resistance (Ω)	1.04 ~ 1.27 [23°C(73.4°F)]

Canister Close Valve (CCV)

Specification

Item	Specification
Coil Resistance (Ω)	23.0 ~ 26.0 [20°C(68°F)]

Service Standard

Item		Specification	
Ignition Timing (°)		BTDC $7^\circ \pm 10^\circ$	
Idle Speed (rpm)	A/C OFF	Neutral, N, P-range	600 ± 100
		D-range	600 ± 100
	A/C ON	Neutral, N, P-range	600 ± 100
		D-range	600 ± 100

Tightening Torques

Engine Control System

Item	kgf.m	N.m	lb-ft
ECM installation bolt	1.0 ~ 1.2	9.8 ~ 11.8	7.2 ~ 8.7
ECM bracket installation bolt / nut	1.0 ~ 1.2	9.8 ~ 11.8	7.2 ~ 8.7
IDB installation bolt / nut	1.0 ~ 1.2	9.8 ~ 11.8	7.2 ~ 8.7
IDB bracket installation bolt / nut	1.0 ~ 1.2	9.8 ~ 11.8	7.2 ~ 8.7
Barometric pressure sensor installation bolt	0.4 ~ 0.6	3.9 ~ 5.9	2.9 ~ 4.3
Engine coolant temperature sensor installation	2.0 ~ 4.0	19.6 ~ 39.2	14.5 ~ 28.9
Manifold absolute pressure sensor installation bolt	0.8 ~ 1.2	7.8 ~ 11.8	5.8 ~ 8.7
Crankshaft position sensor installation bolt	0.7 ~ 1.0	6.9 ~ 9.8	5.1 ~ 7.2




Camshaft position sensor (Bank 1/Intake) installation bolt	0.7 ~ 1.0	6.9 ~ 9.8	5.1 ~ 7.2
Camshaft position sensor (Bank 1/Exhaust) installation bolt	0.7 ~ 1.0	6.9 ~ 9.8	5.1 ~ 7.2
Camshaft position sensor (Bank 2/Intake) installation bolt	0.7 ~ 1.0	6.9 ~ 9.8	5.1 ~ 7.2
Camshaft position sensor (Bank 2/Exhaust) installation bolt	0.7 ~ 1.0	6.9 ~ 9.8	5.1 ~ 7.2
Knock sensor #1 (Bank 1) installation bolt	1.6 ~ 2.4	15.7 ~ 23.5	11.6 ~ 17.4
Knock sensor #2 (Bank 2) installation bolt	1.6 ~ 2.4	15.7 ~ 23.5	11.6 ~ 17.4
Heated oxygen sensor (Bank 1 / sensor 1) installation	3.6 ~ 4.6	35.3 ~ 45.1	26.0 ~ 33.3
Heated oxygen sensor (Bank 1 / sensor 2) installation	3.6 ~ 4.6	35.3 ~ 45.1	26.0 ~ 33.3
Heated oxygen sensor (Bank 2 / sensor 1) installation	3.6 ~ 4.6	35.3 ~ 45.1	26.0 ~ 33.3
Heated oxygen sensor (Bank 2 / sensor 2) installation	3.6 ~ 4.6	35.3 ~ 45.1	26.0 ~ 33.3
Rail pressure sensor installation	3.0 ~ 3.5	29.4 ~ 34.3	21.7 ~ 25.3
CVVT oil temperature sensor installation	2.0 ~ 4.0	19.6 ~ 39.2	14.5 ~ 28.9
Electronic throttle body installation bolt	0.8 ~ 1.2	7.8 ~ 11.8	5.8 ~ 8.7
Purge control solenoid valve bracket installation bolt	0.8 ~ 1.2	7.8 ~ 11.8	5.8 ~ 8.7
CVVT oil control valve (Bank 1 / Intake) installation bolt	1.0 ~ 1.2	9.8 ~ 11.8	7.2 ~ 8.7
CVVT oil control valve (Bank 1 / Exhaust) installation bolt	1.0 ~ 1.2	9.8 ~ 11.8	7.2 ~ 8.7
CVVT oil control valve (Bank 2 / Intake) installation bolt	1.0 ~ 1.2	9.8 ~ 11.8	7.2 ~ 8.7
CVVT oil control valve (Bank 2 / Exhaust) installation bolt	1.0 ~ 1.2	9.8 ~ 11.8	7.2 ~ 8.7
Ignition coil installation bolt	1.0 ~ 1.2	9.8 ~ 11.8	7.2 ~ 8.7
Ignition coil condenser installation bolt	1.0 ~ 1.2	9.8 ~ 11.8	7.2 ~ 8.7
Fuel tank pressure sensor installation bolt	0.4 ~ 0.6	3.9 ~ 5.9	2.9 ~ 4.3
Canister close valve installation bolt	0.4 ~ 0.6	3.9 ~ 5.9	2.9 ~ 4.3
Fuel pump resistor installation bolt	0.8 ~ 1.2	7.8 ~ 11.8	5.8 ~ 8.7



Fuel Delivery System

Item	kgf.m	N.m	lb-ft
Fuel tank band installation nut	4.0 ~ 5.5	39.2 ~ 54.0	28.9 ~ 39.8
Fuel pump installation bolt	0.2 ~ 0.3	2.0 ~ 2.9	1.4 ~ 2.2
Sub fuel sender installation bolt	0.2 ~ 0.3	2.0 ~ 2.9	1.4 ~ 2.2
Filler-neck assembly installation bolt	0.8 ~ 1.2	7.8 ~ 11.8	5.8 ~ 8.7
Filler-neck assembly installation nut	0.4 ~ 0.6	3.9 ~ 5.9	2.9 ~ 4.3
Accelerator pedal module installation bolt	0.9 ~ 1.4	8.8 ~ 13.7	6.5 ~ 10.1
Delivery pipe installation bolt	1.9 ~ 2.4	18.6 ~ 23.5	13.7 ~ 17.4
High pressure fuel pipe bracket installation bolt	1.0 ~ 1.2	9.8 ~ 11.8	7.2 ~ 8.7
High pressure fuel pump installation bolt	1.3 ~ 1.5	12.8 ~ 14.7	9.4 ~ 10.9
High pressure fuel pipe installation nut	3.0 ~ 3.6	29.4 ~ 35.3	21.7 ~ 26.0

Fuel System > General Information > Special Service Tools

Special Service Tools

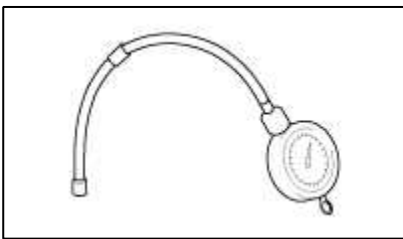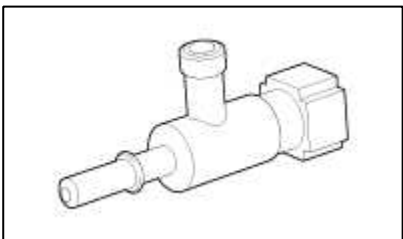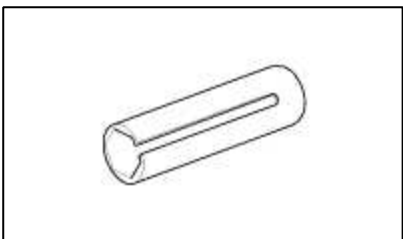

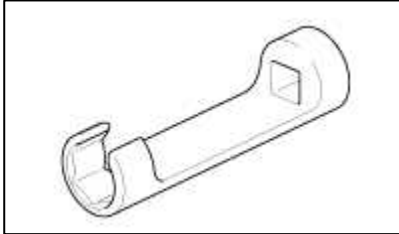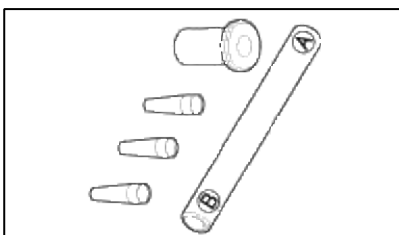Item	Illustration	Application
Fuel Pressure Gauge (09353-24100)		Measuring the fuel line pressure
Fuel Pressure Gauge Adapter (09353-02100)		Connection between the high pressure fuel pump and the fuel feed line
Heated Oxygen Sensor Socket Wrench (09392-2H100)		Removal and installation of the heated oxygen sensor

Torque Wrench Socket (17mm) (09314-3V100)	 A technical drawing of a torque wrench socket, which is a long, thin metal tool with a square hole at one end and a hexagonal hole at the other.	Removal and installation of the high pressure fuel pipe
Injector Combustion Seal Guide & Sizing tool (09353-2B000)	 A technical drawing of an injector combustion seal guide and sizing tool. It consists of a long, thin metal rod with a circular hole at one end and a smaller hole at the other. There are also several small, cylindrical components shown next to it.	Installation of the injector combustion seal

Fuel System > General Information > Troubleshooting

Basic Troubleshooting

Basic Troubleshooting Guide

1	Bring Vehicle to Workshop
2	Analyze Customer's Problem
	<ul style="list-style-type: none"> Ask the customer about the conditions and environment relative to the issue. (Use CUSTOMER PROBLEM ANALYSIS SHEET).
3	Verify Symptom, and then Check DTC and Freeze Frame Data
	<ul style="list-style-type: none"> Connect the GDS to Diagnostic Link Connector (DLC). Record the DTC and Freeze Frame Data. <p> NOTE To erase DTC and Freeze Frame Data, refer to Step 5.</p>
4	Confirm the Inspection Procedure for the System or Part
	<ul style="list-style-type: none"> Using the SYMPTOM TROUBLESHOOTING GUIDE CHART, choose the correct inspection procedure for the system or part to be checked.
5	Erase the DTC and Freeze Frame Data
	<p> WARNING NEVER erase DTC and Freeze Frame Data before completing Step 2 : MIL/DTC in CUSTOMER PROBLEM ANALYSIS SHEET.</p>
6	Inspect Vehicle Visually
	<ul style="list-style-type: none"> Go to Step 11, if you recognize the problem.
7	Recreate (Simulate) Symptoms of the DTC
	<ul style="list-style-type: none"> Try to recreate or simulate the symptoms and conditions of the malfunction as described by customer. If DTC(s) is/are displayed, simulate the condition according to troubleshooting procedure for the DTC.
8	Confirm Symptoms of Problem
	<ul style="list-style-type: none"> If DTC(s) is/are not displayed, go to Step 9. If DTC(s) is/are displayed, go to Step 11.
9	Recreate (Simulate) Symptom
	<ul style="list-style-type: none"> Try to recreate or simulate the condition of the malfunction as described by the customer.
10	Check the DTC
	<ul style="list-style-type: none"> If DTC(s) does(do) not occur, refer to INTERMITTENT PROBLEM PROCEDURE in BASIC INSPECTION PROCEDURE. If DTC(s) occur(s), go to Step 11.
11	Perform Troubleshooting Procedure for DTC
12	Adjust or repair the vehicle
13	Confirmation test
14	END

1. VEHICLE INFORMATION

VIN No.		Transmission	<input type="checkbox"/> M/T <input type="checkbox"/> A/T <input type="checkbox"/> CVT <input type="checkbox"/> etc.
Production date		Driving type	<input type="checkbox"/> 2WD (FF) <input type="checkbox"/> 2WD (FR) <input type="checkbox"/> 4WD
Odometer Reading	_____ km/mile	DPF (Diesel Engine)	<input type="checkbox"/> With DPF <input type="checkbox"/> Without DPF

2. SYMPTOMS

<input type="checkbox"/> Unable to start	<input type="checkbox"/> Engine does not turn over <input type="checkbox"/> Incomplete combustion <input type="checkbox"/> Initial combustion does not occur
<input type="checkbox"/> Difficult to start	<input type="checkbox"/> Engine turns over slowly <input type="checkbox"/> Other _____
<input type="checkbox"/> Poor idling	<input type="checkbox"/> Rough idling <input type="checkbox"/> Incorrect idling <input type="checkbox"/> Unstable idling (High: _____ rpm, Low: _____ rpm) <input type="checkbox"/> Other _____
<input type="checkbox"/> Engine stall	<input type="checkbox"/> Soon after starting <input type="checkbox"/> After accelerator pedal depressed <input type="checkbox"/> After accelerator pedal released <input type="checkbox"/> During A/C ON <input type="checkbox"/> Shifting from N to D-range <input type="checkbox"/> Other _____
<input type="checkbox"/> Others	<input type="checkbox"/> Poor driving (Surge) <input type="checkbox"/> Knocking <input type="checkbox"/> Poor fuel economy <input type="checkbox"/> Back fire <input type="checkbox"/> After fire <input type="checkbox"/> Other _____

3. ENVIRONMENT

Problem frequency	<input type="checkbox"/> Constant <input type="checkbox"/> Sometimes (_____) <input type="checkbox"/> Once only <input type="checkbox"/> Other _____
Weather	<input type="checkbox"/> Fine <input type="checkbox"/> Cloudy <input type="checkbox"/> Rainy <input type="checkbox"/> Snowy <input type="checkbox"/> Other _____
Outdoor temperature	Approx. _____ °C/°F
Place	<input type="checkbox"/> Highway <input type="checkbox"/> Suburbs <input type="checkbox"/> Inner City <input type="checkbox"/> Uphill <input type="checkbox"/> Downhill <input type="checkbox"/> Rough road <input type="checkbox"/> Other _____
Engine temperature	<input type="checkbox"/> Cold <input type="checkbox"/> Warming up <input type="checkbox"/> After warming up <input type="checkbox"/> Any temperature
Engine operation	<input type="checkbox"/> Starting <input type="checkbox"/> Just after starting (_____ min) <input type="checkbox"/> Idling <input type="checkbox"/> Racing <input type="checkbox"/> Driving <input type="checkbox"/> Constant speed <input type="checkbox"/> Acceleration <input type="checkbox"/> Deceleration <input type="checkbox"/> A/C switch ON/OFF <input type="checkbox"/> Other _____

4. MIL/DTC

MIL (Malfunction Indicator Lamp)	<input type="checkbox"/> Remains ON <input type="checkbox"/> Sometimes lights up <input type="checkbox"/> Does not light	
DTC	Normal check (Pre-check)	<input type="checkbox"/> Normal <input type="checkbox"/> DTC (_____) <input type="checkbox"/> Freeze Frame Data
	Check mode	<input type="checkbox"/> Normal <input type="checkbox"/> DTC (_____) <input type="checkbox"/> Freeze Frame Data

5. ECM/PCM INFORMATION

ECM/PCM Part No.	
ROM ID	

Basic Inspection Procedure

Measuring Condition of Electronic Parts' Resistance

The measured resistance at high temperature after vehicle running may be high or low. So all resistance must be measured at ambient temperature (20°C, 68°F), unless stated otherwise.


NOTE

The measured resistance in except for ambient temperature (20°C, 68°F) is reference value.

Intermittent Problem Inspection Procedure

Sometimes the most difficult case in troubleshooting is when a problem symptom occurs but does not occur again during testing. An example would be if a problem appears only when the vehicle is cold but has not appeared when warm. In this case, the technician should thoroughly make out a "Customer Problem Analysis Sheet" and recreate (simulate) the environment and condition which occurred when the vehicle was having the issue.

1. Clear Diagnostic Trouble Code (DTC).
2. Inspect connector connection, and check terminal for poor connections, loose wires, bent, broken or corroded pins, and then verify that the connectors are always securely fastened.

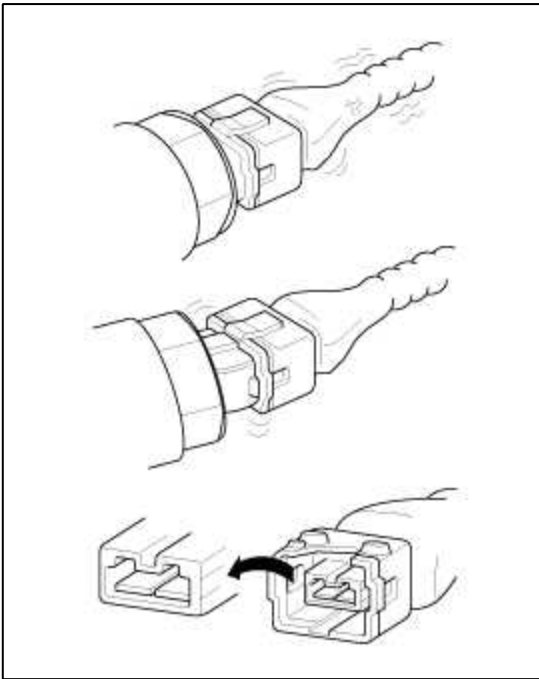

3. Slightly shake the connector and wiring harness vertically and horizontally.
4. Repair or replace the component that has a problem.
5. Verify that the problem has disappeared with the road test.

- Simulating Vibration

- 1) Sensors and Actuators

: Slightly vibrate sensors, actuators or relays with finger.

WARNING

Strong vibration may break sensors, actuators or relays

- 2) Connectors and Harness

: Lightly shake the connector and wiring harness vertically and then horizontally.

- Simulating Heat

- 1) Heat components suspected of causing the malfunction with a hair dryer or other heat source.

WARNING

- DO NOT heat components to the point where they may be damaged.
- DO NOT heat the ECM directly.

- Simulating Water Sprinkling

- 1) Sprinkle water onto vehicle to simulate a rainy day or a high humidity condition.

WARNING

DO NOT sprinkle water directly into the engine compartment or electronic components.


- Simulating Electrical Load

- 1) Turn on all electrical systems to simulate excessive electrical loads (Radios, fans, lights, rear window defogger, etc.).


Connector Inspection Procedure

1. Handling of Connector


- A. Never pull on the wiring harness when disconnecting connectors.

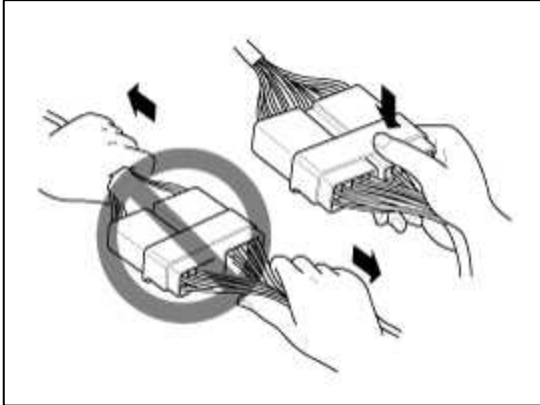


- B. When removing the connector with a lock, press or pull locking lever.

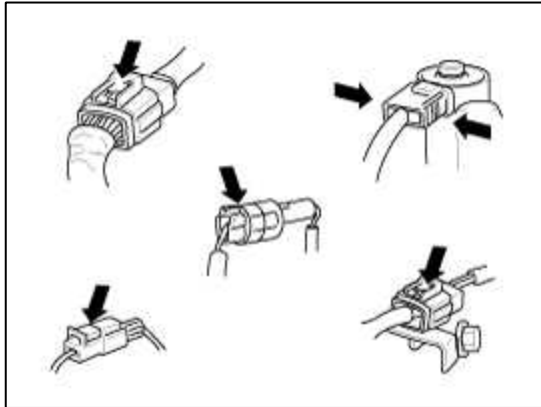


- C. Listen for a click when locking connectors. This sound indicates that they are securely locked.

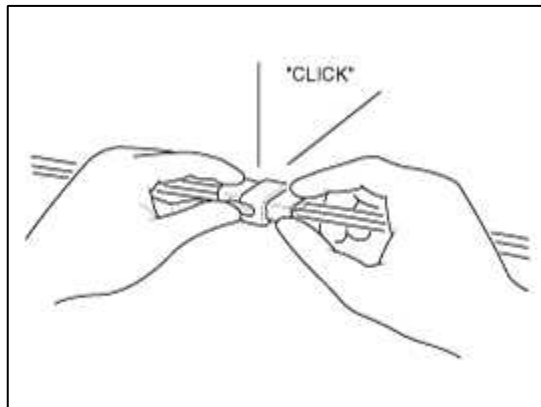

- D. When a tester is used to check for continuity, or to measure voltage, always insert tester probe from wire harness side.

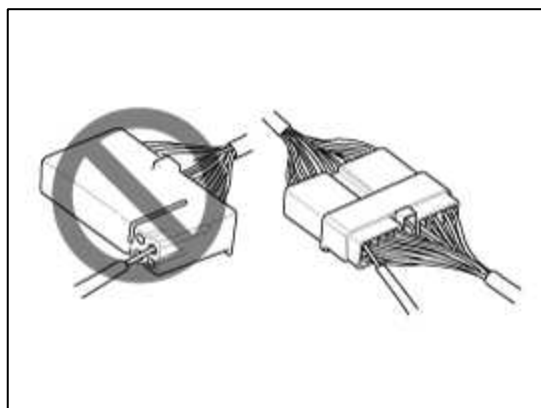

- E. Check waterproof connector terminals from the connector side. Waterproof connectors cannot be accessed from harness side.

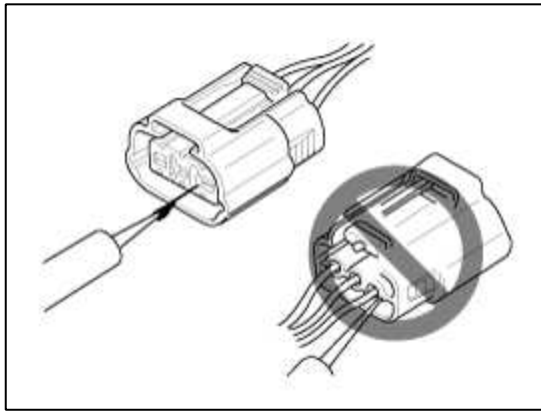

NOTE

- Use a fine wire to prevent damage to the terminal.
- Do not damage the terminal when inserting the tester lead.

2. Checking Point for Connector

- A. While the connector is connected:

Hold the connector, check connecting condition and locking efficiency.


- B. When the connector is disconnected:

Check missed terminal, crimped terminal or broken core wire by slightly pulling the wire harness. Visually check for rust, contamination, deformation and bend.

- C. Check terminal tightening condition:

Insert a spare male terminal into a female terminal, and then check terminal tightening conditions.

- D. Pull lightly on individual wires to ensure that each wire is secured in the terminal.

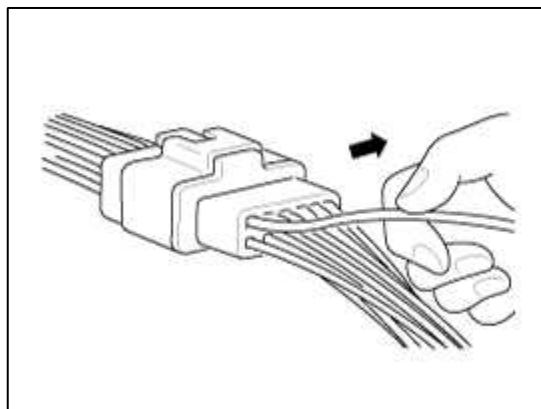

3. Repair Method of Connector Terminal

- A. Clean the contact points using air gun and/or shop rag.

NOTE

Never use sand paper when polishing the contact points, otherwise the contact point may be damaged.

- B. In case of abnormal contact pressure, replace the female terminal.

Wire Harness Inspection Procedure

1. Before removing the wire harness, check the wire harness position and crimping in order to restore it correctly.
2. Check whether the wire harness is twisted, pulled or loosened.
3. Check whether the temperature of the wire harness is abnormally high.
4. Check whether the wire harness is rotating, moving or vibrating against the sharp edge of a part.

5. Check the connection between the wire harness and any installed part.
6. If the covering of wire harness is damaged; secure, repair or replace the harness.

Electrical Circuit Inspection Procedure


● Check Open Circuit

1. Procedures for Open Circuit

A. Continuity Check

B. Voltage Check

If an open circuit occurs (as seen in [FIG. 1]), it can be found by performing Step 2 (Continuity Check Method) or Step 3 (Voltage Check Method) as shown below.

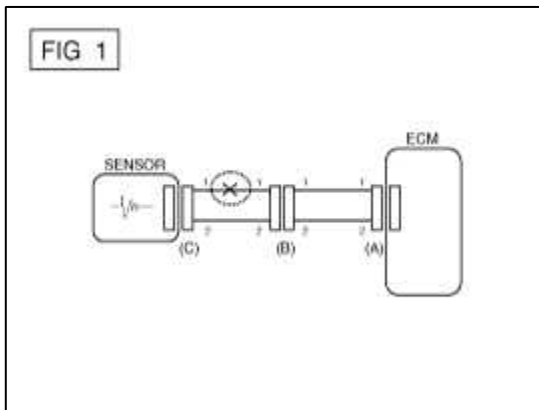

2. Continuity Check Method

NOTE

When measuring for resistance, lightly shake the wire harness above and below or from side to side.

Specification (Resistance)


1Ω or less → Normal Circuit

$1M\Omega$ or Higher → Open Circuit

A. Disconnect connectors (A), (C) and measure resistance between connector (A) and (C) as shown in [FIG. 2].


In [FIG.2.] the measured resistance of line 1 and 2 is higher than $1M\Omega$ and below 1Ω respectively.

Specifically the open circuit is line 1 (Line 2 is normal). To find exact break point, check sub line of line 1 as described in next step.

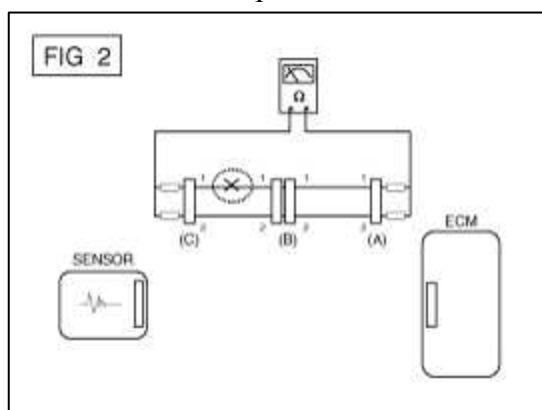

B. Disconnect connector (B), and measure for resistance between connector (C) and (B1) and between (B2) and (A) as shown in [FIG. 3].


In this case the measured resistance between connector (C) and (B1) is higher than $1M\Omega$ and the open circuit is between terminal 1 of connector (C) and terminal 1 of connector (B1).

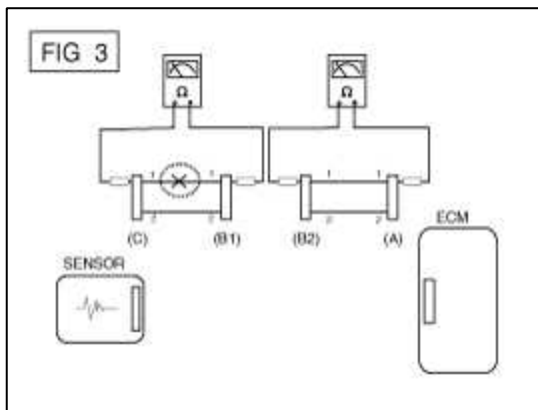

3. Voltage Check Method

A. With each connector still connected, measure the voltage between the chassis ground and terminal 1 of each connectors (A), (B) and (C) as shown in [FIG. 4].

The measured voltage of each connector is 5V, 5V and 0V respectively. So the open circuit is between connector (C) and (B).

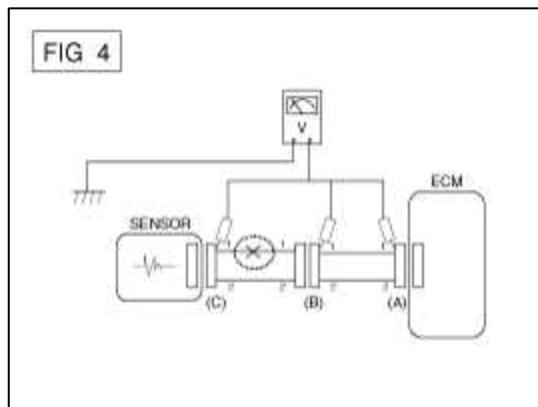


● Check Short Circuit

1. Test Method for Short to Ground Circuit

A. Continuity Check with Chassis Ground

If short to ground circuit occurs as shown in [FIG. 5], the broken point can be found by performing Step 2 (Continuity Check Method with Chassis Ground) as shown below.

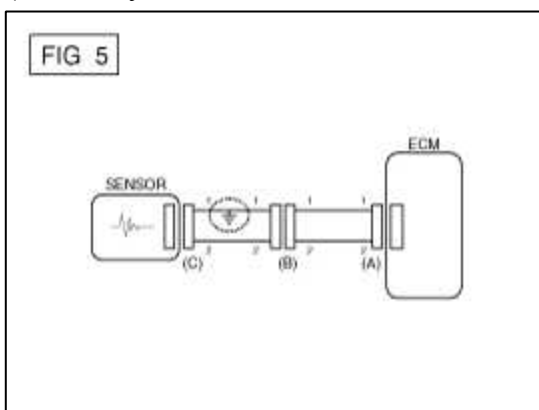

2. Continuity Check Method (with Chassis Ground)

NOTE

Lightly shake the wire harness above and below, or from side to side when measuring the resistance.

Specification (Resistance)


1Ω or less → Short to Ground Circuit

1MΩ or Higher → Normal Circuit

A. Disconnect connectors (A), (C) and measure for resistance between connector (A) and Chassis Ground as shown in [FIG. 6].


The measured resistance of line 1 and 2 in this example is below 1 Ω and higher than 1MΩ respectively.

Specifically the short to ground circuit is line 1 (Line 2 is normal). To find exact broken point, check the sub line of line 1 as described in the following step.

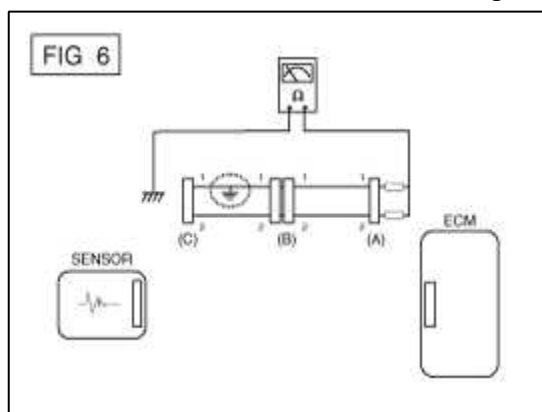

B. Disconnect connector (B), and measure the resistance between connector (A) and chassis ground, and between (B1) and chassis ground as shown in [FIG. 7].


The measured resistance between connector (B1) and chassis ground is 1Ω or less. The short to ground circuit is between terminal 1 of connector (C) and terminal 1 of connector (B1).

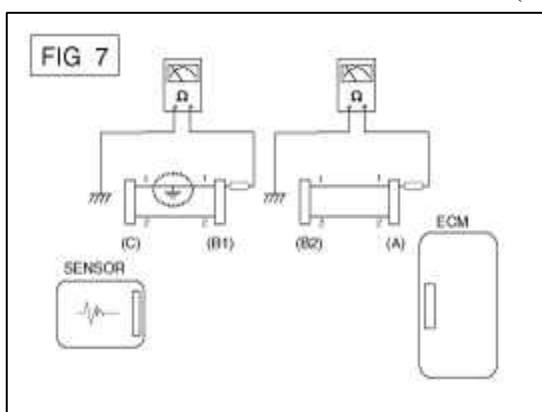

- Testing For Voltage Drop

This test checks for voltage drop along a wire, or through a connection or switch.

- 1) Connect the positive lead of a voltmeter to the end of the wire (or to the side of the connector or switch) closest to the battery.
- 2) Connect the negative lead to the other end of the wire. (or the other side of the connector or switch)
- 3) Operate the circuit.
- 4) The voltmeter will show the difference in voltage between the two points. A difference, or drop of more than 0.1 volts (50mV in 5V circuits), may indicate a problem. Check the circuit for loose or dirty connections.

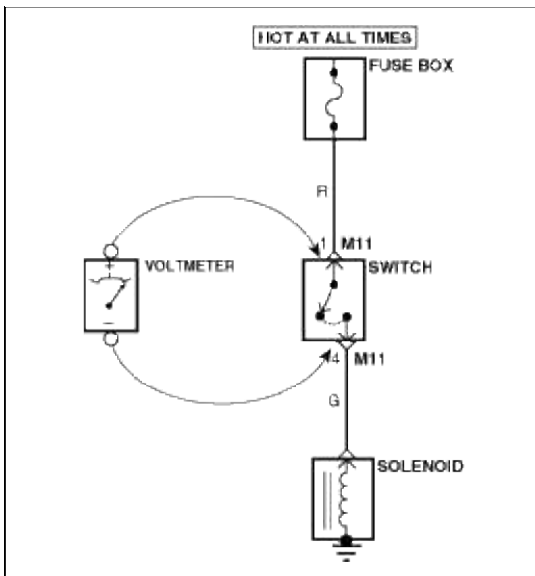

Symptom Troubleshooting Guide Chart

Main symptom	Diagnostic procedure	Also check for
Unable to start (Engine does not turn over)	<ol style="list-style-type: none"> 1. Test the battery 2. Test the starter 3. Inhibitor switch (A/T) or clutch start switch (M/T) 	
Unable to start (Incomplete combustion)	<ol style="list-style-type: none"> 1. Test the battery 2. Check the fuel pressure 3. Check the ignition circuit 4. Troubleshooting the immobilizer system (In case of immobilizer lamp flashing) 	<ul style="list-style-type: none"> • DTC • Low compression • Intake air leaks • Slipped or broken timing belt • Contaminated fuel
Difficult to start	<ol style="list-style-type: none"> 1. Test the battery 2. Check the fuel pressure 3. Check the ECT sensor and circuit (Check DTC) 4. Check the ignition circuit 	<ul style="list-style-type: none"> • DTC • Low compression • Intake air leaks • Contaminated fuel • Weak ignition spark
Poor idling (Rough, unstable or incorrect Idle)	<ol style="list-style-type: none"> 1. Check the fuel pressure 2. Check the Injector 3. Check the long term fuel trim and short term fuel trim (Refer to CUSTOMER DATASTREAM) 4. Check the idle speed control circuit (Check DTC) 5. Inspect and test the Throttle Body 6. Check the ECT sensor and circuit (Check DTC) 	<ul style="list-style-type: none"> • DTC • Low compression • Intake air leaks • Contaminated fuel • Weak ignition spark
Engine stall	<ol style="list-style-type: none"> 1. Test the Battery 2. Check the fuel pressure 3. Check the idle speed control circuit (Check DTC) 4. Check the ignition circuit 5. Check the CKPS Circuit (Check DTC) 	<ul style="list-style-type: none"> • DTC • Intake air leaks • Contaminated fuel • Weak ignition spark
Poor driving (Surge)	<ol style="list-style-type: none"> 1. Check the fuel pressure 2. Inspect and test Throttle Body 	<ul style="list-style-type: none"> • DTC

	<ol style="list-style-type: none"> 3. Check the ignition circuit 4. Check the ECT Sensor and Circuit (Check DTC) 5. Test the exhaust system for a possible restriction 6. Check the long term fuel trim and short term fuel trim (Refer to CUSTOMER DATASTREAM) 	<ul style="list-style-type: none"> • Low compression • Intake air leaks • Contaminated fuel • Weak ignition spark
Knocking	<ol style="list-style-type: none"> 1. Check the fuel pressure 2. Inspect the engine coolant 3. Inspect the radiator and the electric cooling fan 4. Check the spark plugs 	<ul style="list-style-type: none"> • DTC • Contaminated fuel
Poor fuel economy	<ol style="list-style-type: none"> 1. Check customer's driving habits <ul style="list-style-type: none"> · A/C on full time or the defroster mode on? · Are tires at correct pressure? · Is excessively heavy load being carried? · Is acceleration too much, too often? 2. Check the fuel pressure 3. Check the injector 4. Test the exhaust system for a possible restriction 5. Check the ECT sensor and circuit 	<ul style="list-style-type: none"> • DTC • Low compression • Intake air leaks • Contaminated fuel • Weak ignition spark
Hard to refuel (Overflow during refueling)	<ol style="list-style-type: none"> 1. Test the canister close valve 2. Inspect the fuel filler hose/pipe <ul style="list-style-type: none"> · Pinched, kinked or blocked? · Filler hose is torn 3. Inspect the fuel tank vapor vent hose between the EVAP. canister and air filter 4. Check the EVAP. canister 	<ul style="list-style-type: none"> • Malfunctioning gas station filling nozzle (If this problem occurs at a specific gas station during refueling)

Fuel System > Engine Control System > Description and Operation

OBD-II review

1. Overview

The California Air Resources Board (CARB) began regulation of On Board Diagnostics (OBD) for vehicles sold in California beginning with the 1988 model year. The first phase, OBD-I, required monitoring of the fuel metering system, Exhaust Gas Recirculation (EGR) system and additional emission related components. The Malfunction Indicator Lamp (MIL) was required to light and alert the driver of the fault and the need for repair of the emission control system. Associated with the MIL was a fault code or Diagnostic Trouble Code (DTC) identifying the specific area of the fault.

The OBD system was proposed by CARB to improve air quality by identifying vehicle exceeding emission standards. Passage of the Federal Clean Air Act Amendments in 1990 has also prompted the Environmental Protection Agency (EPA) to develop On Board Diagnostic requirements. CARB OBD-II regulations were followed until 1999 when the federal regulations were used.

The OBD-II system meets government regulations by monitoring the emission control system. When a system or component exceeds emission threshold or a component operates outside tolerance, a DTC will be stored and the MIL illuminated.

The diagnostic executive is a computer program in the Engine Control Module (ECM) or Powertrain Control Module (PCM) that coordinates the OBD-II self-monitoring system. This program controls all the monitors and interactions, DTC and MIL operation, freeze frame data and scan tool interface.

Freeze frame data describes stored engine conditions, such as state of the engine, state of fuel control, spark, RPM,


load and warm status at the point the first fault is detected. Previously stored conditions will be replaced only if a fuel or misfire fault is detected. This data is accessible with the scan tool to assist in repairing the vehicle.

The center of the OBD-II system is a microprocessor called the Engine Control Module (ECM) or Powertrain Control Module (PCM).


The ECM or PCM receives input from sensors and other electronic components (switches, relays, and others) based on information received and programmed into its memory (keep alive random access memory, and others), the ECM or PCM generates output signals to control various relays, solenoids and actuators.

2. Configuration of hardware and related terms

1) GST (Generic scan tool)

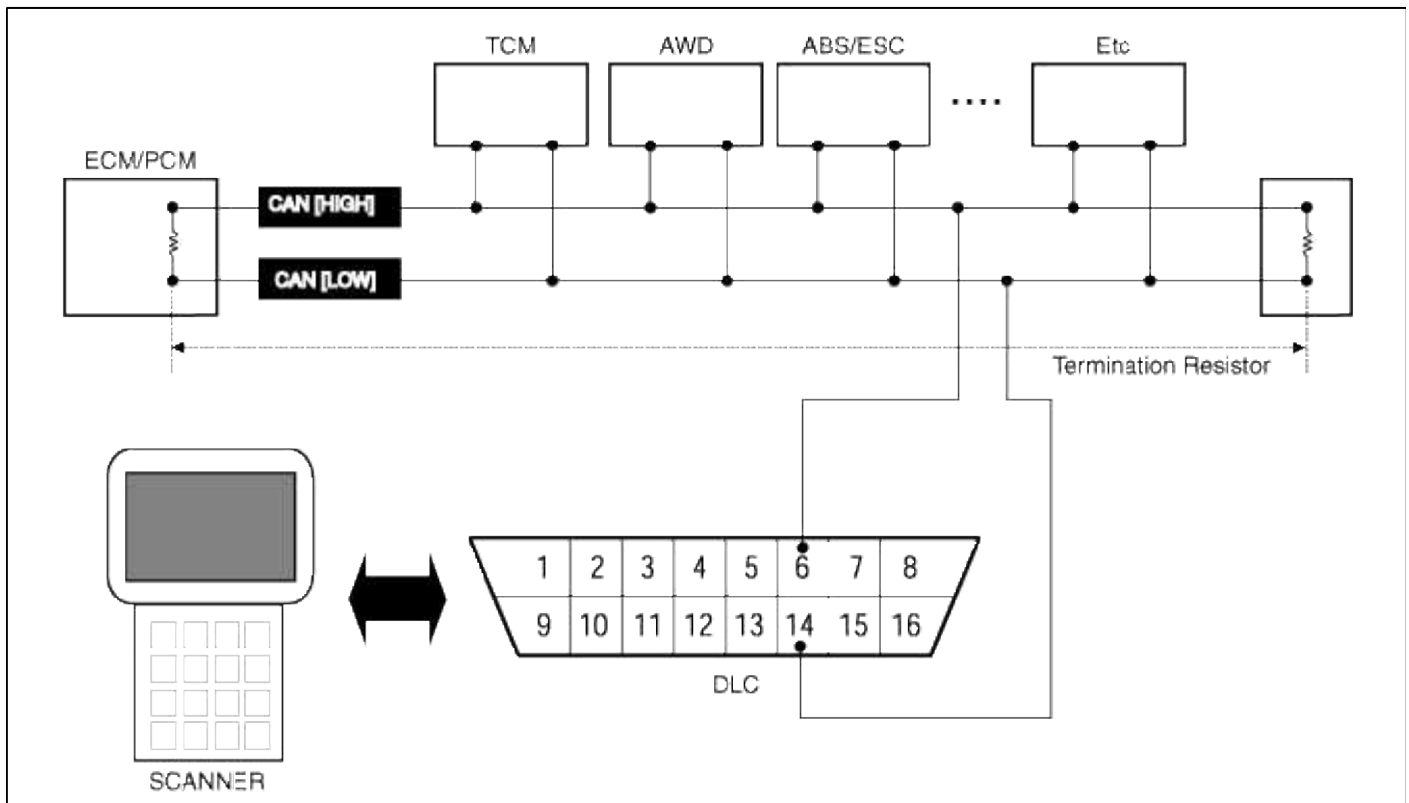

2) MIL (Malfunction indication lamp) - MIL activity by transistor

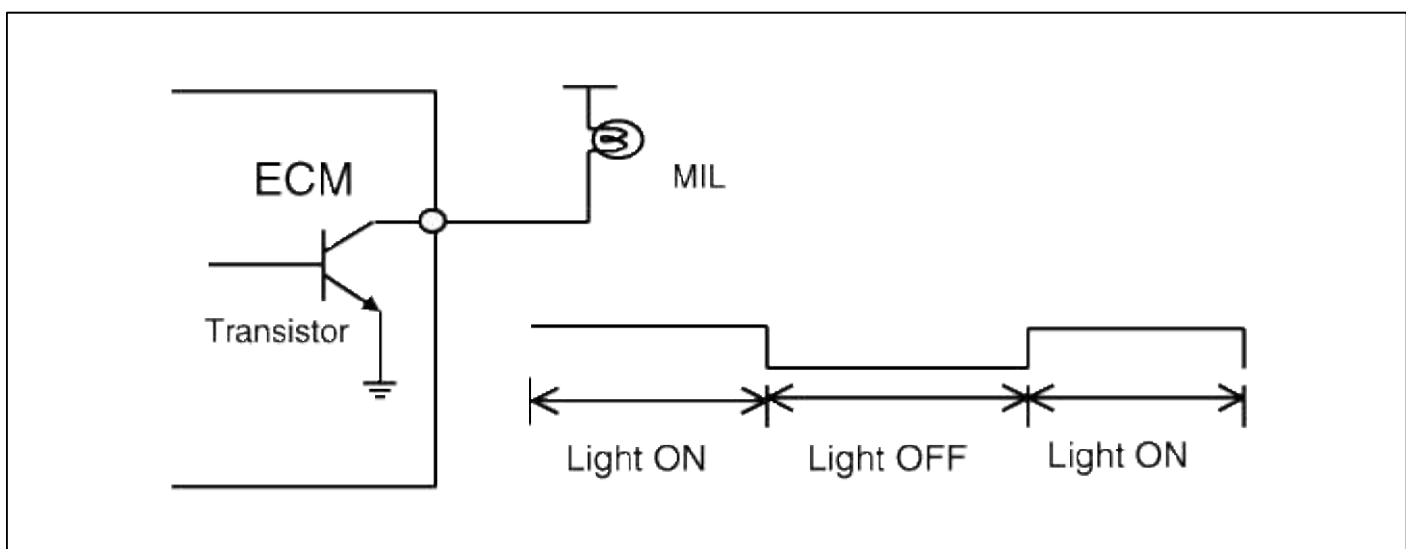

The Malfunction Indicator Lamp (MIL) is connected between ECM or PCM-terminal Malfunction Indicator Lamp and battery supply (open collector amplifier).

In most cars, the MIL will be installed in the instrument panel. The lamp amplifier can not be damaged by a short circuit.

Lamps with a power dissipation much greater than total dissipation of the MIL and lamp in the tester may cause a fault indication.

At ignition ON and engine revolution (RPM) < MIN. RPM, the MIL is switched ON for an optical check by the driver.

3) MIL illumination

When the ECM or PCM detects a malfunction related emission during the first driving cycle, the DTC and engine data are stored in the freeze frame memory. The MIL is illuminated only when the ECM or PCM detects the same malfunction related to the DTC in two consecutive driving cycles.

4) MIL elimination

- Misfire and Fuel System Malfunctions:

For misfire or fuel system malfunctions, the MIL may be eliminated if the same fault does not reoccur during monitoring in three subsequent sequential driving cycles in which conditions are similar to those under which the malfunction was first detected.

- All Other Malfunctions:

For all other faults, the MIL may be extinguished after three subsequent sequential driving cycles during which the monitoring system responsible for illuminating the MIL functions without detecting the malfunction and if no other malfunction has been identified that would independently illuminate the MIL according to the requirements outlined above.

5) Erasing a fault code

The diagnostic system may erase a fault code if the same fault is not re-registered in at least 40 engine warm-up cycles, and the MIL is not illuminated for that fault code.

6) Communication Line (CAN)

- Bus Topology : Line (bus) structure
- Wiring : Twisted pair wire
- Off Board DLC Cable Length : Max. 5m
- Data Transfer Rate
 - Diagnostic : 500 kbps
 - Service Mode (Upgrade, Writing VIN) : 500 or 1Mbps)

7) Driving cycle

A driving cycle consists of engine start up, and engine shut off.

8) Warm-up cycle

A warm-up cycle means sufficient vehicle operation such that the engine coolant temperature has risen by at least 40 degrees Fahrenheit from engine starting and reaches a minimum temperature of at least 160 degrees Fahrenheit.

9) Trip cycle

A trip means vehicle operation (following an engine-off period) of duration and driving mode such that all components and systems are monitored at least once by the diagnostic system except catalyst efficiency or evaporative system monitoring when a steady-speed check is used, subject to the limitation that the manufacturer-defined trip monitoring conditions shall all be encountered at least once during the first engine start portion of the applicable FTP cycle.

10) DTC format

- Diagnostic Trouble Code (SAE J2012)
- DTCs used in OBD-II vehicles will begin with a letter and are followed by four numbers.

The letter of the beginning of the DTC identifies the function of the monitored device that has failed. A "P" indicates a powertrain device, "C" indicates a chassis device. "B" is for body device and "U" indicates a network or data link code. The first number indicates if the code is generic (common to all manufacturers) or if it is manufacturer specific. A "0" & "2" indicates generic, "1" indicates manufacturer-specific. The second number indicates the system that is affected with a number between 1 and 7.

The following is a list showing what numbers are assigned to each system.

1. Fuel and air metering
2. Fuel and air metering(injector circuit malfunction only)

3. Ignition system or misfire
4. Auxiliary emission controls
5. Vehicle speed controls and idle control system
6. Computer output circuits
7. Transmission

The last two numbers of the DTC indicates the component or section of the system where the fault is located.

11) Freeze frame data

When a freeze frame event is triggered by an emission related DTC, the ECM or PCM stores various vehicle information as it existed the moment the fault occurred. The DTC number along with the engine data can be useful in aiding a technician in locating the cause of the fault. Once the data from the 1st driving cycle DTC occurrence is stored in the freeze frame memory, it will remain there even when the fault occurs again (2nd driving cycle) and the MIL is illuminated.

- Freeze Frame List

- 1) Calculated Load Value
 - 2) Engine RPM
 - 3) Fuel Trim
 - 4) Fuel Pressure (if available)
 - 5) Vehicle Speed (if available)
 - 6) Coolant Temperature
 - 7) Intake Manifold Pressure (if available)
 - 8) Closed-or Open-loop operation
 - 9) Fault code
3. OBD-II system readiness tests

1) Catalyst monitoring

The catalyst efficiency monitor is a self-test strategy within the ECM or PCM that uses the downstream Heated Oxygen Sensor (HO₂S) to determine when a catalyst has fallen below the minimum level of effectiveness in its ability to control exhaust emission.

2) Misfire monitoring

Misfire is defined as the lack of proper combustion in the cylinder due to the absence of spark, poor fuel metering, or poor compression. Any combustion that does not occur within the cylinder at the proper time is also a misfire. The misfire detection monitor detects fuel, ignition or mechanically induced misfires. The intent is to protect the catalyst from permanent damage and to alert the customer of an emission failure or an inspection maintenance failure by illuminating the MIL. When a misfire is detected, special software called freeze frame data is enabled. The freeze frame data captures the operational state of the vehicle when a fault is detected from misfire detection monitor strategy.

3) Fuel system monitoring

The fuel system monitor is a self-test strategy within the ECM or PCM that monitors the adaptive fuel table. The fuel control system uses the adaptive fuel table to compensate for normal variability of the fuel system components caused by wear or aging. During normal vehicle operation, if the fuel system appears biased lean or rich, the adaptive value table will shift the fuel delivery calculations to remove bias.

4) Engine cooling system monitoring

The cooling system monitoring is a self-test strategy within the ECM or PCM that monitors ECTS (Engine Coolant Temperature Sensor) and thermostat about circuit continuity, output range, rationality faults.

5) O₂ sensor monitoring

OBD-II regulations require monitoring of the upstream Heated O₂ Sensor (H₂OS) to detect if the deterioration of the sensor has exceeded thresholds. An additional HO₂S is located downstream of the Warm-Up Three Way Catalytic Converter (WU-TWC) to determine the efficiency of the catalyst.

Although the downstream H₂OS is similar to the type used for fuel control, it functions differently. The downstream HO₂S is monitored to determine if a voltage is generated. That voltage is compared to a calibrated acceptable

range.

6) Evaporative emission system monitoring

The EVAP. monitoring is a self-test strategy within the ECM or PCM that tests the integrity of the EVAP. system. The complete evaporative system detects a leak or leaks that cumulatively are greater than or equal to a leak caused by a 0.040 inch and 0.020 inch diameter orifice.

7) Air conditioning system monitoring

The A/C system monitoring is a self-test strategy within the ECM or PCM that monitors malfunction of all A/C system components at A/C ON.

8) Comprehensive components monitoring

The comprehensive components monitoring is a self-test strategy within the ECM or PCM that detects fault of any electronic powertrain components or system that provides input to the ECM or PCM and is not exclusively an input to any other OBD-II monitor.

9) A/C system component monitoring

Requirement:

If a vehicle incorporates an engine control strategy that alters off idle fuel and/or spark control when the A/C system is on, the OBD II system shall monitor all electronic air conditioning system components for malfunctions that cause the system to fail to invoke the alternate control while the A/C system is on or cause the system to invoke the alternate control while the A/C system is off.

Additionally, the OBD II system shall monitor for malfunction all electronic air conditioning system components that are used as part of the diagnostic strategy for any other monitored system or component.


Implementation plan:


No engine control strategy incorporated that alters offidle fuel and/or spark control when A/C system is on.

Malfunction of A/C system components is not used as a part of the diagnostic strategy for other monitored system or component.

Fuel System > Engine Control System > Components and Components Location


Components Location

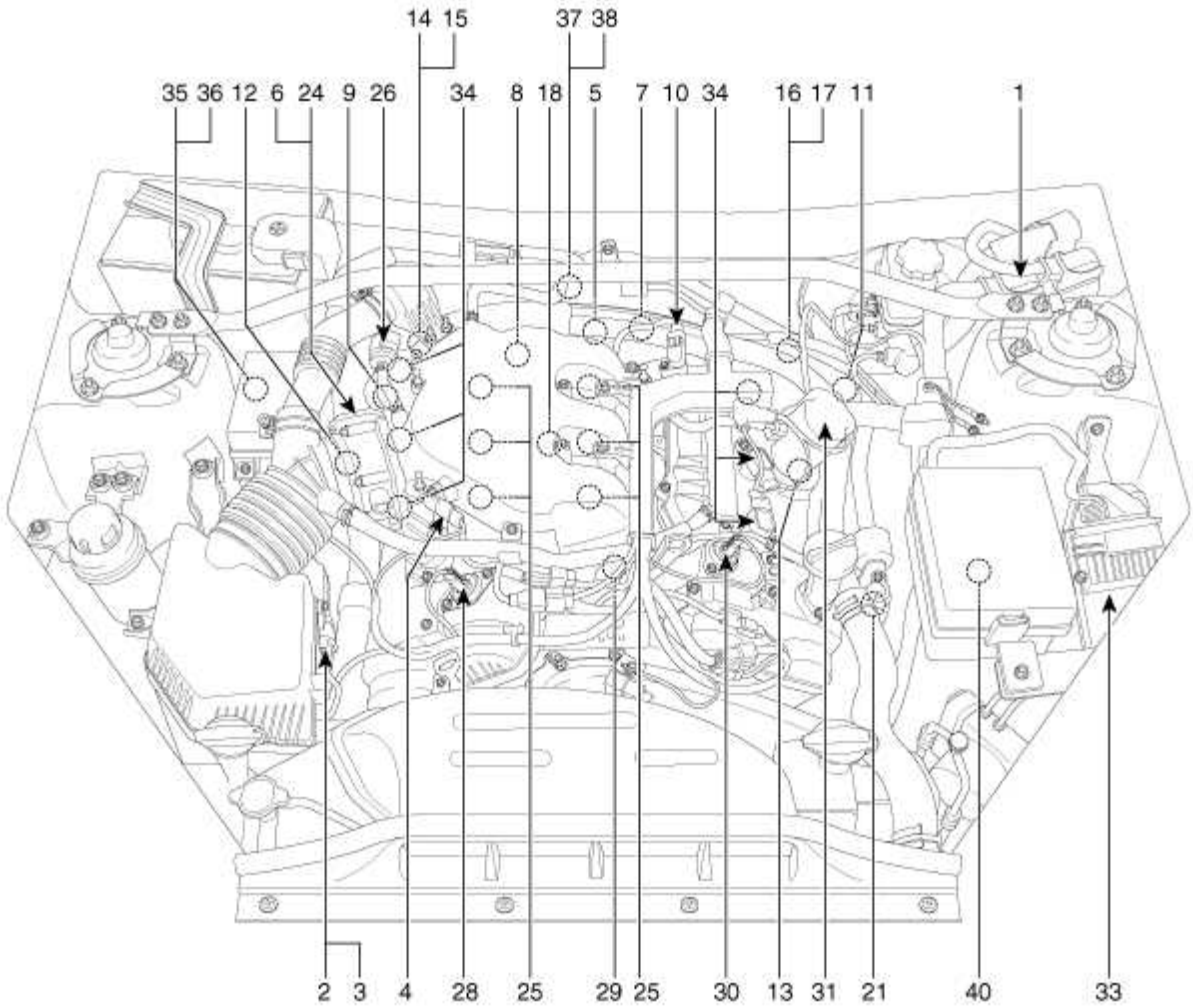

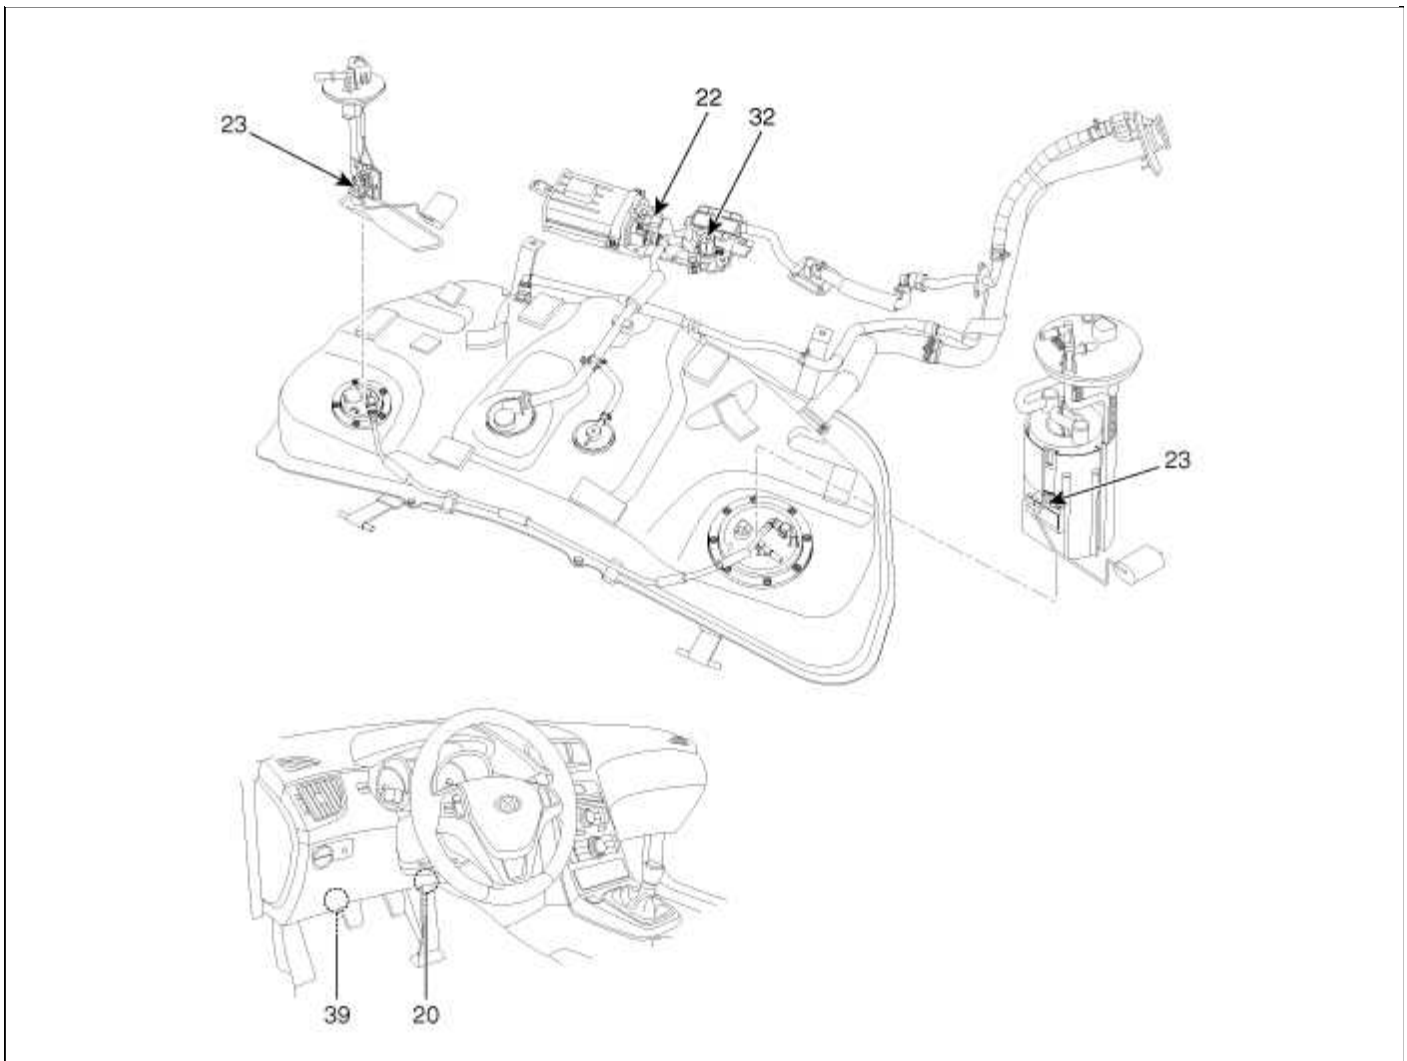


- | | |
|--|---|
| 1. ECM (Engine Control Module) | 21. A/C Pressure Transducer (APT) |
| 2. Barometric Pressure Sensor (BPS) | 22. Fuel Tank Pressure Sensor (FTPS) |
| 3. Intake Air Temperature Sensor (IATS) | 23. Fuel Level Sender (FLS) |
| 4. Manifold Absolute Pressure Sensor (MAPS) | 24. ETC Motor [integrated into ETC Module] |
| 5. Engine Coolant Temperature Sensor (ECTS) | 25. Injector |
| 6. Throttle Position Sensor (TPS) [integrated into ETC Module] | 26. Purge Control Solenoid Valve (PCSV) |
| 7. Crankshaft Position Sensor (CKPS) | 27. CVVT Oil Control Valve (OCV) [Bank 1 / Intake] |
| 8. Camshaft Position Sensor (CMPS) [Bank 1 / Intake] | 28. CVVT Oil Control Valve (OCV) [Bank 1 / Exhaust] |
| 9. Camshaft Position Sensor (CMPS) [Bank 1 / Exhaust] | 29. CVVT Oil Control Valve (OCV) [Bank 2 / Intake] |
| 10. Camshaft Position Sensor (CMPS) [Bank 2 / Intake] | 30. CVVT Oil Control Valve (OCV) [Bank 2 / Exhaust] |
| 11. Camshaft Position Sensor (CMPS) [Bank 2 / Exhaust] | 31. Fuel Pressure Control Valve (FPCV) |
| 12. Knock Sensor (KS) [Bank 1] | 32. Canister Close Valve (CCV) |
| 13. Knock Sensor (KS) [Bank 2] | 33. Injector Drive Box (IDB) |
| 14. Heated Oxygen Sensor (HO2S) [Bank 1 / Sensor 1] | 34. Ignition Coil |
| 15. Heated Oxygen Sensor (HO2S) [Bank 1 / Sensor 2] | 35. Main Relay |
| 16. Heated Oxygen Sensor (HO2S) [Bank 2 / Sensor 1] | 36. Fuel Pump Relay |
| 17. Heated Oxygen Sensor (HO2S) [Bank 2 / Sensor 2] | 37. Fuel Pump Resistor |
| 18. Rail Pressure Sensor (RPS) | 38. Fuel Pump Resistor Relay |
| 19. CVVT Oil Temperature Sensor (OTS) | 39. Data Link Connector (DLC) [16 Pin] |
| 20. Accelerator Position Sensor (APS) | |


1. ECM (Engine Control Module)

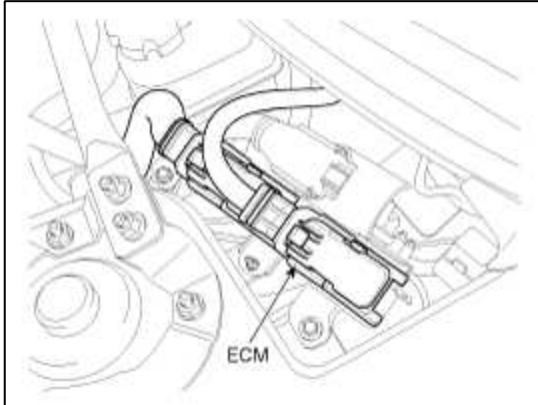


2. Barometric Pressure Sensor (BPS)
3. Intake Air Temperature Sensor (IATS)

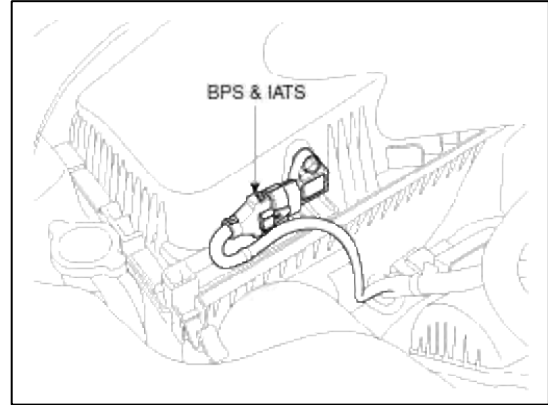


4. Manifold Absolute Pressure Sensor (MAPS)

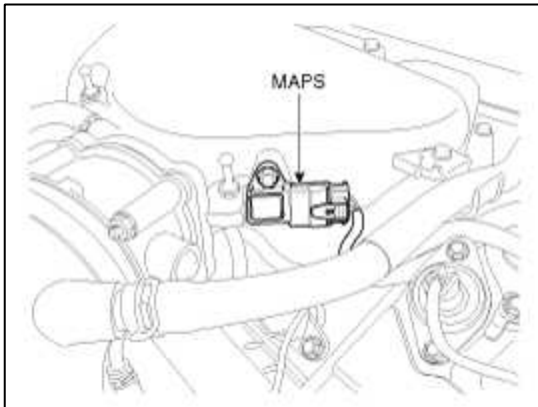


5. Engine Coolant Temperature Sensor (ECTS)

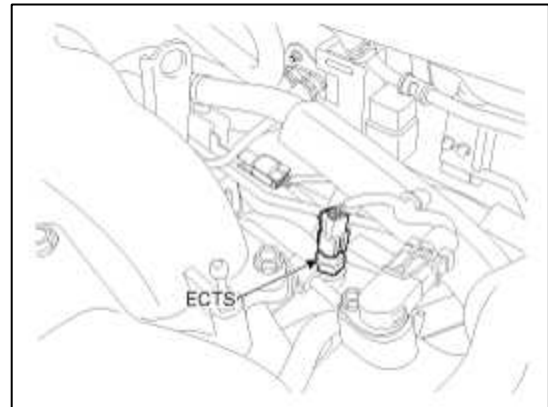

6. Throttle Position Sensor (TPS) [integrated into ETC Module]
24. ETC Motor [integrated into ETC Module]

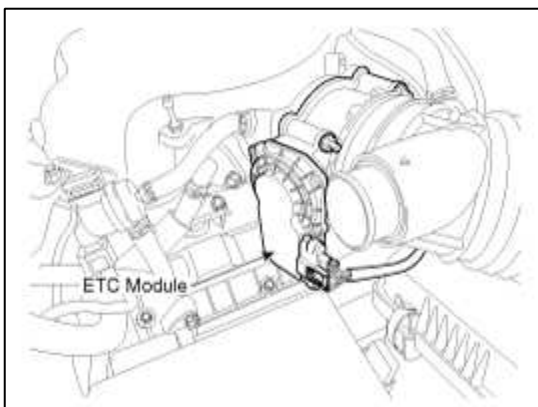


7. Crankshaft Position Sensor (CKPS)

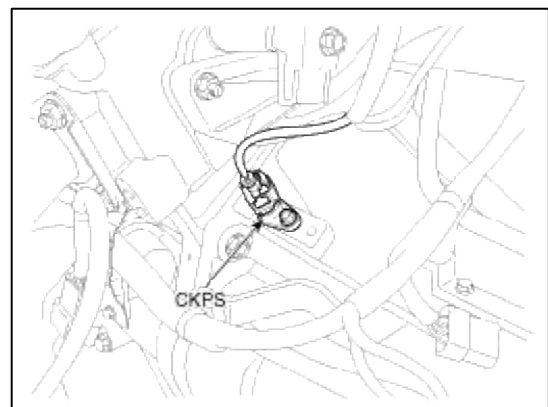


8. Camshaft Position Sensor (CMPS) [Bank 1 / Intake]


9. Camshaft Position Sensor (CMPS) [Bank 1 / Exhaust]

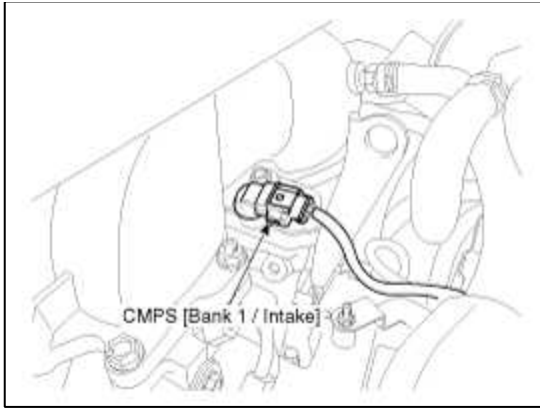


10. Camshaft Position Sensor (CMPS) [Bank 2 / Intake]

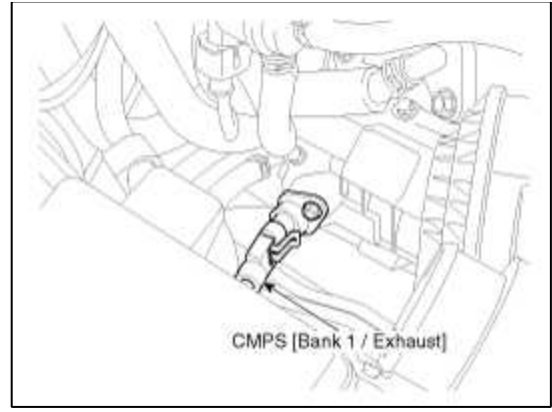


11. Camshaft Position Sensor (CMPS) [Bank 2 / Exhaust]

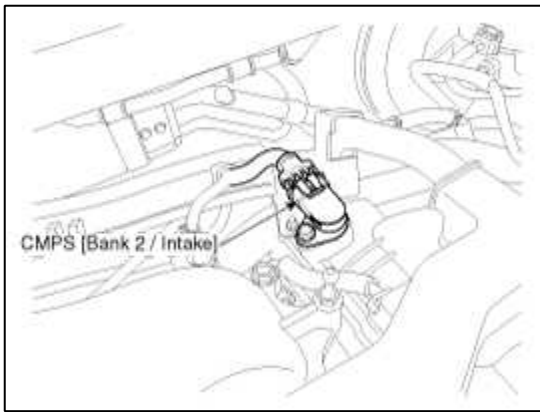


12. Knock Sensor (KS) [Bank 1]

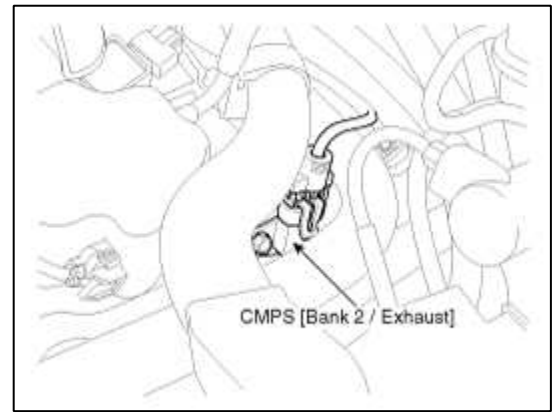



13. Knock Sensor (KS) [Bank 2]

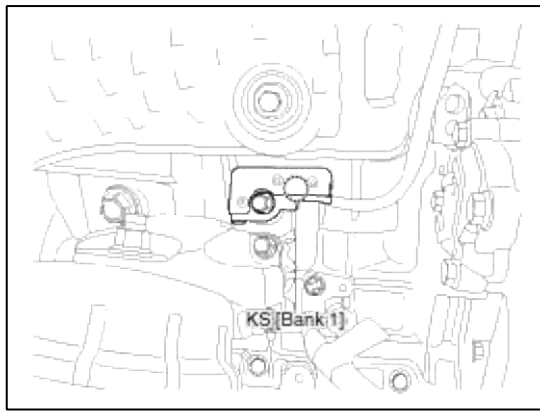


14. Heated Oxygen Sensor (HO2S) [Bank 1 / Sensor 1]

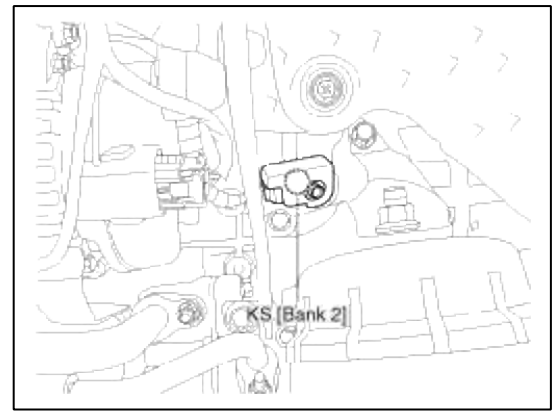


15. Heated Oxygen Sensor (HO2S) [Bank 1 / Sensor 2]

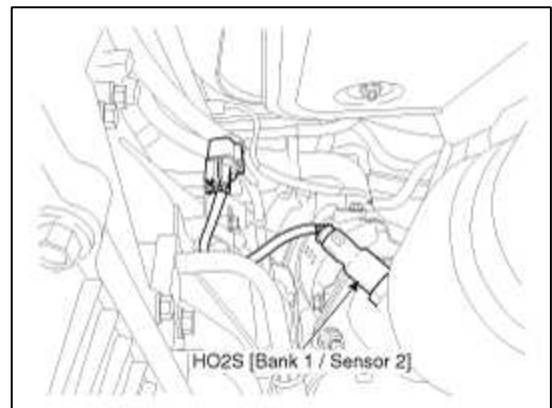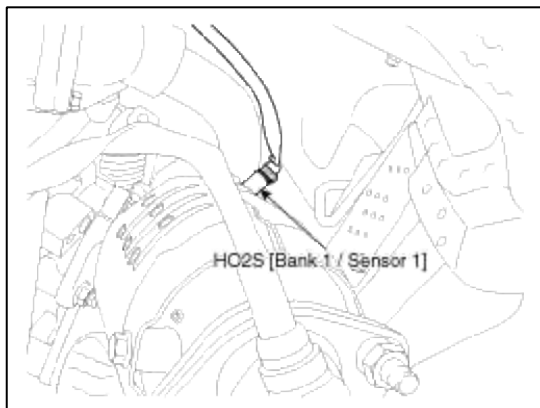


16. Heated Oxygen Sensor (HO2S) [Bank 2 / Sensor 1]

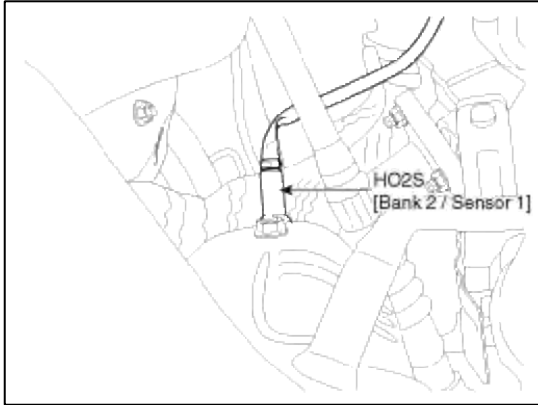


17. Heated Oxygen Sensor (HO2S) [Bank 2 / Sensor 2]

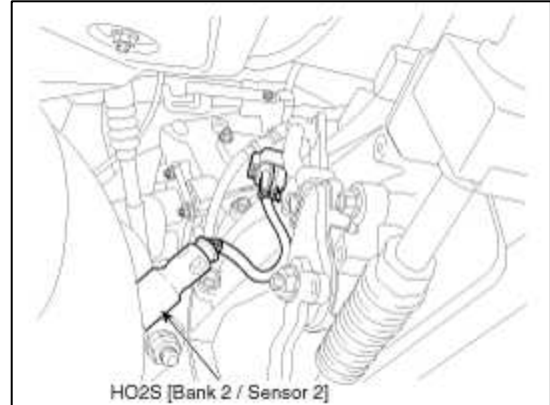


18. Rail Pressure Sensor (RPS)

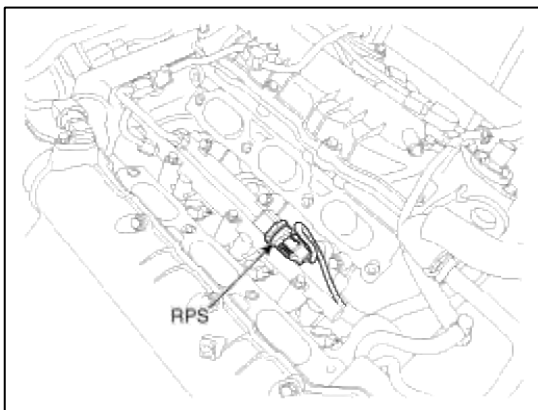


19. CVVT Oil Temperature Sensor (OTS)

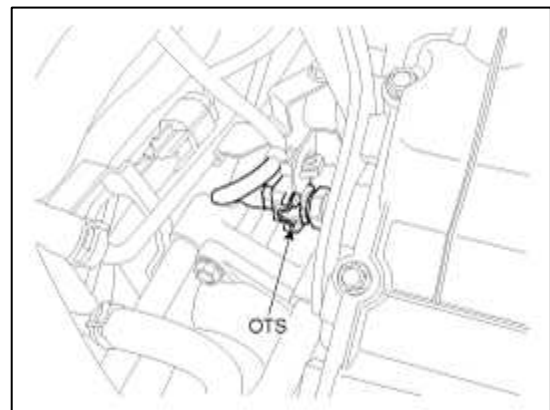

20. Accelerator Position Sensor (APS)


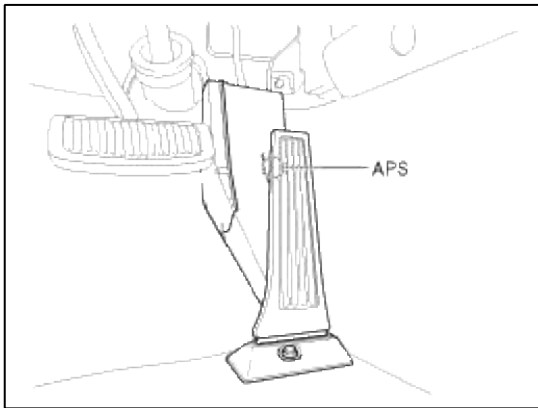


21. A/C Pressure Transducer (APT)

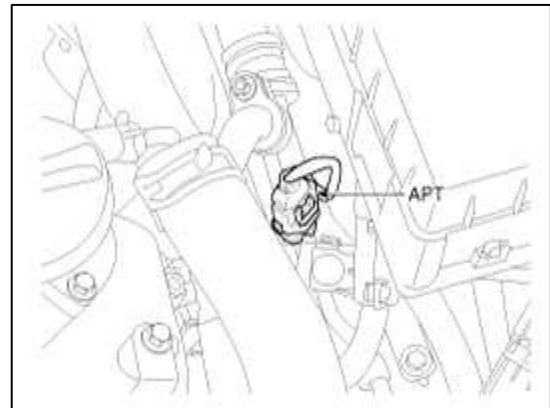



22. Fuel Tank Pressure Sensor (FTPS)
32. Canister Close Valve (CCV)

23. Fuel Level Sender (FLS)

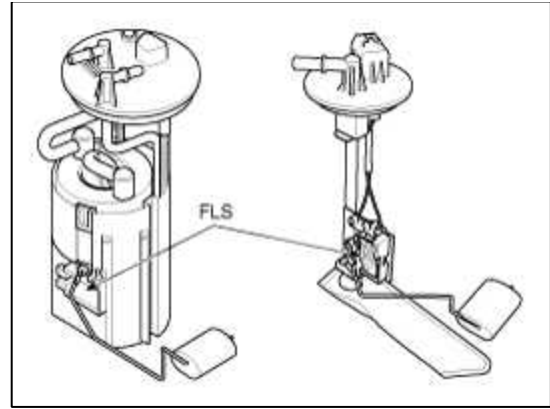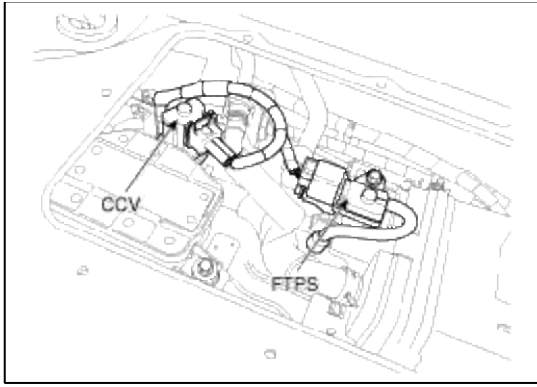



25. Injector

26. Purge Control Solenoid Valve (PCSV)

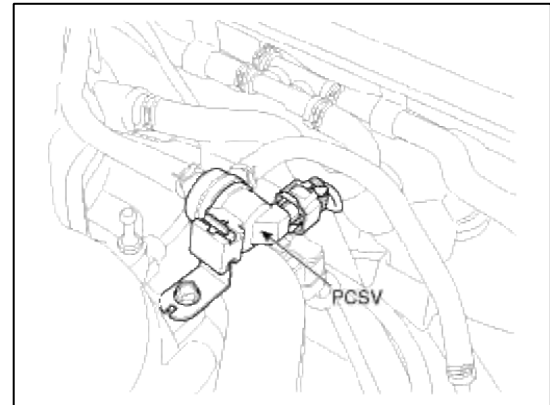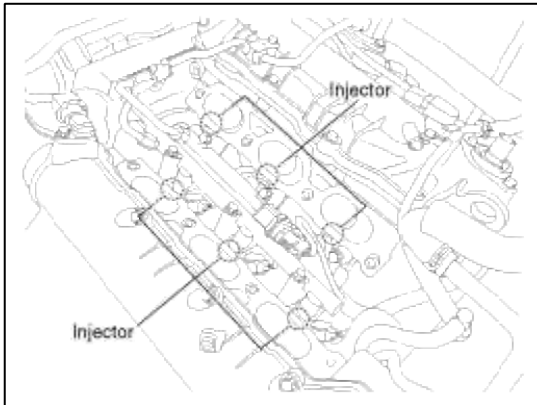



27. CVVT Oil Control Valve (OCV) [Bank 1 / Intake]
29. CVVT Oil Control Valve (OCV) [Bank 2 / Intake]

28. CVVT Oil Control Valve (OCV) [Bank 1 / Exhaust]

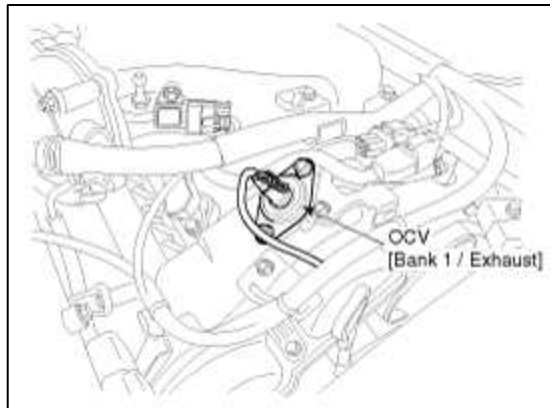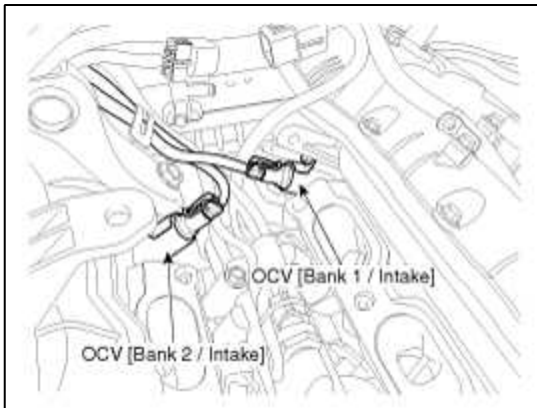


30. CVVT Oil Control Valve (OCV) [Bank 2 / Exhaust]


31. Fuel Pressure Control Valve (FPCV)

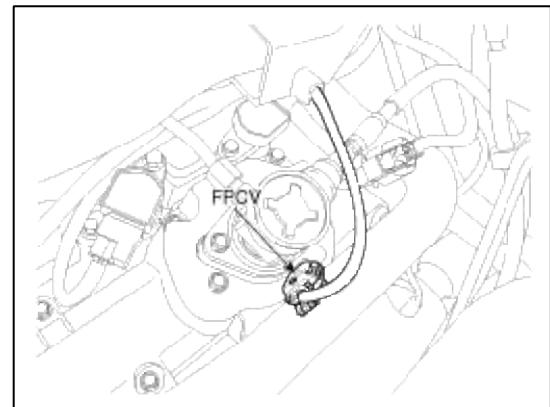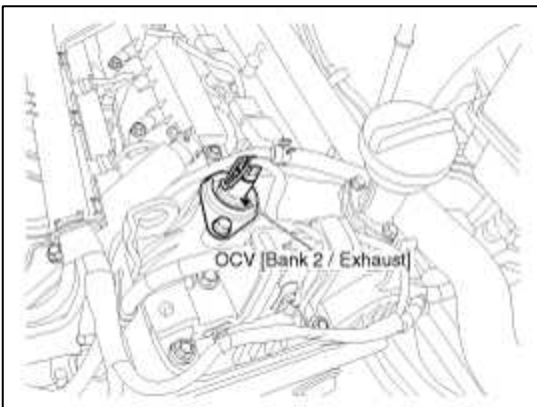


33. Injector Drive Box (IDB)

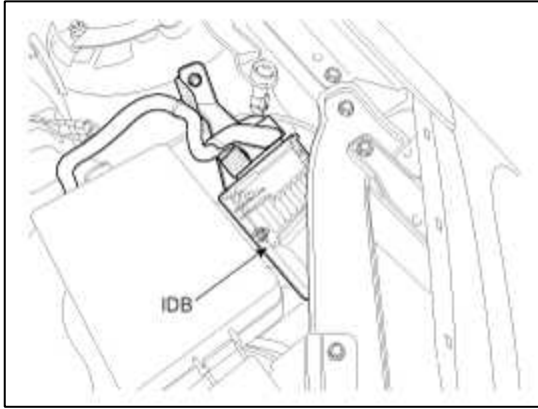


34. Ignition Coil

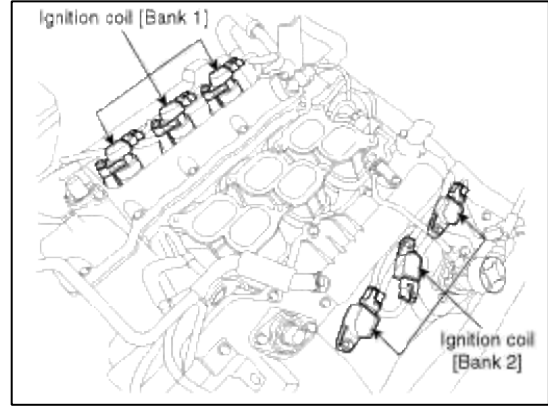


35. Main Relay
36. Fuel Pump Relay

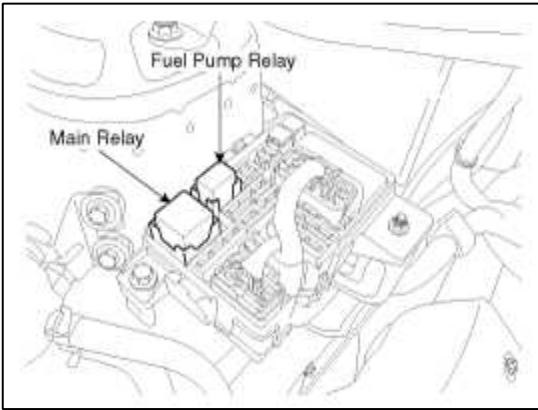

37. Fuel Pump Resistor
38. Fuel Pump Resistor Relay

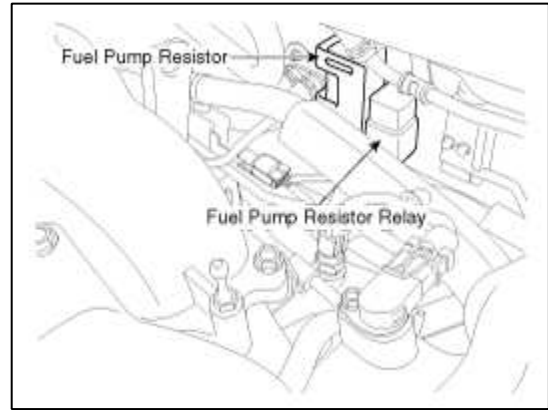


40. Multi-Purpose Check Connector [20 Pin]

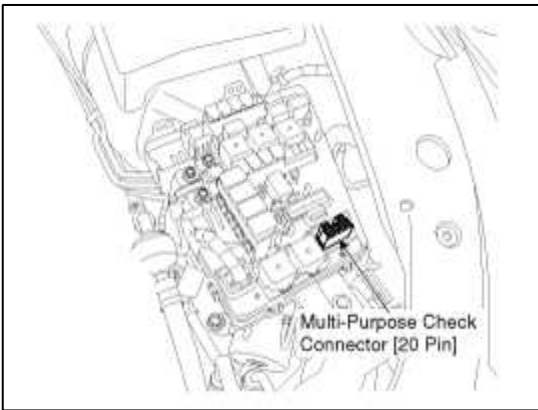

Fuel System > Engine Control System > Engine Control Module (ECM) > Schematic Diagrams

ECM Terminal And Input/Output signal

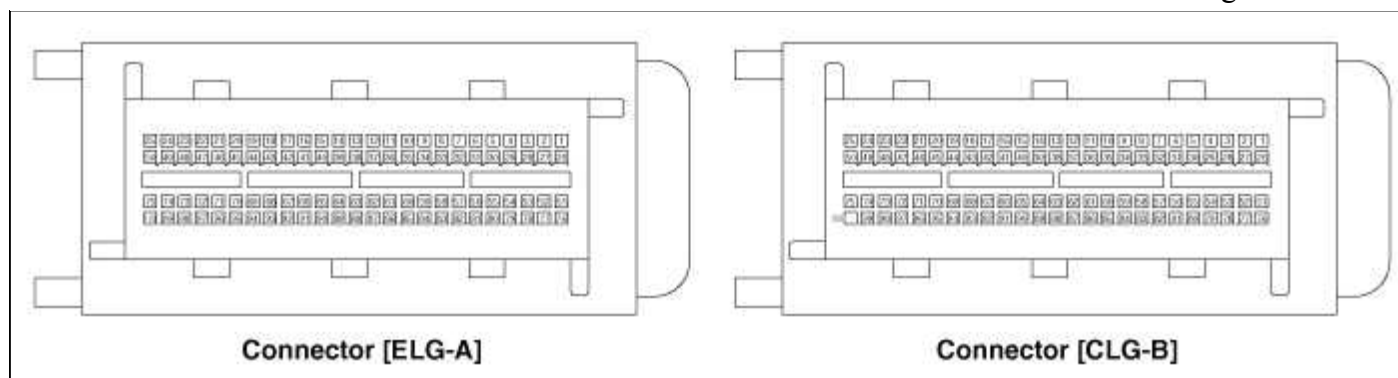

ECM Terminal Function

Connector [ELG-A]

Pin No.	Description	Connected to
1	-	
2	-	
3	-	
4	Immobilizer Lamp control output	Immobilizer Lamp [Without Button Engine Start System]
5	Power ground	Chassis Ground
6	Power ground	Chassis Ground
7	-	
8	-	
9	2nd CAN [High]	Multi-Purpose Check Connector
10	CAN [High]	Other control module, Data Link Connector (DLC), Multi-Purpose Check Connector
11	Fuel Tank Pressure Sensor (FTPS) signal input	Fuel Tank Pressure Sensor (FTPS)
12	-	
13	-	
14	Sensor power (+5V)	Accelerator Position Sensor (APS) 1
15	Sensor power (+5V)	A/C Pressure Transducer (APT)
		Rail Pressure Sensor (RPS)
16	Fuel Level Sensor (FLS) [TOTAL] signal input	Fuel Level Sensor (FLS)
17	Power Steering Pressure Switch signal input	Power Steering Pressure Switch
18	Clutch switch signal input	Clutch switch
19	-	
20	-	
21	Brake Switch 2 signal input	Brake Switch
22	-	

23	-	
24	Alternator (FR)	Alternator
25	-	
26	-	
27	Battery power (B+)	Ignition Switch
28	Rail Pressure Sensor (RPS) signal input	Rail Pressure Sensor (RPS)
29	-	
30	Power ground	Chassis Ground
31	-	
32	-	
33	-	
34	2nd CAN [Low]	Multi-Purpose Check Connector
35	CAN [Low]	Other control module, Data Link Connector (DLC), Multi-Purpose Check Connector
36	-	
37	Sensor ground	Rail Pressure Sensor (RPS)
38	Accelerator Position Sensor (APS) 1 signal input	Accelerator Position Sensor (APS) 1
39	-	
40	-	
41	Fuel Level Sensor (FLS) [MIDDLE] signal input	Fuel Level Sensor (FLS)
42	-	
43	Brake Switch 1 signal input	Brake Switch
44	-	
45	-	
46	-	
47	-	
48	-	
49	-	
50	-	
51	-	
52	Battery power (B+)	Battery
53	-	
54	-	
55	Power ground	Chassis Ground
56	-	

57	A/C Compressor Clutch Relay control output	A/C Control Module [With Immobilizer]
58	-	
59	Sensor ground	Accelerator Position Sensor (APS) 2
60	Sensor ground	Accelerator Position Sensor (APS) 1
61	Sensor ground	Fuel Tank Pressure Sensor (FTPS)
62	Ground	Cruise Control Switch
63	Sensor ground	A/C Pressure Transducer (APT)
64	-	
65	Sensor Power (+5V)	Fuel Tank Pressure Sensor (FTPS)
66	Cruise Control Switch signal input	Cruise Control Switch
67	A/C Pressure Transducer (APT) signal input	A/C Pressure Transducer (APT)
68	Accelerator Position Sensor (APS) 2 signal input	Accelerator Position Sensor (APS) 2
69	-	
70	Engine speed signal output	Power Distribution Module (PDM)
71	Cooling Fan Relay [High] control output	Cooling Fan Relay [High]
72	-	
73	-	
74	Immobilizer communication line	Smart Key Control Module [With Button Engine Start System]
		Immobilizer Control Unit [Without Button Engine Start System]
75	Battery power (B+)	Main Relay
76	-	
77	Battery power (B+)	Battery
78	Fuel pump resistor relay control output	Fuel pump resistor relay
79	-	
80	Power ground	Chassis Ground
81	-	
82	-	
83	-	
84	-	
85	-	
86	-	
87	-	
88	-	
89	-	

90	Sensor power (+5V)	Accelerator Position Sensor (APS) 2
91	Cooling fan relay [Low] control output	Cooling fan relay
92	-	
93	Starter Relay control output	Starter Relay
94	Main Relay control output	Main Relay
95	Fuel pump Relay control output	Fuel pump Relay
96	Canister Close Valve (CCV) control output	Canister Close Valve (CCV)
97	-	
98	-	
99	Battery power (B+)	Main Relay
100	Battery power (B+)	Main Relay

Connector [CLG-B]

Pin No.	Description	Connected to
1	-	
2	-	
3	-	
4	-	
5	Sensor power (+5V)	Camshaft Position Sensor (CMPS) [Bank 1/Intake] Camshaft Position Sensor (CMPS) [Bank 2/Exhaust]
6	Sensor power (+5V)	Throttle Position Sensor (TPS)
7	-	
8	Crank request signal output	Power Distribution Module (PDM) [With Button Engine Start System] Ignition Switch [Without Button Engine Start System]
9	Barometric Pressure Sensor (BPS) signal input	Barometric Pressure Sensor (BPS)
10	CVVT Oil Temperature Sensor (OTS) signal input	CVVT Oil Temperature Sensor (OTS)
11	-	
12	Throttle Position Sensor (TPS) 1 signal input	Throttle Position Sensor (TPS) 1
13	Manifold Absolute Pressure Sensor (MAPS) signal input	Manifold Absolute Pressure Sensor (MAPS)
14	Intake Air Temperature Sensor (IATS) signal input	Intake Air Temperature Sensor (IATS)

15	Vehicle speed signal input	Power Distribution Module (PDM) [With Button Engine Start System]
		ABS/ESP Control Module [Without Button Engine Start System]
16	Knock Sensor (KS) [Bank 2] [High] signal input	Knock Sensor (KS) [Bank 2]
17	Knock Sensor (KS) [Bank 1] [High] signal input	Knock Sensor (KS) [Bank 1]
18	Crankshaft Position Sensor (CKPS) [High] signal input	Crankshaft Position Sensor (CKPS)
19	Sensor ground	CVVT Oil Temperature Sensor (OTS)
20	VCM Position Sensor signal input	VCM Position Sensor
21	Camshaft Position Sensor (CMPS) [Bank 2/Intake] signal input	Camshaft Position Sensor (CMPS) [Bank 2/Intake]
22	-	
23	-	
24	Ignition Coil (Cylinder #1) control output	Ignition Coil (Cylinder #1)
25	-	
26	-	
27	-	
28	-	
29	-	
30	-	
31	Sensor ground	Throttle Position Sensor (TPS) 1
32	Sensor ground	Camshaft Position Sensor (CMPS) [Bank 1/Intake]
		Camshaft Position Sensor (CMPS) [Bank 2/Exhaust]
33	Sensor ground	Heated Oxygen Sensor (HO2S) [Bank 2/Sensor 2]
34	Throttle Position Sensor (TPS) 2 signal input	Throttle Position Sensor (TPS) 2
35	Engine Coolant Temperature Sensor (ECTS) signal input	Engine Coolant Temperature Sensor (ECTS)
36	-	
37	-	
38	Heated Oxygen Sensor (HO2S) [Bank 1/Sensor 1] signal input	Heated Oxygen Sensor (HO2S) [Bank 1/Sensor 1]
39	Sensor ground	Heated Oxygen Sensor (HO2S) [Bank 1/Sensor 1]
40	Sensor Shield	Crankshaft Position Sensor (CKPS)
		Knock Sensor (KS) #1 [Bank 1]
		Knock Sensor (KS) #2 [Bank 2]
41	Knock Sensor (KS) [Bank 2] [Low] signal input	Knock Sensor (KS) [Bank 2]
42	Knock Sensor (KS) [Bank 1] [Low] signal input	Knock Sensor (KS) [Bank 1]

43	Crankshaft Position Sensor (CKPS) [Low] signal input	Crankshaft Position Sensor (CKPS)
44	Sensor ground	Camshaft Position Sensor (CMPS) [Bank 1/Exhaust]
		Camshaft Position Sensor (CMPS) [Bank 2/Intake]
45	-	
46	Camshaft Position Sensor (CMPS) [Bank 2/Exhaust] signal input	Camshaft Position Sensor (CMPS) [Bank 2/Exhaust]
47	-	
48	Sensor power (+5V)	Barometric Pressure Sensor (BPS)
		Manifold Absolute Pressure Sensor (MAPS)
		VCM Position Sensor
49	Ignition Coil (Cylinder #3) control output	Ignition Coil (Cylinder #3)
50	-	
51	-	
52	-	
53	-	
54	-	
55	-	
56	Sensor ground	Barometric Pressure Sensor (BPS)
		Manifold Absolute Pressure Sensor (MAPS)
		Engine Coolant Temperature Sensor (ECTS)
		VCM Position Sensor
57	-	
58	Heated Oxygen Sensor (HO2S) [Bank 2/Sensor 2] signal input	Heated Oxygen Sensor (HO2S) [Bank 2/Sensor 2]
59	Heated Oxygen Sensor (HO2S) [Bank 1/Sensor 2] signal input	Heated Oxygen Sensor (HO2S) [Bank 1/Sensor 2]
60	Sensor ground	Heated Oxygen Sensor (HO2S) [Bank 1/Sensor 2]
61	-	
62	-	
63	Heated Oxygen Sensor (HO2S) [Bank 2/Sensor 1] signal input	Heated Oxygen Sensor (HO2S) [Bank 2/Sensor 1]
64	Sensor ground	Heated Oxygen Sensor (HO2S) [Bank 2/Sensor 1]
65	-	
66	Purge Control Solenoid Valve (PCSV) control output	Purge Control Solenoid Valve (PCSV)
67	-	
68	-	
69	-	

70	Camshaft Position Sensor (CMPS) [Bank 1/Exhaust] signal input	Camshaft Position Sensor (CMPS) [Bank 1/Exhaust]
71	Camshaft Position Sensor (CMPS) [Bank 1/Intake] signal input	Camshaft Position Sensor (CMPS) [Bank 1/Intake]
72	-	
73	Sensor Power (+5V)	Camshaft Position Sensor (CMPS) [Bank 1/Exhaust]
		Camshaft Position Sensor (CMPS) [Bank 2/Intake]
74	Ignition Coil (Cylinder #5) control output	Ignition Coil (Cylinder #5)
75	-	
76	-	
77	-	
78	-	
79	-	
80	ETC Motor [+] control output	ETC Motor
81	ETC Motor [-] control output	ETC Motor
82	Heated Oxygen Sensor (HO2S) [Bank 1/Sensor 2] Heater control output	Heated Oxygen Sensor (HO2S) [Bank 1/Sensor 2]
83	Heated Oxygen Sensor (HO2S) [Bank 2/Sensor 2] Heater control output	Heated Oxygen Sensor (HO2S) [Bank 2/Sensor 2]
84	Fuel Pressure Control Valve (FPCV) control output	Injector Drive Box (IDB)
85	Injector (Cylinder #2) control output	Injector Drive Box (IDB)
86	Injector (Cylinder #5) control output	Injector Drive Box (IDB)
87	Injector (Cylinder #3) control output	Injector Drive Box (IDB)
88	Injector (Cylinder #6) control output	Injector Drive Box (IDB)
89	Injector (Cylinder #4) control output	Injector Drive Box (IDB)
90	Injector (Cylinder #1) control output	Injector Drive Box (IDB)
91	Heated Oxygen Sensor (HO2S) [Bank 1/Sensor 1] Heater control output	Heated Oxygen Sensor (HO2S) [Bank 1/Sensor 1]
92	Heated Oxygen Sensor (HO2S) [Bank 2/Sensor 1] Heater control output	Heated Oxygen Sensor (HO2S) [Bank 2/Sensor 1]
93	CVVT Oil Control Valve (OCV) [Bank 2/Exhaust] control output	CVVT Oil Control Valve (OCV) [Bank 2/Exhaust]
94	CVVT Oil Control Valve (OCV) [Bank 1/Exhaust] control output	CVVT Oil Control Valve (OCV) [Bank 1/Exhaust]
95	CVVT Oil Control Valve (OCV) [Bank 2/Intake] control output	CVVT Oil Control Valve (OCV) [Bank 2/Intake]
96	CVVT Oil Control Valve (OCV) [Bank 1/Intake] control output	CVVT Oil Control Valve (OCV) [Bank 1/Intake]

97	Ignition Coil (Cylinder #2) control output	Ignition Coil (Cylinder #2)
98	Ignition Coil (Cylinder #6) control output	Ignition Coil (Cylinder #6)
99	Ignition Coil (Cylinder #4) control output	Ignition Coil (Cylinder #4)
100	-	

ECM Terminal Input/Output Signal

Connector [CGL-A]

Pin No.	Description	Condition	Type	Level
1	-			
2	-			
3	-			
4	Immobilizer Lamp control output	Lamp OFF	DC	Battery Voltage
		Lamp ON		Max. 1.1V
5	Power ground	Idle	DC	Max. 0.1V
6	Power ground	Idle	DC	Max. 0.1V
7	-			
8	-			
9	2nd CAN [High]	Recessive	Pulse	2.0 ~ 3.0V
		Dominant		2.75 ~ 4.5V
10	CAN [High]	Recessive	Pulse	2.0 ~ 3.0V
		Dominant		2.75 ~ 4.5V
11	Fuel Tank Pressure Sensor (FTPS) signal input	Idle	Analog	0.4 ~ 4.6V
12	-			
13	-			
14	Sensor power (+5V)	IG OFF	DC	Max. 0.5V
		IG ON		4.9 ~ 5.1V
15	Sensor power (+5V)	IG OFF	DC	Max. 0.5V
		IG ON		4.9 ~ 5.1V
16	Fuel Level Sensor (FLS) [TOTAL] signal input	IG ON	Analog	0.88 ~ 8.45V
17	Power Steering Pressure Switch signal input			
18	Clutch switch signal input			
19	-			
20	-			

21	Brake Switch 2 signal input	Brake OFF	DC	Battery Voltage
		Brake ON		Max. 0.5V
22	-			
23	-			
24	Alternator (FR)	Idle	PWM	High: Battery Voltage
				Low: Max. 2.0V
				133<FREQUENCY<200HZ< span>
				5<DUTY<95%< span>
25	-			
26	-			
27	Battery power (B+)	IG OFF	DC	Battery Voltage
		IG ON		Max. 1.0V
28	Rail Pressure Sensor (RPS) signal input	Idle	DC	1.0 ~ 2.0V
29	-			
30	Power ground	Idle	DC	Max. 0.1V
31	-			
32	-			
33	-			
34	2nd CAN [Low]	Recessive	Pulse	2.0 ~ 3.0V
		Dominant		0.5 ~ 2.25V
35	CAN [Low]	Recessive	Pulse	2.0 ~ 3.0V
		Dominant		0.5 ~ 2.25V
36	-			
37	Sensor ground	Idle	DC	Max. 0.1V
38	Accelerator Position Sensor (APS) 1 signal input	C.T	Analog	0.7 ~ 0.8V
		W.O.T		3.85 ~ 4.35V
39	-			
40	-			
41	Fuel Level Sensor (FLS) [MIDDLE] signal input	IG ON	Analog	0.88 ~ 8.45V
42	-			
43	Brake Switch 1 signal input	Brake OFF	DC	Max. 0.5V
		Brake ON		Battery Voltage
44	-			
45	-			
46	-			

47	-			
48	-			
49	-			
50	-			
51	-			
52	Battery power (B+)	Always (Without Ignition key)	DC	Battery Voltage
53	-			
54	-			
55	Power ground	Idle	DC	Max. 0.1V
56	-			
57	Fuel Pump Relay control output [Without Immobilizer]	Relay OFF	DC	Battery Voltage
	A/C Compressor Clutch Relay control output [With Immobilizer]	Relay ON		Max 1.1V
58	-			
59	Sensor ground	Idle	DC	Max. 0.1V
60	Sensor ground	Idle	DC	Max. 0.1V
61	Sensor ground	Idle	DC	Max. 0.1V
62	Ground	Idle	DC	Max. 0.1V
63	Sensor ground	Idle	DC	Max. 0.1V
64	-			
65	Sensor Power (+5V)	IG OFF	DC	Max. 0.5V
		IG ON		4.75 ~ 5.25V
66	Cruise Control Switch signal input	“MAIN”	Analog	11.1 ~ 12.1V
		“SET”		1.0 ~ 1.8V
		“CANCEL”		-0.5 ~ 0.5V
		“RESUME”		2.5 ~ 3.5V
67	A/C Pressure Transducer (APT) signal input	A/C ON	Analog	0.5 ~ 4.5V
68	Accelerator Position Sensor (APS) 2 signal input	C.T	Analog	0.29 ~ 0.46V
		W.O.T		1.93 ~ 2.18V
69	-			
70	Engine speed signal output	Engine Running	Pulse	High: Battery Voltage
				Low: Max. 1.1V
				0<FREQUENCY<350HZ< span>
				47.5<DUTY<52.5%< span>

71	Cooling Fan Relay [High] control output	A/C ON	Pulse	High: Battery Voltage
				Low: Max. 1.1V
72	-			
73	-			
74	Immobilizer communication line	Transmitting	DC	High: Min. Vbatt X 80%
				Low: Max. Vbatt X 20%
		Receiving		High: Min. Vbatt X 70%
				Low: Max. Vbatt X 30%
75	Battery power (B+)	IG OFF	DC	Battery Voltage
		IG ON		Max. 1.0V
76	-			
77	Battery power (B+)	Always (Without Ignition key)	DC	Battery Voltage
78	Fuel pump resistor relay control output	Relay OFF	DC	Battery Voltage
		Relay ON		Max.1.1V
79	-			
80	Power ground	Idle	DC	Max. 0.1V
81	-			
82	-			
83	-			
84	-			
85	-			
86	-			
87	-			
88	-			
89	-			
90	Sensor power (+5V)	IG OFF	DC	Max. 0.5V
		IG ON		4.75 ~ 5.25V
91	Cooling Fan Relay [Low] control output	A/C ON	Pulse	High: Battery Voltage
				Low: Max. 1.1V
92	-			
93	Starter Relay control output	Relay OFF	DC	Battery Voltage
		Relay ON		Max 1.1V
94	Main Relay control output	Relay OFF	DC	Battery Voltage
		Relay ON		Max 1.7V

95	Fuel Pump Relay control output	Relay OFF	DC	Battery Voltage
		Relay ON		Max 1.1V
96	Canister Close Valve (CCV) control output	Active	Pulse	High: Battery Voltage
		Inactive		Low: Max. 1.0V
				Vpeak: Max. 70V
97	-			
98	-			
99	Battery power (B+)	IG OFF	DC	Battery Voltage
		IG ON		Max. 1.0V
100	Battery power (B+)	IG OFF	DC	Battery Voltage
		IG ON		Max. 1.0V

Connector [CLG-B]

Pin No.	Description	Condition	Type	Level
1	-			
2	-			
3	-			
4	-			
5	Sensor power (+5V)	IG OFF	DC	Max. 0.5V
		IG ON		4.75 ~ 5.25V
6	Sensor power (+5V)	IG OFF	DC	Max. 0.5V
		IG ON		4.75 ~ 5.25V
7	Throttle Position Sensor PWM signal output			
8	Crank request signal output	S/W OFF	DC	Max. 1.0V
		S/W ON		Battery Voltage
9	Barometric Pressure Sensor (BPS) signal input	IG ON	Analog	Approx. 4.0V
10	CVVT Oil Temperature Sensor (OTS) signal input	IG ON	Analog	3.2V at -40°C(-40°F)
				0.1V at 150°C(302°F)
11	-			
12	Throttle Position Sensor (TPS) 1 signal input	C.T	Analog	0.25 ~ 0.9V
		W.O.T		Min. 4.0V
13	Manifold Absolute Pressure Sensor (MAPS) signal input	IG ON	Analog	Approx. 4.44V
		Idle		Approx. 0.75V
14	Intake Air Temperature Sensor (IATS) signal input	IG ON	Analog	3.2V at -40°C(-40°F)
				0.05V at 125°C(257°F)

15	Vehicle speed signal input	Vehicle Running	Pulse	High: Battery Voltage
				Low: Max. 0.5V
				0.7(1kph)<FREQUENCY<>
				44<DUTY<56%< span>
16	Knock Sensor (KS) [Bank 2] [High] signal input	Knocking	Variable	-0.3 ~ 0.3V
		Normal	Frequency	0V
17	Knock Sensor (KS) [Bank 1] [High] signal input	Knocking	Variable	-0.3 ~ 0.3V
		Normal	Frequency	0V
18	Crankshaft Position Sensor (CKPS) [High] signal input	Idle	SINE	0.4<VP_P<200V< span>
			Wave	55<FREQUENCY<7,000HZ< span>
19	Sensor ground	Idle	DC	Max. 0.1V
20	VCM Position Sensor signal input	Engine Running	Analog	0.4 ~ 0.6V
21	Camshaft Position Sensor (CMPS) [Bank 2/Intake] signal input	Idle	Pulse	High: 3.2 ~ Vcc
				Low: Max. 0.7V
				0<FREQUENCY< span 350Hz<>
22	Electrical Load signal input			
23	-			
24	Ignition Coil (Cylinder #1) control output	Engine Running	Pulse	Vpeak = 400V
				0<FREQUENCY< span 58.3Hz<>
25	-			
26	-			
27	-			
28	-			
29	-			
30	-			
31	Sensor ground	Idle	DC	Max. 0.1V
32	Sensor ground	Idle	DC	Max. 0.1V
33	Sensor ground	Idle	DC	Max. 0.1V
34	Throttle Position Sensor (TPS) 2 signal input	C.T	Analog	Min. 4.0V
		W.O.T		0.25 ~ 0.9V
35	Engine Coolant Temperature Sensor (ECTS) signal input	IG ON	Analog	3.22V at -40°C(-40°F)
				0.29V at 125°C(257°F)
36	-			
37	-			


38	Heated Oxygen Sensor (HO2S) [Bank 1/Sensor 1] signal input	RICH	Analog	Min. 0.8V
		LEAN		Max. 0.1V
39	Sensor ground	Idle	DC	Max. 0.1V
40	Sensor Shield	Idle	DC	Max. 0.1V
41	Knock Sensor (KS) [Bank 2] [Low] signal input	Knocking	Variable	-0.3 ~ 0.3V
		Normal	Frequency	0V
42	Knock Sensor (KS) [Bank 1] [Low] signal input	Knocking	Variable	-0.3 ~ 0.3V
		Normal	Frequency	0V
43	Crankshaft Position Sensor (CKPS) [Low] signal input	Idle	SINE	0.4<VP_P<200V< span>
			Wave	55<FREQUENCY<7,000HZ< span>
44	Sensor ground	Idle	DC	Max. 0.1V
45	-			
46	Camshaft Position Sensor (CMPS) [Bank 2/Exhaust] signal input	Idle	Pulse	High: 3.2 ~ Vcc
				Low: Max. 0.7V
				0<FREQUENCY< span 350Hz<
47	-			
48	Sensor power (+5V)	IG OFF	DC	Max. 0.5V
		IG ON		4.75 ~ 5.25V
49	Ignition Coil (Cylinder #3) control output	Engine Running	Pulse	Vpeak = 400V
				0<FREQUENCY< span 58.3Hz<
50	-			
51	-			
52	-			
53	-			
54	-			
55	-			
56	Sensor ground	Idle	DC	Max. 0.1V
57	-			
58	Heated Oxygen Sensor (HO2S) [Bank 2/Sensor 2] signal input	RICH	Analog	Min. 0.8V
		LEAN		Max. 0.1V
59	Heated Oxygen Sensor (HO2S) [Bank 1/Sensor 2] signal input	RICH	Analog	Min. 0.8V
		LEAN		Max. 0.1V
60	Sensor ground	Idle	DC	Max. 0.1V
61	-			
62	-			


63	Heated Oxygen Sensor (HO2S) [Bank 2/Sensor 1] signal input	RICH	Analog	Min. 0.8V
		LEAN		Max. 0.1V
64	Sensor ground	Idle	DC	Max. 0.1V
65	-			
66	Purge Control Solenoid Valve (PCSV) control output	Engine Running	PWM	High: Battery Voltage
				Low: Max. 1.0V
67	-			
68	-			
69	-			
70	Camshaft Position Sensor (CMPS) [Bank 1/Exhaust] signal input	Idle	Pulse	High: 3.2 ~ Vcc
				Low: Max. 0.7V
				0<FREQUENCY< span 350Hz<
71	Camshaft Position Sensor (CMPS) [Bank 1/Intake] signal input	Idle	Pulse	High: 3.2 ~ Vcc
				Low: Max. 0.7V
				0<FREQUENCY< span 350Hz<
72	-			
73	Sensor Power (+5V)	IG OFF	DC	Max. 0.5V
		IG ON		4.75 ~ 5.25V
74	Ignition Coil (Cylinder #5) control output	Engine Running	Pulse	Vpeak = 400V
				0<FREQUENCY< span 58.3Hz<
75	-			
76	-			
77	-			
78	-			
79	-			
80	ETC Motor [+] control output	Engine Running	PWM	High: Battery Voltage
				Low: Max.1.0V
				1,500<FREQUENCY<2,400HZ< span>
				0<DUTY< span 98%<
81	ETC Motor [-] control output	Engine Running	PWM	High: Battery Voltage
				Low: Max.1.0V
				1,500<FREQUENCY<2,400HZ< span>
				0<DUTY< span 98%<


82	Heated Oxygen Sensor (HO2S) [Bank 1/Sensor 2] Heater control output	Engine Running	PWM	High: Battery Voltage
				Low: Max. 1.15V
				0<DUTY<100%< span>
83	Heated Oxygen Sensor (HO2S) [Bank 2/Sensor 2] Heater control output	Engine Running	PWM	High: Battery Voltage
				Low: Max. 1.15V
				0<DUTY<100%< span>
84	Fuel Pressure Control Valve (FPCV) control output			
85	Injector (Cylinder #2) control output	Engine Running	PWM	High: Battery Voltage
				Low: Max. 1.0V
				0<FREQUENCY< span 58.3Hz<>
				47<VPEAK<64V< span>
86	Injector (Cylinder #5) control output	Engine Running	PWM	High: Battery Voltage
				Low: Max. 1.0V
				0<FREQUENCY< span 58.3Hz<>
				47<VPEAK<64V< span>
87	Injector (Cylinder #3) control output	Engine Running	PWM	High: Battery Voltage
				Low: Max. 1.0V
				0<FREQUENCY< span 58.3Hz<>
				47<VPEAK<64V< span>
88	Injector (Cylinder #6) control output	Engine Running	PWM	High: Battery Voltage
				Low: Max. 1.0V
				0<FREQUENCY< span 58.3Hz<>
				47<VPEAK<64V< span>
89	Injector (Cylinder #4) control output	Engine Running	PWM	High: Battery Voltage
				Low: Max. 1.0V
				0<FREQUENCY< span 58.3Hz<>
				47<VPEAK<64V< span>
90	Injector (Cylinder #1) control output	Engine Running	PWM	High: Battery Voltage
				Low: Max. 1.0V
				0<FREQUENCY< span 58.3Hz<>
				47<VPEAK<64V< span>
91	Heated Oxygen Sensor (HO2S) [Bank 1/Sensor 1] Heater control output	Engine Running	PWM	High: Battery Voltage
				Low: Max. 1.15V
				0<DUTY<100%< span>


92	Heated Oxygen Sensor (HO2S) [Bank 2/Sensor 1] Heater control output	Engine Running	PWM	High: Battery Voltage
				Low: Max. 1.15V
				0<DUTY<100%< span>
93	CVVT Oil Control Valve (OCV) [Bank 2/Exhaust] control output	Engine Running	PWM	High: Battery Voltage
				Low: Max. 1.0V
				Frequency = 128Hz
				0<DUTY<100%< span>
94	CVVT Oil Control Valve (OCV) [Bank 1/Exhaust] control output	Engine Running	PWM	High: Battery Voltage
				Low: Max. 1.0V
				Frequency = 128Hz
				0<DUTY<100%< span>
95	CVVT Oil Control Valve (OCV) [Bank 2/Intake] control output	Engine Running	PWM	High: Battery Voltage
				Low: Max. 1.0V
				Frequency = 128Hz
				0<DUTY<100%< span>
96	CVVT Oil Control Valve (OCV) [Bank 1/Intake] control output	Engine Running	PWM	High: Battery Voltage
				Low: Max. 1.0V
				Frequency = 128Hz
				0<DUTY<100%< span>
97	Ignition Coil (Cylinder #2) control output	Engine Running	Pulse	Vpeak = 400V
				0<FREQUENCY< span 58.3Hz<>
98	Ignition Coil (Cylinder #6) control output	Engine Running	Pulse	Vpeak = 400V
				0<FREQUENCY< span 58.3Hz<>
99	Ignition Coil (Cylinder #4) control output	Engine Running	Pulse	Vpeak = 400V
				0<FREQUENCY< span 58.3Hz<>
100	-			


Circuit Diagram

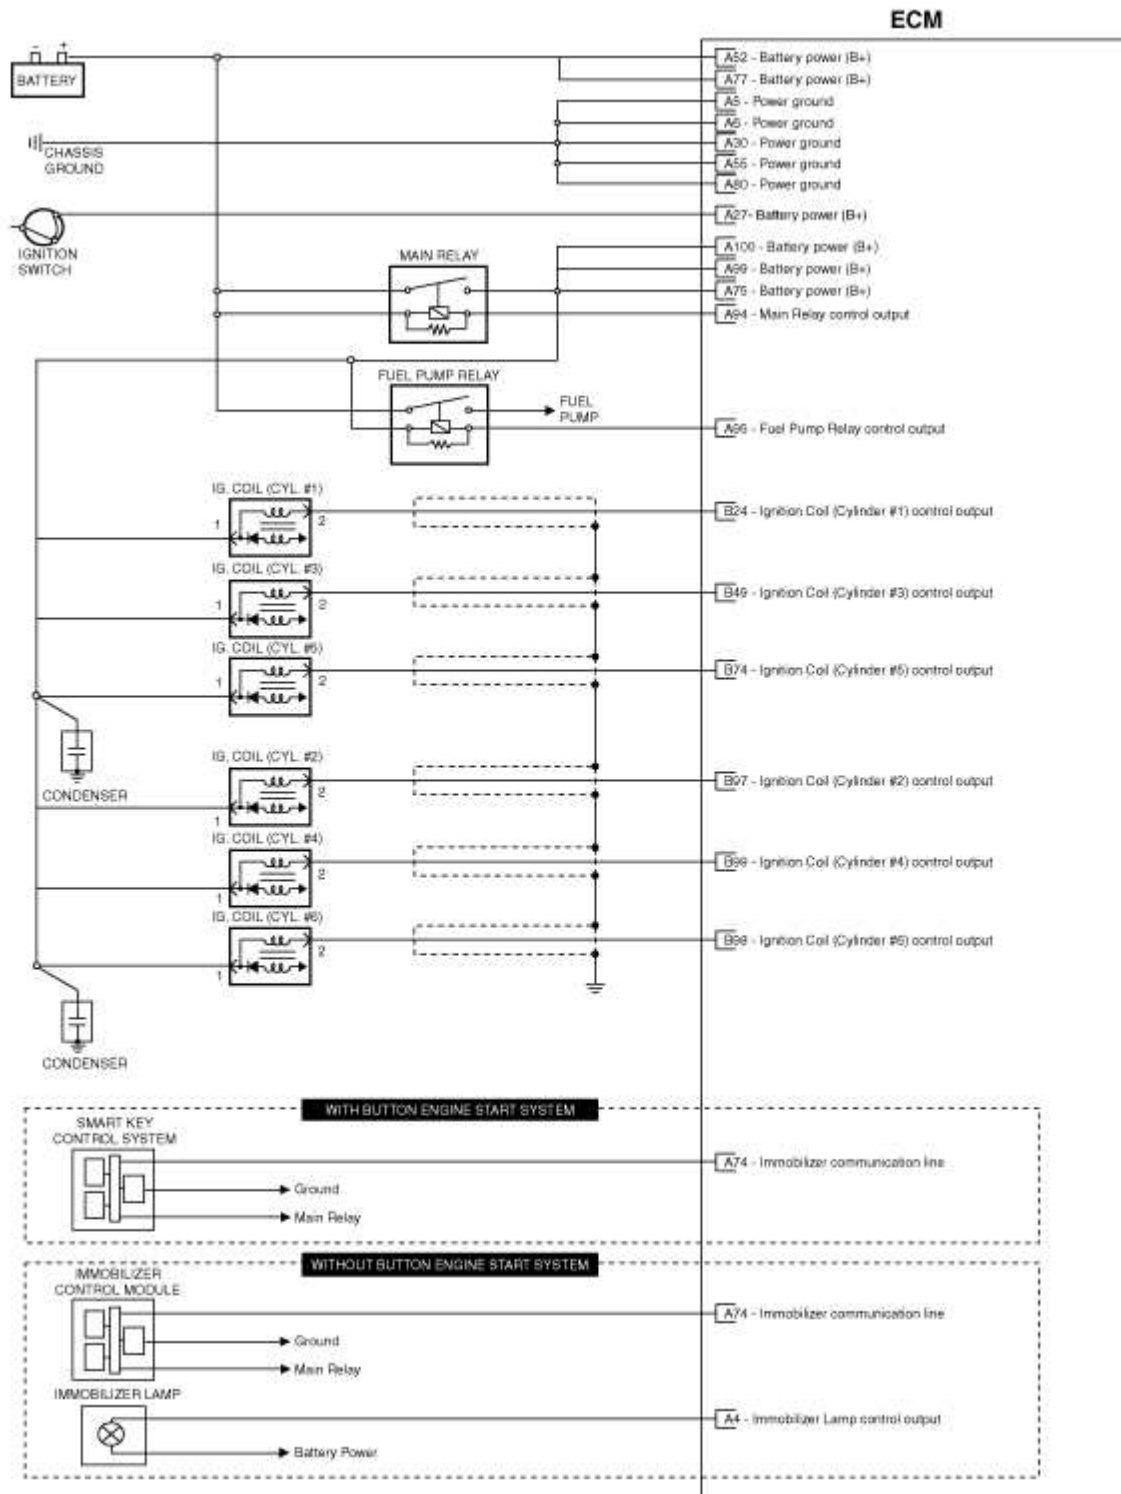

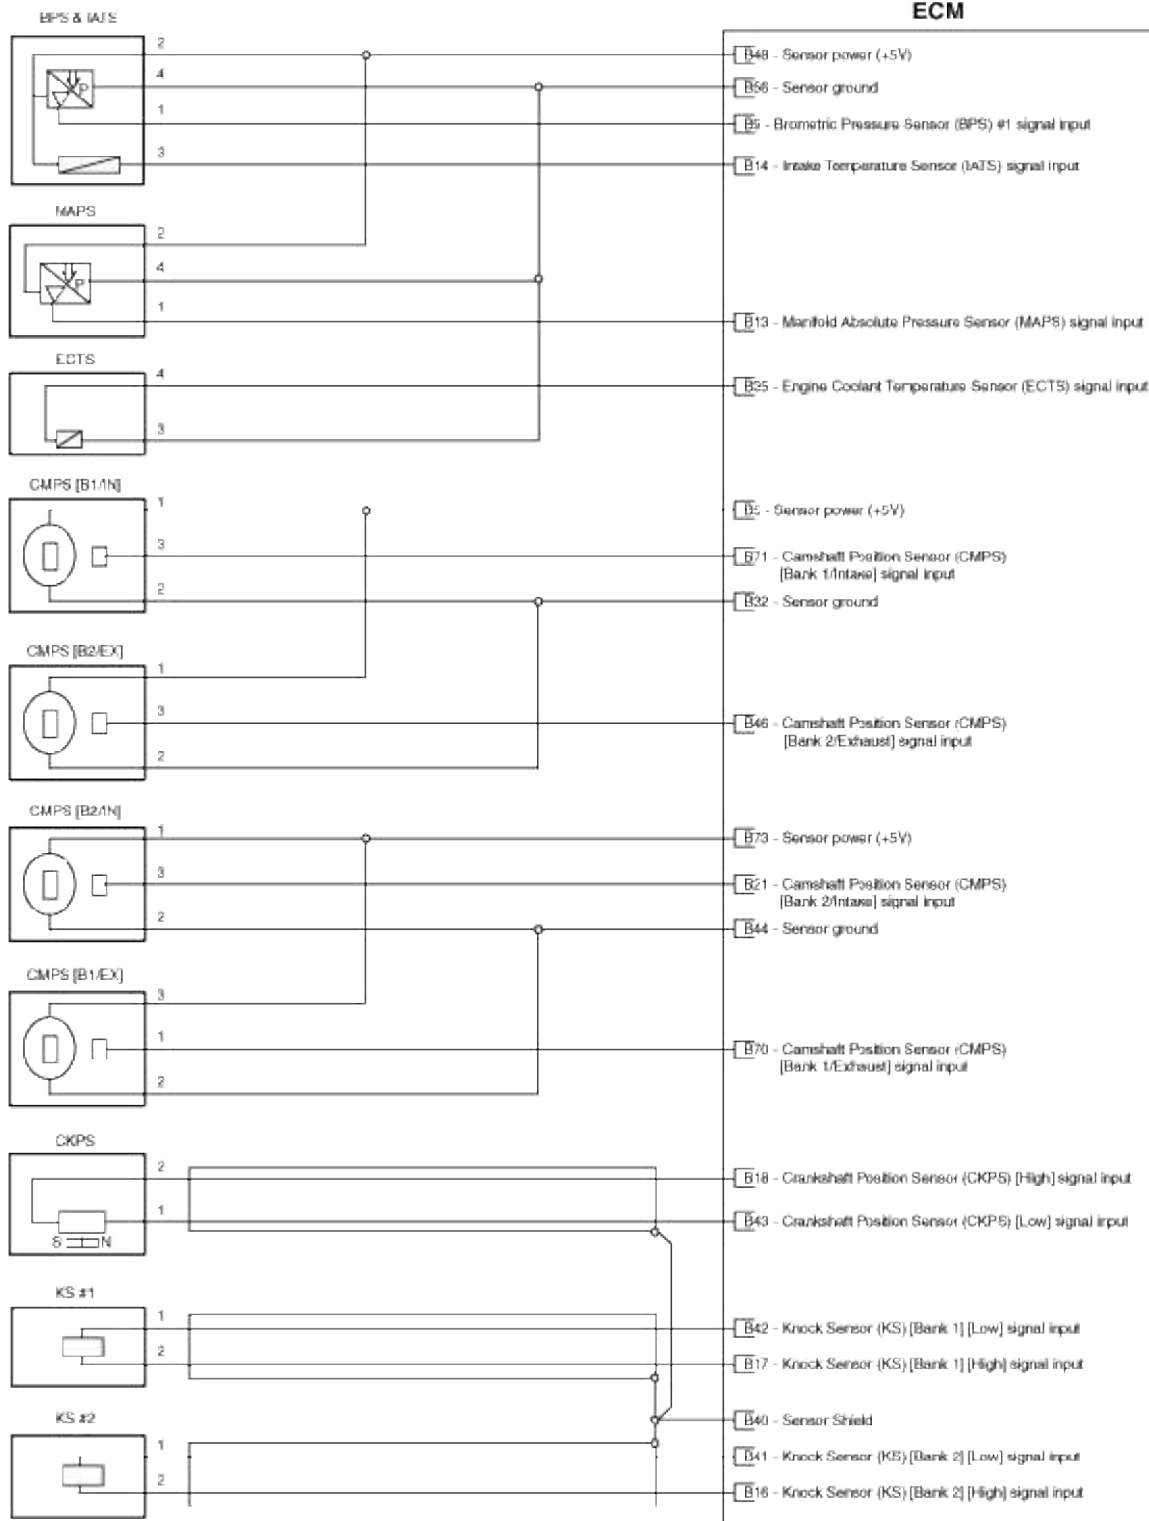

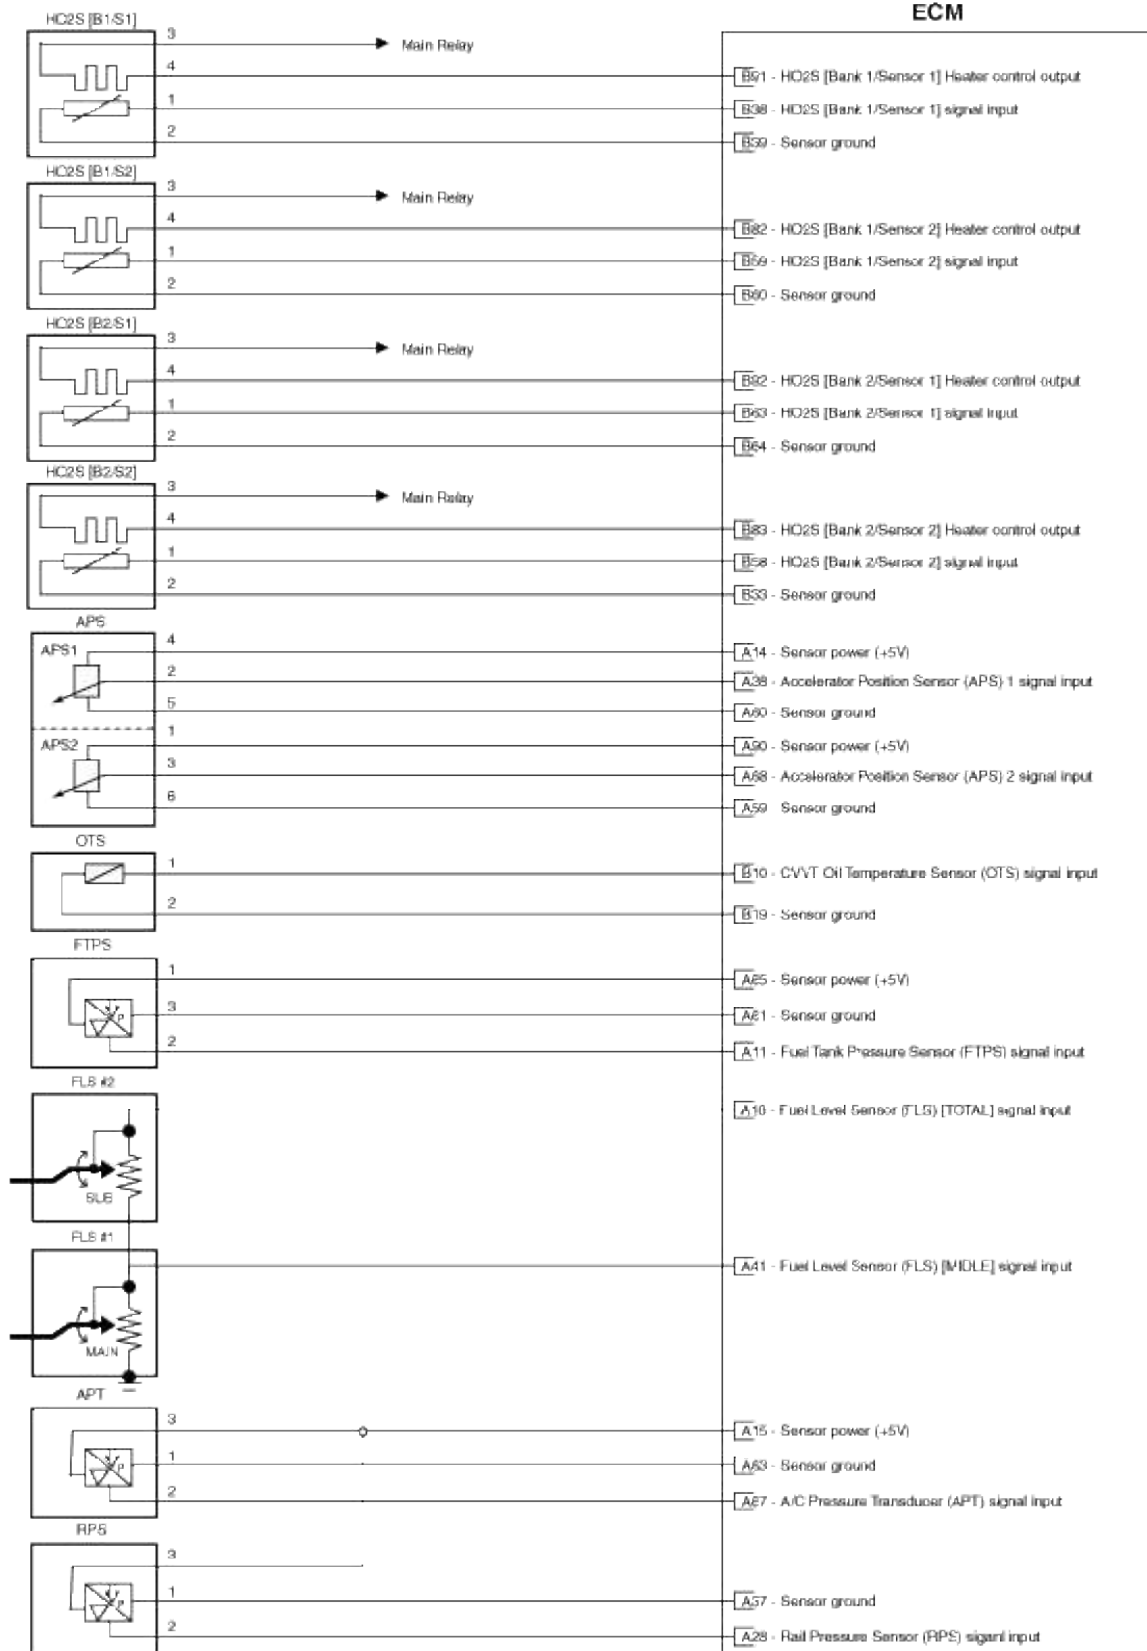

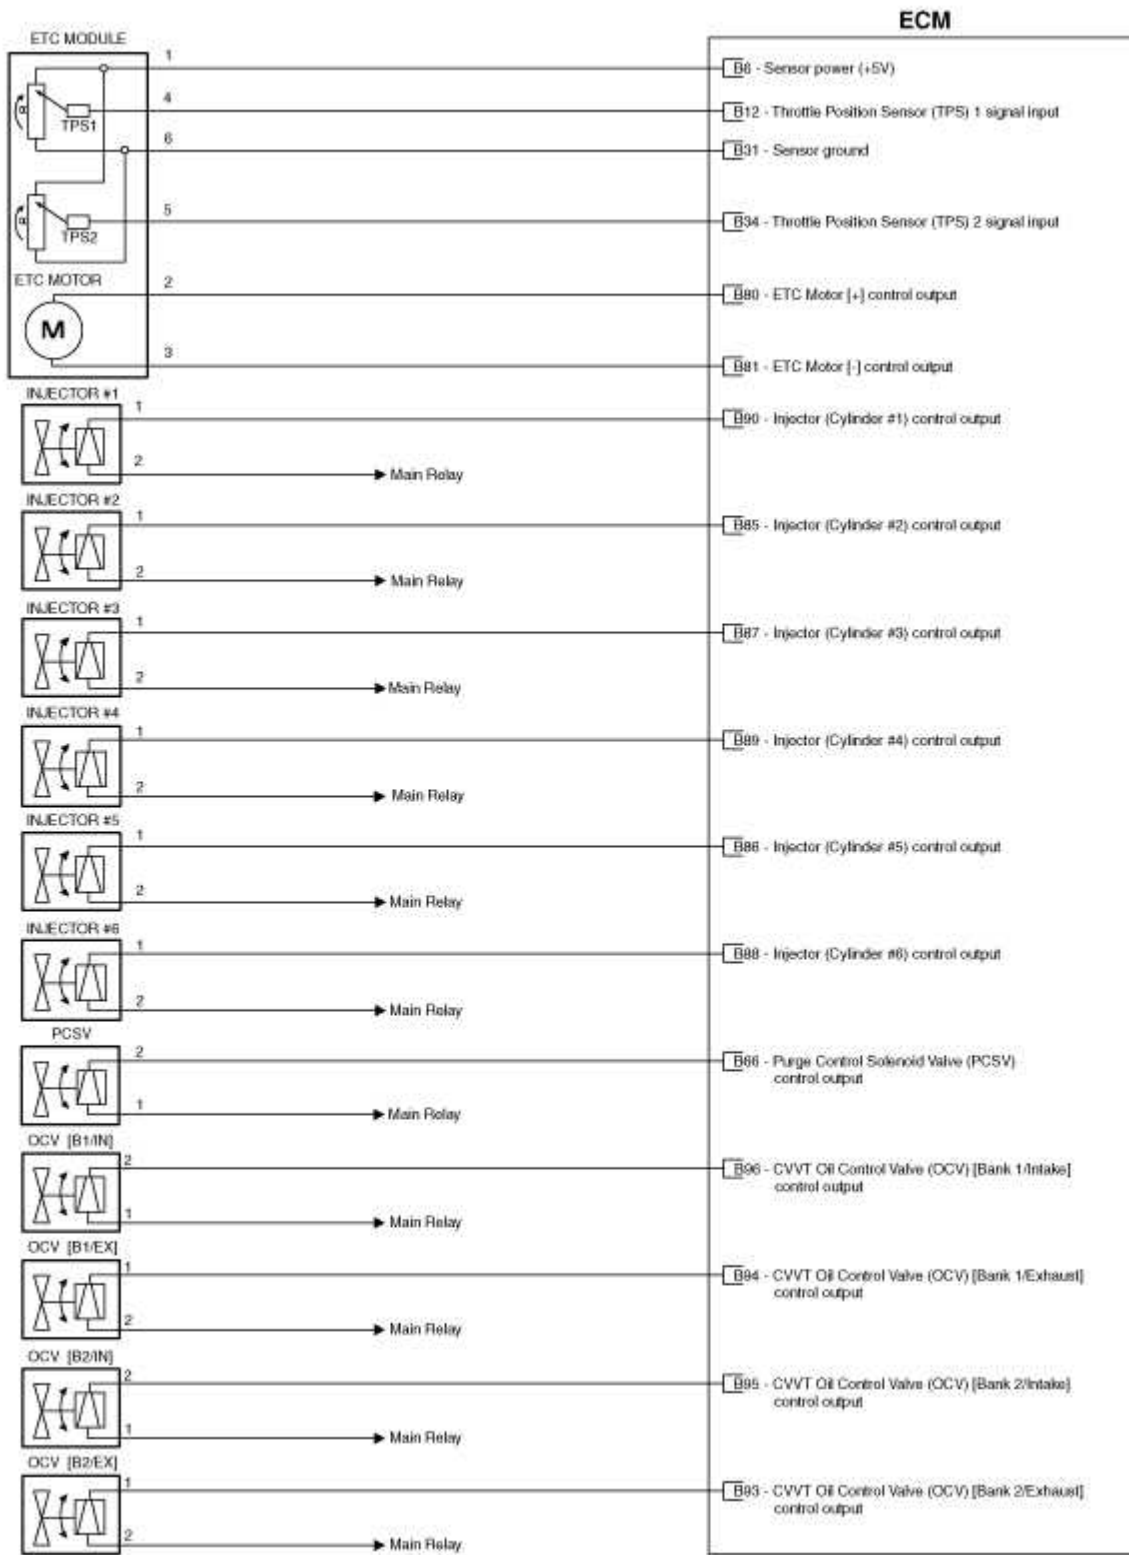

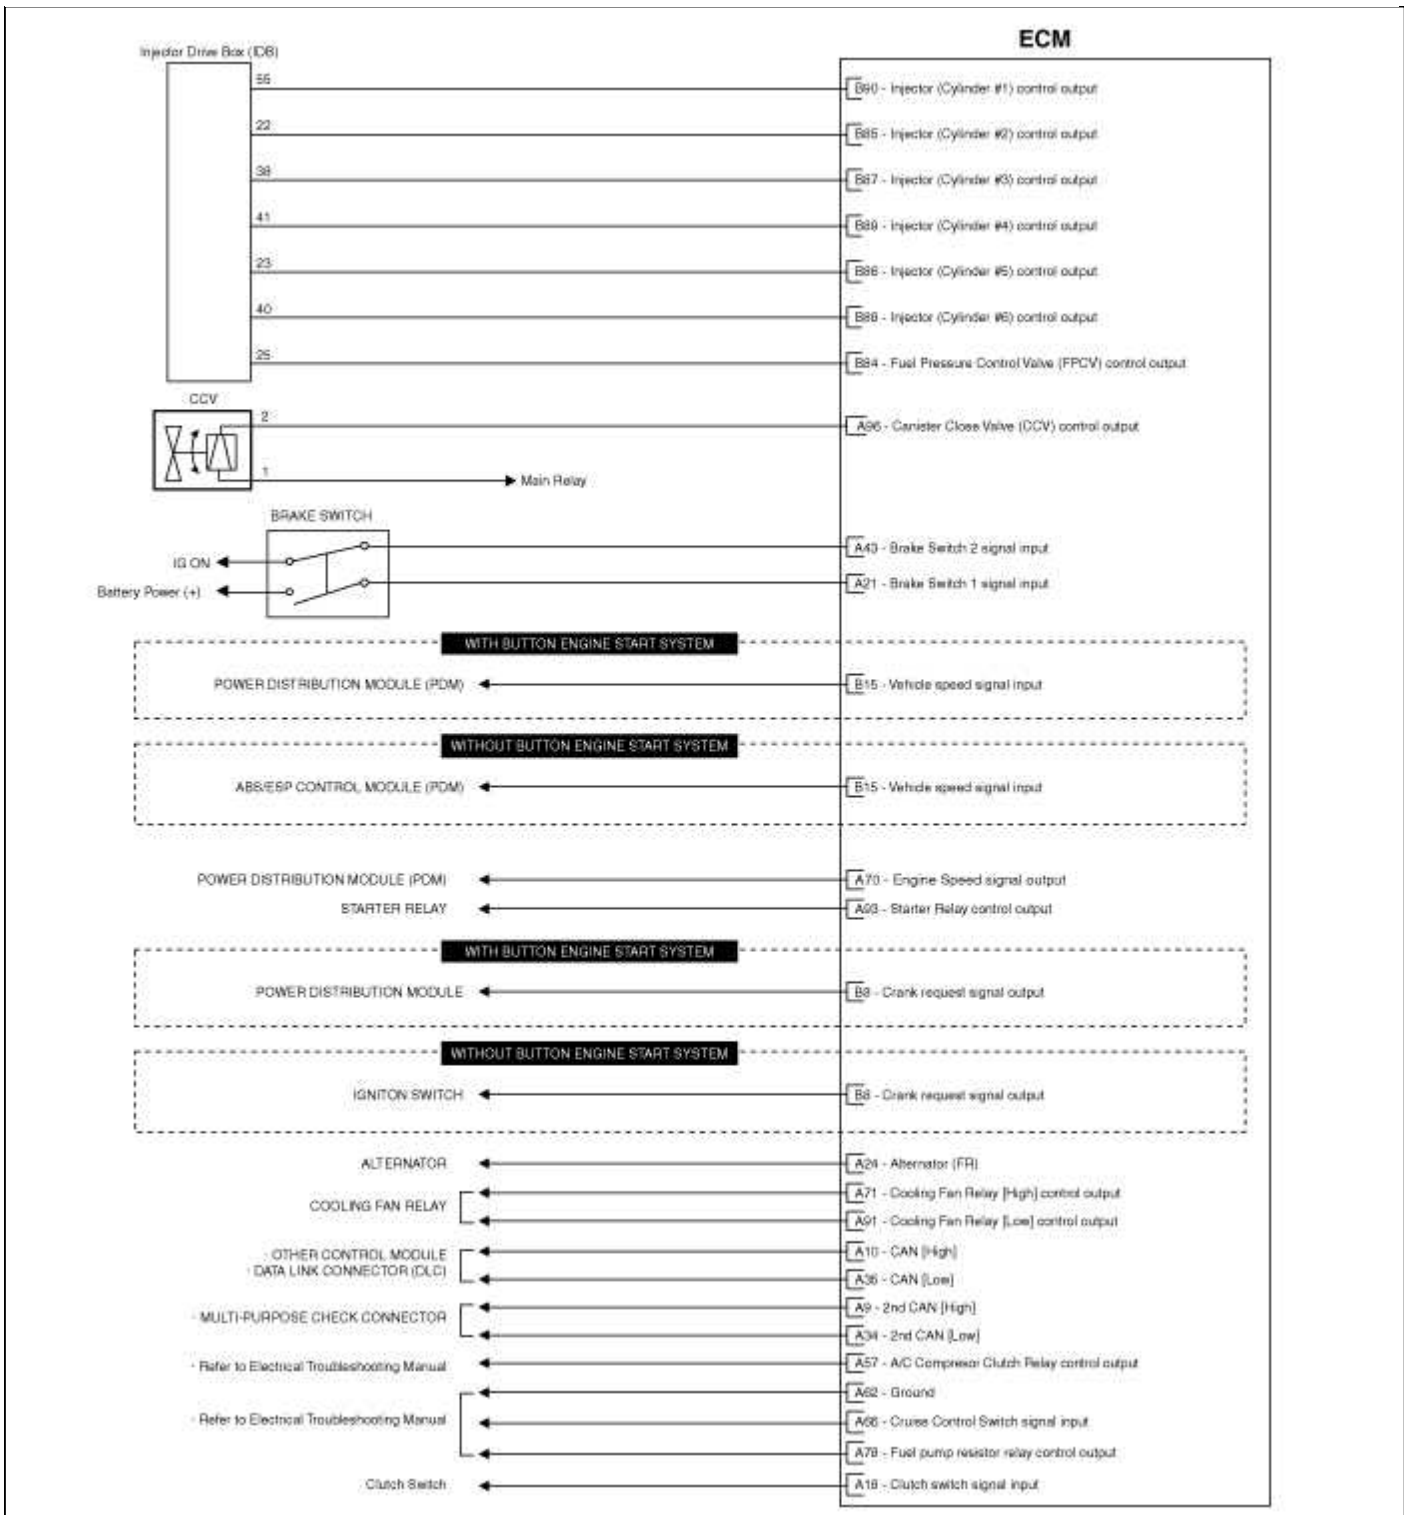

Fuel System > Engine Control System > Engine Control Module (ECM) > Repair procedures

Removal

CAUTION

When replacing the ECM, the vehicle equipped with the immobilizer must be performed procedure as below.

[In the case of installing used ECM]

- 1) Perform "ECM Neutral mode" procedure with GDS. (Refer to "Immobilizer" in BE group)
- 2) After finishing "ECM Neutral mode", perform "Key teaching" procedure with GDS. (Refer to "Immobilizer" in BE group)

[In the case of installing new ECM]

Perform "Key teaching" procedure with GDS. (Refer to "Immobilizer" in BE group)

CAUTION

When replacing the ECM, the vehicle equipped with the smart key system (Button start) must be performed procedure as below.


[In the case of installing used ECM]

- 1) Perform "ECM Neutral mode" procedure with GDS. (Refer to "Smart key" in BE group)
- 2) After finishing "ECM Neutral mode", insert the key (or press the start button) and turn it to the IGN ON and OFF position. Then the ECM learns the smart key information automatically.


[In the case of installing new ECM]

Insert the key (or press the start button) and turn it to the IGN ON and OFF position. Then the ECM learns the smart key information automatically.

1. Turn ignition switch OFF and disconnect the negative (-) battery cable.
2. Remove the cover.
3. Disconnect the ECM connector (A) and the TCM connector (B).

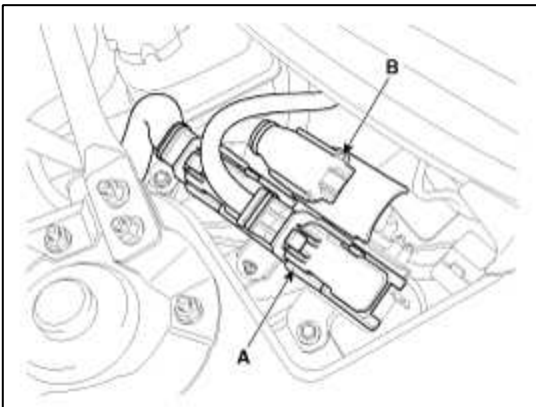

4. Remove the ECM & TCM bracket installation bolts (C) and nut (D).
5. After removing the installation bolts (A), remove the ECM (B) from the bracket.

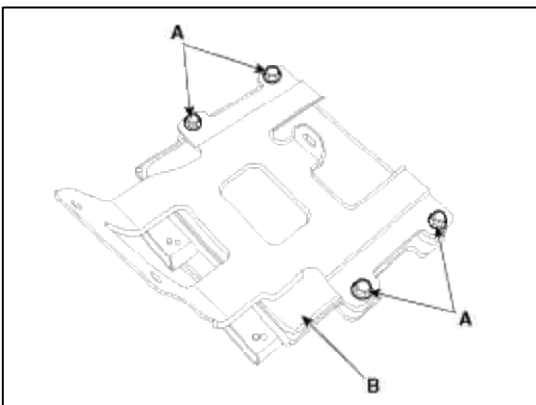

Installation

NOTE

In the case of the vehicle equipped with immobilizer, perform "Key Teaching" procedure together (Refer to "Immobilizer" in BE group).

1. Installation is reverse of removal.

ECM installation bolt:

9.8 ~ 11.8 N.m (1.0 ~ 1.2 kgf.m, 7.2 ~ 8.7 lbf.ft)

ECM Problem Inspection Procedure

1. TEST ECM GROUND CIRCUIT: Measure resistance between ECM and chassis ground using the backside of ECM harness connector as ECM side check point. If the problem is found, repair it.

Specification: Below 1Ω

2. TEST ECM CONNECTOR: Disconnect the ECM connector and visually check the ground terminals on ECM side and harness side for bent pins or poor contact pressure. If the problem is found, repair it.
3. If problem is not found in Step 1 and 2, the ECM could be faulty. If so, replace the ECM with a new one, and then check the vehicle again. If the vehicle operates normally then the problem was likely with the ECM.
4. RE-TEST THE ORIGINAL ECM: Install the original ECM (may be broken) into a known-good vehicle and check the vehicle. If the problem occurs again, replace the original ECM with a new one. If problem does not occur, this is intermittent problem (Refer to "Intermittent Problem Inspection Procedure" in Basic Inspection Procedure).


VIN Programming Procedure

VIN (Vehicle Identification Number) is a number that has the vehicle's information (Maker, Vehicle Type, Vehicle Line/Series, Body Type, Engine Type, Transmission Type, Model Year, Plant Location and so forth. For more information, please refer to the group "GI" in this SERVICE MANUAL). When replacing an ECM, the VIN must be programmed in the ECM. If there is no VIN in ECM memory, the fault code (DTC P0630) is set.

CAUTION

The programmed VIN cannot be changed. When writing the VIN, confirm the VIN carefully


1. Select "VIN Writing" function in "Vehicle S/W Management".
2. Select "Write VIN" in "ID Register".

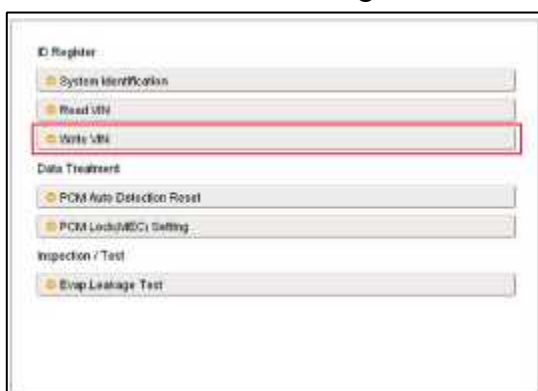

3. Input the VIN.

WARNING


Before inputting the VIN, confirm the VIN again because the programmed VIN cannot be changed.

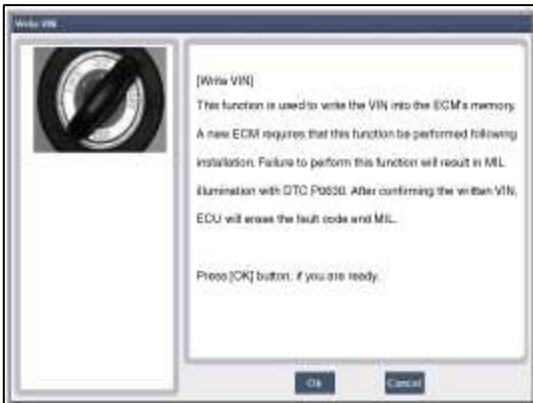

4. Turn the ignition switch OFF, then back ON.

Fuel System > Engine Control System > Injector Drive Box (IDB) > Schematic Diagrams

IDB terminal and Inoutput

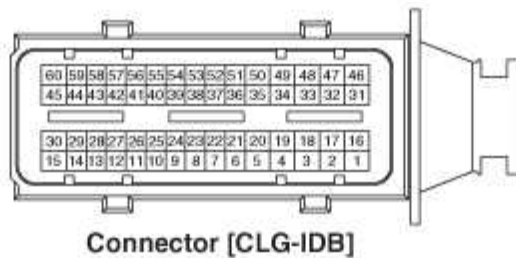**IDB terminal function****Connector [CLG-IDB]**

Pin No.	Description	Connected to
1	-	
2	-	
3	-	
4	-	
5	-	
6	-	
7	-	
8	-	
9	-	
10	-	
11	-	

12	-	
13	-	
14	-	
15	-	
16	Injector (Cylinder #3) [Low] control output	Injector (Cylinder #3)
17	Injector (Cylinder #6) [Low] control output	Injector (Cylinder #6)
18	Injector (Cylinder #6) [High] control output	Injector (Cylinder #6)
19	Injector (Cylinder #2) [Low] control output	Injector (Cylinder #2)
20	Injector (Cylinder #5) [Low] control output	Injector (Cylinder #5)
21	-	
22	Injector (Cylinder #2) signal input	Engine Control Module (ECM)
23	Injector (Cylinder #5) signal input	Engine Control Module (ECM)
24	-	
25	Fuel Pressure Control Valve (FPRV) logic input	Engine Control Module (ECM)
26	CCP-CAN [Low]	Other control module, Data Link Connector (DLC), Multi-purpose check connector
27	CCP-CAN [High]	Other control module, Data Link Connector (DLC), Multi-purpose check connector
28	Battery power (B+)	Ignition switch
29	Battery power (B+)	Main relay
30	Battery power (B+)	Main relay
31	Injector (Cylinder #4) [High] control output	Injector (Cylinder #4)
32	Injector (Cylinder #1) [High] control output	Injector (Cylinder #1)
33	Injector (Cylinder #3) [High] control output	Injector (Cylinder #3)
34	Injector (Cylinder #2) [High] control output	Injector (Cylinder #2)
35	Injector (Cylinder #5) [High] control output	Injector (Cylinder #5)
36	-	
37	-	
38	Injector (Cylinder #3) signal input	Engine Control Module (ECM)
39	-	
40	Injector (Cylinder #6) signal input	Engine Control Module (ECM)
41	Injector (Cylinder #4) signal input	Engine Control Module (ECM)
42	Battery power (B+)	Ignition switch
43	Battery power (B+)	Main relay
44	Battery power (B+)	Main relay
45	Fuel Pressure Control Valve (FPRV) [High] control output	Fuel Pressure Control Valve (FPRV)

46	Injector (Cylinder #4) [Low] control output	Injector (Cylinder #4)
47	Injector (Cylinder #1) [Low] control output	Injector (Cylinder #1)
48	ECM ground	Chassis ground
49	ECM ground	Chassis ground
50	ECM ground	Chassis ground
51	-	
52	-	
53	-	
54	-	
55	Injector (Cylinder #1) signal input	Engine Control Module (ECM)
56	-	
57	-	
58	-	
59	Battery power (B+)	Main relay
60	Fuel Pressure Control Valve (FPRV) [Low] control output	Fuel Pressure Control Valve (FPRV)

IDB Terminal input/output signal

Connector [CLG-IDB]


Pin No.	Description	Condition	Type	Level
1	-			
2	-			
3	-			
4	-			
5	-			
6	-			
7	-			
8	-			
9	-			
10	-			
11	-			
12	-			
13	-			
14	-			
15	-			


16	Injector (Cylinder #3) [Low] control output	Idle	Pulse	High: Battery voltage
		Relay ON		Low: Max. 1.0V
17	Injector (Cylinder #6) [Low] control output	Idle	Pulse	High: Battery voltage
		Relay ON		Low: Max. 1.0V
18	Injector (Cylinder #6) [High] control output	Idle	Pulse	High: Battery voltage ~ 80V
		Relay ON		Low: Battery voltage
19	Injector (Cylinder #2) [Low] control output	Idle	Pulse	High: Battery voltage
		Relay ON		Low: Max. 1.0V
20	Injector (Cylinder #5) [Low] control output	Idle	Pulse	High: Battery voltage
		Relay ON		Low: Max. 1.0V
21	-			
22	Injector (Cylinder #2) signal input	Idle	Pulse	High: Battery voltage
				Low: Max. 1.0V
23	Injector (Cylinder #5) signal input	Idle	Pulse	High: Battery voltage
				Low: Max. 1.0V
24	-			
25	Fuel Pressure Control Valve (FPRV) logic input			
26	CCP-CAN [Low]	Recessive	Pulse	2.0 ~ 3.0V
		Dominant		2.75 ~ 4.5V
27	CCP-CAN [High]	Recessive	Pulse	2.0 ~ 3.0V
		Dominant		2.75 ~ 4.5V
28	Battery power (B+)	IG OFF	DC voltage	Max. 0.5V
		IG ON		Battery voltage
29	Battery power (B+)	IG OFF	DC voltage	Max. 0.5V
		IG ON		Battery voltage
30	Battery power (B+)	IG OFF	DC voltage	Max. 0.5V
		IG ON		Battery voltage
31	Injector (Cylinder #4) [High] control output	Idle	Pulse	High: Battery voltage ~ 80V
		Relay ON		Low: Battery voltage
32	Injector (Cylinder #1) [High] control output	Idle	Pulse	High: Battery voltage ~ 80V
		Relay ON		Low: Battery voltage

33	Injector (Cylinder #3) [High] control output	Idle	Pulse	High: Battery voltage ~ 80V
		Relay ON		Low: Battery voltage
34	Injector (Cylinder #2) [High] control output	Idle	Pulse	High: Battery voltage ~ 80V
		Relay ON		Low: Battery voltage
35	Injector (Cylinder #5) [High] control output	Idle	Pulse	High: Battery voltage ~ 80V
		Relay ON		Low: Battery voltage
36	-			
37	-			
38	Injector (Cylinder #3) signal input	Idle	Pulse	High: Battery voltage
				Low: Max. 1.0V
39	-			
40	Injector (Cylinder #6) signal input	Idle	Pulse	High: Battery voltage
				Low: Max. 1.0V
41	Injector (Cylinder #4) signal input	Idle	Pulse	High: Battery voltage
				Low: Max. 1.0V
42	Battery power (B+)	IG OFF	DC voltage	Max. 0.5V
		IG ON		Battery voltage
43	Battery power (B+)	IG OFF	DC voltage	Max. 0.5V
		IG ON		Battery voltage
44	Battery power (B+)	IG OFF	DC voltage	Max. 0.5V
		IG ON		Battery voltage
45	Fuel Pressure Control Valve (FPRV) [High] control output	Idle	DC voltage	Battery voltage
				Max. 1.0V
46	Injector (Cylinder #4) [Low] control output	Idle	Pulse	High: Battery voltage
		Relay ON		Low: Max. 1.0V
47	Injector (Cylinder #1) [Low] control output	Idle	Pulse	High: Battery voltage
		Relay ON		Low: Max. 1.0V
48	ECM ground	Idle	DC voltage	Max. 50mV
49	ECM ground	Idle	DC voltage	Max. 50mV
50	ECM ground	Idle	DC voltage	Max. 50mV
51	-			
52	-			

53	-			
54	-			
55	Injector (Cylinder #1) signal input	Idle	Pulse	High: Battery voltage
				Low: Max. 1.0V
56	-			
57	-			
58	-			
59	Battery power (B+)	IG OFF	DC voltage	Max. 0.5V
		IG ON		Battery voltage
60	Fuel Pressure Control Valve (FPRV) [Low] control output	Idle	DC voltage	Battery voltage
				Max. 1.0V

Circuit Diagram

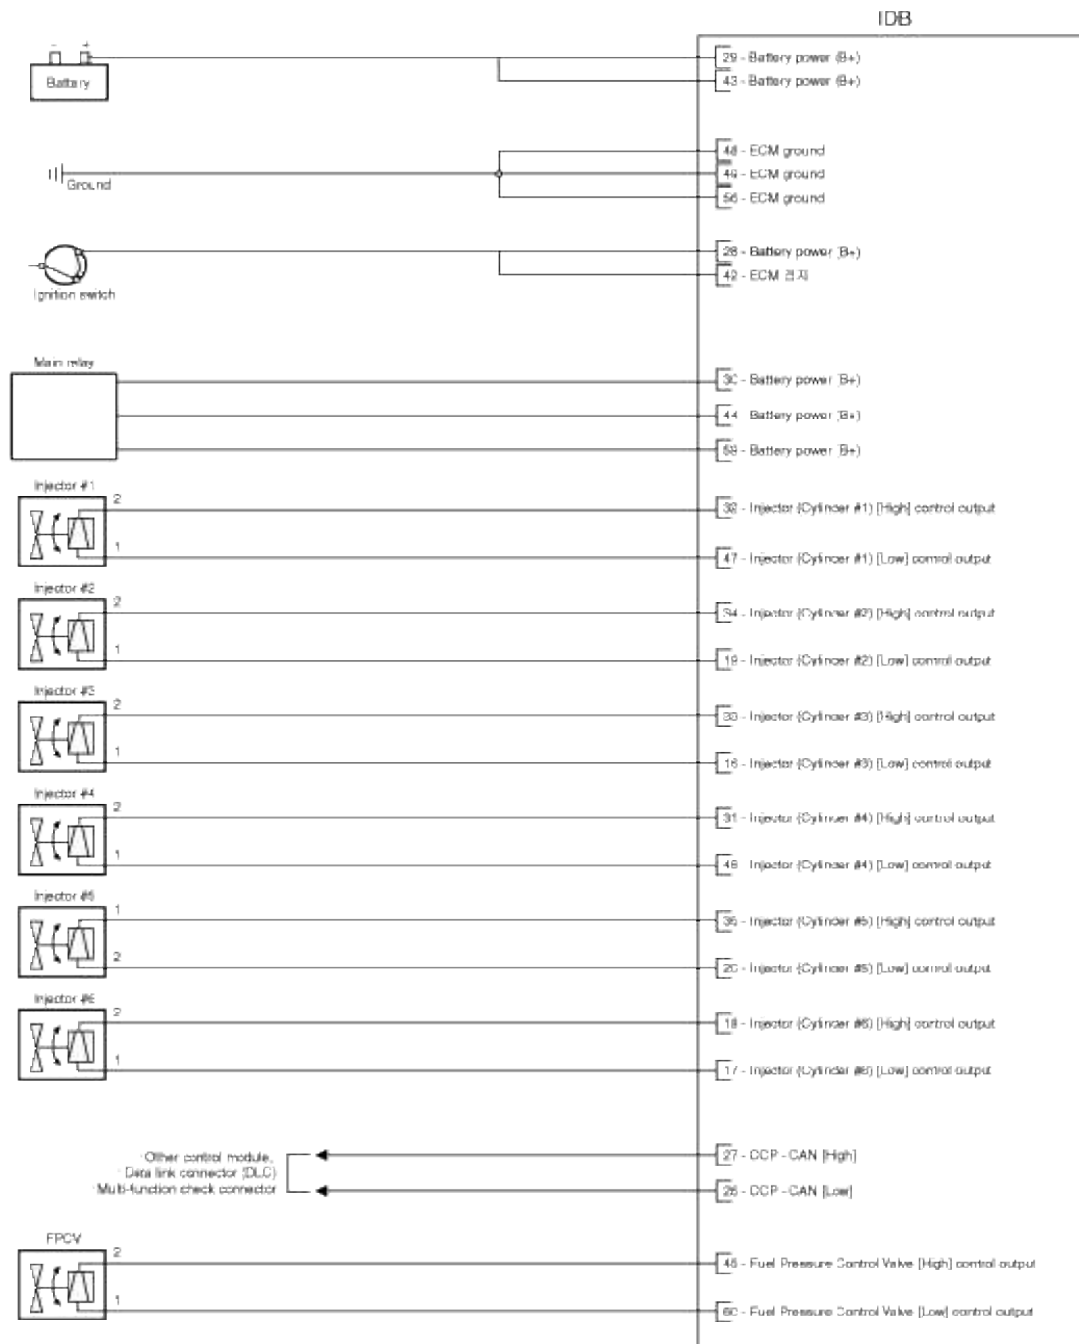


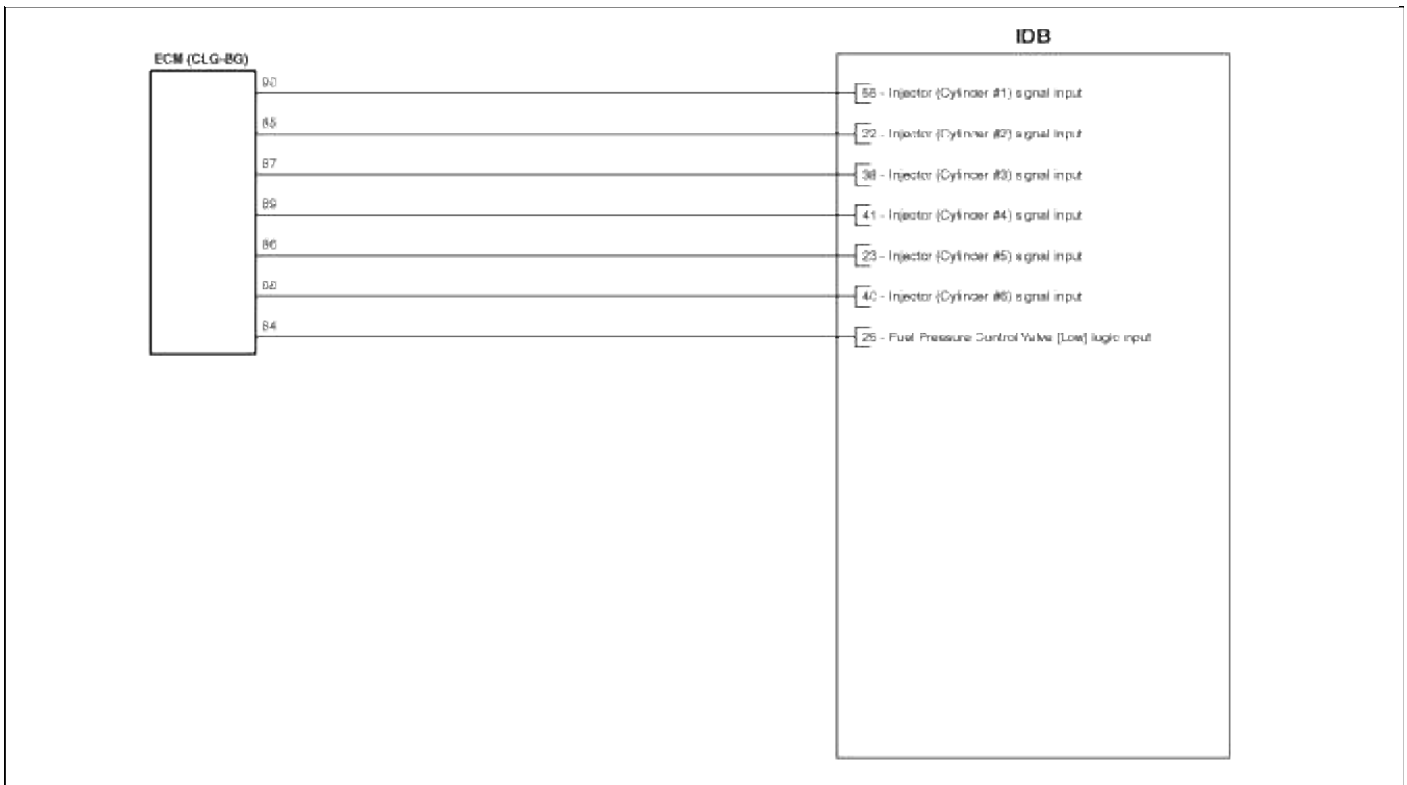


Fuel System > Engine Control System > Injector Drive Box (IDB) > Repair procedures

Removal

1. Turn the ignition switch off and disconnect the battery negative (-) cable.
2. Disconnect the injector drive box (IDB) connector (A).

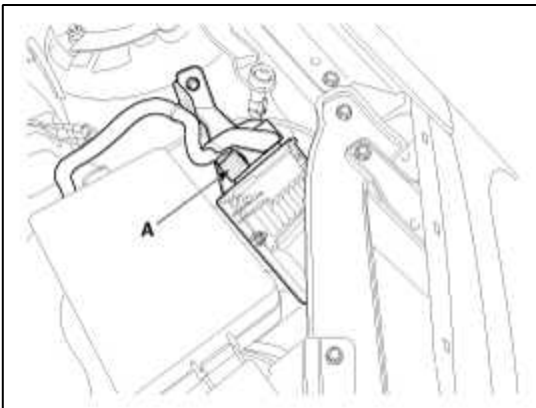

3. Remove the left side head lamp. (Refer to Head lamp in BE group)
4. Remove the IDB assembly after removing the bolts (A) and the nuts (B).

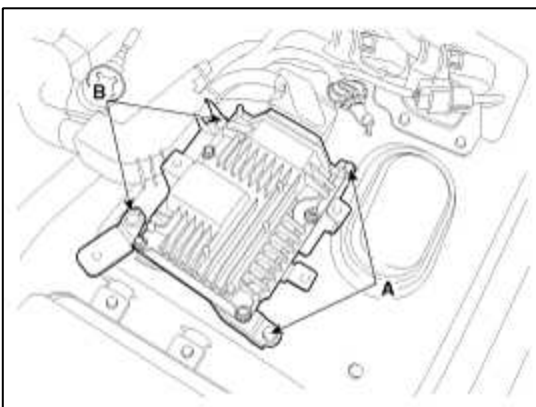

Installation

1. Installation is the reverse of removal.

IDB installation bolt/nut:

9.8 ~ 11.8 N.m (1.0 ~ 1.2 kgf.m, 7.2 ~ 8.7 lb-ft)



IDB bracket installation bolt/nut (on vehicle):

9.8 ~ 11.8 N.m (1.0 ~ 1.2 kgf.m, 7.2 ~ 8.7 lb-ft)

Fuel System > Engine Control System > ETC (Electronic Throttle Control) System > Description and Operation


Description

The Electronic Throttle Control (ETC) System consists of a throttle body with an integrated control motor and throttle position sensor (TPS). Instead of the traditional throttle cable, an Accelerator Position Sensor (APS) is used to receive driver input. The ECM uses the APS signal to calculate the target throttle angle; the position of the throttle is then adjusted via ECM control of the ETC motor. The TPS signal is used to provide feedback regarding throttle position to the ECM. Using ETC, precise control over throttle position is possible; the need for external cruise control modules/cables is eliminated.

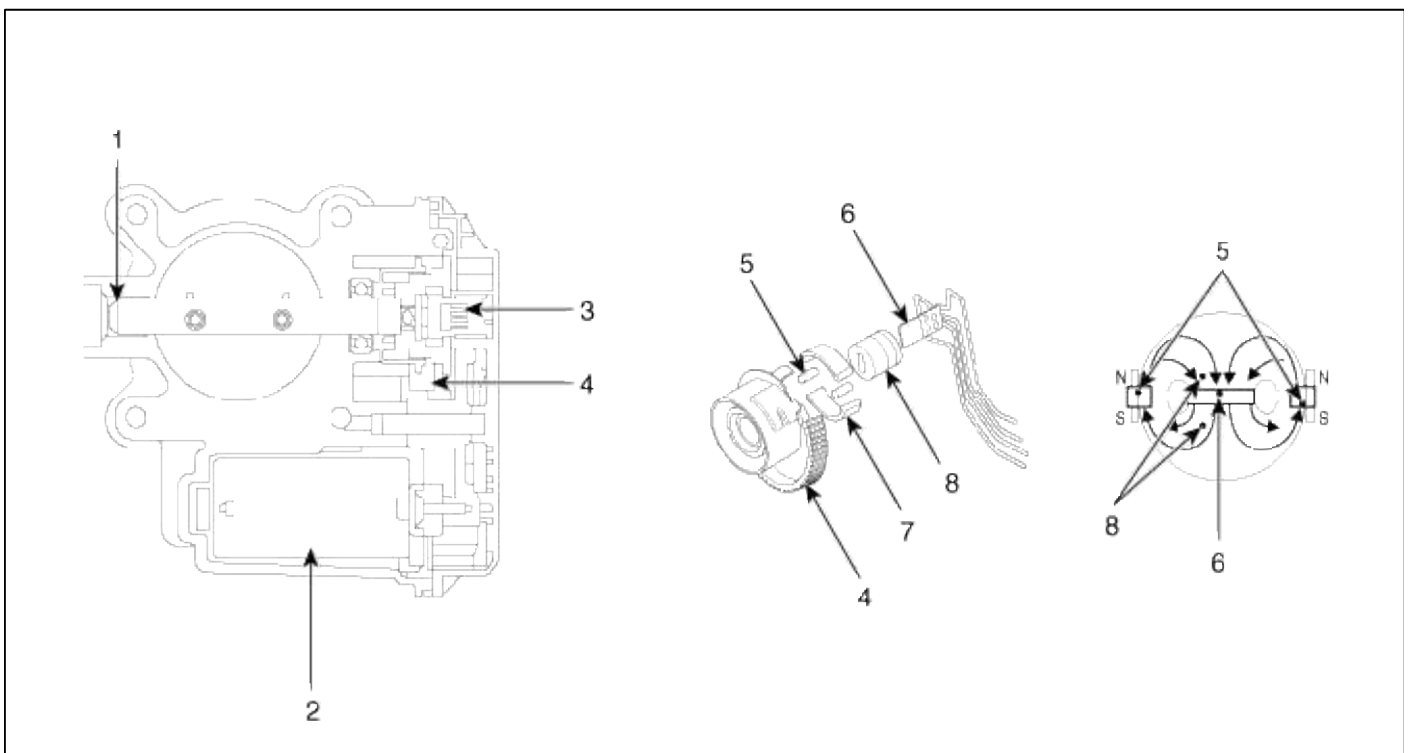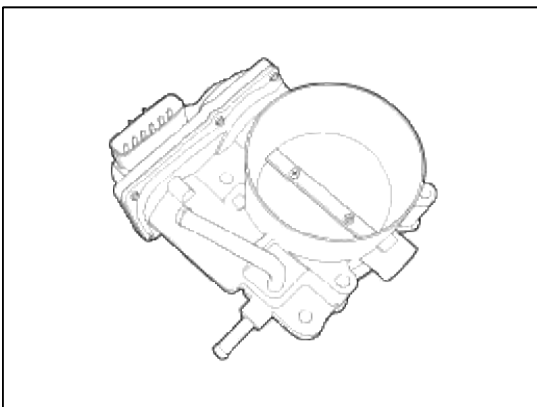

1. Dry bearing	5. Magnet
2. DC motor	6. Hall IC
3. Non-contact hall sensor	7. Yoke
4. Gear	8. Stator

Schematic Diagram

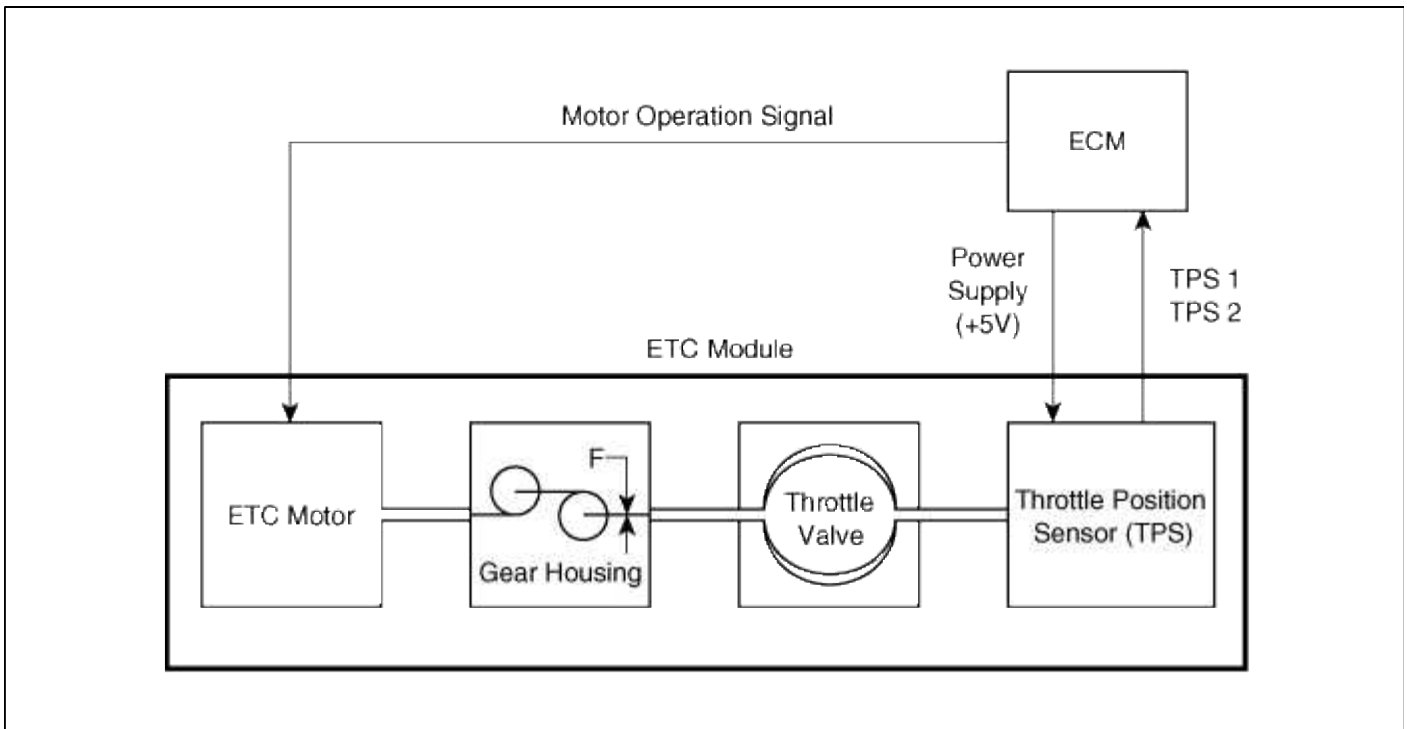

Fuel System > Engine Control System > ETC (Electronic Throttle Control) System > Troubleshooting

Fail-Safe Mode

Item	Fail-Safe	
ETC Motor	Throttle valve stuck at 7°	
TPS	TPS 1 fault	ECM looks at TPS2
	TPS 2 fault	ECM looks at TPS1
	TPS 1,2 fault	Throttle valve stuck at 7°
APS	APS 1 fault	ECM looks at APS 2
	APS 2 fault	ECM looks at APS 1
	APS 1,2 fault	Engine idle state


NOTE
 When throttle value is stuck at 7°, engine speed is limited at below 1,500rpm and vehicle speed at maximum 40 ~ 50 km/h (25 ~ 31 mph)

Fuel System > Engine Control System > ETC (Electronic Throttle Control) System > Specifications

Specification

[Throttle Position Sensor (TPS)]

Throttle angle(°)	Output Voltage (V)	
	TPS1	TPS2
0	0.5	4.5
10	0.96	4.05
20	1.41	3.59
30	1.87	3.14
40	2.32	2.68
50	2.78	2.23
60	3.23	1.77
70	3.69	1.32
80	4.14	0.86
90	4.6	0.41
98	4.65	0.35
C.T (0)	0.5	4.5
W.O.T (86)	4.41	0.59

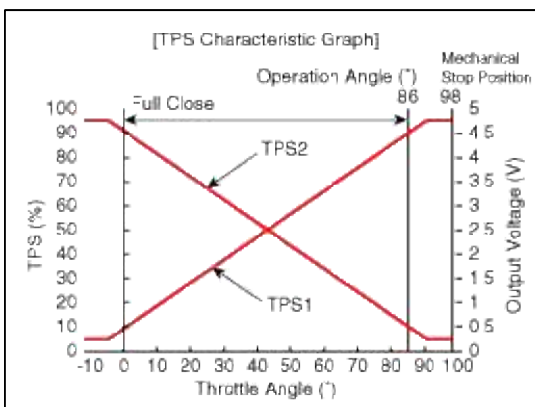**[ETC Motor]**

Item	Specification
Coil Resistance (Ω)	0.3 ~100 [20°C(68°F)]

Fuel System > Engine Control System > ETC (Electronic Throttle Control) System > Schematic Diagrams

Circuit Diagram



Fuel System > Engine Control System > ETC (Electronic Throttle Control) System > Repair procedures

Inspection

Throttle Position Sensor (TPS)

1. Connect the GDS on the Data Link Connector (DLC).
2. Start the engine and measure the output voltage of TPS 1 and 2 at C.T. and W.O.T.

Throttle angle(°)	Output Voltage (V)	
	TPS1	TPS2
C.T	0.5	4.5
W.O.T	4.41	0.59


ETC Motor

1. Turn the ignition switch OFF.
2. Disconnect the ETC module connector.
3. Measure resistance between the ETC module terminals 1 and 2.
4. Check that the resistance is within the specification.


Specification: Refer to “Specification”

Removal

1. Turn the ignition switch OFF and disconnect the battery negative (-) cable.
2. Remove the air intake hose (Refer to “Intake And Exhaust System” in EM group).
3. Disconnect the ETC module connector (A).

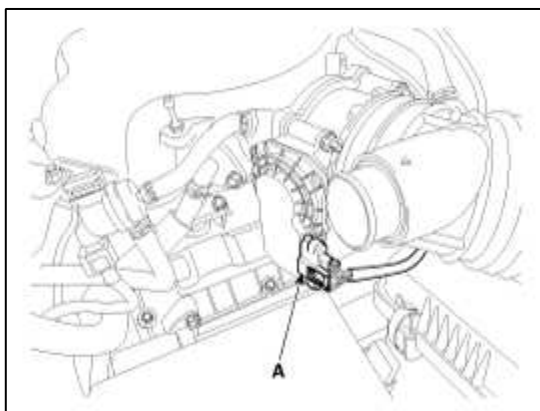

4. Disconnect the coolant hoses (B).
5. Remove the installation bolts, and then remove the ETC module (C) from the engine.

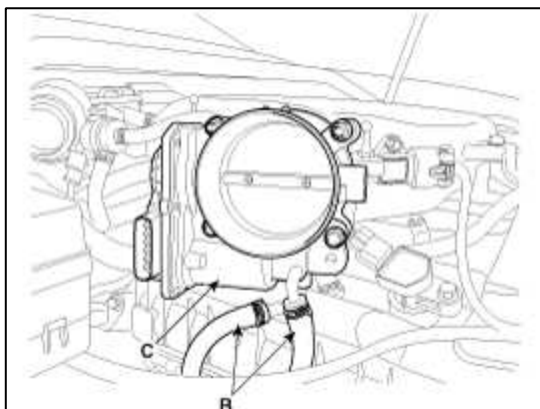

Installation

CAUTION

- Install the component with the specified torques.
- Note that internal damage may occur when the component is dropped. If the component has been dropped, inspect before installing.

1. Installation is reverse of removal.

Electronic throttle body Installation bolt:

7.8 ~ 11.8 N.m (0.8 ~ 1.2 kgf.m, 5.8 ~ 8.7 lb-ft)

Adjustment

ETC module learning procedure

When installing new ETC module or re-installing it, ETC module learning procedure must be performed.

1. Hold the ignition key or the start button at th IG ON position during 5 seconds.
2. Turn ignition swich OFF and then start the engine.

CAUTION


DTC codes (P0638, P2110) might be displayed if ETC module learning procedure does not performed after replacing ETC module.

Fuel System > Engine Control System > Barometric Pressure Sensor (BPS) > Description and Operation

Description

Barometric Pressure Sensor (BPS) is a speed-density type sensor and is installed on the air cleaner assembly. It senses absolute pressure of the air cleaner assembly and transfers the analog signal proportional to the pressure to the ECM. By using this signal, the ECM calculates the intake air quantity and engine speed.


The BPS consists of a piezo-electric element and a hybrid IC amplifying the element output signal. The element is silicon diaphragm type and adapts pressure sensitive variable resistor effect of semi-conductor. Because 100% vacuum and the manifold pressure apply to both sides of the sensor respectively, this sensor can output analog signal by using the silicon variation proportional to pressure change.

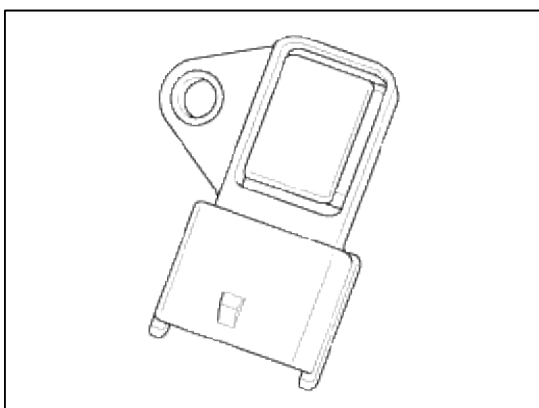

Fuel System > Engine Control System > Barometric Pressure Sensor (BPS) > Specifications


Specification

Pressure (kPa)	Output Voltage (V)
10.0	0.50
55.0	2.21
100.0	3.93
115.0	4.50

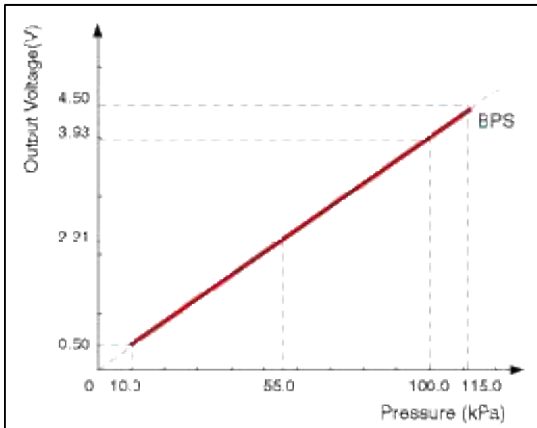

Fuel System > Engine Control System > Barometric Pressure Sensor (BPS) > Schematic Diagrams

Circuit Diagram

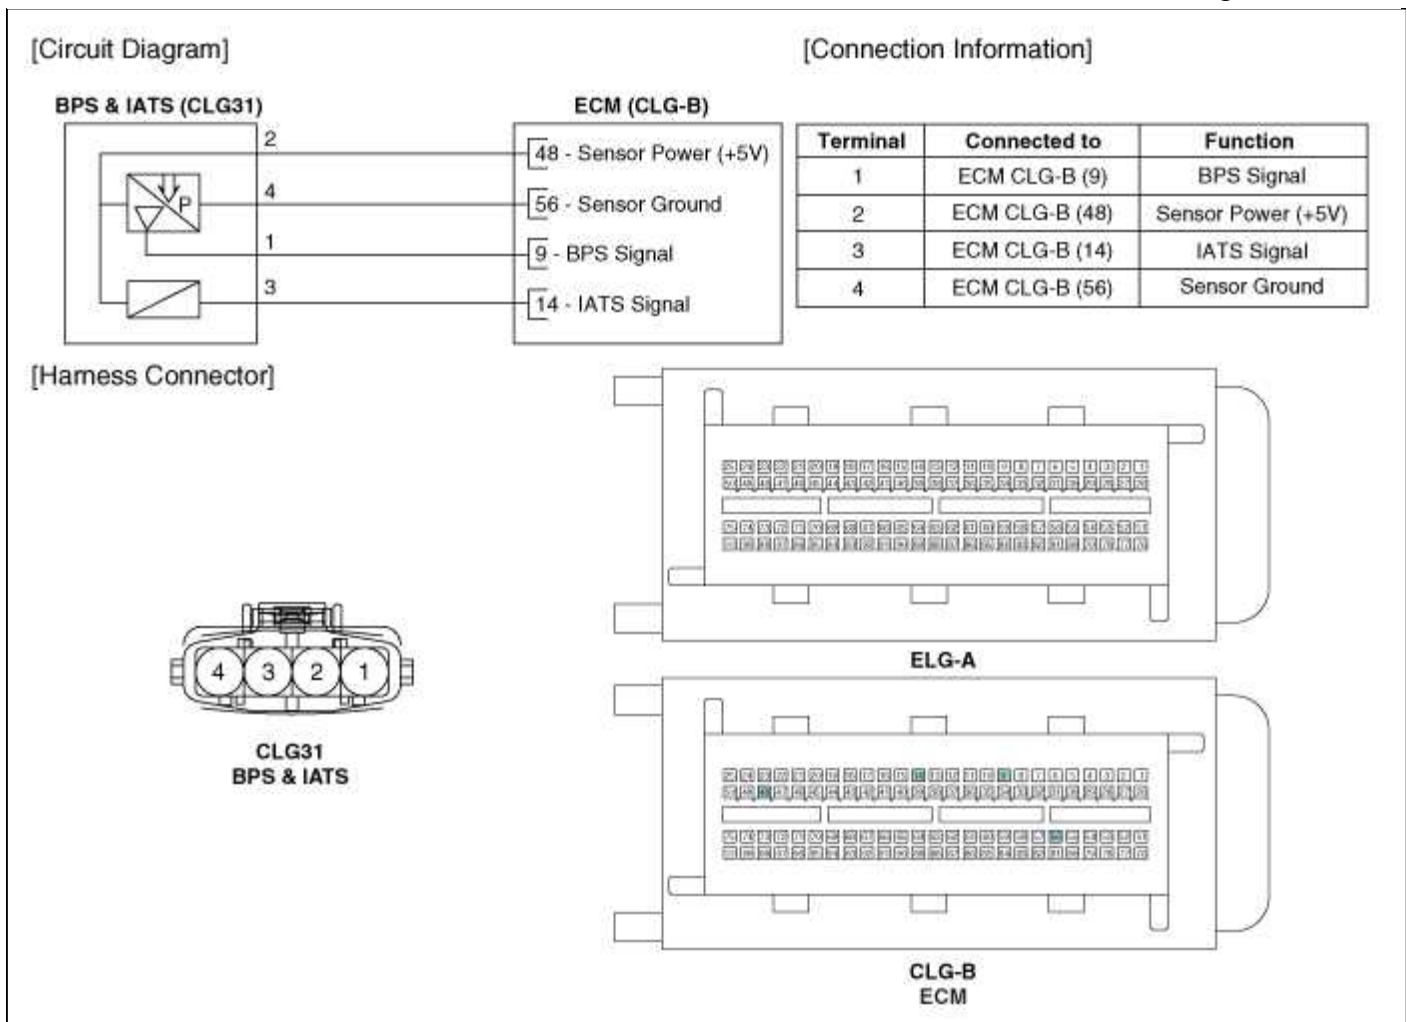

Fuel System > Engine Control System > Barometric Pressure Sensor (BPS) > Repair procedures


Inspection

1. Connect the GDS on the Data Link Connector (DLC).
2. Measure the output voltage of the BPS at idle and IG ON.

Specification: Refer to "Specification"

Removal

1. Turn the ignition switch OFF and disconnect the battery negative (-) cable.
2. Disconnect the barometric pressure sensor connector (A).
3. Remove the installation bolt (B), and then remove the sensor from the air cleaner assembly.

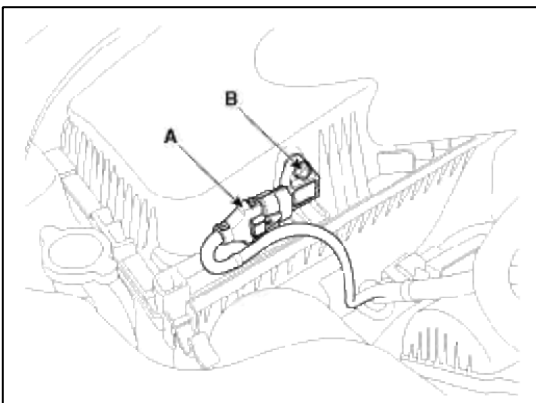

Installation

CAUTION

- Install the component with the specified torques.
- Note that internal damage may occur when the component is dropped. If the component has been dropped, inspect before installing.

CAUTION

- Insert the sensor in the installation hole and be careful not to damage when installation.

1. Installation is reverse of removal.

Barometric pressure sensor installation bolt:


3.9 ~ 5.9 N.m (0.4 ~ 0.6 kgf.m, 2.9 ~ 4.3 lb-ft)

Fuel System > Engine Control System > Intake Air Temperature Sensor (IATS) > Description and Operation

Description

Intake Air Temperature Sensor (IATS) is included inside Barometric Pressure Sensor and detects the intake air temperature.

To calculate precise air quantity, correction of the air temperature is needed because air density varies according to the temperature. So the ECM uses not only BPS signal but also IATS signal. This sensor has a Negative Temperature Coefficient (NTC) thermistor and its resistance changes in reverse proportion to the temperature.

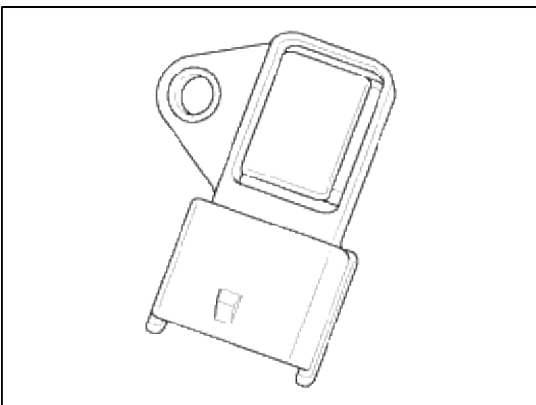


Fuel System > Engine Control System > Intake Air Temperature Sensor (IATS) > Specifications

Specification

Temperature		Resistance (kΩ)
°C	°F	
-40	-40	40.93 ~ 48.35
-20	-4	13.89 ~ 16.03
0	32	5.38 ~ 6.09
10	50	3.48 ~ 3.90
20	68	2.31 ~ 2.57
40	104	1.08 ~ 1.21
60	140	0.54 ~ 0.66
80	176	0.29 ~ 0.34

Fuel System > Engine Control System > Intake Air Temperature Sensor (IATS) > Schematic Diagrams

Circuit Diagram

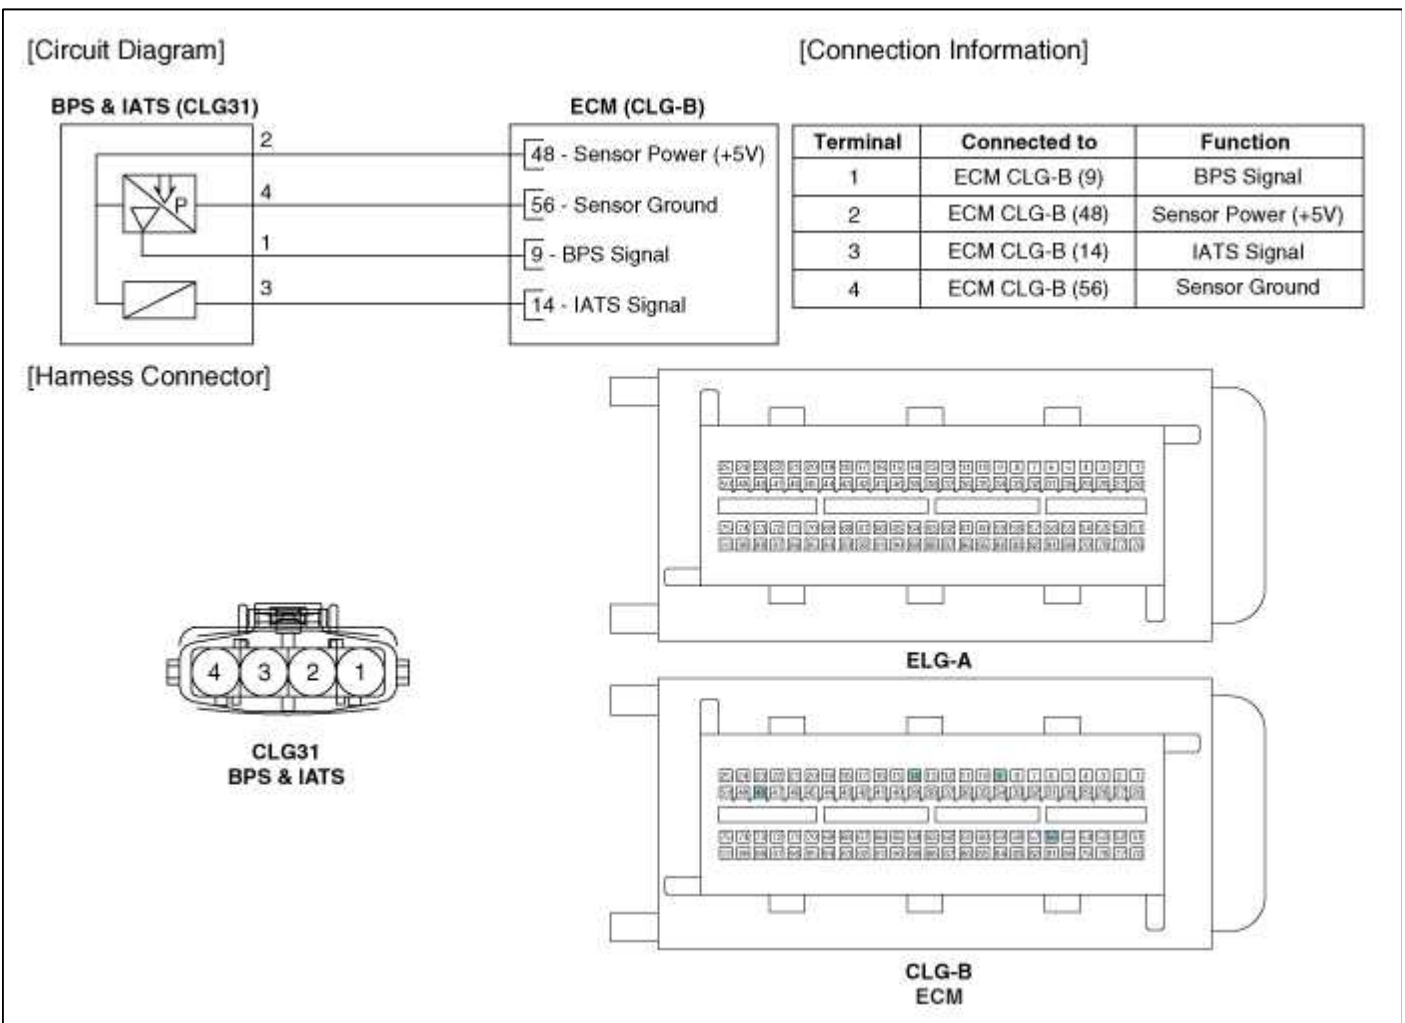

Fuel System > Engine Control System > Intake Air Temperature Sensor (IATS) > Repair procedures

Inspection


1. Turn the ignition switch OFF.

2. Disconnect the IATS connector.
3. Measure resistance between the IATS terminals 3 and 4.
4. Check that the resistance is within the specification.

Specification: Refer to “Specification”

Removal

1. Turn the ignition switch OFF and disconnect the battery negative (-) cable.
2. Disconnect the manifold absolute pressure sensor connector (A).
3. Remove the installation bolts (B), and then vertically remove the sensor from the surge tank.

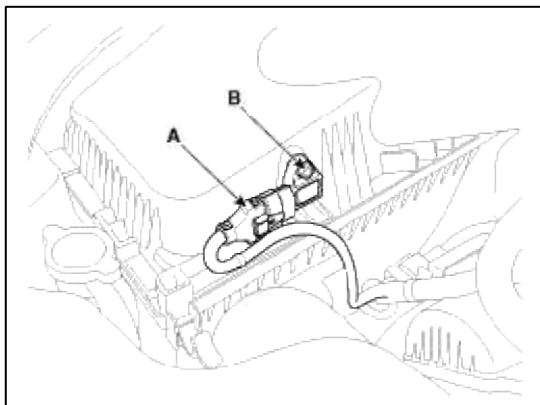

Installation

CAUTION

- Install the component with the specified torques.
- Note that internal damage may occur when the component is dropped. If the component has been dropped, inspect before installing.

CAUTION

- Insert the sensor in the installation hole and be careful not to damage when installation.

1. Installation is reverse of removal.

Manifold absolute pressure sensor Installation bolt:

3.9 ~ 5.9 N.m (0.4 ~ 0.6 kgf.m, 2.9 ~ 4.3 lb-ft)


Fuel System > Engine Control System > Manifold Absolute Pressure Sensor (MAPS) > Description and Operation

Description

Manifold Absolute Pressure Sensor (MAPS) is a speed-density type sensor and is installed on the surge tank. It senses absolute pressure of the surge tank and transfers the analog signal proportional to the pressure to the ECM. By using this signal, the ECM calculates the intake air quantity and engine speed.

The MAPS consists of a piezo-electric element and a hybrid IC amplifying the element output signal. The element is silicon diaphragm type and adapts pressure sensitive variable resistor effect of semi-conductor.


Because 100% vacuum and the manifold pressure apply to both sides of the sensor respectively, this sensor can output analog signal by using the silicon variation proportional to pressure change.

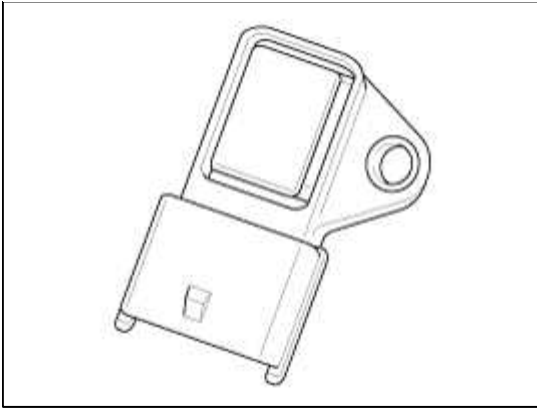

Fuel System > Engine Control System > Manifold Absolute Pressure Sensor (MAPS) > Specifications


Specification

Pressure (kPa)	Output Voltage (V)
20.0	0.79
46.66	1.84
101.32	4.0

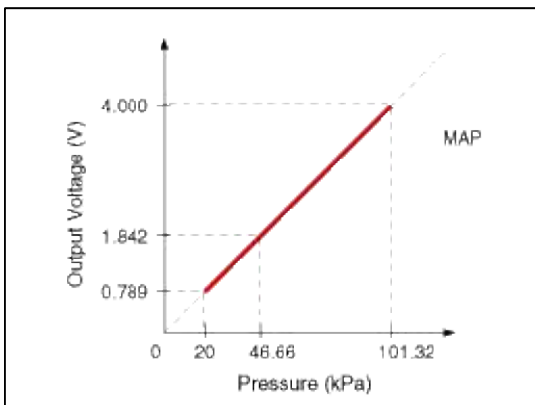

Fuel System > Engine Control System > Manifold Absolute Pressure Sensor (MAPS) > Schematic Diagrams

Circuit Diagram

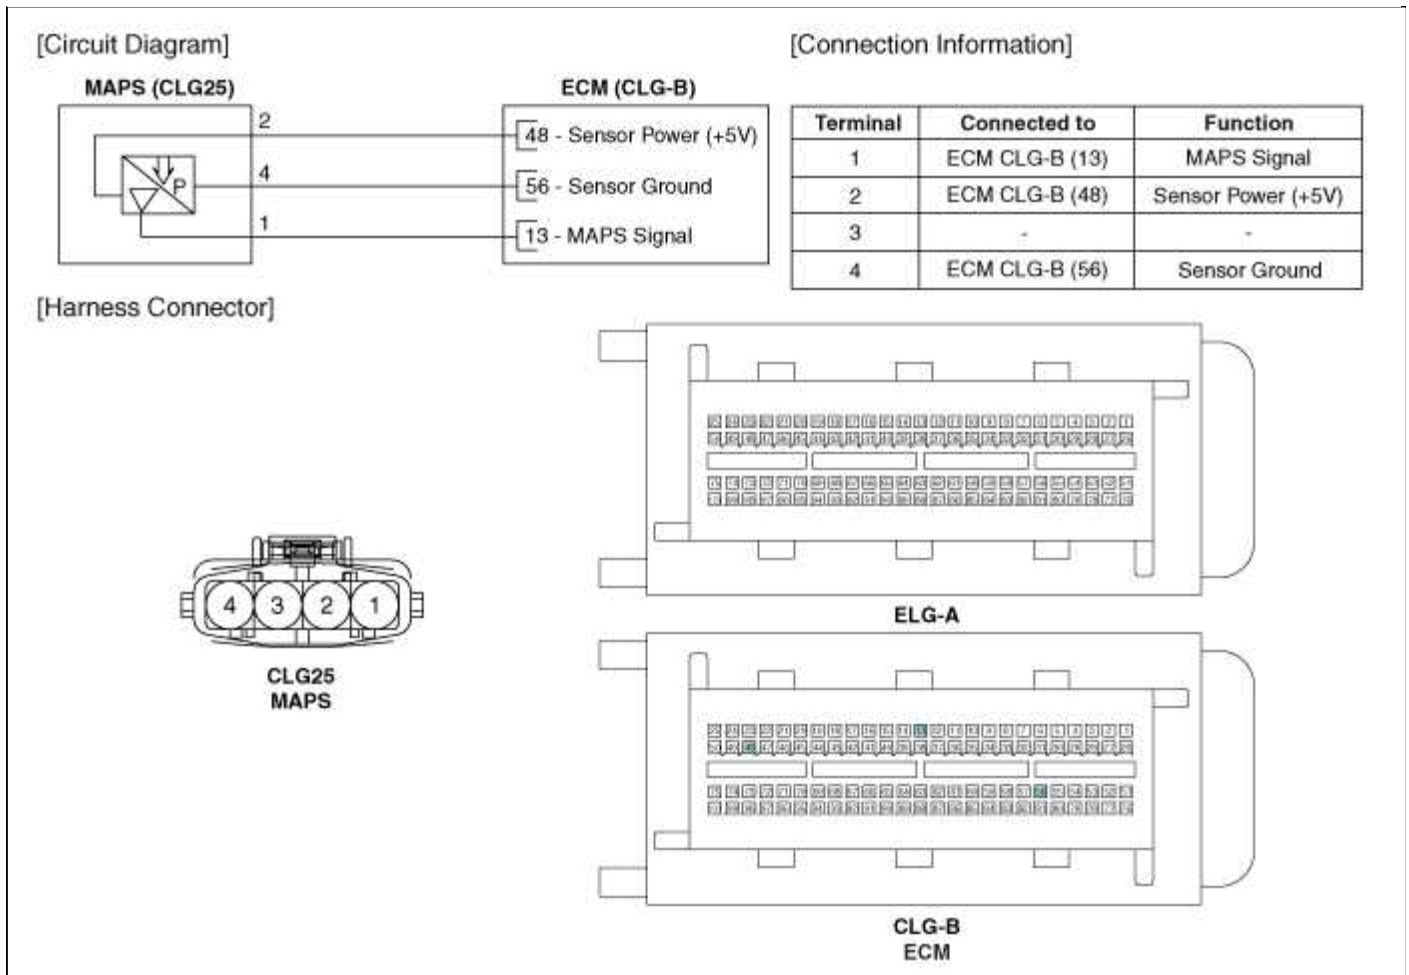

Fuel System > Engine Control System > Manifold Absolute Pressure Sensor (MAPS) > Repair procedures

Inspection


1. Connect the GDS on the Data Link Connector (DLC).
2. Measure the output voltage of the MAPS at idle and IG ON.

Condition	Output Voltage (V)
IG ON	Approx. 4.44V
Idle	Approx. 0.75V

Removal

1. Turn the ignition switch OFF and disconnect the battery negative (-) cable.
2. Disconnect the manifold absolute pressure sensor connector (A).

3. Remove the installation bolts (B), and then vertically remove the sensor from the surge tank.

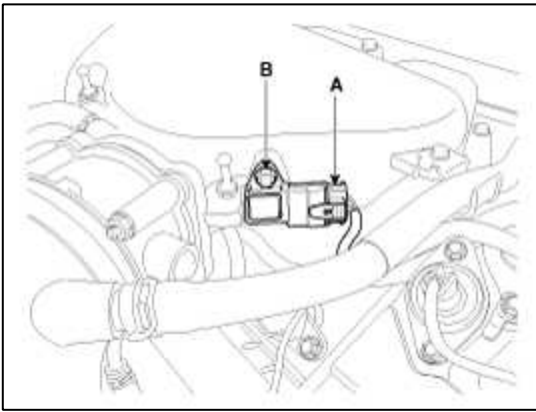

Installation

CAUTION

- Install the component with the specified torques.
- Note that internal damage may occur when the component is dropped. If the component has been dropped, inspect before installing.

CAUTION

- Insert the sensor in the installation hole and be careful not to damage when installation.

1. Installation is reverse of removal.

Manifold absolute pressure sensor Installation bolt:


7.8 ~ 11.8 N.m (0.8 ~ 1.2 kgf.m, 5.8 ~ 8.7 lb-ft)

Fuel System > Engine Control System > Engine Coolant Temperature Sensor (ECTS) > Description and Operation

Description

Engine Coolant Temperature Sensor (ECTS) is located in the engine coolant passage of the cylinder head for detecting the engine coolant temperature. The ECTS uses a thermistor whose resistance changes with the temperature.

The electrical resistance of the ECTS decreases as the temperature increases, and increases as the temperature decreases. The reference +5V is supplied to the ECTS via a resistor in the ECM. That is, the resistor in the ECM and the thermistor in the ECTS are connected in series. When the resistance value of the thermistor in the ECTS changes according to the engine coolant temperature, the output voltage also changes. The ECM uses this information to control the ignition timing and controls the fuel injection duration to avoid engine stalling and improve drivability. During cold engine operation, the ECM increases the fuel injection duration and controls the ignition timing using the information of engine coolant temperature to avoid engine stalling and improve drivability.

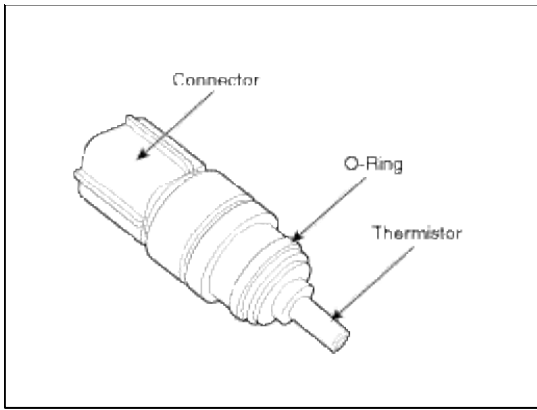


Fuel System > Engine Control System > Engine Coolant Temperature Sensor (ECTS) > Specifications

Specification

Temperature		Resistance (k Ω)
$^{\circ}\text{C}$	$^{\circ}\text{F}$	
-40	-40	48.14
-20	-4	14.13 ~ 16.83
0	32	5.79
20	68	2.31 ~ 2.59
40	104	1.15
60	140	0.59
80	176	0.32

Fuel System > Engine Control System > Engine Coolant Temperature Sensor (ECTS) > Schematic Diagrams

Circuit Diagram

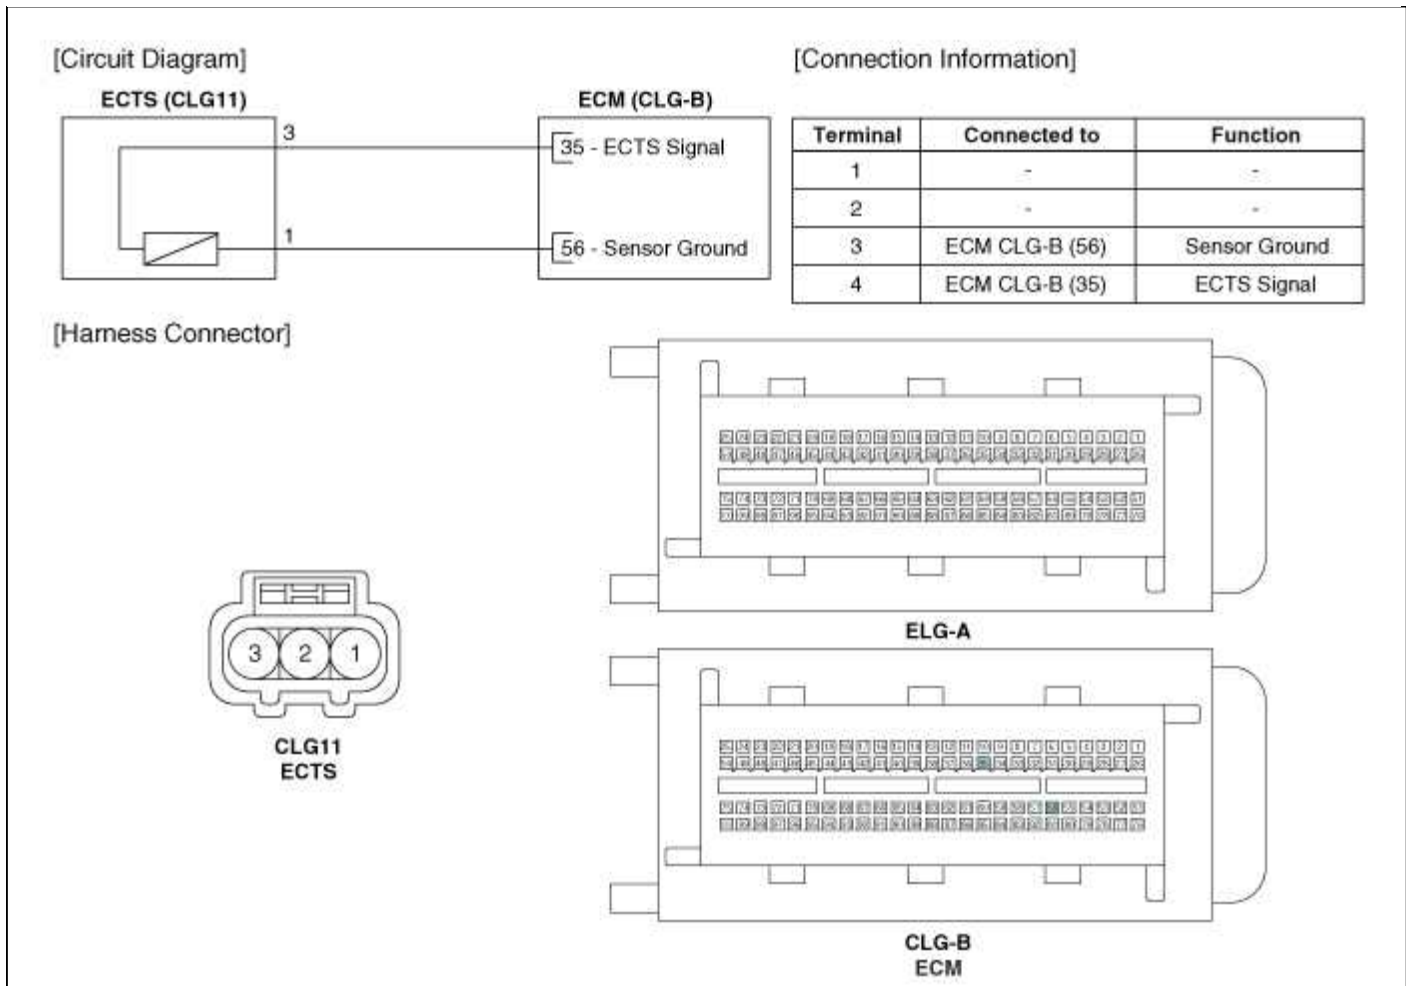

Fuel System > Engine Control System > Engine Coolant Temperature Sensor (ECTS) > Repair procedures

Inspection

1. Turn the ignition switch OFF.
2. Disconnect the ECTS connector.
3. Remove the ECTS (Refer to "Removal").
4. After immersing the thermistor of the sensor into engine coolant, measure resistance between the ECTS terminals 3 and 4.
5. Check that the resistance is within the specification.

Specification: Refer to "Specification"


Removal

1. Turn the ignition switch OFF and disconnect the battery negative (-) cable.
2. Remove the air cleaner assembly (Refer to "Intake And Exhaust System" in EM group).
3. Disconnect the engine coolant temperature sensor connector (A).

4. Remove the sensor from the water temperature control assembly.

CAUTION

- Note that engine coolant may be flowed out from the water temperature control assembly when removing the sensor.

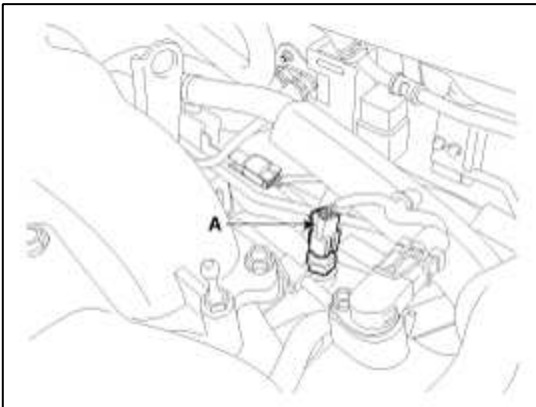

5. Supplement the engine coolant (Refer to “Cooling System” in EM group).

Installation

CAUTION

- Install the component with the specified torques.
- Note that internal damage may occur when the component is dropped. If the component has been dropped, inspect before installing.

CAUTION

- Apply the engine coolant to the O-ring.

CAUTION

- Insert the sensor in the installation hole and be careful not to damage when installation.


1. Installation is reverse of removal.

Fuel System > Engine Control System > Crankshaft Position Sensor (CKPS) > Description and Operation

Description

Crankshaft Position Sensor (CKPS) detects the crankshaft position and is one of the most important sensors of the engine control system. If there is no CKPS signal input, the engine may stop because of CKPS signal missing. This sensor is installed on the cylinder block or the transaxle housing and generates alternating current by magnetic flux field which is made by the sensor and the target wheel when engine runs.

The target wheel consists of 58 slots and 2 missing slots on 360 degrees CA (Crank Angle).

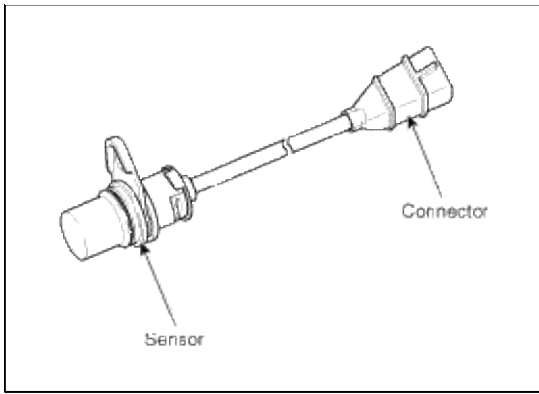


Fuel System > Engine Control System > Crankshaft Position Sensor (CKPS) > Specifications

Specification

Item	Specification
Coil Resistance (Ω)	774 ~ 946 [20°C(68°F)]
Air Gap (mm)	0.5 ~ 1.5


Fuel System > Engine Control System > Crankshaft Position Sensor (CKPS) > Troubleshooting

Wave Form

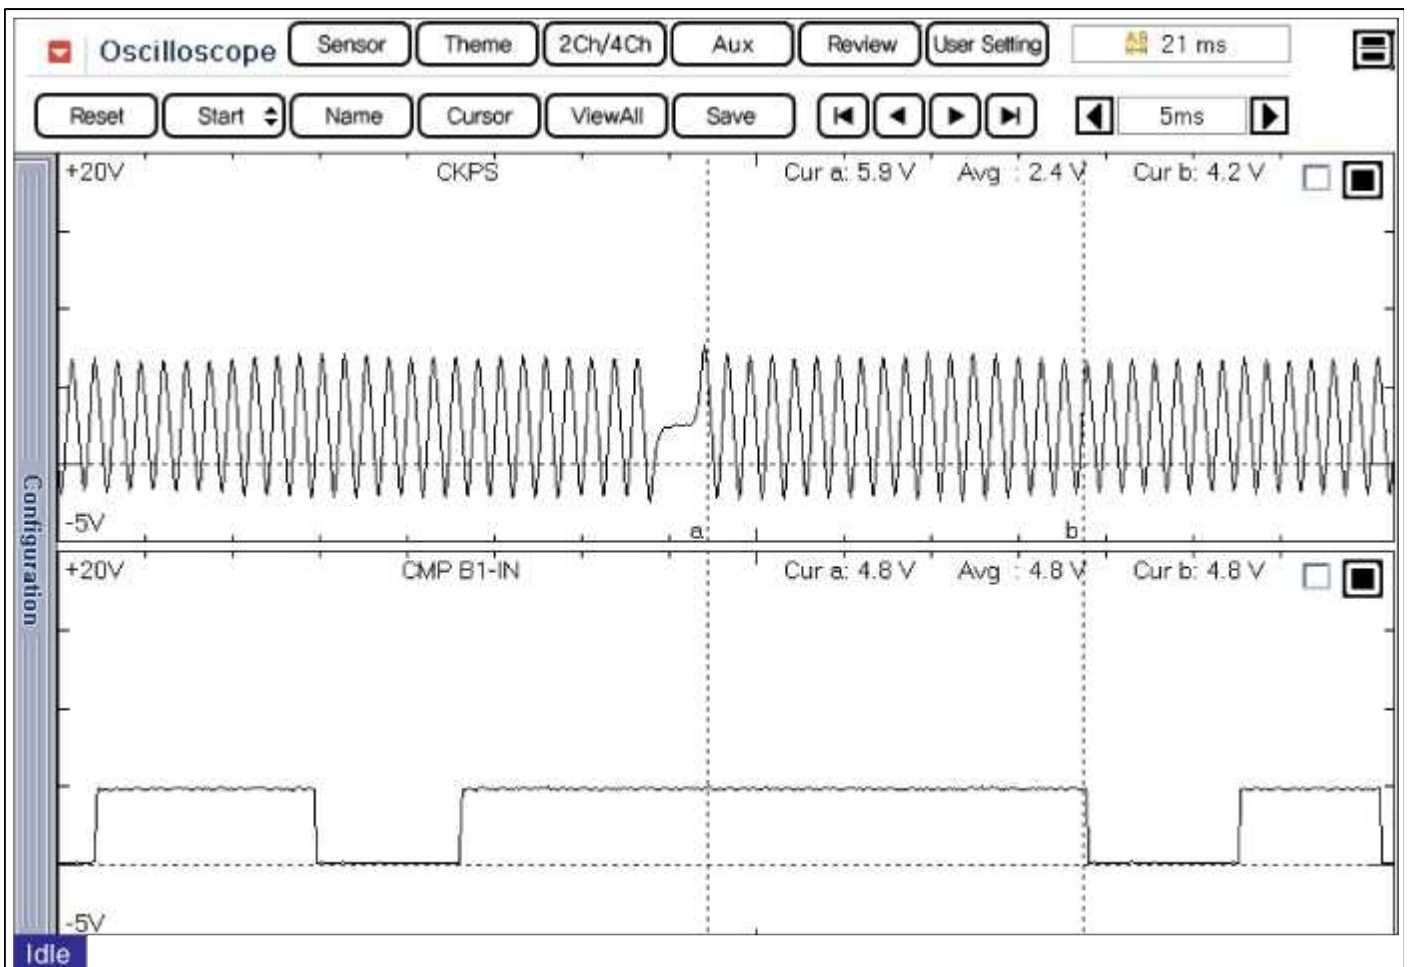

Fuel System > Engine Control System > Crankshaft Position Sensor (CKPS) > Schematic Diagrams

Circuit Diagram

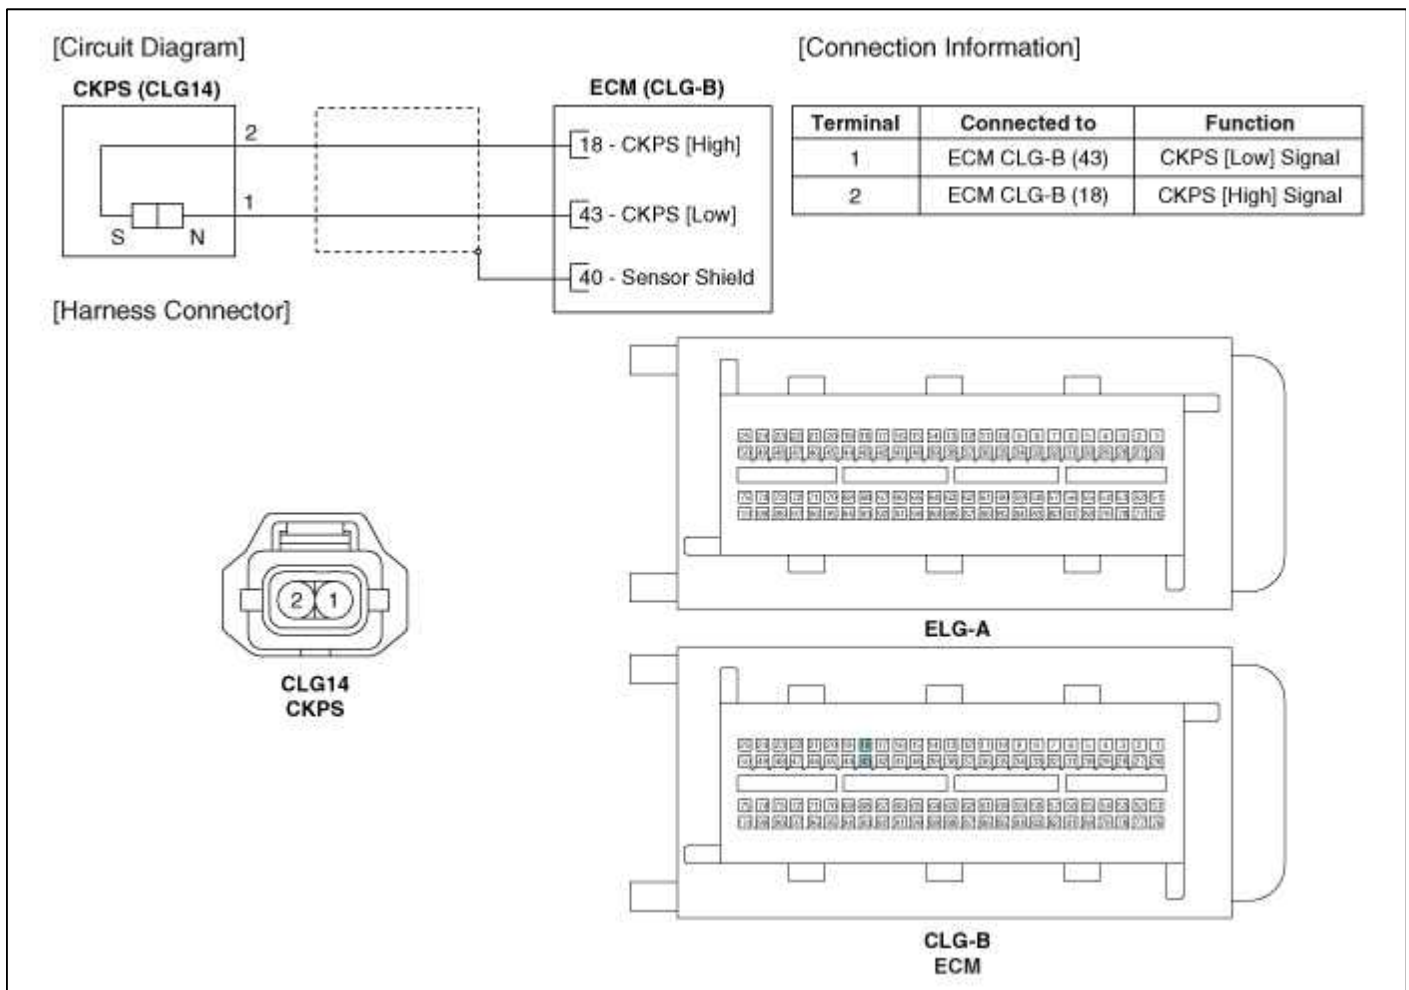

Fuel System > Engine Control System > Crankshaft Position Sensor (CKPS) > Repair procedures

Inspection


1. Check the signal waveform of the CMPS and CKPS using the GDS.

Specification: Refer to “Wave Form”

Removal

1. Turn the ignition switch OFF and disconnect the battery negative (-) cable.
2. Remove the air cleaner assembly (Refer to "Intake And Exhaust System" in EM group).
3. Disconnect the crankshaft position sensor connector (A).

4. Remove the installation bolt (B), and then vertically remove the sensor from the transaxle housing.

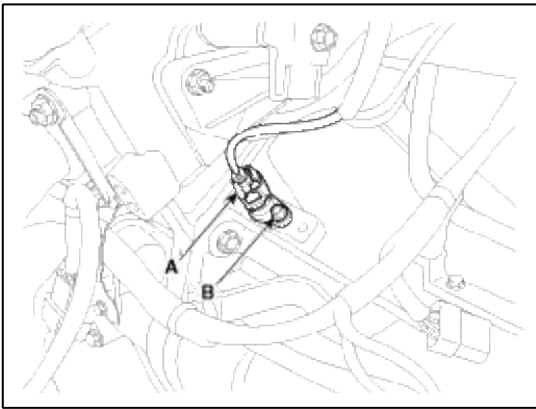

Installation

CAUTION

- Install the component with the specified torques.
- Note that internal damage may occur when the component is dropped. If the component has been dropped, inspect before installing.

CAUTION

- Apply the engine oil to the O-ring.

CAUTION

- Insert the sensor in the installation hole and be careful not to damage when installation.

1. Installation is reverse of removal.

Crankshaft position sensor installation bolt:


6.9 ~ 9.8 N.m (0.7 ~ 1.0 kgf.m, 5.1 ~ 7.2 lb-ft)

Fuel System > Engine Control System > Camshaft Position Sensor (CMPS) > Description and Operation

Description

Camshaft Position Sensor (CMPS) is a hall sensor and detects the camshaft position by using a hall element. It is related with Crankshaft Position Sensor (CKPS) and detects the piston position of each cylinder which the CKPS can't detect.

The two CMPS are installed on engine head cover of bank 1 and 2 respectively and uses a target wheel installed on the camshaft. The Cam Position sensor is a hall-effect type sensor. As the target wheel passes the Hall sensor, the magnetic field changes in the sensor. The sensor then switches a signal which creates a square wave.

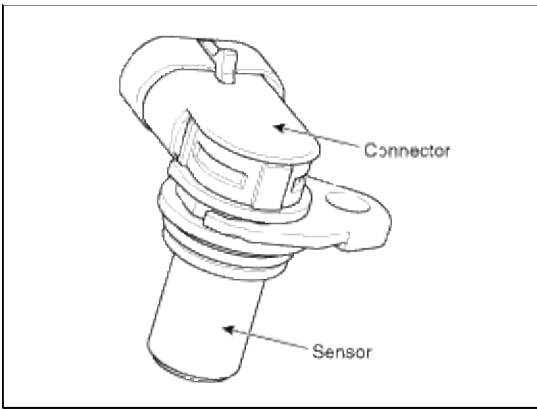


Fuel System > Engine Control System > Camshaft Position Sensor (CMPS) > Specifications

Specification

Item	Specification
Output Voltage (V)	High: 5.0V
	Low: 0.7V
Air Gap (mm)	0.5 ~ 1.5


Fuel System > Engine Control System > Camshaft Position Sensor (CMPS) > Troubleshooting

Wave Form

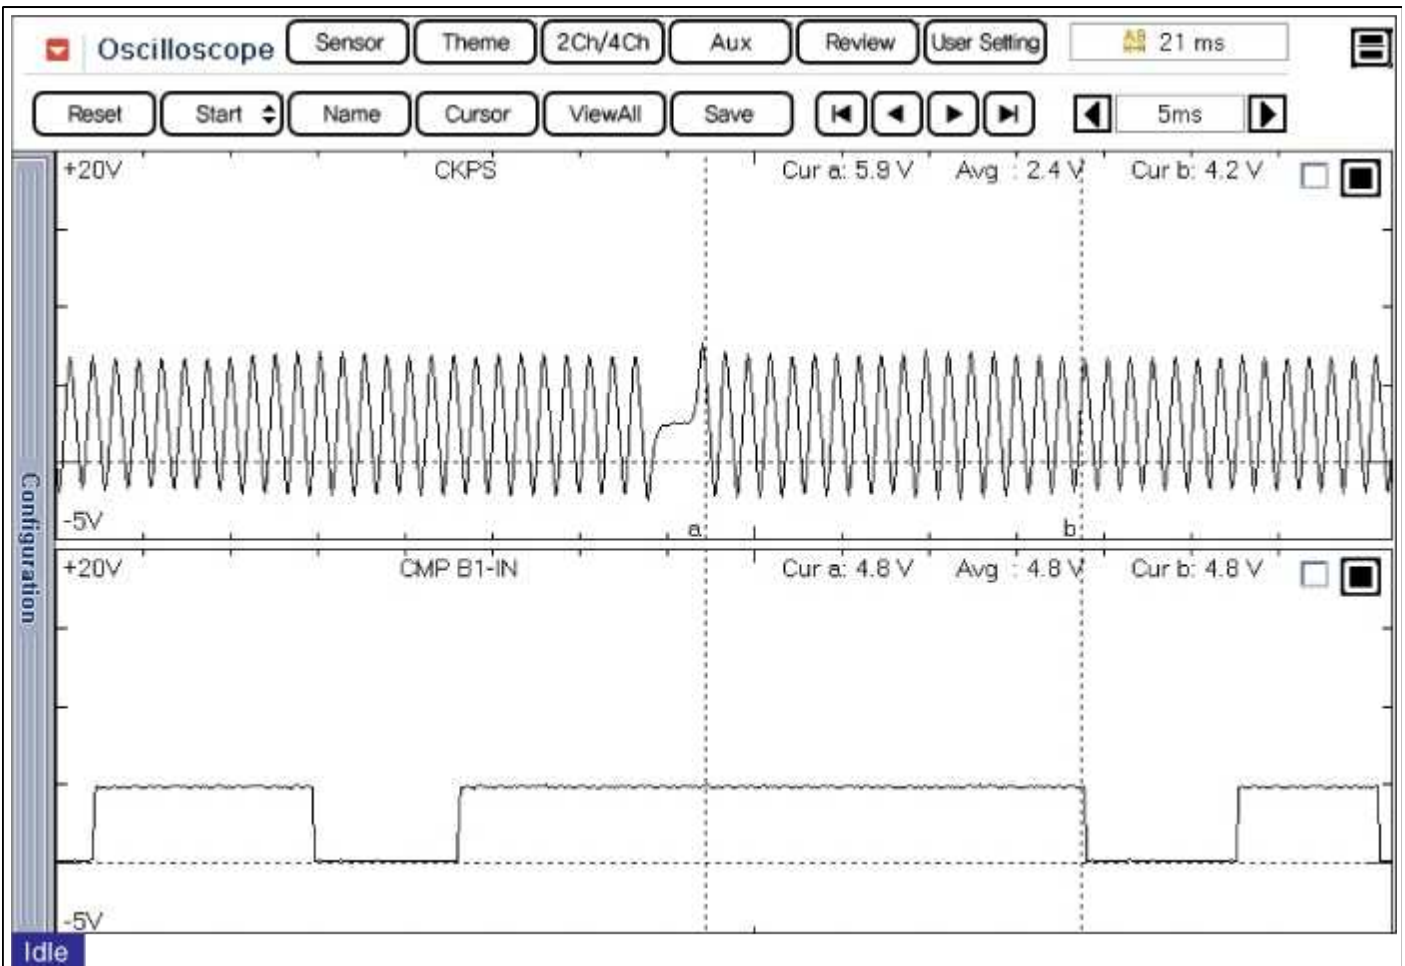

Fuel System > Engine Control System > Camshaft Position Sensor (CMPS) > Schematic Diagrams

Circuit Diagram

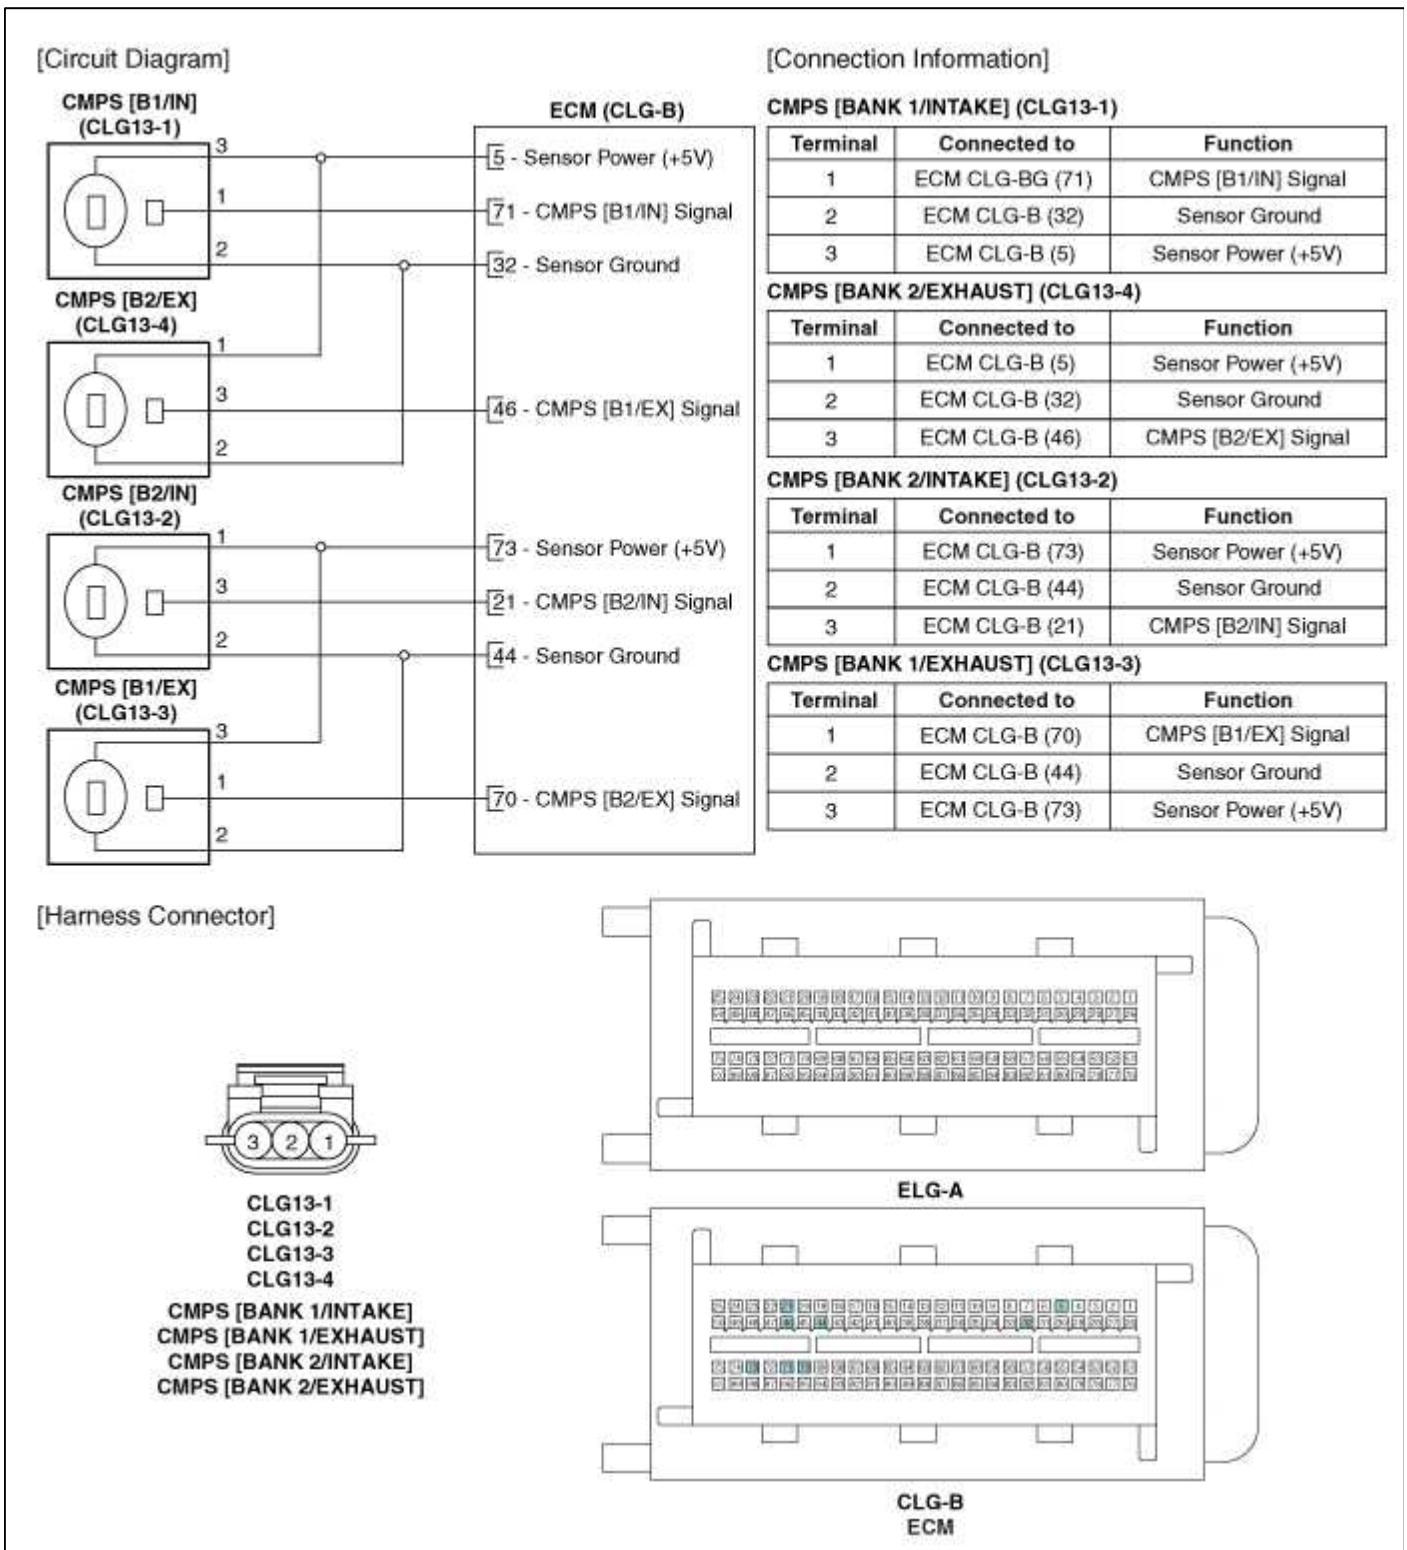

Fuel System > Engine Control System > Camshaft Position Sensor (CMPS) > Repair procedures

Inspection

1. Check the signal waveform of the CMPS and CKPS using the GDS.

Specification: Refer to “Wave Form”


Removal

WARNING


- DON'T remove the camshaft position sensor while the engine is running or right after engine is turned off. The part and engine oil is hot and can cause burns.

1. Turn the ignition switch OFF and disconnect the battery negative (-) cable.
2. Disconnect the camshaft position sensor connector (A).
3. Remove the installation bolt (B), and then vertically remove the sensor from the cylinder head.


[Bank 1/Intake]

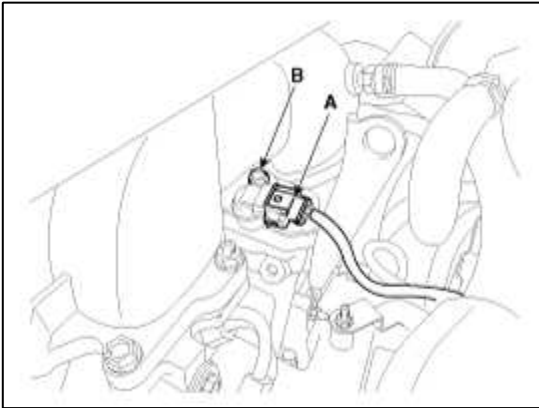


[Bank 1/Exhaust]

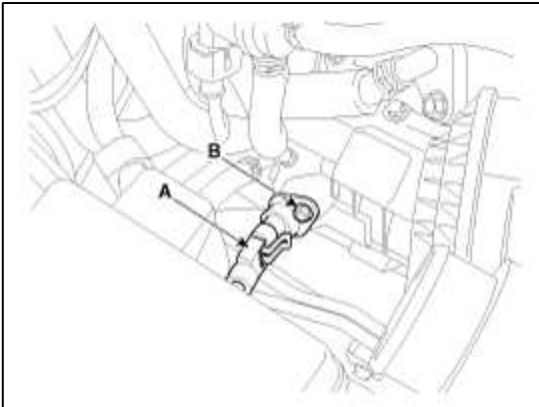

[Bank 2/Intake]

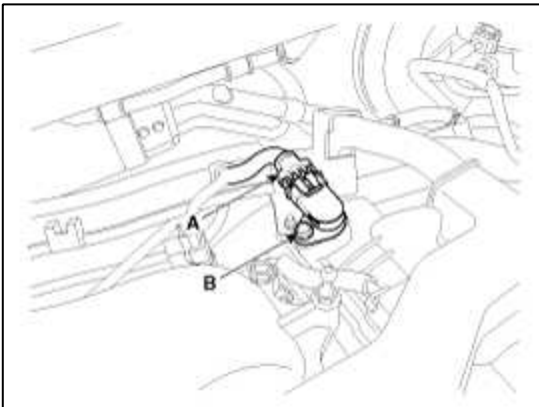

[Bank 2/Exhaust]

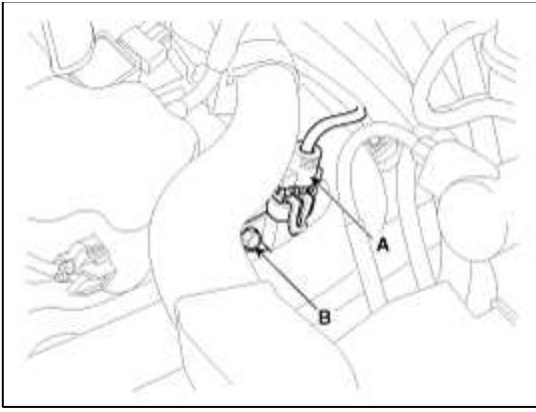

Installation

CAUTION

- Install the component with the specified torques.
- Note that internal damage may occur when the component is dropped. If the component has been dropped, inspect before installing.

CAUTION

- Apply the engine oil to the O-ring.

CAUTION

- Insert the sensor in the installation hole and be careful not to damage when installation.

CAUTION

- Be careful not to damage the sensor housing and the connector.
- Be careful not to damage the O-ring.


1. Installation is reverse of removal.

Camshaft position sensor installation bolt:
6.9 ~ 9.8N.m (0.7 ~ 1.0kgf.m, 5.1 ~ 7.2lb-ft)

Fuel System > Engine Control System > Knock Sensor (KS) > Description and Operation

Description

Knocking is a phenomenon characterized by undesirable vibration and noise and can cause engine damage. The two Knock Sensor (KS) are installed inside the V-valley of the cylinder block and senses engine knocking. When knocking occurs, the vibration from the cylinder block is applied as pressure to the piezoelectric element. When a knock occurs, the sensor produces voltage signal. The ECM retards the ignition timing when knocking occurs. If the knocking disappears after retarding the ignition timing, the ECM will advance the ignition timing. This sequential control can improve engine power, torque and fuel economy.

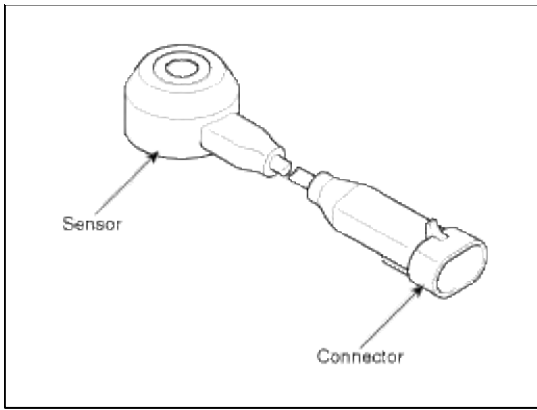
**Fuel System > Engine Control System > Knock Sensor (KS) > Specifications**

Specification

Item	Specification
Capacitance (pF)	950 ~ 1,350

Fuel System > Engine Control System > Knock Sensor (KS) > Schematic Diagrams

Circuit Diagram

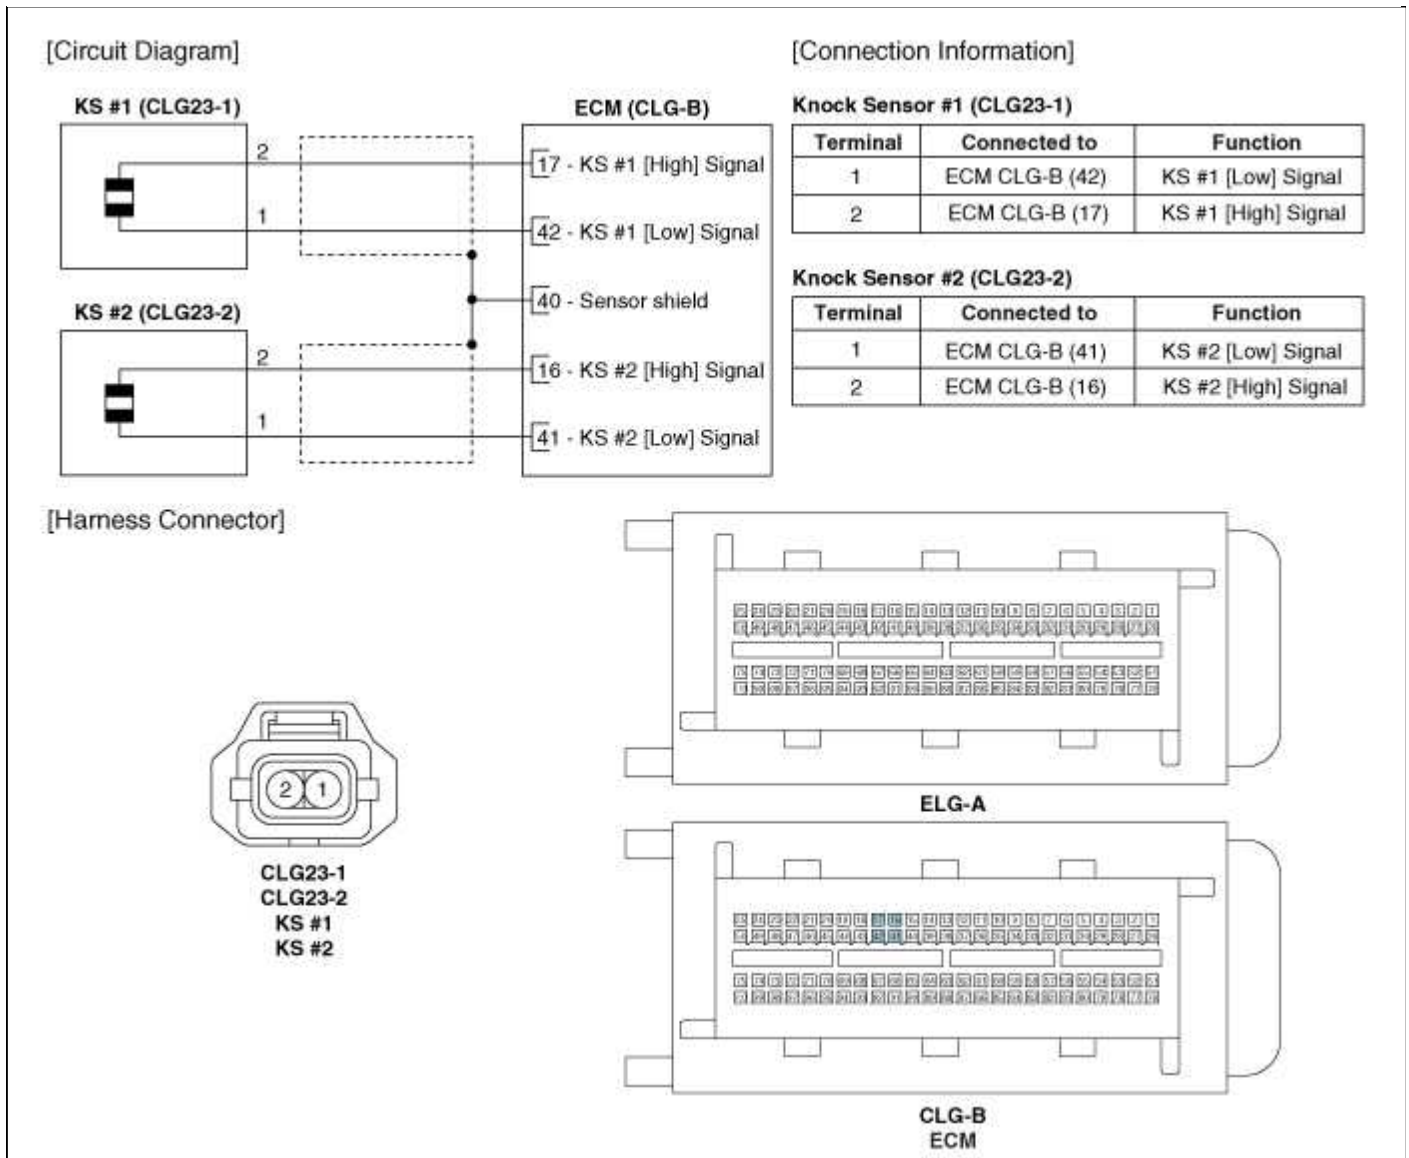


Fuel System > Engine Control System > Knock Sensor (KS) > Repair procedures


Removal

[Knock Sensor #1 (Bank 1)]

1. Turn the ignition switch OFF and disconnect the battery negative (-) cable.
2. Disconnect the knock sensor connector (A).

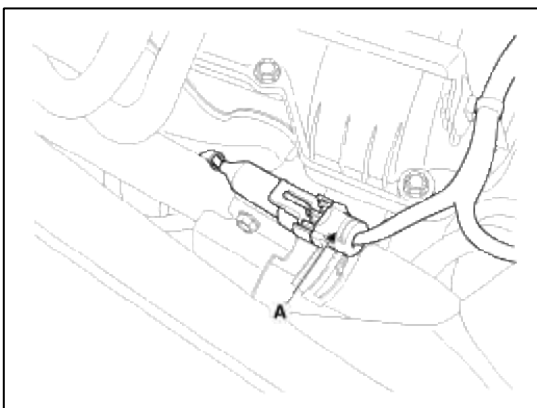


3. Remove the installation bolt (A), and then remove the sensor from the cylinder block.

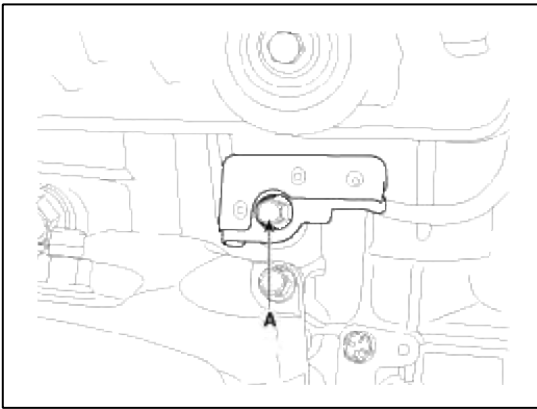


[Knock Sensor #2 (Bank 2)]

1. Turn the ignition switch OFF and disconnect the battery negative (-) cable.
2. Disconnect the knock sensor connector (A).

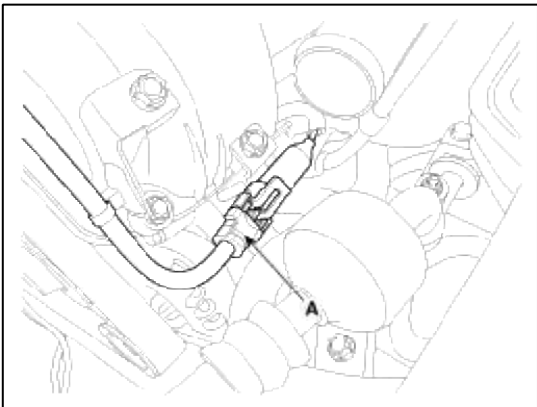

3. Drain the engine coolant (Refer to “Cooling System” in EM group).
4. Remove the radiator upper hose (Refer to “Cooling System” in EM group).
5. Remove the coolant pipe [Bank 2] (Refer to “Cooling System” in EM group).
6. Remove the oil level gauge (Refer to “Cooling System” in EM group).
7. Remove the installation bolt (A), and then remove the sensor from the cylinder block.

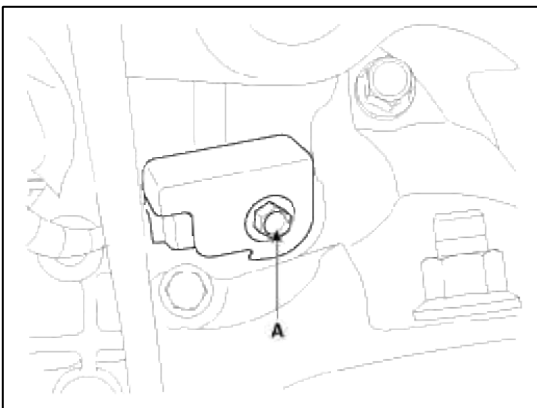

Installation

CAUTION

- Install the component with the specified torques.
- Note that internal damage may occur when the component is dropped. In this case, use it after inspecting.

CAUTION

- The sensor connector must be installed parallel to the direction of the engine.

1. Installation is reverse of removal.

Knock sensor installation bolt:

15.7 ~ 23.5 N.m (1.6 ~ 2.4 kgf.m, 11.6 ~ 17.4 lb-ft)


Fuel System > Engine Control System > Heated Oxygen Sensor (HO2S) > Description and Operation

Description

Heated Oxygen Sensor (HO2S) consists of the zirconium and the alumina and is installed on upstream and downstream of the Manifold Catalytic Converter (MCC).

After it compares oxygen consistency of the atmosphere with the exhaust gas, it transfers the oxygen consistency of the exhaust gas to the ECM. When A/F ratio is rich or lean, it generates approximately 1V or 0V respectively. In order that this sensor normally operates, the temperature of the sensor tip is higher than 370°C (698°F). So it has a heater which is controlled by the ECM duty signal.

When the exhaust gas temperature is lower than the specified value, the heater warms the sensor tip.

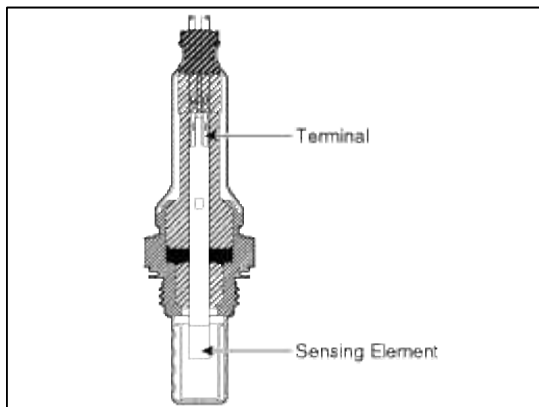

Fuel System > Engine Control System > Heated Oxygen Sensor (HO2S) > Specifications



Specification

A/F Ratio (λ)	Output Voltage(V)
RICH	Min. 0.8
LEAN	Max. 0.1


Item	Specification
Heater Resistance (Ω)	3.3 ~ 4.1[20°C(68°F)]

Fuel System > Engine Control System > Heated Oxygen Sensor (HO2S) > Troubleshooting

Wave Form

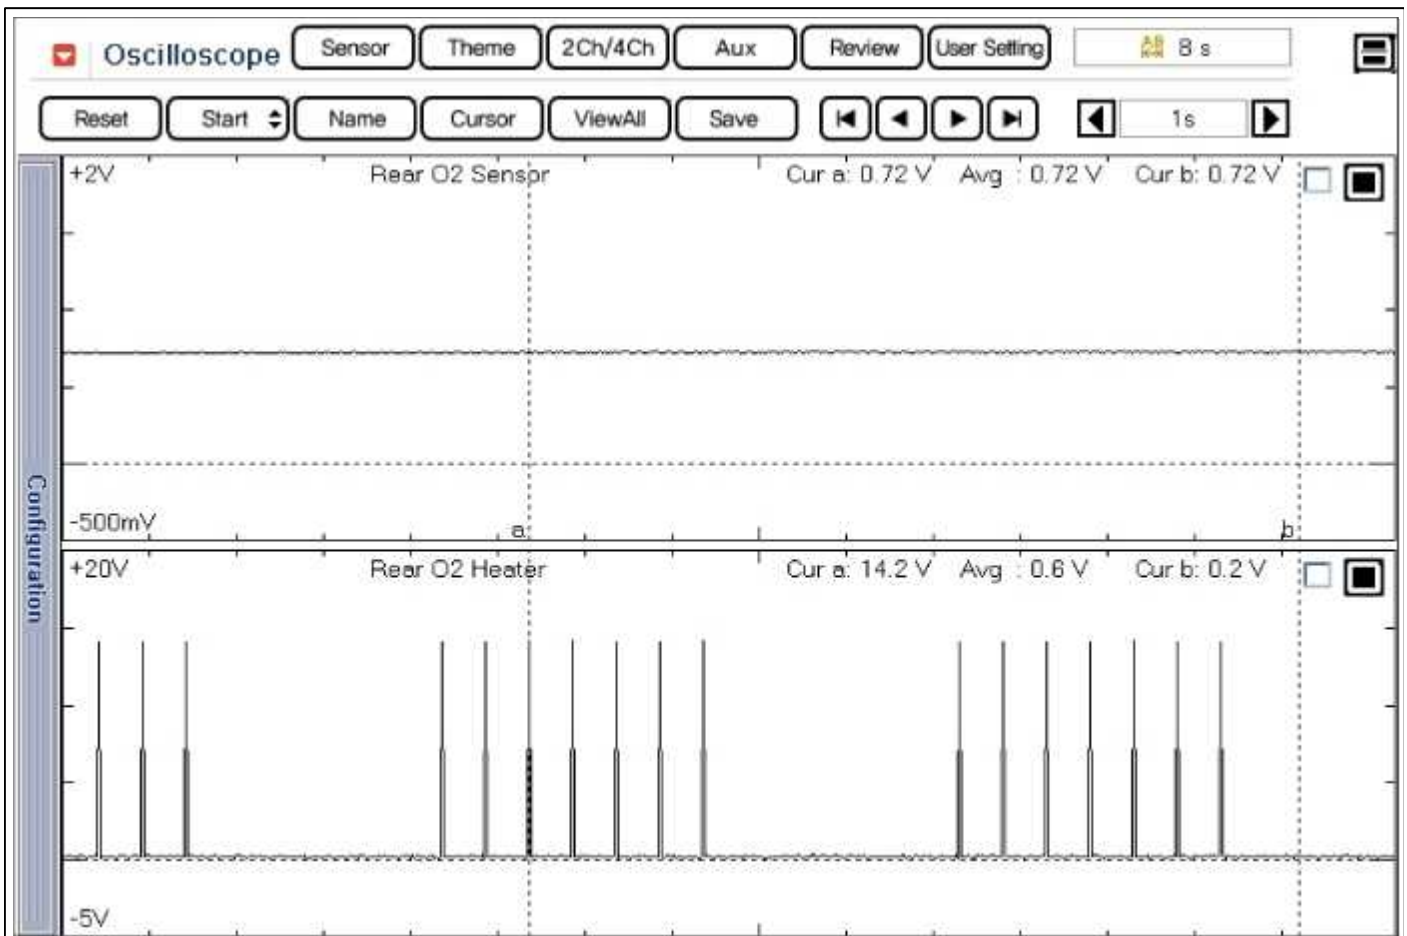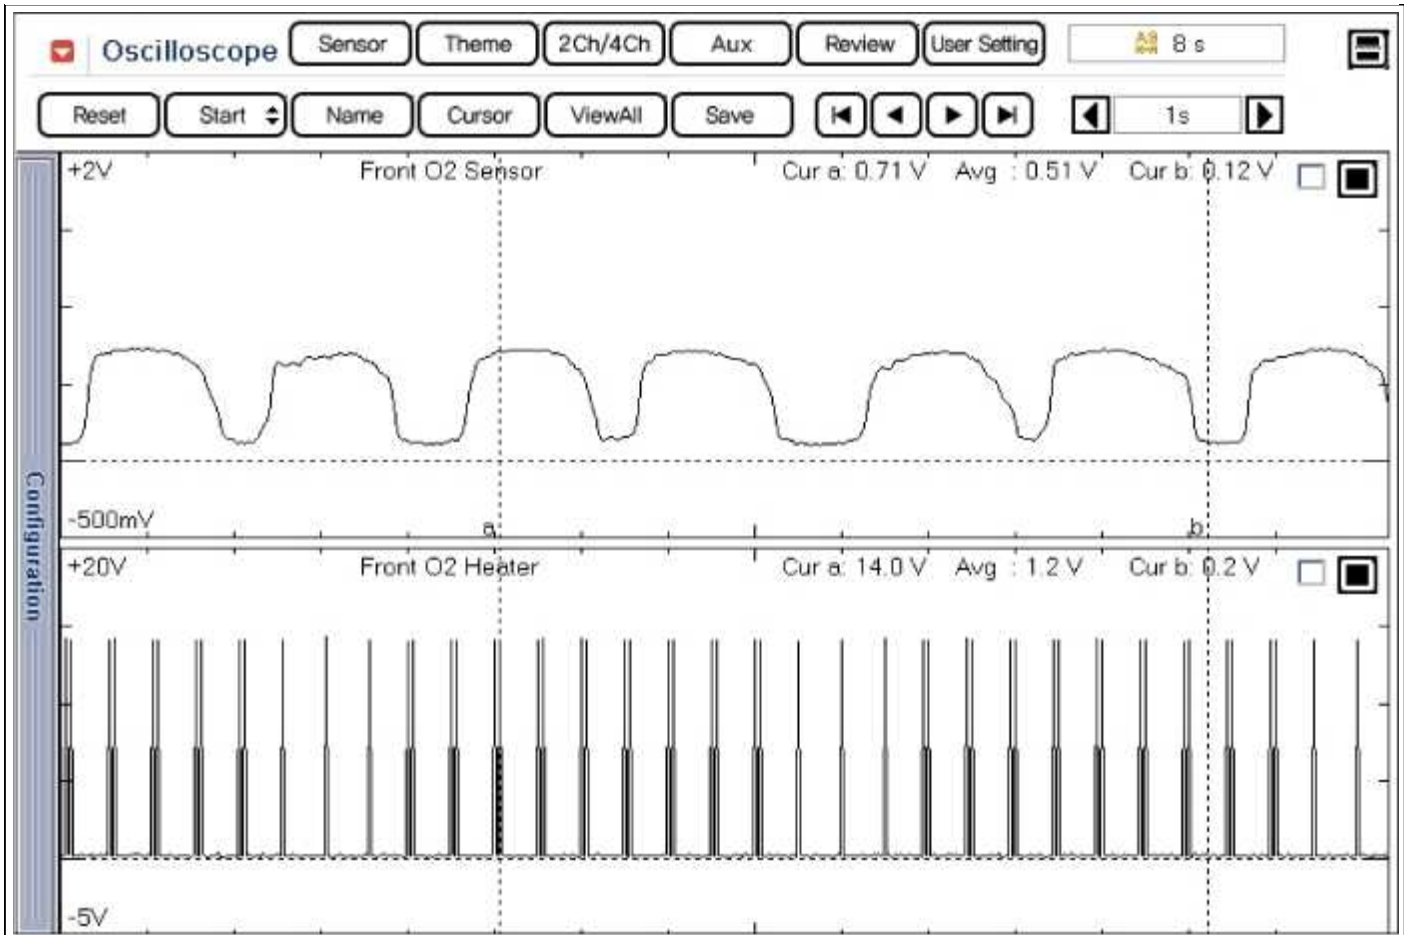

Circuit Diagram

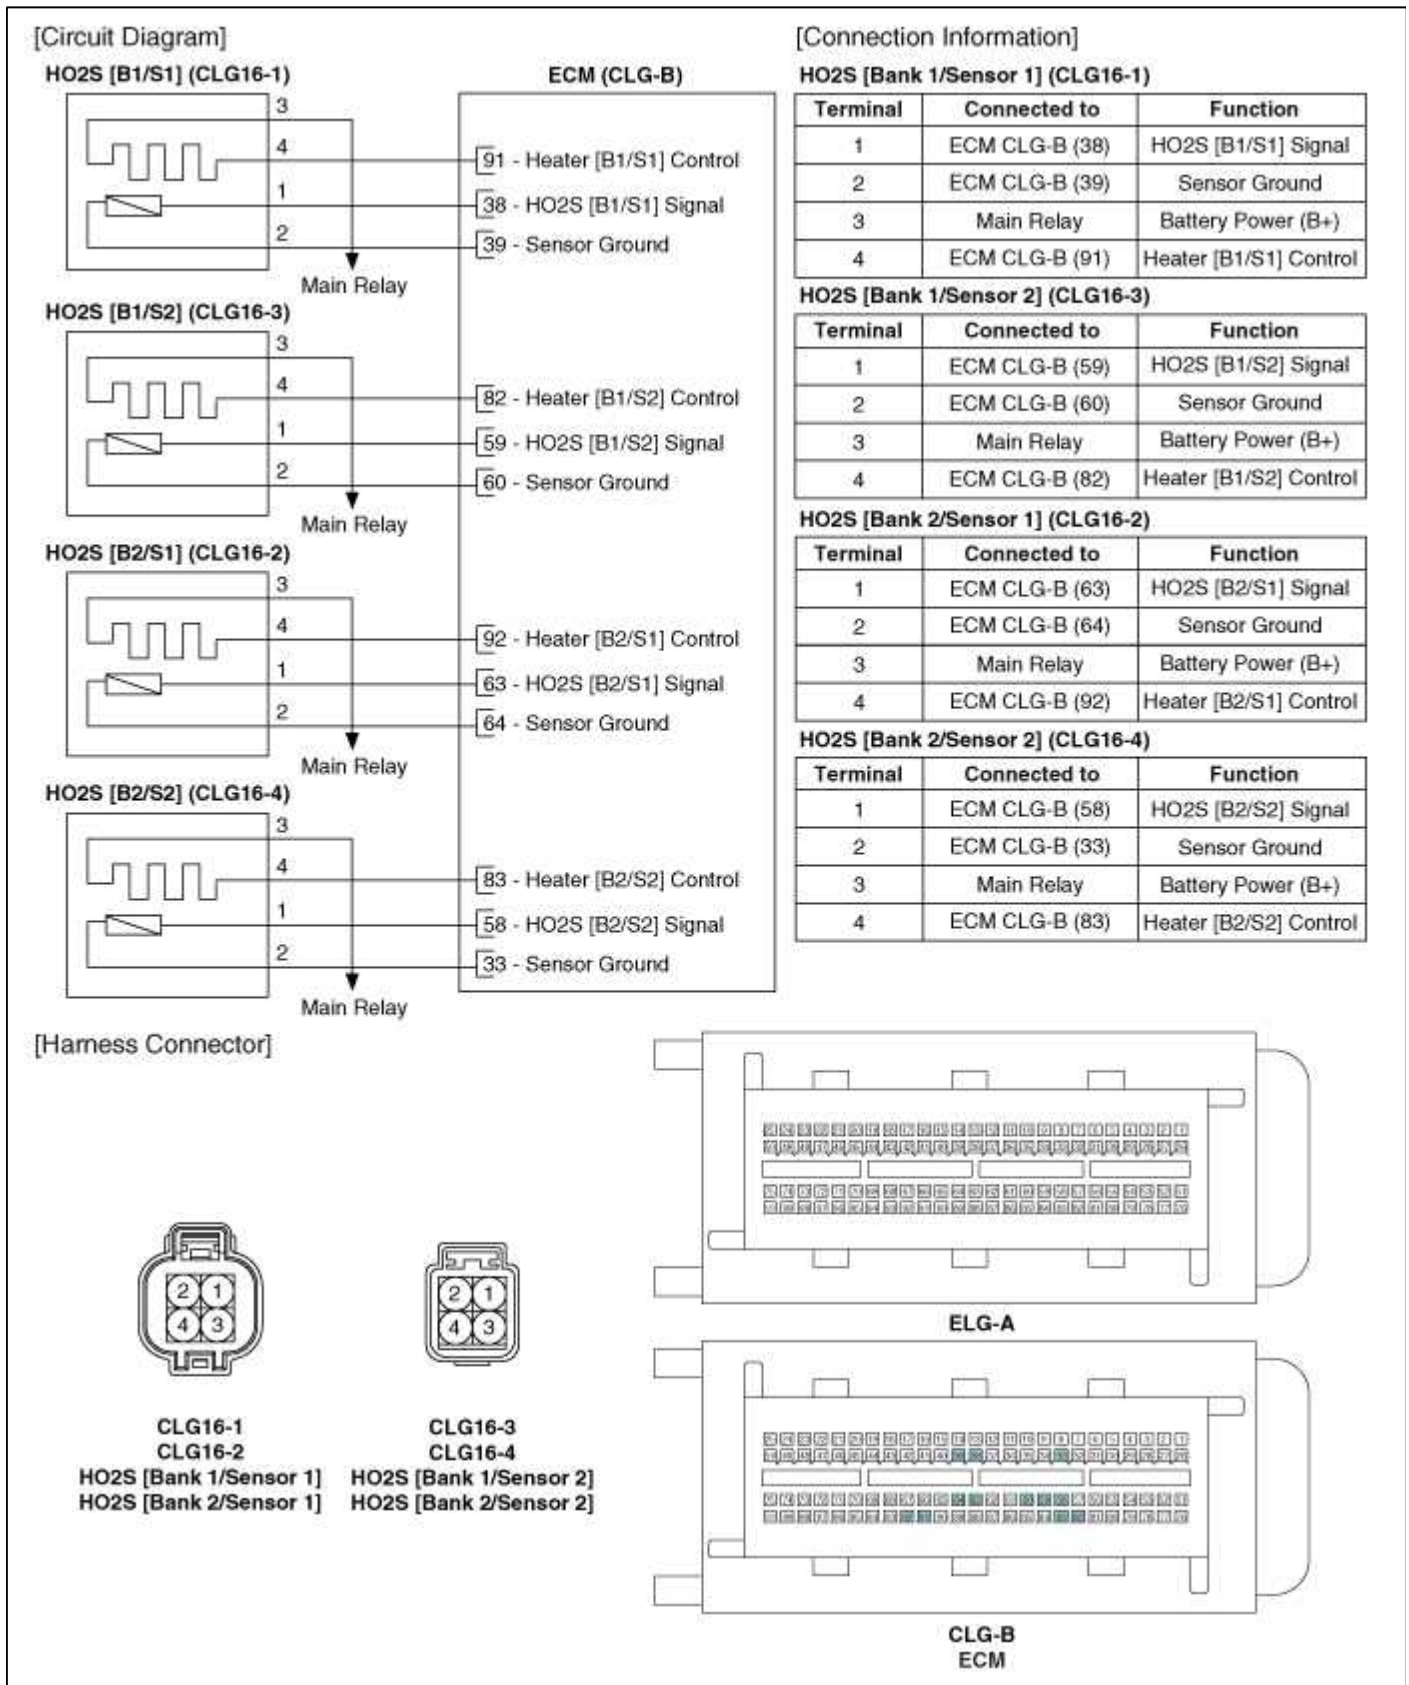

Fuel System > Engine Control System > Heated Oxygen Sensor (HO2S) > Repair procedures

Inspection

1. Turn the ignition switch OFF.
2. Disconnect the HO2S connector.

3. Measure resistance between the HO2S terminals 1 and 2.
4. Check that the resistance is within the specification.

Specification: Refer to “Specification”



Removal

1. Turn the ignition switch OFF and disconnect the battery negative (-) cable.
2. Disconnect the connector (A), and then remove the sensor (B).


NOTE

Note that the SST (Part No.: 09392-2H100) is useful when removing the heated oxygen sensor.



[Bank 1/Sensor 1]

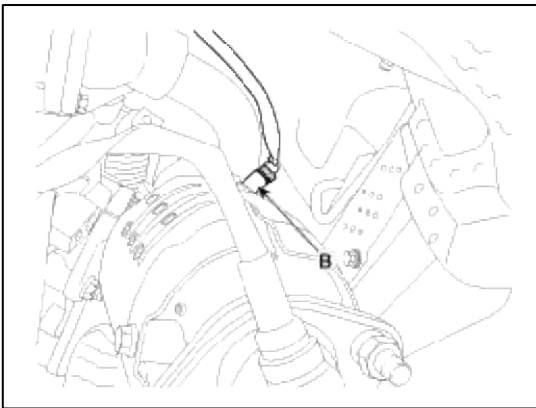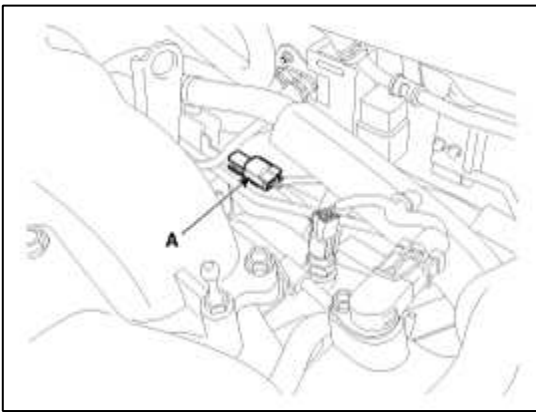


[Bank 1/Sensor 2]

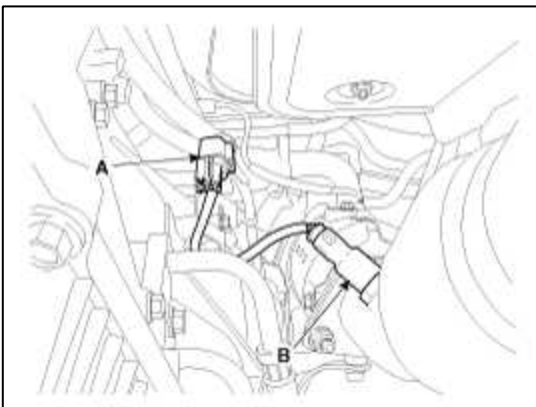

[Bank 2/Sensor 1]

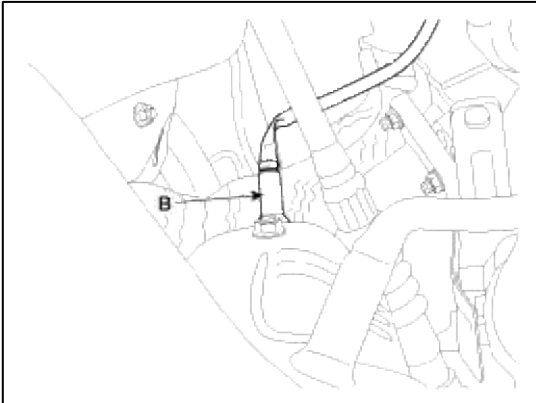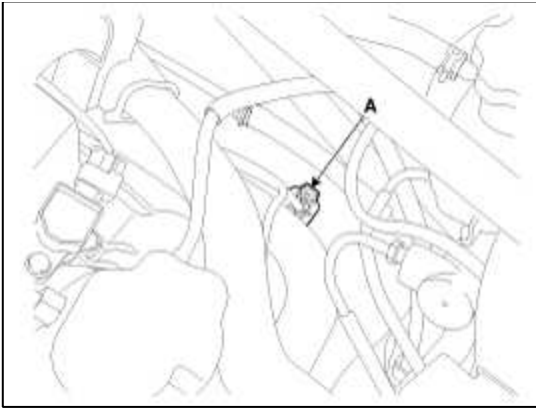

[Bank 2/Sensor 2]

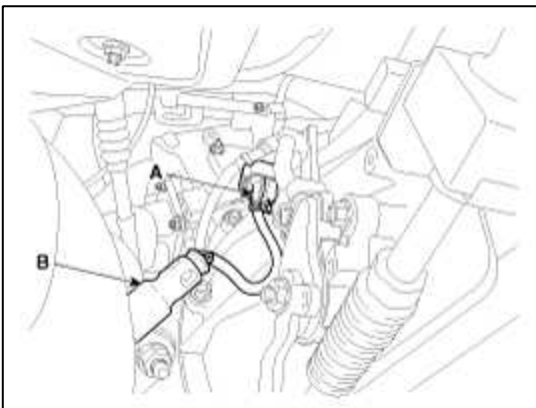

Installation

CAUTION

- Install the component with the specified torques.
- Note that internal damage may occur when the component is dropped. In this case, use it after inspecting.

CAUTION

- DON'T use a cleaner, spray, or grease to sensing element and connector of the sensor because oil component in them may malfunction the sensor performance.
- Sensor and its wiring may be damaged in case of contacting with the exhaust system (Exhaust Manifold, Catalytic Converter, and so on).

1. Installation is reverse of removal.


Heated oxygen sensor installation:

35.3 ~ 45.1 N.m (3.6 ~ 4.6 kgf.m, 26.0 ~ 33.3 lb-ft)

Fuel System > Engine Control System > Rail Pressure Sensor (RPS) > Description and Operation


Description

Rail Pressure Sensor (RPS) is installed on the delivery pipe and measures the instantaneous fuel pressure in the delivery pipe. The sensing element (Semiconductor element) built in the sensor converts the pressure to voltage signal. By using this signal, the ECM can control correct injection amount and timing and adjusts the fuel pressure with the fuel pressure regulator valve if the target pressure and the actual pressure calculated by the RPS output signal are different.

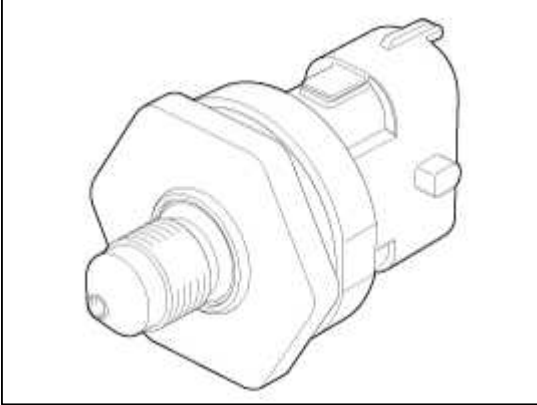


Fuel System > Engine Control System > Rail Pressure Sensor (RPS) > Specifications

Specification

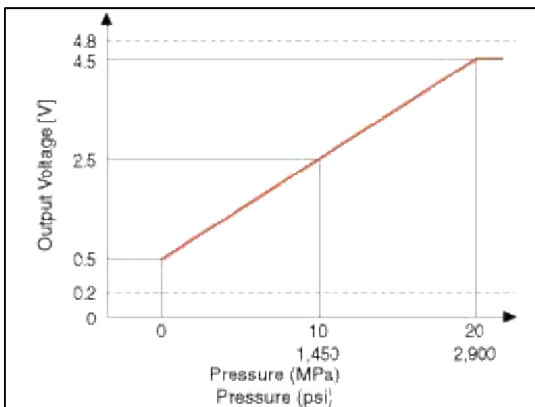


Fuel System > Engine Control System > Rail Pressure Sensor (RPS) > Troubleshooting

Signal Waveform

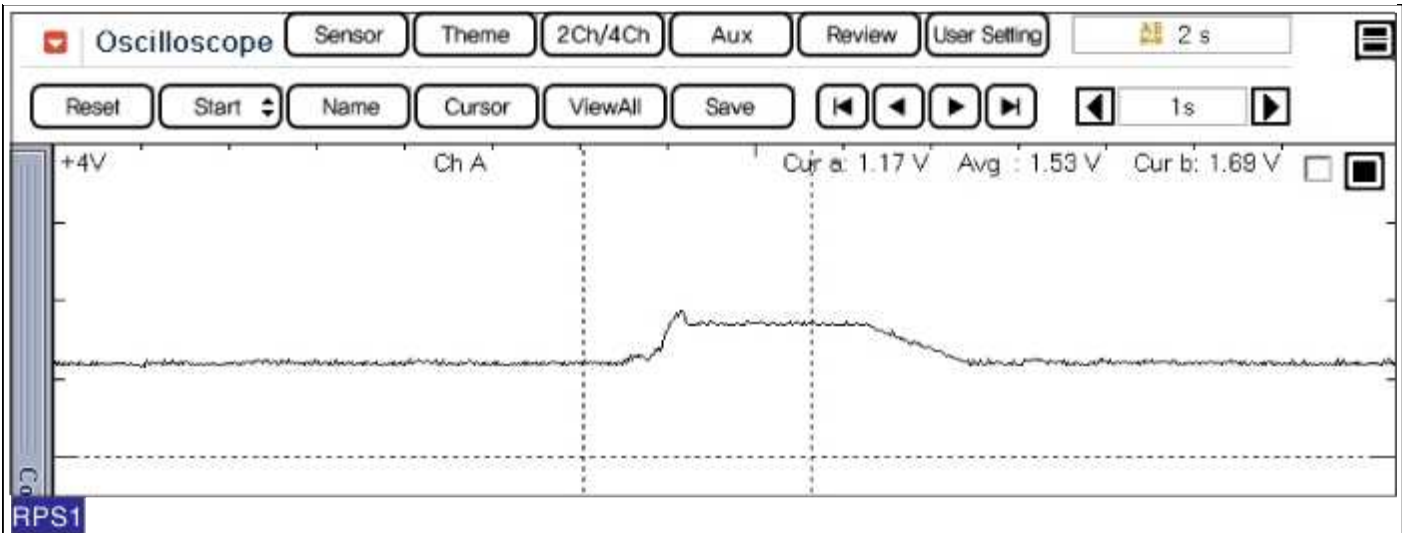

Fuel System > Engine Control System > Rail Pressure Sensor (RPS) > Schematic Diagrams

Circuit Diagram

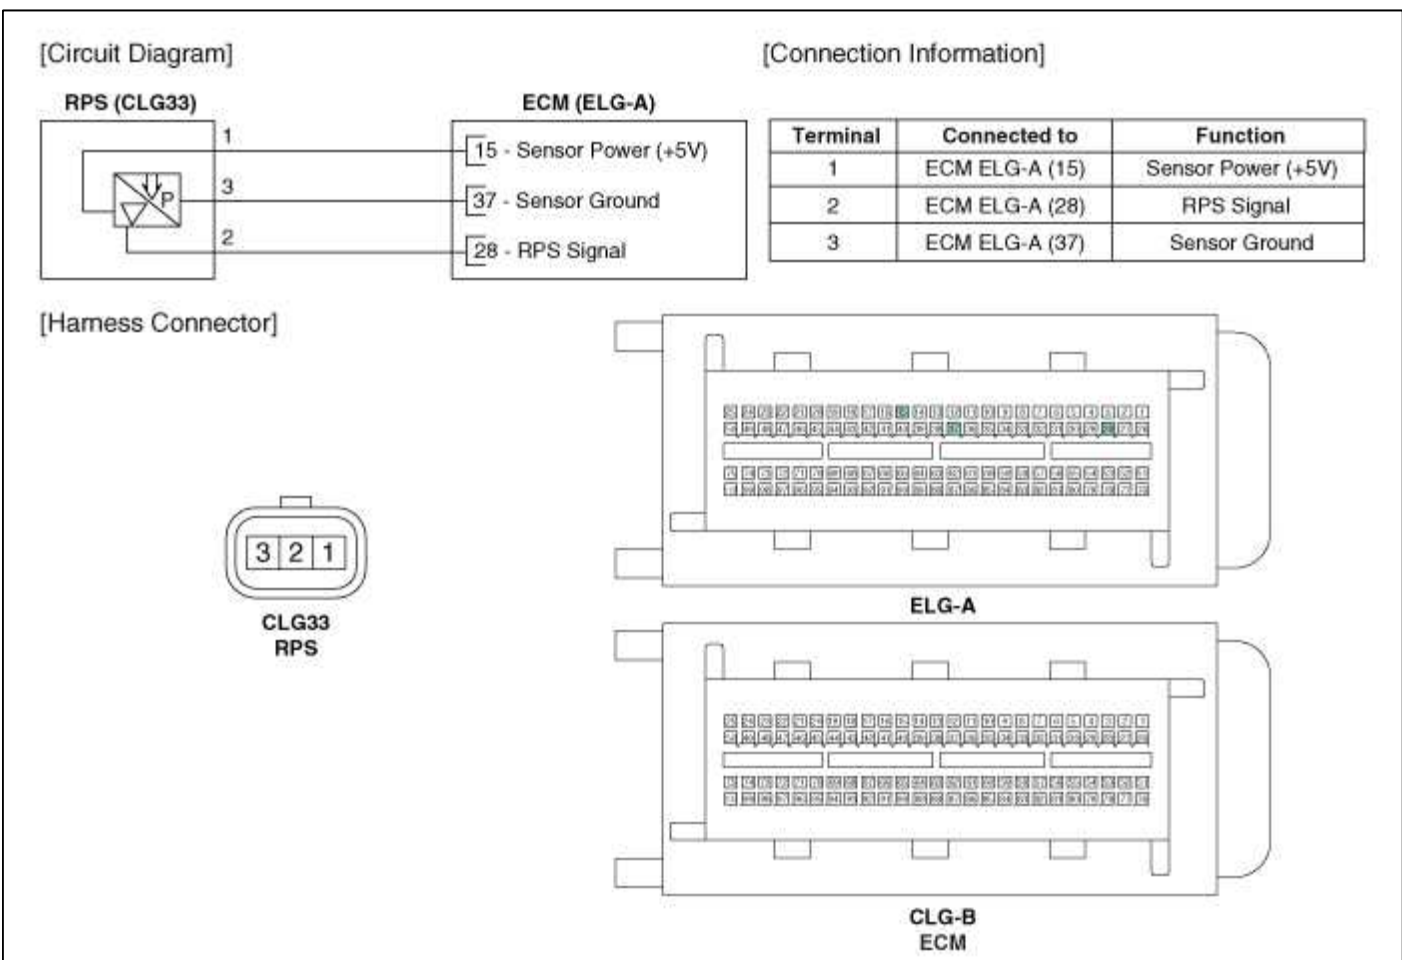

Fuel System > Engine Control System > Rail Pressure Sensor (RPS) > Repair procedures

Inspection

1. Connect the GDS on the Data Link Connector (DLC).

2. Measure the output voltage of the RPS at idle and various engine speed.

Condition	Output Voltage (V)
Idle	Approx. 1.2
1,500 rpm	2.0 ~ 2.2
6,300 rpm	Approx. 2.8


Removal

1. Turn the ignition switch OFF and disconnect the battery negative (-) cable.
2. Release the residual pressure in fuel line (Refer to “Release Residual Pressure in Fuel Line” in this group).

CAUTION

When removing the fuel pump relay, a Diagnostic Trouble Code (DTC) may occur. Delete the code with the GDS after completion of “Release Residual Pressure in Fuel Line” work.

3. Remove the intake manifold (Refer to “Intake And Exhaust System” in EM group).
4. Disconnect the rail pressure sensor connector (A), and then remove the sensor (B) from the delivery pipe.

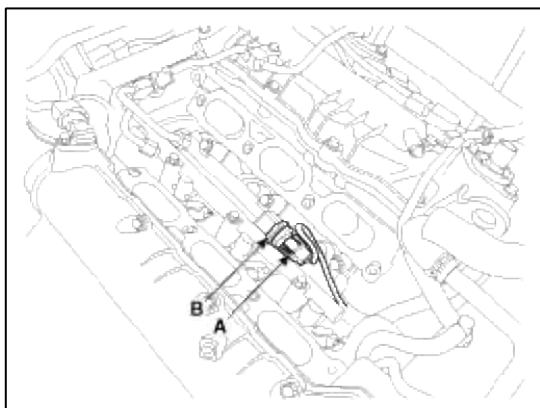

Installation

CAUTION

- Install the component with the specified torques.
- Note that internal damage may occur when the component is dropped. If the component has been dropped, inspect before installing.

1. Installation is reverse of removal.

Rail Pressure Sensor Installation:

29.4 ~ 34.3 N.m (3.0 ~ 3.5 kgf.m, 21.7 ~ 25.3 lb-ft)

Fuel System > Engine Control System > CVVT Oil Temperature Sensor (OTS) > Description and Operation

Description

Continuous Variable Valve Timing (CVVT) system advances or retards the valve timing of the intake and exhaust valve in accordance with the ECM control signal which is calculated by the engine speed and load.


By controlling CVVT, the valve over-lap or under-lap occurs, which makes better fuel economy and reduces exhaust gases (NO_x, HC) and improves engine performance through reduction of pumping loss, internal EGR effect,

improvement of combustion stability, improvement of volumetric efficiency, and increase of expansion work.

This system consist of

- the CVVT Oil Control Valve (OCV) which supplies the engine oil to the cam phaser or cuts the engine oil from the cam phaser in accordance with the ECM PWM (Pulse With Modulation) control signal,
- the CVVT Oil Temperature Sensor (OTS) which measures the engine oil temperature,
- and the Cam Phaser which varies the cam phase by using the hydraulic force of the engine oil.

The engine oil getting out of the CVVT oil control valve varies the cam phase in the direction (Intake Advance/Exhaust Retard) or opposite direction (Intake Retard/Exhaust Advance) of the engine rotation by rotating the rotor connected with the camshaft inside the cam phaser.

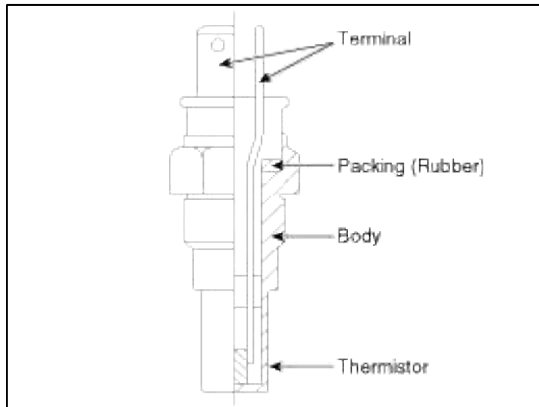


Fuel System > Engine Control System > CVVT Oil Temperature Sensor (OTS) > Specifications

Specification

Temperature		Resistance (k Ω)
$^{\circ}\text{C}$	$^{\circ}\text{F}$	
-40	-40	52.15
-20	-4	16.52
0	32	6.0
20	68	2.45
40	104	1.11
60	140	0.54
80	176	0.29

Fuel System > Engine Control System > CVVT Oil Temperature Sensor (OTS) > Schematic Diagrams

Circuit Diagram

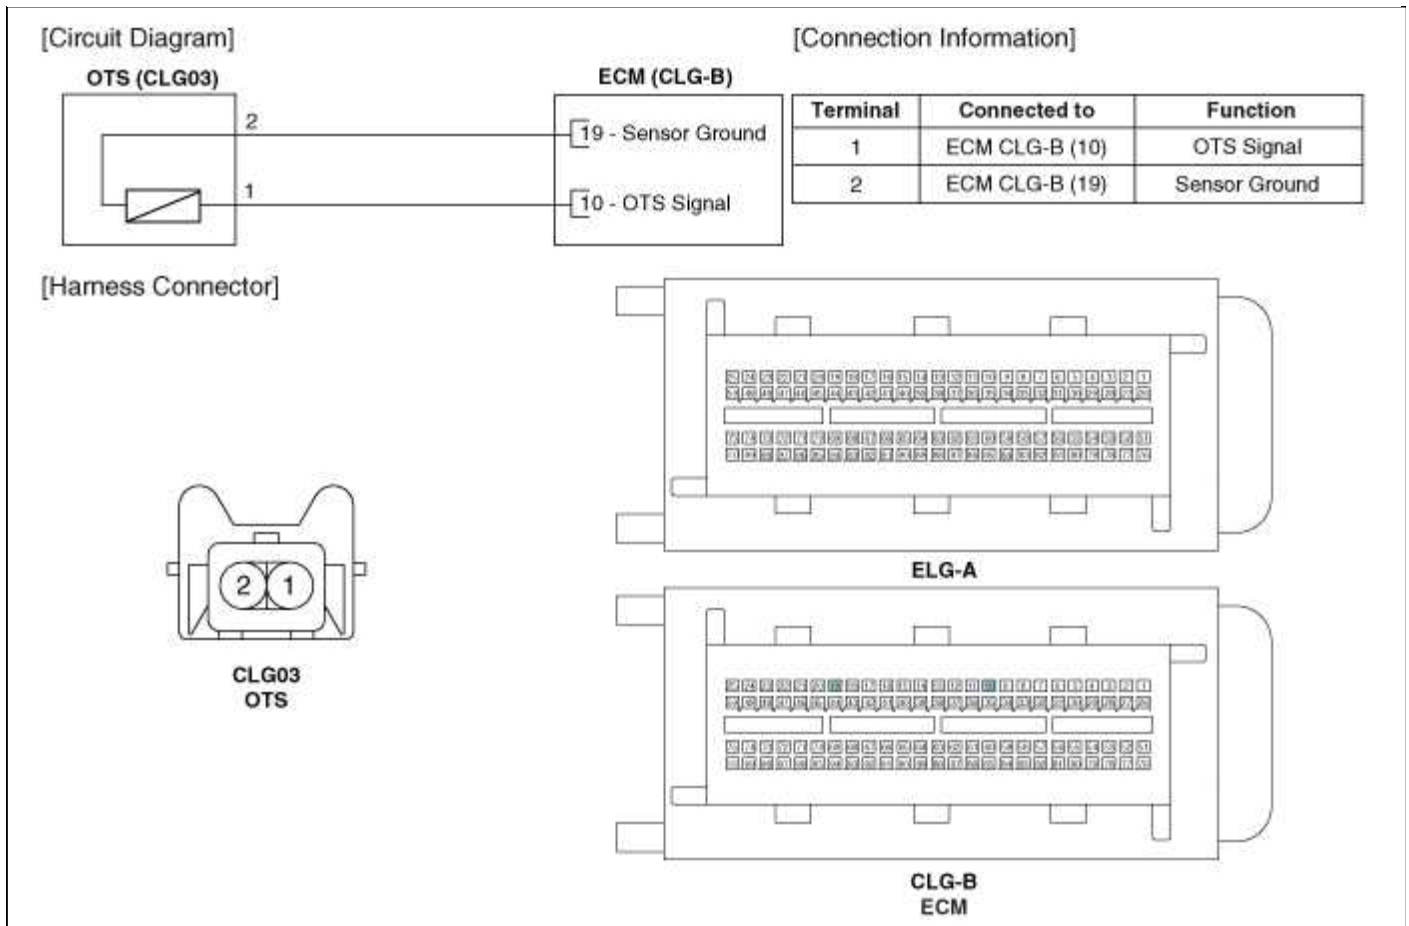

Fuel System > Engine Control System > CVVT Oil Temperature Sensor (OTS) > Repair procedures

Inspection


1. Turn the ignition switch OFF.
2. Disconnect the OTS connector.
3. Remove the OTS (Refer to "Removal").
4. After immersing the thermistor of the sensor into engine coolant, measure resistance between the OTS terminals 1 and 2.
5. Check that the resistance is within the specification.

Specification: Refer to "Specification"

Removal

1. Turn the ignition switch OFF and disconnect the battery negative (-) cable.
2. Remove the air cleaner assembly (Refer to "Intake And Exhaust System" in EM group).

3. Disconnect the connector (A), and then remove the CVVT oil temperature sensor (B).

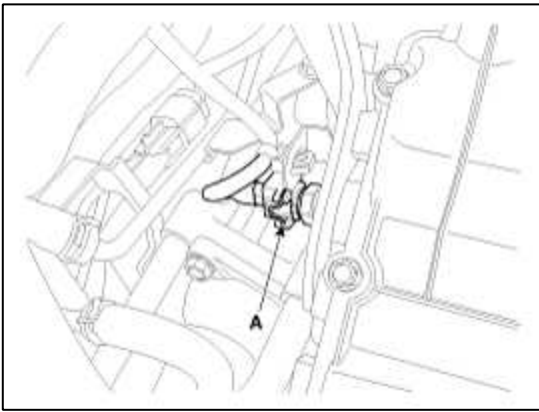

Installation

CAUTION

- Install the component with the specified torques.
- Note that internal damage may occur when the component is dropped. If the component has been dropped, inspect before installing.

CAUTION

- Apply the sealant (LOCTITE FED546 or equivalent) to the sensor.

CAUTION

- Insert the sensor in the installation hole and be careful not to damage when installation.

1. Installation is reverse of removal.


CVVT oil temperature sensor installation:

19.6 ~ 39.2 N.m (2.0 ~ 4.0 kgf.m, 14.5 ~ 28.9 lb-ft)

Fuel System > Engine Control System > Accelerator Position Sensor (APS) > Description and Operation


Description


Accelerator Position Sensor (APS) is installed on the accelerator pedal module and detects the rotation angle of the accelerator pedal. The APS is one of the most important sensors in engine control system, so it consists of the two sensors which adapt individual sensor power and ground line. The second sensor monitors the first sensor and its output voltage is half of the first one. If the ratio of the sensor 1 and 2 is out of the range (approximately 1/2), the diagnostic system judges that it is abnormal.

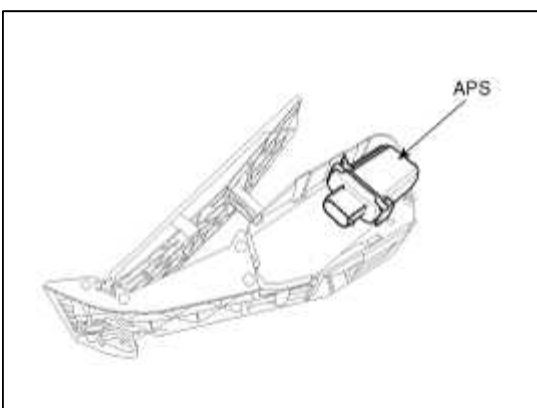

Fuel System > Engine Control System > Accelerator Position Sensor (APS) > Specifications
Specification

Accelerator Position	Output Voltage (V)	
	APS1	APS2
C.T	0.7 ~ 0.8	0.33 ~ 0.43
W.O.T	3.85 ~ 4.35	1.93 ~ 2.18

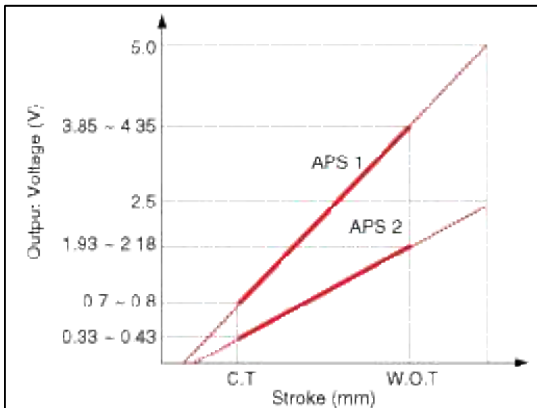
Fuel System > Engine Control System > Accelerator Position Sensor (APS) > Schematic Diagrams
Circuit Diagram

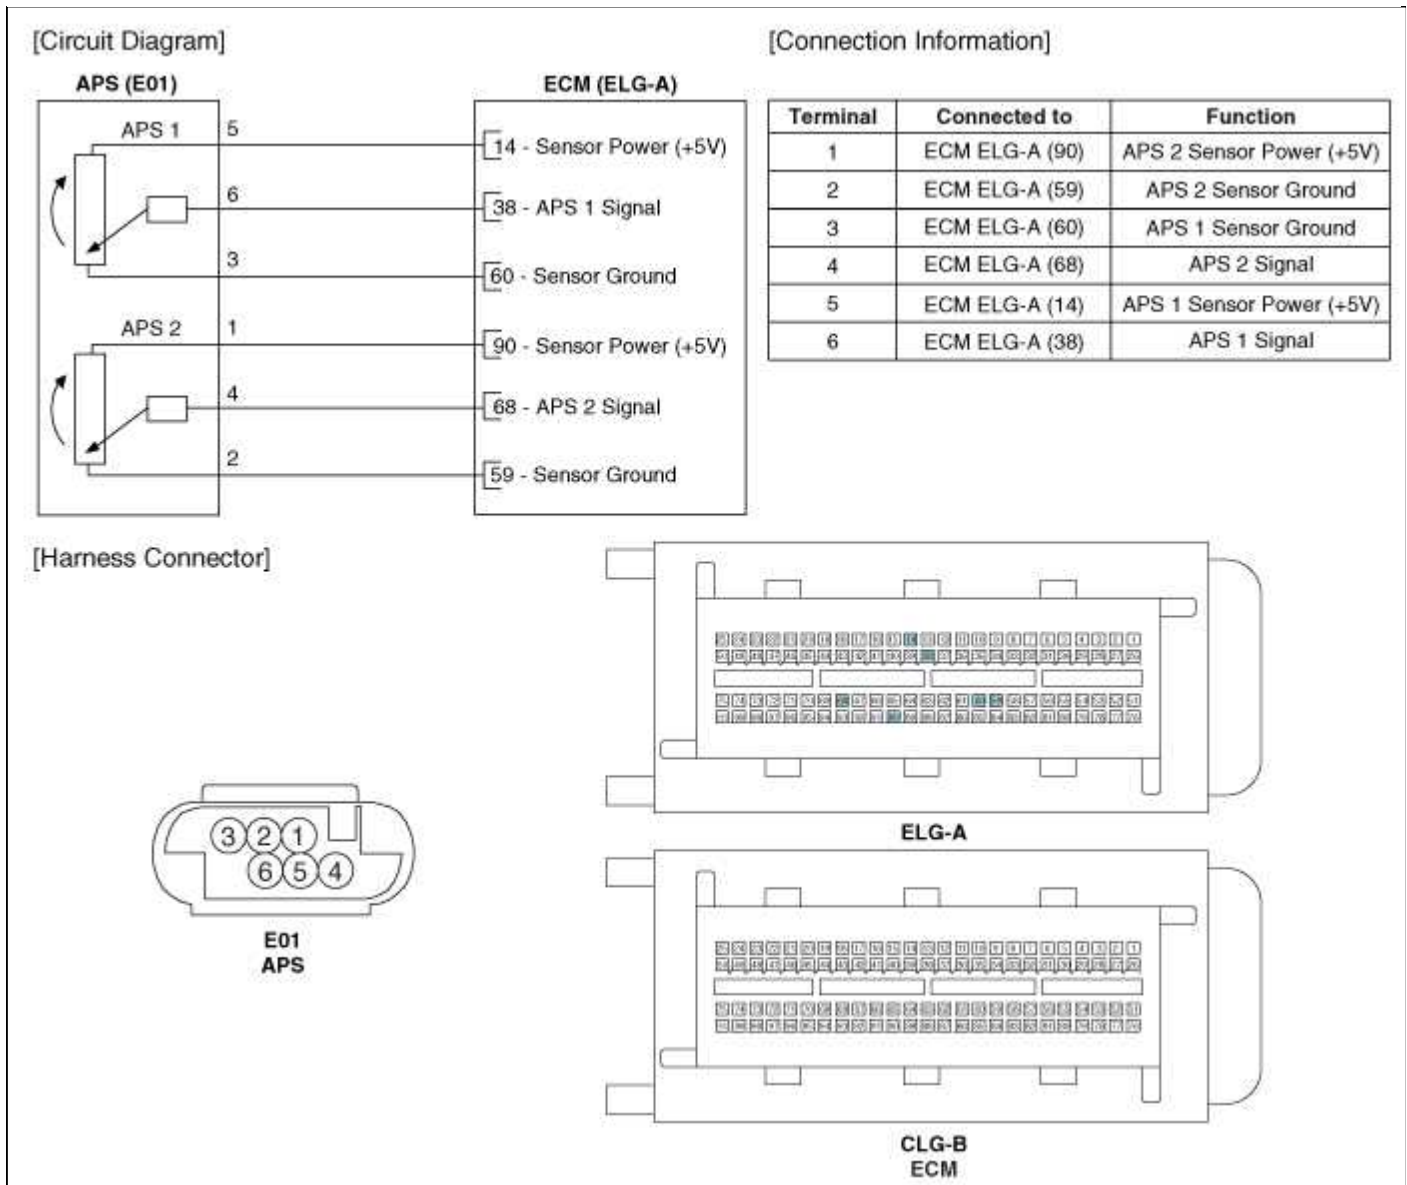

Fuel System > Engine Control System > Accelerator Position Sensor (APS) > Repair procedures

Inspection


1. Connect the GDS on the Data Link Connector (DLC).
2. Turn the ignition switch ON.
3. Measure the output voltage of the APS 1 and 2 at C.T and W.O.T.

Specification: Refer to “Specification”

Removal

1. Turn the ignition switch OFF and disconnect the negative (-) battery cable.
2. Disconnect the accelerator position sensor connector (A).

3. Remove the accelerator pedal in the direction of "Removal direction" in the figure after removing the installation bolt (B).

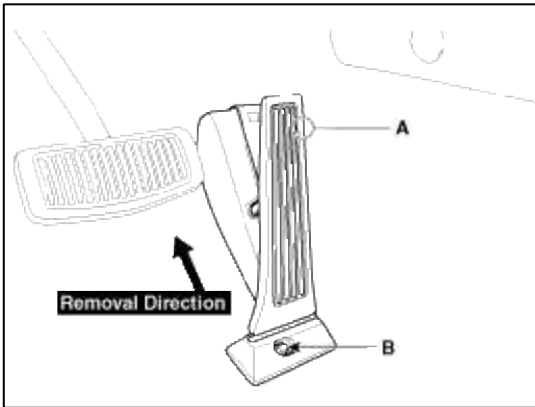

Installation

1. Installation is reverse of removal.


Accelerator pedal module installation bolt:

8.8 ~ 13.7 N.m (0.9 ~ 1.4 kgf.m, 6.5 ~ 10.1 lb-ft)

Fuel System > Engine Control System > Fuel Tank Pressure Sensor (FTPS) > Description and Operation

Description


Fuel Tank Pressure Sensor (FTPS) is a component of the evaporative emission control system and is installed on the fuel tank, the fuel pump, or the canister. It checks the purge control solenoid valve operation and detects a leakage of the system.

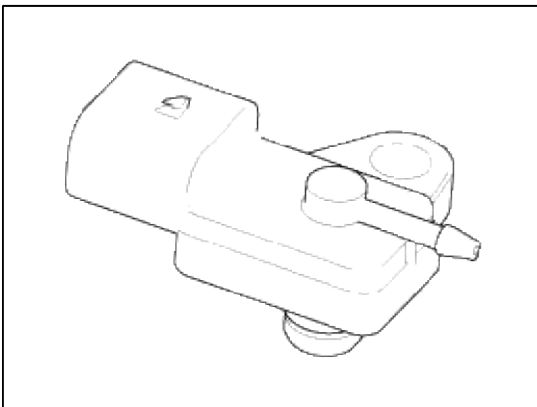

Fuel System > Engine Control System > Fuel Tank Pressure Sensor (FTPS) > Specifications


Specification

Pressure (kPa)	Output Voltage (V)
-6.67	0.5
0	2.5
+6.67	4.5

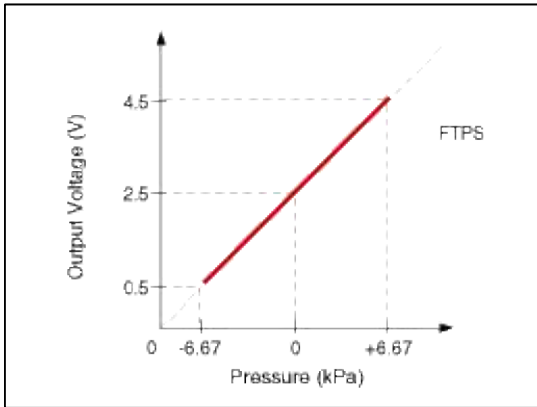

Fuel System > Engine Control System > Fuel Tank Pressure Sensor (FTPS) > Schematic Diagrams

Circuit Diagram

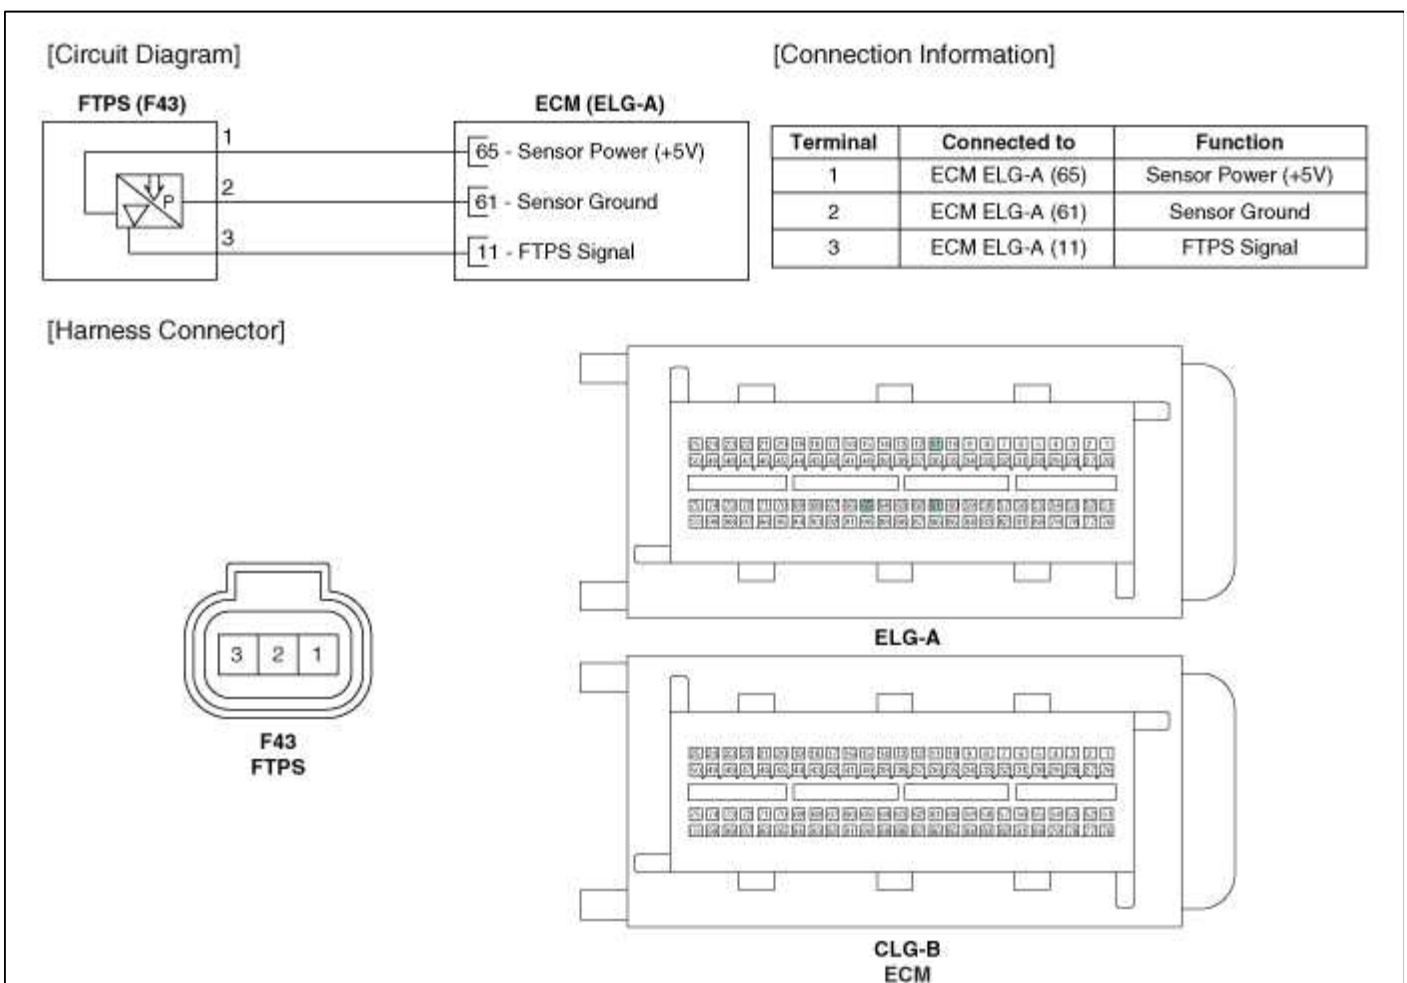

Fuel System > Engine Control System > Fuel Tank Pressure Sensor (FTPS) > Repair procedures


Inspection

1. Connect the GDS on the Data Link Connector (DLC).
2. Measure the output voltage of the FTPS.


Specification: Refer to "Specification"

Removal

1. Turn the ignition switch OFF and disconnect the battery negative (-) cable.
2. Remove the floor mat in the trunk (Refer to "Seat" in BD group).
3. Remove the service cover (A).

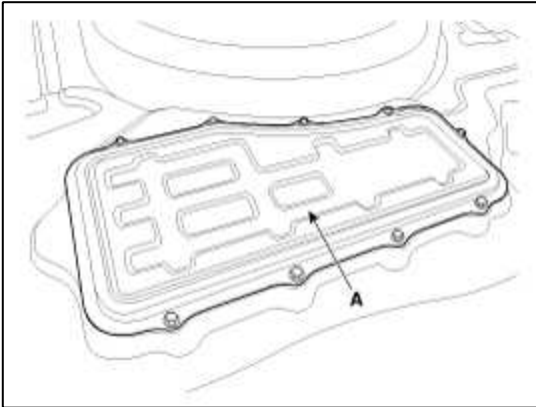

4. Disconnect the fuel tank pressure sensor connector (A).
5. Remove the fuel tank pressure sensor after removing the installation bolt.

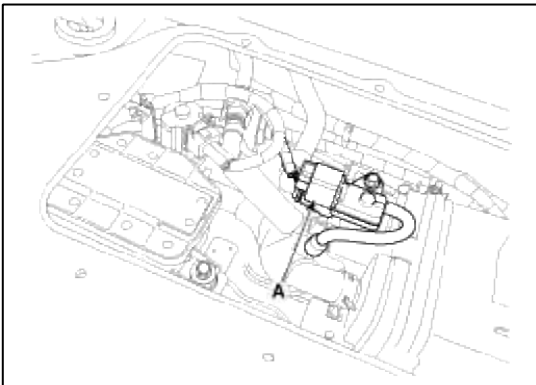

Installation

CAUTION

- Install the component with the specified torques.
- Note that internal damage may occur when the component is dropped. If the component has been dropped, inspect before installing.

CAUTION

- Insert the sensor in the installation hole and be careful not to damage when installation.

1. Installation is reverse of removal.

Fuel tank pressure installation bolt:


3.9 ~ 5.9 N.m (0.4 ~ 0.6 kgf.m, 2.9 ~ 4.3 lb-ft)

Fuel System > Engine Control System > Injector > Description and Operation

Description

Based on information from various sensors, the ECM can calculate the fuel amount to be injected. The fuel injector is a solenoid-operated valve and the fuel injection amount is controlled by length of injection time. The ECM controls each injector by grounding the control circuit. When the ECM energizes the injector by grounding the control circuit, the circuit voltage should be low (theoretically 0V) and the fuel is injected. When the ECM de-

energizes the injector by opening control circuit, the fuel injector is closed and circuit voltage should momentarily peak, and then settle at system voltage.

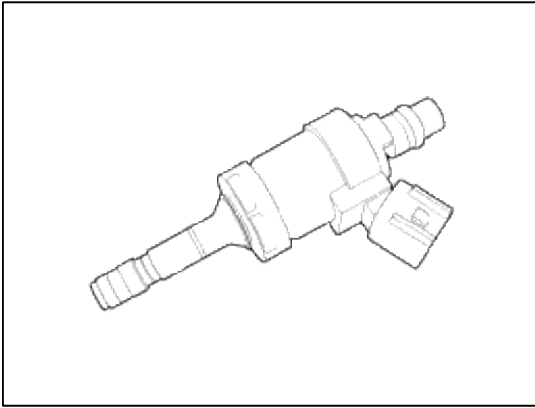


Fuel System > Engine Control System > Injector > Specifications

Specification

Item	Specification
Coil Resistance (Ω)	0.98 ~ 1.14 [20°C(68°F)]

Fuel System > Engine Control System > Injector > Troubleshooting


Signal Waveform

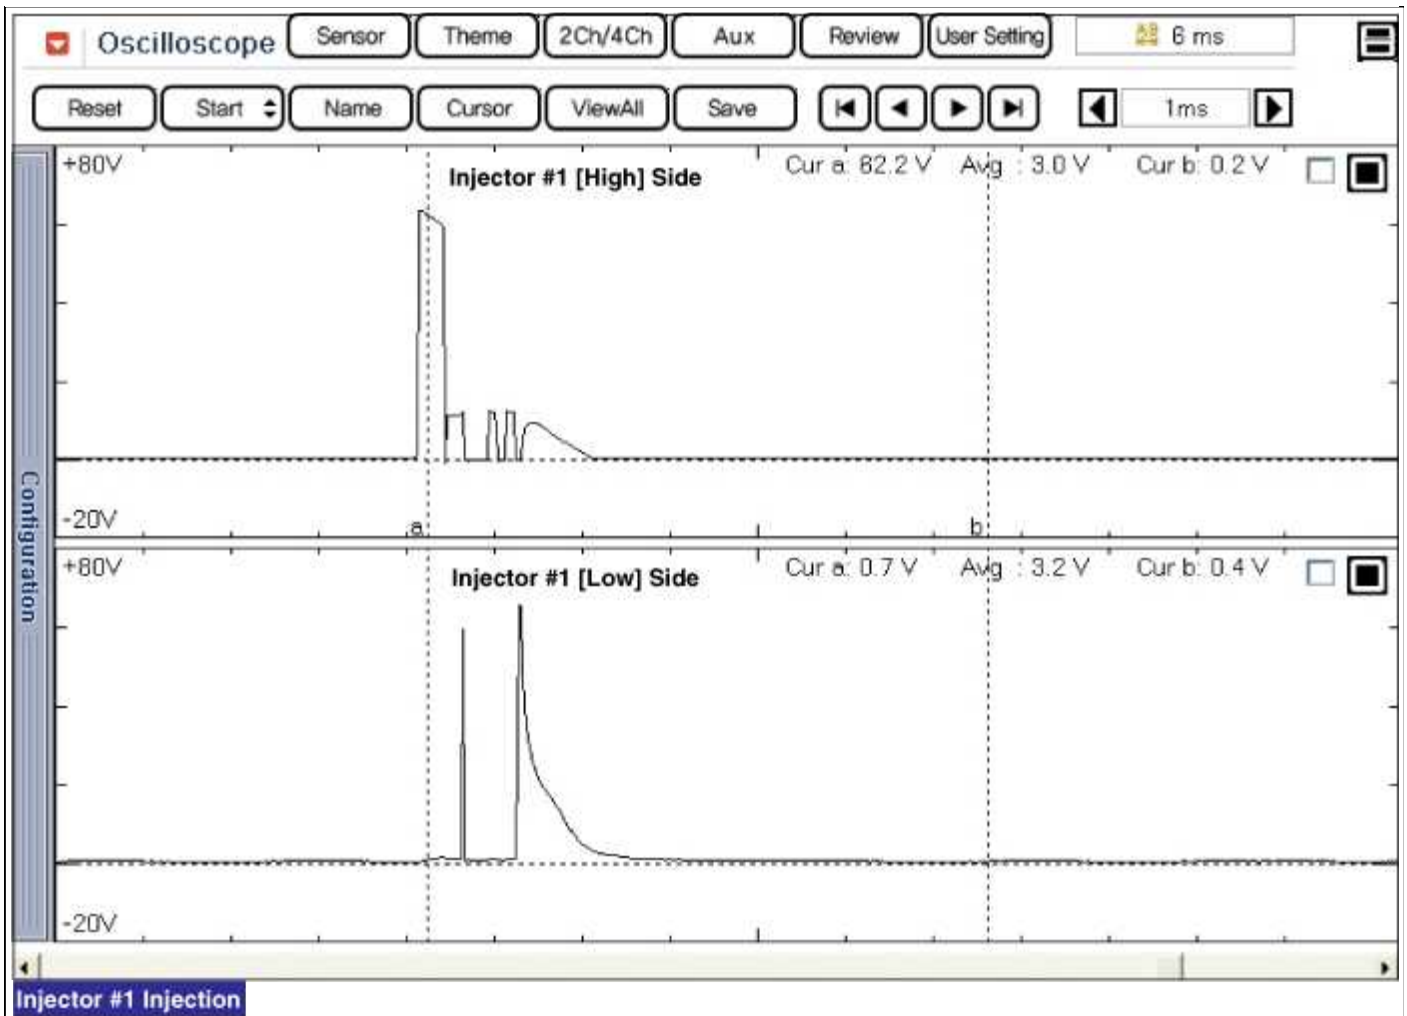

Fuel System > Engine Control System > Injector > Schematic Diagrams

Circuit Diagram

[Circuit Diagram]

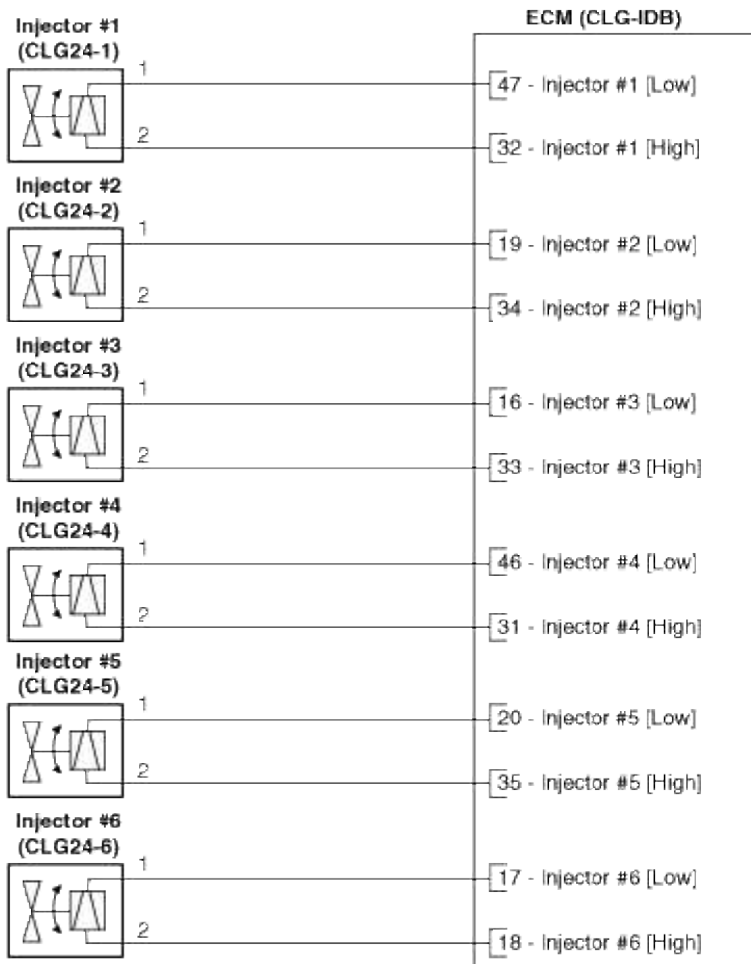

[Connection Information]

Injector #1 (CLG24-1)

Terminal	Connected to	Function
1	ECM CLG-IDB (47)	Injector #1 [Low] Control
2	ECM CLG-IDB (32)	Injector #1 [High] Control

Injector #2 (CLG24-2)

Terminal	Connected to	Function
1	ECM CLG-IDB (19)	Injector #2 [Low] Control
2	ECM CLG-IDB (34)	Injector #2 [High] Control

Injector #3 (CLG24-3)

Terminal	Connected to	Function
1	ECM CLG-IDB (16)	Injector #3 [Low] Control
2	ECM CLG-IDB (33)	Injector #3 [High] Control

Injector #4 (CLG24-4)

Terminal	Connected to	Function
1	ECM CLG-IDB (46)	Injector #4 [Low] Control
2	ECM CLG-IDB (31)	Injector #4 [High] Control


Injector #5 (CLG24-5)

Terminal	Connected to	Function
1	ECM CLG-IDB (20)	Injector #5 [Low] Control
2	ECM CLG-IDB (35)	Injector #5 [High] Control


Injector #6 (CLG24-6)

Terminal	Connected to	Function
1	ECM CLG-IDB (17)	Injector #6 [Low] Control
2	ECM CLG-IDB (18)	Injector #6 [High] Control

[Harness Connector]



CLG24-1,2,3,4,5,6
Injector #1,2,3,4,5,6

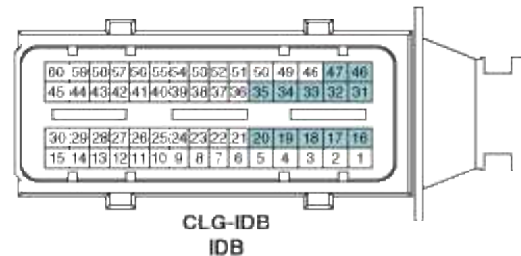

CLG-IDB
IDB

Fuel System > Engine Control System > Injector > Repair procedures

Inspection

1. Turn the ignition switch OFF.
2. Disconnect the injector connector.
3. Measure resistance between the injector terminals 1 and 2.
4. Check that the resistance is within the specification.

Specification: Refer to “Specification”

Removal

WARNING



In case of removing the high pressure fuel pump, high pressure fuel pipe, delivery pipe, and injector, there may be injury caused by leakage of the high pressure fuel. So don't do any repair work right after engine stops.

1. Turn the ignition switch OFF and disconnect the battery negative (-) cable.
2. Release the residual pressure in fuel line (Refer to "Release Residual Pressure in Fuel Line" in this group).

CAUTION

When removing the fuel pump relay, a Diagnostic Trouble Code (DTC) may occur. Delete the code with the GDS after completion of "Release Residual Pressure in Fuel Line" work.

3. Remove the delivery pipe & injector assembly (Refer to "Delivery Pipe" in this group).
4. Remove the connector (A) and the fixing clip (B), and then separate the injector from the delivery pipe.

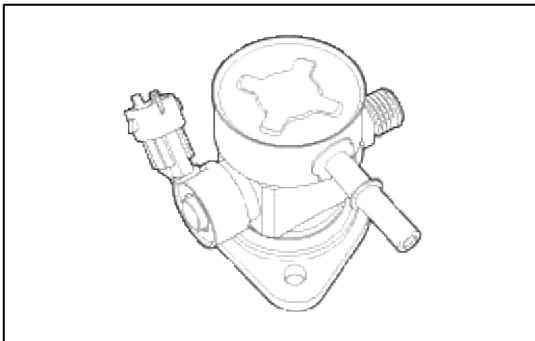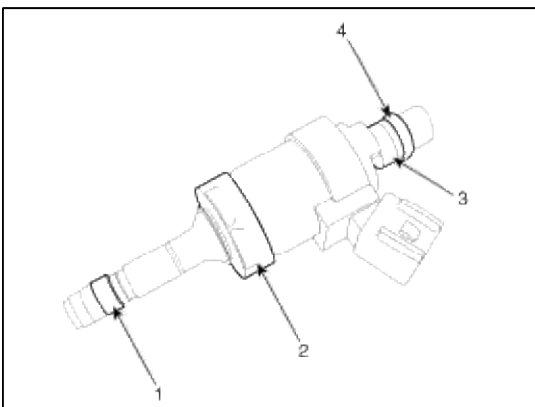**Installation**

1. Combustion seal
2. Rubber washer
3. Support disc
4. O-ring

CAUTION

- Do not reuse the used injector fixing clip.

CAUTION

- Install the component with the specified torques.
- Note that internal damage may occur when the component is dropped. If the component has been dropped, inspect before installing.

CAUTION

- Apply engine oil to the injector O-ring.
- Do not reuse the used injector O-ring.

CAUTION


- Do not reuse the used bolt.

CAUTION

- When inserting the injector, be careful not to damage the injector tip.

CAUTION

- Do not reuse the support disc.
- Do not reuse the injector rubber washer.
- When replacing the rubber washer, the rounded edge (A) part should be faced the cylinder installation part and the angulated edge (B) part should be faced the injector body part.

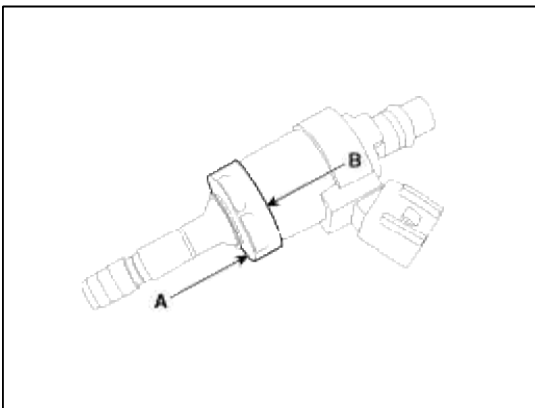**CAUTION**


- Do not reuse the combustion seal.

1. Installation is reverse of removal.

Replacement

The injector combustion seal should be replaced new one to prevent leakage after removing the injector.


1. Remove the combustion seal (A) with a wire cutter.

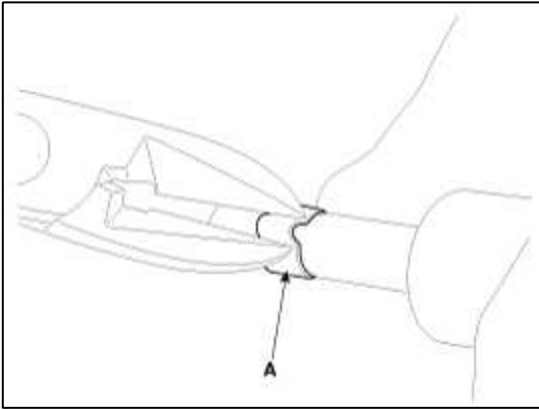

CAUTION

Grip the sealing ring carefully, pull it to form a small loop and then cut it. Be careful not to damage the surface of the valve sleeve with the wire cutter.


2. Before the assembly of the sealing ring the groove must be cleaned using a clean cloth. Any coking of the injector sealing surface must be carefully removed with a brass-wire brush.

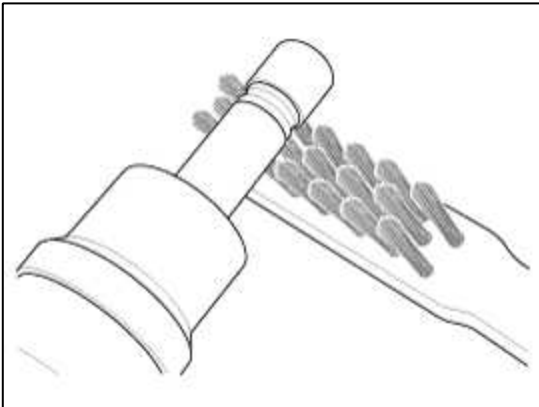


CAUTION


The surfaces of the new sealing ring must be clean and free of grease.

3. Place the seal installing guide (B) (SST No.: 09353-2B000) on the tip of the injector not to damage the injector tip (A). Push the sealing ring (C) with thumb and index finger over the conical assembly tool until it snaps into the groove. The complete assembly must not take longer than 2 to 3 seconds.

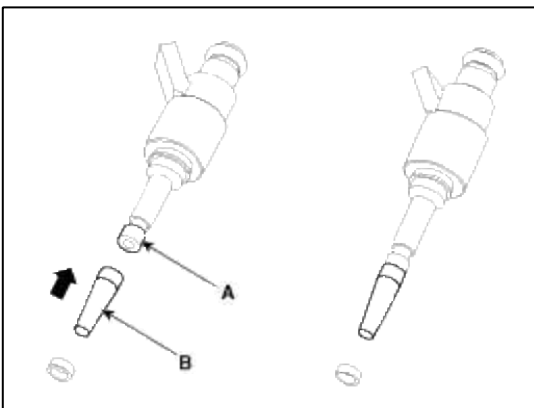

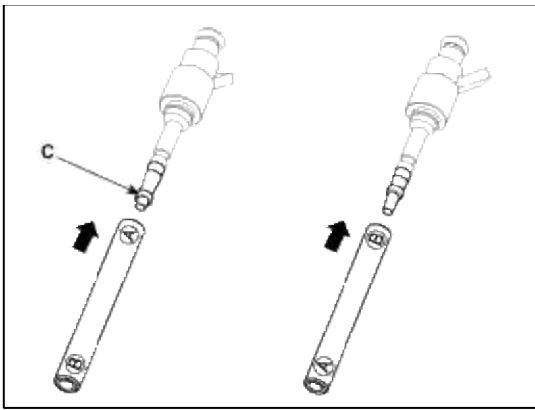

4. To size the sealing ring the injector is first introduced into the sizing tool (A) (SST No.: 09353-2B000) and then pressed and at the same time rotated 180° into the sizing tool.

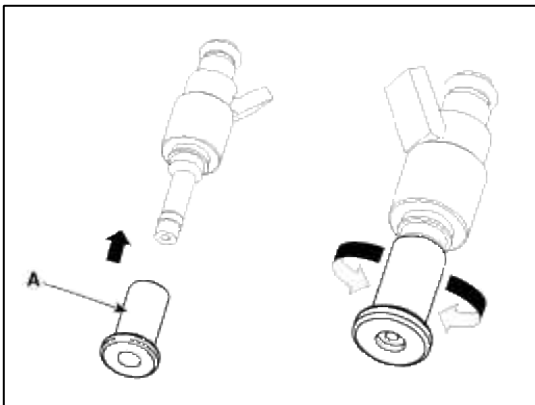

5. Pull the injector out of the sizing tool by turning it in the reverse direction to that used for the press-in process.


CAUTION

Check that the seal ring has not been damaged during assembly to the injector and that no circumferential scratches are present.

Do not reuse the combustion seal.

The seal must be completely free of grease and oil.


6. Check the combustion seal (A) installation.

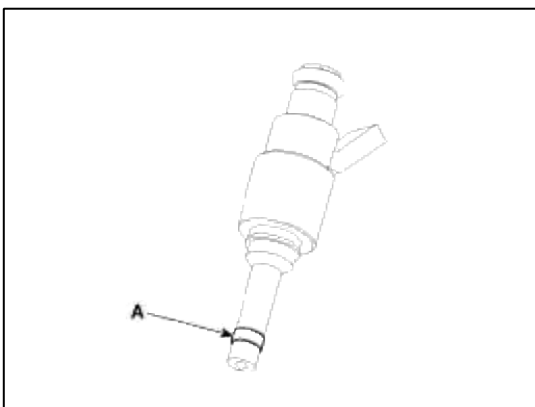

Fuel System > Engine Control System > Purge Control Solenoid Valve (PCSV) > Description and Operation

Description

Purge Control Solenoid Valve (PCSV) is installed on the surge tank and controls the passage between the canister and the intake manifold. It is a solenoid valve and is open when the ECM grounds the valve control line. When the passage is open (PCSV ON), fuel vapor stored in the canister is transferred to the intake manifold.

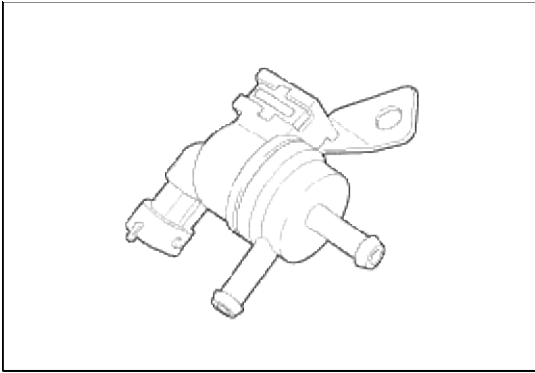


Fuel System > Engine Control System > Purge Control Solenoid Valve (PCSV) > Specifications

Specification

Item	Specification
Coil Resistance (Ω)	22.0 ~ 26.0 [20°C(68°F)]

Fuel System > Engine Control System > Purge Control Solenoid Valve (PCSV) > Schematic Diagrams

Circuit Diagram

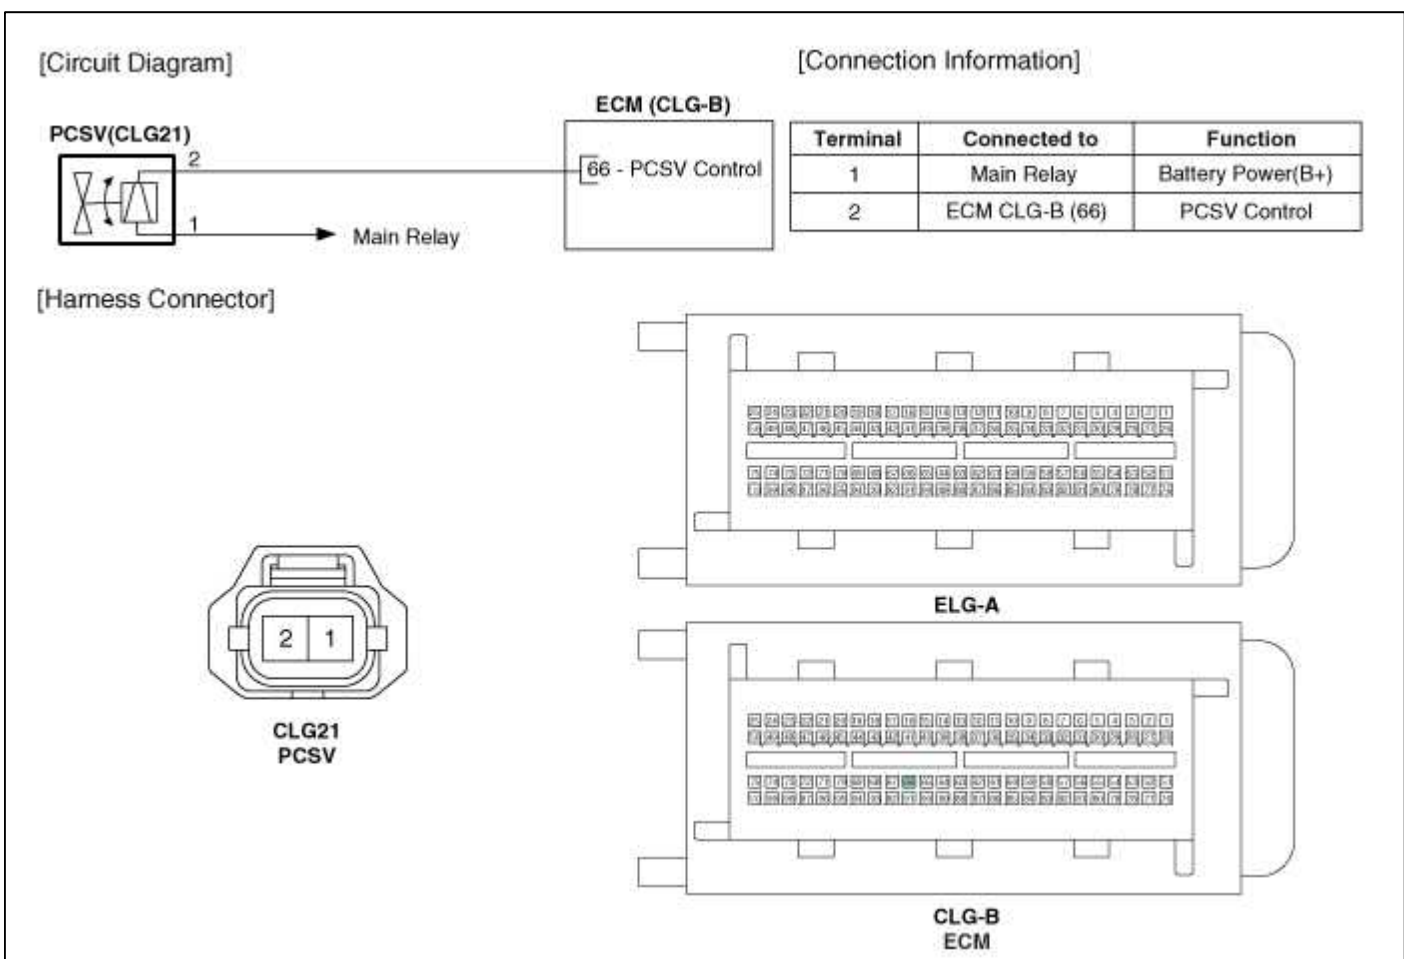

Fuel System > Engine Control System > Purge Control Solenoid Valve (PCSV) > Repair procedures


Inspection

1. Turn the ignition switch OFF.
2. Disconnect the PCSV connector.
3. Measure resistance between the PCSV terminals 1 and 2.
4. Check that the resistance is within the specification.

Specification: Refer to “Specification”

Removal

1. Turn the ignition switch OFF and disconnect the battery negative (-) cable.
2. Disconnect the purge control solenoid valve connector (A).
3. Disconnect the vapor hoses (B) from the purge control solenoid valve.
4. Remove the valve from the bracket.

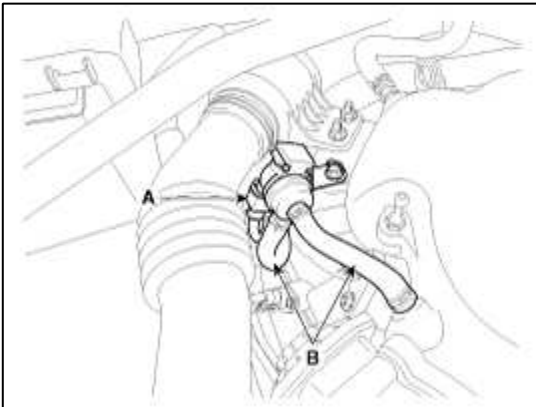

Installation

CAUTION

- Install the component with the specified torques.
- Note that internal damage may occur when the component is dropped. If the component has been dropped, inspect before installing.
- Be sure not to apply oil or lubricant to the end of the hoses when connecting the PCSV hose.

CAUTION

- Be careful of foreign material not to flow into the valve.

1. Installation is reverse of removal.

Purge control solenoid valve bracket installation bolt: 7.8 ~ 11.8 N.m (0.8 ~ 1.2 kgf.m 5.8 ~ 8.7 lb-ft)

Fuel System > Engine Control System > CVVT Oil Control Valve (OCV) > Description and Operation

Description


Continuous Variable Valve Timing (CVVT) system advances or retards the valve timing of the intake and exhaust valve in accordance with the ECM control signal which is calculated by the engine speed and load.

By controlling CVVT, the valve over-lap or under-lap occurs, which makes better fuel economy and reduces exhaust gases (NO_x, HC) and improves engine performance through reduction of pumping loss, internal EGR effect, improvement of combustion stability, improvement of volumetric efficiency, and increase of expansion work.

This system consist of

- the CVVT Oil Control Valve (OCV) which supplies the engine oil to the cam phaser or runs out the engine oil from the cam phaser in accordance with the ECM PWM (Pulse With Modulation) control signal,
- the CVVT Oil Temperature Sensor (OTS) which measures the engine oil temperature,
- and the Cam Phaser which varies the cam phase by using the hydraulic force of the engine oil.

The engine oil getting out of the CVVT oil control valve varies the cam phase in the direction (Intake Advance/Exhaust Retard) or opposite direction (Intake Retard/Exhaust Advance) of the engine rotation by rotating the rotor connected with the camshaft inside the cam phaser.

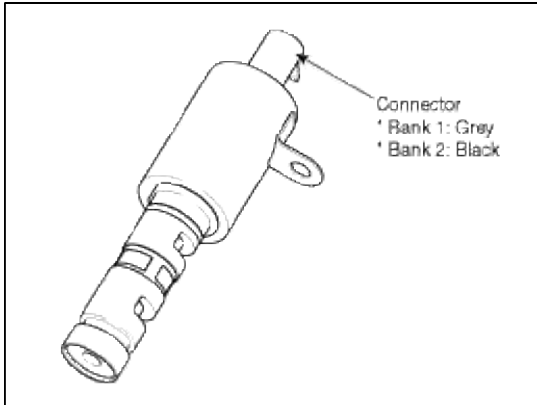


Fuel System > Engine Control System > CVVT Oil Control Valve (OCV) > Specifications

Specification

Item	Specification
Coil Resistance (Ω)	9.4 ~ 10.4 [20°C(68°F)]

Fuel System > Engine Control System > CVVT Oil Control Valve (OCV) > Schematic Diagrams

Circuit Diagram

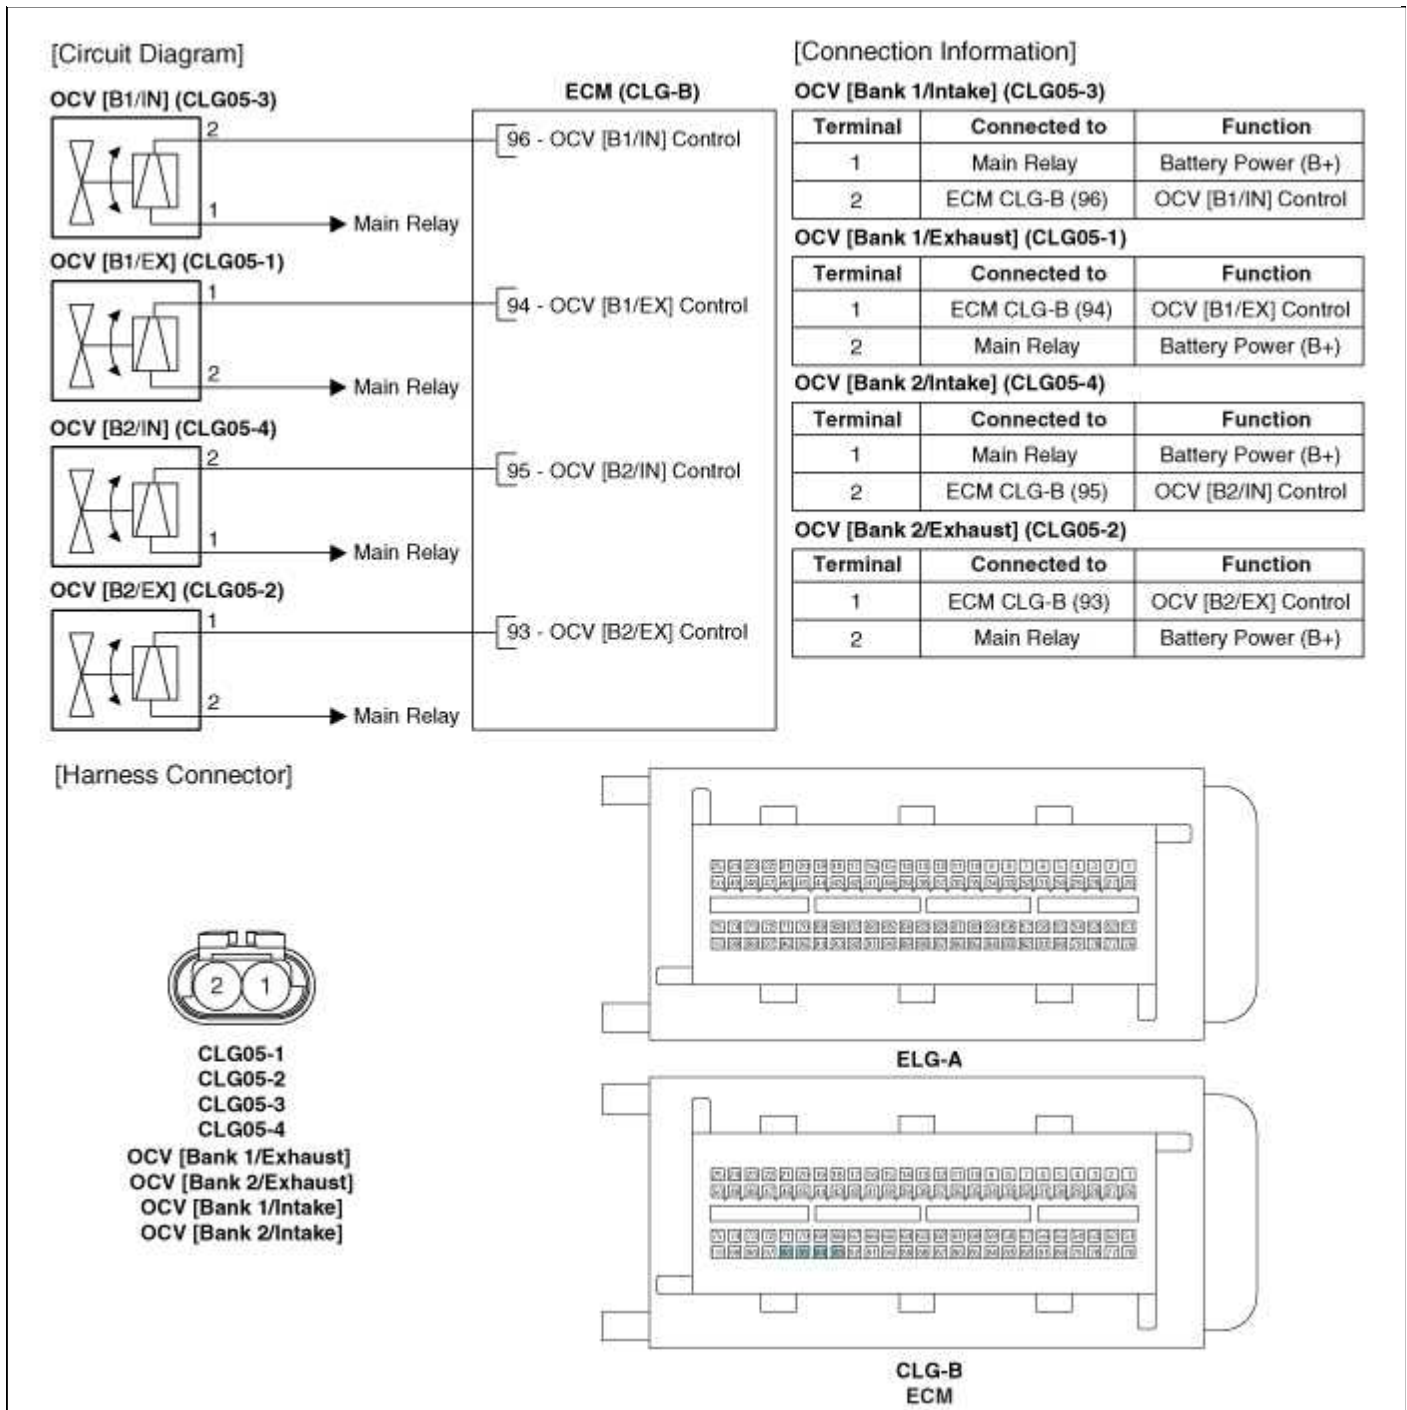

Fuel System > Engine Control System > CVVT Oil Control Valve (OCV) > Repair procedures

Inspection

1. Turn the ignition switch OFF.
2. Disconnect the OCV connector.
3. Measure resistance between the OCV terminals 1 and 2.
4. Check that the resistance is within the specification.


Specification: Refer to “Specification”

Removal


[CVVT Oil Control Valve (Intake)]

1. Turn the ignition switch OFF and disconnect the battery negative (-) cable.
2. Remove the intake manifold (Refer to “Intake And Exhaust System” in EM group).
3. Disconnect the CVVT oil control valve connector (A).
4. Remove the installation bolt (B), and then remove the valve from the engine.

[Bank 1]

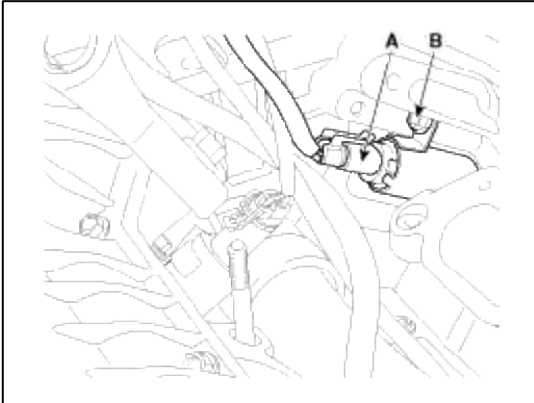

[Bank 2]

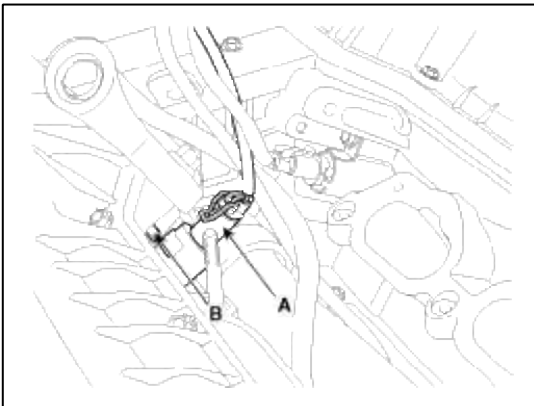

[CVVT Oil Control Valve (Exhaust)]

1. Turn the ignition switch OFF and disconnect the battery negative (-) cable.
2. Disconnect the CVVT oil control valve connector (A).

[Bank 1]




[Bank 2]




3. Remove the cylinder head cover (Refer to “Cylinder Head Assembly” in EM group).
4. Remove the installation bolt (A), and then remove the valve from the engine.

[Bank 1]

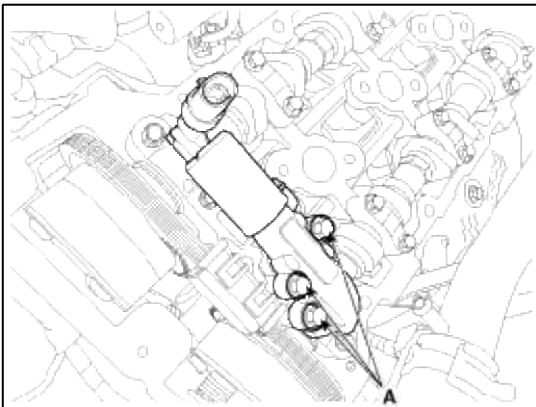

[Bank 2]

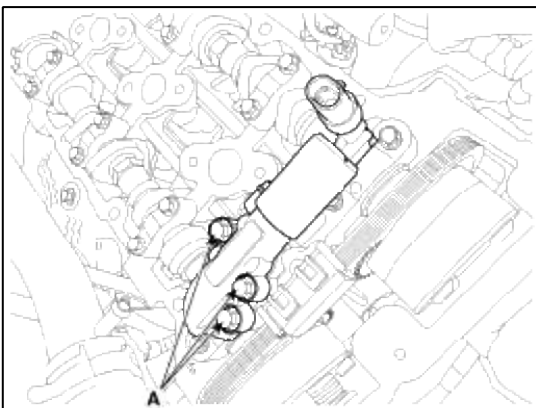

Inatallation

CAUTION

- Install the component with the specified torques.
- Note that internal damage may occur when the component is dropped. If the component has been dropped, inspect before installing.

CAUTION

- Apply the engine oil to the valve O-ring.

CAUTION

- Exactly distinguish the color of the valve and harness connectors in bank 1 and 2 when installing, or the engine will operate abnormally (Refer to the table below).

Items	Component Side	Harness Side
Bank 1 (RH)	Grey	
Bank 2 (LH)	Black	

1. Installation is reverse of removal.


CVVT oil control valve installation bolt:

9.8 ~ 11.8 N.m (1.0 ~ 1.2 kgf.m, 7.2 ~ 8.7 lb-ft)

Fuel System > Engine Control System > Fuel Pressure Control Valve > Description and Operation

Description

Fuel Pressure Regulator Valve is installed on the high pressure fuel pump and controls fuel flow flowing into the injectors in accordance with the ECM signal calculated based on various engine condition.

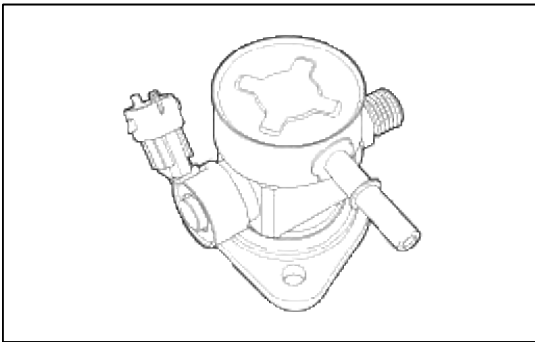


Fuel System > Engine Control System > Fuel Pressure Control Valve > Specifications

Specification

Item	Specification
Coil Resistance (Ω)	1.04 ~ 1.27 [23°C(73.4°F)]


Fuel System > Engine Control System > Fuel Pressure Control Valve > Troubleshooting

Signal Waveform

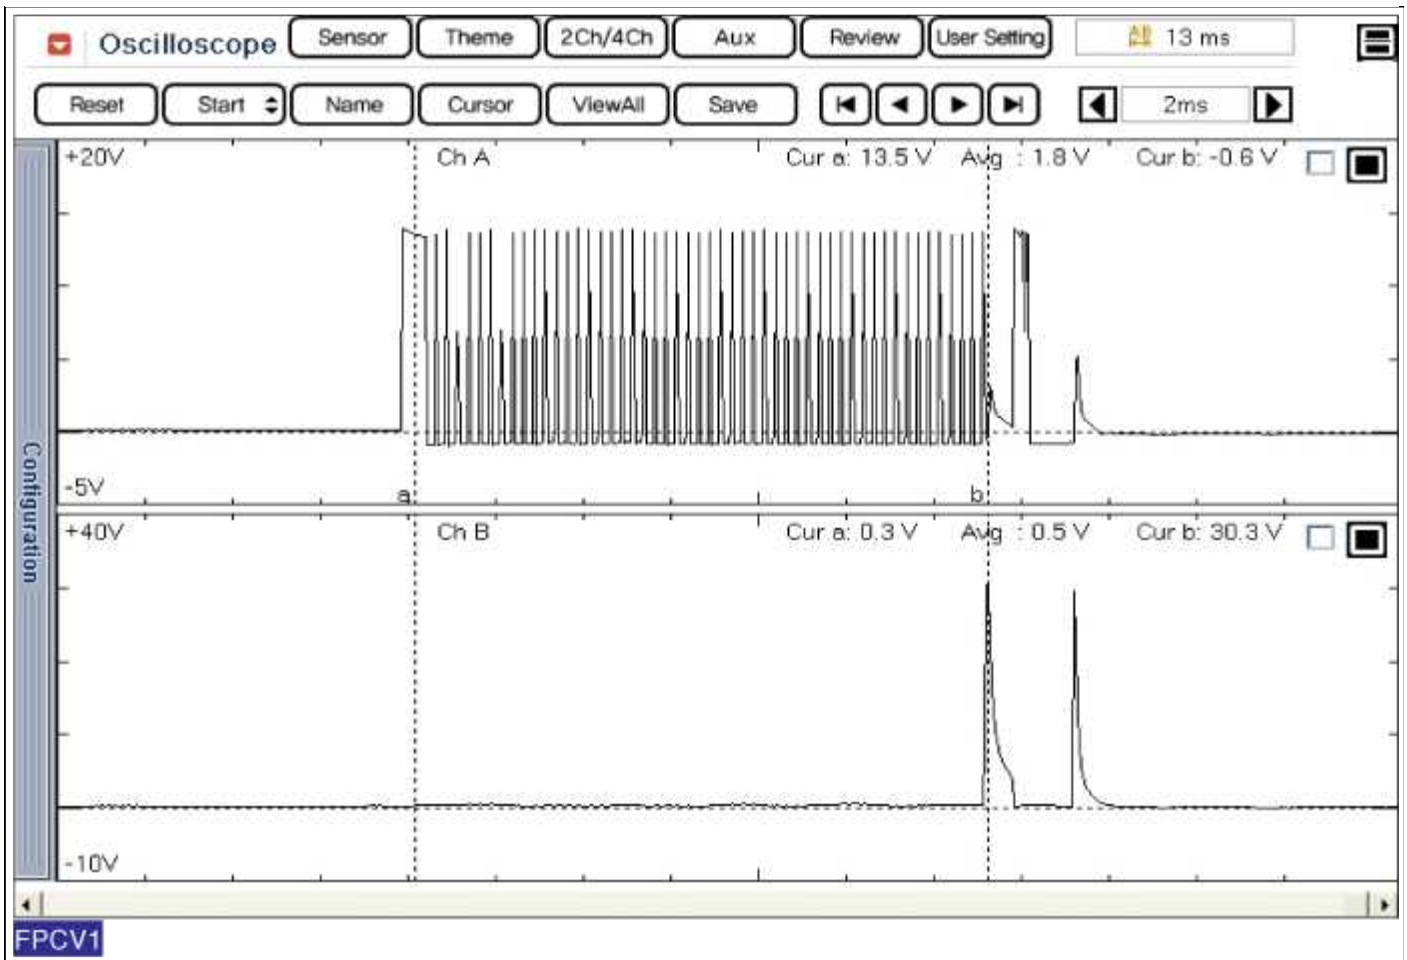

Fuel System > Engine Control System > Fuel Pressure Control Valve > Schematic Diagrams

Circuit Diagram

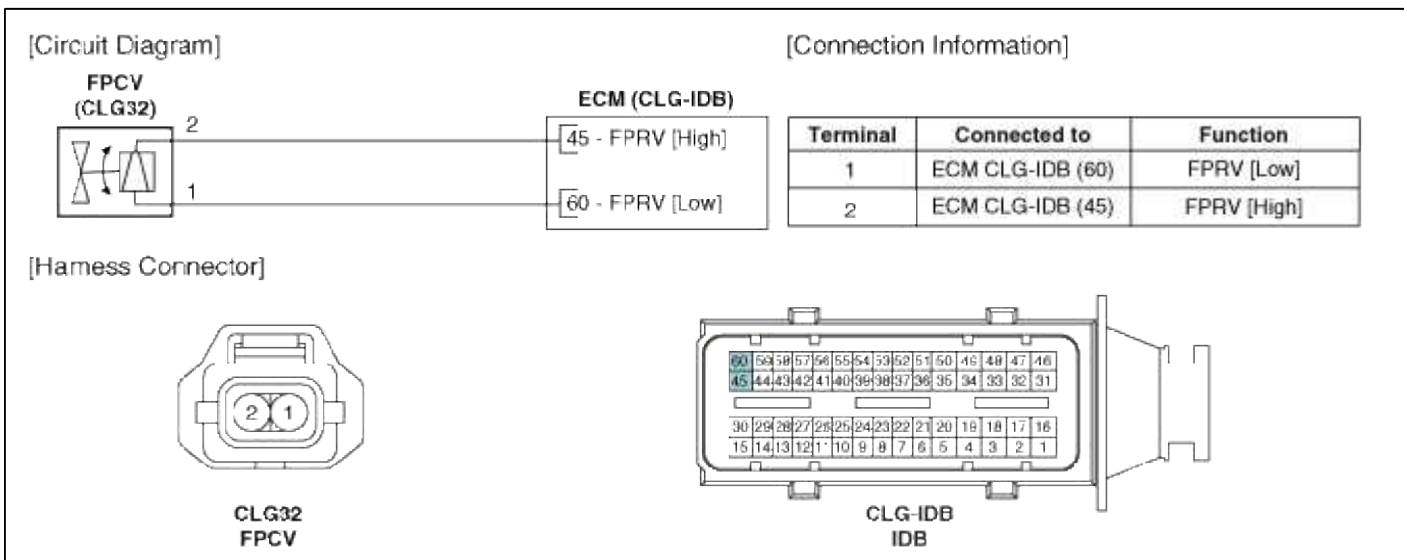

Fuel System > Engine Control System > Fuel Pressure Control Valve > Repair procedures

Inspection

1. Turn the ignition switch OFF and disconnect the battery negative (-) cable.
2. Disconnect the fuel pressure regulator valve connector.
3. Measure resistance between the fuel pressure regulator valve terminals 1 and 2.

4. Check that the resistance is within the specification.

Specification: Refer to “Specification”

Removal

Refer to "High pressure fuel pump" in this group.


Installation

Refer to "High pressure fuel pump" in this group.

Fuel System > Engine Control System > Canister Close Valve (CCV) > Description and Operation

Description

Canister Close Valve (CCV) is installed on the canister ventilation line. It seals evaporative emission control system by shutting the canister from the atmosphere when leakage detecting system operates.

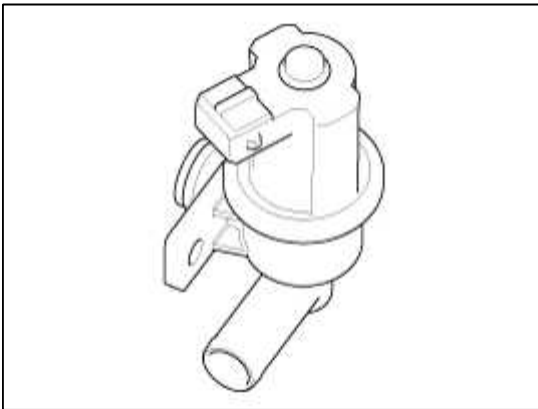


Fuel System > Engine Control System > Canister Close Valve (CCV) > Specifications

Specification

Item	Specification
Coil Resistance (Ω)	23.0 ~ 26.0 (20°C)

Fuel System > Engine Control System > Canister Close Valve (CCV) > Schematic Diagrams

Circuit Diagram

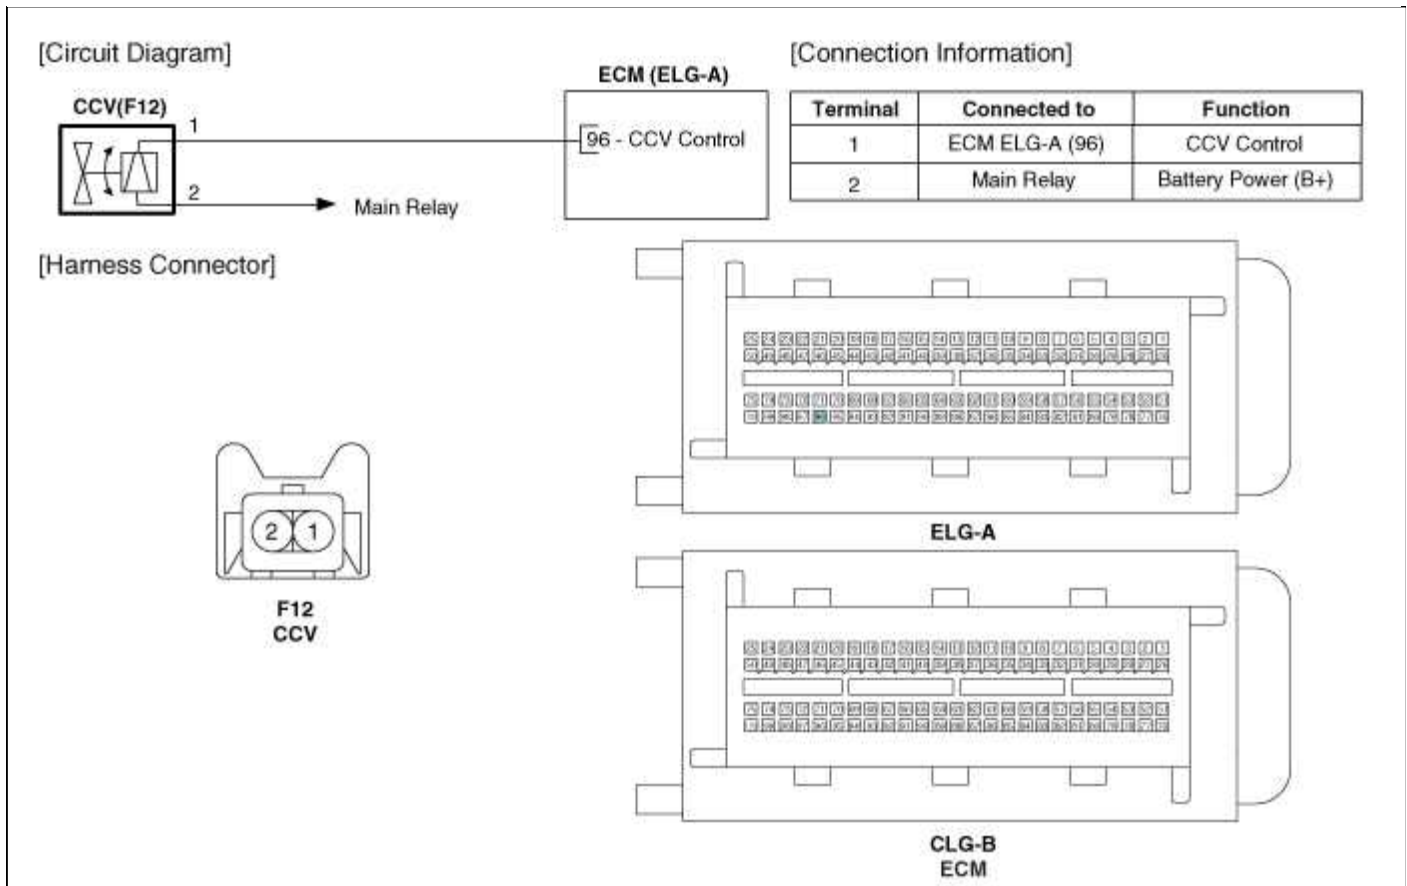

Fuel System > Engine Control System > Canister Close Valve (CCV) > Repair procedures

Inspection

1. Turn the ignition switch OFF.
2. Disconnect the CCV connector.
3. Measure resistance between the CCV terminal 1 and 2.
4. Check that the resistance is within the specification.

Specification: Refer to "Specification"


5. Disconnect the vapor hose connected with the canister from the CCV.
6. Connect a vacuum pump to the nipple.
7. Ground the CCV control line and apply battery voltage to the CCV power supply line.
8. Apply vacuum and check the valve operation.

Specification: Vacuum maintained

Removal


1. Turn the ignition switch OFF and disconnect the battery negative (-) cable.

2. Remove the service cover (A) in the trunk.

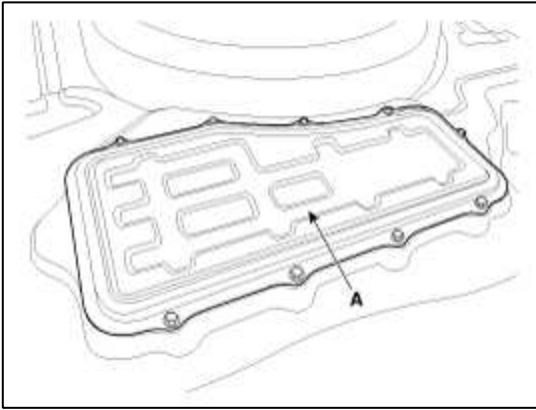


3. Disconnect the canister close valve connector (A).

4. Disconnect the ventilation hose (B) from the canister close valve.

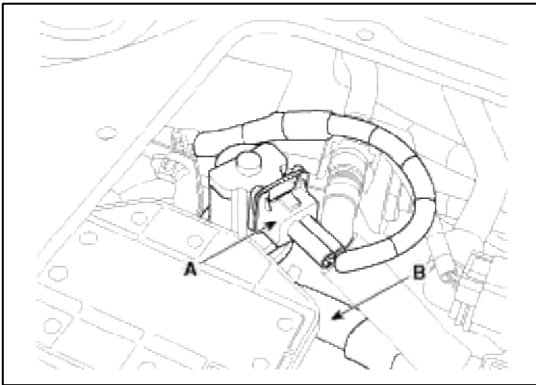

5. Remove the CCV from the fuel tank air filter assembly after removing 2 bolts (A).

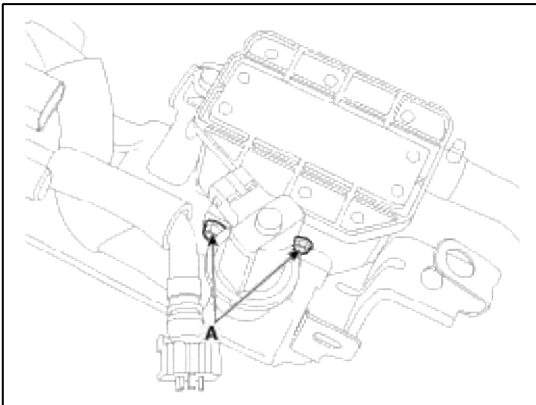

Installation


- Install the component with the specified torques.
- Note that internal damage may occur when the component is dropped. In this case, use it after inspecting.

Canister close valve installation bolt:

3.9 ~ 5.9 N.m (0.4 ~ 0.6 kgf.m, 2.9 ~ 4.3 lb-ft)

Fuel System > Engine Control System > Fuel Pump Resister > Components and Components Location

Component Location

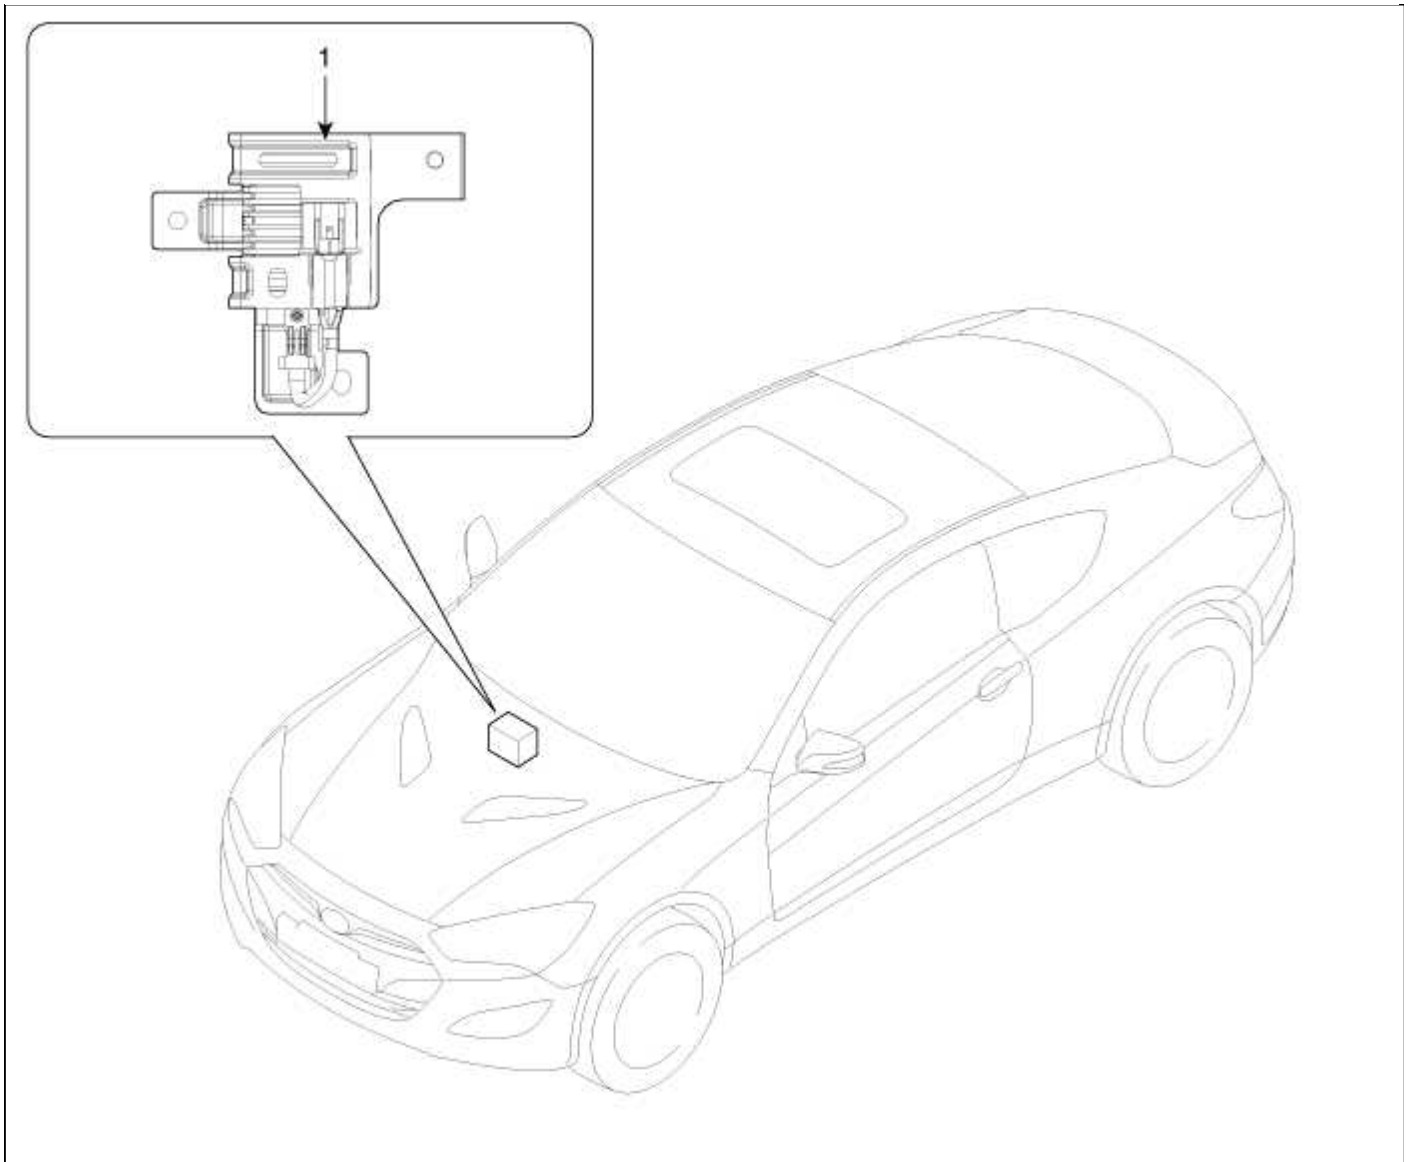

1. Fuel Pump Resister	
-----------------------------	--

Fuel System > Engine Control System > Fuel Pump Resister > Description and Operation

Description

Fuel pump resistor controls supply voltage for the fuel pump motor.


This resistor reduces noise and increases durability of the fuel pump motor through reducing rpm and flow quantity at specific range.

Fuel pump motor operation

Engine state	Resistor	Mode	Supply voltage (V)
Engine start	Not operated	Hi mode	Battery voltage
Idle ~ Specific range	Operated	Lo mode	About 9.5
W.O.T or Rapid acceleration	Not operated	Hi mode	Battery voltage

Fuel System > Engine Control System > Fuel Pump Resister > Schematic Diagrams

Circuit Diagram

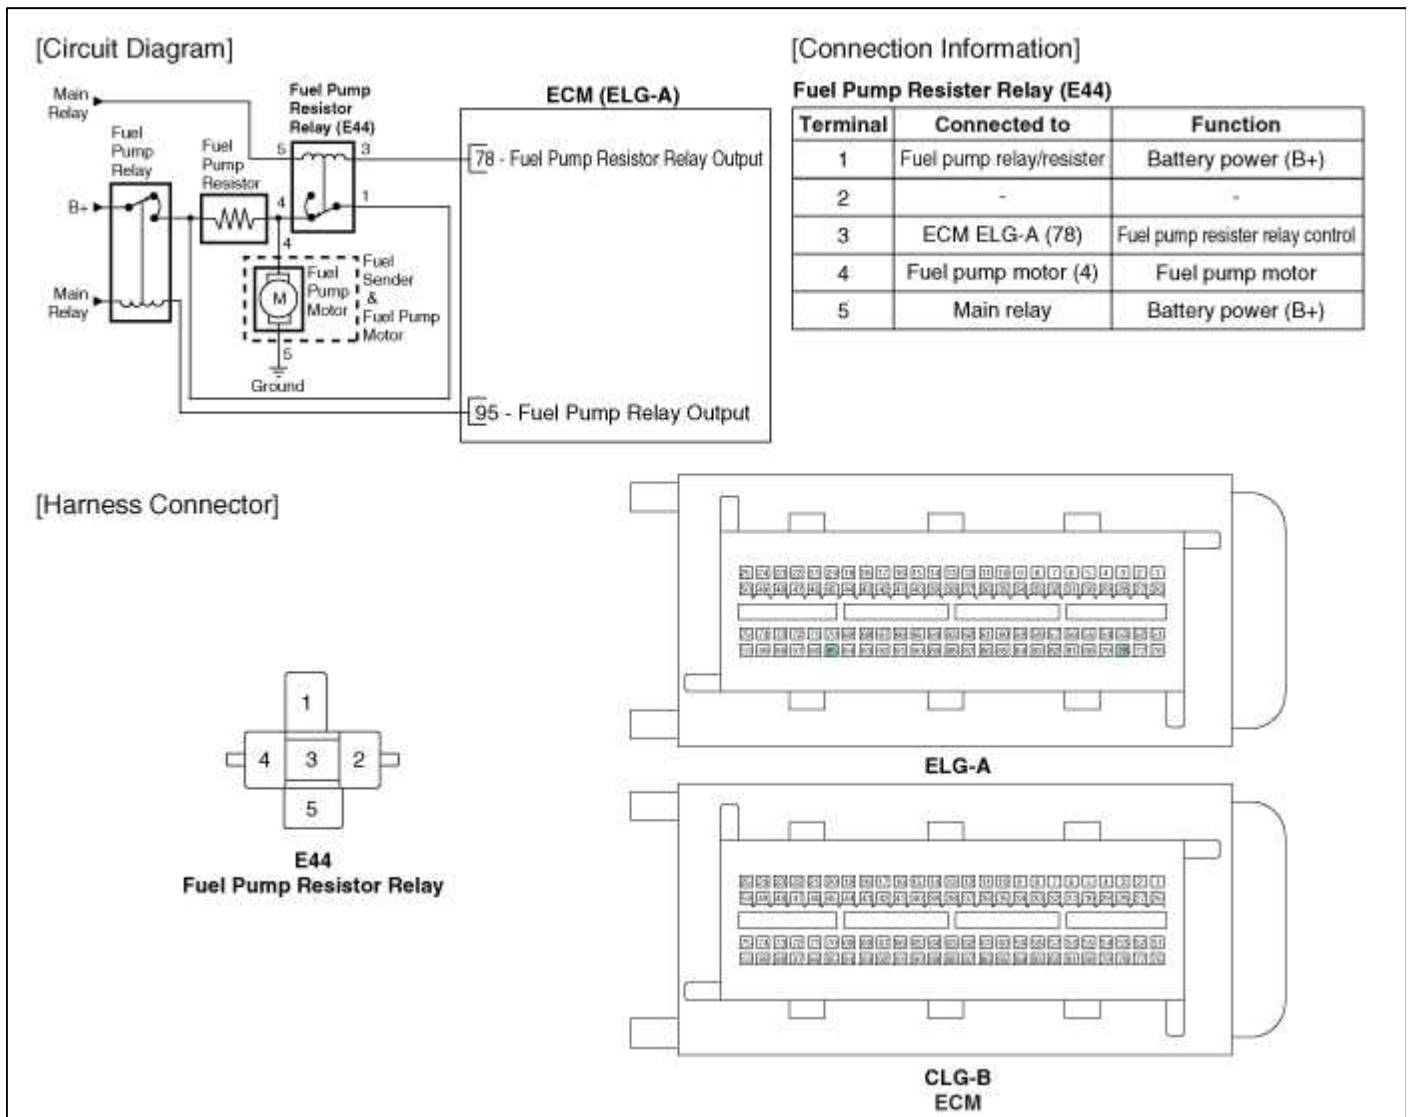


Fuel System > Engine Control System > Fuel Pump Resister > Repair procedures

Removal

1. Turn the ignition switch OFF and disconnect the battery negative (-) cable.
2. Disconnect the fuel pump resister connector.

3. Remove the fuel pump resistor (A) after removing the installation bolts (B).

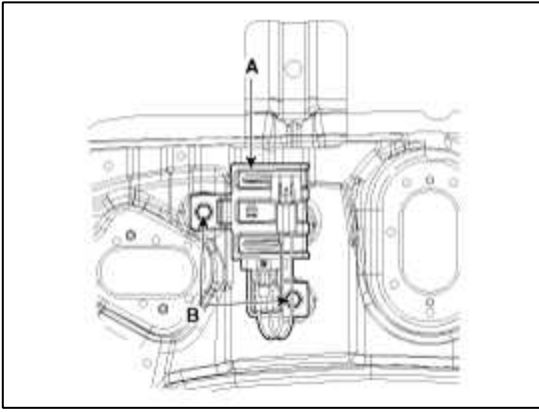

Installation


1. Installation is reverse of removal.

Fuel pump resistor installation bolt :


6.9 ~ 10.8 N.m (0.7 ~ 1.1 kgf.m, 5.1 ~ 8.0 lb-ft)

Fuel System > Fuel Delivery System > Components and Components Location

Components Location

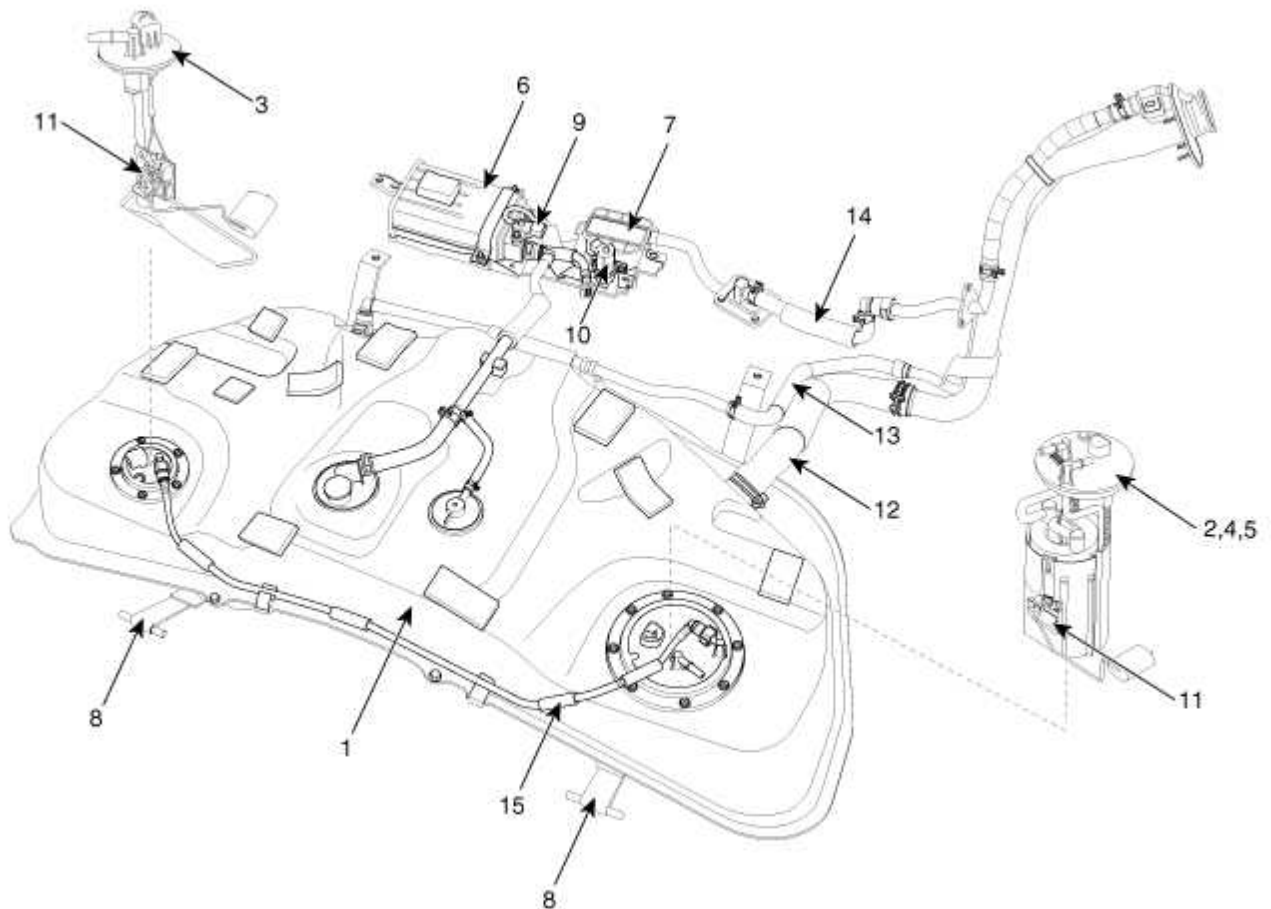

- | | |
|----------------------------|-------------------------------------|
| 1. Fuel tank | 9. Fuel Tank Pressure Sensor (FTPS) |
| 2. Fuel pump | 10. Canister Close Valve (CCV) |
| 3. Sub fuel sender | 11. Fuel Level Sensor (FLS) |
| 4. Fuel filter | 12. Fuel filler hose |
| 5. Fuel pressure regulator | 13. Leveling tube |
| 6. Canister | 14. Ventilation tube |
| 7. Fuel tank air filter | 15. Suction hose |
| 8. Fuel tank band | |

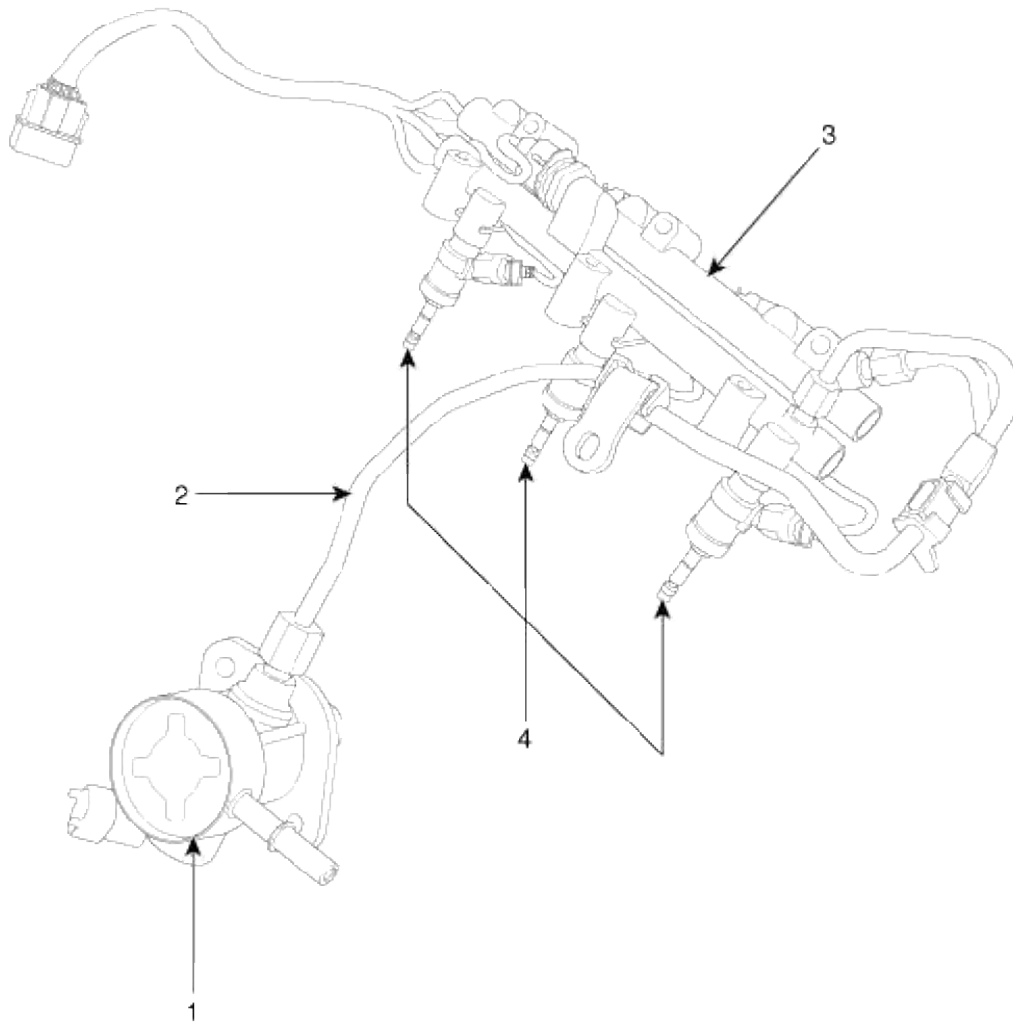[High Pressure Fuel Line]

1. High Pressure Fuel Pump	3. Delivery Pipe
2. High Pressure Fuel Pipe	4. Injector

WARNING

In case of removing the high pressure fuel pump, high pressure fuel pipe, delivery pipe, and injector, there may be injury caused by leakage of the high pressure fuel. So don't do any repair work right after engine stops.

Fuel System > Fuel Delivery System > Repair procedures**Fuel Pressure Test**

1. Release the residual pressure in fuel line (Refer to "Release Residual Pressure in Fuel Line" in this group).

CAUTION

When removing the fuel pump relay, a Diagnostic Trouble Code (DTC) may occur. Delete the code with the GDS after completion of "Release Residual Pressure in Fuel Line" work.


2. Install the Special Service Tool (SST).

- (1) Disconnect the fuel feed tube from the high pressure fuel pump.

CAUTION

There may be some residual high pressure even after "Release Residual Pressure in Fuel Line" work, so must cover the high pressure line connection part with a shop towel or a cloth to prevent residual fuel from spilling out before removing any high pressure fuel part. Then release pressure by carefully removing connection part. If not, it may result in the injury by high temperature and pressure fuel.

- (2) Install the special service tool for measuring the fuel pressure in between the fuel feed tube and the high pressure fuel pump (Refer to the figure below).

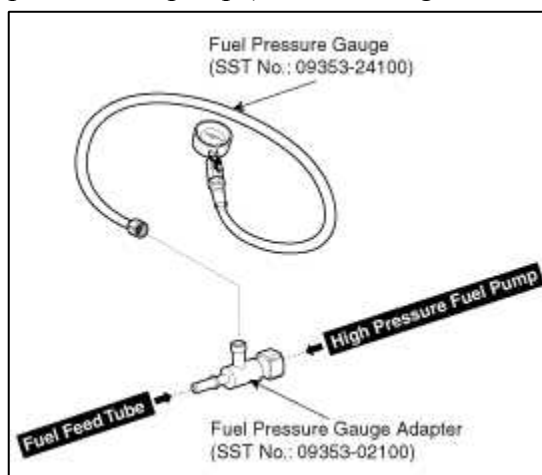

3. Inspect fuel leakage on connections among the fuel feed tube, the high pressure fuel pump, and the SST components with IG ON.

4. Measure Fuel Pressure.

- (1) Start the engine and measure the fuel pressure at idle.

Fuel Pressure: 480 ~ 519 kPa (4.9 ~ 5.3 kgf/cm², 69.6 ~ 75.3 psi)

NOTE

If the fuel pressure differs from the standard value, repair or replace the related part (Refer to the table below).

Fuel Pressure	Cause	Related Part
Too Low	Fuel filter clogged	Fuel Filter
	Fuel leakage	Fuel Pressure Regulator
Too High	Fuel pressure regulator stuck	Fuel Pressure Regulator

- (2) Stop the engine, and then check for the change in the fuel pressure gauge reading.

Standard Value: The gauge reading should hold for about 5 minutes after the engine stops

NOTE

If the gauge reading should not be held, repair or replace the related part (Refer to the table below).

Fuel Pressure (After Engine Stops)	Cause	Related Part
Fuel Pressure Drops Slowly	Leakage on injector	Injector
Fuel Pressure Drops Immediately	Check valve of fuel pump stuck open	Fuel Pump

- (3) Turn the ignition switch OFF.

5. Release the residual pressure in fuel line (Refer to “Release Residual Pressure in Fuel Line”).

CAUTION

When removing the fuel pump relay, a Diagnostic Trouble Code (DTC) may occur. Delete the code with the GDS after completion of “Release Residual Pressure in Fuel Line” work.

6. Test End

- (1) Remove the Special Service Tool (SST) from the fuel feed tube and the high pressure fuel pump.
- (2) Connect the fuel feed tube and the high pressure fuel pump.


Release Residual Pressure in Fuel Line

CAUTION

There may be some residual pressure even after “Release Residual Pressure in Fuel Line” work, so cover the hose connection with a shop towel to prevent residual fuel from spilling out before disconnecting any fuel connection.

1. Turn the ignition switch OFF and disconnect the battery (-) cable.


2. Remove the fuel pump relay (A).

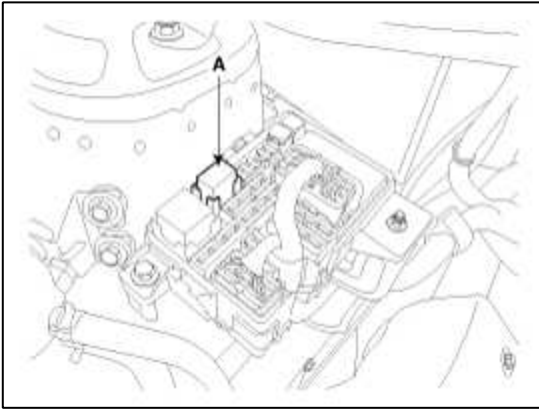

CAUTION

When removing the fuel pump relay, a Diagnostic Trouble Code (DTC) may occur. Delete the code with the GDS after completion of “Release Residual Pressure in Fuel Line” work.

3. Disconnect the high pressure fuel pump connector (A).

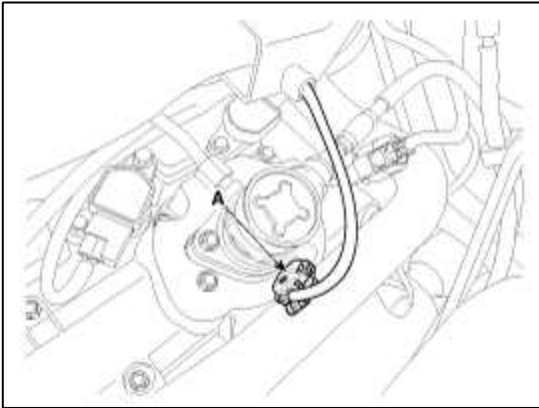


4. Connect the battery (-) cable.
5. Start the engine and let idle, and then turn the ignition switch OFF after the engine has stopped on its own.
6. Disconnect the battery (-) cable, and then install the fuel pump relay and the high pressure fuel pump connector.
7. Connect the battery (-) cable.
8. Delete the Diagnostic Trouble Code (DTC) related the fuel pump relay with the GDS.

Fuel System > Fuel Delivery System > Fuel Tank > Repair procedures


Removal

1. Preparation

- (1) Remove the rear seat cushion (Refer to “Seat” in BD group).
- (2) Remove the service cover of the fuel pump (A).

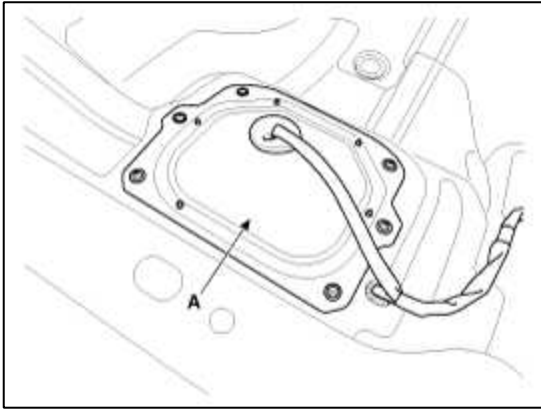


- (3) Disconnect the fuel pump connector (A).

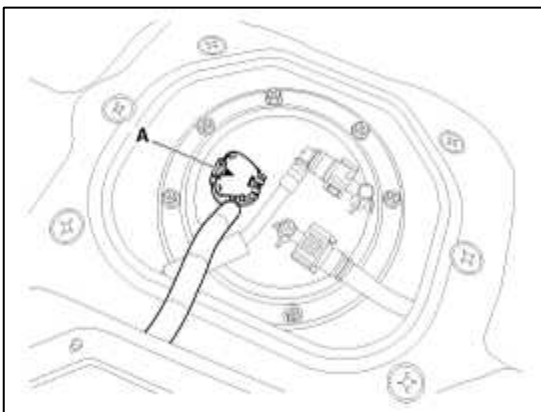


- (4) Idle the engine and wait until fuel in feed line is exhausted.
- (5) After engine stops, turn the ignition switch OFF.


2. Disconnect the fuel feed tube quick-connector (A).

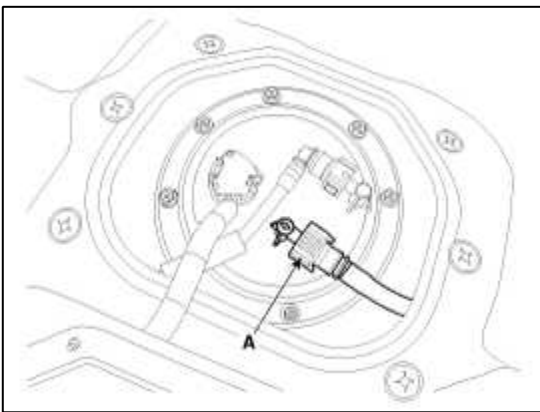


3. Remove the service cover of the sub fuel sender (A).

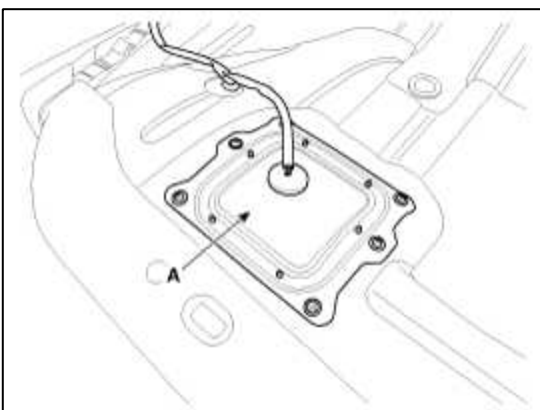


4. Disconnect the sub fuel sender connector (A).

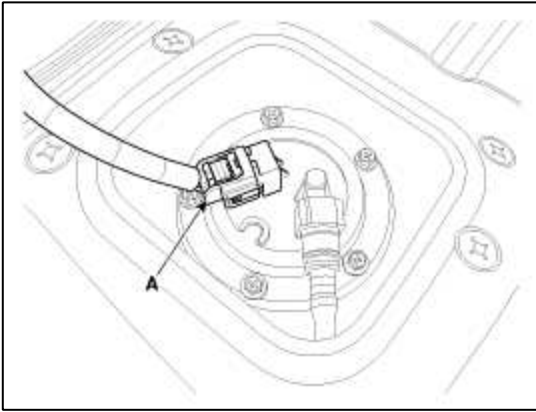

5. Remove the service cover of the canister (A) in trunk room.

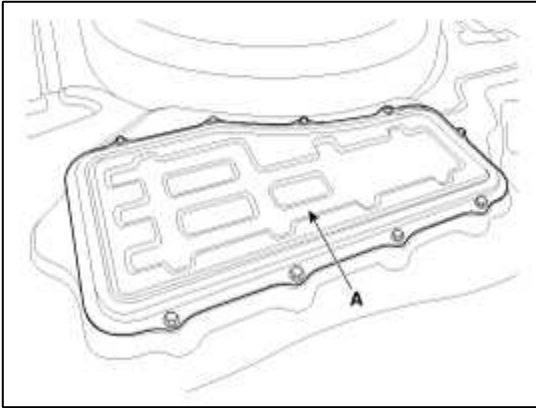

6. Disconnect the vapor tube quick-connector (A).

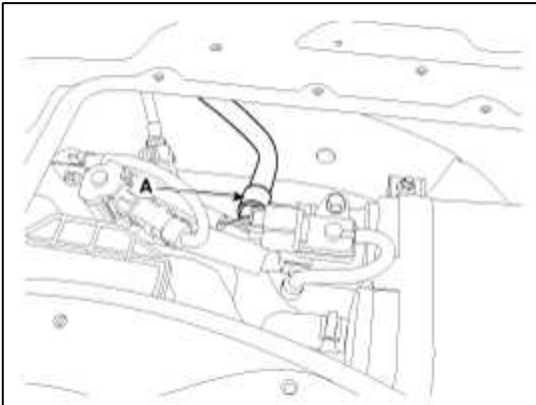


7. Lift the vehicle.


8. Remove the center muffler assembly (Refer to “Intake And Exhaust System” in EM group).

9. Remove the propeller shaft (Refer to “Propeller Shaft Assembly” in DS group).


10. Disconnect the fuel filler hose (A) and the leveling hose (B).

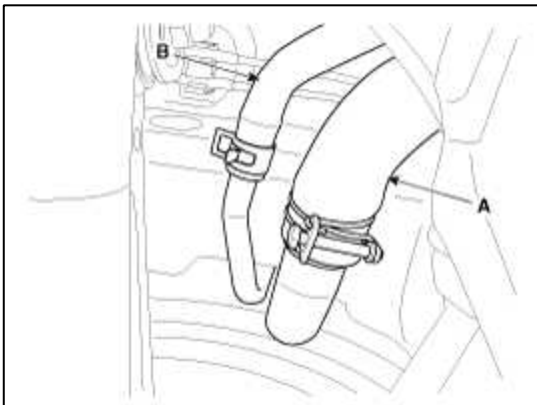

11. Remove the brake line bracket installation bolt (A).

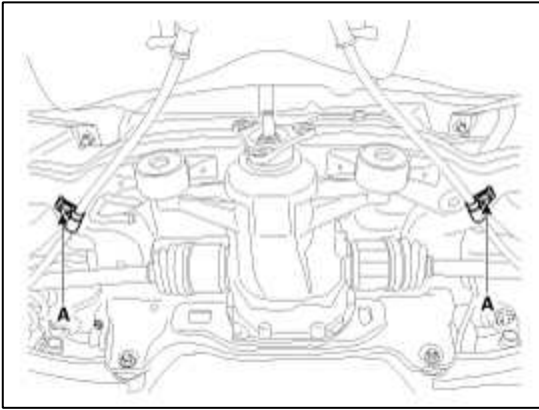

12. Detach the parking brake cable (A) from the fuel tank.
13. Remove the fuel tank (C) from the vehicle after removing the mounting nuts (B).

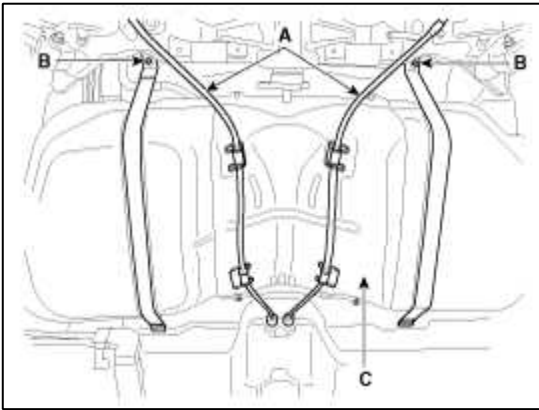

Installation

1. Installation is reverse of removal.

Fuel tank band installation nut:


39.2 ~ 54.0 N.m (4.0 ~ 5.5 kgf.m, 28.9 ~ 39.8 lb-ft)

Fuel System > Fuel Delivery System > Fuel Pump > Repair procedures


Removal

1. Preparation

- (1) Remove the rear seat cushion (Refer to “Seat” in BD group).
- (2) Remove the service cover of the fuel pump (A).

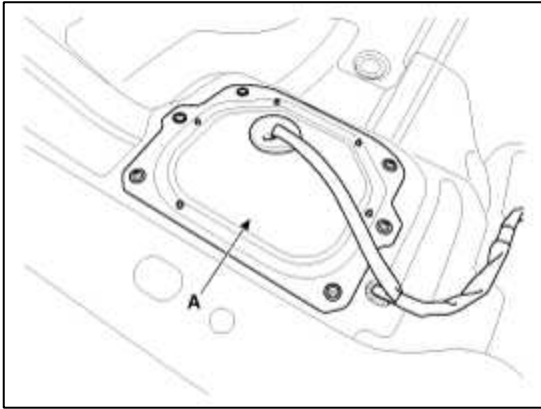


- (3) Disconnect the fuel pump connector (A).

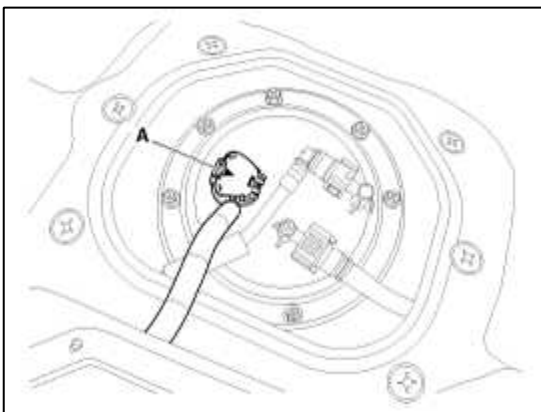


- (4) Idle the engine and wait until fuel in feed line is exhausted.
- (5) After engine stops, turn the ignition switch OFF.

2. Disconnect the fuel feed tube quick-connector (A) and the suction tube quick-connector (B).

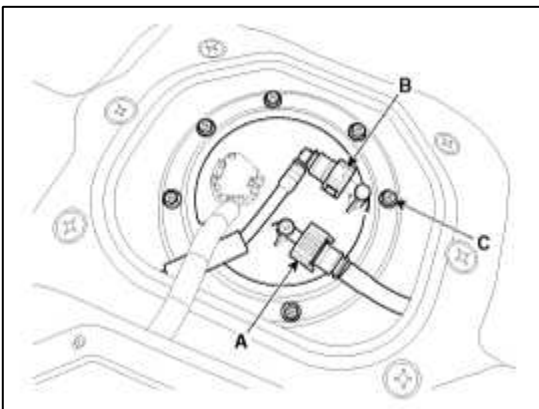

3. Remove the fuel pump from the fuel tank after removing the installation bolts (C).

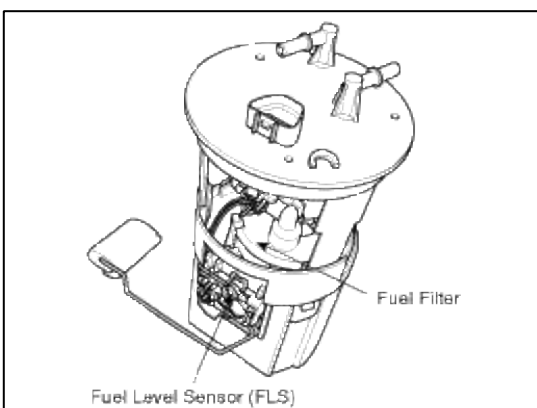

Installation

1. Installation is reverse of removal.

Fuel pump installation bolt :

2.0 ~ 2.9 N.m (0.2 ~ 0.3 kgf.m, 1.4 ~ 2.2 lb-ft)

CAUTION


When installing the fuel pump module, be careful not to get the seal-ring entangled.

Fuel System > Fuel Delivery System > Sub Fuel Sender > Repair procedures


Removal

1. Preparation

- (1) Remove the rear seat cushion (Refer to “Seat” in BD group).
- (2) Remove the service cover of the fuel pump (A).

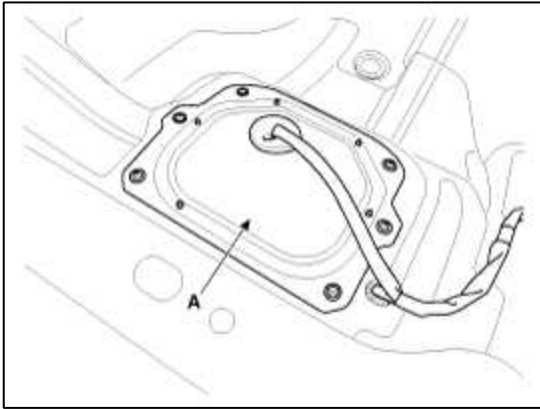


- (3) Disconnect the fuel pump connector (A).


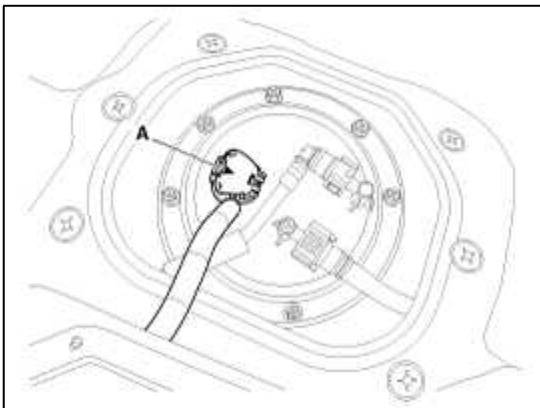


- (4) Idle the engine and wait until fuel in feed line is exhausted.
- (5) After engine stops, turn the ignition switch OFF.

2. Remove the service cover of the sub fuel sender (A).

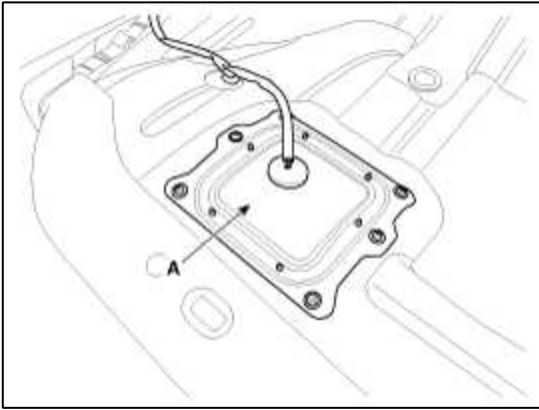

3. Disconnect the sub fuel sender connector (A).
4. Disconnect the suction tube quick-connector (B).
5. Remove the sub fuel sender from the fuel tank after removing the installation bolts (C).

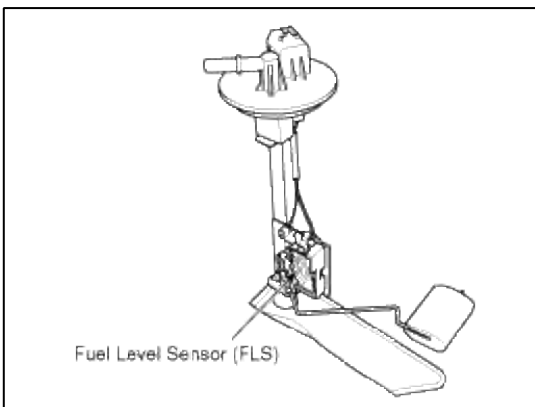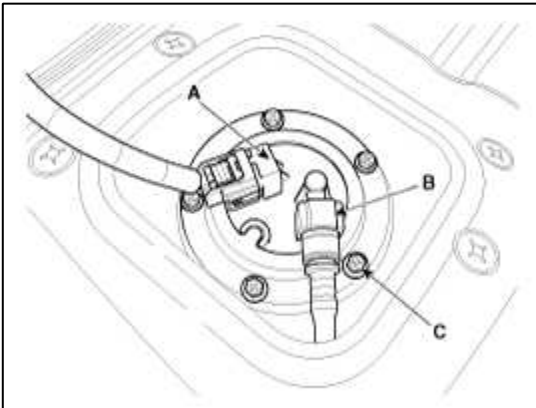

Installation

1. Installation is reverse of removal.


Sub fuel sender installation bolt :

2.0 ~ 2.9 N.m (0.2 ~ 0.3 kgf.m, 1.4 ~ 2.2 lb-ft)


CAUTION

When installing the sub fuel sender, be careful not to get the seal-ring entangled.



1. Remove the fuel pump (Refer to “Fuel Pump” in this group).
2. Disconnect the electric pump wiring connector (A) and the fuel sender connector (B).
3. Remove the fuel sender (C).

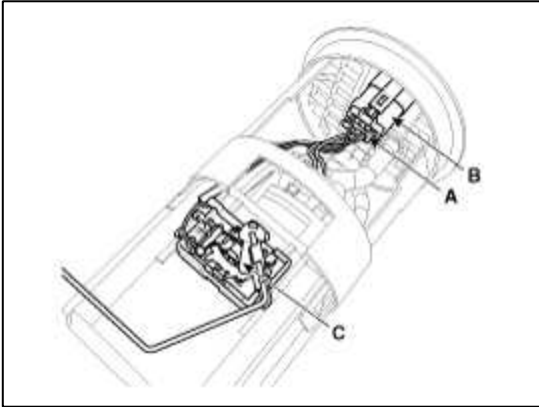

4. Disconnect the fuel feed line (A) from the fuel filter.
5. Separate the head assembly (B) with the hooks (C) released.

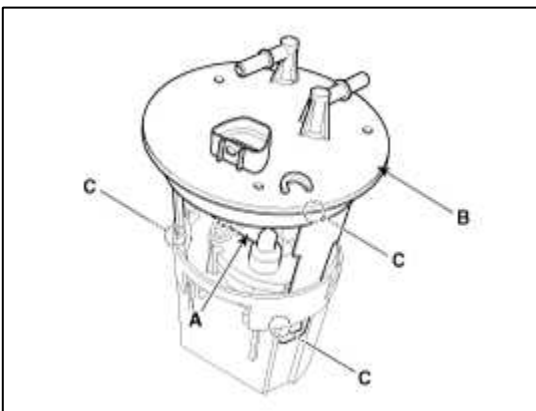


6. Disconnect the regulator hose (A) from the fuel filter (B).
7. Separatate the fuel filter (B) from the reservoir (D) with the hooks (C) released.

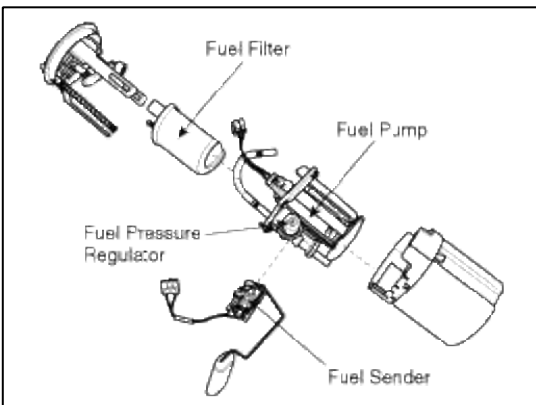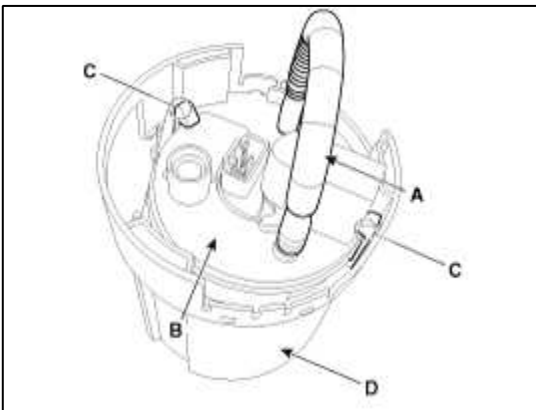


Removal


1. Disconnect the fuel filler hose (A) and the leveling hose (B).

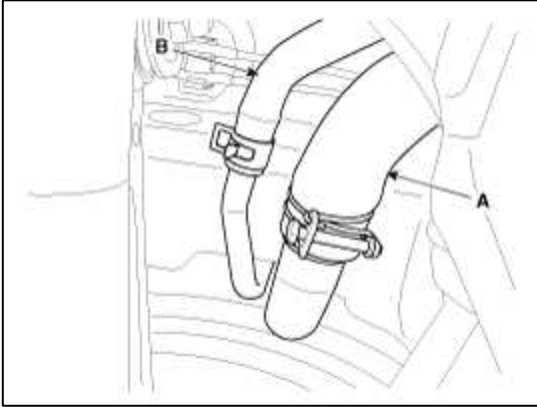


2. Disconnect the vapor hose quick-connector (A) after removing the trunk luggage trim.

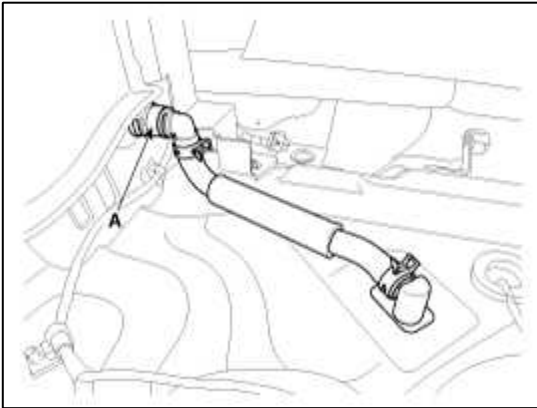

3. Remove the rear-LH wheel, tire, and the inner wheel house.
4. Remove the filler-neck installation bolts (A).

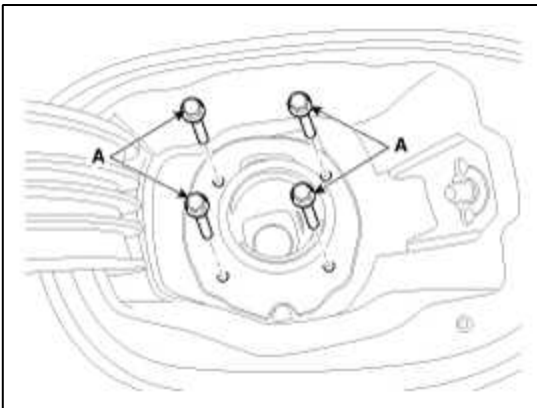

5. Remove the filler-neck assembly from the vehicle after removing the vapor hose mounting bolts (A) and the bracket mounting bolts (B).

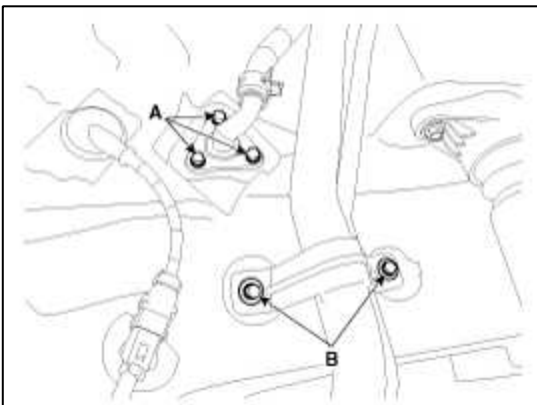

Installation

1. Installation is reverse of removal.

Filler-neck assembly installation bolt :

7.8 ~ 11.8 N.m (0.8 ~ 1.2 kgf.m, 5.8 ~ 8.7 lb-ft)


Filler-neck assembly installation nut :

3.9 ~ 5.9 N.m (0.4 ~ 0.6 kgf.m, 2.9 ~ 4.3 lb-ft)

Fuel System > Fuel Delivery System > Accelerator Pedal > Repair procedures

Removal

1. Turn the ignition switch OFF and disconnect the negative (-) battery cable.
2. Disconnect the accelerator position sensor connector (A).
3. Remove the accelerator pedal in the direction of "Remove Direction" in the figure after removing the mounting bolt (B).

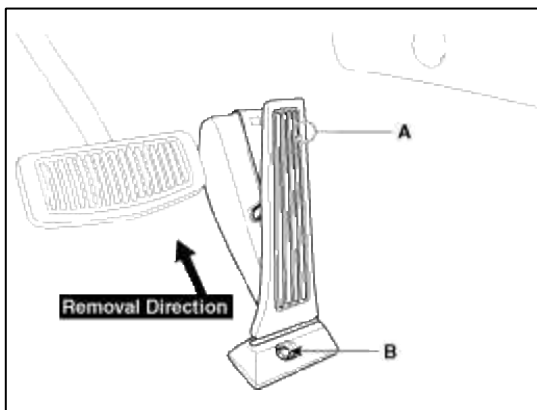

Installation

1. Installation is reverse of removal.

Accelerator pedal module installation bolt :

3.9 ~ 5.9 N.m (0.4 ~ 0.6 kgf.m, 2.9 ~ 4.3 lb-ft)

Fuel System > Fuel Delivery System > Delivery Pipe > Repair procedures

Removal

WARNING



In case of removing the high pressure fuel pump, high pressure fuel pipe, delivery pipe, and injector, there may be injury caused by leakage of the high pressure fuel. So don't do any repair work right after engine stops.

1. Turn the ignition switch OFF and disconnect the battery negative (-) cable.
2. Release the residual pressure in fuel line (Refer to "Release Residual Pressure in Fuel Line" in this group).

CAUTION


When removing the fuel pump relay, a Diagnostic Trouble Code (DTC) may occur. Delete the code with the GDS after completion of "Release Residual Pressure in Fuel Line" work.

3. Disconnect the injectors connector (A,B).

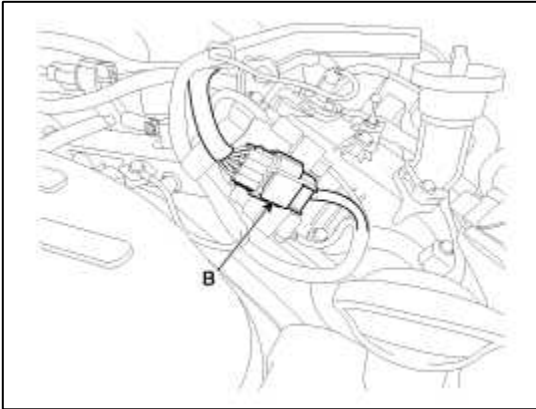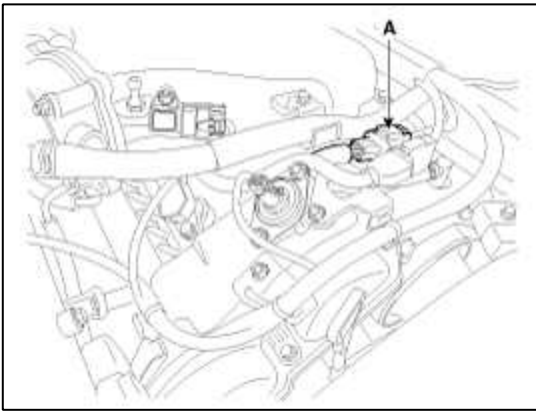


4. Remove the intake manifold (Refer to "Intake And Exhaust System" in EM group).

5. Remove the delivery pipe foam cover (A).

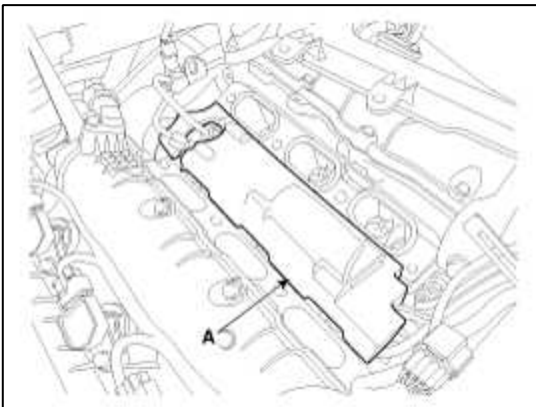


6. Disconnect the rail pressure sensor connector (A).

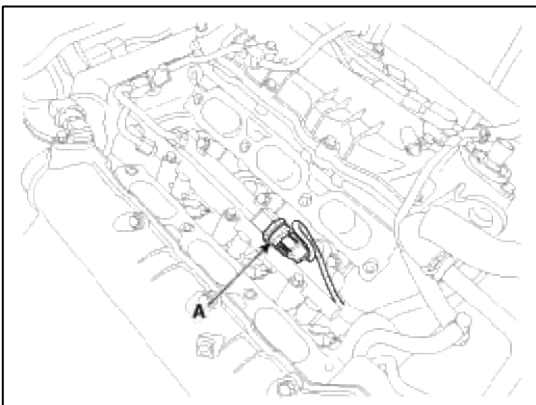


7. Remove the high pressure fuel pipe.



(1) Remove the bracket installation bolt (A).

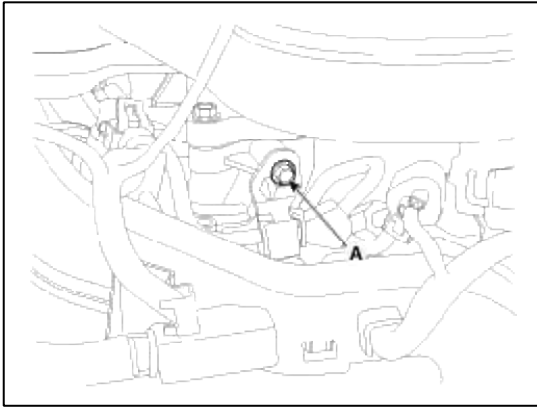



(2) Loosen the flange nut in the order of B,C with SST(09314-3V100).

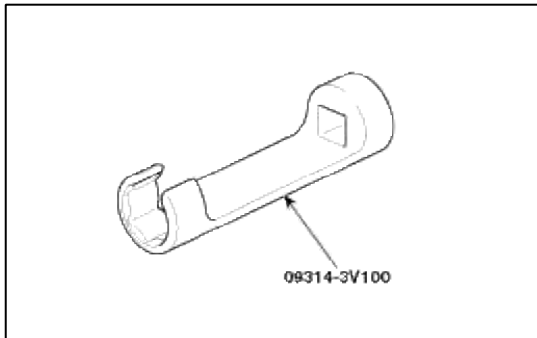

(3) Remove the high pressure pipe bracket bolt (D).

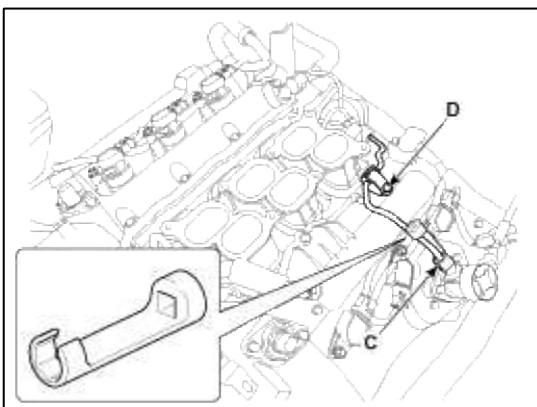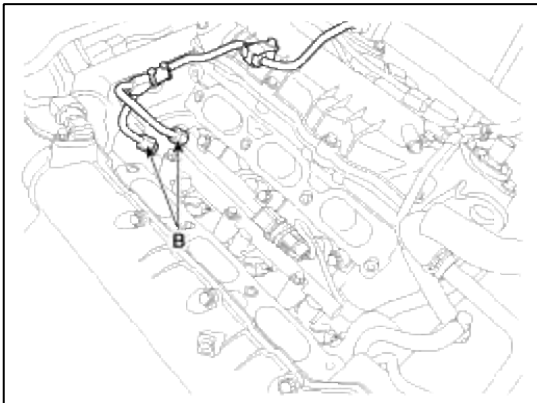

8. Remove the installation bolt (A), and then remove the delivery pipe and injector assembly from the engine.

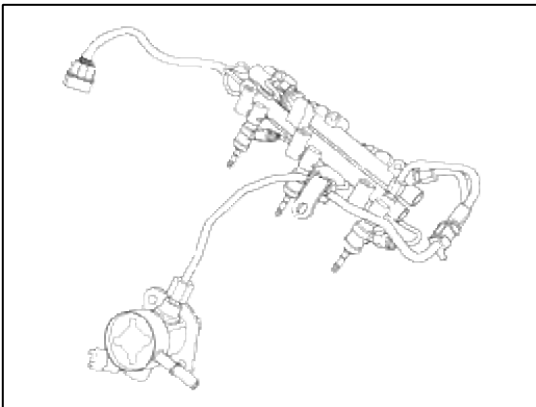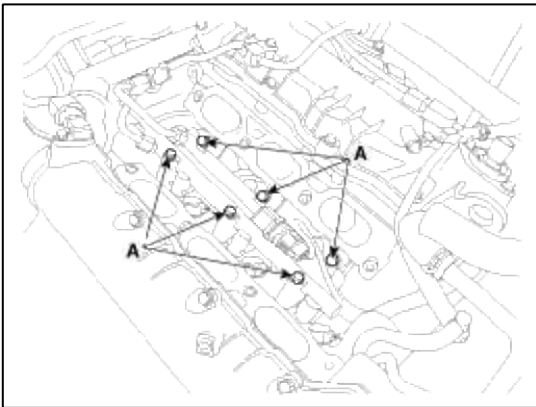

Installation

CAUTION

- Do not use already used injector fixing clip again.

CAUTION

- Install the component with the specified torques.
- Note that internal damage may occur when the component is dropped. In this case, use it after inspecting.

CAUTION

- Apply engine oil to the injector O-ring.
- Do not use already used injector O-ring again.

CAUTION

- Do not use already used bolt again.

CAUTION

- When insert the injector, be careful not to damage the injector tip.

1. Installation is reverse of removal.

Delivery pipe installation bolt:

18.6 ~ 23.5 N.m (1.9 ~ 2.4 kgf.m, 13.7 ~ 17.4 lb-ft)

High pressure fuel pipe installation nut:

29.4 ~ 35.3 N.m (3.0 ~ 3.6 kgf.m, 21.7 ~ 26.0 lb-ft)

Fuel System > Fuel Delivery System > High Pressure Fuel Pump > Repair procedures

Removal

WARNING


In case of removing the high pressure fuel pump, high pressure fuel pipe, delivery pipe, and injector, there may be injury caused by leakage of the high pressure fuel. So don't do any repair work right after engine stops.

1. Turn the ignition switch OFF and disconnect the battery negative (-) cable.
2. Release the residual pressure in fuel line (Refer to "Release Residual Pressure in Fuel Line" in this group).


CAUTION

When removing the fuel pump relay, a Diagnostic Trouble Code (DTC) may occur.
Delete the code with the GDS after completion of "Release Residual Pressure in Fuel Line" work.


3. Remove the foam cover (A).

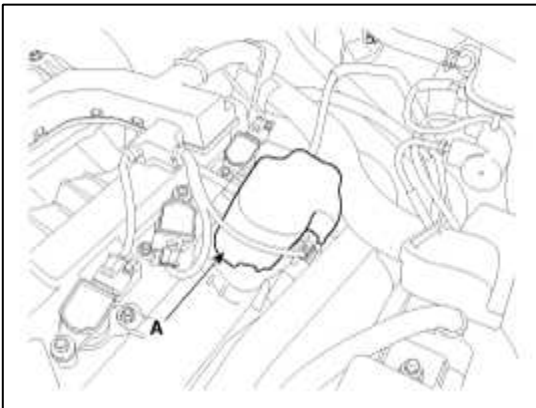

4. Disconnect the fuel pressure control valve connector (A) and the fuel feed tube quick-connector (B).

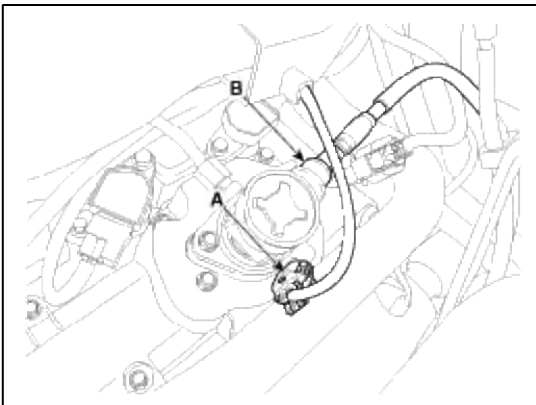


5. Remove the air cleaner and the air intake hose (Refer to "Intake And Exhaust System" in EM group).
6. Remove the pipe foam cover (A).

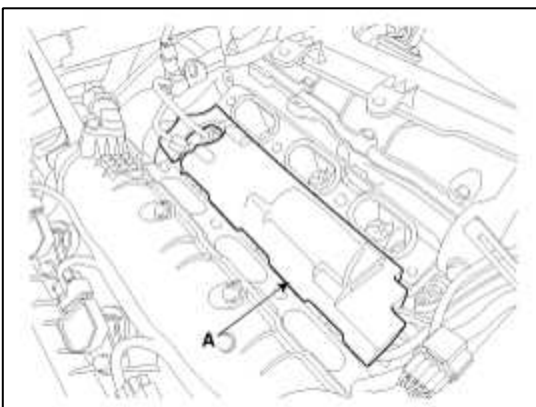


7. Remove the high pressure fuel pipe.



- (1) Remove the bracket installation bolt (A).

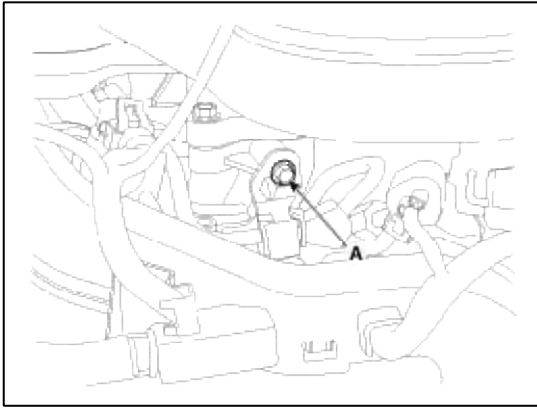

- (2) Remove the high pressure pipe flange nut (B,C) in order of A,B with the special service tool [SST No.: 09314-3V100]

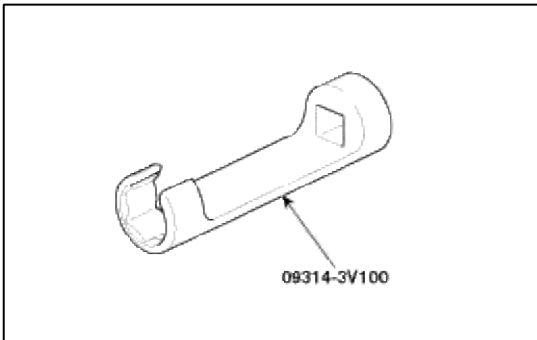


- (3) Remove the high pressure pipe bracket bolt (D).

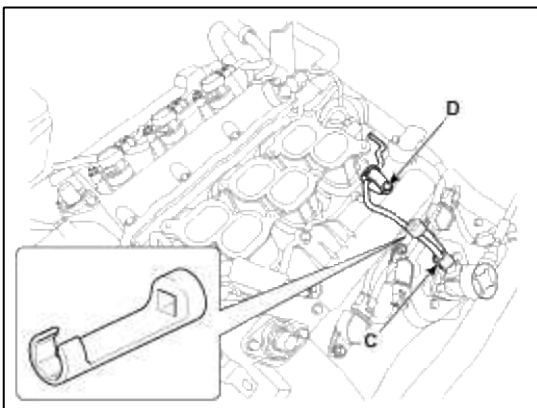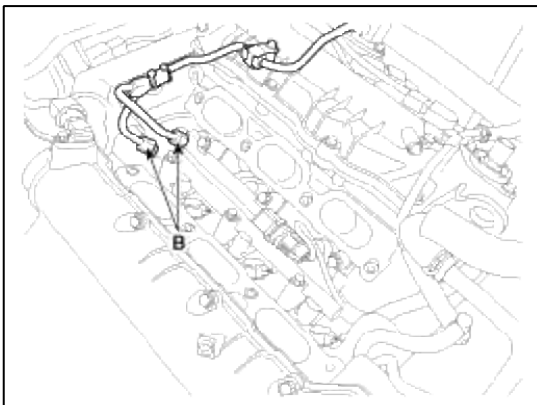

8. Remove the installation bolts (A), and then remove the high pressure fuel pump from the cylinder head assembly.

CAUTION


Unscrew in turn the two bolts in small step (0.5 turns). In case of fully unscrewing one of the two bolts with the other bolt installed, the housing surface of the cylinder head may be broken because of tension of the pump spring.

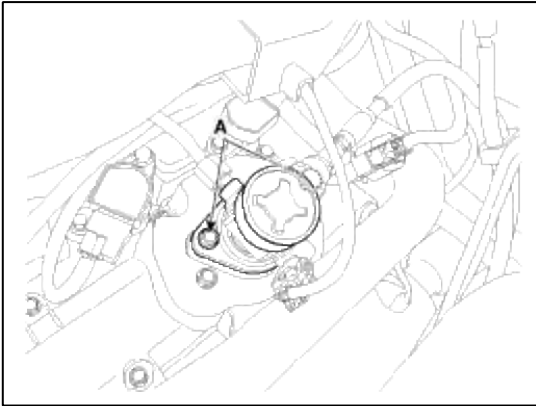

Installation

WARNING

- Be sure to check the low pressure fuel hose quick-connector (A) is completely connected to the high pressure fuel pump until a confirmation 'click' sound is heard.
- Be sure to re-check the low pressure fuel hose is completely connected to the high pressure fuel pump by pulling it after connecting.
- Be sure to install the high pressure fuel pipe (B) with the specified torques.
- Because fuel leak may cause fire, securely inspect leakage of all fuel line connection parts at engine start condition.

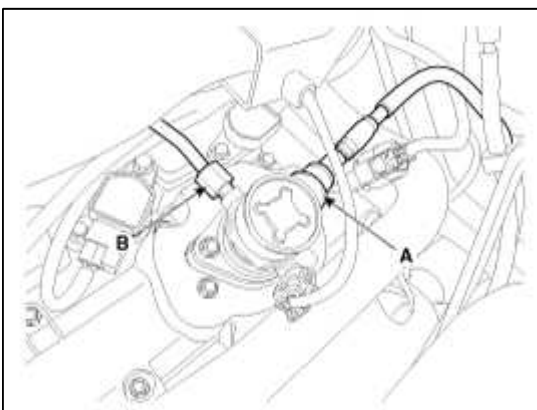

CAUTION

- Before installing the high pressure fuel pump, position the roller tappet in the lowest position by rotating the crankshaft. Otherwise the installation bolts may be broken because of tension of the pump spring.

CAUTION

- Do not reuse the used bolt.

CAUTION

- Do not reuse the used high pressure fuel pipe.

CAUTION

- When tightening the installation bolts of the high pressure fuel pump, tighten in turn the bolts in small step (0.5 turns) after tightening them with hand-screwed torque.

CAUTION


- Install the component with the specified torques.
- First hand-tighten the fasteners fully until they are not fastened any more in order to have them inserted in place and then completely tighten to the specified torque using a torque wrench.
If not tightening the bolts or nuts in a straight line with the mating bolt holes or fittings, it may cause a fuel leak due to broken threads.

CAUTION

- Note that internal damage may occur when the component is dropped. In this case, use it after inspecting.

CAUTION


- Apply engine oil to the O-ring (A) of the high pressure fuel pump, the roller tappet (B), and the protrusion (C). Also apply engine oil to the groove on the location where the protrusion (C) is installed.

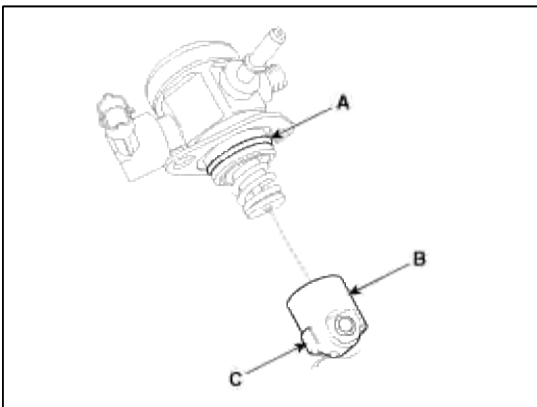

1. Installation is reverse of removal.

NOTE

Use the special service tool [SST No.: 09314-3V100] to install the high pressure fuel pipe.

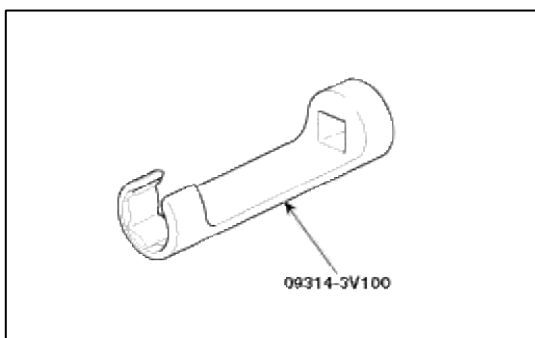

High pressure fuel pump installation bolt: 12.8 ~ 14.7 N.m (1.3 ~ 1.5 kgf.m, 9.4 ~ 10.9 lb-ft)

High pressure fuel pipe installation nut: 29.4 ~ 35.3 N.m (3.0 ~ 3.6 kgf.m, 21.7 ~ 26.0 lb-ft)

High pressure fuel pipe function block installation bolt: 9.8 ~ 11.8 N.m (1.0 ~ 1.2 kgf.m, 7.2 ~ 8.7 lb-ft)

GENESIS COUPE(BK) > 2013 > G 3.8 GDI > Heating,Ventilation, Air Conditioning

Heating,Ventilation, Air Conditioning > General Information > Specifications

Air conditioner

Item		Specification
Compressor	Type	10A17C
	Oil type & Capacity	FD46XG(PAG) 150 ± 15cc
	Pulley type	6PK-TYPE
	Displacement	180cc/rev
Condenser	Heat rejection	157,000 ± 5% kcal/hr
APT(A/C pressure transducer)	The method to measure the pressure	Voltage = 0.00878835 * Pressure + 0.5
Expansion valve	Type	Block
Refrigerant	Type	R-134a
	Capacity [oz.(g)]	20.1 ± 0.88 (570 ± 25)

Blower unit

Item		Specification
Fresh and recirculation	Operating method	Actuator
Blower	Type	Sirocco
	Speed step	Auto + 8 speed (Automatic) 1~8 (Manual)
	Speed control	Power mosfet
Air filter	Type	Particle filter

Heater and evaporator unit

Item		Specification
Heater	Type	Pin & Tube type
	Heating capacity	4,550 ± 5% kcal/hr
	Mode operating method	Actuator
	Temperature operating method	Actuator
Evaporator	Temperature control type	Evaporator temperature sensor
	A/C ON/OFF [°C(°F)]	ON : 2.1 ± 0.5 (35.7 ± 32.9), OFF: 0.6 ± 0.5 (33.0 ± 32.9)

Heating,Ventilation, Air Conditioning > General Information > Troubleshooting

Problem symptoms table

Before replacing or repairing air conditioning components, first determine if the malfunction is due to the refrigerant charge, air flow or compressor.

Use the table below to help you find the cause of the problem. The numbers indicate the priority of the likely cause of the problem. Check each part in order. If necessary, replace these parts.


After correcting the malfunction, check the complete system to ensure that performance is satisfactory.

Standard:

Symptom	Suspect Area
No blower operation	<ol style="list-style-type: none"> 1. Blower fuse 2. Blower relay 3. Blower motor 4. Power mosfet 5. Blower speed control switch 6. Wire harness
No air temperature control	<ol style="list-style-type: none"> 1. Engine coolant capacity 2. Heater control assembly
No compressor operation	<ol style="list-style-type: none"> 1. Refrigerant capacity 2. A/C Fuse 3. Magnetic clutch 4. Compressor 5. A/C pressure transducer 6. A/C switch 7. Evaporator temperature sensor 8. Wire harness
No cool air	<ol style="list-style-type: none"> 1. Refrigerant capacity 2. Refrigerant pressure 3. Drive belt 4. Magnetic clutch 5. Compressor 6. A/C pressure transducer 7. Evaporator temperature sensor 8. A/C switch 9. Heater control assembly Wire harness
Insufficient cooling	<ol style="list-style-type: none"> 1. Refrigerant capacity 2. Drive belt 3. Magnetic clutch 4. Compressor 5. Condenser 6. 7. 8. Expansion valve 9. Evaporator 10. Refrigerant lines 11. A/C pressure transducer 12. Heater control assembly
No engine idle-up when A/C switch ON	<ol style="list-style-type: none"> 1. Engine ECM 2. Wire harness
No air inlet control	<ol style="list-style-type: none"> 1. Heater control assembly

No mode control	1.Heater control assembly 2.Mode actuator
No cooling fan operation	1.Cooling fan fuse 2.Fan motor 3.Engine ECM 4.Wire harness

Heating,Ventilation, Air Conditioning > General Information > Special Service Tools

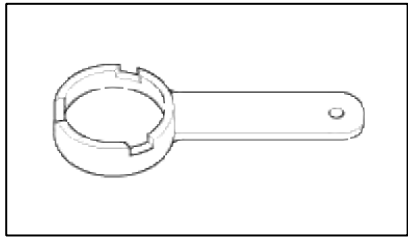Tool (Number and name)	Illustration	Use
09977-29000 Disc & hub assembly bolt remover		Removal and installation of disc & hub assembly


Heating,Ventilation, Air Conditioning > Air conditioning System > General Information

Instructions

When Handling Refrigerant


1. R-134a liquid refrigerant is highly volatile. A drop on the skin of your hand could result in localized frostbite. When handling the refrigerant, be sure to wear gloves.
2. It is standard practice to wear goggles or glasses to protect your eyes, and gloves to protect your hands. If the refrigerant splashes into your eyes, wash them with clean water immediately.
3. The R-134a container is highly pressurized. Never leave it in a hot place, and check storage temperature is below 52°C (126°F)
4. An electronic leak detector should be used to check the system for refrigerant leakage. Bear in mind that the R-134a, upon coming into contact with flame, produces phosgene, a highly toxic gas.
5. Use only recommended lubricant for R-134a systems. If lubricants other than the recommended one used, system failure may occur.
6. PAG lubricant absorbs moisture from the atmosphere at a rapid rate, therefore the following precautions must be observed:
 - A. When removing refrigerant components from a vehicle, cap the components immediately to prevent entry of moisture.
 - B. When installing refrigerant components to a vehicle, do not remove the cap until just before connecting the components.
 - C. Complete the connection of all refrigerant tubes and hoses without delay to prevent the A/C system from taking on moisture.
 - D. Use the recommended lubricant from a sealed container only.

7. If an accidental discharge in the system occurs, ventilate the work area before resum of service.

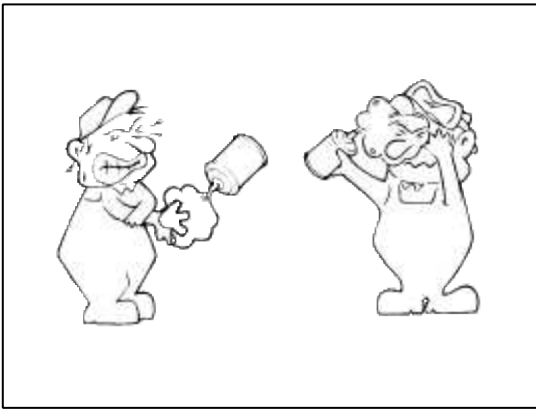

When replacing parts ON A/C system


1. Never open or loosen a connection before discharging the system.
2. Seal the open fittings of components with a cap or plug immediately to prevent intrusion of moisture or dust.
3. Do not remove the sealing caps from a Replacement component until it is ready to be installed.
4. Before connecting an open fitting, always install a new sealing ring. Coat the fitting and seal with refrigerant oil before making the connection.

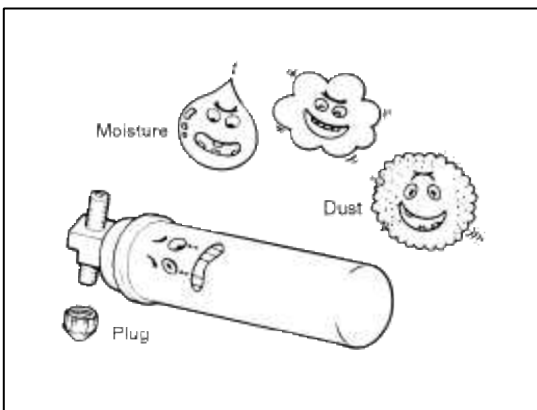

When Installing Connecting Parts

Flange with guide pin

Check the new O-ring for damage (use only the specified) and lubricate by using compressor oil. Tighten the nut to specified torque.

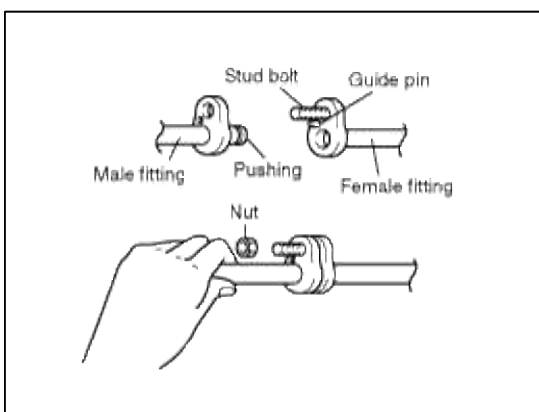

Size	Tightening torque [N.m (kg.m, lbf.ft)]	
	General bolt, nut	
	4T	7T
M6	5 - 6 (0.5 - 0.6, 3.6 - 4.3)	9 - 11 (0.9 - 1.1, 6.5 - 7.9)
M8	12 - 14 (1.2 - 1.4, 8.7 - 10)	20 - 26 (2.0 - 2.6, 14 - 18)
M10	25 - 28 (2.5 - 2.8, 18 - 20)	45 - 55 (4.5 - 5.5, 32 - 39)
Size	Flange bolt, nut	
	4T	7T
	M6	5 - 7 (0.5 - 0.7, 3.6 - 5.0)
M8	10 - 15 (1.0 - 1.5, 7 - 10)	19 - 28 (1.9 - 2.8, 14 - 20)
M10	21 - 31 (2.1 - 3.1, 15 - 22)	39 - 60 (3.9 - 6.0, 28 - 43)

NOTE

- T means tensile intensity, which is stamped on the head of bolt only numeral.


Handling tubing and fittings

The internal parts of the refrigeration system will remain in a state of chemical stability as long as pure moisture-free refrigerant and refrigerant oil are used. Abnormal amounts of dirt, moisture or air can upset the chemical stability and cause problems or serious damage.

The Following precautions must be observed

1. When it is necessary to open the refrigeration system, have everything you will need to service the system ready so the system will not be left open any longer than necessary.
2. Cap or plug all lines and fittings as soon as they are opened to prevent the entrance of dirt and moisture.
3. All lines and components in parts stock should be capped or sealed until they are ready to be used.
4. Never attempt to rebind formed lines to fit. Use the correct line for the installation you are servicing.
5. All tools, including the refrigerant dispensing manifold, the gauge set manifold and test hoses, should be kept clean and dry.

Heating, Ventilation, Air Conditioning > Air conditioning System > Description and Operation**Refrigeration cycle**

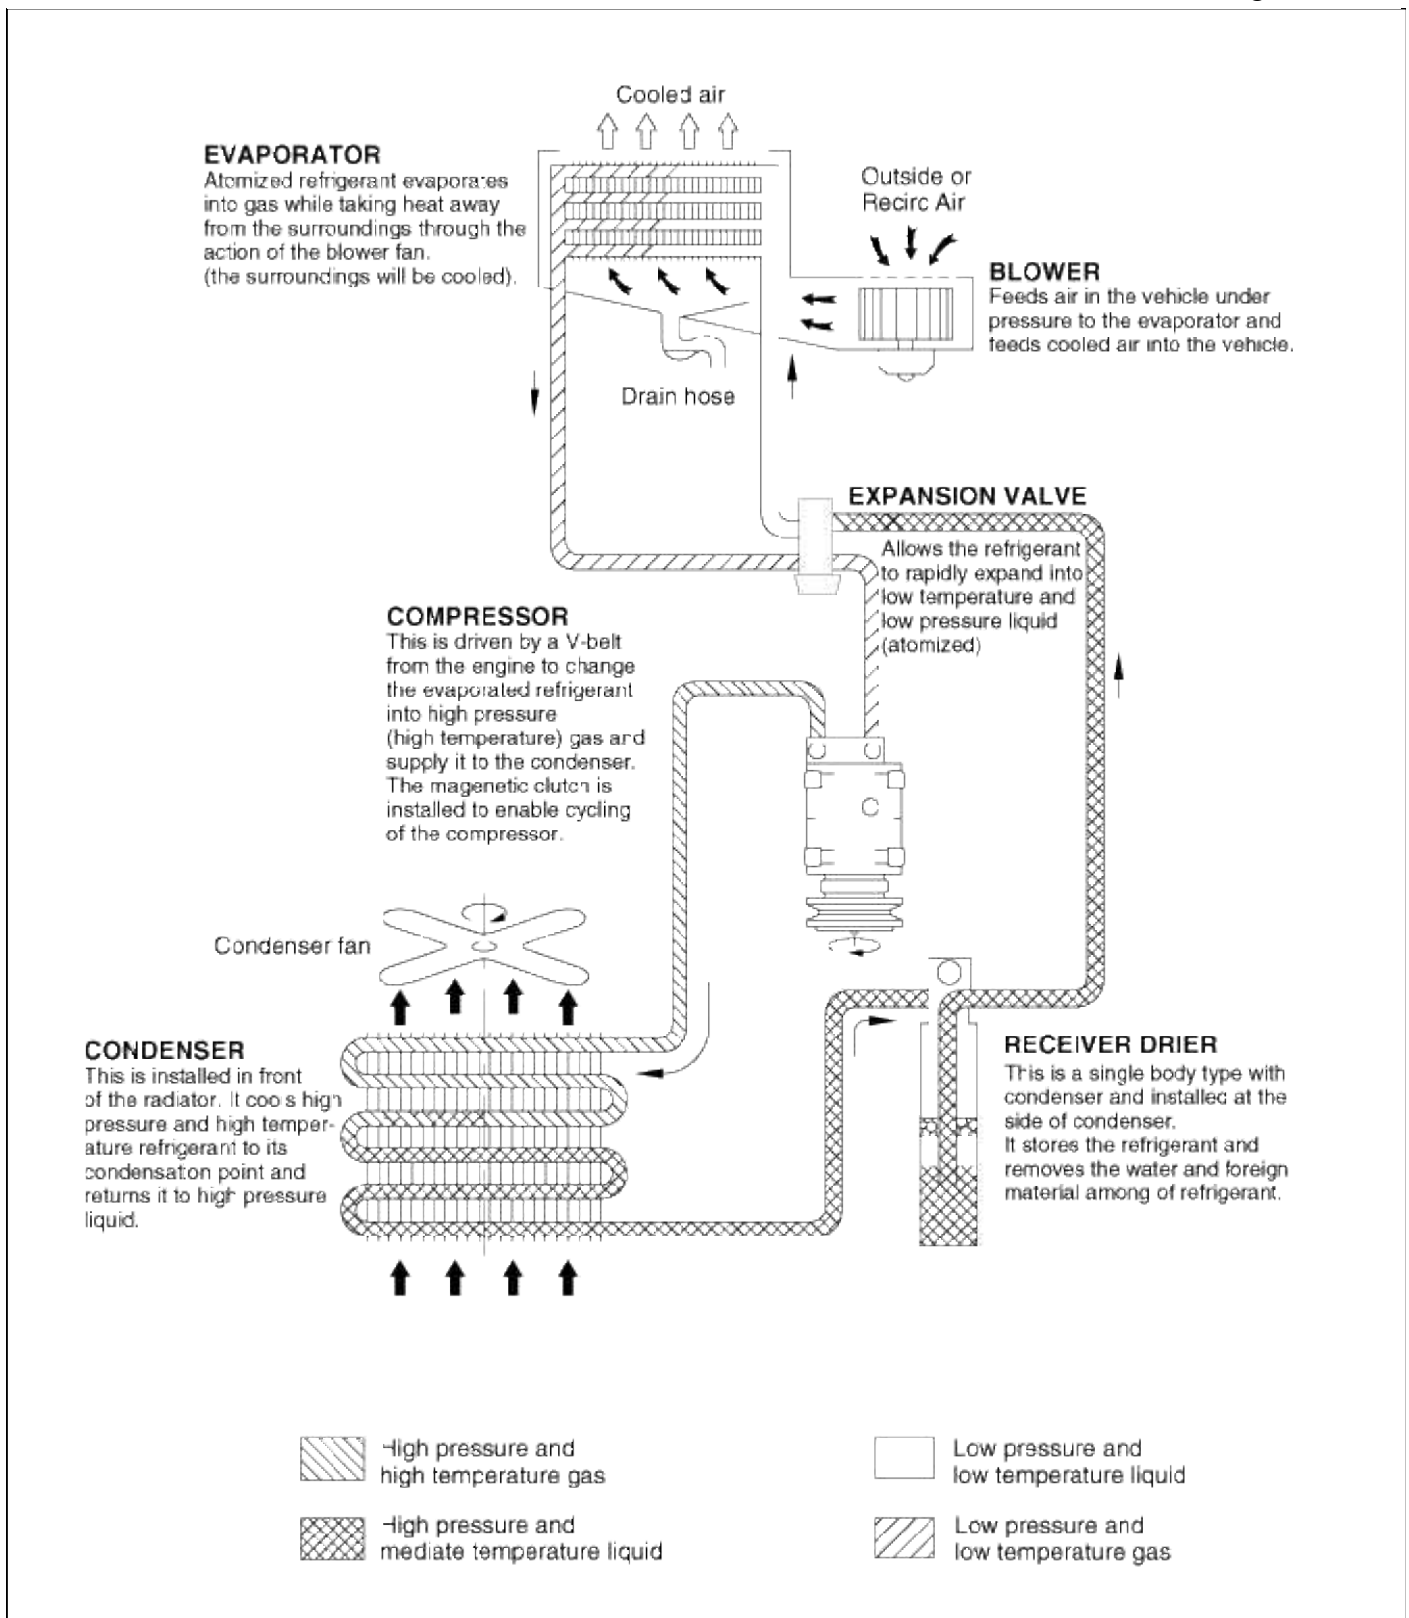

Heating, Ventilation, Air Conditioning > Air conditioning System > Repair procedures

Refrigerant system service basics

Refrigerant recovery

Use only service equipment that is U.L.-listed and is certified to meet the requirements of SAE J2210 to remove HFC-134a(R-134a) from the air conditioning system.




CAUTION

- Air conditioning refrigerant or lubricant vapor can irritate your eyes, nose, or throat.
- Be careful when connecting service equipment.
- Do not breathe refrigerant or vapor.

If accidental system discharge occurs, ventilate work area before resume of service.

Additional health and safety information may be obtained from the refrigerant and lubricant manufacturers.

1. Connect an R-134a refrigerant Recovery/Recycling/Charging System (A) to the high-pressure service port (B) and the low-pressure service port (C) as shown, following the equipment manufacturer's instructions.

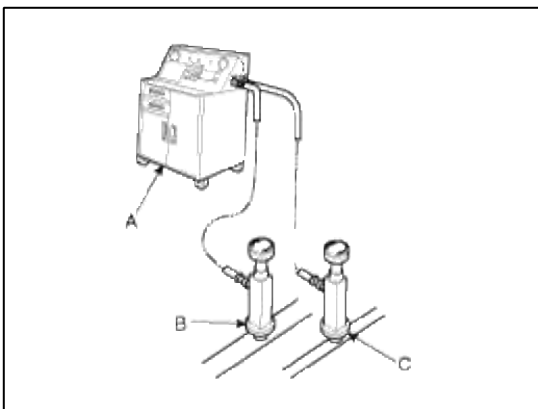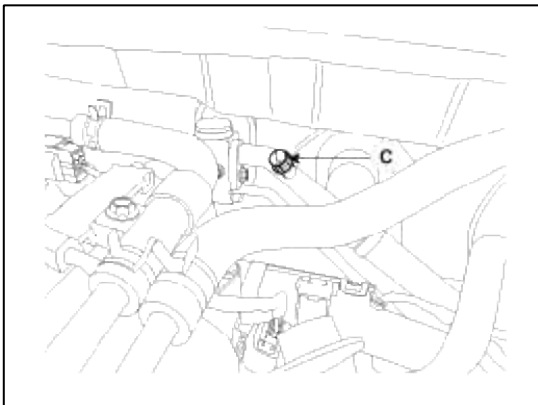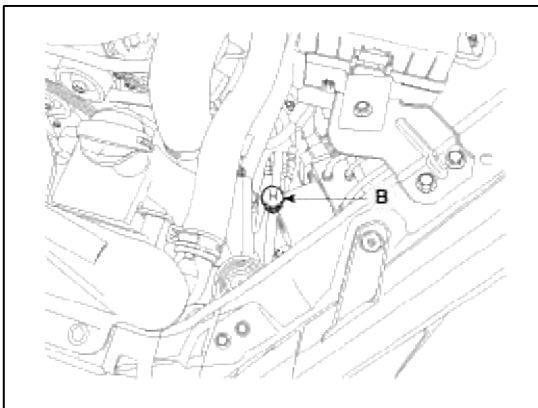

2. Measure the amount of refrigerant oil removed from the A/C system after the recovery process is completed. Be sure to install the same amount of new refrigerant oil back into the A/C system before charging.

System evacuation

Use only service equipment that is U.L.-listed and is certified to meet the requirements of SAE J2210 to remove HFC-134a(R-134a) from the air conditioning system.


CAUTION

- Air conditioning refrigerant or lubricant vapor can irritate your eyes, nose, or throat.
- Be careful when connecting service equipment.
- Do not breathe refrigerant or vapor.

If accidental system discharge occurs, ventilate work area before resume of service.

Additional health and safety information may be obtained from the refrigerant and lubricant manufacturers.

1. When an A/C System has been opened to the atmosphere, such as during installation or repair, it must be evacuated using an R-134a refrigerant Recovery/Recycling/Charging System. (If the system has been open for several days, the receiver/dryer should be replaced, and the system should be evacuated for several hours.)
2. Connect an R-134a refrigerant Recovery/Recycling/Charging System (A) to the high-pressure service port (B) and the low-pressure service port (C) as shown, following the equipment manufacturer's instructions.

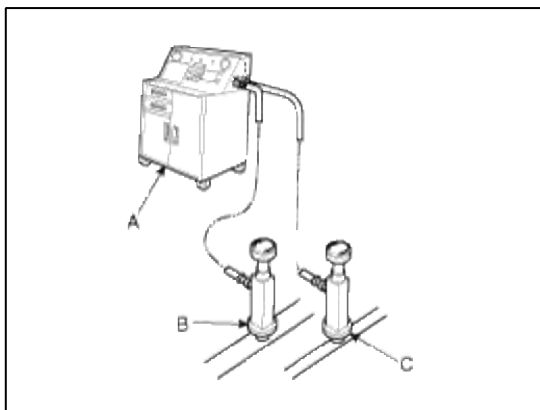

3. If the low-pressure does not reach more than 93.3 kPa (700 mmHg, 27.6 in.Hg) in 10 minutes, there is probably a leak in the system. Partially charge the system, and check for leaks (see Leak Test.).
4. Remove the low pressure valve from the low-pressure service port.

System charging

Use only service equipment that is U.L.-listed and is certified to meet the requirements of SAE J2210 to remove HFC-134a(R-134a) from the air conditioning system.


CAUTION

- Air conditioning refrigerant or lubricant vapor can irritate your eyes, nose, or throat.
- Be careful when connecting service equipment.
- Do not breathe refrigerant or vapor.

If accidental system discharge occurs, ventilate work area before resume of service.

Additional health and safety information may be obtained from the refrigerant and lubricant manufacturers.

1. Connect an R-134a refrigerant Recovery/Recycling/Charging System (A) to the high-pressure service port (B) as shown, following the equipment manufacturer's instructions.

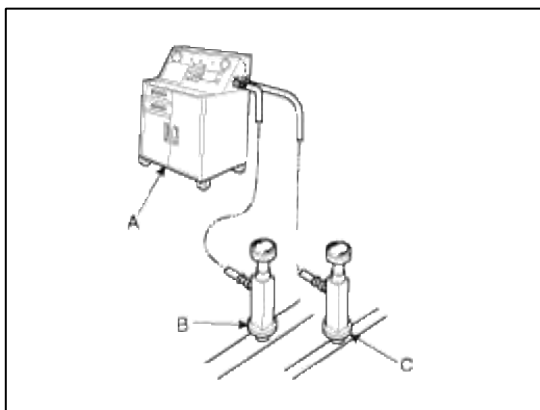

2. Add the same amount of new refrigerant oil to system that was removed during recovery. Use only specified refrigerant oil. Charge the system with 20.1 ± 0.88 oz. (570 ± 25 g) of R-134a refrigerant. Do not overcharge the system the compressor will be damaged.

Refrigerant leak test


Always conduct a leak test with an electronic leak detector whenever leakage or refrigerant is suspected and when conducting service operations which are accompanied by disassembly or loosening or connection fittings.

NOTE

In order to use the leak detector properly, read the manual supplied by the manufacturer.


If a gas leak is detected, proceed as follows:

1. Check the torque on the connection fittings and, if too loose, tighten to the proper torque. Check for gas leakage with a leak detector (A).
2. If leakage continues even after the fitting has been tightened, discharge the refrigerant from the system, disconnect the fittings, and check their seating faces for damage. Always replace, even if the damage is slight.
3. Check the compressor oil and add oil if required.
4. Charge the system and recheck for gas leaks. If no leaks are found, evacuate and charge the system again.

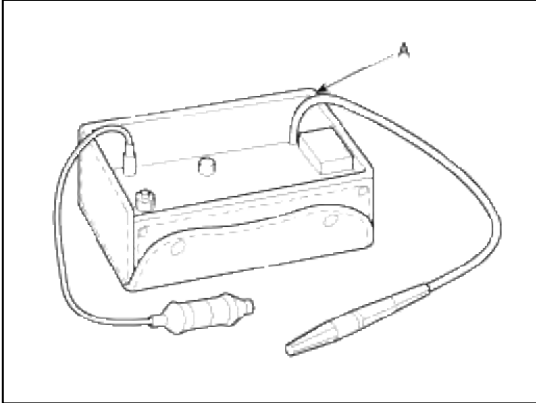
**Heating, Ventilation, Air Conditioning > Air conditioning System > Components and Components Location**

Component location index

Engine room

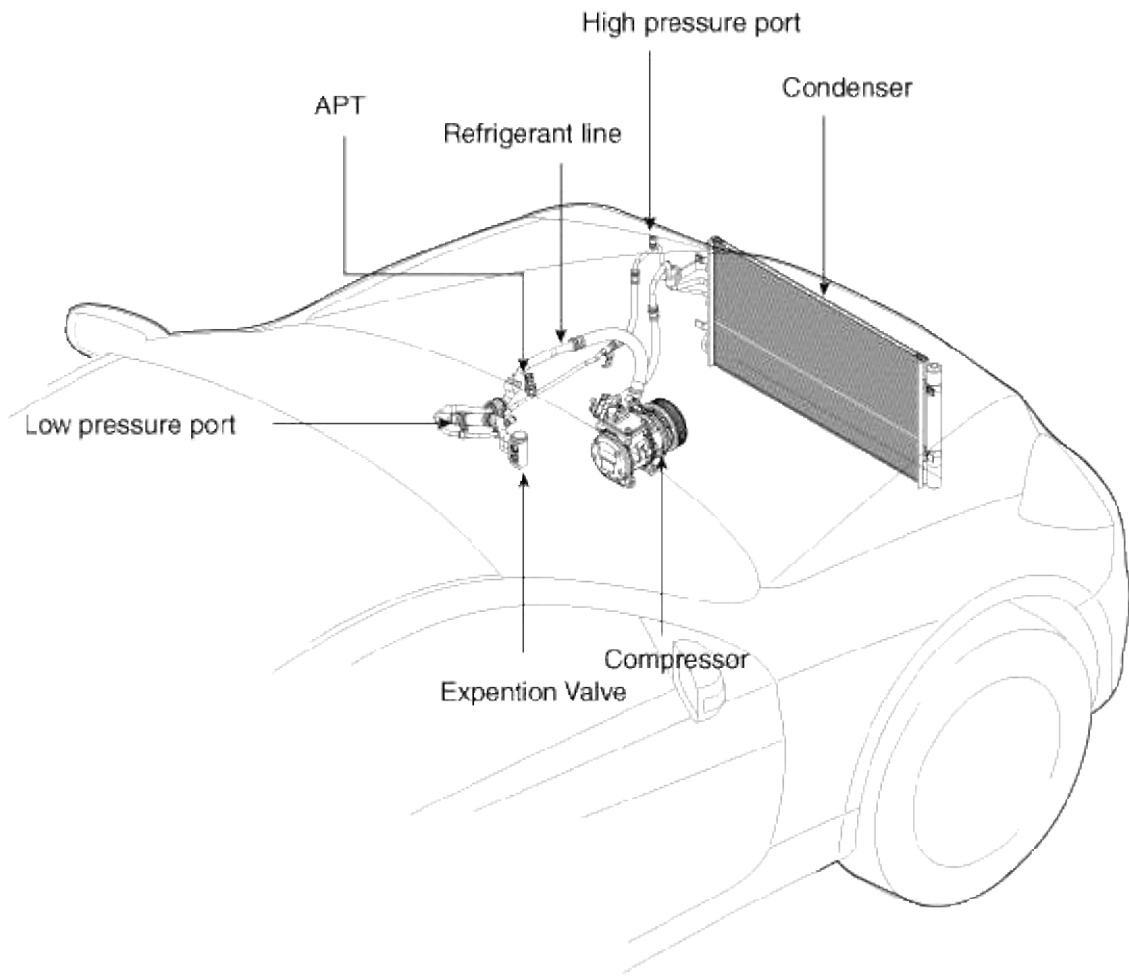

Interior

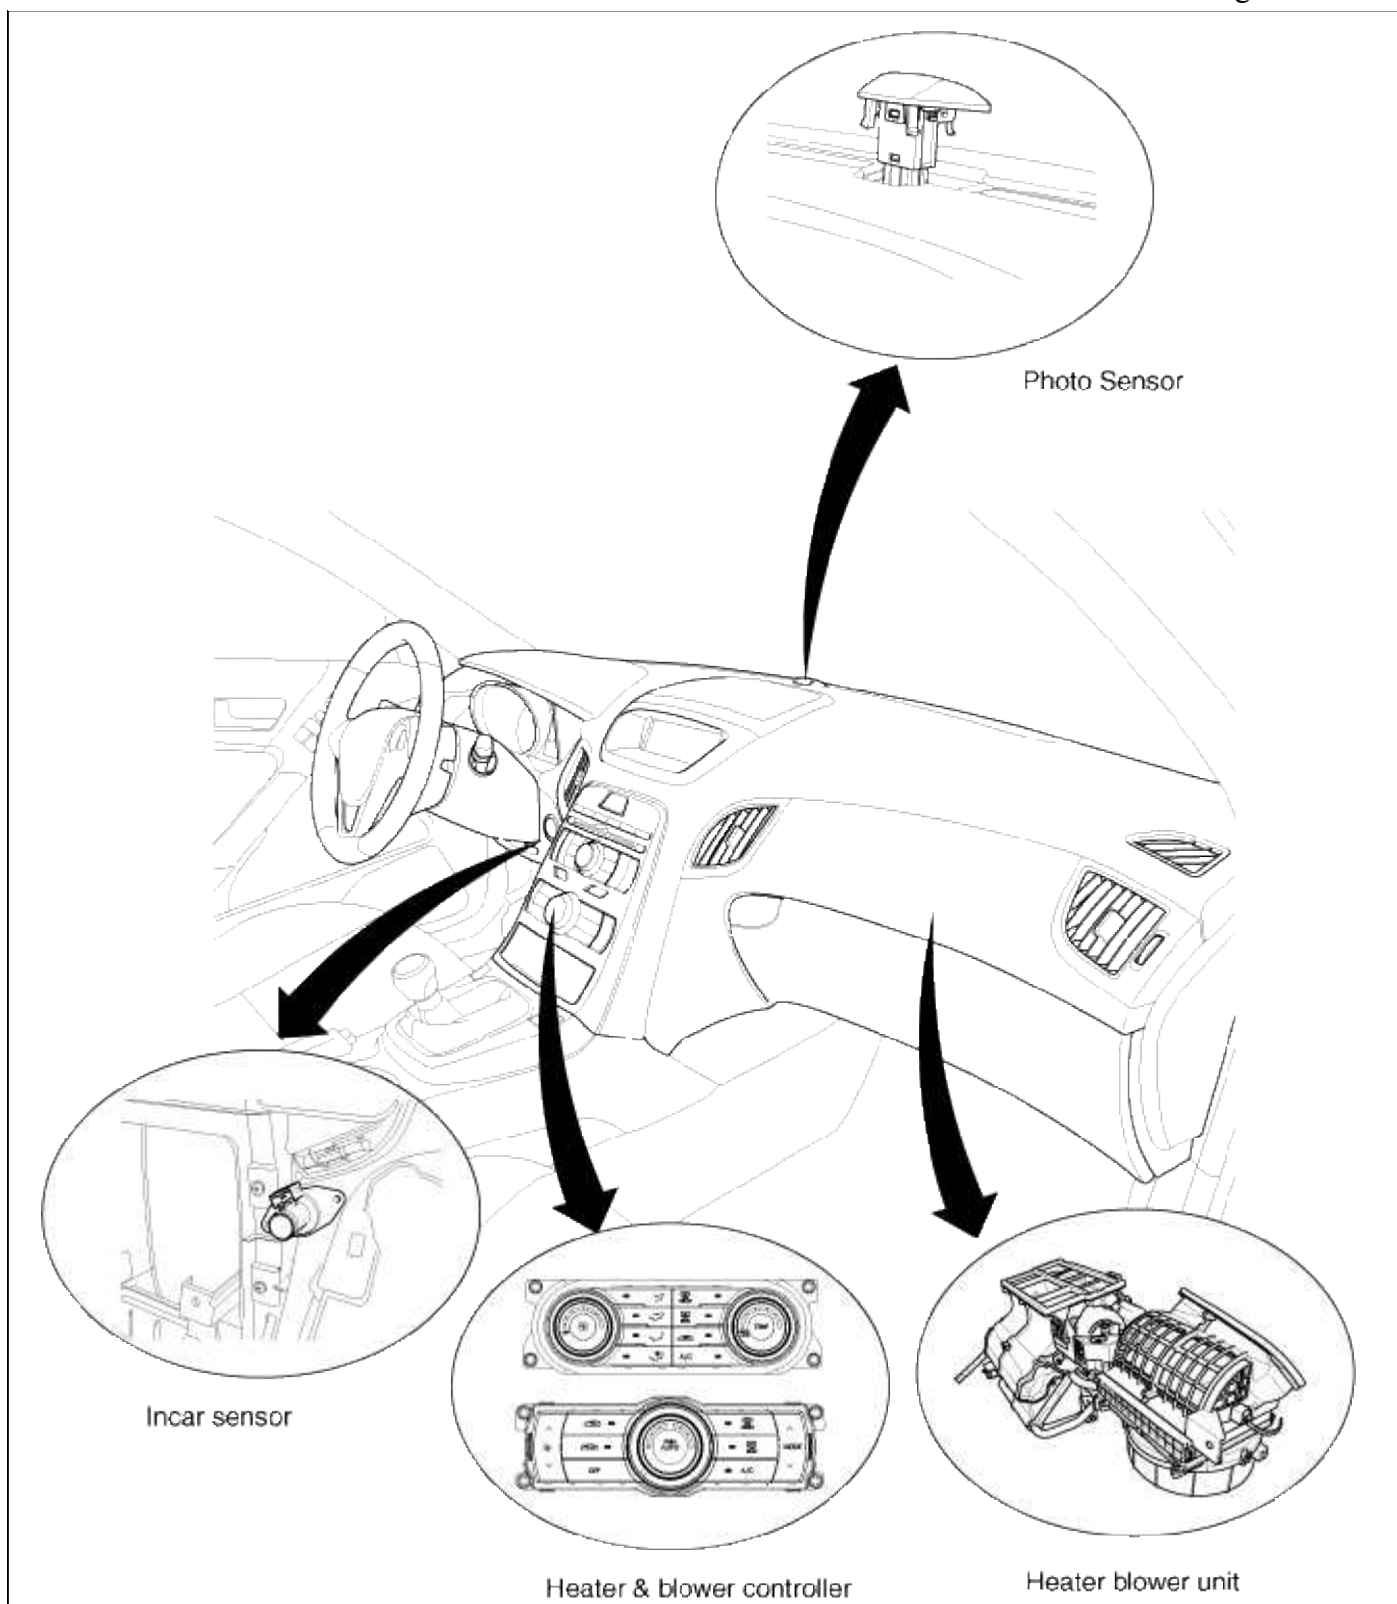

Heating, Ventilation, Air Conditioning > Air conditioning System > Compressor oil > Repair procedures

Oil Specification

1. The HFC-134a system requires synthetic (PAG) compressor oil whereas the R-12 system requires mineral compressor oil. The two oils must never be mixed.
2. Compressor (PAG) oil varies according to compressor model. Be sure to use oil specified for the model of compressor.

Handling of Oil

1. The oil should be free from moisture, dust, metal powder, etc.

2. Do not mix with other oil.
3. The water content in the oil increases when exposed to the air. After use, seal oil from air immediately. (HFC-134a Compressor Oil absorbs moisture very easily.)
4. The compressor oil must be stored in steel containers, not in plastic containers.

Compressor oil check

The oil used to lubricate the compressor is circulating with the refrigerant.

Whenever replacing any component of the system or a large amount of gas leakage occurs, add oil to maintain the original amount of oil.

Oil total volume in system : 150±15cc(5.3±0.53 fl.oz)

Oil Return Operation

There is close affinity between the oil and the refrigerant.

During normal operation, part of the oil recirculates with the refrigerant in the system. When checking the amount of oil in the system, or replacing any component of the system, the compressor must be run in advance for oil return operation. The procedure is as follows:

1. Open all the doors and the engine hood.
2. Start the engine and air conditioning switch to "ON" and set the blower motor control knob at its highest position.
3. Run the compressor for more than 20 minutes between 800 and 1,000 rpm in order to operate the system.
4. Stop the engine.

Replacement of Component Parts

When replacing the system component parts, supply the following amount of oil to the component parts to be installed.

Component parts to be installed	Amount of Oil
Evaporator	50 cc (1.70 fl.oz)
Condenser	30 cc (1.02 fl.oz)
Receiver/dryer	30 cc (1.02 fl.oz)
Refrigerant line (One piece)	10 cc (0.34 fl.oz)

For compressor Replacement, subtract the volume of oil drained from the removed compressor from the specified volume, and drain the calculated volume of oil from the new compressor:


The specified volume - volume of removed compressor = volume to drain from the new compressor.

NOTE

- Even if no oil is drained from the removed compressor, don't drain more than 50cc from new compressor.

Heating, Ventilation, Air Conditioning > Air conditioning System > Compressor > Components and Components Location

Components

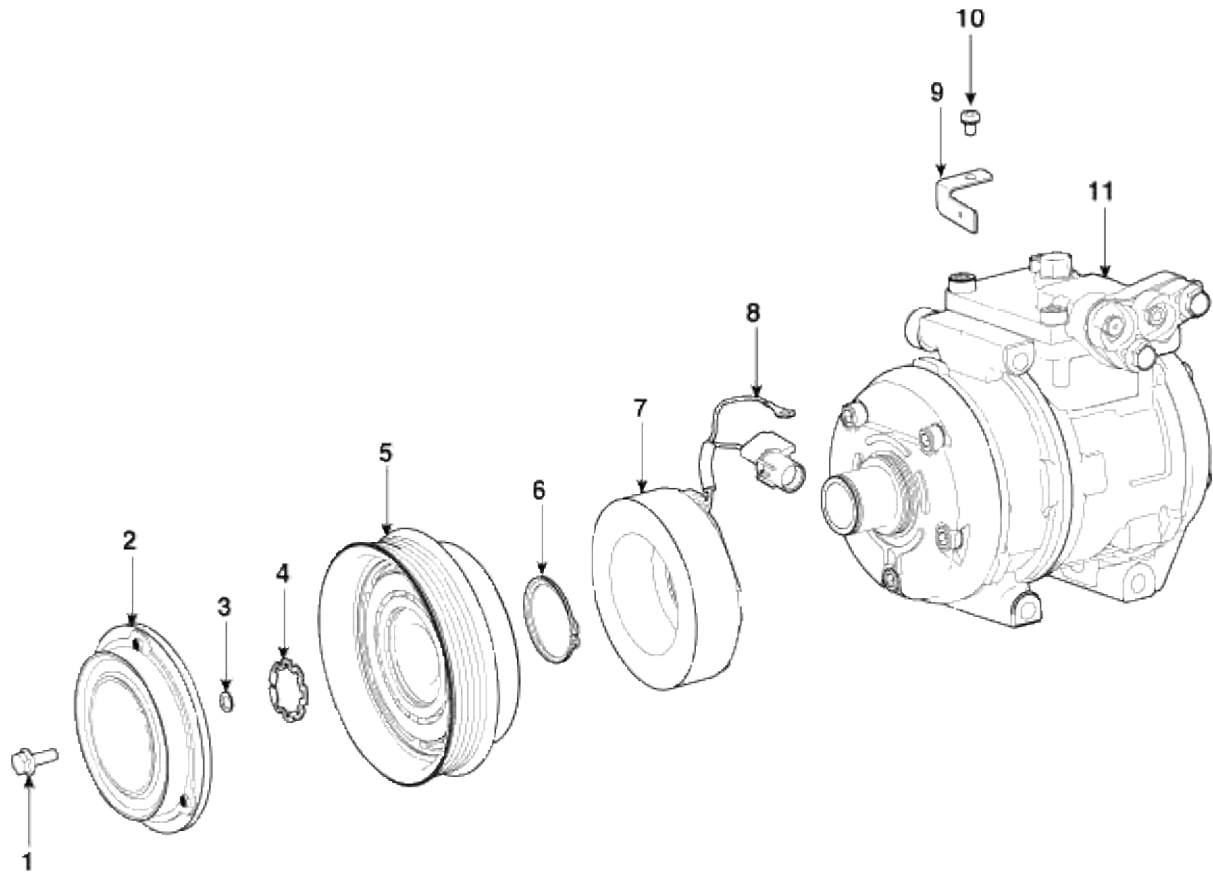


1. Bolt	6. Retainer ring
2. Disc & hub assembly	7. Field coil
3. Shim (Gap washer)	8. Connector
4. Retainer ring	9. Connector bracket
5. Pulley	10. Screw
	11. Compressor assembly

Heating, Ventilation, Air Conditioning > Air conditioning System > Compressor > Repair procedures

Removal


1. If the compressor is marginally operable, run the engine at idle speed, and let the air conditioning work for a few minutes, then shut the engine off.
2. Disconnect the negative cable from the battery.
3. Recover the refrigerant with a recovery/charging station.
4. Loosen the drive belt.

5. Remove the bolts, then disconnect the suction line (A) and discharge line (B) from the compressor. Plug or cap the lines immediately after disconnecting them to avoid moisture and dust contamination.
6. Disconnect the compressor clutch connector, and then remove 4 mounting bolts and the compressor (C).

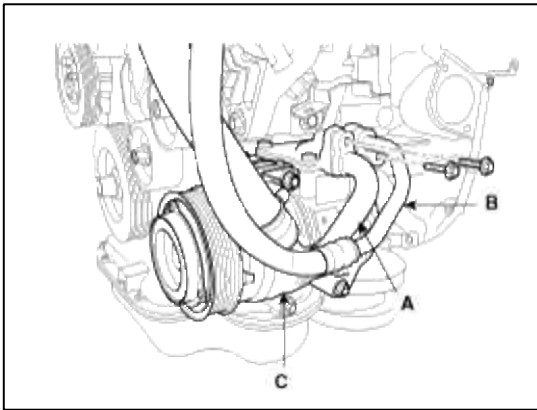

Installation

1. Make sure of the length of compressor mounting bolts, and then tighten it A→B→C→D order.

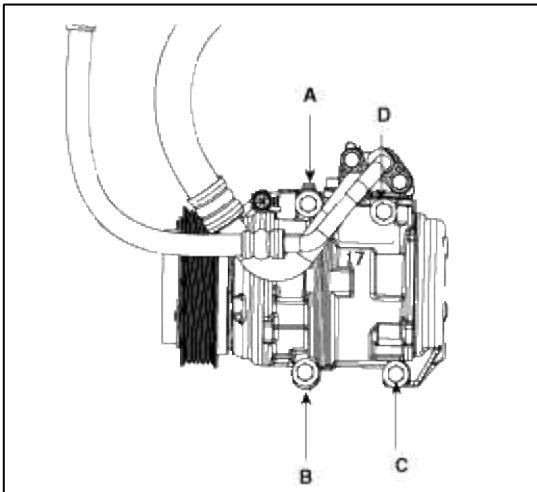


Bolt	Length
A	102mm
B	102mm
C	102mm
D	114mm

2. Install in the reverse order of removal, and note these items.
 - A. If you're installing a new compressor, drain all the refrigerant oil from the removed compressor, and measure its volume, Subtract the volume of drained oil from 120cc(4.20 oz.) the result is the amount of oil you should drain from the new compressor (through the suction fitting).
 - B. Replace the O-rings with new ones at each fitting, and apply a thin coat of refrigerant oil before installing them. Be sure to use the right O-rings for R-134a to avoid leakage.
 - C. To avoid contamination, do not return the oil to the container once dispensed, and never mix it with other refrigerant oils.
 - D. Immediately after using the oil, replace the cap on the container and seal it to avoid moisture absorption.
 - E. Do not spill the refrigerant oil on the vehicle; it may damage the paint; if the refrigerant oil contacts the paint, wash it off immediately.
 - F. Adjust the drive belt.
 - G. Charge the system and test its performance.

Inspection

1. Check the plated parts of the disc & hub assembly (A) for color changes, peeling or other damage. If there is damage, replace the clutch set.
2. Check the pulley (B) bearing play and drag by rotating the pulley by hand. Replace the clutch set with a new one if it is noisy or has excessive play/drag.

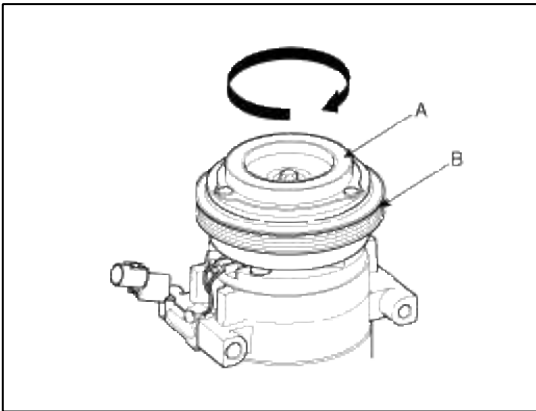


3. Measure the clearance between the pulley (B) and disc & hub assembly (A) all the way around. If the clearance is not within specified limits, remove the disc & hub assembly and add or remove shim (gap washer) as needed to increase or decrease clearance.


Clearance: $0.45 \pm 0.1\text{mm}$ ($0.018 \pm 0.004\text{ in.}$)

NOTE

The shims (gap washers) are available in seven thicknesses: 0.7mm, 0.8mm, 0.9mm, 1.0mm, 1.1mm, 1.2mm and 1.3mm.

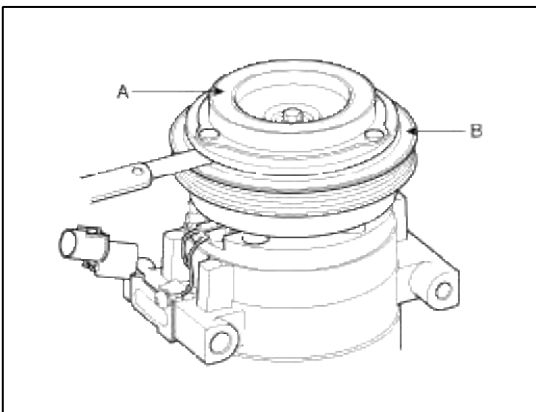


4. Check operation of the magnetic clutch. Connect the compressor side terminals to the battery (+) terminal to the compressor body. Check the magnetic clutch operating noise to determine the condition.

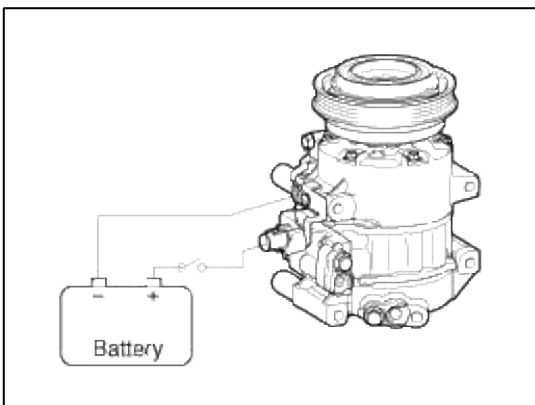


Disassembly

1. Remove the center bolt (A) while holding the disc & hub assembly with a commercially available disc & hub assembly bolt remover; Special tool number 09977-29000.

TORQUE : 10~15N.m (1.02~1.53kgf.m, 7.37~11lb.ft)

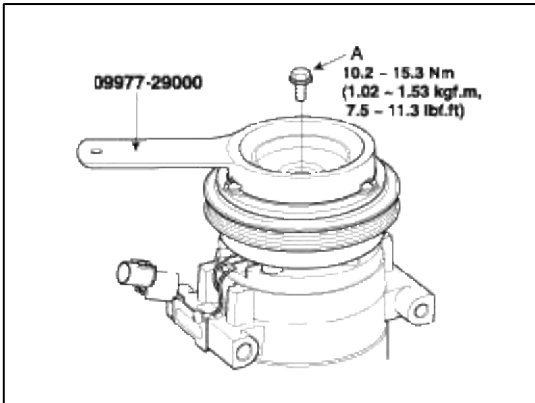


2. Remove the disc & hub assembly (A) and shim (gap washer) (B), taking care not to lose the shims. If the clutch needs adjustment, increase or decrease the number and thickness of shims as necessary, then reinstall the disc & hub assembly, and recheck its clearance.

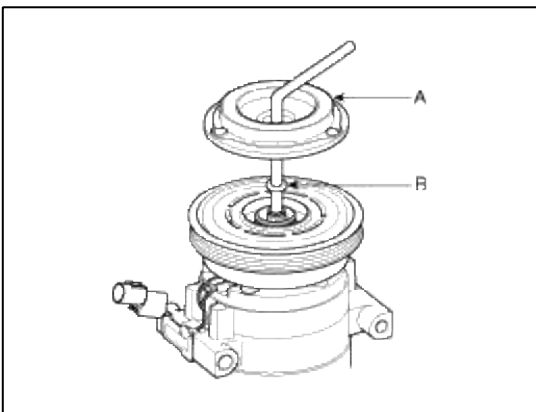


3. If you removal the field coil, remove retainer ring (A) with retainer ring pliers.

NOTE

- Be careful not to damage the pulley (B) and compressor during removal/installation.
- Once retainer ring (A) is removed, replace it with a new one.

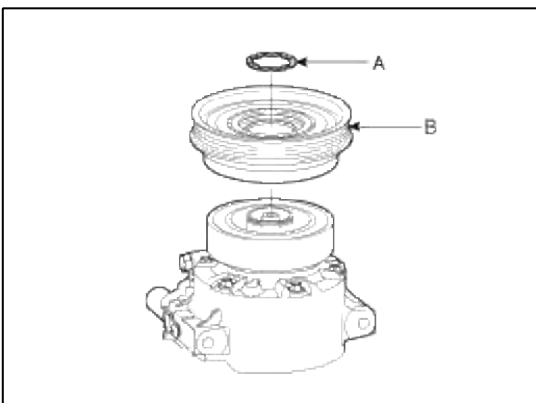


4. Remove the screw (A) from the field coil ground terminal. Remove the retainer ring (B) and then remove the field coil (C) from the shaft with a puller. Be careful not to damage the coil and compressor.

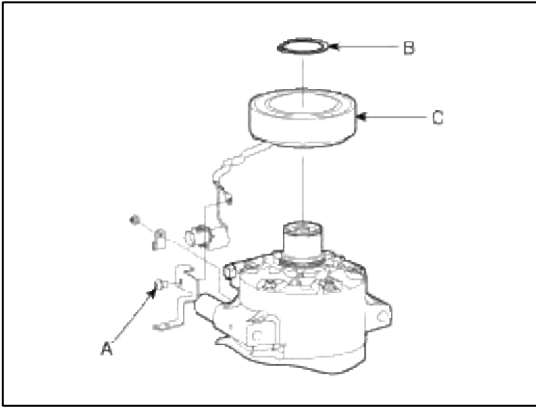

5. Reassemble the compressor clutch in the reverse order of disassembly, and note these items :
- A. Install new retainer rings, and make sure they are fully seated in the groove.
 - B. Make sure that the pulley turns smoothly after its reassembled.

Heating, Ventilation, Air Conditioning > Air conditioning System > Condenser > Components and Components Location

Component location

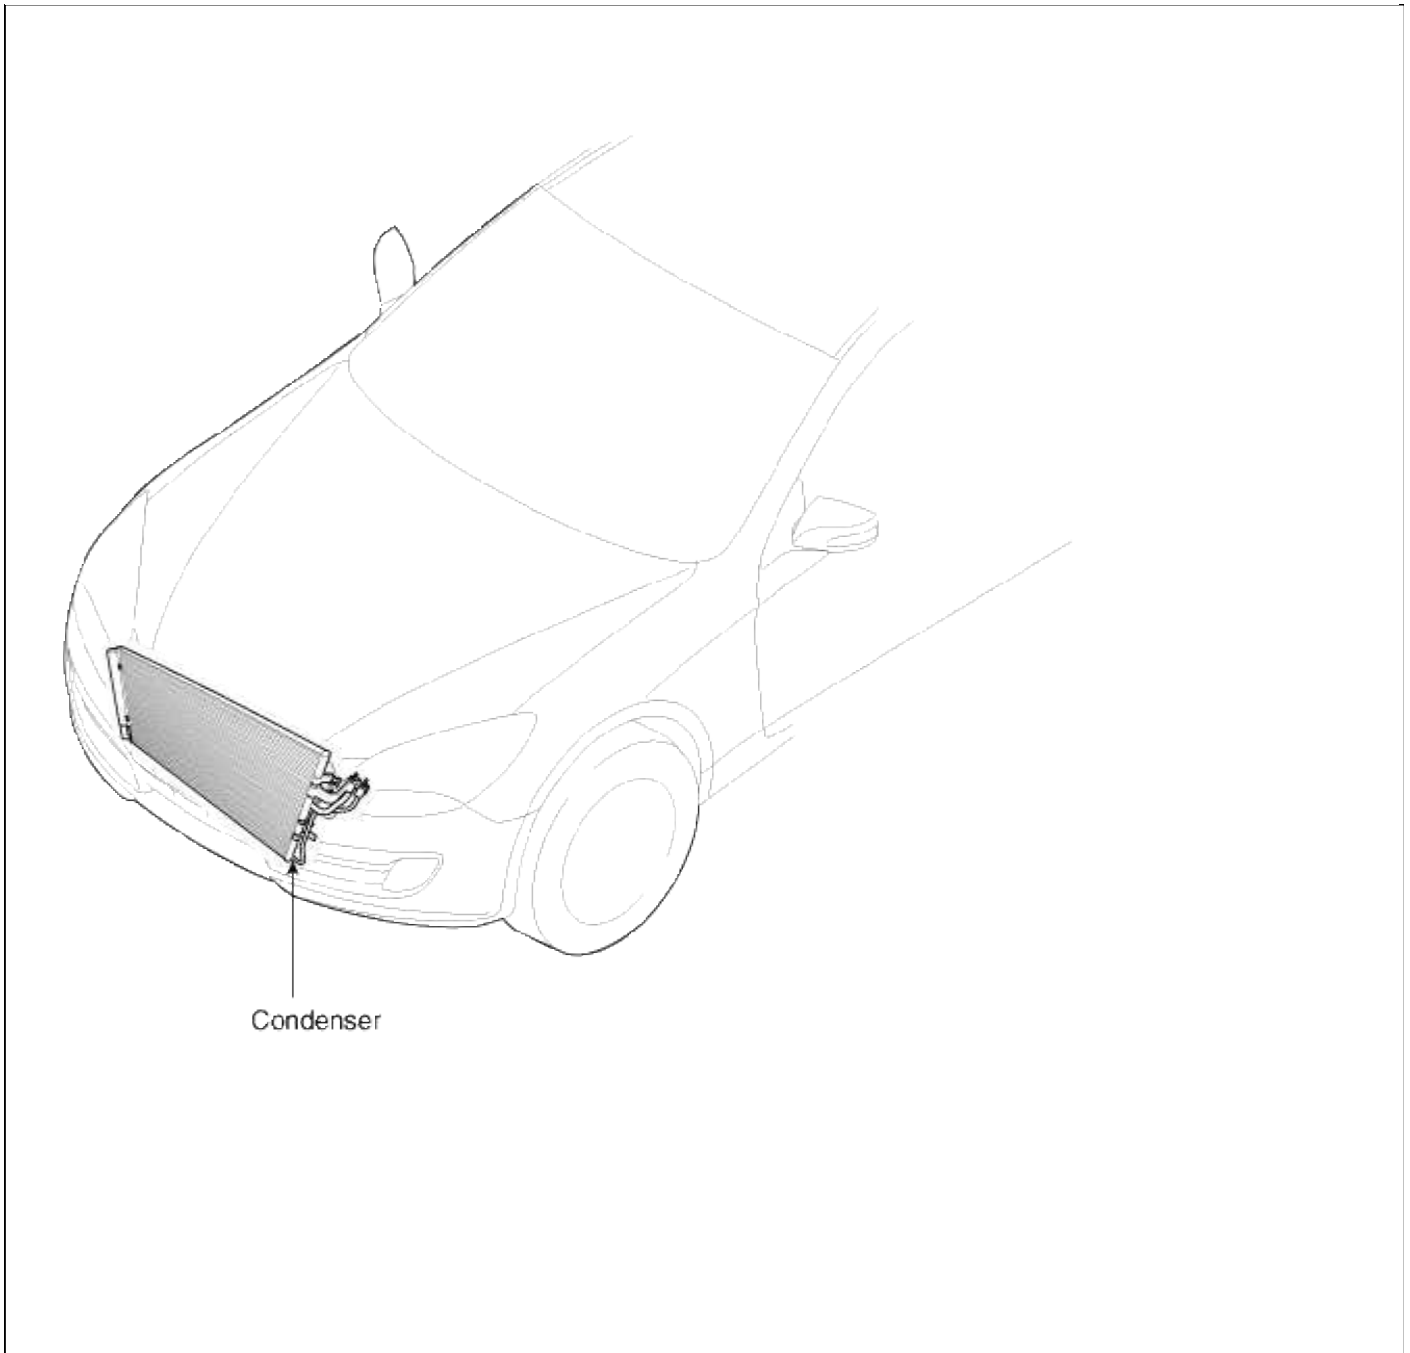

Heating, Ventilation, Air Conditioning > Air conditioning System > Condenser > Repair procedures

Inspection


1. Check the condenser fins for clogging and damage. If clogged, clean them with water, and blow them with compressed air. If bent, gently bend them using a screwdriver or pliers.
2. Check the condenser connections for leakage, and repair or replace it, if required.

Replacement


Condenser Assembly

1. Recover the refrigerant with a recovery/ recycling/ charging station .
2. Disconnect the negative (-) battery terminal.

3. Remove 2 nuts, and then disconnect the discharge line and liquid line (A) from the condenser.

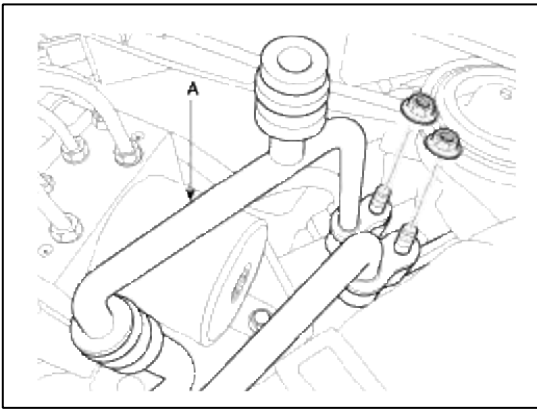

4. Remove the radiator. (Refer to EM group - Radiator)
 5. Remove 2 bolts, and then remove the condenser (A) by lifting it up. Be careful not to damage the radiator and condenser fins when removing the condenser.

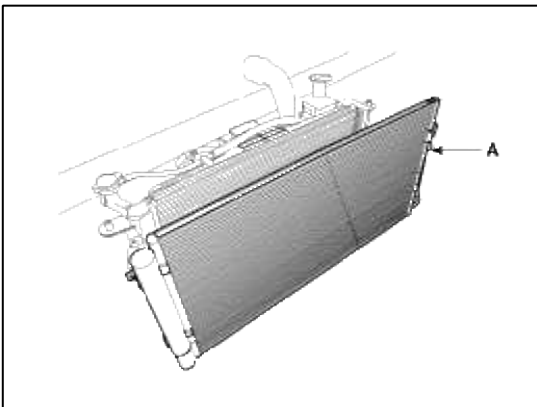


6. Install in the reverse order of removal, and note these items :
- A. If you're installing a new condenser, add refrigerant oil ND-OIL8.
 - B. Replace the O-rings with new ones at each fitting, and apply a thin coat of refrigerant oil before installing them.
 Be sure to use the right O-rings for R-134a to avoid leakage.
 - C. Be careful not to damage the radiator and condenser fins when installing the condenser.
 - D. Be sure to install the lower mount cushions of condenser securely into the holes.
 - E. Charge the system, and test its performance.

Desiccant


Replacement

1. Remove the condenser, and then remove the bottom cap (B) with L wrench (A) from the condenser.

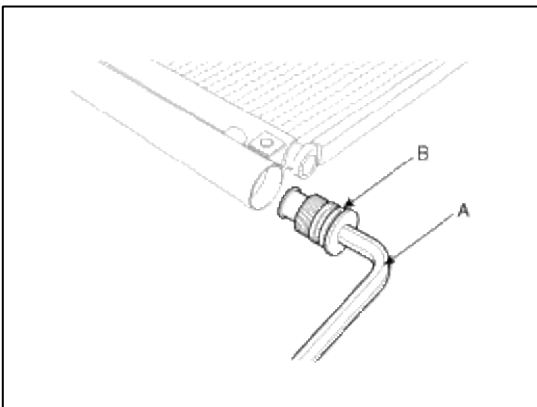

TORQUE : 20~25N.m (2.0~2.5kgf•m, 14.5~18.2lb-ft)

2. Remove the desiccant (A) from condenser using a long nose plier. Check for crumbled desiccant and clogged bottom cap filter.

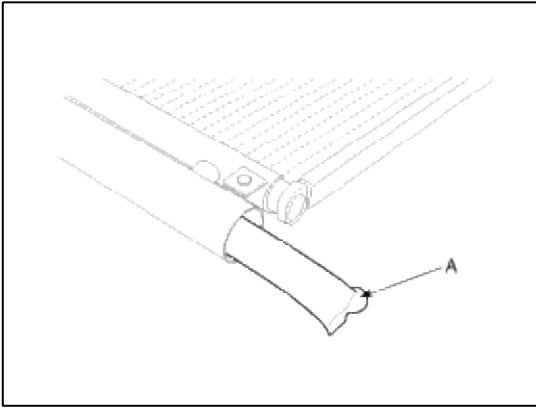


3. Apply air conditioning compressor oil along the O-rings and threads of the new bottom cap.
4. Insert the new desiccant into the receiver drier tank. The desiccant must be sealed in vacuum before it is exposed to air for use.
5. Install the new bottom cap to the condenser.

NOTE

- Always replace the desiccant and bottom cap at the same time.
- Replace the O-rings with new ones at each fitting, and apply a thin coat of refrigerant oil before installing them. Be sure to use the right O-rings for R-134a to avoid leakage.
- Be careful not to damage the radiator and condenser fins when installing the condenser.
- Be sure to install the lower mount cushions of condenser securely into the holes.
- Charge the system, and test its performance.

Heating, Ventilation, Air Conditioning > Air conditioning System > A/C pressure transducer > Components and Components Location

Component Location

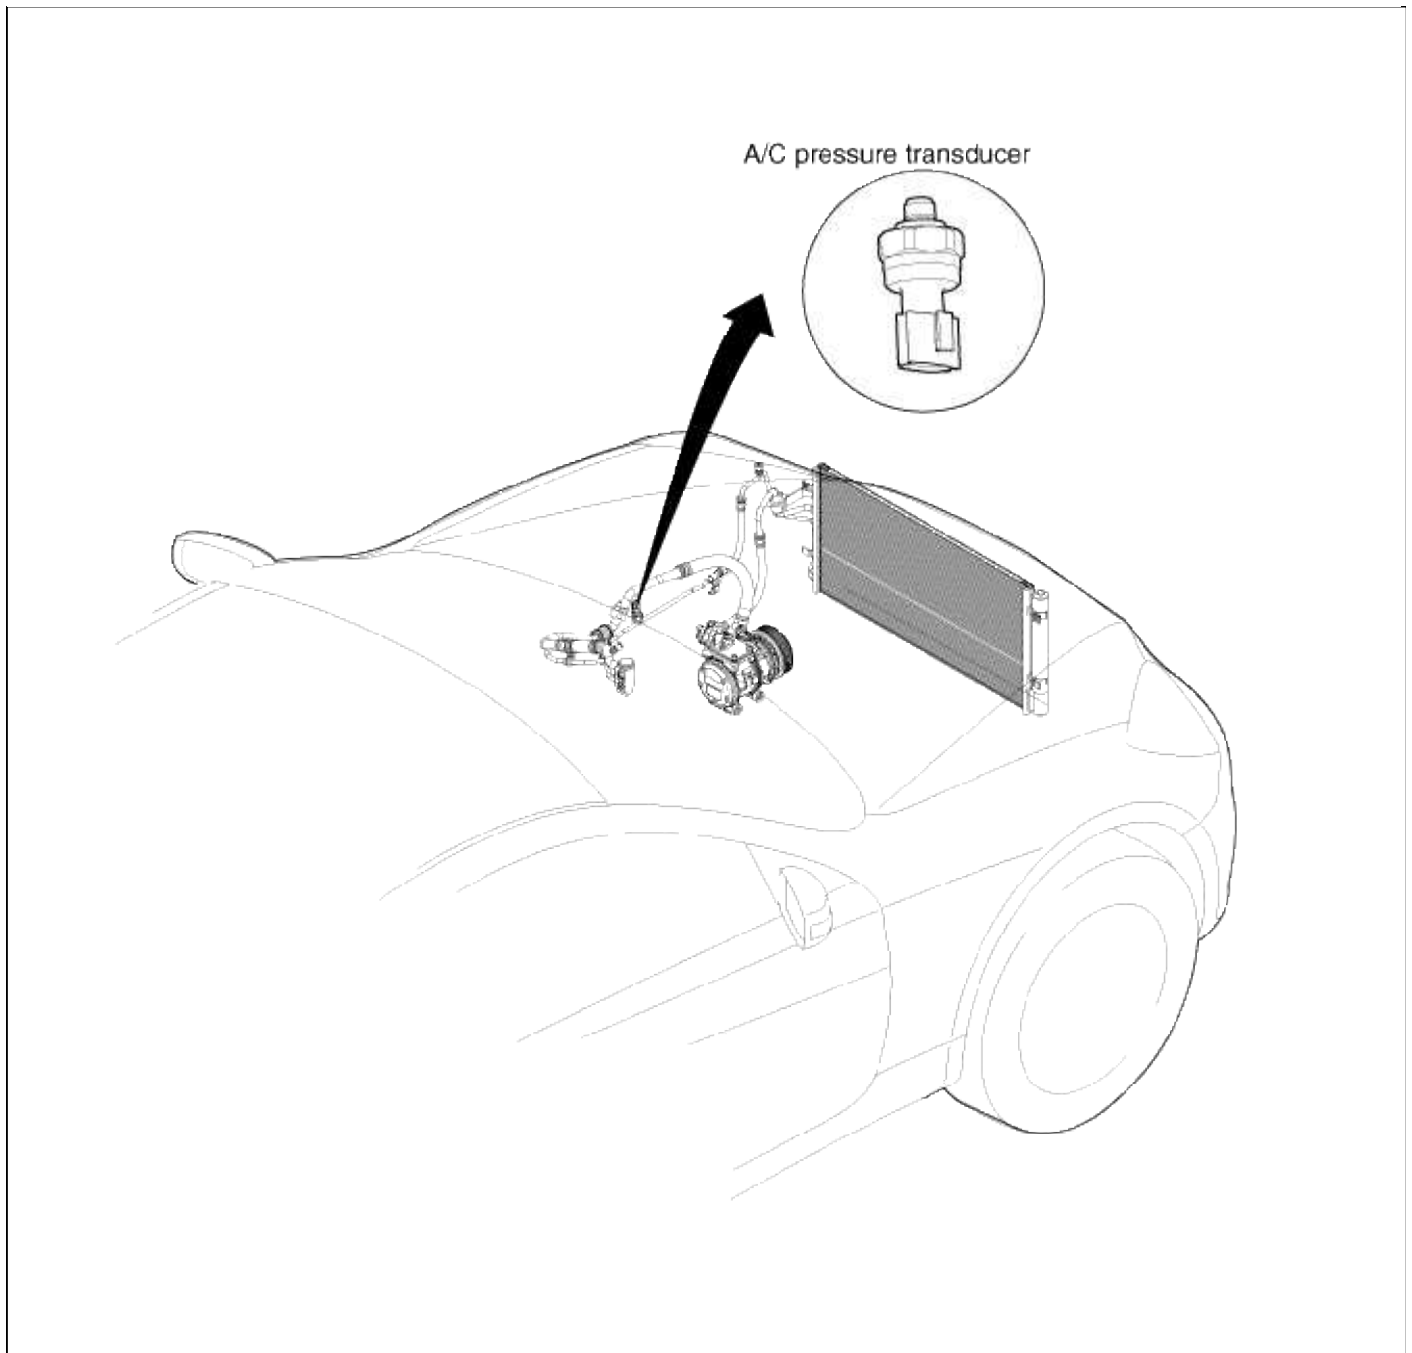

Heating,Ventilation, Air Conditioning > Air conditioning System > A/C pressure transducer > Description and Operation


Description

A/C pressure transducer convert the pressure value of high pressure line into voltage value after measure. By converted voltage value, engine ECU controls cooling fan by operating high speed or low speed. Engine ECU stop the operation of compressor when the temperature of refrigerant line is too high or too low irregularly to optimize air conditioning system.

Heating,Ventilation, Air Conditioning > Air conditioning System > A/C pressure transducer > Repair procedures

Inspection

1. Measure the pressure of high pressure line by voltage output between NO.1 and NO.2 terminals

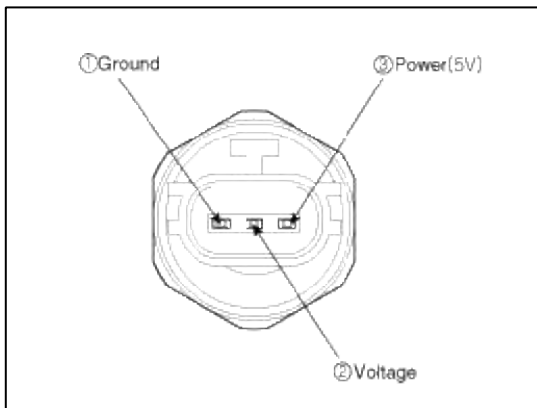


2. Inspect the voltage value whether it is sufficient to be regular value or not.

$$\text{Voltage} = 0.00878835 * \text{Pressure} + 0.37081095 \text{ [PSIA]}$$

3. If the measured voltage value is not specification, replace the A/C pressure transducer.

Replacement

1. Disconnect the negative (-) battery terminal.
2. Recover the refrigerant with a recovery/charging station.
3. Disconnect A/C pressure transducer connector (3P) (A).
4. Remove the A/C pressure transducer(B).

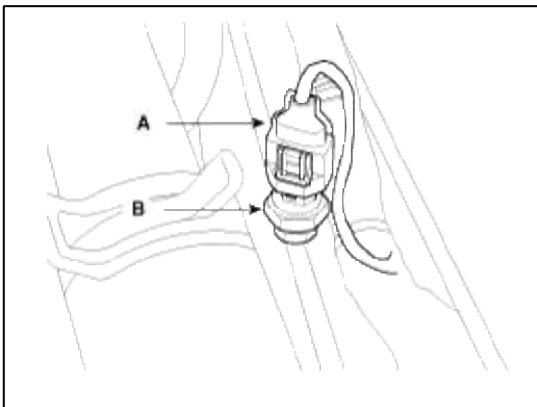

CAUTION

- Take care that liquid & suction pipe are not bent.


5. Installation is the reverse order of removal.

TORQUE : 10~12N.m (1.0~1.2kgf.m, 7.4~8.8lbf.ft)


Heating, Ventilation, Air Conditioning > Air conditioning System > Refrigerant line > Components and Components Location

Component location

[Theta engine]

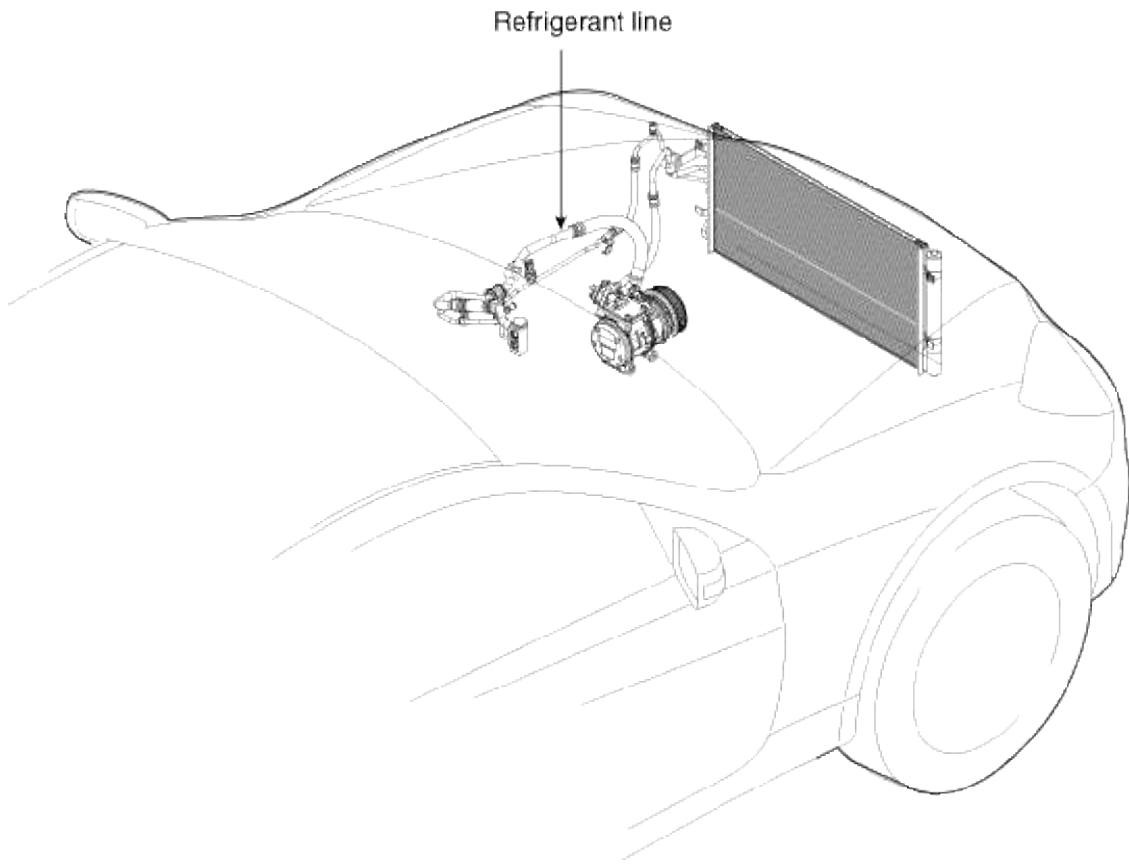

[Lambda engine]

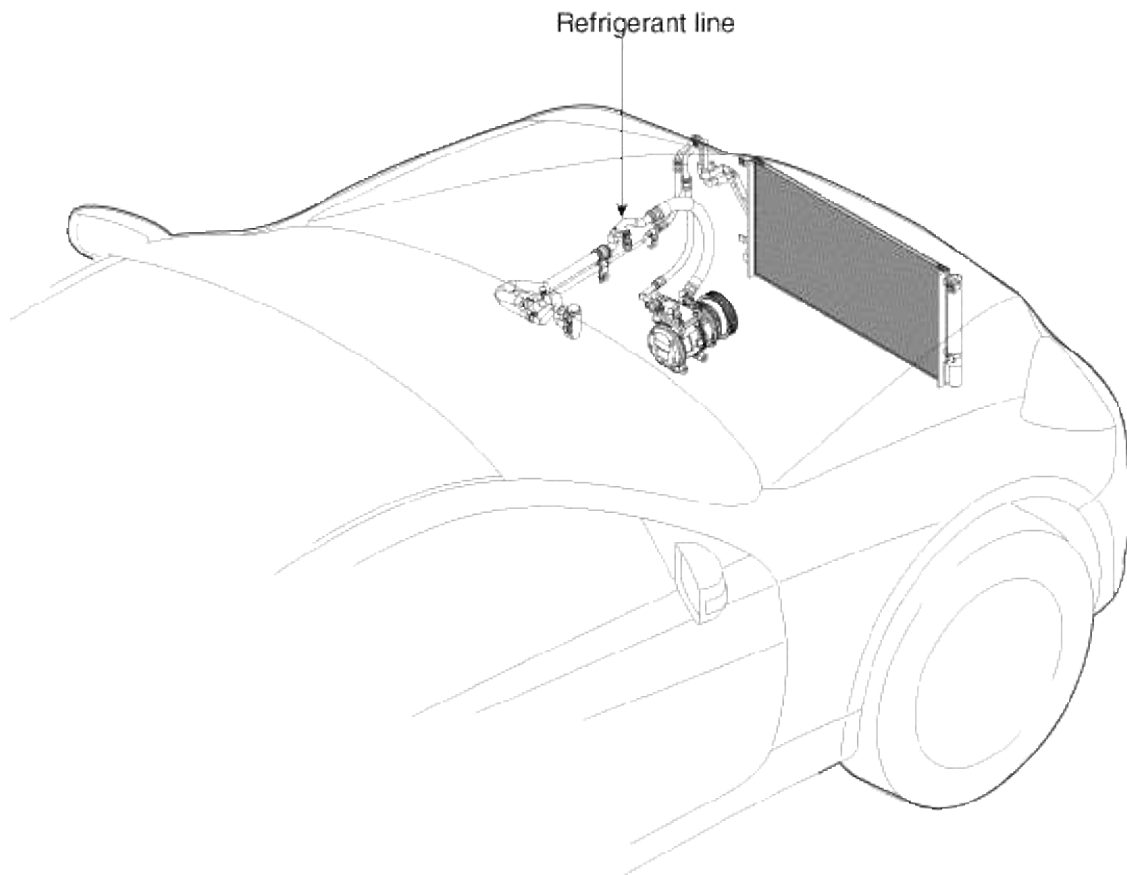**Heating, Ventilation, Air Conditioning > Air conditioning System > Refrigerant line > Repair procedures**

Replacement

1. Discharge refrigerant from refrigeration system .
2. Replace faulty tube or hose.

CAUTION

- Cap the open fittings immediately to keep moisture or dirt out of the system.

3. Tighten joint of bolt or nut to specified torque

CAUTION

- Connections should not be torque tighter than the specified torque.

Part tightened	N.m	Kgf.m	lbf.ft
Condenser - Discharge hose	4.9~5.9	0.5~0.6	3.6~4.3
Condenser - Liquid tube			
Compressor - Discharge hose	4.9~5.9	0.5~0.6	3.6~4.3
Compressor - Suction hose			
Expansion valve - Evaporator	11.7~5.9	1.2~1.5	8.7~10.8

4. Evacuate air in refrigeration system and charge system with refrigerant.

Specified amount: 570 ± 25g (20.1 ± 0.88 oz.)

5. Inspect for leakage of refrigerant.

Using a gas leak detector, check for leakage of refrigerant .

6. Inspect A/C operation.

Heating, Ventilation, Air Conditioning > Air conditioning System > Evaporator temperature sensor > Description and Operation

Description

The evaporator temperature sensor will detect the evaporator core temperature and interrupt compressor relay power in order to prevent evaporator freezing by excessive cooling.

Heating, Ventilation, Air Conditioning > Air conditioning System > Evaporator temperature sensor > Repair procedures

Inspection

1. Ignition "OFF"
2. Disconnect evaporator temperature sensor.

3. Using the multi-tester, Measure resistance between terminal "1" and "2" of evaporator temperature sensor.


Specification

Evaporator core temperature[°C(°F)]	Resistance[KΩ]	Voltage[V]
-10(14)	29.42	3.736
0(32)	18.9	3.221
10(50)	11.36	2.665
20(68)	7.362	2.125
30(86)	4.892	1.647
40(104)	3.326	1.248
50(122)	2.309	0.941


4. If the measured resistance is not specification, substitute with a known-good evaporator temperature sensor and check for proper operation.
 5. If the problem is corrected, replace the evaporator temperature sensor.

Replacement


1. Disconnect the negative (-) battery terminal.
2. Remove the crash pad lower cover (A).

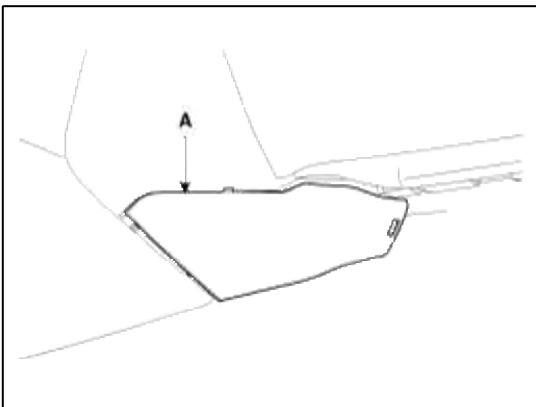


3. Disconnect the evaporator sensor connector (A).

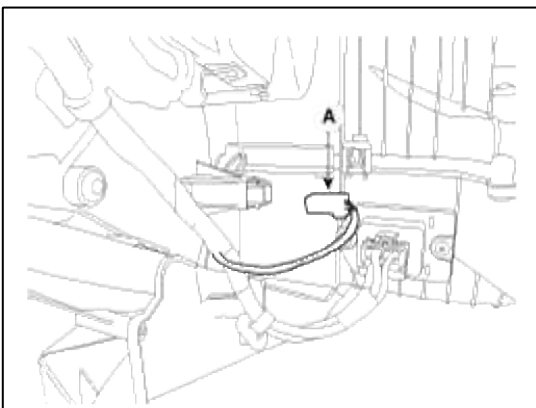

4. Remove the heater unit lower cover (A).

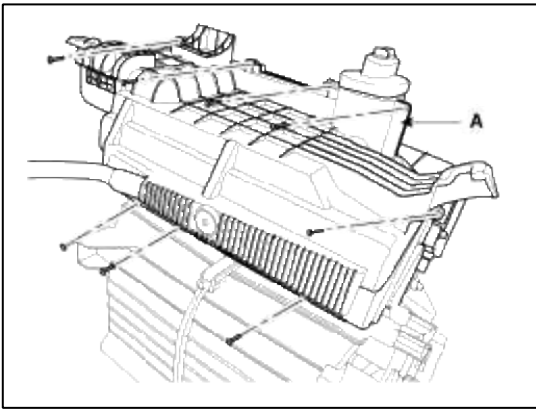

5. Remove the evaporator temperature sensor (A) from evaporator core.

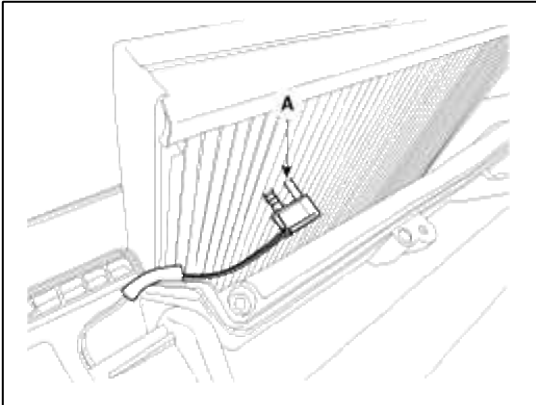

CAUTION

- Take care that evaporator core pins are not bent.

6. Installation is the reverse order of removal.

Heating,Ventilation, Air Conditioning > Air conditioning System > In-car sensor > Description and Operation

Description


1. In-car air temperature sensor is located at the center facia lower panel.
2. The sensor contains a thermistor which measures the temperature of the inside. The signal decided by the resistance value which changes in accordance with perceived inside temperature, is delivered to heater control unit and according to this signal the control unit regulates incar temperature to intended value.

Heating,Ventilation, Air Conditioning > Air conditioning System > In-car sensor > Repair procedures

Inspection

1. Ignition "ON"

2. Blow air with changing temperature to the in car sensor air inlet. Measure sensor resistance between 2 and 4 terminals.

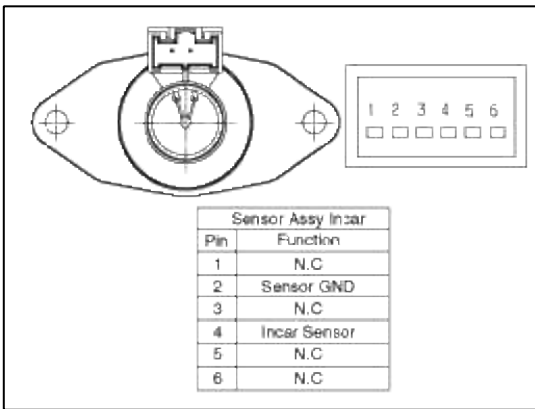

Specification

Temperature [°C(°F)]	Resistance between terminals 2 and 4 (kΩ)
-30(-22)	509.4 ± 4.1%
-15(5)	216 ± 3.2%
0(32)	97.71 ± 2.4%
15(59)	47.13 ± 1.7%
25(77)	30.00 ± 1.2%
35(95)	19.59 ± 1.6%
50(122)	10.81 ± 2.2%
60(140)	7.463 ± 2.6%


NOTE

In car sensor is negative type thermistor that resistance will rise with lower temperature, and reduce with higher temperature.

Replacement

1. Disconnect the negative (-) battery terminal.
2. Remove the crash pad.

3. Disconnect the connector of in-car sensor. Loosen the mounting 2 screws and then remove the in-car sensor (B).

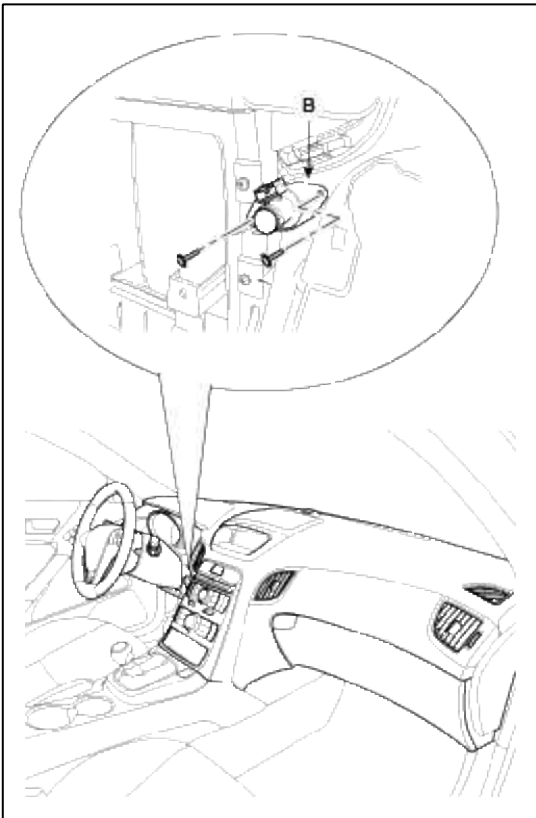

4. Installation is the reverse order of removal.

Heating,Ventilation, Air Conditioning > Air conditioning System > Photo sensor > Description and Operation


Description

1. The photo sensor is located at the center of defrost nozzle.
2. The photo sensor contains a photovoltaic (sensitive to sunlight) diode. The solar radiation received by its light receiving portion, generates an electromotive force in proportion to the amount of radiation received which is transferred to the automatic temperature control module so that the solar radiation compensation will be performed.

Heating,Ventilation, Air Conditioning > Air conditioning System > Photo sensor > Repair procedures


Inspection

1. Ignition "ON"
2. Using the scan tool.
3. Emit intensive light toward photo sensor using a lamp, and check the output voltage change.
4. The voltage will rise with higher intensive light and reduce with lower intensive light.

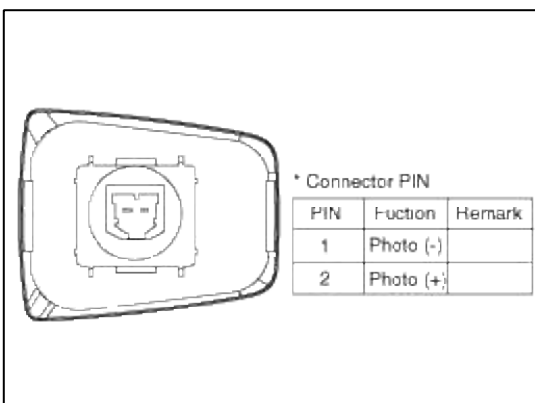

Replacement

1. Disconnect the negative (-) battery terminal.
2. With the (-) driver, remove the photo sensor (A) from the center of defrost nozzle.

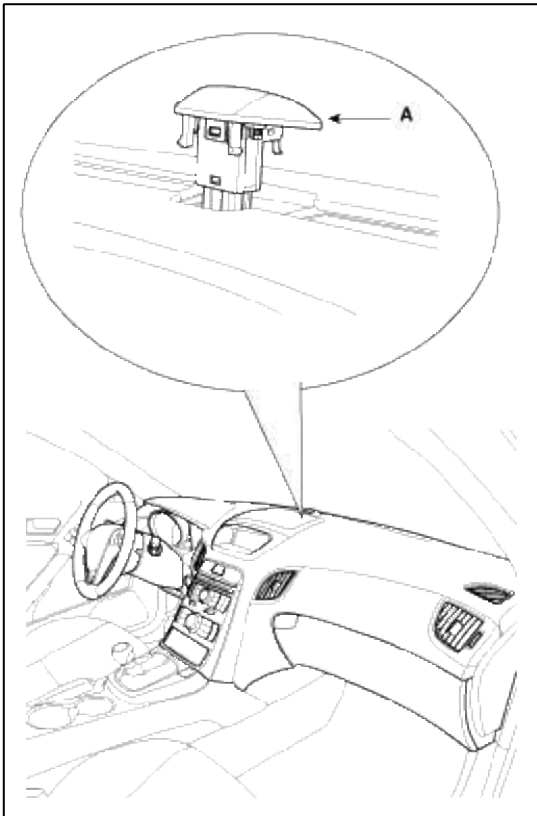

3. Install in the reverse order of removal.

Heating, Ventilation, Air Conditioning > Air conditioning System > Ambient sensor > Description and Operation

Description

1. The ambient temperature sensor is located at the front of the condenser and detects ambient air temperature. It is a negative type thermistor; resistance will increase with lower temperature, and decrease with higher temperatures.
2. The sensor output will be used for discharge temperature control, temperature regulation door control, blower motor level control, mix mode control and in-car humidity control.

NOTE

If the ambient temperature is below 2.0°C (35.6°F), the A/C compressor will be stopped. The compressor will be operated by manual operating.

Heating, Ventilation, Air Conditioning > Air conditioning System > Ambient sensor > Repair procedures


Inspection

1. Ignition "OFF"
2. Disconnect ambient temperature sensor.

3. Check the resistance of ambient temperature sensor between terminals 1 and 2 whether it is changed by changing of the ambient temperature.

Specification


Ambient temperature [°C(°F)]	Resistance between terminals 1 and 2 (kΩ)
-10(50)	163.31 ± 3%
0(68)	96.892 ± 3%
10(50)	59.365 ± 3%
20(68)	37.147 ± 3%
25(77)	30 ± 3%
40(104)	16.032 ± 3%

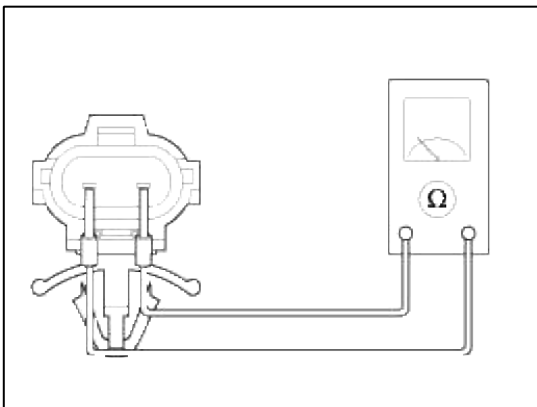

4. If the measured resistance is not specification, substitute with a known-good ambient temperature sensor and check for proper operation.
5. If the problem is corrected, replace the ambient temperature sensor.

Replacement


1. Disconnect the negative (-) battery terminal.
2. Remove the front bumper.
(Refer to BD group-Front bumper)
3. Remove the ambient temperature sensor (A).

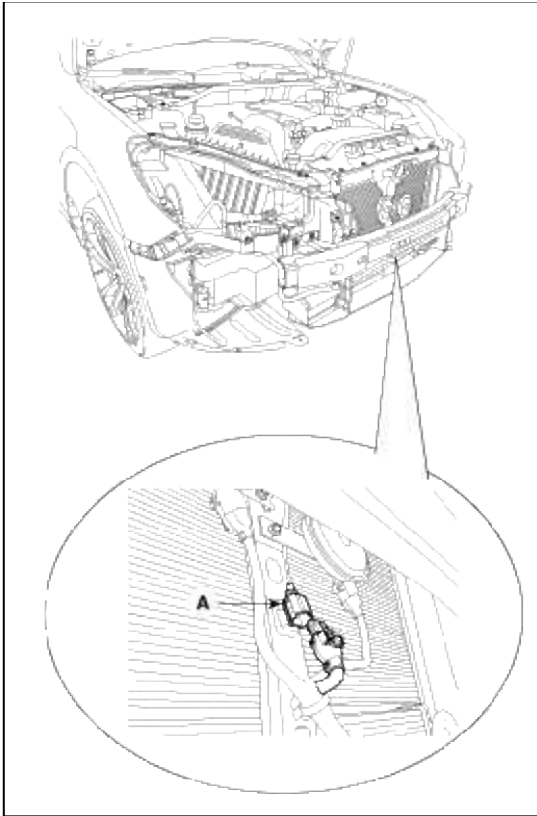


4. Installation is the reverse order of removal.

Heating, Ventilation, Air Conditioning > Heater > Heater Unit > Components and Components Location

Component Location

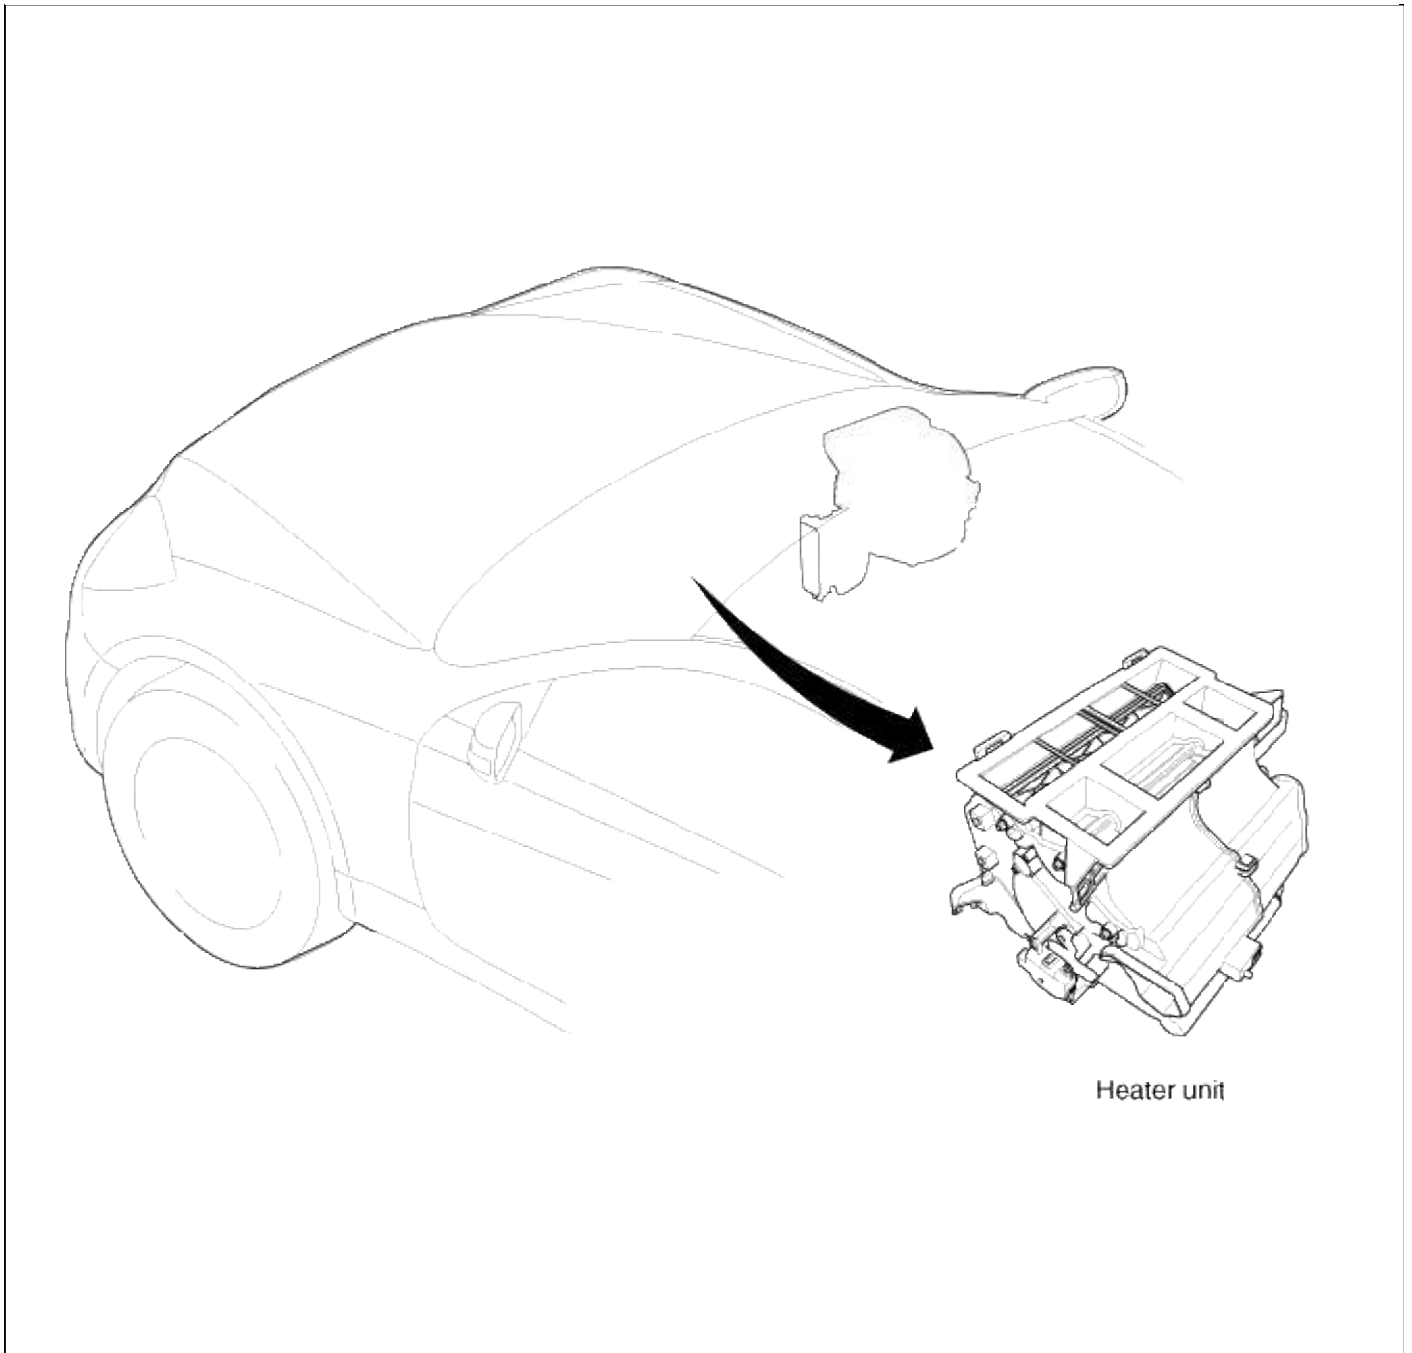

Component

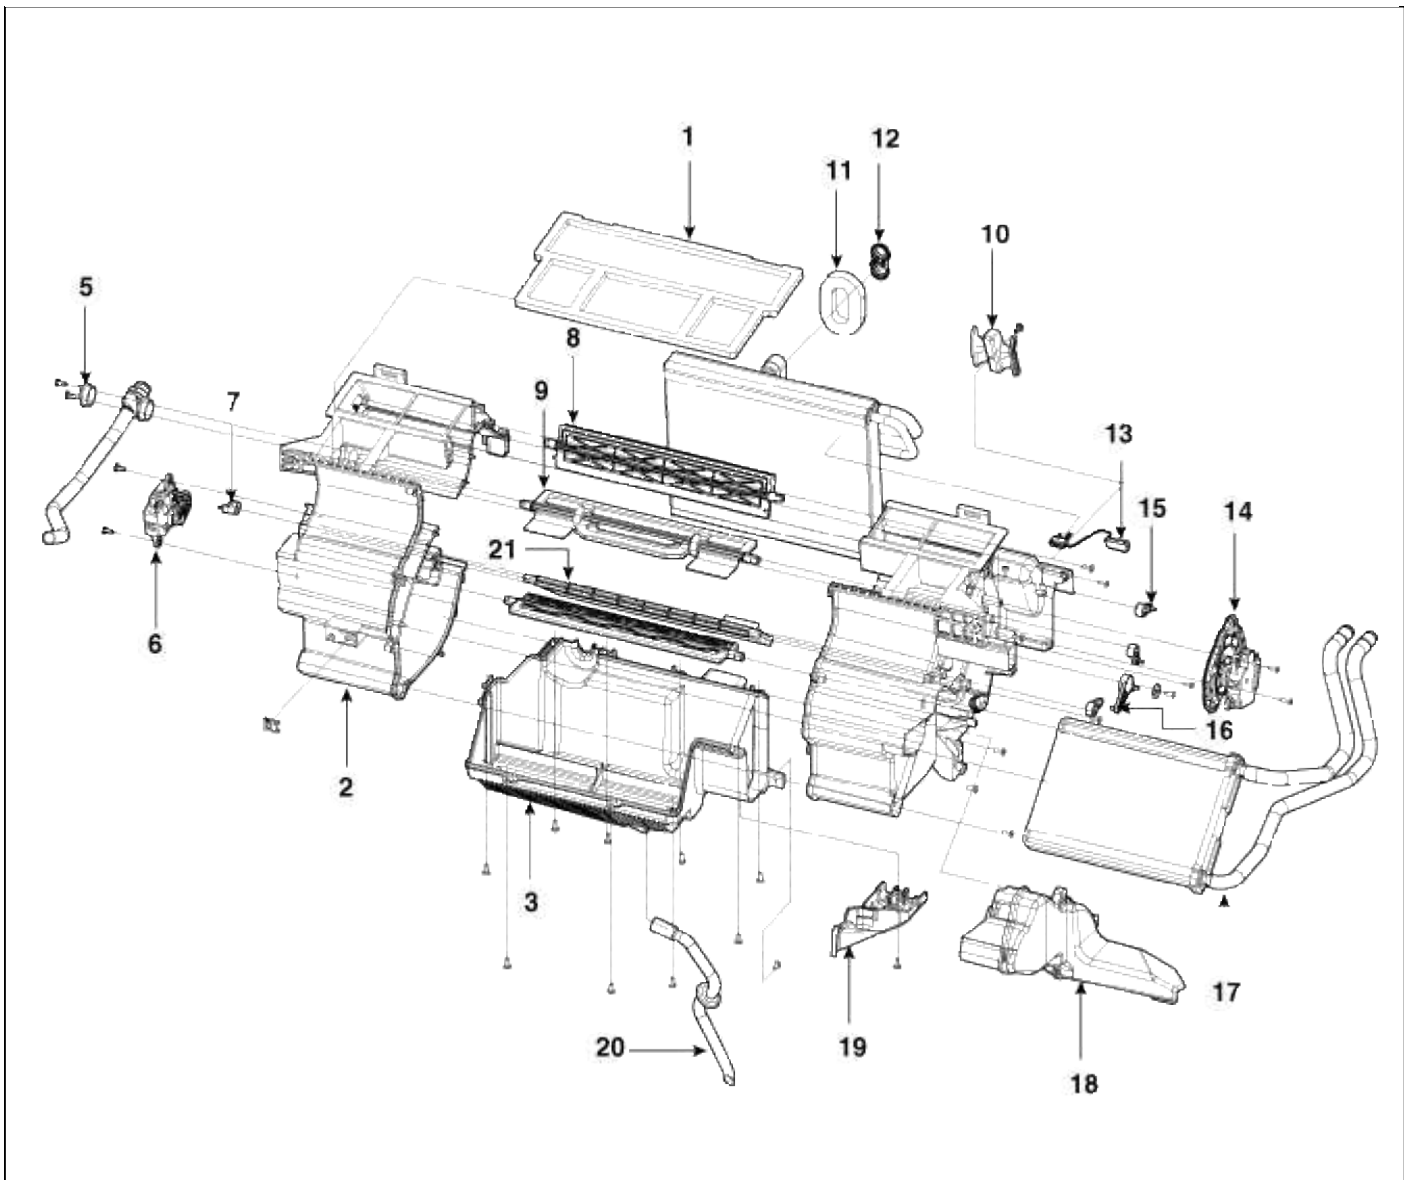


1. Duct	10. Heater pipe cover	18. Shower duct
2. Heater case (L)	11. Flange seal	19. Heater pipe cover
3. Heater lower case	12. Flange cap	20. Drain hose
4. Heater case (R)	13. Evaporator sensor	21. Temp door
5. Aspirator hose	14. Mode actuator	
6. Temp actuator	15. Vent lever	
7. Temp lever	16. Sub foot lever	
8. Foot door	17. Heater core	
9. Vent door		

Heating, Ventilation, Air Conditioning > Heater > Heater Unit > Repair procedures


Replacement

1. Disconnect the negative (-) battery terminal.
2. Recover the refrigerant with a recovery/ recycling/ charging station.
3. When the engine is cool, drain the engine coolant from the radiator.

4. Remove the bolts (A) and the expansion valve (B) from the evaporator core.
Plug or cap the lines immediately after disconnecting them to avoid moisture and dust contamination.

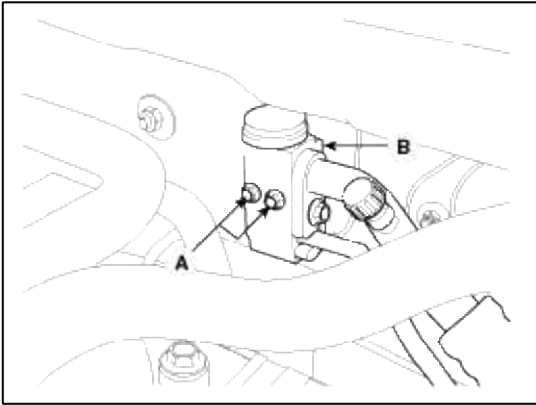


5. Disconnect the inlet (C) and outlet (D) heater hoses from the heater unit.

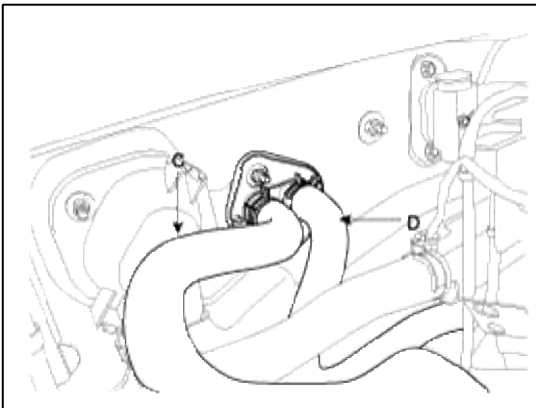
**CAUTION**

- Engine coolant will spill when the hoses are disconnected; drain it into a clean drip pan. Be sure not to let coolant spill on electrical parts or painted surfaces. If any coolant spills, rinse it off immediately.



6. Remove the crash pad.
(Refer to BD group-Crash pad)
7. Remove the cowl cross bar assembly.
(Refer to BD group-Crash pad)
8. Remove the heater & blower unit after loosening 3 mounting bolts.

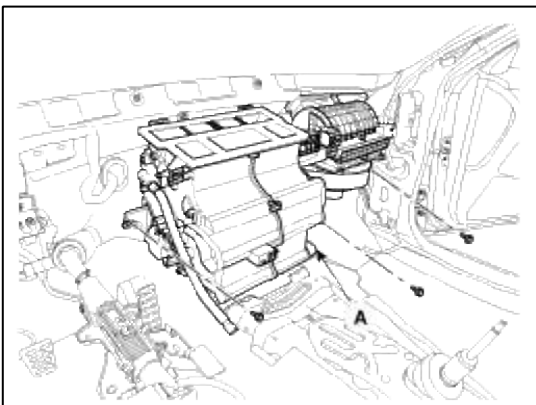


9. Remove the blower unit (A) from heater unit (B) after loosening 2 screws.

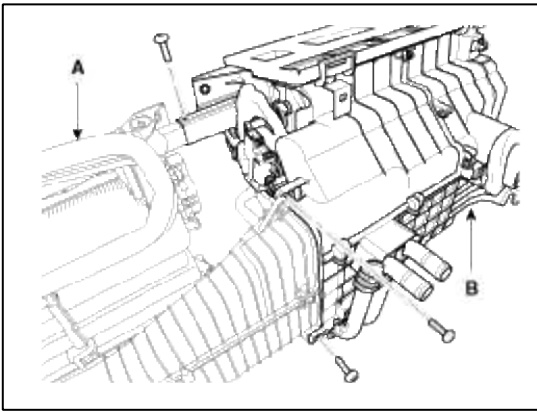


10. Remove the heater core cover after remove the cover (A).

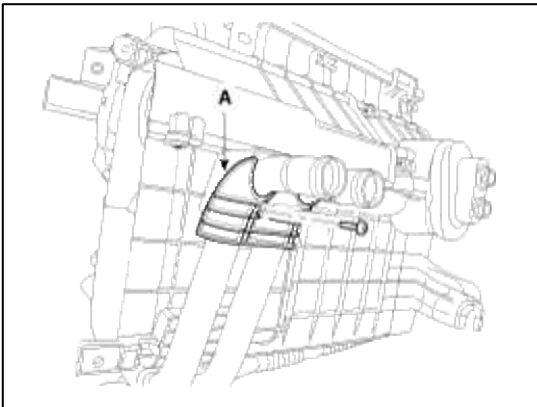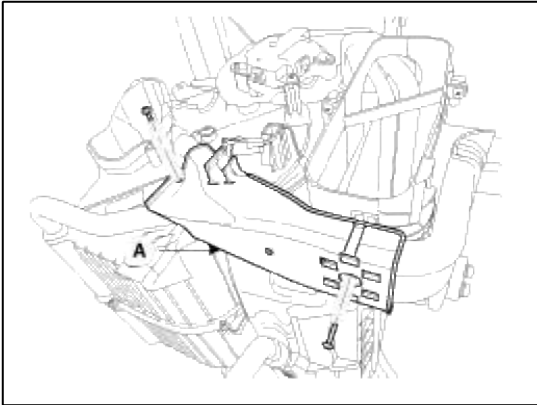


11. Be careful that the inlet and outlet pipe are not bent during heater core removal, and pull out the heater core (A).

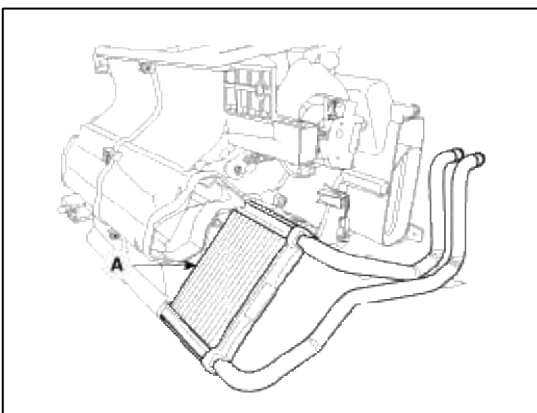

12. Remove the heater unit lower case(A).

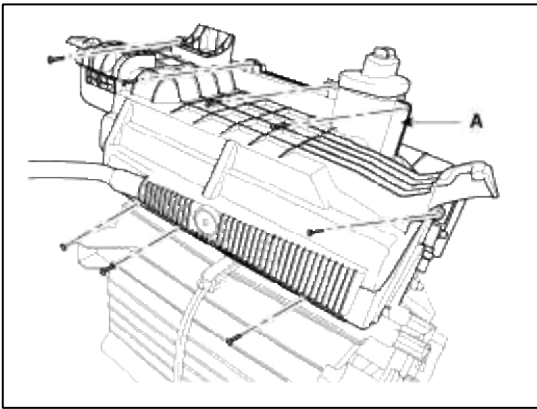

13. Remove the evaporator core(A).

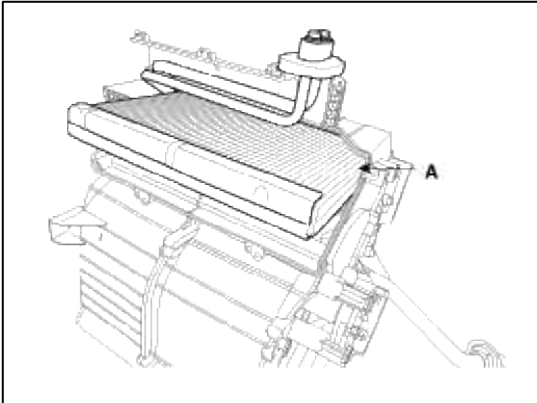

14. Be careful that the inlet and outlet pipe are not bent during heater core removal, and pull out the heater core.


15. Install the heater core in the reverse order of removal.

16. Installation is the reverse order of removal, and note these items :

- A. If you're installing a new evaporator, add refrigerant oil (ND-OIL8).
- B. Replace the O-rings with new ones at each fitting, and apply a thin coat of refrigerant oil before installing. Be sure to use the right O-rings for R-134a to avoid leakage.
- C. Immediately after using the oil, replace the cap on the container, and seal it to avoid moisture absorption.
- D. Do not spill the refrigerant oil on the vehicle ; it may damage paint ; if the refrigerant oil contacts the paint, wash off immediately.
- E. Apply sealant to the grommets.
- F. Make sure that there is no air leakage.
- G. Charge the system and test its performance.
- H. Do not interchange the inlet and outlet heater hoses and install the hose clamps securely.
- I. Refill the cooling system with engine coolant.

Heating,Ventilation, Air Conditioning > Heater > Temperature Control Actuator > Components and Components Location

Component Location

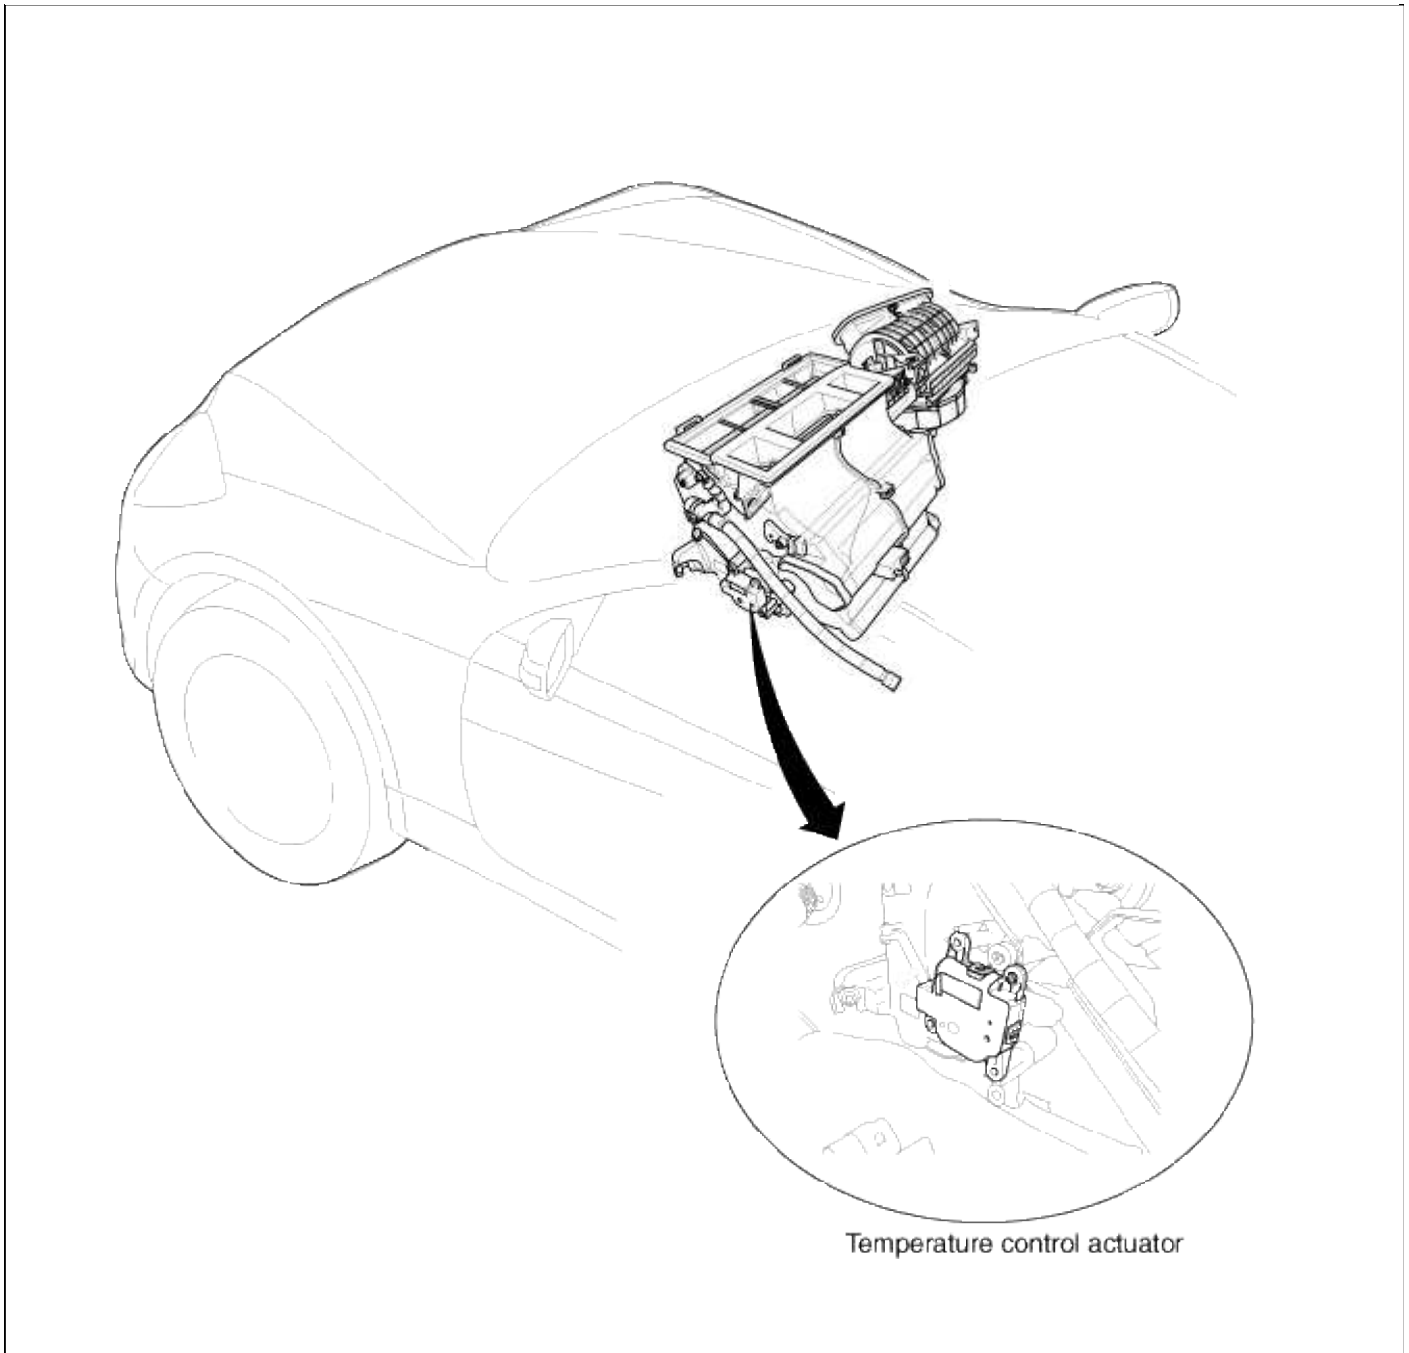

Heating, Ventilation, Air Conditioning > Heater > Temperature Control Actuator > Description and Operation

Description

1. Heater unit includes mode control actuator and temperature control actuator.
2. Temperature control actuator is located at the heater unit. It regulates the temperature by the procedure as follows. Signal from control unit adjusts position of temperature door by operating temperature switch and then temperature will be regulated by the hot/cold air ratio decided by position of temperature door


Heating, Ventilation, Air Conditioning > Heater > Temperature Control Actuator > Repair procedures

Inspection

1. Ignition "OFF"
2. Disconnect the connector of temperature control actuator.

3. Verify that the temperature control actuator operates to the hot position when connecting 12V to the terminal 3 and grounding terminal 4.

Verify that the temperature control actuator operates to the cool position when connecting in the reverse

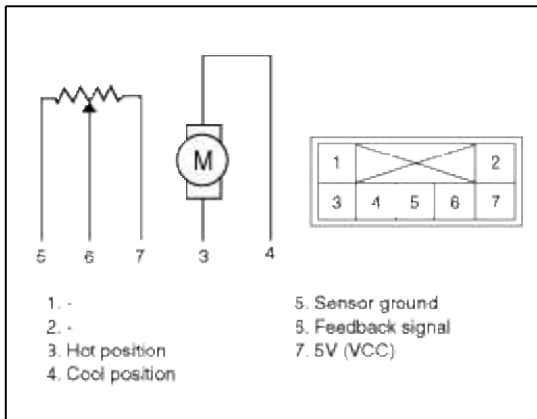

4. Check the voltage between terminals 5 and 6.


Specification

Door position	Voltage (5-6)	Error detecting
Max. cooling	$0.45 \pm 0.15V$	Low voltage :0.1V or less
Max. heating	$4.55 \pm 0.15V$	High voltage :4.9V or more


* It will feedback current position of actuator to controls.

Replacement

1. Disconnect the negative (-) battery terminal.
2. Remove the crash pad side cover (A).

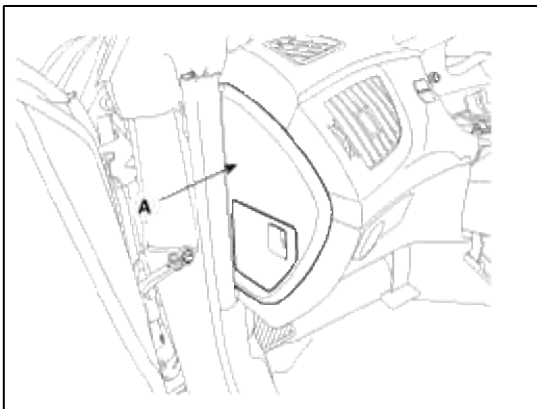


3. After loosening the crash pad lower panel mounting screws, then remove the lower panel (A).

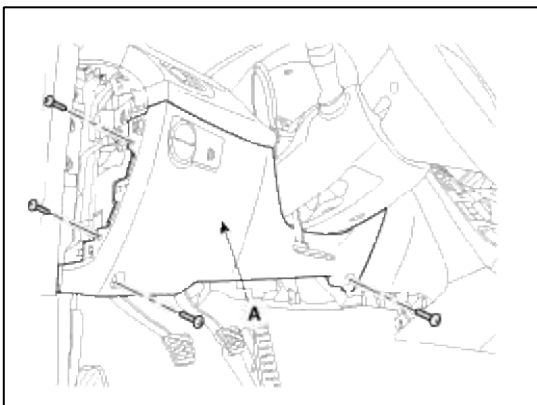

4. Disconnect the temperature control actuator connector after removing the air duct.


5. Loosen the mounting screw and then remove the temperature control actuator (B).

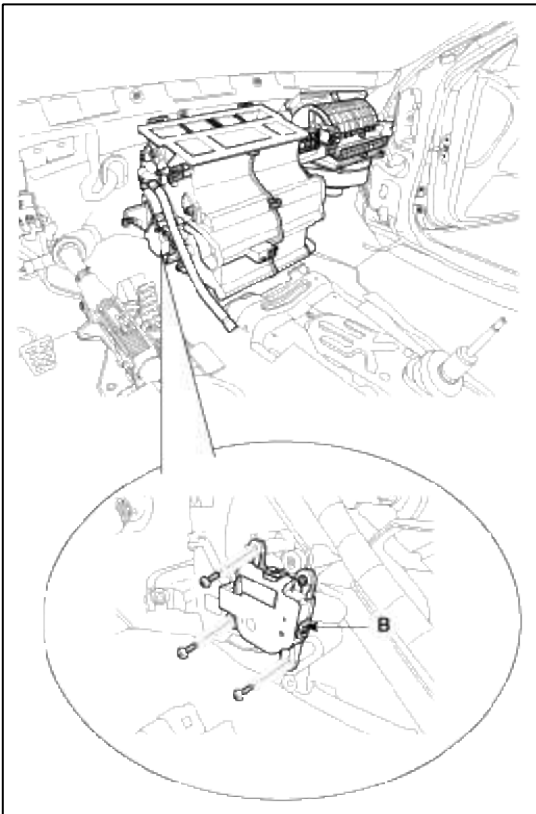

6. Installation is the reverse order of removal.

Heating, Ventilation, Air Conditioning > Heater > Mode Control Actuator > Components and Components Location

Component Location

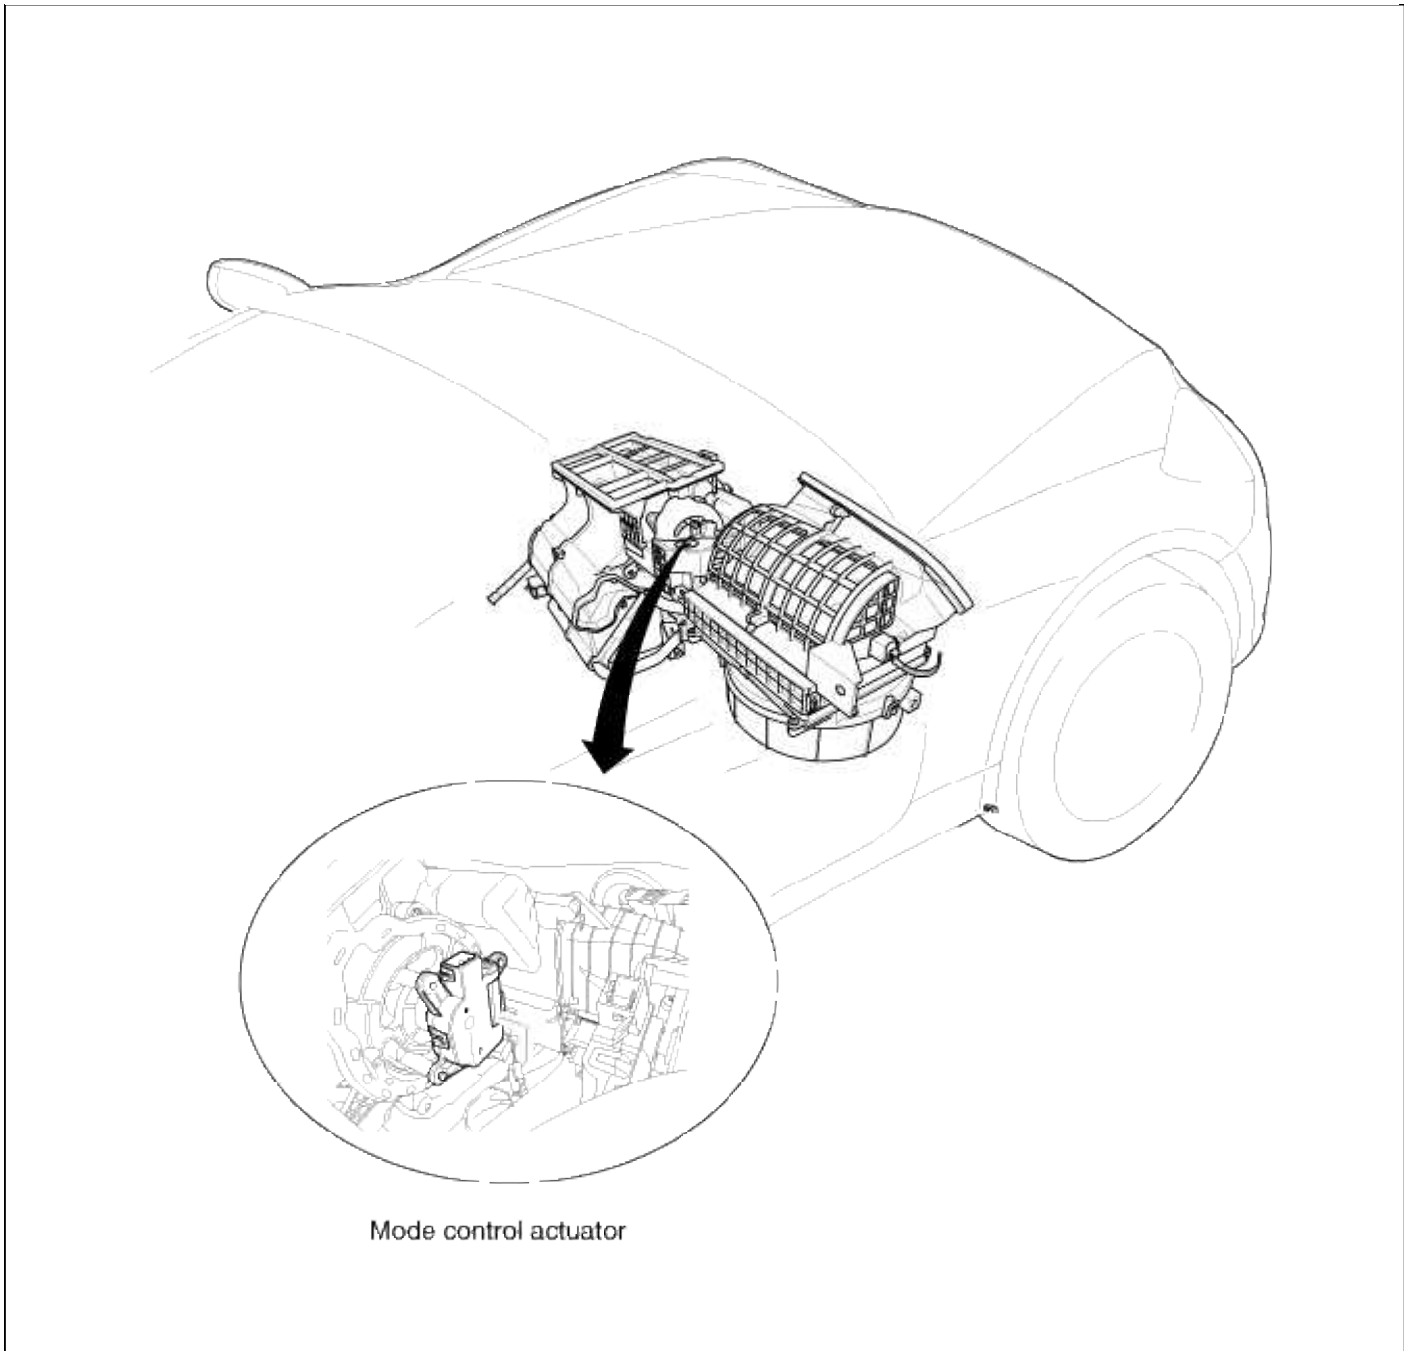

Heating, Ventilation, Air Conditioning > Heater > Mode Control Actuator > Description and Operation

Description

The mode control actuator is located at the heater unit.


It adjusts position of mode door by operating mode control actuator based on signal of A/C control unit. Pressing mode select switch makes the mode control actuator shift in order of vent → B/L → floor → mix.

Heating, Ventilation, Air Conditioning > Heater > Mode Control Actuator > Repair procedures

Inspection

1. Ignition "OFF"
2. Disconnect the connector of mode control actuator.
3. Verify that the mode control actuator operates to the defrost mode when connecting 12V to the terminal 3 and grounding terminal 4.

4. Verify that the mode control actuator operates to the vent mode when connecting in the reverse.

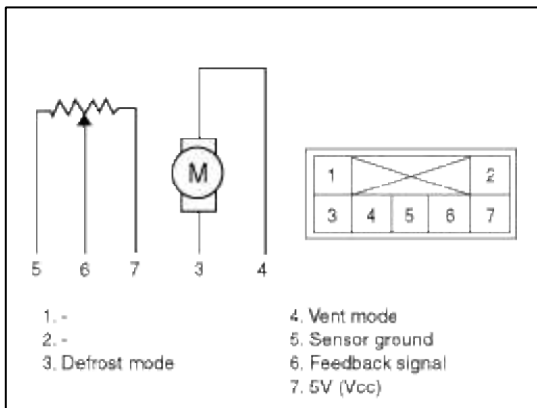

5. Check the voltage between terminals 5 and 6.


Door position	Voltage (5-6)	Error detecting
Vent	$0.45 \pm 0.15V$	Low voltage :0.1V or less
Defrost	$4.55 \pm 0.15V$	High voltage :4.9V or more

* It will feedback current position of actuator to controls.



6. If the measured voltage is not specification, substitute with a known-good console temp control actuator and check for proper operation.
7. If the problem is corrected, replace the console temp control actuator.

Replacement


1. Disconnect the negative (-) battery terminal.
2. Remove the crash pad side cover (A).

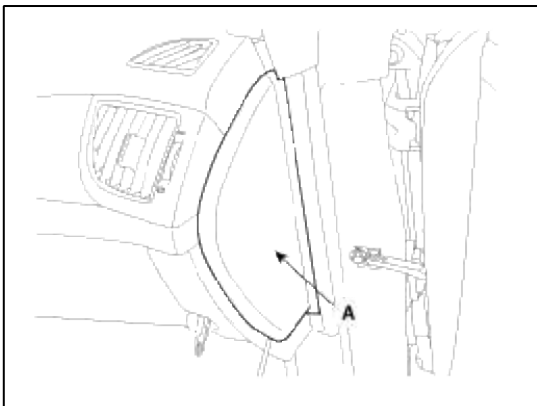


3. Open the glove box. Lower the glove box down completely by removing the glove box damper (A) and lift (B) to the glove box(C).

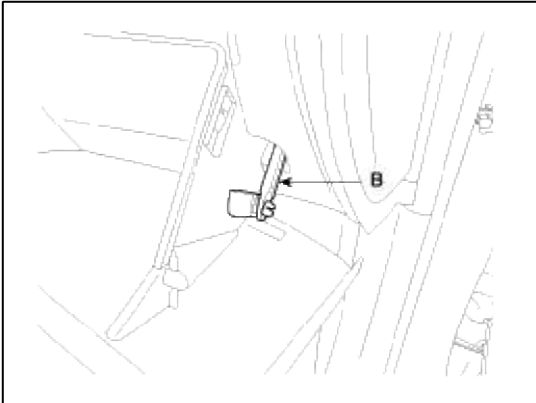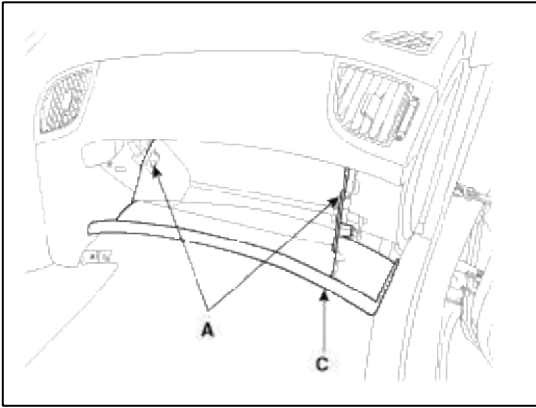

4. Disconnect the mode control actuator connector (A) after removing the air duct.
5. Loosen the mounting screws and then remove the mode control actuator (B).

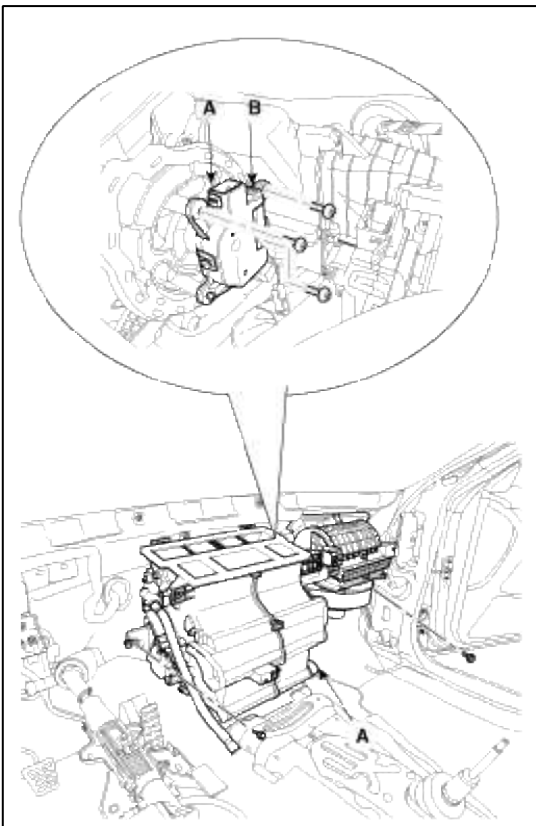


6. Installation is the reverse order of removal.

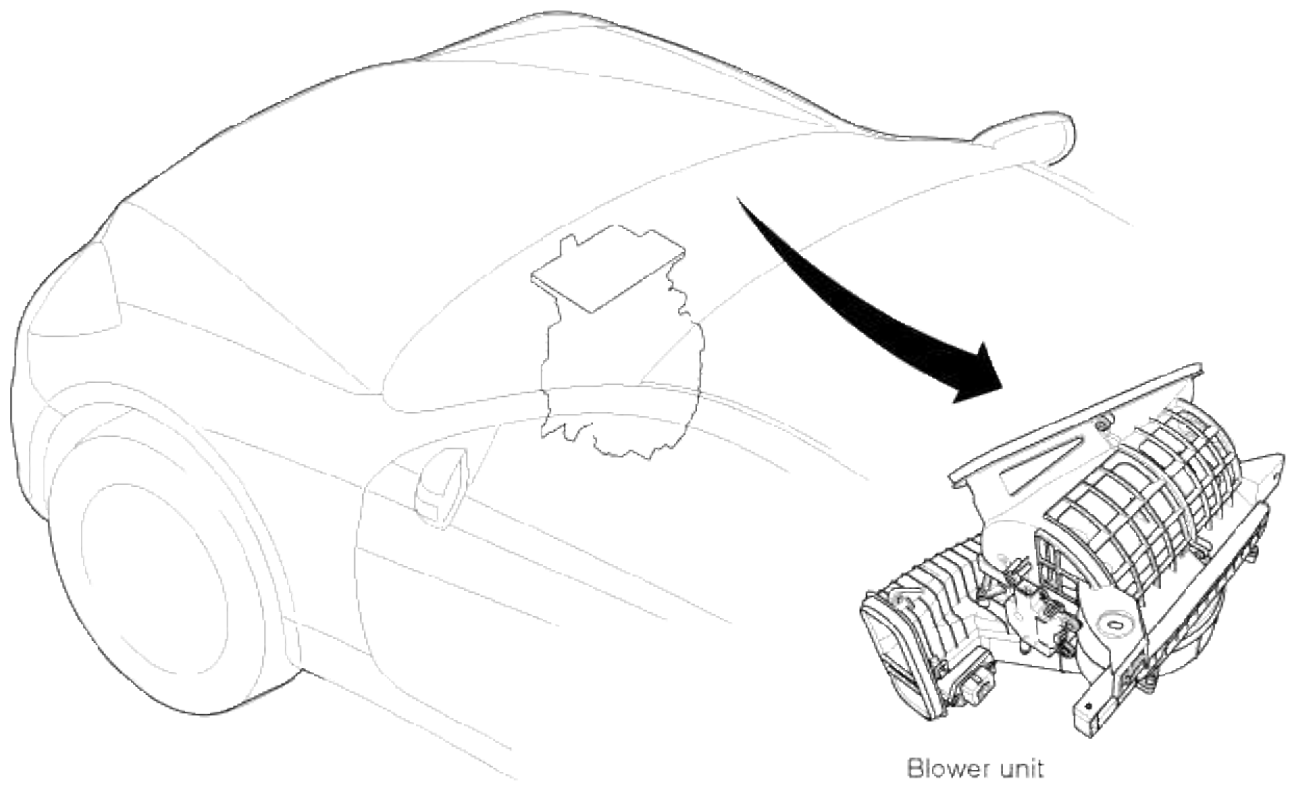

Blower unit

Components

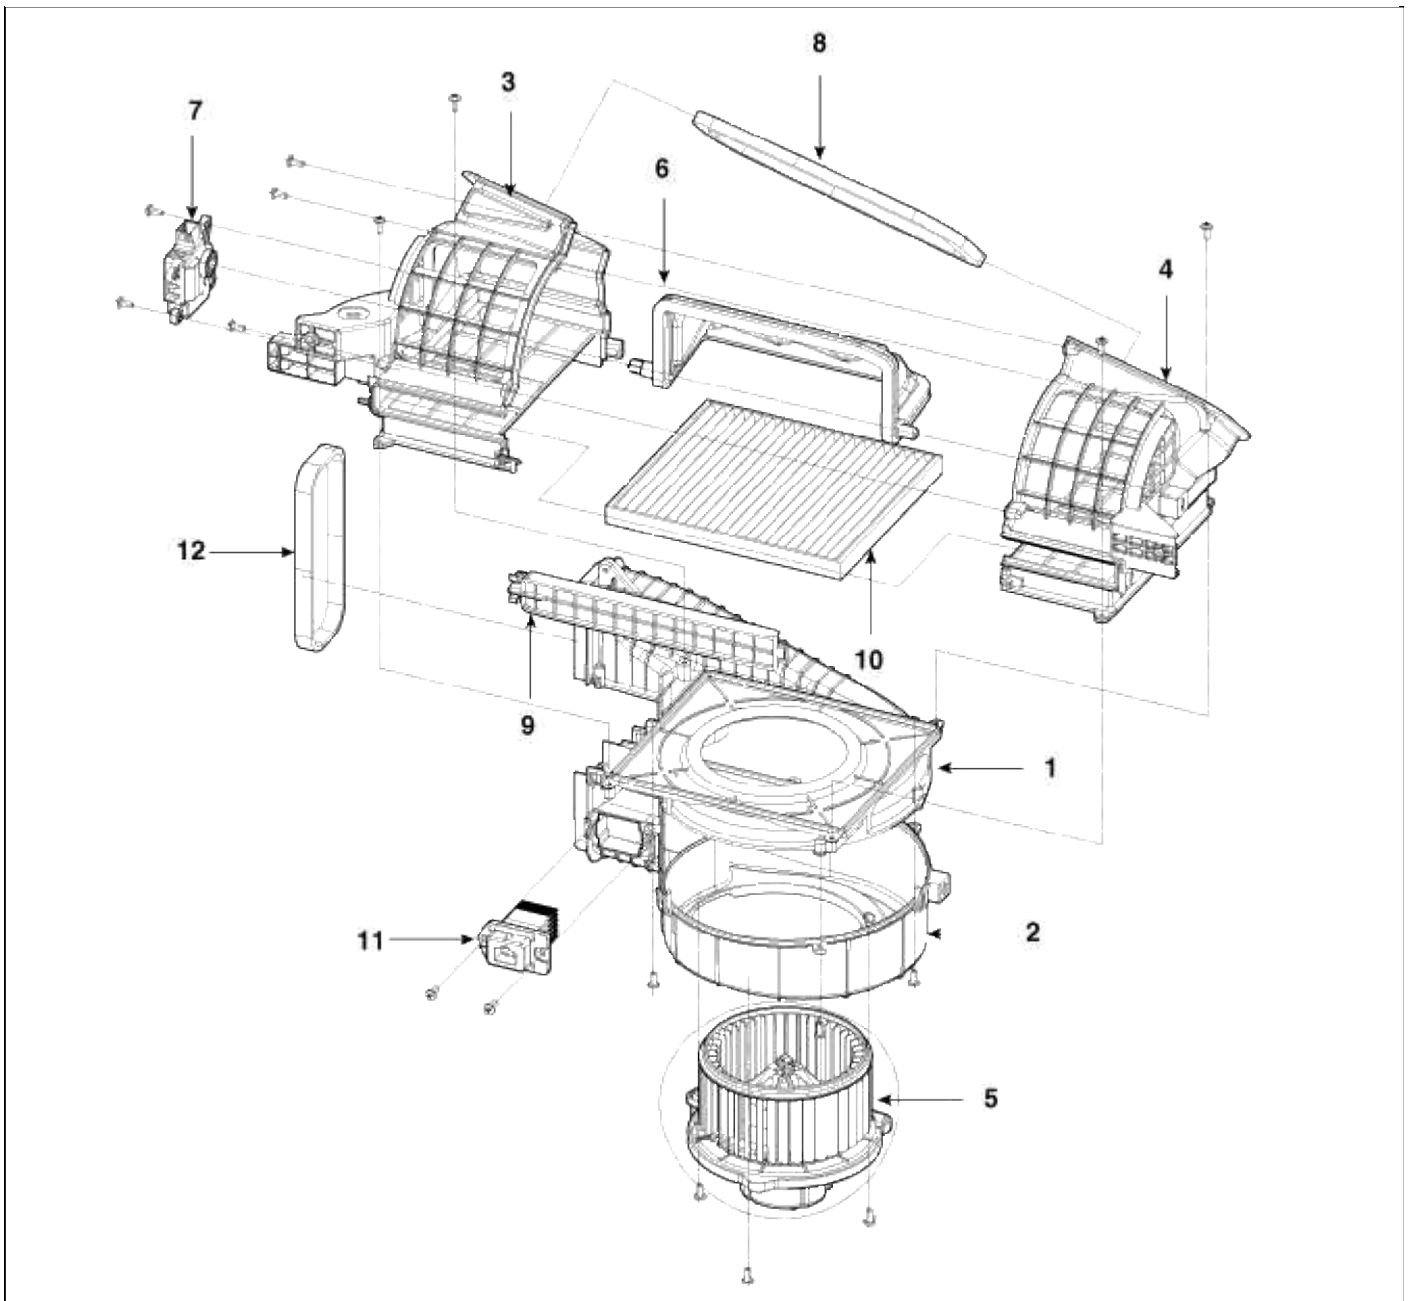


1. Blower upper case	5. Blower motor	9. Climate control air filter cover
2. Blower lower case	6. Intake door	10. Climate control air filter
3. Intake case (L)	7. Intake actuator	11. Power mosfet
4. Intake case (R)	8. Cowl seal	12. Heater matching lining

Heating, Ventilation, Air Conditioning > Blower > Blower Unit > Repair procedures

Replacement

1. Disconnect the negative (-) battery terminal.
2. Remove the crush pad.
(Refer to BD group-crash pad)
3. Remove the cowl cross bar assembly.
(Refer to BD group-crash pad)
4. Remove the heater & blower unit.
(Refer to HA group-heater unit)

- Remove the blower unit from the heater unit (B) after loosening a mounting bolt and 2 screws.

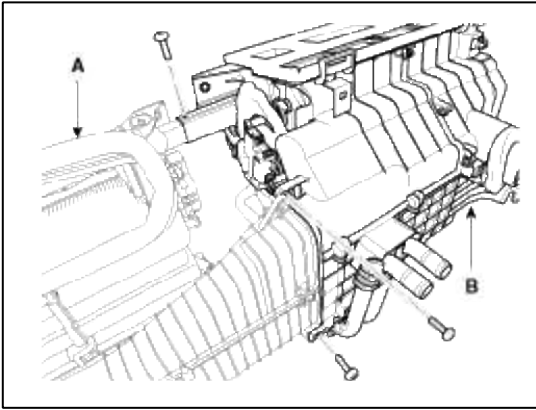

NOTE


Make sure that there is no air leaking out of the blower and duct joints.

- Installation is the reverse order of removal.

Heating, Ventilation, Air Conditioning > Blower > Blower Motor > Repair procedures

Inspection

- Connect the battery voltage and check the blower motor rotation.

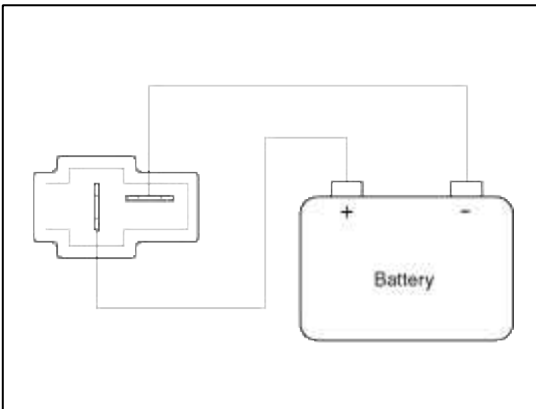


- If the blower motor voltage is not operated well, substitute with a known-good blower motor and check for proper operation.
- If the problem is corrected, replace the blower motor.

Replacement

- Disconnect the negative (-) battery terminal.
- Remove the crashpad under cover (Refer to BD group-Crash pad).
- Disconnect the connector of the blower motor.

4. Remove the blower motor (B) after loosening the mounting screws.

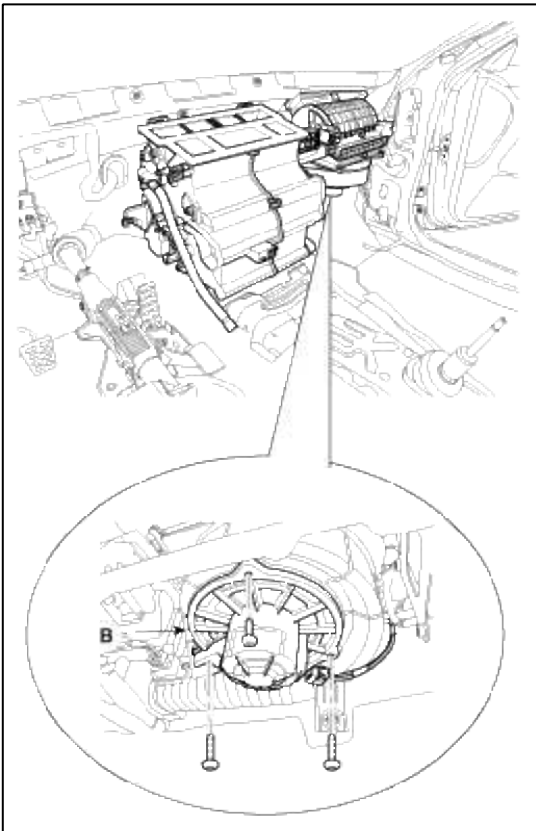


5. Installation is the reverse order of removal.

Heating, Ventilation, Air Conditioning > Blower > Power Mosfet > Repair procedures

Inspection

1. Ignition "ON"
2. Manually operate the control switch and measure the voltage of blower motor between pin 1 and 2.
3. Select the control switch to raise voltage until high speed.

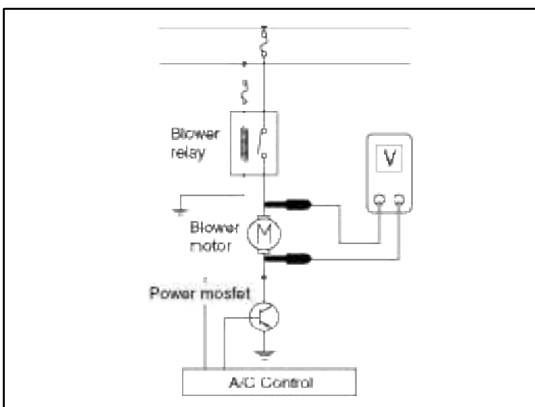

Specification

Fan	Motor Voltage
	Manual
First speed	3.8 ±0.5V
Second speed	4.9 ±0.5V
Third speed	6.1 ±0.5V
Fourth speed	7.2 ±0.5V
Fifth speed	8.3 ±0.5V
Sixth speed	9.5 ±0.5V
Seventh speed	10.6 ±0.5V
eighth speed	Battery


*AUTO COOLING: Auto speed (4.5V~B+)

*AUTO HEATING: Auto speed (4.5V~10.5V)

4. If the measured voltage is not specification, substitute with a known-good power mosfet and check for proper operation.
5. If the problem is corrected, replace the power mosfet.

Replacement

1. Disconnect the negative (-) battery terminal.
2. Remove the crashpad under cover.
(Refer to BD group-Crash pad)
3. Disconnect the power mosfet connector (A) at the connecting part between heater and blower unit.
4. Remove the power mosfet (B) after loosening the mounting screws.

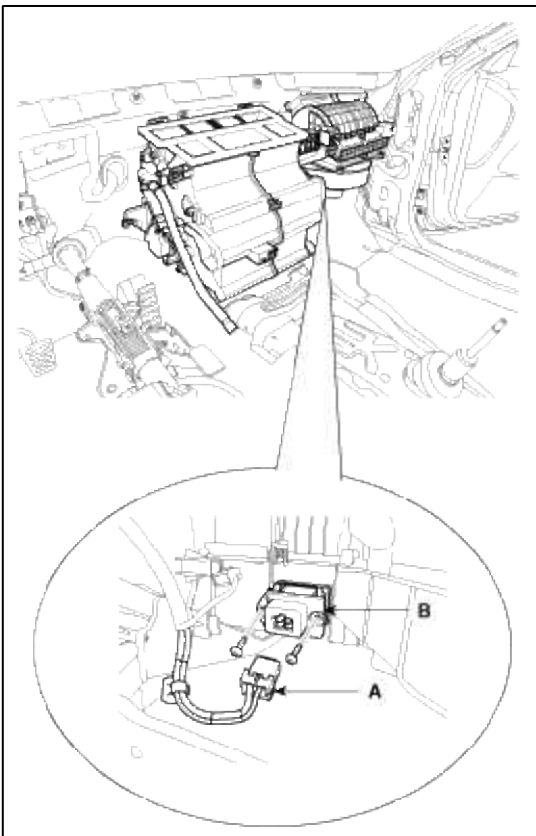

5. Installation is the reverse order of removal.

Heating, Ventilation, Air Conditioning > Blower > Climate control air filter > Description and Operation


Description

This has particle filter which eliminates foreign materials and odor. The particle filter includes odor filter as well as conventional dust filter to ensure comfortable interior environment.


Heating, Ventilation, Air Conditioning > Blower > Climate control air filter > Repair procedures

Replacement


1. Open the glove box (A). Lower the glove box down completely by removing the glove box damper (B) to the glove box.

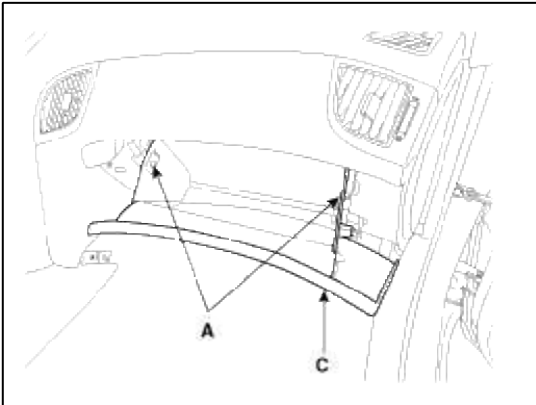


2. Remove the glove box lift (B).

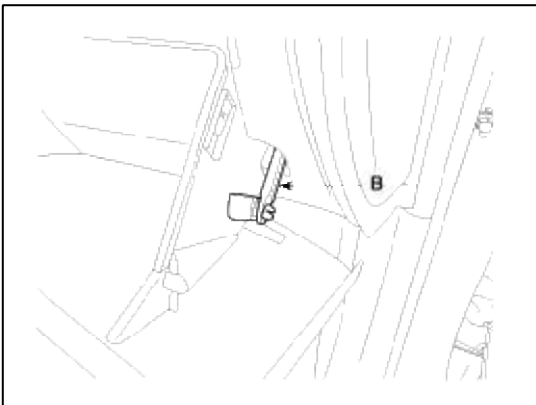

3. Remove the filter cover (A) with pushing the knob.

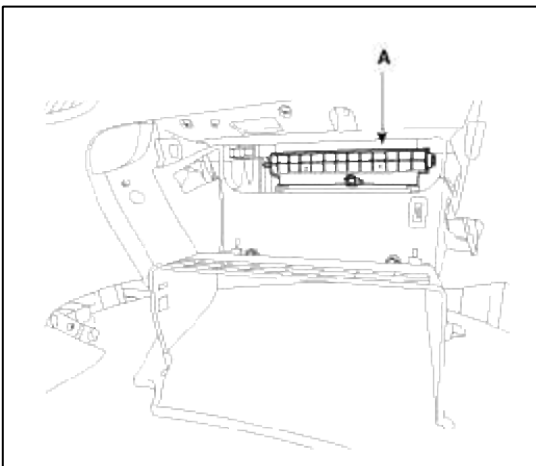

4. Replace the air filter (B), install it after making sure of the direction of air filter.

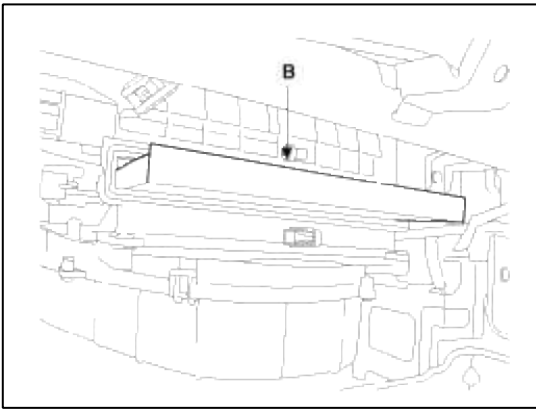


5. Installation is the reverse order of removal.

NOTE

In case of driving in an air-polluted area or rugged terrain, check and replace the air filter as frequently as possible.

Heating, Ventilation, Air Conditioning > Blower > Intake Actuator > Components and Components Location

Component Location

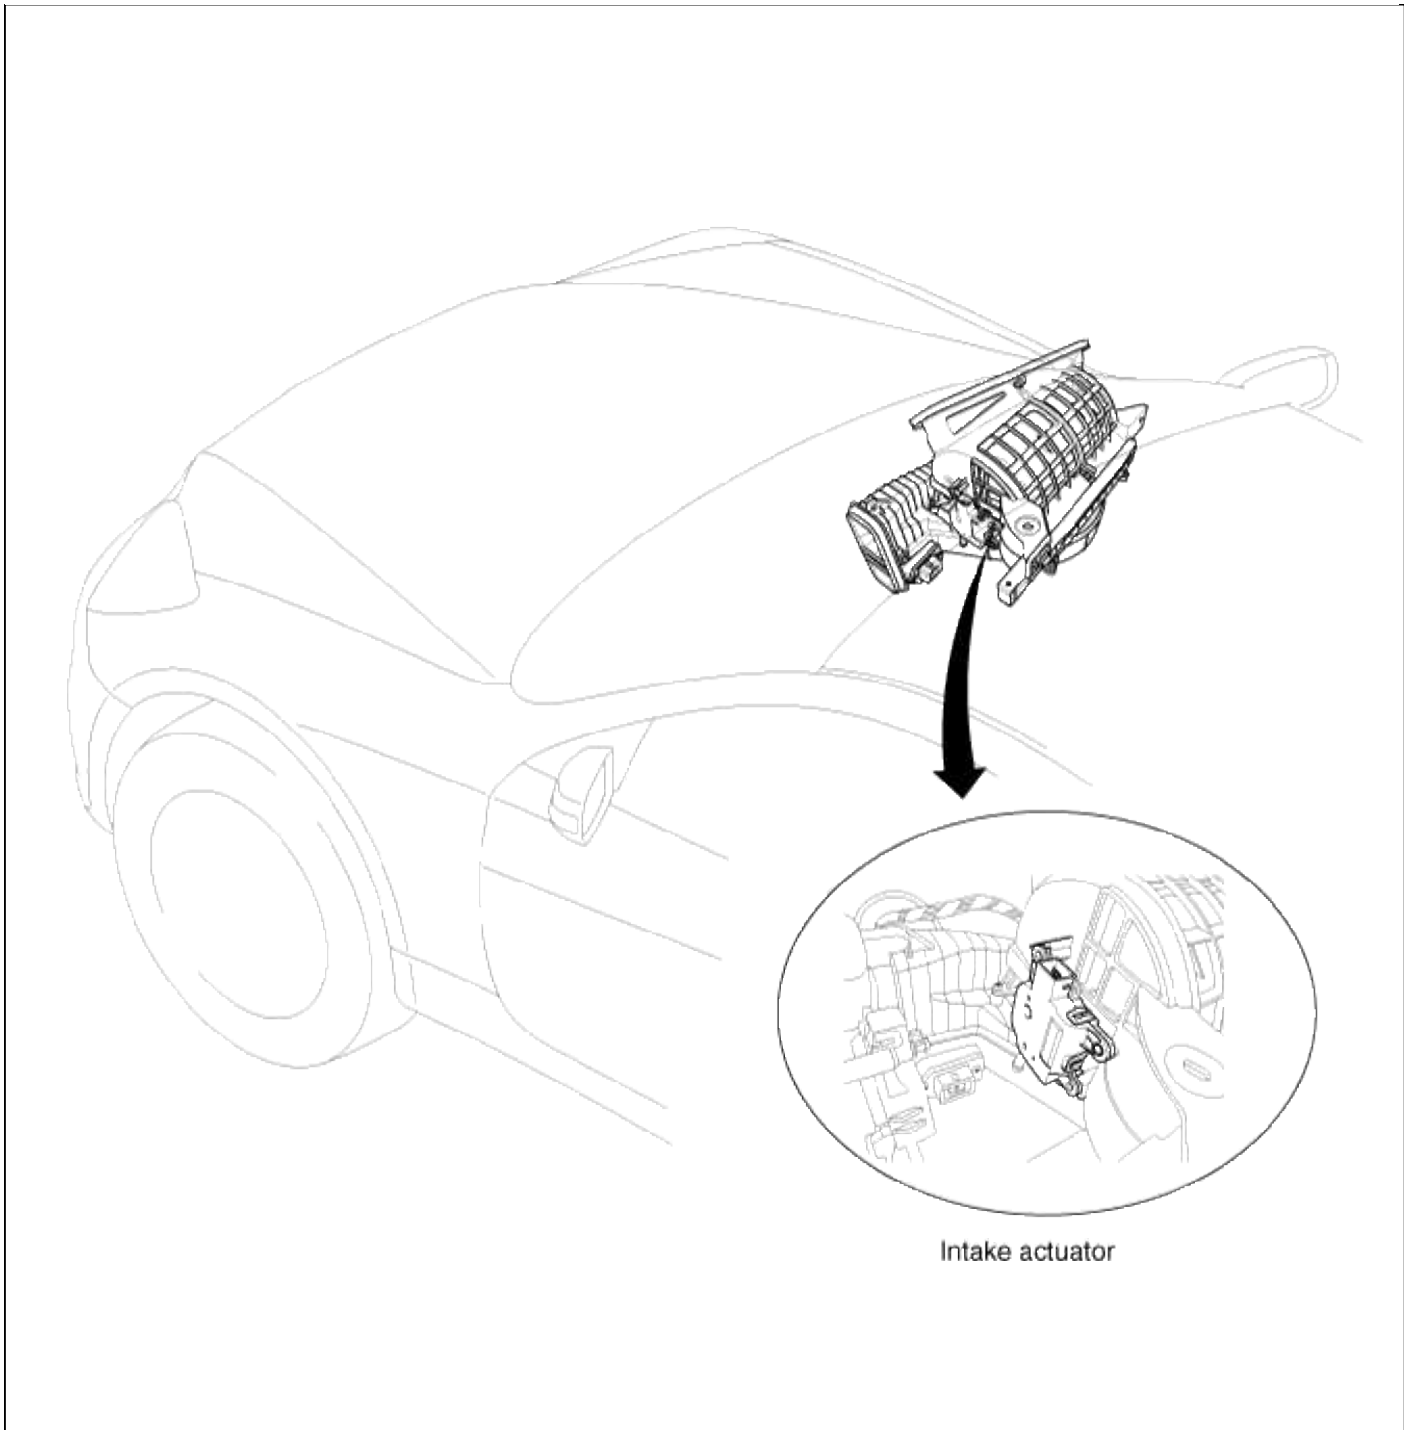

Heating,Ventilation, Air Conditioning > Blower > Intake Actuator > Description and Operation

Description


1. The intake actuator is located at the blower unit.
2. It regulates the intake door by signal from control unit.
3. Pressing the intake selection switch will shift between recirculation and fresh air modes.

Heating,Ventilation, Air Conditioning > Blower > Intake Actuator > Repair procedures

Inspection

1. Ignition "OFF"
2. Disconnect the intake actuator connector.
3. Verify that the actuator operates to the recirculation position when connecting 12V to the terminal 3 and grounding terminal 4.


4. Verify that the intake actuator operates to the fresh position when connecting in the reverse.

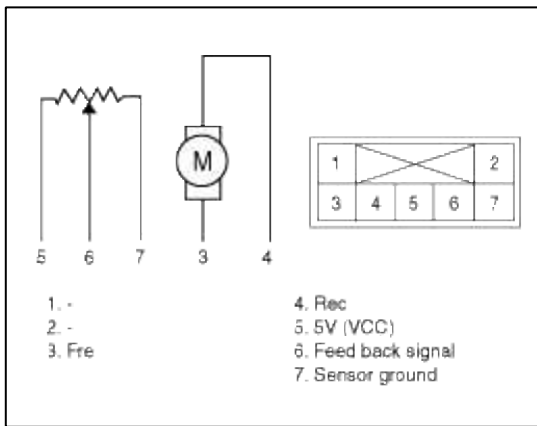

5. If the intake actuator is not operated well, substitute with a known-good intake actuator and check for proper operation.
6. If the problem is corrected, replace the intake actuator.

Replacement




1. Disconnect the negative (-) battery terminal.
2. Remove the crash pad.
(Refer to BD group-crash pad).
3. Disconnect the intake actuator connector.
4. Loosen the mounting screw and then remove the intake actuator (B) from the blower unit.

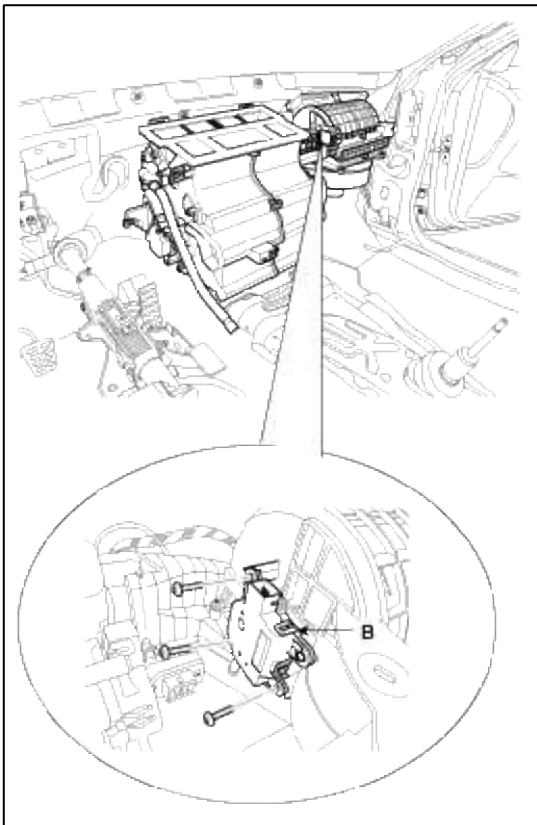

5. Installation is the reverse order of removal.

Heating, Ventilation, Air Conditioning > Controller > Heater & A/C Control Unit(Manual) > Components and Components Location

Component

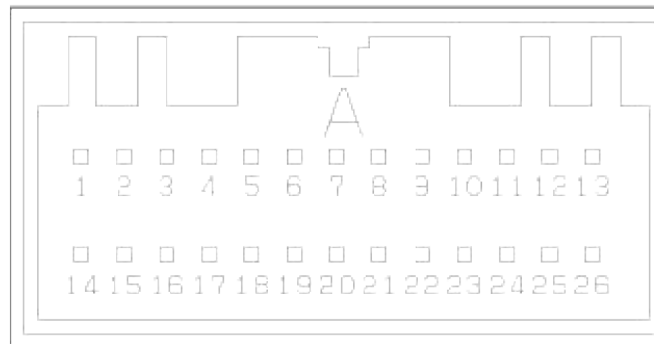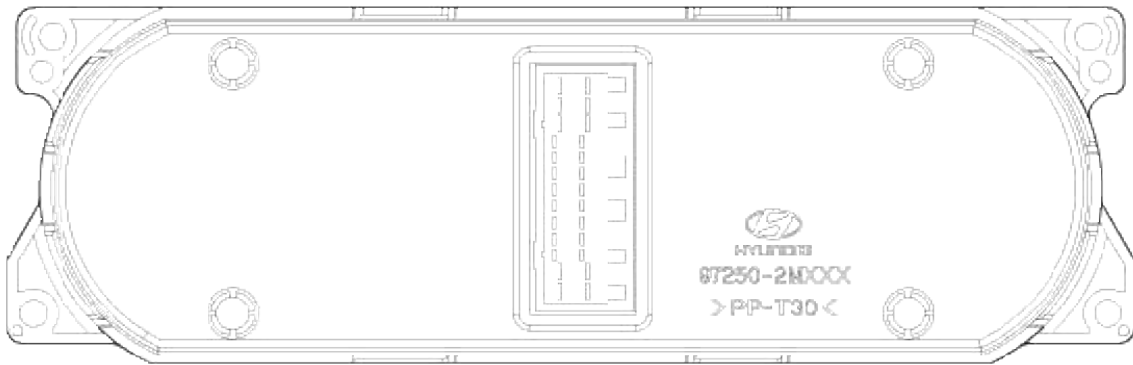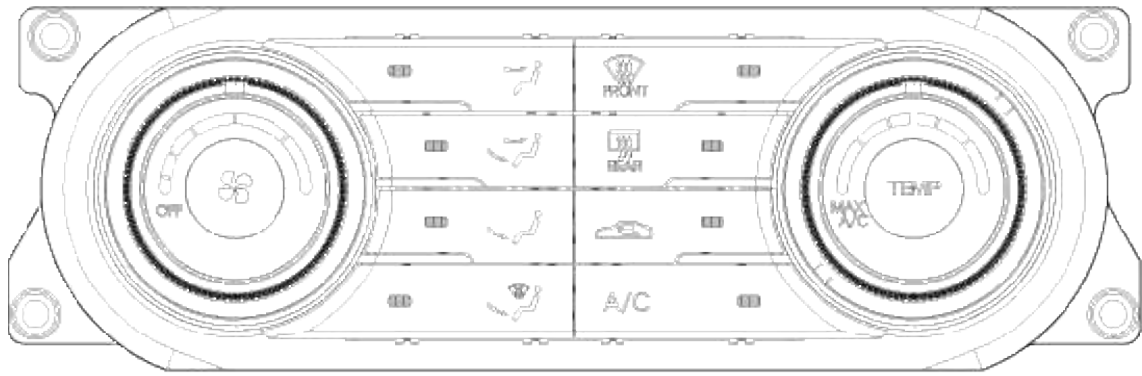

Connector Pin Function


Connector	Pin no.	Function
Connector(A)	1	Battery
	2	Tail lamp (ILL+)
	3	IGN2
	4	Power mosfet (gate)
	5	Mode actuator(Vent)
	6	Mode actuator(Def)
	7	Temp actuator(Cool)
	8	Temp actuator(Warm)
	9	Intake actuator(Fre)
	10	Intake actuator(Rec)
	11	N,C
	12	Rheostat (ILL-)
	13	N,C
	14	Vref(5V)
	15	Blower motor(+)
	16	Power mosfet(Drain)
	17	Mode actuator F/B
	18	Temp actuator F/B
	19	Intake actuator F/B
	20	Evaporator sensor (+)
	21	A/C select(High)
	22	A/C Output(HigH)
	23	RR Def switch
	24	RR Def indicator
	25	GND
	26	Sensor GND

Heating, Ventilation, Air Conditioning > Controller > Heater & A/C Control Unit(Manual) > Repair procedures


Replacement

1. Disconnect the negative (-) battery terminal.



2. Remove the console upper cover (A).

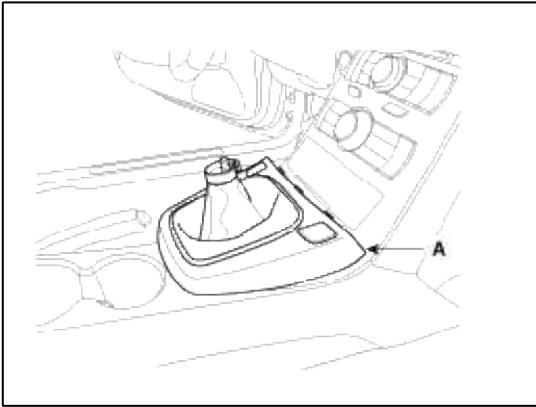


3. Remove the center facia panel (A).

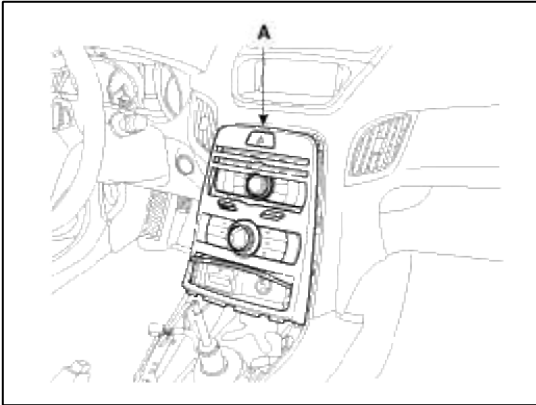

4. Disconnect the connector (A) and then remove the center facia panel (B).

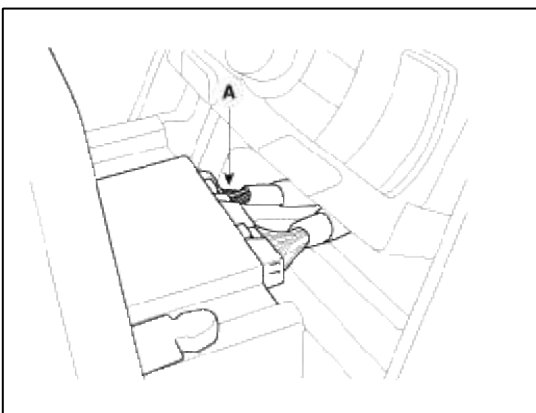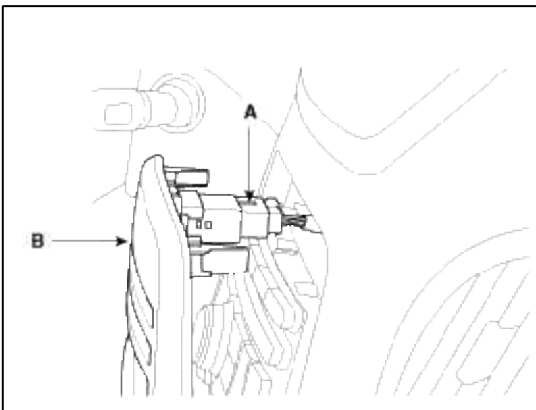




5. Remove the heater & A/C controller (A) from center facia panel.

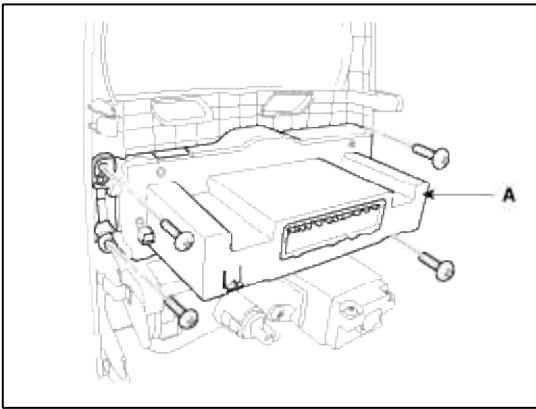

6. Installation is the reverse order of removal.

Heating,Ventilation, Air Conditioning > Controller > Heater & A/C Control Unit(Full Automatic) > Components and Components Location

Component

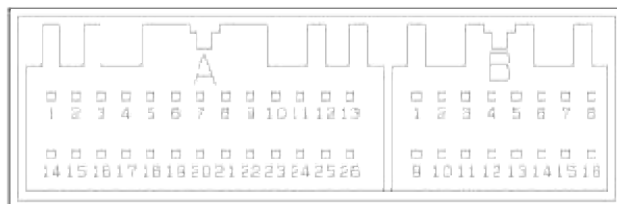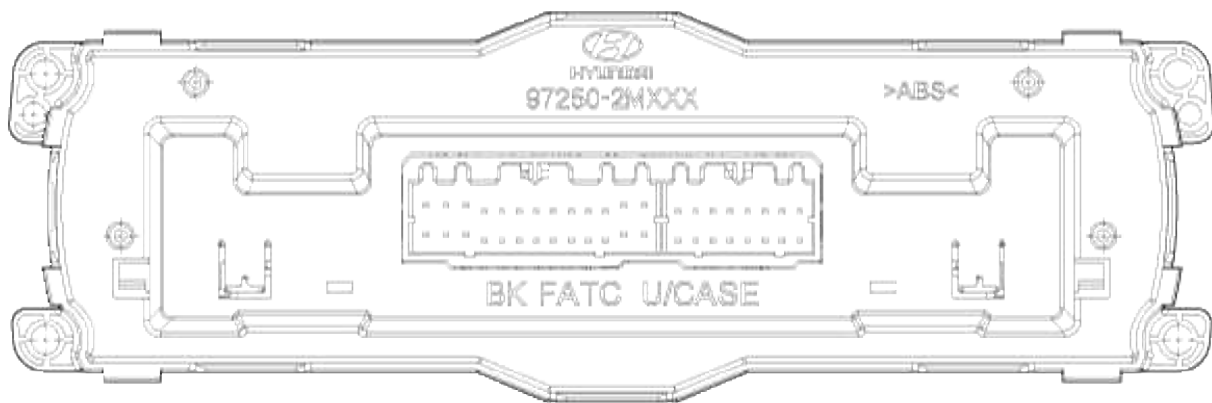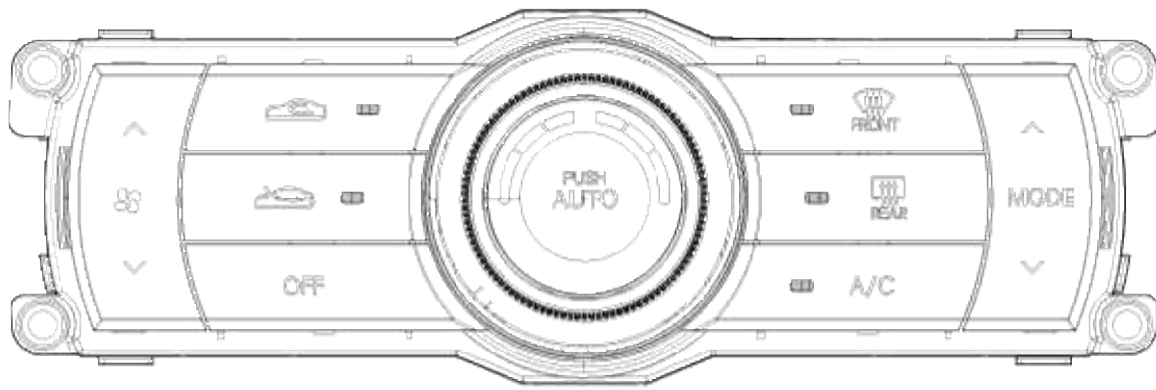


Connector Pin Function

Connector	Pin	Function	Connector	Pin	Function
Connector (A)	1	Battery	Connector (B)	1	N,C
	2	Tail lamp(ILL+)		2	N,C
	3	IGN2		3	Incar sensor
	4	Power mosfet(Gate)		4	Speed sensor
	5	Mode actuator(Vent)		5	Ambient sensor
	6	Mode actuator(Def)		6	HI-Scan
	7	Temp actuator(Cool)		7	N,C
	8	Temp actuator(Warm)		8	N,C
	9	Intake actuator(Fre)		9	Photo sensor(+)
	10	Intake actuator(Rec)		10	Photo sensor(-)
	11	N,C		11	Water sensor(-)
	12	Rheostat(ILL-)		12	N,C
	13	N,C		13	N,C
	14	Vref(5V)		14	Multi media can(L)
	15	Blower motor(+)		15	Multi media can(H)
	16	Power mosfet(Drain)		16	GND
	17	Mode actuator F/B			
	18	Temp actuator F/B			
	19	Intake actuator F/B			
	20	Evaporator sensor			
	21	A/C Select(High)			
	22	A/C Output(High)			
	23	RR Def switch			
	24	RR Def indicator			
	25	GND			
	26	Sensor GND			

Heating,Ventilation, Air Conditioning > Controller > Heater & A/C Control Unit(Full Automatic) > Repair procedures

SELF-DIAGNOSIS

1. Self-diagnosis process

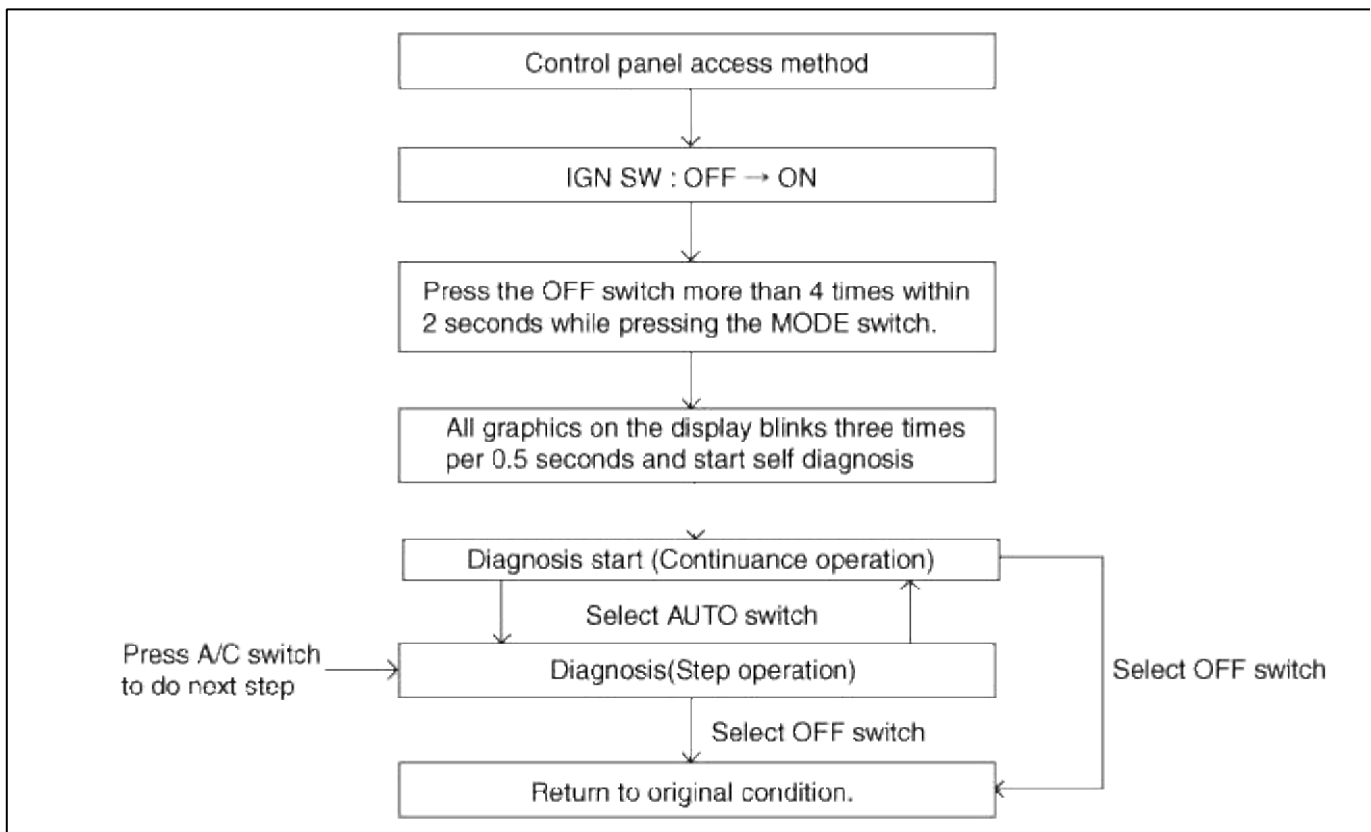**NOTE**

DTC data can be retrieved from the control panel directly or from the DLC using the Hi-Scan Pro.

2. How to read self-diagnostic code


After the display panel flickers three times every 0.5 second, the corresponding fault code flickers on the setup temperature display panel every 0.5 second and will show two figures. Codes are displayed in numerical format.

Fault code


NO.	Fail description
00	Normal
11	Incar sensor OPEN
12	Incar sensor SHORT
13	Ambient sensor OPEN
14	Ambient SHORT
15	Water temp sensor OPEN
16	Water temp sensor SHORT
17	Evaporator sensor OPEN
18	Evaporator sensor SHORT
19	Temp potentiometer OPEN/SHORT
20	Temp potentiometer FAULT
21	Mode potentiometer OPEN/SHORT
22	Mode potentiometer FAULT
25	Intake potentiometer OPEN/SHORT

3. Fault code display

(1) Continuance operation : DTC code is one

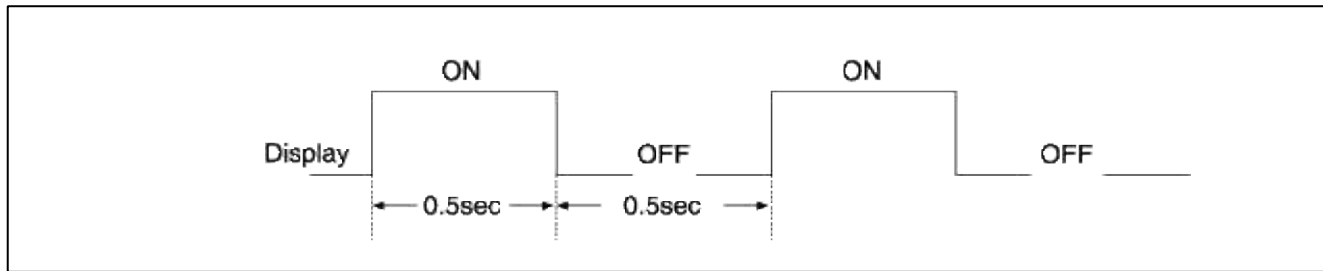


(2) Continuance operation : DTC code is more two

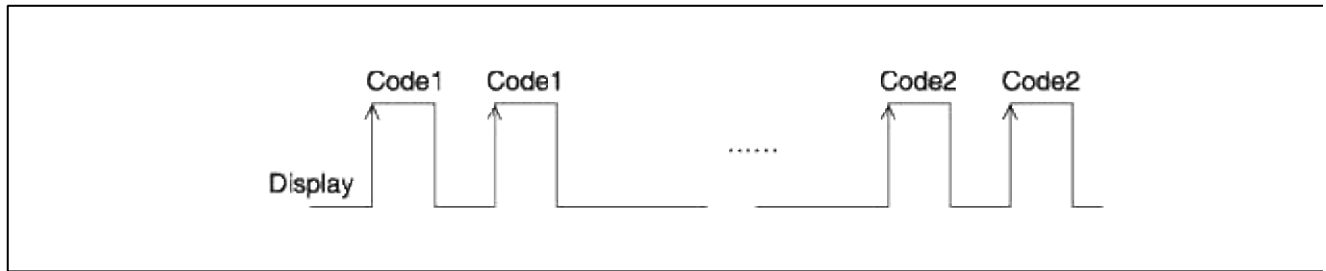

(3) Step operation

A. Nomal or one fault code is same a continuance

B. DTC code is more two

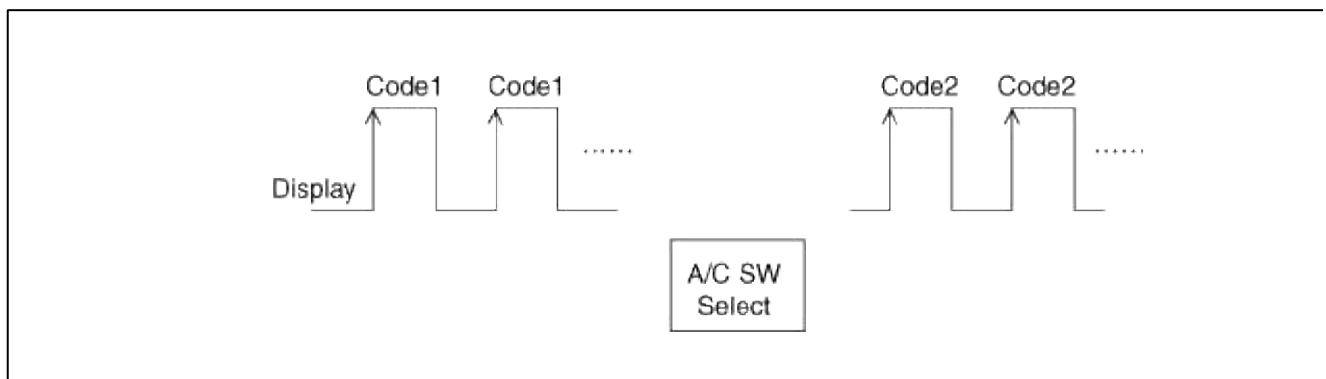

4. If fault codes are displayed during the check, Inspect malfunction causes by referring to fault codes.

5. Fail safe

(1) Inicar sensor : Control with the value of 23°C(73°F)

(2) Ambient temperature sensor: Control with the value of 20°C(67°F)

(3) Evaporator temperature sensor: Control with the value of -2°C(28.4°F)

(4) Water temperature sensor : Control with the value of 85°C (185°F)

(5) Temperature control actuator (Air mix potentiometer):

If temperature setting 17°C-24.5°C, fix at maximum cooling position.

If temperature setting 25°C-32°C, fix at maximum heating position

(6) Mode control actuator (Direction potentiometer):

Fix vent position, while selecting vent mode.

Fix defrost position, while selecting all except vent mode.


(7) Intake control actuator :

Fix fresh position, while selecting fresh mode.


Fix recirculation position, while selecting recirculation mode.

Replacement



1. Disconnect the negative (-) battery terminal.
2. Remove the console upper cover (A).

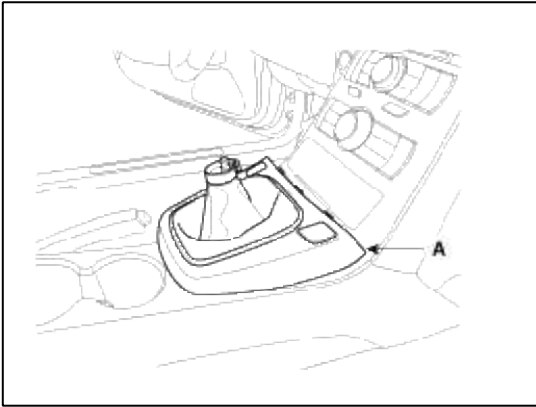


3. Remove the center facia panel (A).

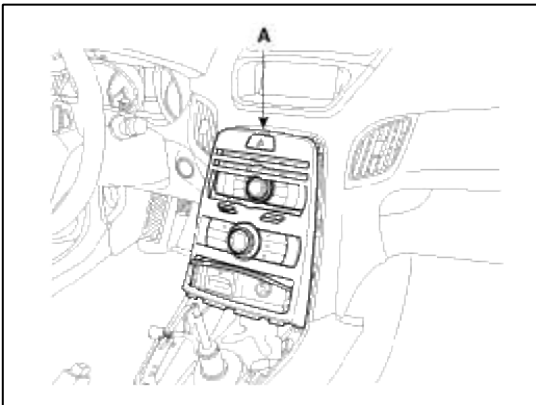

4. Disconnect the connector (A) and then remove the center facia panel (B).

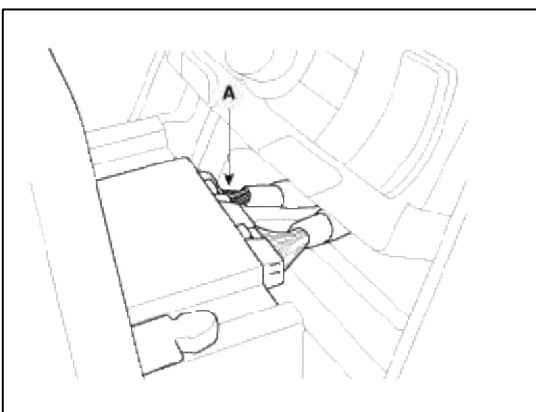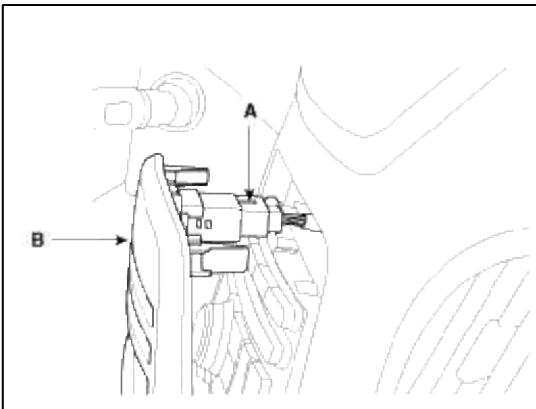

5. Remove the heater & A/C controller (A) from center facia panel.

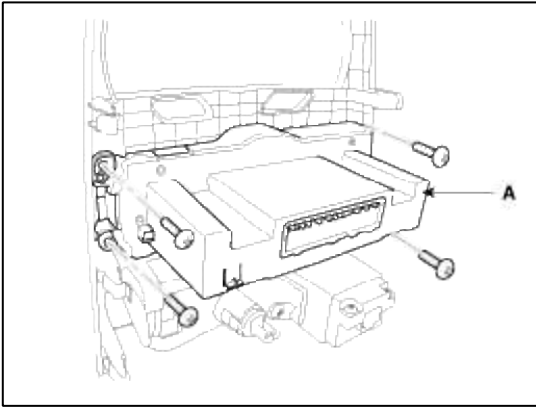

6. Installation is the reverse order of removal.

GENESIS COUPE(BK) > 2013 > G 3.8 GDI > Manual Transaxle System

Manual Transaxle System > General Information > Specifications

Specifications


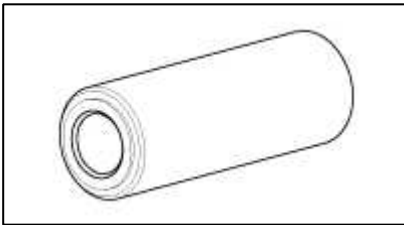
Transmission type		M6VR2
Engine type		Gasoline 3.8 GDI
Gear ratio	1st	3.848
	2nd	2.317
	3rd	1.623
	4th	1.233
	5th	1.000
	6th	0.794
	Reverse	3.985
Final gear ratio		3.538

Lubricants

Items	Recommend lubricant	Quantity
Transmission gear oil	SAE 75W/85 API GL-4	2.2ℓ(2.3US qt, 1.94Imp qt)
Transmission housing	MS721-40	As required

Manual Transaxle System > General Information > Special Service Tools

Special Service Tools


Tool (Number and Name)	Illustration	Use
09452-25200 Oil seal installer		Installation of extension housing oil seal
09432-25400 Oil seal installer		Installation of control shaft oil seal

Manual Transaxle System > Manual Transaxle System > Description and Operation

Main character

- Optimized design with compact and less weight through analyzing partial systems.

- Structure of 5th gear ratio(1:1) to improve power and fuel economy (forward 6th speed, backward 1st speed)
- Multi-cone synchronizer to improve shift feeling and minimize shifting force
 - 1,2,3rd : Triple-cone synchronizer
 - 4th : Double cone synchronizer
- 'HIGH FORCE TYPE' for shifting to 'R'
 - Better shift feeling and sporty
 - How to shift 'R' : swiftly pull the lever to the left and shift to 'R'

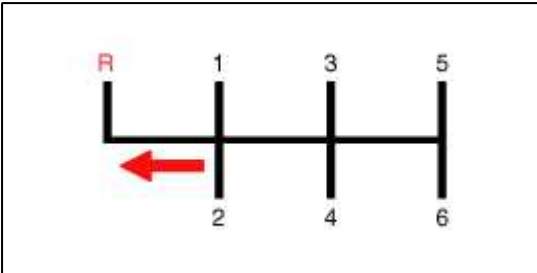

- Gear teeth optimization and grinding surface of teeth for noise reduction (2nd to 6th gear)
- Applying permanent transmission fluid with low viscosity


Manual Transaxle System > Manual Transaxle System > Repair procedures

Service Adjustment Procedure


Transmission Gear Oil Level

Inspection

1. Remove oil filler plug (A).

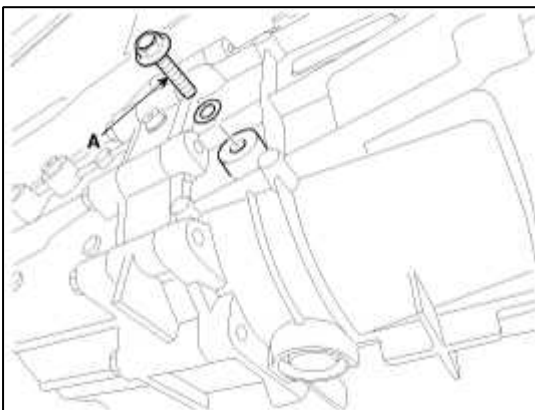

2. Check level with finger.
Oil level must be up to fill the hole, if not, add oil until it runs over.

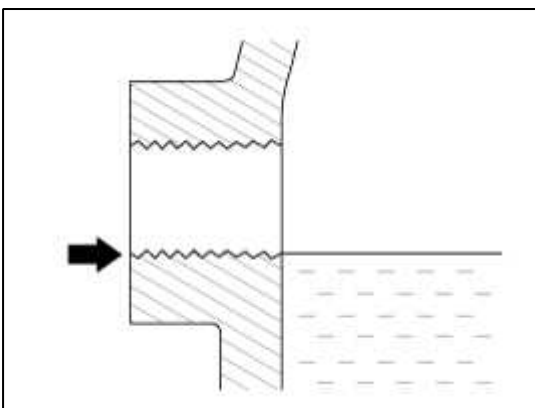


3. Install filler plug with a new gasket.

Tightening torque :

60 ~ 80 N.m (6.0 ~ 8.0 kgf.m, 43.4 ~ 57.8 lb-ft)

Replacement

1. With the vehicle parked on a level surface, remove the drain plug.
2. Drain the transmission oil after loosening the drain plug (A).

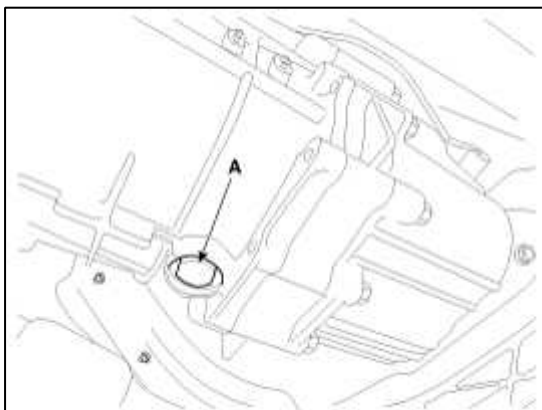

3. Install the drain plug with new gasket.

Tightening torque :

60 ~ 80 N.m (6.0 ~ 8.0 kgf.m, 43.4 ~ 57.8 lb-ft)

4. Add new oil through the filler hole and, fill it just below the plug opening.
-


Standard oil : SAE 75W/85, API GL-4

Oil capacity : 2.2ℓ(2.3US qt, 1.94Imp qt)

Extension Housing Oil Seal

Replacement


1. Remove the popellar shaft from the transmission by removing the bolts(A-3ea).

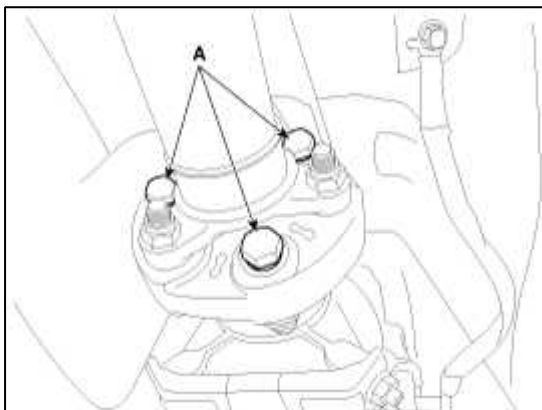


2. After releasing the caulking, remove the flange assembly by removing the locking nut(35mm) and O-ring.

CAUTION

Do not reuse locking nut and O-ring.

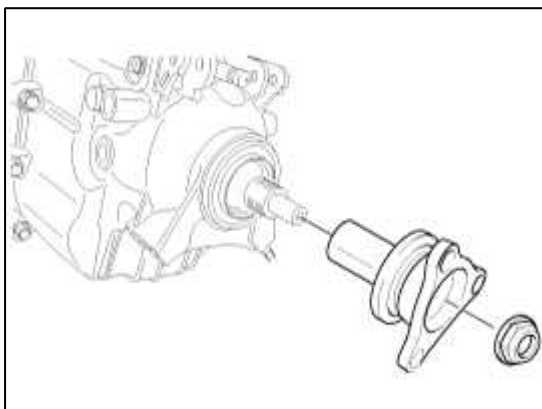

3. Remove the oil seal by using a screw driver.

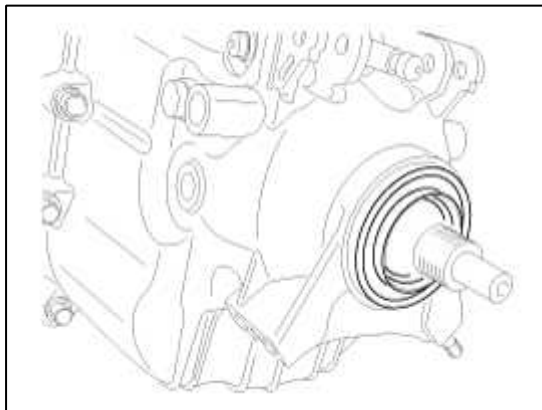


4. Replace a new one and install the oil seal by using the special service tool (09452-25200).

5. Apply the lithium grease (0.2 ~ 0.5g) to lip of the oil seal.

6. Install the removed parts in reverse order of removal.


Manual Transaxle System > Manual Transaxle System > Manual Transaxle > Components and Components Location

Components (1)

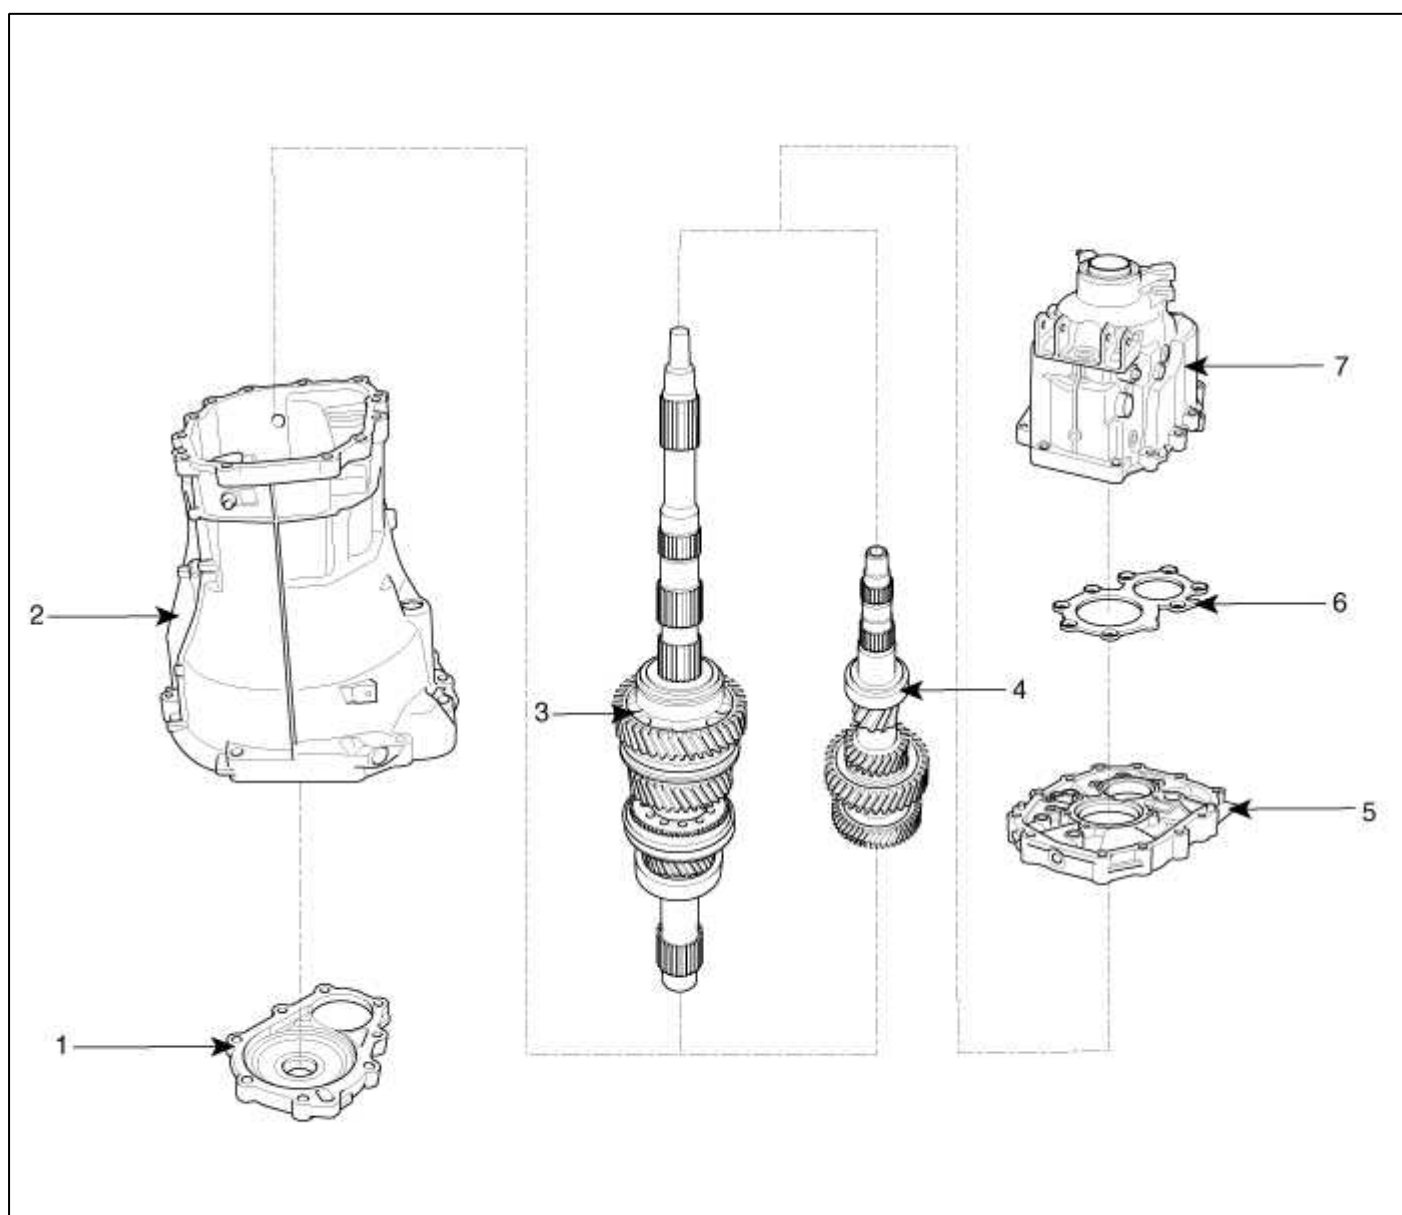

1. Front bearing retainer assembly	5. Intermediate plate
2. Transmission case assembly	6. Rear bearing retainer
3. Main shaft assembly and main drive assembly	7. Extension housing assembly
4. Counter shaft assembly	

Components (2)

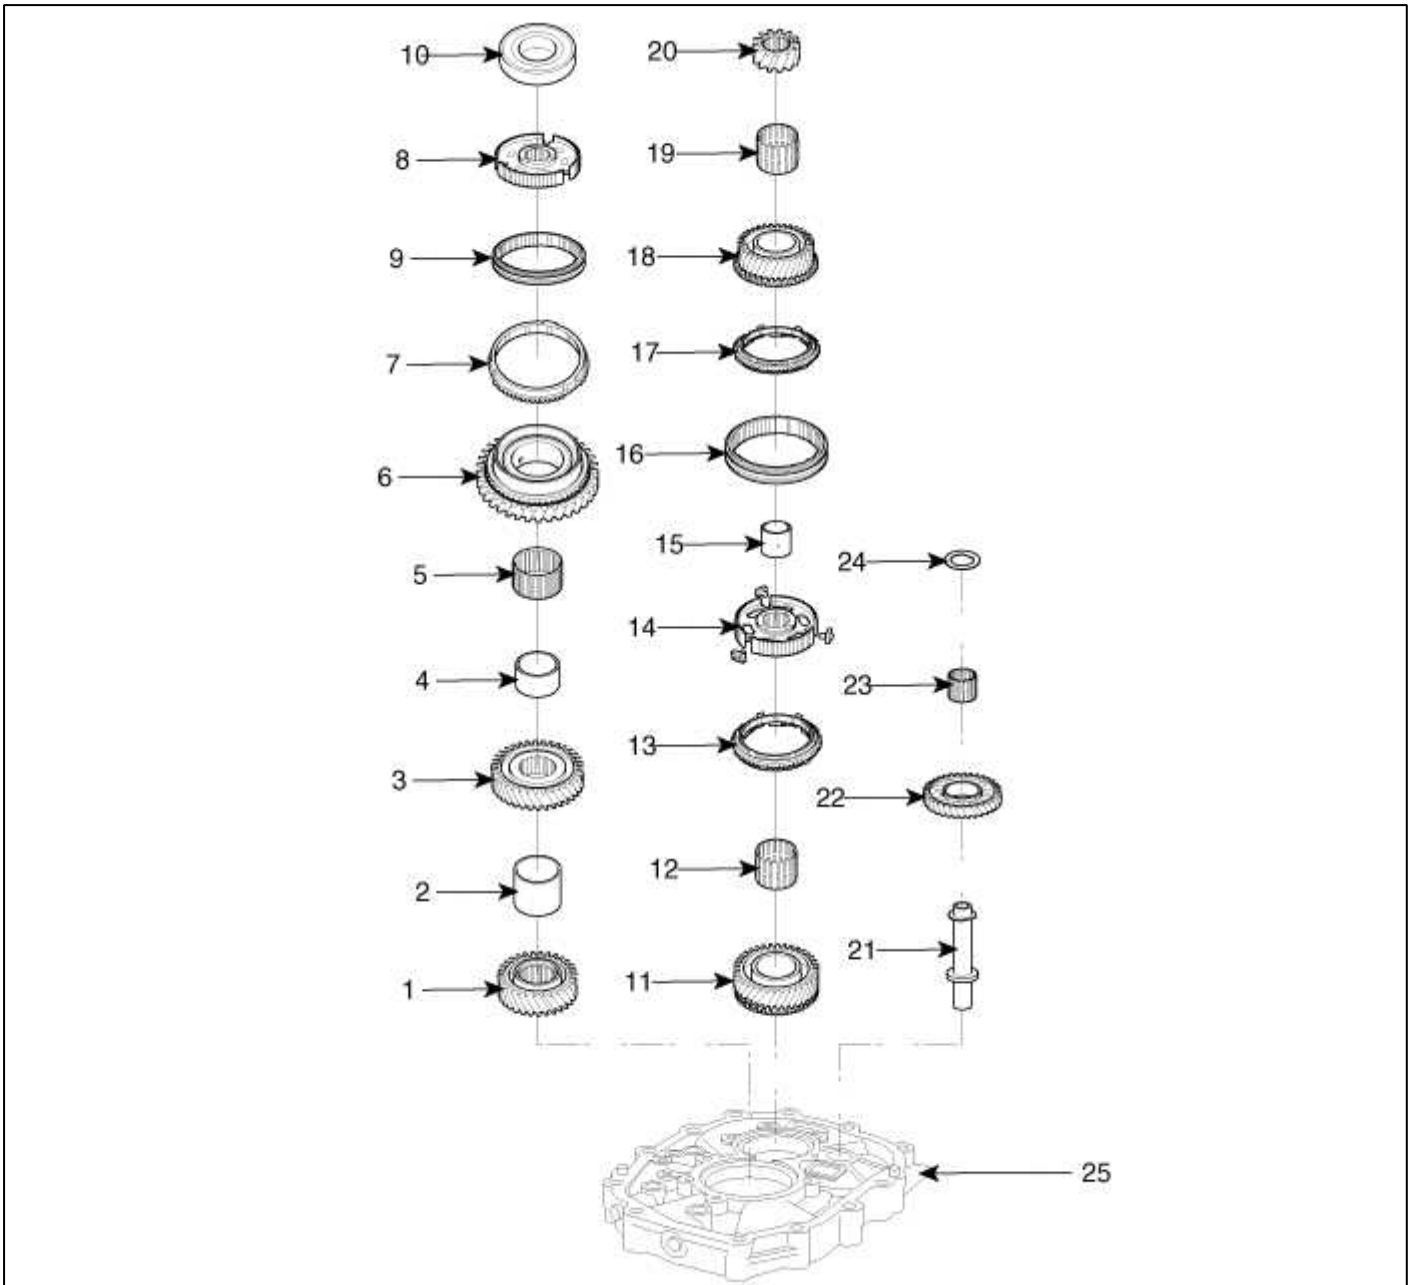


1. 4th gear	10. Ball bearing	19. Needle roller bearing
2. Spacer	11. 4th speed gear	20. Counter reverse gear
3. 3rd gear	12. Needle roller bearing	21. Reverse idler shaft
4. Reverse gear sleeve	13. Synchronizer ring assembly	22. Reverse idler gear
5. Needle roller bearing	14. 3&4th synchronizer hub	23. Needle roller bearing
6. Reverse speed gear	15. 3rd gear sleeve	24. Reverse spacer
7. Synchronizer ring	16. 3&4th synchronizer sleeve	25. Intermediate plate
8. Reverse synchronizer hub	17. Synchronizer ring assembly	
9. Reverse synchronizer sleeve	18. 3rd speed gear	

Removal

- Use fender covers to avoid damaging painted surfaces.
- To avoid damage, unplug the wiring connectors carefully while holding the connector portion.
- Mark all wiring and hoses to avoid misconnection.


1. Disconnect the (-) terminal from the battery in order to prevent current flow through wire.

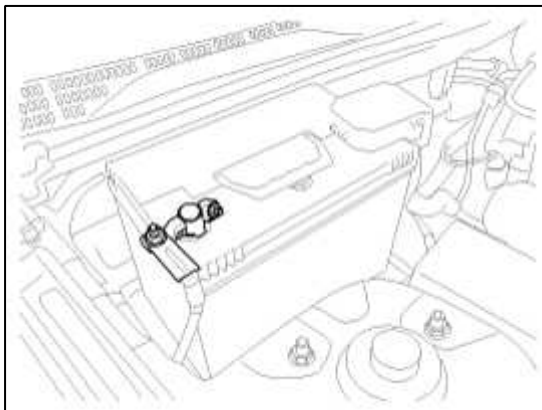


2. Drain the transmission fluid by removing the drain plug (A).

Tightening torque :



60 ~ 80 N.m (6.0 ~ 8.0 kgf.m, 43.4 ~ 57.8 lb-ft)

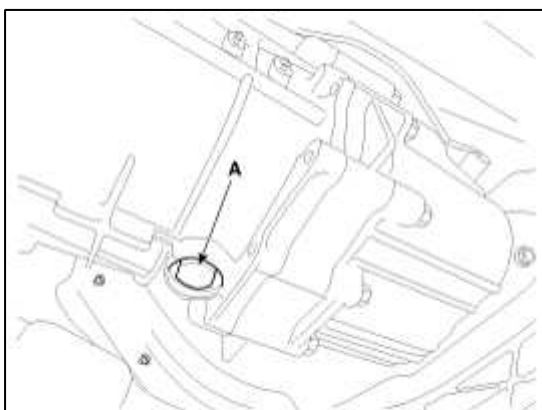


3. Remove the ground wire by removing a bolt.

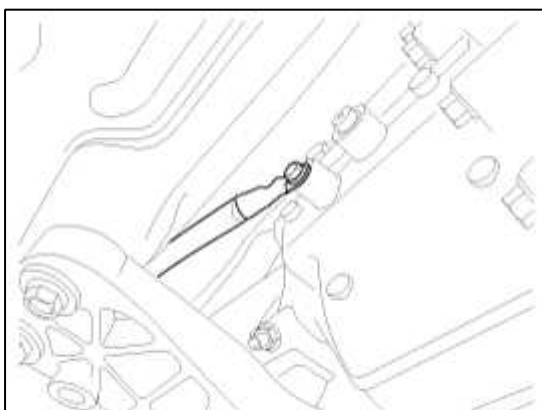


4. Disconnect the oxygen sensor connectors (A,B) from both sides of transmission.

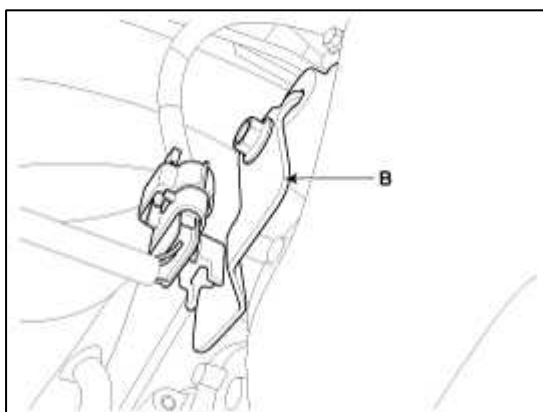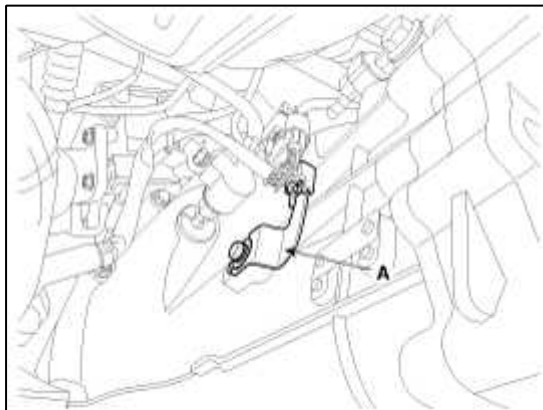


5. Disconnect the back up lamp switch connector.

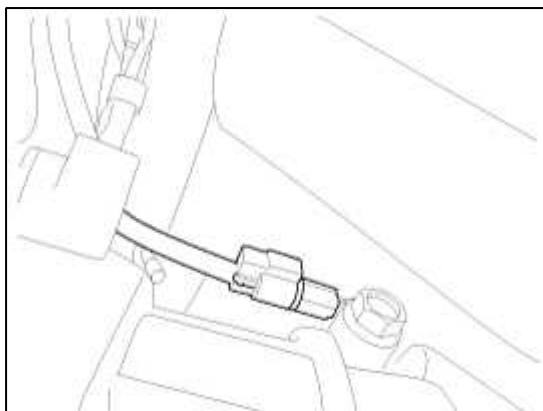


6. Remove the CKP sensor (A) by removing a bolt.

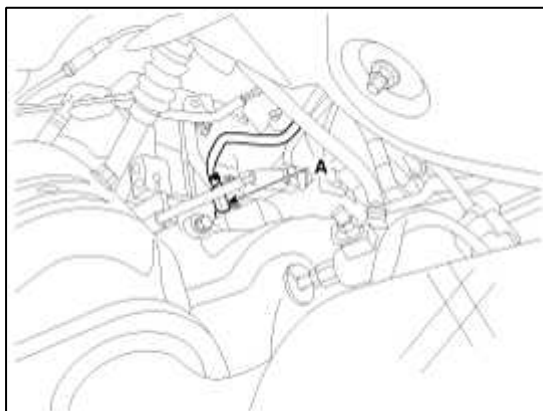



7. Remove the clutch hose from the C.S.C assembly.

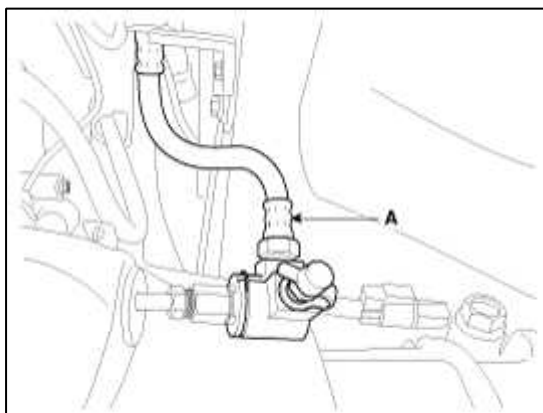


8. Remove the propeller shaft from the transmission by removing the bolts (A-3ea).

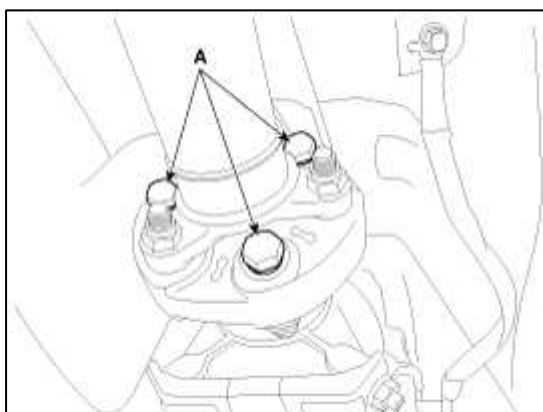


9. Remove the base bracket (C) and select rod (D) from the transmission by removing the clips (A-2ea) and snap pin (B).

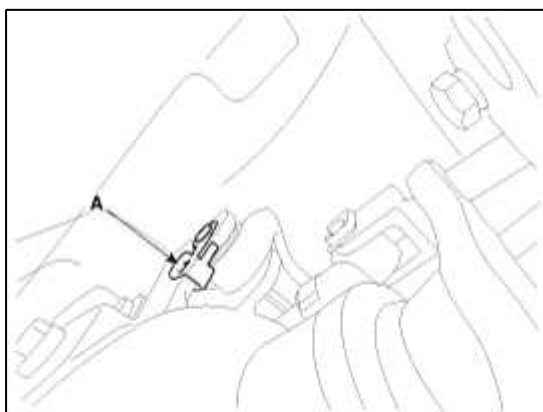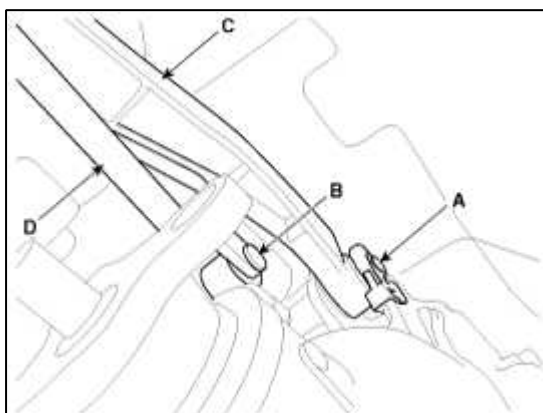


10. Remove the under shield cover (A).

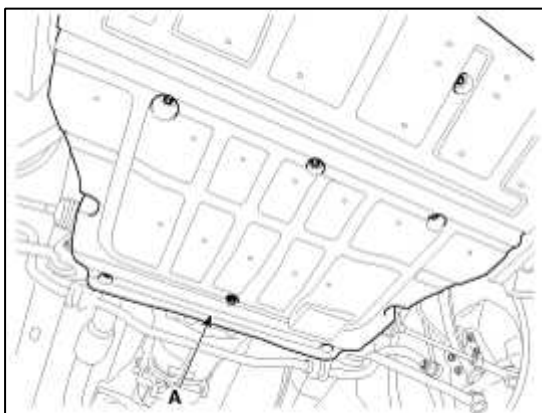


11. After supporting the transmission assembly with a jack, remove the crossmember (A) by removing the bolts(4ea).

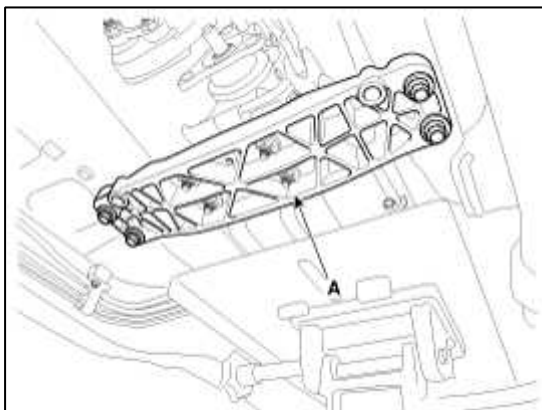


12. Remove the mounting bolts (A-4ea) from the engine side.

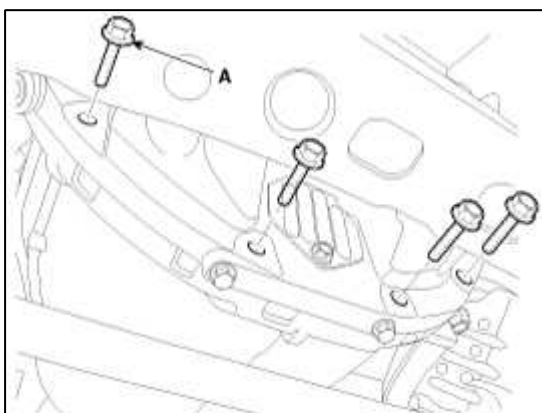


13. Remove the mounting bolts (A,B) left in the engine side.

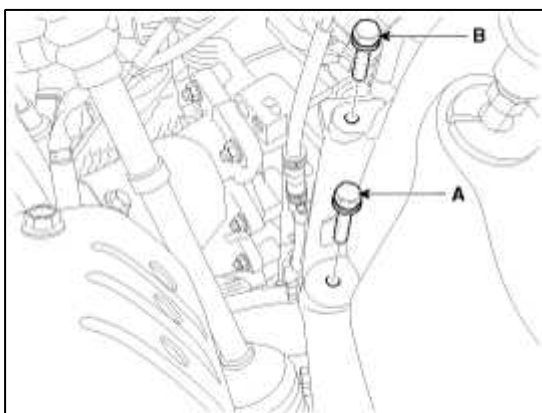

14. Remove the starter motor mounting bolt (A) and nut (B).

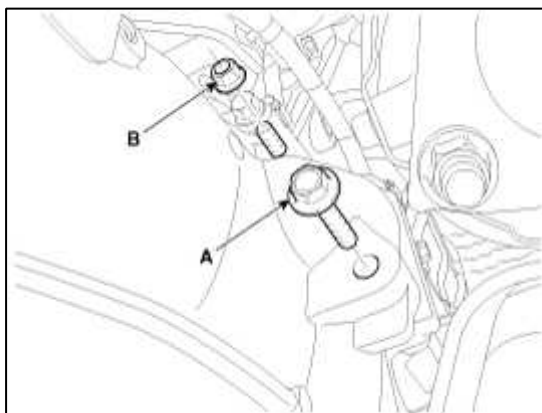

15. Remove the mounting bolts (A-2ea) on the transmission.

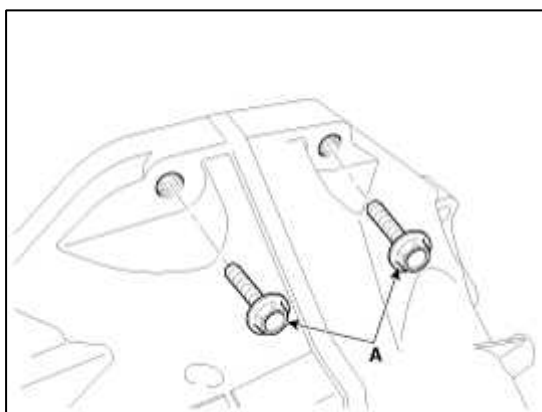

16. Lowering the jack slowly, remove the transmission assembly.

CAUTION

Be careful not to damage to wire, tubes or suspension parts.

NOTE

In case remove the transmission mounting bracket assembly from the transmission assembly.

Tightening torque :


50 ~ 65 N.m (5.0 ~ 6.5 kgf.m, 36.2 ~ 47.0 lb-ft)

Installation

1. Temporarily install the transmission assembly to the engine assembly.
2. Install the mounting bolts (A-2ea) on the transmission.

Tightening torque :


65 ~ 85 N.m (6.5 ~ 8.5 kgf.m, 47.0 ~ 61.5 lb-ft)

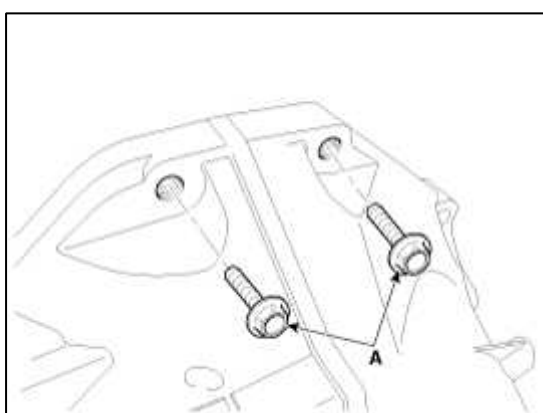

3. Install the starter motor mounting bolt (A) and nut (B).
-

Tightening torque :

43 ~ 55 N.m (4.3 ~ 5.5 kgf.m, 31.1 ~ 39.8 lb-ft)

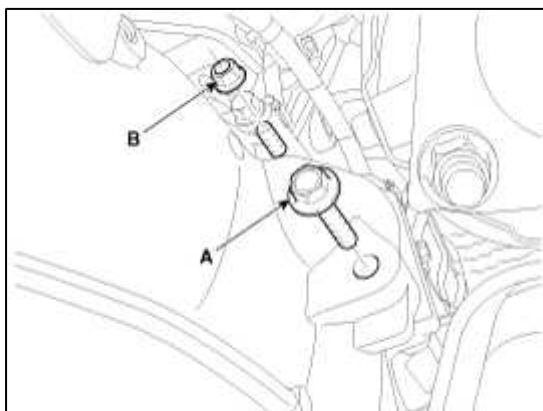


4. Install the mounting bolts (A,B) left in the engine side.
-

Tightening torque :

[A] 65 ~ 85 N.m (6.5 ~ 8.5 kgf.m, 47.0 ~ 61.5 lb-ft)


[B] 35 ~ 47 N.m (3.5 ~ 4.7 kgf.m, 25.3 ~ 34.0 lb-ft)

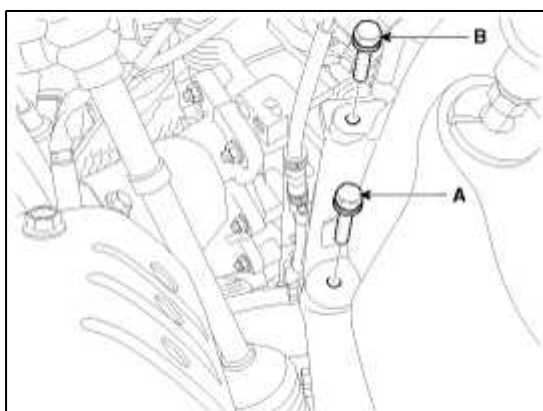

5. Install the mounting bolts (A-4ea) from the engine side.
-

Tightening torque :


43 ~ 49 N.m (4.3 ~ 4.9 kgf.m, 31.1 ~ 35.4 lb-ft)

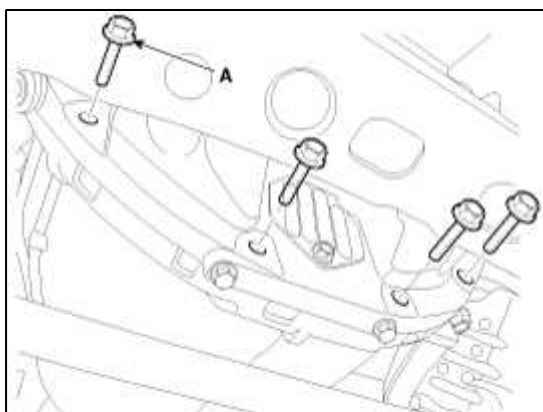


6. Install the crossmember (A) by installing the bolts(4ea) and put aside the supporting jack.

Tightening torque :



50 ~ 65 N.m (5.0 ~ 6.5 kgf.m, 36.2 ~ 47.0 lb-ft)

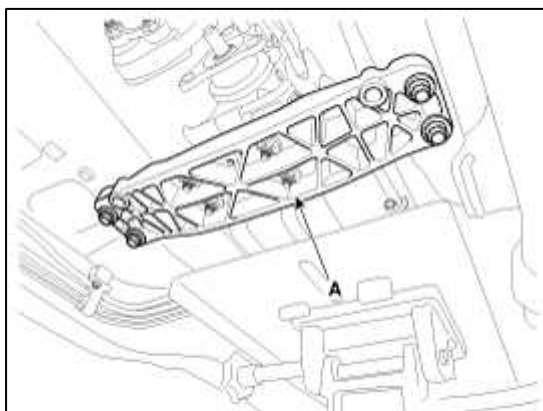

7. Install the under shield cover (A).

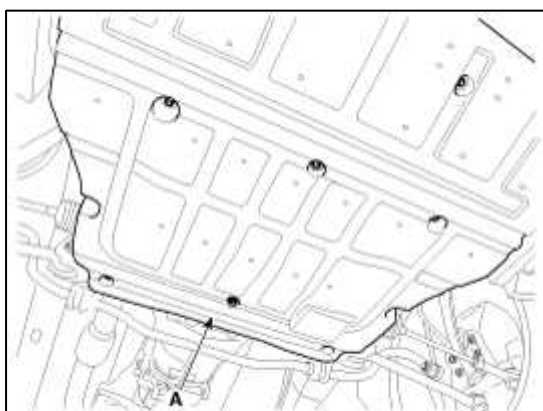


8. Install the base bracket (C) and select rod (D) to the transmission with clips (A-2ea) and snap pin (B).

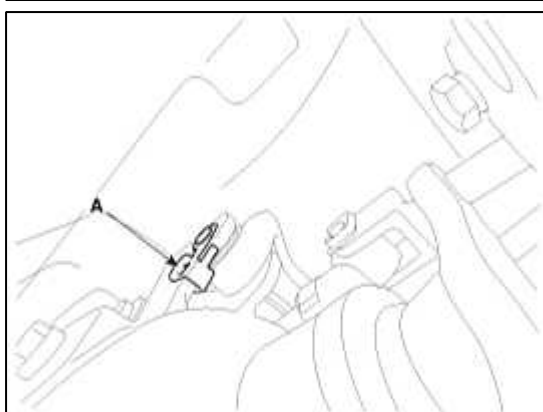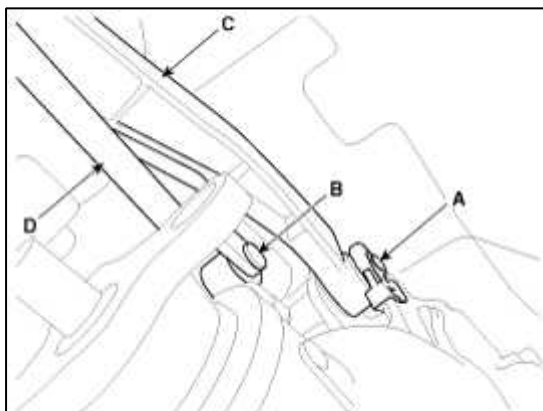

9. Install the propellar shaft to the transmission by installing the bolts (A-3ea).

Tightening torque :


90 ~ 110 N.m (9 ~ 11 kgf.m, 65.1 ~ 79.5 lb-ft)

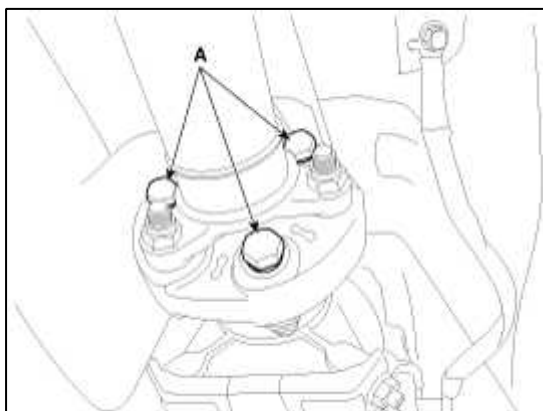


10. Install the clutch hose (A) to the C.S.C assembly.

NOTE


In case of loss of clutch fluid , refill the fluid. (refer to Bleeding in CH group)

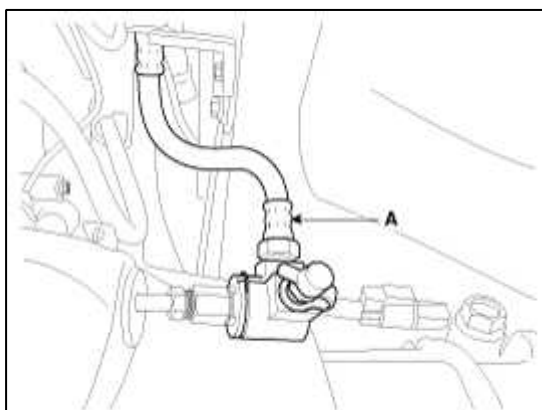



11. Install the CKP sensor (A) by installing a bolt.

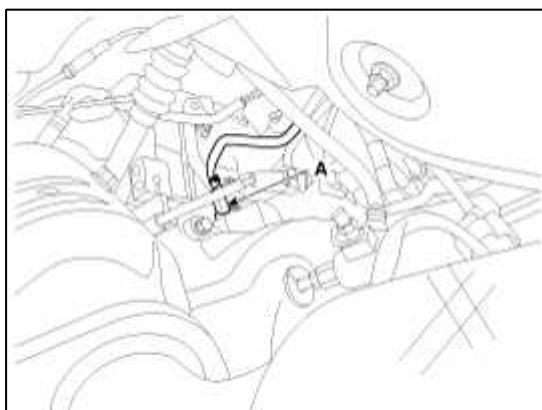


12. Connect the back up lamp switch connector.

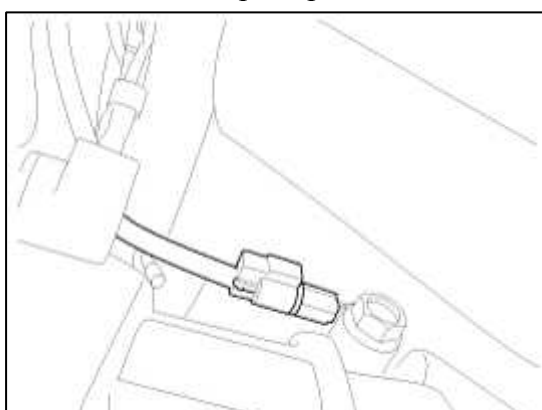


13. Connect the oxygen sensor connectors (A,B) from both sides of transmission.

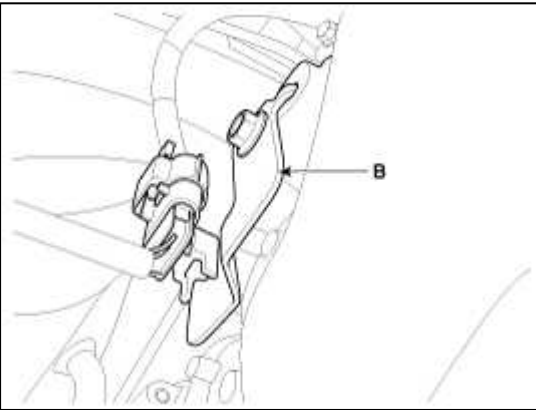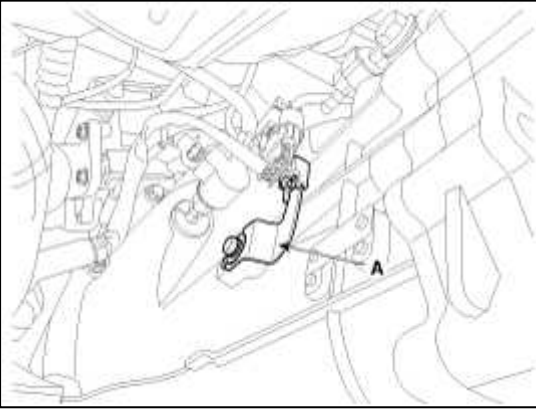

14. Install the ground wire by installing a bolt.

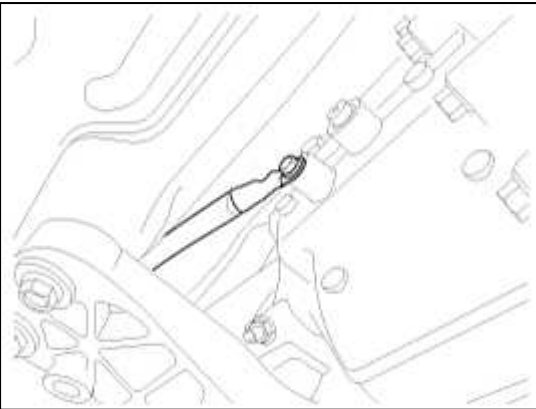

15. Connect (-) terminal to the battery.

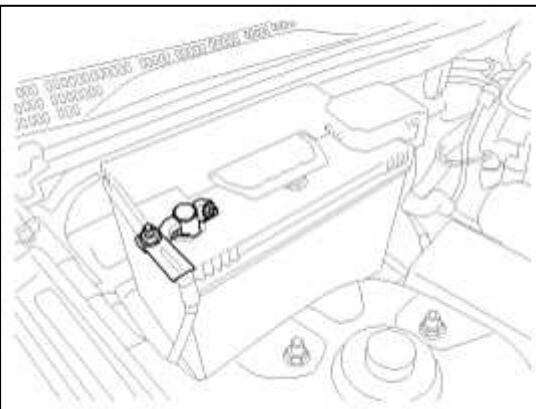

16. Refill the transmission fluid.
(Refer to Service Adjustment Procedure)

GENESIS COUPE(BK) > 2013 > G 3.8 GDI > Restraint**Restraint > General Information > General Information**

General

The supplemental restraint system (SRS) is designed to supplement the seat belt to help reduce the risk or severity of injury to the driver and passenger by activating and deploying the driver, passenger, side airbag and belt pretensioner in certain frontal or side collisions.

The SRS (Airbag) consists of ; a driver side airbag module located in the center of the steering wheel, which contains the folded cushion and an inflator unit ; a passenger side airbag module located in the passenger side crash pad contains the folded cushion assembled with inflator unit ; side airbag modules located in the front seat contain the folded cushion and an inflator unit ; curtain airbag modules located inside of the headliner which contains folded cushions and inflator units. The impact sensing function of the SRSCM is carried out by electronic accelerometer that continuously measure the vehicle's acceleration and delivers a corresponding signal through amplifying and filtering circuitry to the microprocessor.

SRSCM (SRS Control Module)

SRSCM will detect front impact with front impact sensor, and side impact with side impact sensor, and determine airbag module deployment.

1. DC/DC converter: DC/DC converter in power supply unit includes up/down transformer converter, and provide ignition voltage for 2 front airbag ignition circuits and the internal operation voltage of the SRSCM. If the internal operation voltage is below critical value setting, it will perform resetting.
2. Back up power supply: SRSCM has separate back up power supply, that will supply deployment energy instantly in low voltage condition or upon power failure by front crash.
3. Self diagnosis: SRSCM will constantly monitor current SRS operation status and detect system failure while vehicle power supply is on, system failure may be checked with trouble codes using scan tool. (Hi- Scan)
4. Airbag warning lamp on: Upon detecting error, the module will transmit signal to SRSCM indicator lamp located at cluster. MIL lamp will indicate driver SRS error. Upon ignition key on, SRS lamp will turn on for about six seconds.
5. Trouble code registration: Upon error occurrence in system, SRSCM will store DTC corresponding to the error. DTC can be cleared only by Hi-Scan. However, if an internal fault code is logged or if a crash is recorded the fault clearing should not happen.
6. Self diagnostic connector: Data stored in SRSCM memory will be output to Hi-Scan or other external output devices through connector located below driver side crash pad.
7. Once airbag is deployed, SRSCM should not be used again but replaced.

Restraint > General Information > Specifications

Specification





Item	Resistance (Ω)
Driver Airbag (DAB)	1.5 ~ 5.7
Passenger Airbag (PAB)	1.5 ~ 5.7
Side Airbag (SAB)	1.5 ~ 5.7
Curtain Airbag (CAB)	1.5 ~ 5.7
Seat Belt Retractor Pretensioner (BPT)	1.5 ~ 5.7






Tightening Torques

Item	N.m	kgf.m	lb-ft
Driver Airbag (DAB)	7.8 ~ 10.8	0.8 ~ 1.1	5.8 ~ 8.0
Passenger Airbag (PAB)	6.9 ~ 10.8 3.9 ~ 6.9	Bolt : 0.7 ~ 1.1 Nut : 0.4 ~ 0.7	5.1 ~ 8.0 2.9 ~ 5.0
Curtain Airbag (CAB)	18.6 ~ 26.5	1.9 ~ 2.7	13.7 ~ 19.5
Side Airbag (SAB)	5.9 ~ 7.8	0.6 ~ 0.8	4.3 ~ 5.8
Seat Belt Anchor Bolt (BPT)	39.2 ~ 53.9	4.0 ~ 5.5	28.9 ~ 39.8
SRSCM	6.9 ~ 8.8	0.7 ~ 0.9	5.1 ~ 6.5
Front Impact Sensor (FIS) Mounting nut	6.9 ~ 8.8	0.7 ~ 0.9	5.1 ~ 6.5
Side Impact Sensor (SIS) Mounting Bolt	6.9 ~ 8.8	0.7 ~ 0.9	5.1 ~ 6.5

Restraint > General Information > Special Service Tools

Special Service Tools

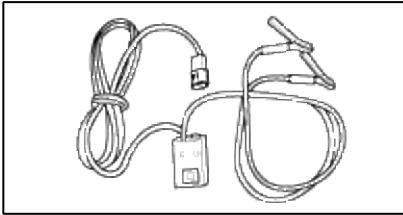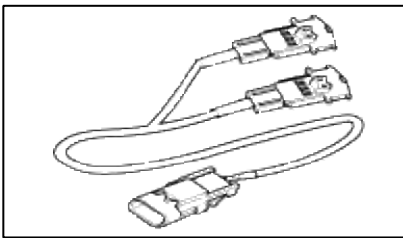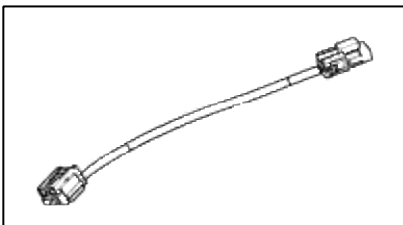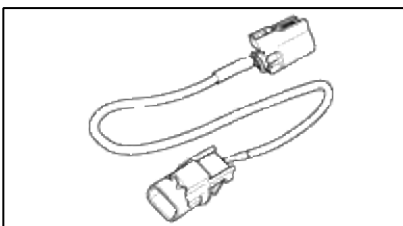Tool(Number and Name)	Illustration	Use
Deployment tool 0957A-34100A		Airbag deployment tool
Deployment adapter 0957A-38510		Use with deployment tool. (DAB)
Deployment adapter 0957A-2E110		Use with deployment tool. (PAB)
Deployment adapter 0957A-3F100		Use with deployment tool. (SAB)

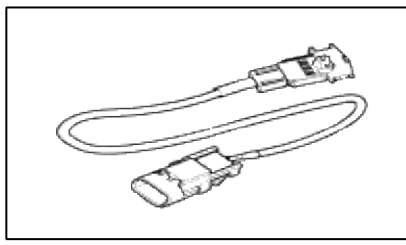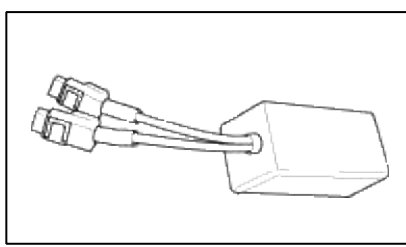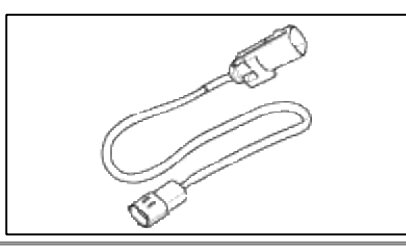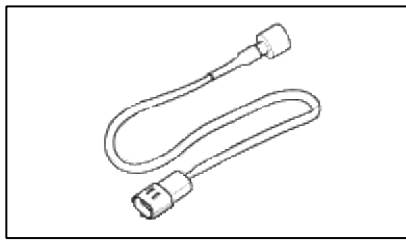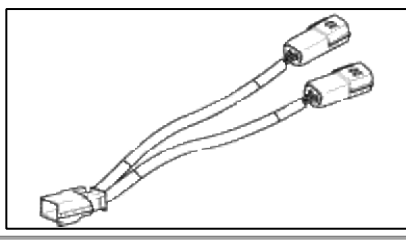Deployment adapter 0957A-38500		Use with deployment tool. (CAB, BPT)
Dummy 0957A-38200		Simulator to check the resistance of each wiring harness
Dummy adapter 0957A-3F000		Use with dummy (SAB)
Dummy adapter 0957A-2G000		Use with dummy (DAB, CAB, BPT)
Dummy adapter 0957A-2E100		Use with dummy (PAB)

DAB : Driver Airbag

PAB : Passenger Airbag

SAB : Side Airbag

CAB : Curtain Airbag

BPT : Seat Belt Retractor Pretensioner

Restraint > General Information > General Safety Information and Caution

Precautions

General Precautions

Please read the following precautions carefully before performing the airbag system service.


Observe the instructions described in this manual, or the airbags could accidentally deploy and cause damage or injuries.

- Except when performing electrical inspections, always turn the ignition switch OFF and disconnect the negative cable from the battery, and wait at least three minutes before beginning work.

NOTE

The contents in the memory are not erased even if the ignition switch is turned OFF or the battery cables are disconnected from the battery.

- Use the replacement parts which are manufactured to the same standards as the original parts and quality. Do not install used SRS parts from another vehicle. Use only new parts when making SRS repairs.
- Carefully inspect any SRS part before you install it. Do not install any part that shows signs of being dropped or improperly handled, such as dents, cracks or deformation.

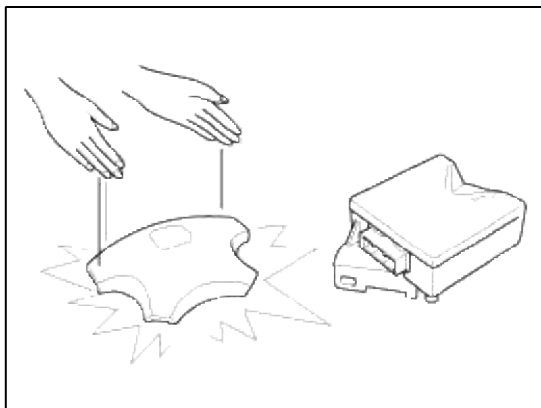


- Before removing any of the SRS parts (including the disconnection of the connectors), always disconnect the SRS connector.

Airbag Handling and Storage

Do not disassemble the airbags; it has no serviceable parts. Once an airbag has been deployed, it cannot be repaired or reused.

For temporary storage of the air bag during service, please observe the following precautions.

- Store the removed airbag with the pad surface up.
- Keep free from any oil, grease, detergent, or water to prevent damage to the airbag assembly.

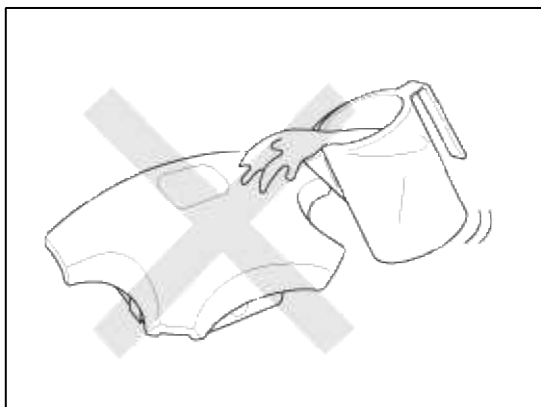


- Store the removed airbag on secure, flat surface away from any high heat source (exceeding 85 C/185 F).
- Never perform electrical inspections to the airbags, such as measuring resistance.
- Do not position yourself in front of the airbag assembly during removal, inspection, or replacement.
- Refer to the scrapping procedures for disposal of the damaged airbag.
- Be careful not to bump or impact the SRS unit or the side impact sensors or front impact sensors whenever the ignition switch is ON, wait at least three minutes after the ignition switch is turned OFF before begin work.
- During installation or replacement, be careful not to bump (by impact wrench, hammer, etc.) the area around the SRS unit and the side impact sensor and the front impact sensors. The airbags could accidentally deploy and cause damage or injury.
- Replace the front airbag module, SRSCM, FIS when deploying the front airbag. Replace the airbag wiring when the airbag wiring get damaged. Replace the side airbag module, the curtain airbag module, SRSCM, SIS when deploying the side airbag. Replace the airbag when the airbag wiring get damaged.

- After a collision in which the airbags or the side air bags did not deploy, inspect for any damage or any deformation on the SRS unit and the side impact sensors. If there is any damage, replace the SRS unit, the front impact sensor and/or the side impact sensors.
- Do not disassemble the SRS unit, the front impact sensor or the side impact sensors.
- Turn the ignition switch OFF, disconnect the battery negative cable and wait at least three minutes before beginning installation or replacement of the SRS unit.
- Be sure the SRS unit, the front impact sensor and side impact sensors are installed securely with the mounting bolts.
- Do not spill water or oil on the SRS unit, or the front impact sensor or the side impact sensors and keep them away from dust.
- Store the SRS unit, the front impact sensor and the side impact sensors in a cool (15 ~ 25 C/ 59 ~ 77 F) and dry (30 ~ 80% relative humidity, no moisture) area.


Wiring Precautions

SRS wiring can be identified by special yellow outer covering. Observe the instructions described in this section.

- Never attempt to modify, splice, or repair SRS wiring. If there is an open or damage in SRS wiring, replace the harness.

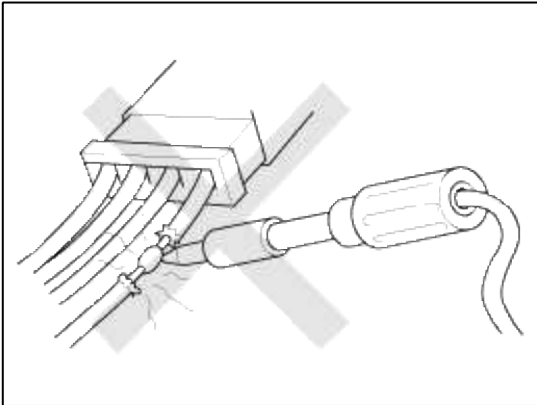


- Be sure to install the harness wires so that they are not pinched, or interfere with other parts.

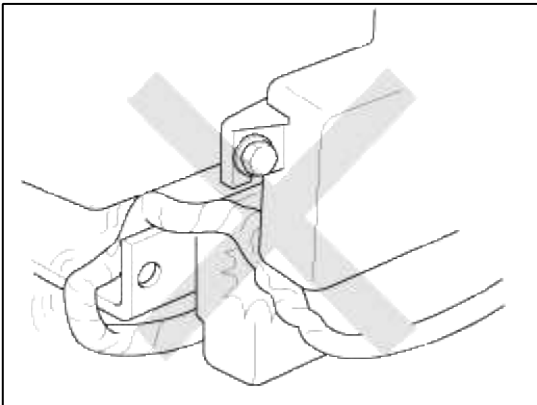

- Make sure all SRS ground locations are clean, and grounds are securely fastened for optimum metal-to-metal contact. Poor grounding can cause intermittent problems that are difficult to diagnose.

Precautions for Electrical Inspections

- When using electrical test equipment, insert the probe of the tester into the wire side of the connector. Do not insert the probe of the tester into the terminal side of the connector, and do not tamper with the connector.

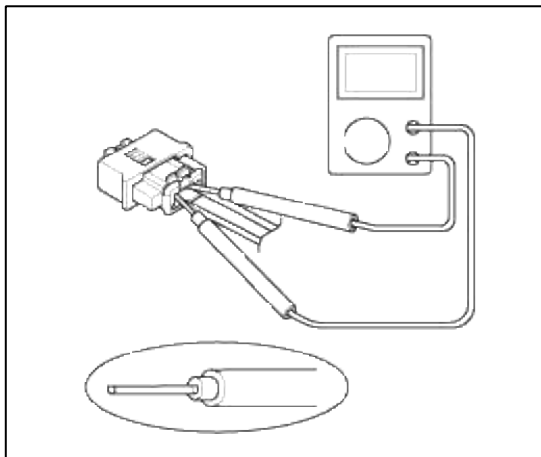

- Use a u-shaped probe. Do not insert the probe forcibly.
 - Use specified service connectors for troubleshooting.
- Using improper tools could cause an error in inspection due to poor metal contact.

Spring-laded Lock Connector


Some SRS system connectors have a spring-loaded lock.

Airbag Connector

Disconnecting


To release the lock, pull the spring-loaded sleeve (A) and the slider (B), while holding the opposite half of the connector.

Pull the connector halves apart. Be sure to pull on the sleeve and not on the connector half.

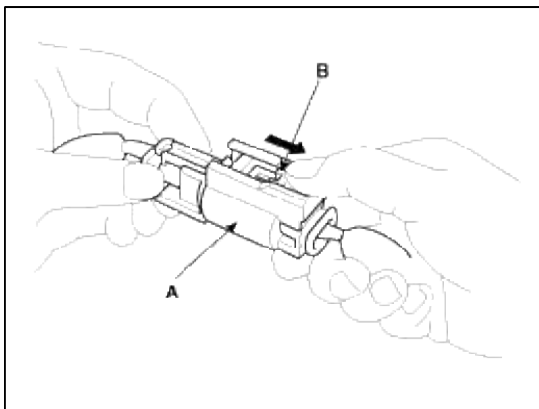

Connecting

Hold both connector halves and press firmly until the projection (C) of the sleeve-side connector clicks to lock.

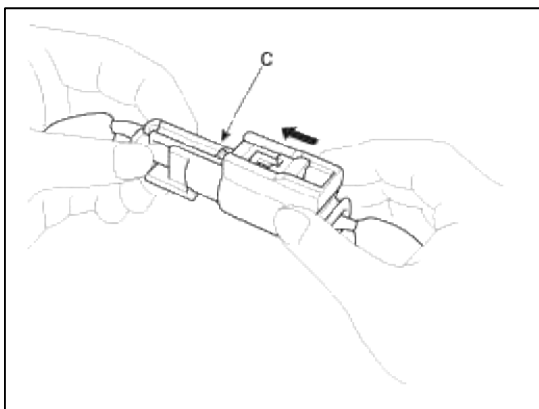

Restraint > General Information > Description and Operation

Warning Lamp Activation

Warning lamp behavior after ignition ON

As soon as the operating voltage is applied to the SRSCM ignition input, the SRSCM activates the warning lamp for a bulb check.


The lamp shall turn on for 6 seconds during the initialization phase and be turned off afterward.

However, in order to indicate the driver, the warning lamp shall turn on for 6 seconds and off for one second then on continuously after the operating voltage is applied if any active fault exists.


If the variant coding is not performed, the airbag warning lamp is turned on for 4 seconds and then is blinking after IG ON.

If the variant coding is normally performed, the airbag warning lamp normally operates.


- Active fault or historical fault counter is greater or equal to 10

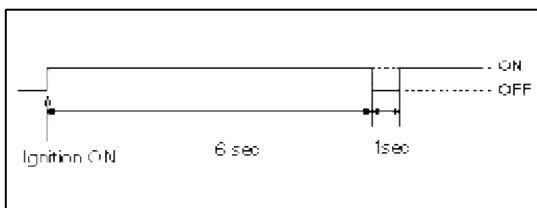

- Normal or historical fault counter is less than 10.

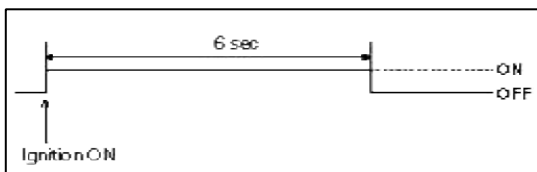

- SRSCM Variant Coding not performed.

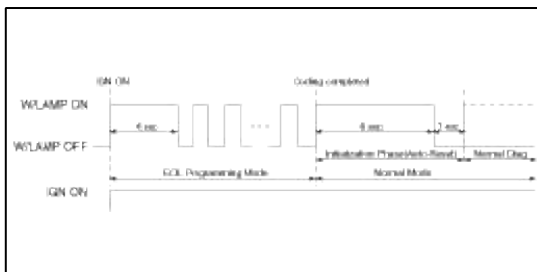

SRSCM Independent warning lamp activation

There are certain fault conditions in which the SRSCM cannot function and thus cannot control the operation of the standard warning lamp. In these cases, the standard warning lamp is directly activated by appropriate circuitry that operates independently of the SRSCM. These cases are:

- Loss of battery supply to the SRSCM : warning lamp turned on continuously.
- Loss of internal operating voltage : warning lamp turned on continuously.
- Loss of Microprocessor operation : warning lamp turned on continuously.
- SRSCM not connected : warning lamp turned on continuously through the shorting bar.


Telltale Lamp Activation

The Telltale Lamp indicates the Passenger Airbag(PAB) enabled and disabled status based on occupant status of passenger seat. If the passenger seat is empty or occupied with child (or child seat), the Passenger Airbag is disabled and the Telltale Lamp is turned ON to inform the driver that the PAB is disabled. As soon as operating voltage is applied to the SRSCM ignition input, the SRSCM activates telltale lamp prove out. OCS will send an defect status to the SRSCM as a default setting for passenger airbag deployment during the prove out period. Occupant status information and telltale status are as below table.

Occupant Status	Telltale Lamp	PAB
Empty	ON	Disabled
Child (Small Occupant)	ON	Disabled
Adult (Large Occupant)	OFF	Enabled
Defect	OFF	Enabled

After ignition on, telltale lamp will turn on for 4 seconds and turn off for 4 seconds during the initialization phase and be turned off afterward until receipt of first valid suppression message from OCS system.

It is possible to turn off the telltale lamp when the larger child than 6 years old sits on the passenger side seat.

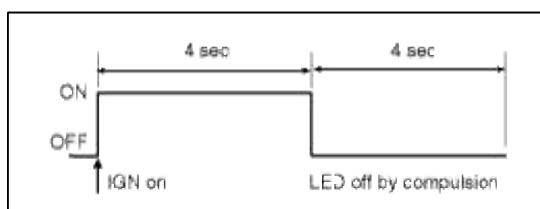

Restraint > General Information > Repair procedures

Component Replacement after Deployment

NOTE

Before doing any SRS repairs, use the Hi-Scan Pro to check for DTCs. Refer to the Diagnostic Trouble Code list for repairing of the related DTCs.

When the front airbag(s) deployed after a collision, replace the following items.

- SRSCM
- Deployed airbag(s)
- Seat belt pretensioner(s)
- Front impact sensors
- SRS wiring harnesses
- Inspect the clock spring for heat damage.
If any damage found, replace the clock spring.
- If any damage found, or problem to occupant detection, replace the Passenger seat with PODS system.

When the side/curtain airbag(s) deployed after a collision, replace the following items.


- SRSCM
- Deployed airbag(s)
- Side impact sensor(s) for the deployed side(s)
- SRS wiring harnesses

After the vehicle is completely repaired, confirm the SRS airbag system is OK.

- Turn the ignition switch ON, the SRS indicator should come on for about 6 seconds and then go off.

Restraint > General Information > Components and Components Location

Components

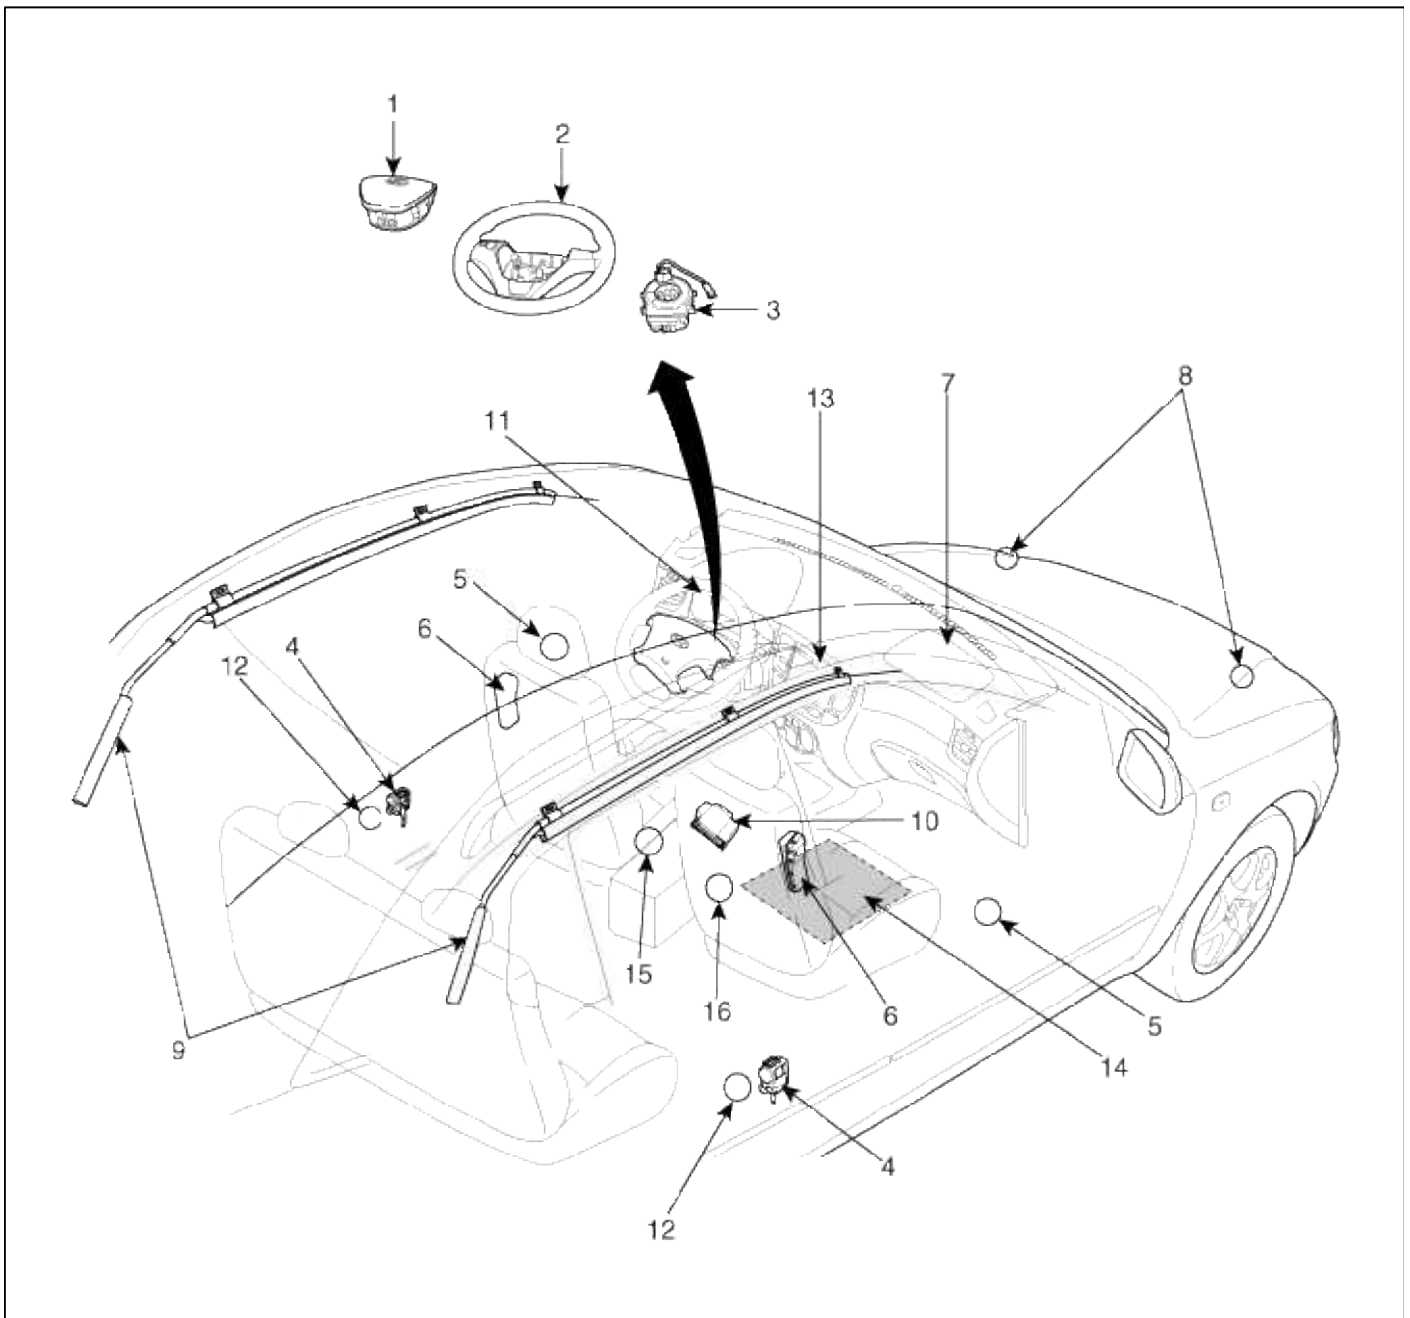


1. Driver Airbag (DAB)	9. Curtain Airbag (CAB)
2. Steering Wheel	10. Supplemental Restraint System Control Module (SRSCM)
3. Clock Spring	11. Airbag Warning Lamp
4. Seat Belt Pretensioner (BPT)	12. Side Impact Sensor (SIS)
5. Side Pressure Sensor (P-SIS)	13. Telltale Lamp
6. Side Airbag (SAB)	14. Passenger Occupant Detecting System (PODS)
7. Passenger Airbag (PAB)	15. Seat Belt Buckle Switch
8. Front Impact Sensor (FIS)	16. Seat Belt Buckle switch & Belt tension sensor

Components Location

Supplemental Restraint System Control Module (SRSCM)




Front Impact Sensor (FIS)

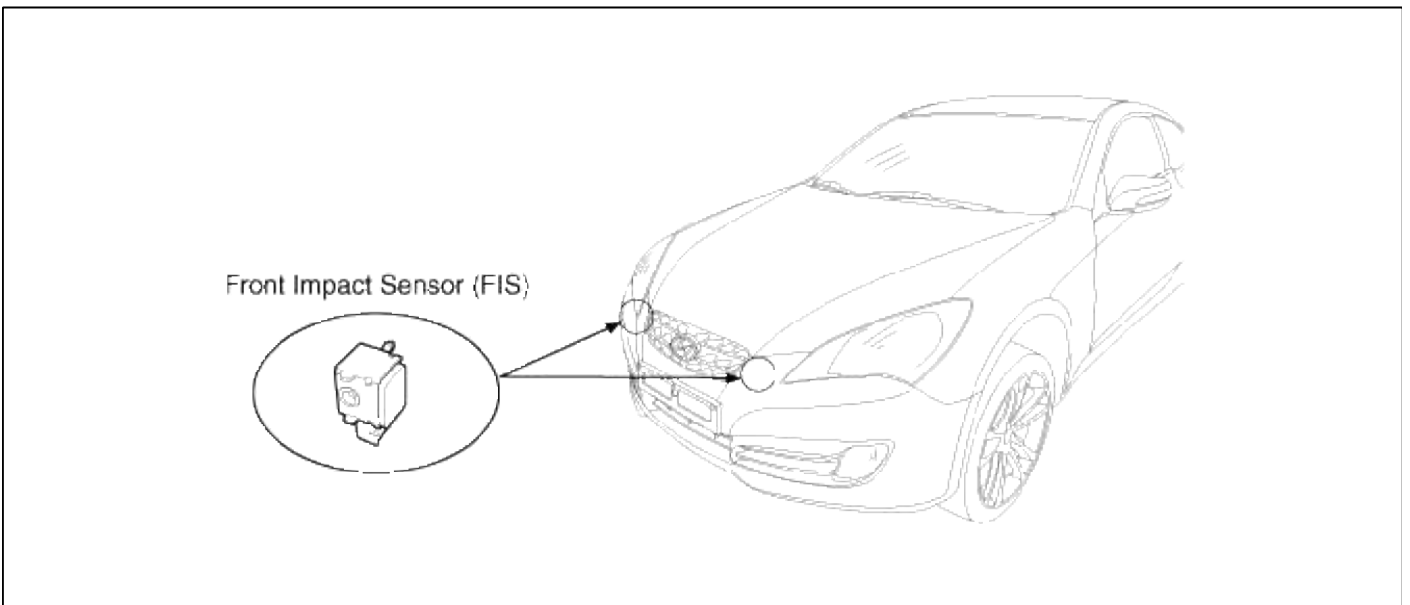

Side Impact Sensor (SIS)


[Front]

Side Pressure Sensor(P-SIS)

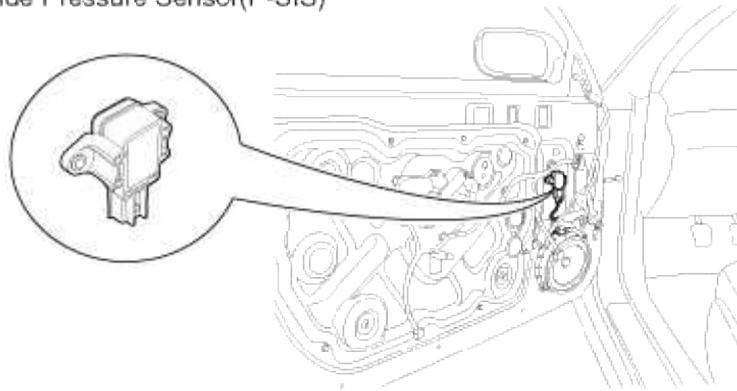

[Rear]


Side Impact Sensor (SIS)

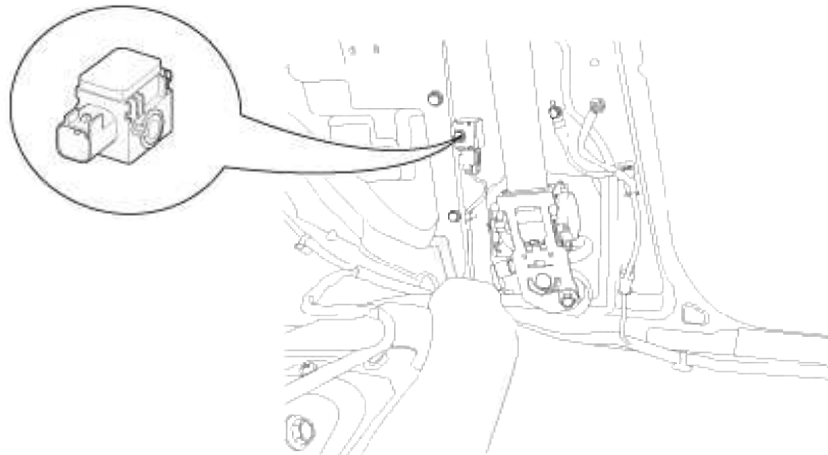


Driver Airbag (DAB) / Passenger Airbag (PAB)

Driver Airbag(DAB)


Passenger Airbag(PAB)

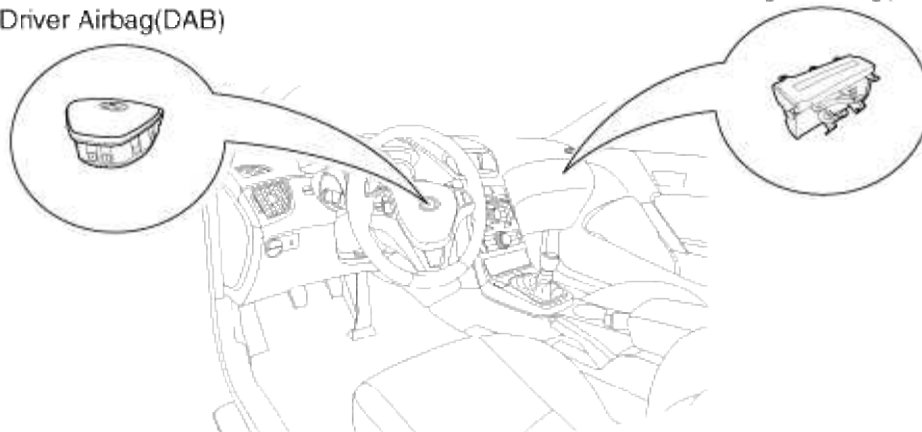

Curtain Airbag (CAB)

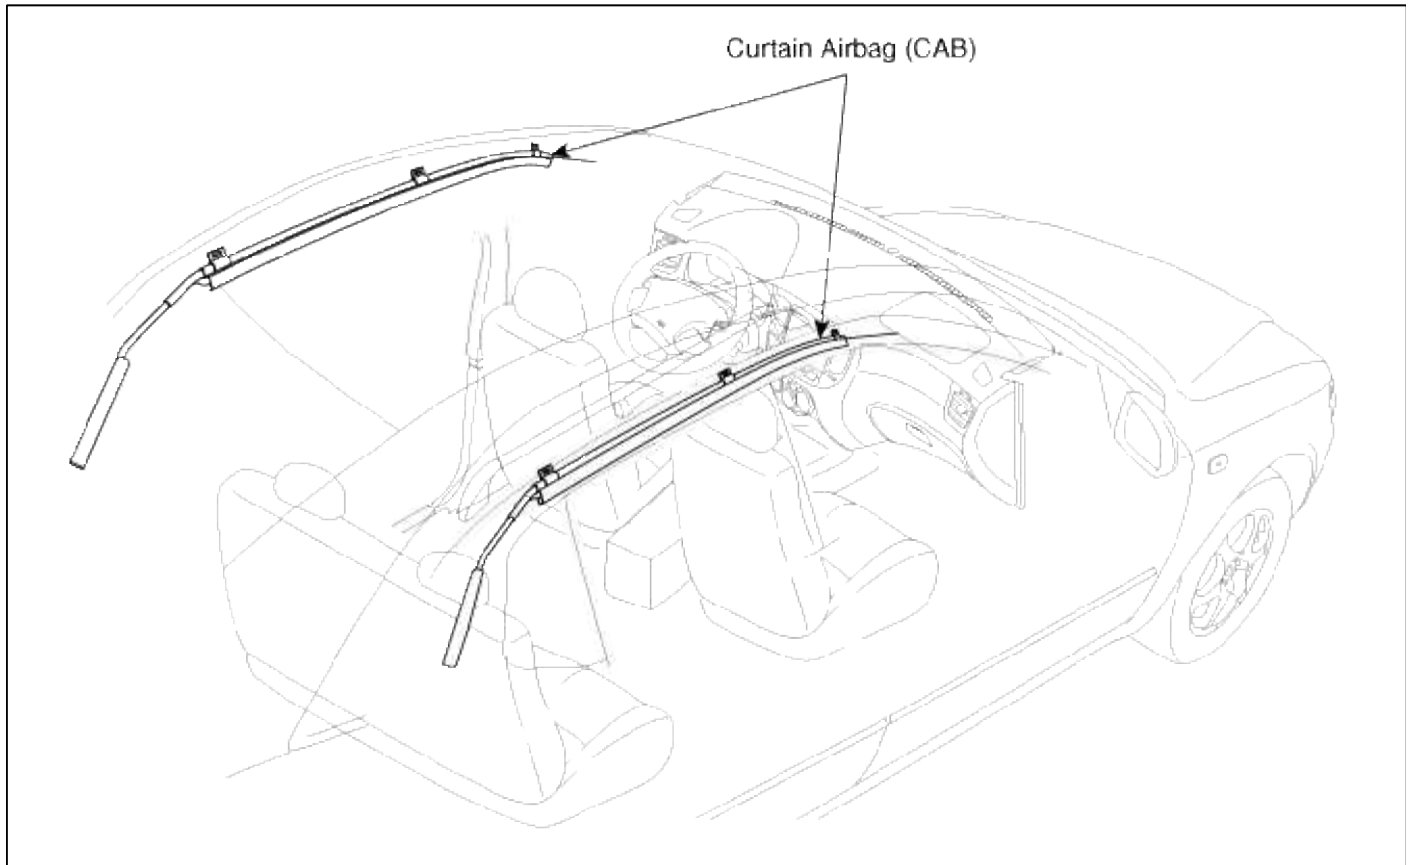


Side Airbag (SAB)

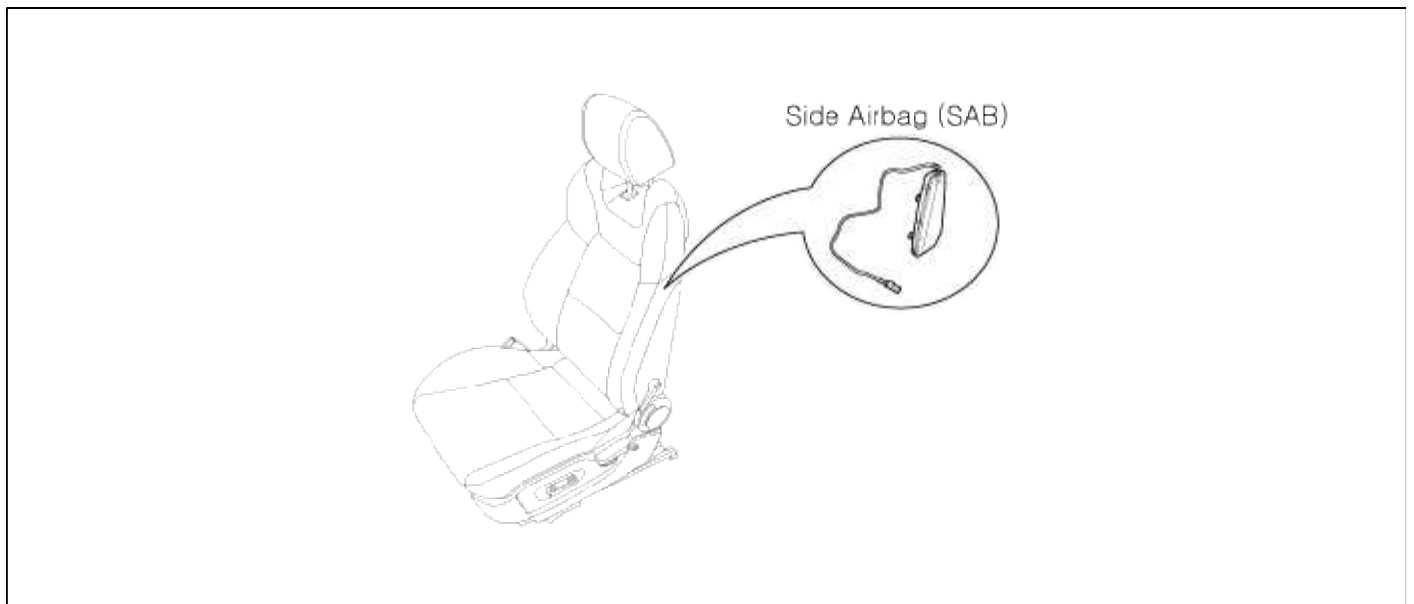

Seat Belt Pretensioner (BPT)

Seat Belt Pretensioner (BPT)

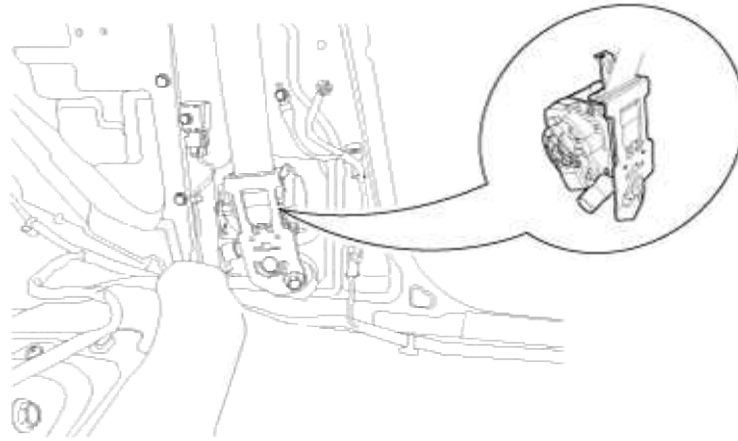

Restraint > SRSCM > SRS Control Module (SRSCM) > Description and Operation

Description

The primary purpose of the SRSCM (Supplemental Restraints System Control Module) is to discriminate between an event that warrants restraint system deployment and an event that does not. The SRSCM must decide whether to deploy the restraint system or not. After determining that pretensioners and/or airbag deployment is required, the SRSCM must supply sufficient power to the pretensioners and airbag igniters to initiate deployment.

The SRSCM determines that an impact may require deployment of the pretensioners and airbags from data obtained from impact sensors and other components in conjunction with a safing function.

The SRSCM will not be ready to detect a crash or to activate the restraint system devices until the signals in the SRSCM circuitry stabilize.

It is possible that the SRSCM could activate the safety restraint devices in approximately 2 seconds but is guaranteed to fully function after prove-out is completed.

The SRSCM must perform a diagnostic routine and light a system readiness indicator at key-on. The system must perform a continuous diagnostic routine and provide fault annunciation through a warning lamp indicator in the event of fault detection. A serial diagnostic communication interface will be used to facilitate servicing of the restraint control system.

Restraint > SRSCM > SRS Control Module (SRSCM) > Components and Components Location


Components



Restraint > SRSCM > SRS Control Module (SRSCM) > Repair procedures

Removal

1. Remove the ignition key from the vehicle.
2. Disconnect the battery negative cable and wait for at least three minutes before beginning work.
3. Disconnect the DAB, PAB, SAB, CAB and BPT connectors.
4. Remove the floor console.
(Refer to Body group - "Console")
5. Disconnect the SRSCM harness connector from the SRSCM.

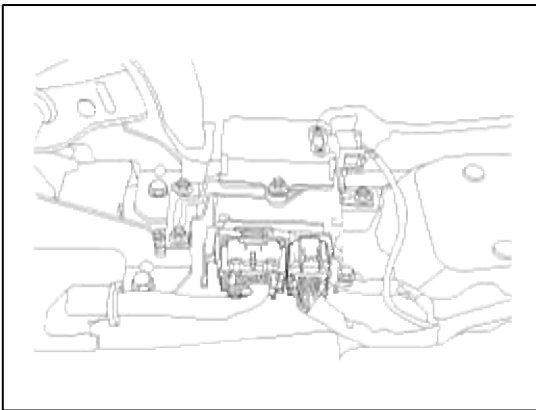

6. Remove the SRSCM mounting bolts(3EA) from the SRSCM, then remove the SRSCM.


Installation

1. Remove the ignition key from the vehicle.
2. Disconnect the battery negative cable and wait for at least three minutes before beginning work.

3. Install the SRSCM with the SRSCM mounting bolts.

Tightening torque (SRSCM Mounting Bolt)

: 6.9 ~ 8.8 N.m (0.7 ~ 0.9 kgf.m, 5.1 ~ 6.5 lb.ft)

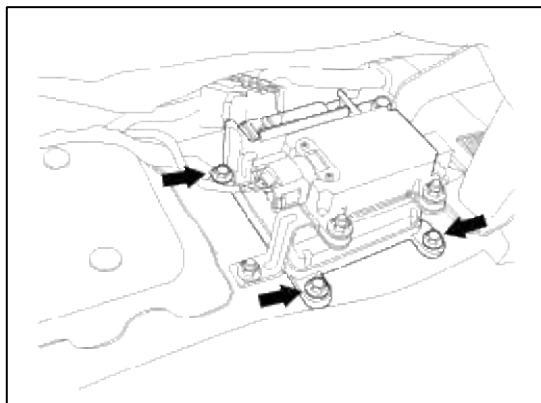

NOTE

Use new mounting bolts when replacing the SRSCM after a collision.

4. Connect the SRSCM harness connector.
5. Install the floor console.
(Refer to the Body group - "Console")
6. Connect the DAB, PAB, SAB, CAB and BPT connectors.
7. Reconnect the battery negative cable.
8. After installing the SRSCM, confirm proper system operation:
 - A. Turn the ignition switch ON; the SRS indicator light should be turned on for about six seconds and then go off.

Variant coding

After replacing the SRSCM with a new one, MUST perform the "Variant Coding" procedure.

NOTE

1. On SRSCM variant coding mode, the airbag warning lamp is periodically blinking (ON: 0.5sec., OFF: 0.5sec.) until the coding is normally completed.
2. If the variant coding is failed, DTC B1762 (ACU Coding Error) will be displayed and the warning lamp will be turned on.
In this case, perform the variant coding procedure again after confirming the cause in "DTC Fault State Information".
Variant Coding can be performed up to 255 times, but if the number of coding work exceeds 255 times, DTC B1683 (Exceed Maximum coding Number) will be displayed and SRSCM must be replaced.
3. If the battery voltage is low (less than 9V), DTC B1102 will be displayed. In this case, charge the battery before anything else, and then perform the variant coding procedure.
Because, although Variant Coding is normally performed, DTC B1762 (ACU Coding Error) and B1102 (Battery Voltage Low) are displayed simultaneously.


Variant coding Procedure

■ On-Line type on GDS

1. Ignition "OFF", connect scantool.
2. Ignition "ON" & Engine "OFF" select vehicle name and airbag system.
3. Select Variant coding mode.

4. Follow steps on the screen as below.

1) Initial ACU Variant Coding screen

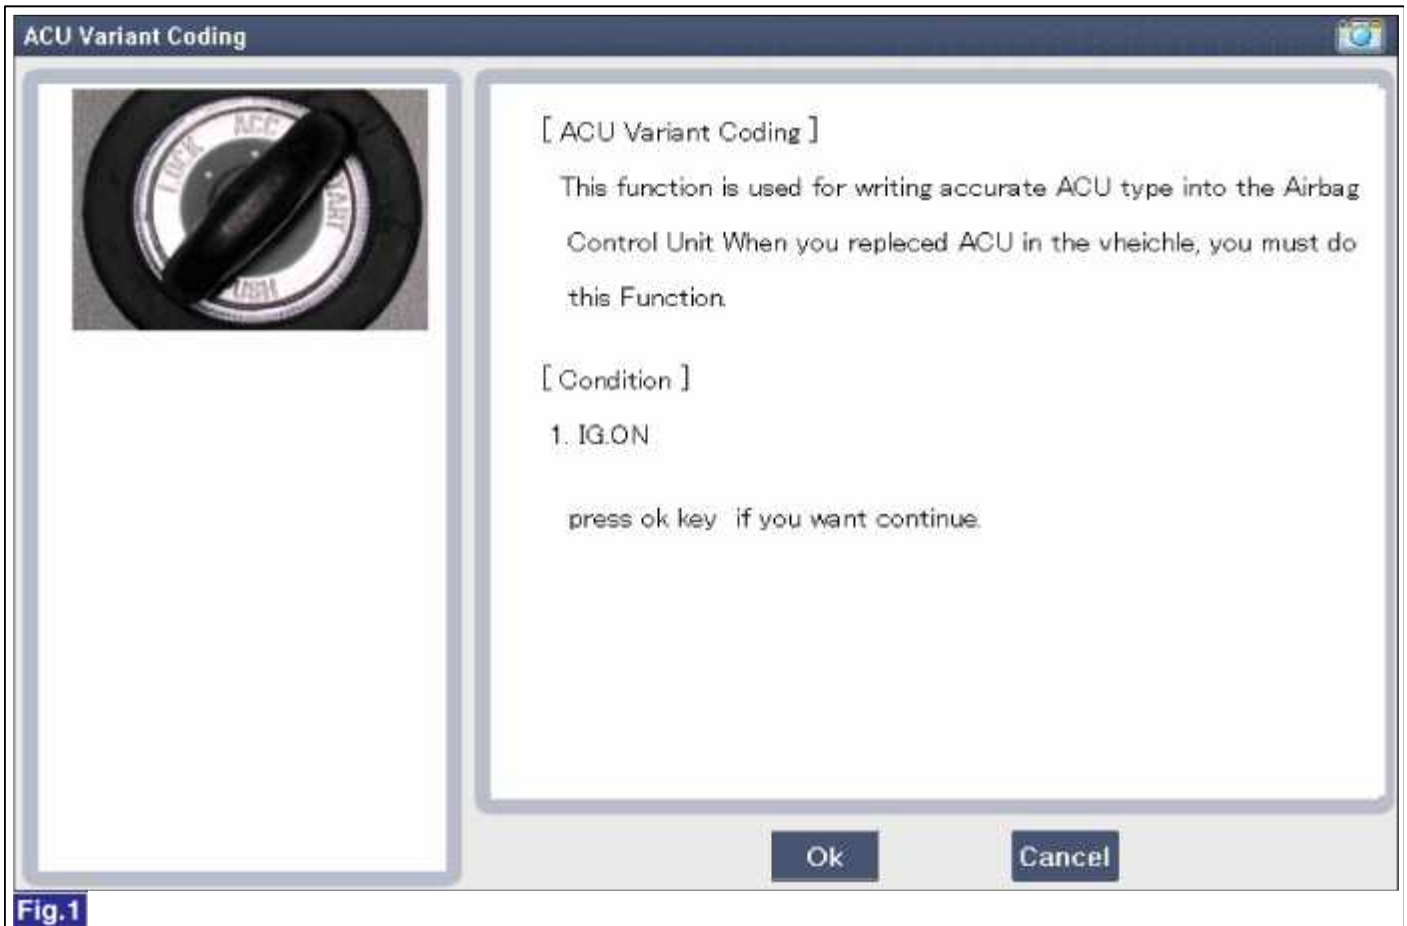

2) VIN Code entering screen

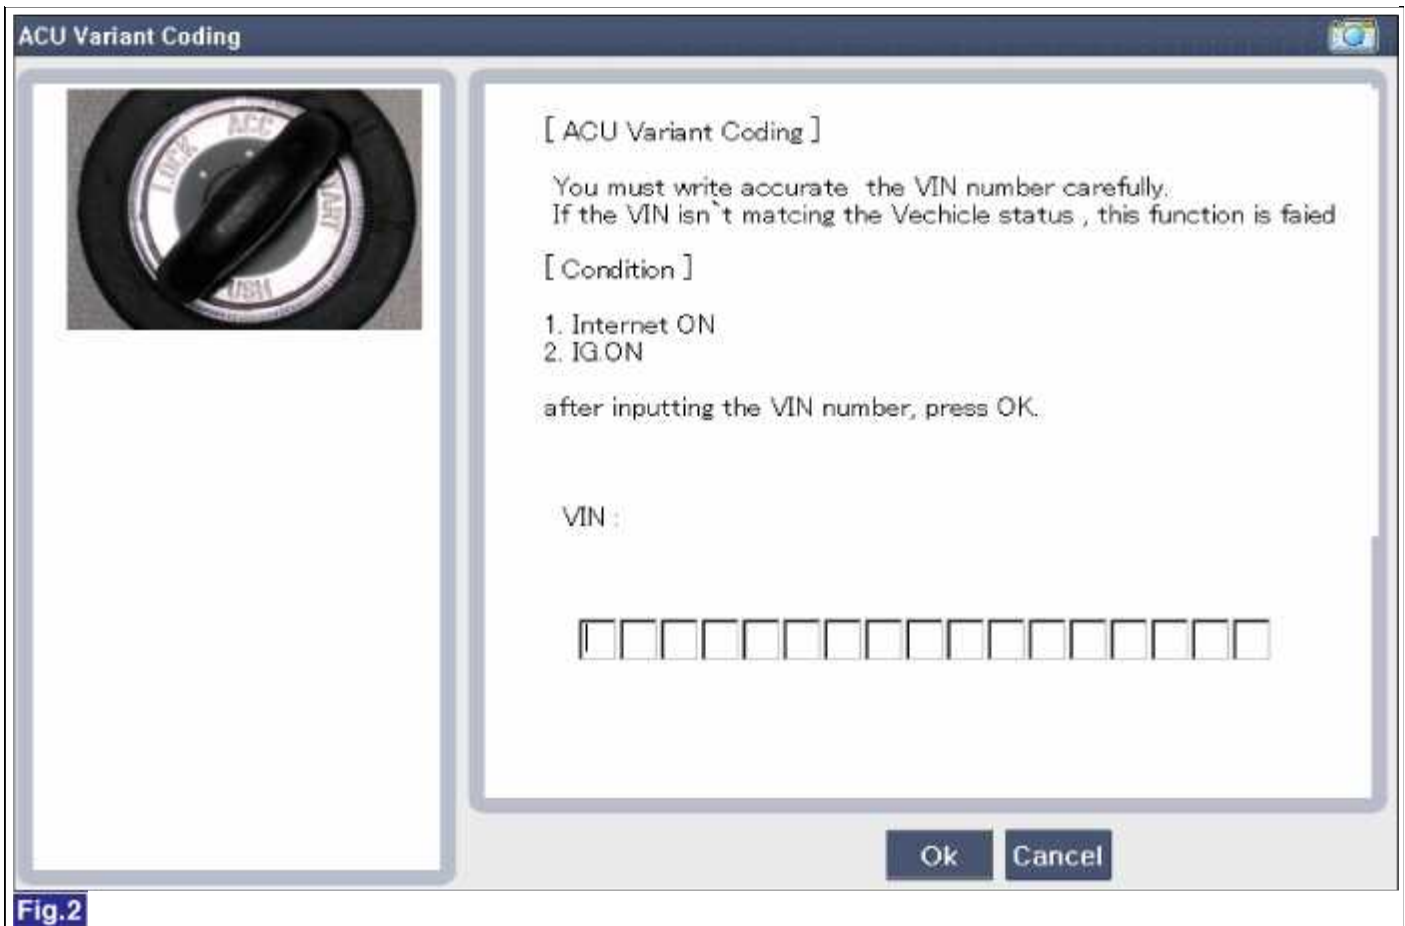


Fig.2

3) Variant coding's proceeding screen-1



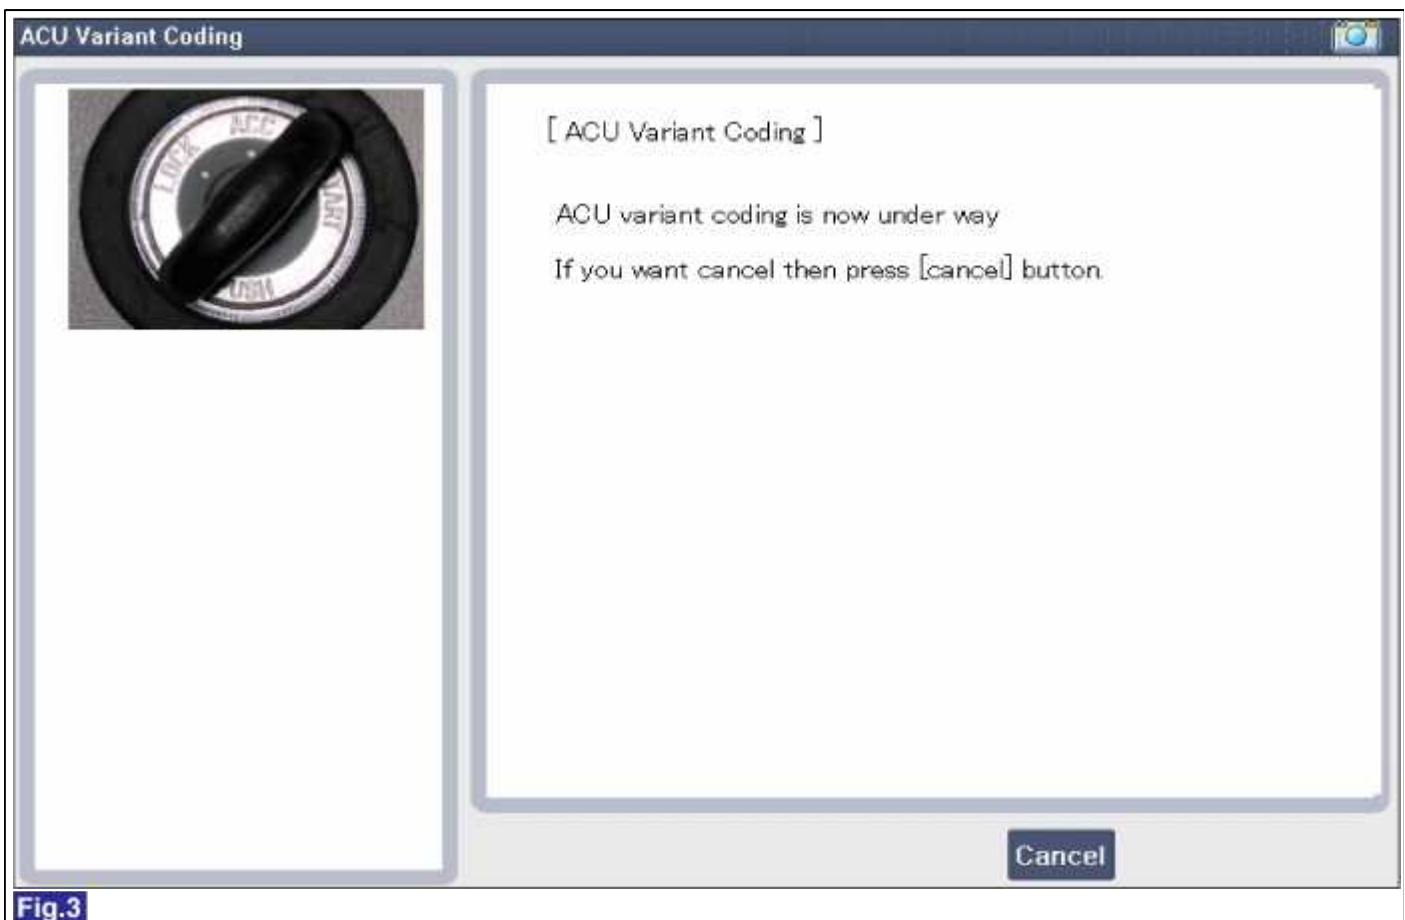


Fig.3

4) Variant coding's proceeding screen-2

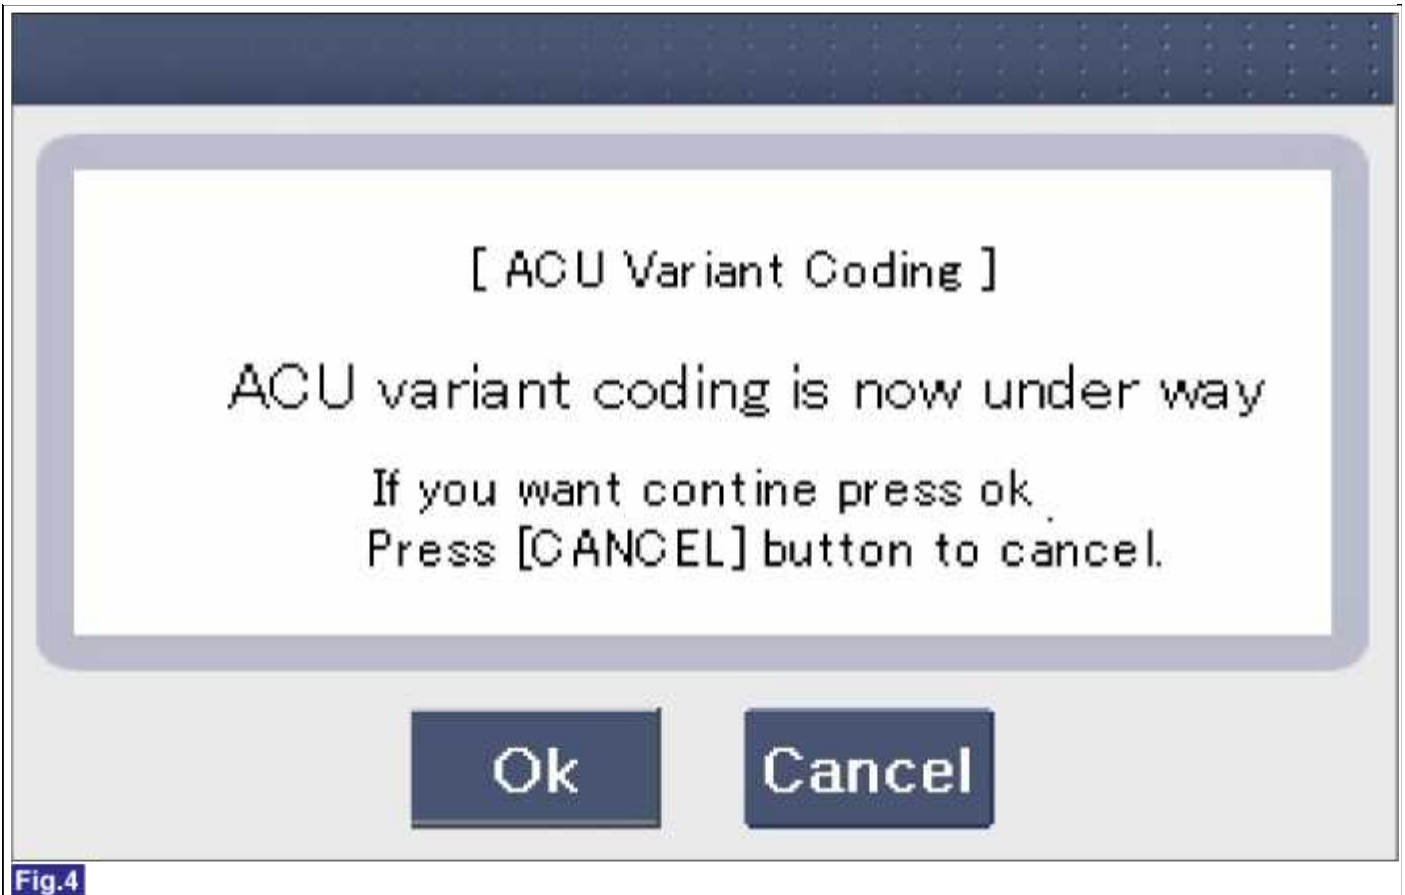


5) Variant coding is completed

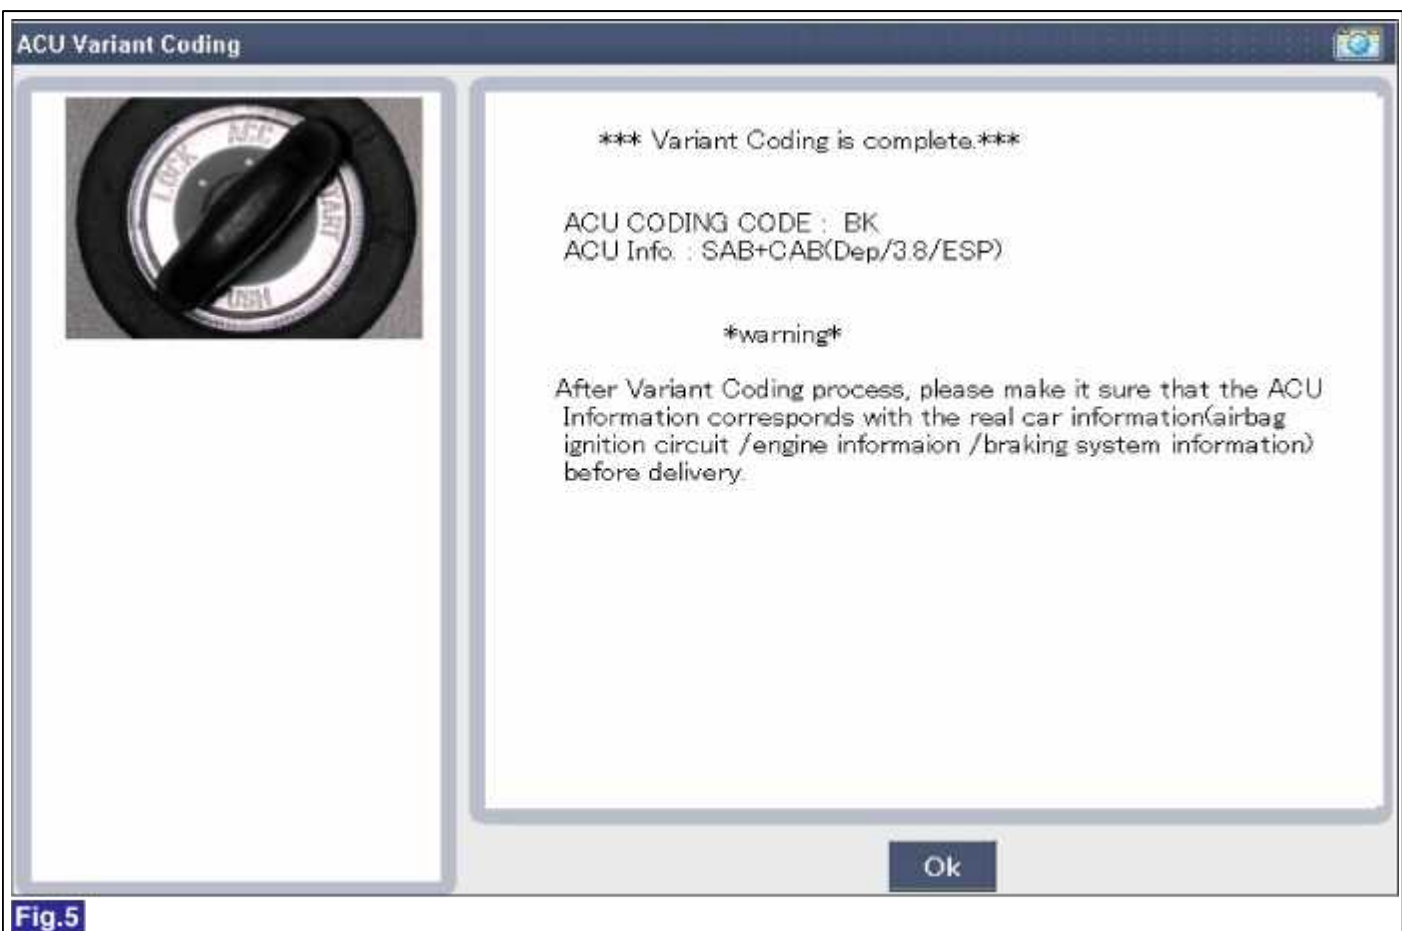

NOTE

1) Screen of Retrying the Variant coding after finishing variant coding

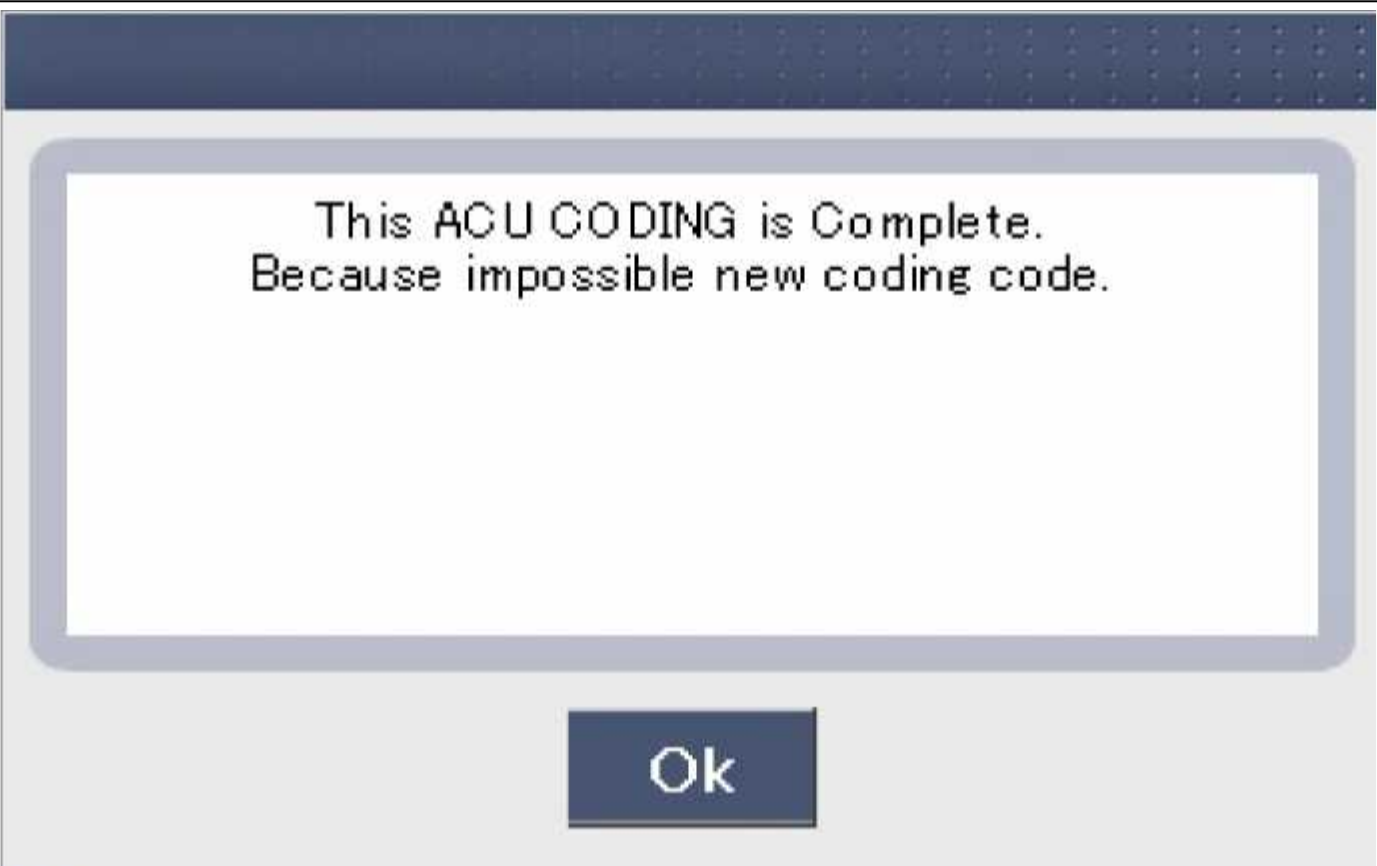


This ACU CODING is Complete.
Because impossible new coding code.

Ok

Fig.6

2) Screen of communication failure




Connecting to the server failed.
Press [OK] button to retry.
Press [CANCEL] button to cancel.

Ok Cancel


Fig.7

- Off-line type on GDS (This can be used when not connecting to internet)


1) Initial ACU Variant Coding screen

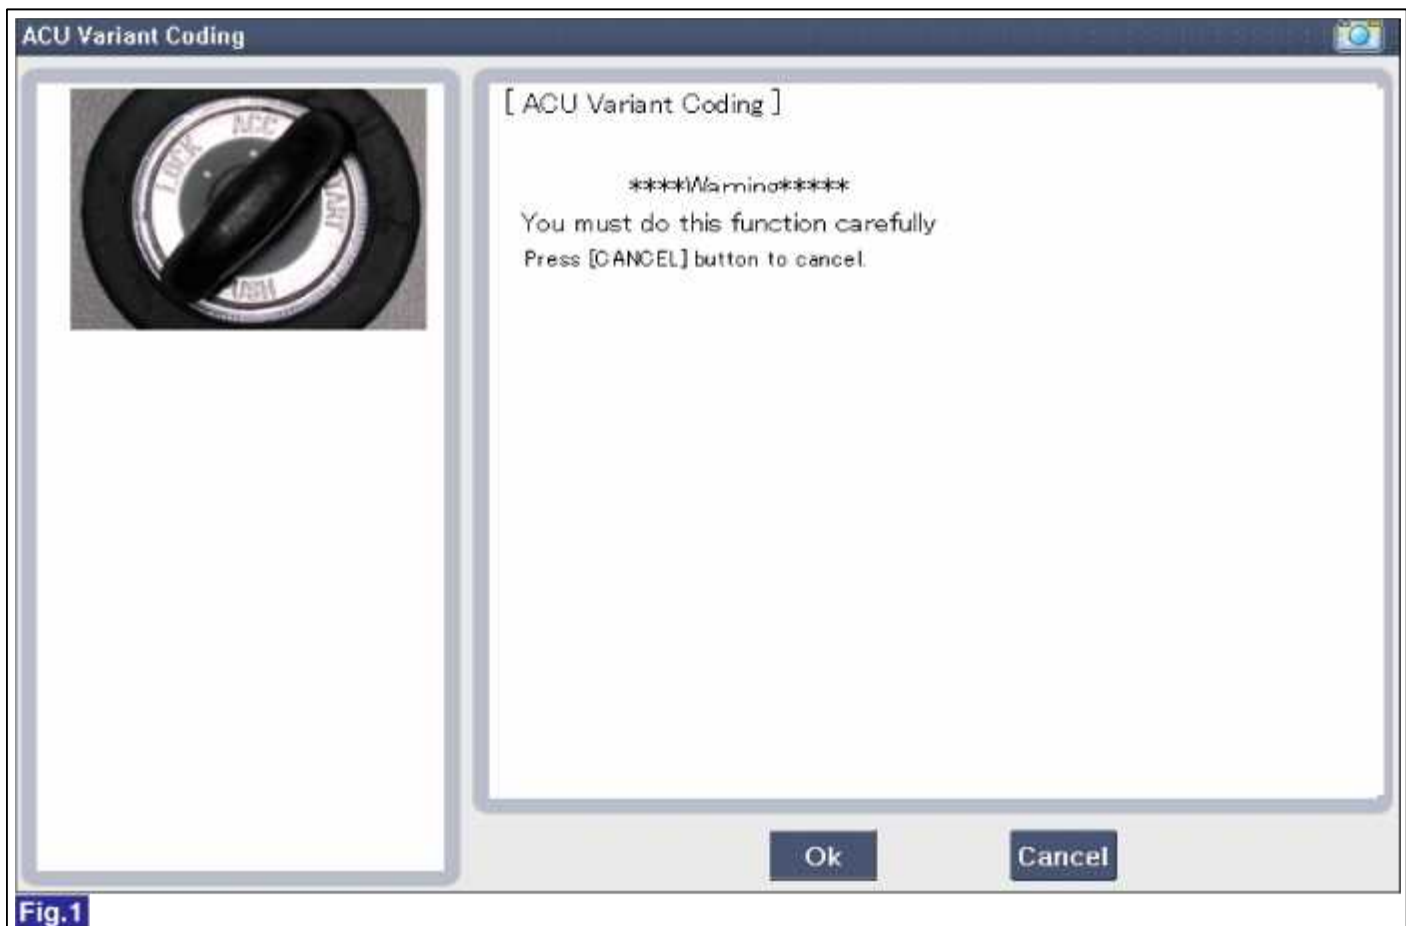


2) ACU CODING Code entering screen

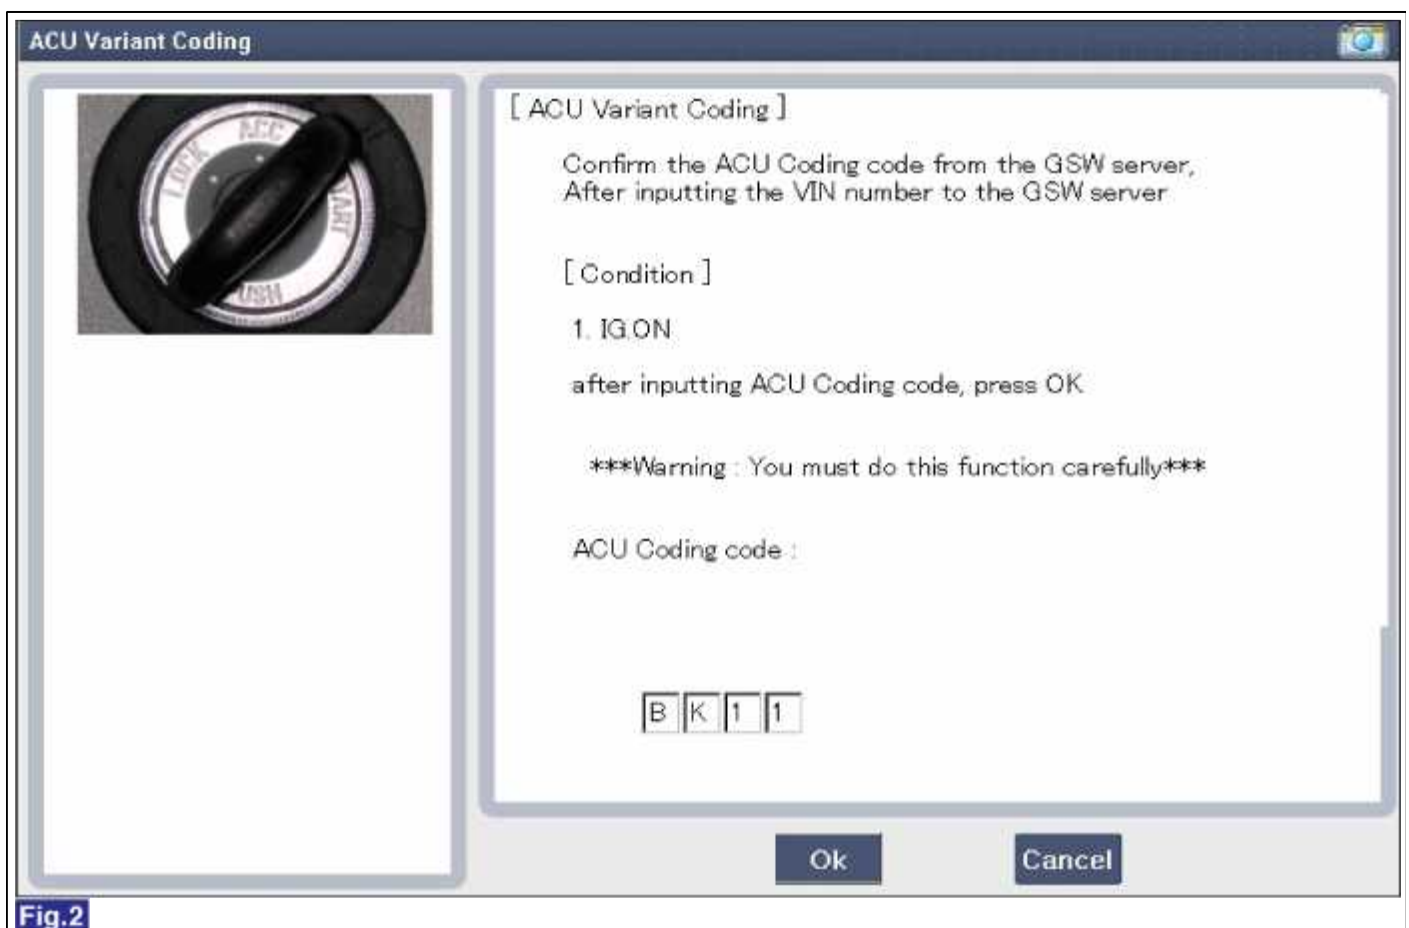

3) Screen of rechecking ACU CODING code's entering

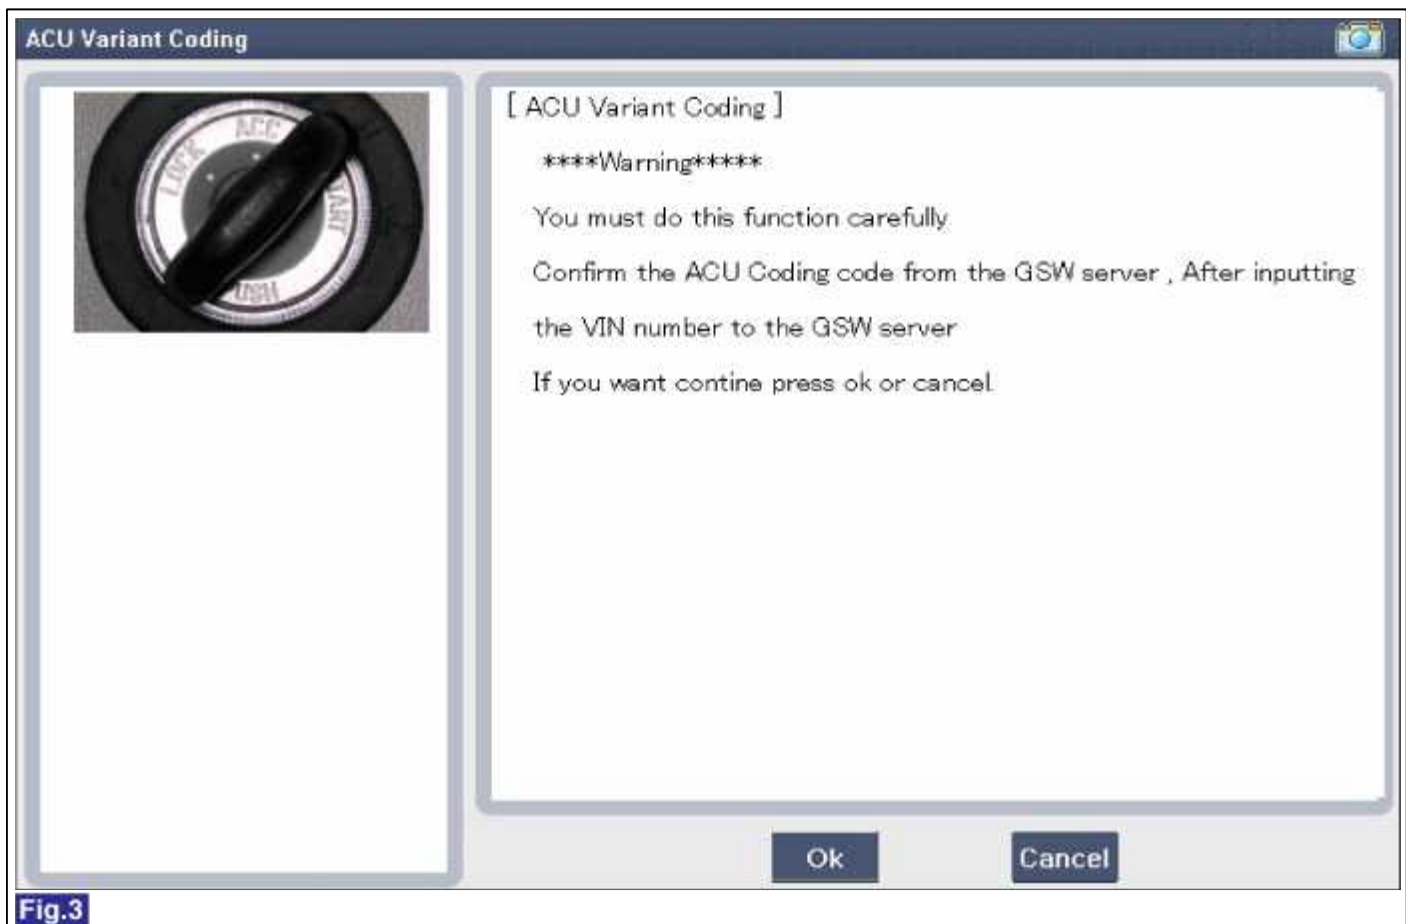

4) Variant coding's proceeding screen-1

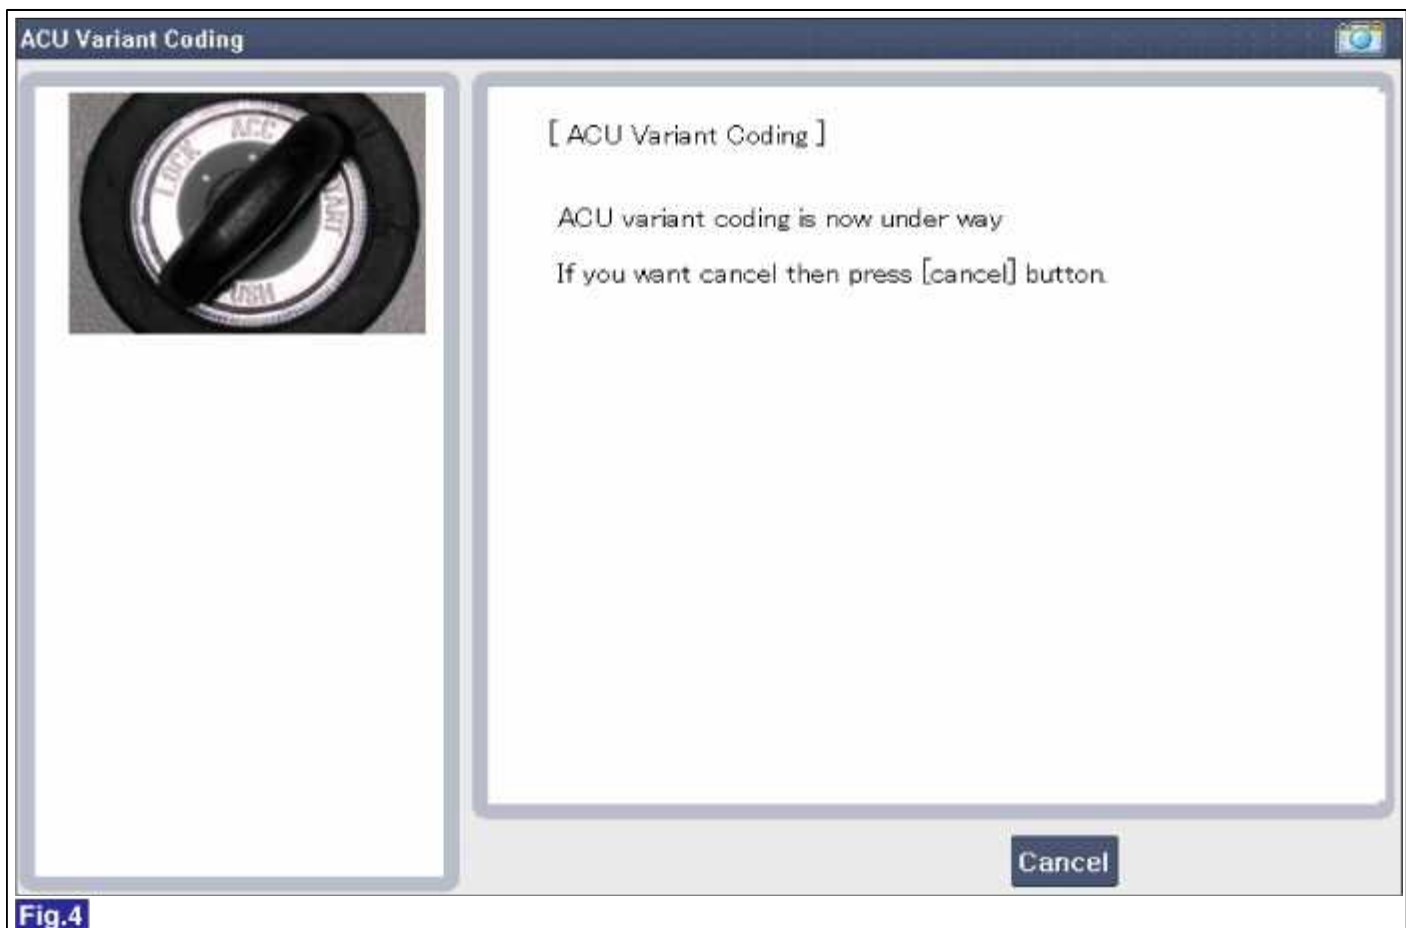

5) Variant coding's proceeding screen-2

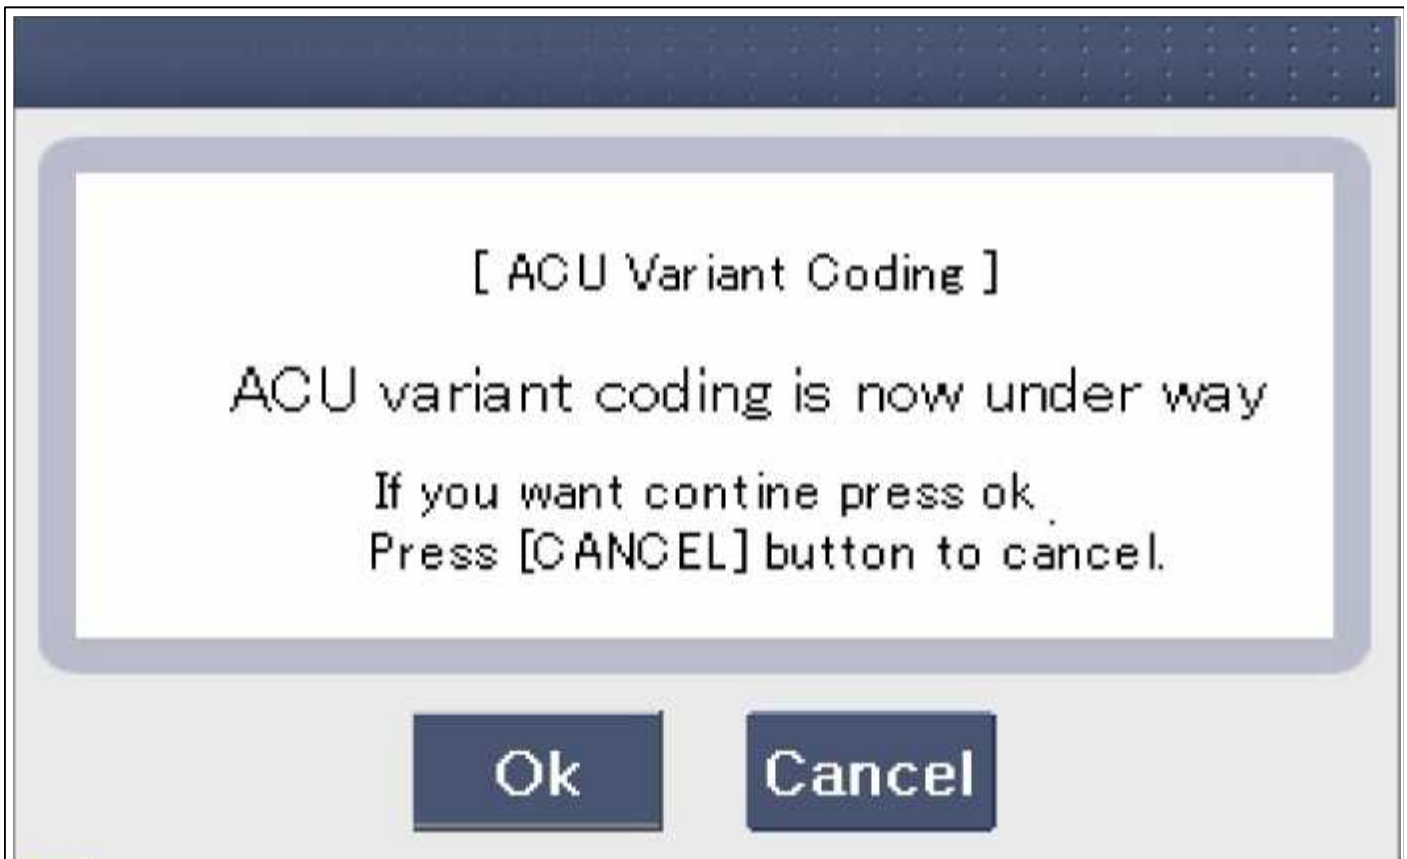


Fig.5


6) Variant coding is completed



Fig.6

NOTE

1) Screen of Retrying the Variant coding after finishing variant coding

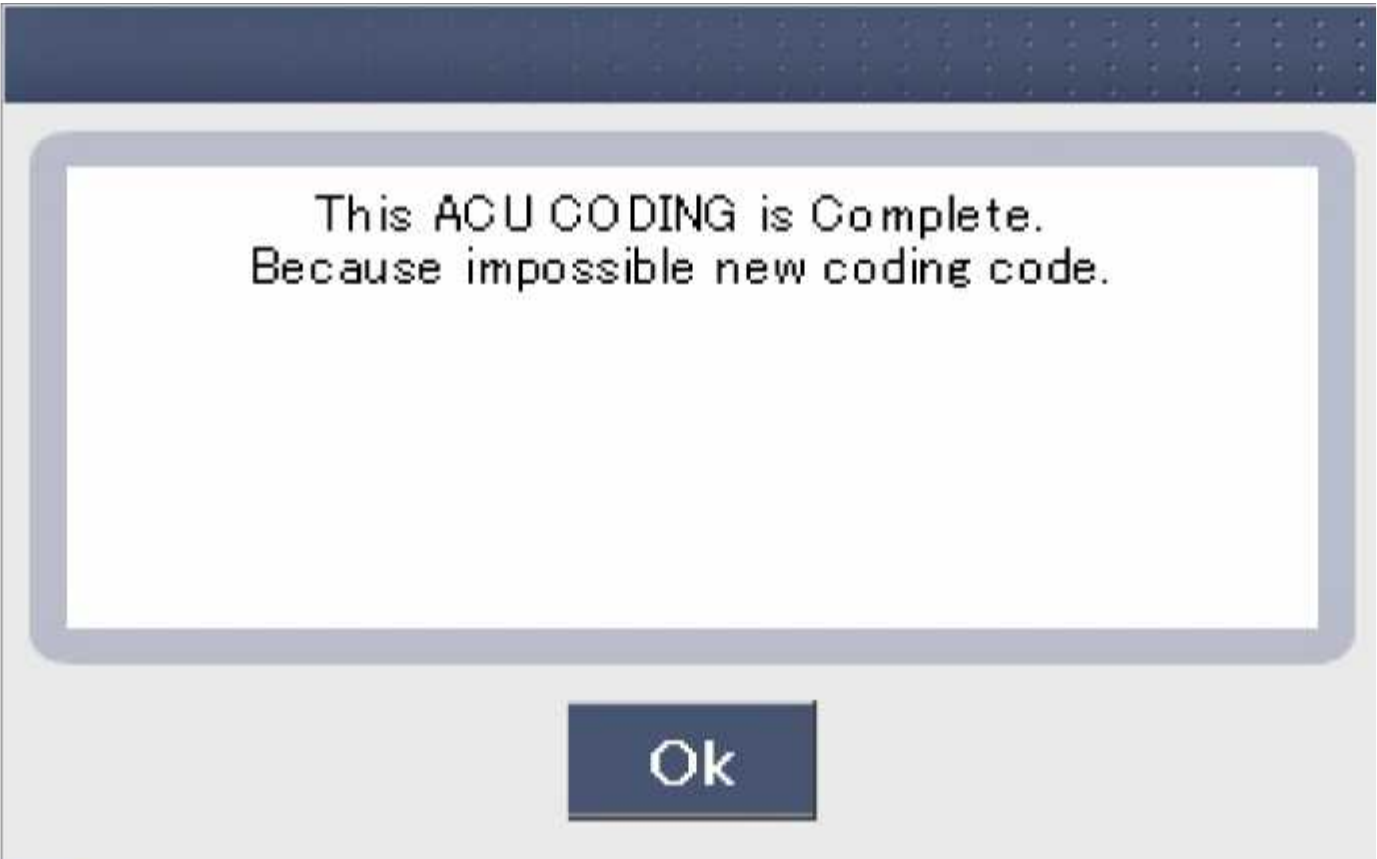

This ACU CODING is Complete.
Because impossible new coding code.


Ok

Fig.7

Restraint > SRSCM > Front Impact Sensor (FIS) > Description and Operation**Description**

The front impact sensor (FIS) is installed in the Front End Module (FEM). They are remote sensors that detect acceleration due to a collision at its mounting location. The primary purpose of the Front Impact Sensor (FIS) is to provide an indication of a collision. The Front Impact Sensor (FIS) sends acceleration data to the SRSCM.

Restraint > SRSCM > Front Impact Sensor (FIS) > Components and Components Location**Components**

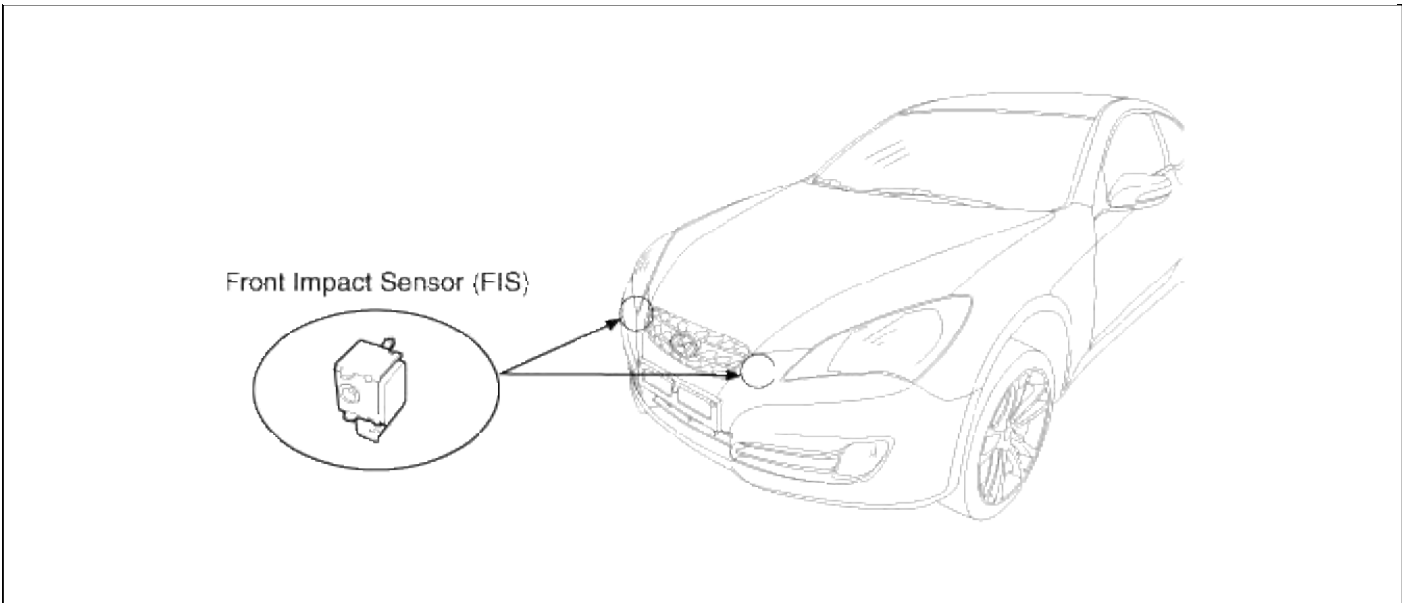


Restraint > SRSCM > Front Impact Sensor (FIS) > Repair procedures

Removal

CAUTION

- Removal of the airbag must be performed according to the precautions/ procedures described previously.
- Before disconnecting the front impact sensor connector, disconnect the front airbag connector(s).
- Do not turn the ignition switch ON and do not connect the battery cable while replacing the front impact sensor.

1. Disconnect the battery negative cable, and wait for at least three minutes before beginning work.
2. Remove the front bumper.
(Refer to Body group - "Bumper")
3. Disconnect the Front Impact Sensor connector.
4. Remove the Front Impact Sensor mounting nut.

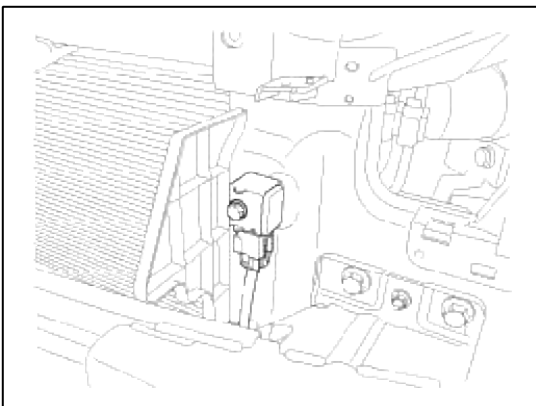

5. Remove the Front Impact Sensor.

Installation

CAUTION

- Do not turn the ignition switch ON and do not contact the battery cable while replacing the front impact sensor.

1. Install the new Front Impact Sensor.

2. Tighten the Front Impact Sensor mounting nut.

Tightening torque

: 6.8 ~ 8.8 N.m (0.7 ~ 0.9 kgf.m, 5.1 ~ 6.5 lb.ft)

3. Connect the Front Impact Sensor connector and install the front bumper.
(Refer to Body group - "Bumper")
4. Reconnect the battery negative cable.
5. After installing the Front Impact Sensor, confirm proper system operation:
 - A. Turn the ignition switch ON the SRS indicator light should be turned on for about six seconds and then go off.

Restraint > SRSCM > Side Impact Sensor (SIS) > Description and Operation**Description**

Side Impact Sensor (SIS) system consists of two Front-SIS which are installed at each center of the front door module (LH and RH) and two Rear-SIS which are installed at each rear pillar nearby (LH and RH).

Front-Side Impact Sensor (F-SIS) is also called P-SIS because that detects pressure due to collision at its mounting location.


Rear-Side Impact Sensor (R-SIS) is also called A-SIS because that detects acceleration.

SRSCM decides deployment or not of the airbag and the time of deployment through the collision signal of SIS when the collision occurred.

Restraint > SRSCM > Side Impact Sensor (SIS) > Components and Components Location**Components**


[Front]

Side Pressure Sensor(P-SIS)

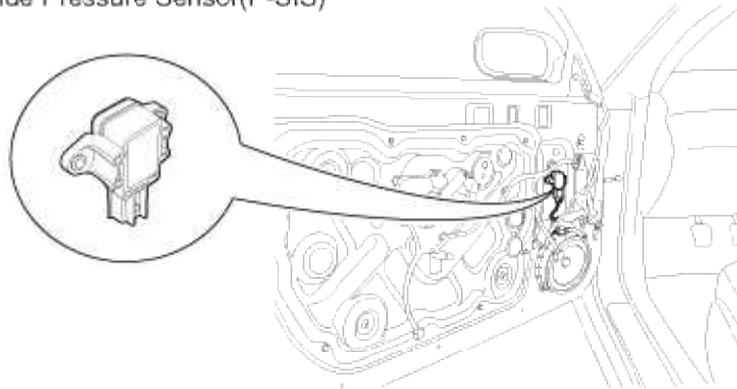

[Rear]

Side Impact Sensor (SIS)

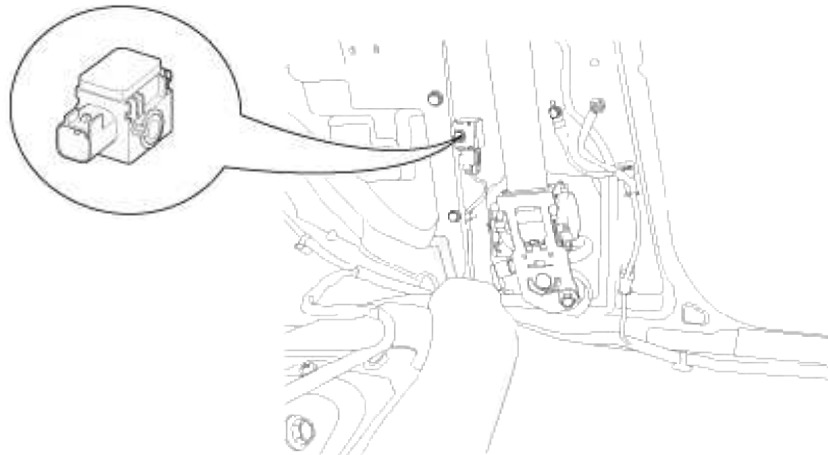

Restraint > SRSCM > Side Impact Sensor (SIS) > Repair procedures

Removal


Side Pressure Sensor

CAUTION

- Removal of the airbag must be performed according to the precautions/procedures described previously.
- Before disconnecting the side impact sensor connector(s), disconnect the side airbag connector (s).
- Do not turn the ignition switch ON and do not connect the battery cable while replacing the side impact sensor.


1. Disconnect the battery negative cable, and wait for at least three minutes before beginning work.
2. Remove the front door trim.
(Refer to Body group - "Front door")

3. Disconnect the side pressure sensor connector and remove the side pressure sensor after removing 2 rivets (A).

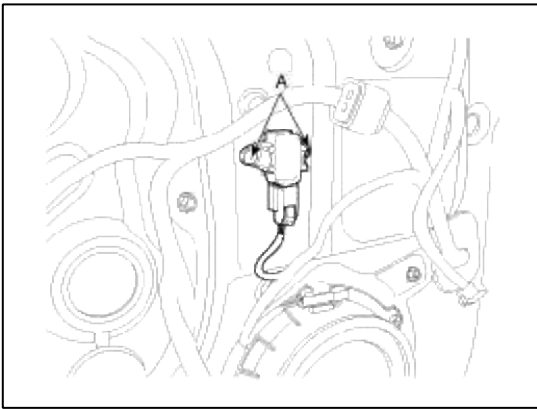

Side Impact Sensor

1. Disconnect the battery negative cable and wait for at least three minutes before beginning work.
2. Remove the rear seat.
(Refer to Body group - "Seat")
3. Remove the luggage side trim.
(Refer to Body group - "Interior trim")
4. Disconnect the side impact sensor connector.
5. Loosen the side impact sensor mounting bolt and remove the side impact sensor.

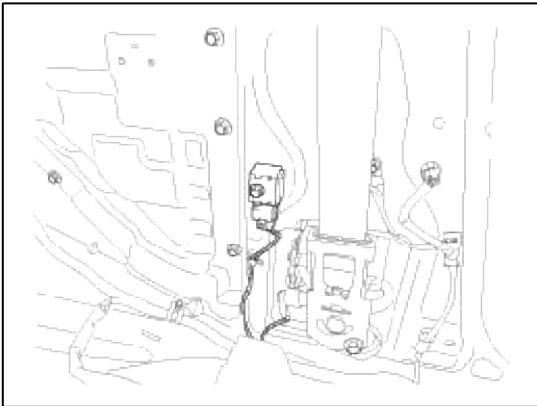

Installation

Side Pressure Sensor

CAUTION

- Do not turn the ignition switch ON and do not connect the battery cable while replacing the side impact sensor.

1. Install the new side pressure sensor with 2 rivets then connect the side pressure sensor connector.
2. Install the front door trim.
(Refer to Body group - "Front door")
3. Reconnect the battery negative cable.
4. After installing the side pressure sensor, confirm proper system operation:
 - A. Turn the ignition switch ON, the SRS indicator light should be turned on for about six seconds and then go off.

Side Impact Sensor

CAUTION

- Do not turn the ignition switch ON and do not connect the battery cable while replacing the side impact sensor.

1. Install the new side impact sensor with the bolt then connect the SRS harness connector to the side impact sensor.

Tightening torque

: 6.8 ~ 8.8 N.m (0.7 ~ 0.9 kgf.m, 5.1 ~ 6.5 lb.ft)

2. Install the luggage side trim.
(Refer to Body group - "Interior trim")
3. Install the rear seat.
(Refer to Body group - "Seat")
4. Reconnect the battery negative cable.
5. After installing the side impact sensor, confirm proper system operation:
 - A. Turn the ignition switch ON, the SRS indicator light should be turned on for about six seconds and then go off.


Restraint > SRSCM > Seat Belt Buckle Switch (BS) > Description and Operation

Description

The SRSCM shall monitor the status of the driver and front passenger seat belt buckle. The SRSCM provides one pin each for the driver and front passenger seat belt buckle status input. The seat belt buckle circuit operates from internal boost voltage supplied by the SRSCM, and uses chassis ground for the signal return. The buckle status shall modify the SRSCM deployment. If the buckle status is unbuckled, the corresponding pretensioner will be deactivated.

Restraint > SRSCM > Seat Belt Buckle Switch (BS) > Components and Components Location


Components

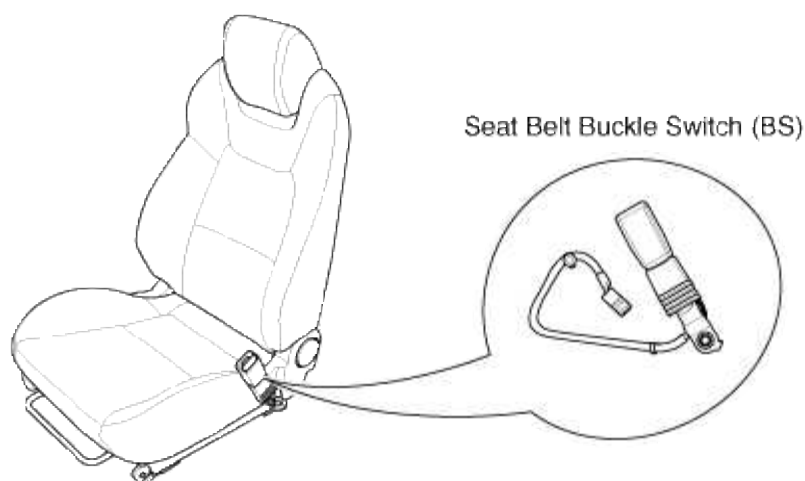

Restraint > SRSCM > Seat Belt Buckle Switch (BS) > Repair procedures

Removal

1. Disconnect the battery negative cable, and wait for at least three minutes before beginning work.
2. Remove the front seat assembly.
(Refer to Body group - "Seat")
3. Loosen the seat belt buckle mounting bolt and remove the seat belt buckle switch.
- 4.

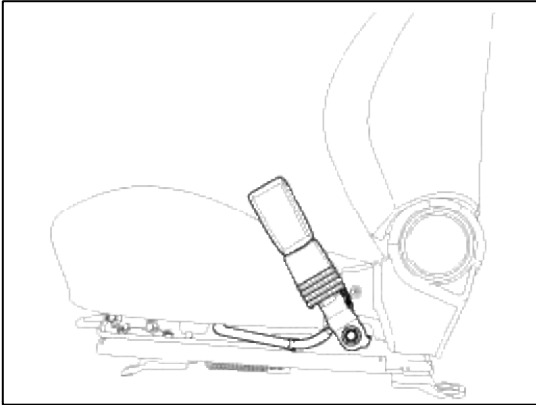

Installation

CAUTION

Be sure to install the harness wires not to be pinched or interfered with other parts.

1. Disconnect the battery negative cable, and wait for at least three minutes before beginning work.
2. Remove the ignition key from the vehicle.
3. Install the seat belt buckle switch.

Tightening Torque

: 39.2 ~ 53.9 N.m (4.0 ~ 5.5 kgf.m, 28.9 ~ 39.8 lb.ft)

4. Install the front seat assembly.
(Refer to Body group - "Seat")
5. Reconnect the battery negative cable.
6. After installing the Seat Belt Buckle Switch, confirm proper system operation:
 - A. Turn the ignition switch ON; the SRS indicator should be turned on for about six seconds and then go off.

Restraint > SRSCM > Passenger Occupant Detecting Sensor (PODS) > Description and Operation

Description

The system is intended to classify the occupancy status of the front passenger seat in a motor vehicle based upon the measured force on the bottom seat cushion.

The system also communicates to the SRSCM whether to allow or inhibit the deployment of the passenger airbags and/or pretensioner based upon this status.

The System also measured dynamic responses of the occupant. This information is used to identify when a child seat is cinched down tightly with the seat belt, and to also determine if the seat is unoccupied.


However, the dynamic measurements are not intended, nor capable of monitoring the seating position of the occupant, nor can they determine the proximity of the occupant to the inflator modules.

The system should not be confused with an occupant position recognition system, or any other occupant proximity sensor.

The Passive Occupant Detecting System (PODS) utilizes bladder placed between the passenger seat cushion and suspension to measure the occupant's loading force on the vehicle seat. The bladder is connected to pressure sensor and ultimately to an electronic control unit (ECU), both of which are mounted under the seat pan. The quantitative force determined by the system is compared to a given threshold for determination of passenger airbag suppression.

Restraint > SRSCM > Passenger Occupant Detecting Sensor (PODS) > Components and Components Location

Components

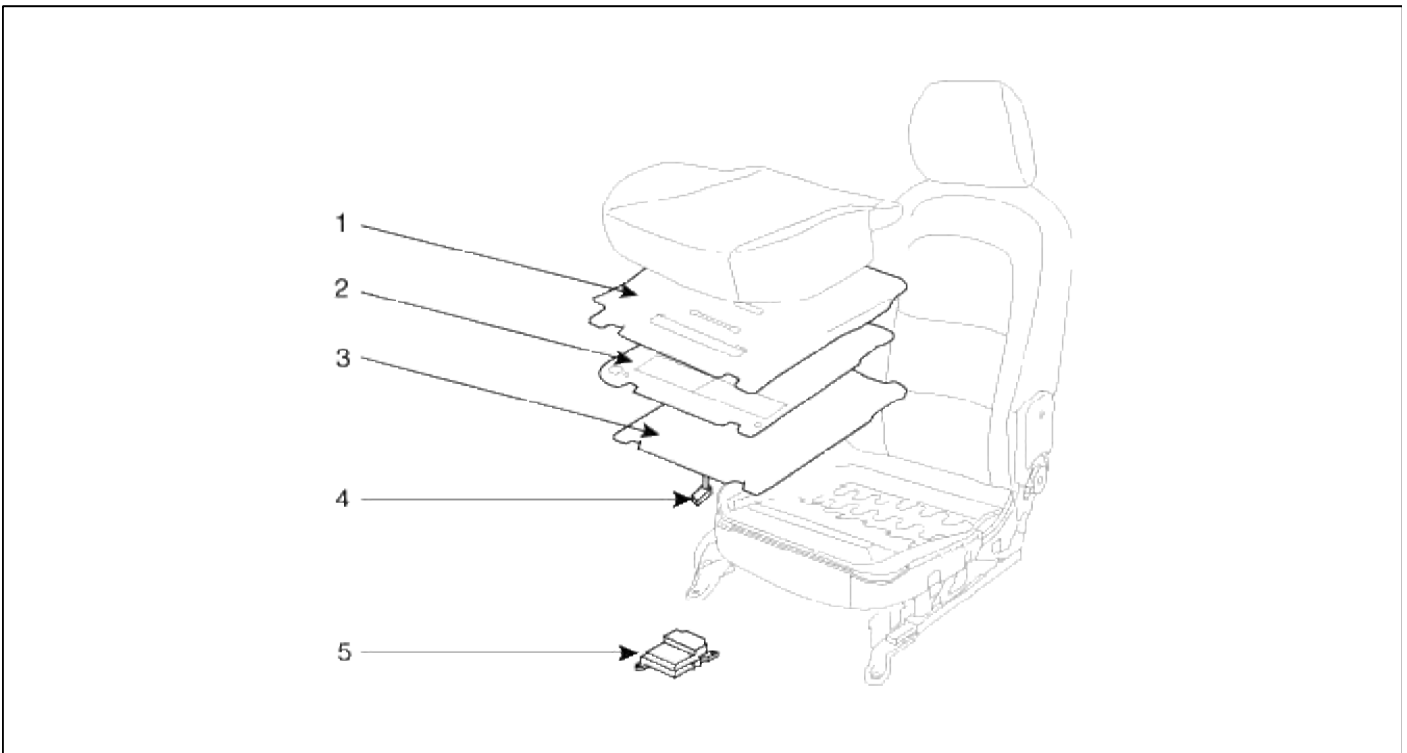

1. Bladder : Sense occupant weight and provide fluid pressure input to Pressure Sensor.
2. Backer Board : Provide stable and smooth reaction surface for Bladder, together with Felt Pad.
3. Felt Pad : Provide stable reaction surface for Bladder, together with Backer Board, and protect Bladder Assembly from the seat frame environment.
4. Pressure Sensor : Sense pressure input from Bladder and convert the pressure input to a voltage signal for ECU.
5. ECU : Utilizing data from the Pressure Sensor, BTS (Belt Tension sensor), and Compensation Tables, determine if PAB (Passenger Airbag) will be suppressed.

Restraint > SRSCM > Passenger Occupant Detecting Sensor (PODS) > Repair procedures

Removal

1. Disconnect the battery negative cable, and wait for at least three minutes before beginning work.
2. Remove the front passenger seat assembly.
(Refer to Body group - "Seat")
3. Remove the seat cushion as an assembly.
(Refer to Body group - "Seat")

Installation

1. Install the PODS equipped seat front assembly. (Refer to Body group- Seat)
2. Reconnect the battery negative cable.

3. After installing the PODS, confirm proper system operation :

- A. Turn the ignition switch ON; the SRS indicator should be turned on for about six seconds and then go off. Telltale lamp will turn on for 4 seconds and be turned off for 4 seconds. After the 8 seconds, it shall remain off if the PODS does not require suppression and the passenger airbag is enabled.


NOTE

Be sure to perform PODS reset with scantool after replcacing PODS equipped seat cushion.

PODS Re-zero procedure

You should perform PODS Re-zero procedure after service or replacement about all part of the passenger seat.

1. Ignition "OFF", connect scantool.
2. Ignition "ON" & Engine "OFF", select Airbag system and "PODS Reset" mode.

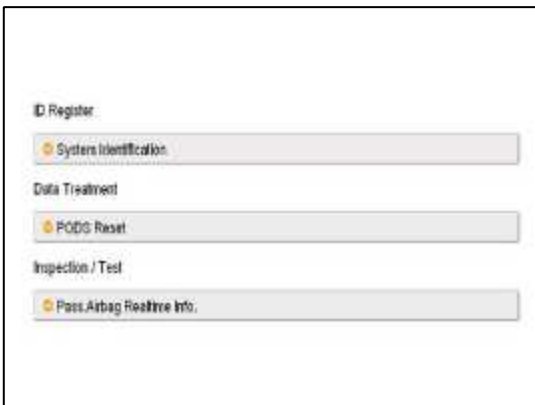


3. The scantool will show the two PODS RESET function steps.

- (1) Erase PODS ECU diagnostic codes.
- (2) PODS ECU initialization.



4. Press the OK button to erase the PODS related diagnostic codes.

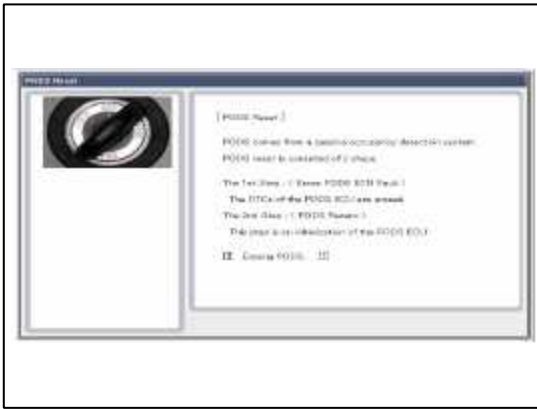

5. Press OK button to initialize the PODS.




CAUTION

This step must be done PODS re-zero, when the front passenger seat is empty.

6. The PODS initialization procedure will be performed.



7. Check PODS situation with selecting " Pass. Airbag Realtime Info" after performing PODS Reset procedure.

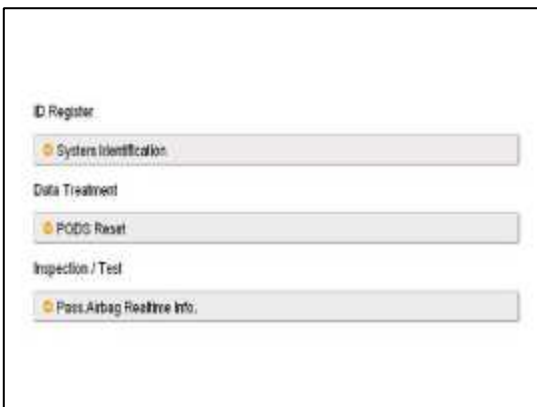

8. Perform inspection with pressing OK button.




9. Finish the procedure with pressing cancel button if there is no problem after inspecting each status as below.




Restraint > SRSCM > Schematic Diagrams

Circuit Diagram (1)

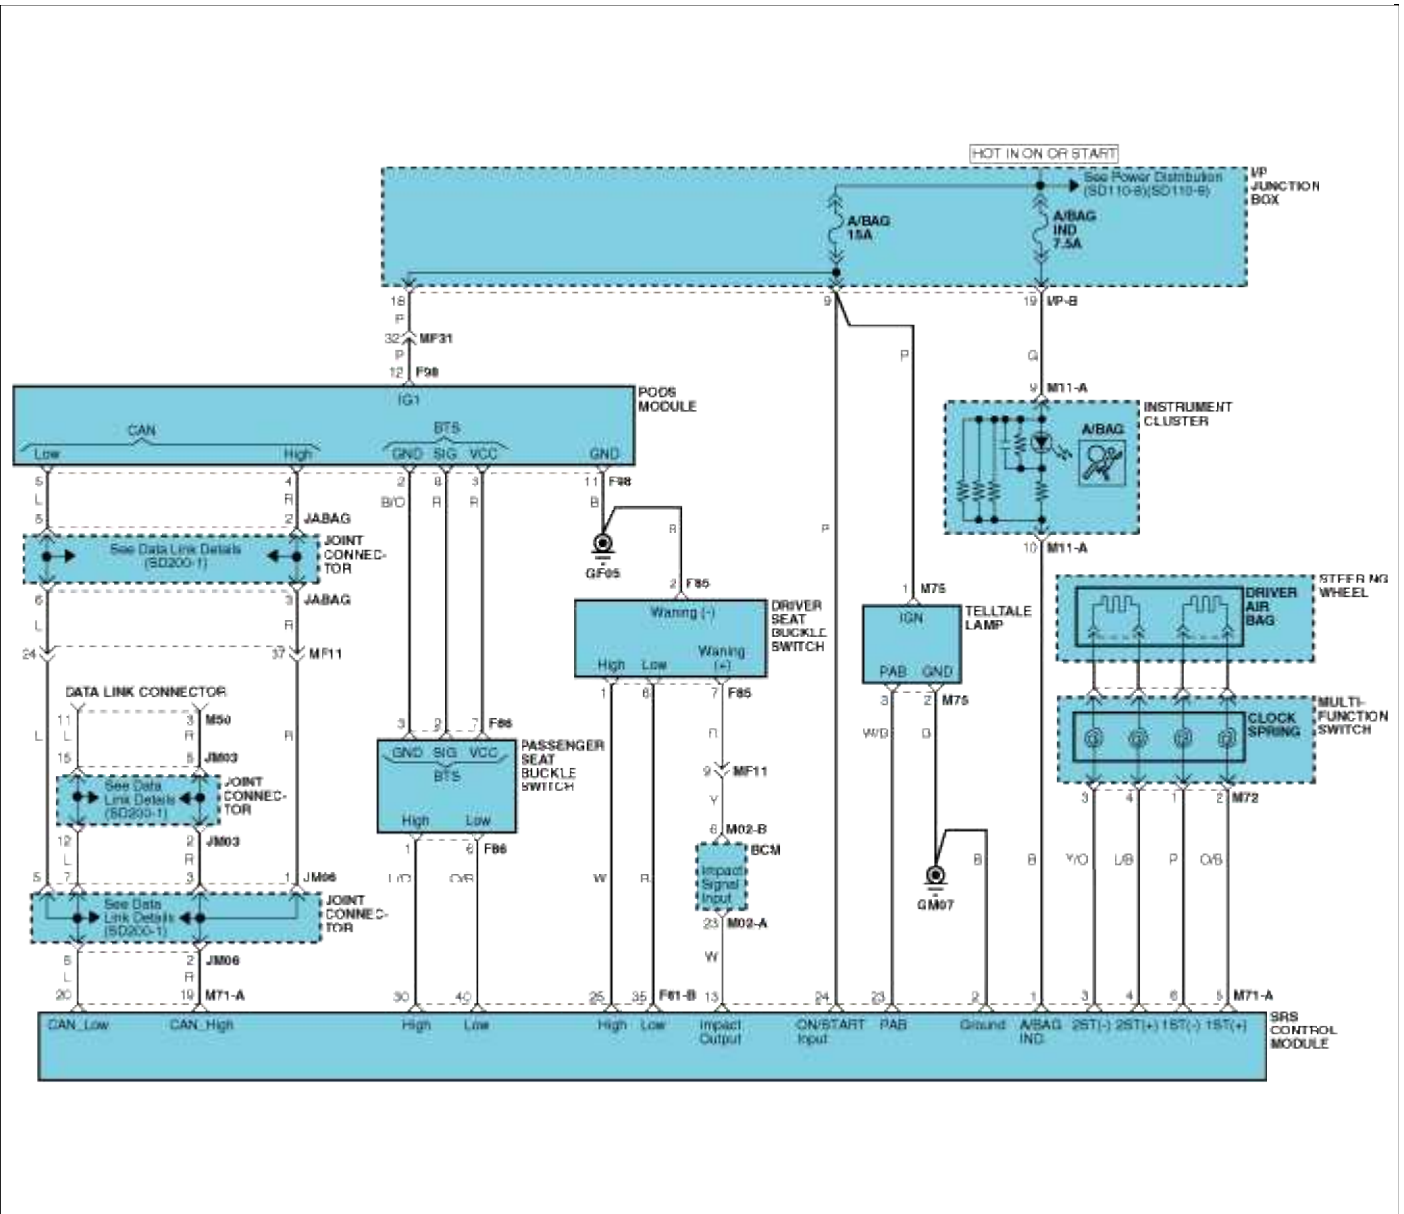

Circuit Diagram (2)

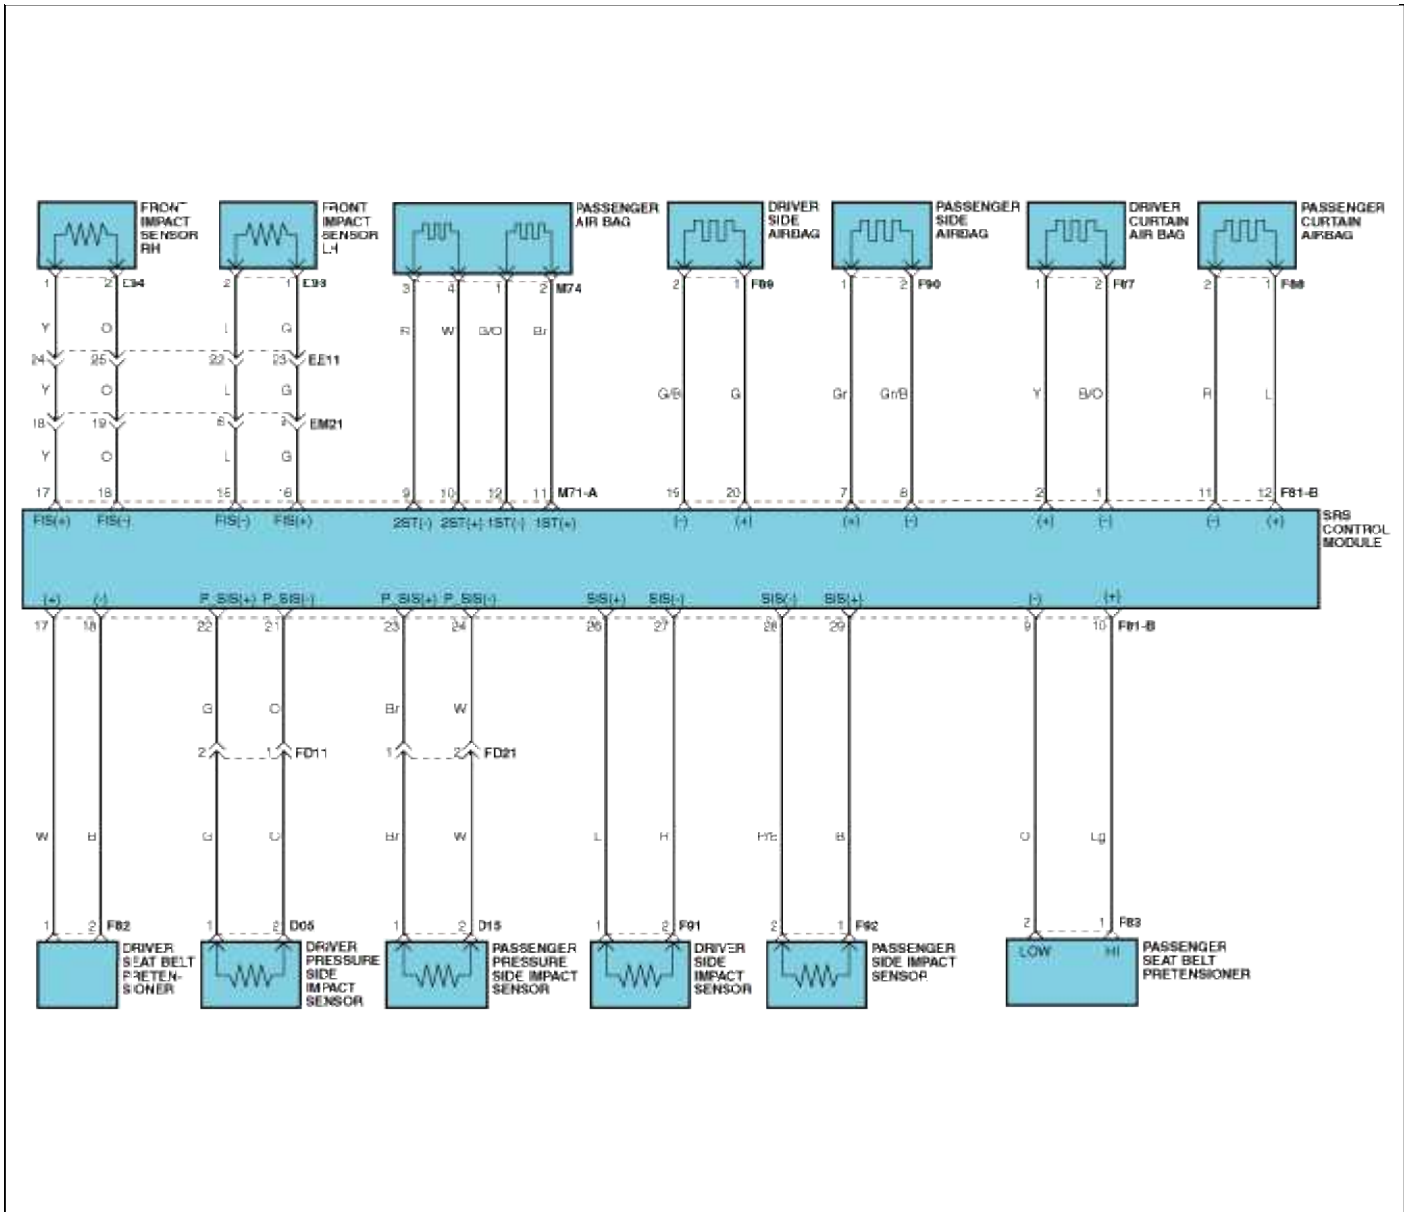

SRSCM Connector Terminal

Harness Connector

6	5	4	3	2	1
12	11	10	9	8	7
18	17	16	15	14	13
24	23	22	21	20	19

CONNECTOR A

10	9	8	7	6	5	4	3	2	1
20	19	18	17	16	15	14	13	12	11
30	29	28	27	26	25	24	23	22	21
40	39	38	37	36	35	34	33	32	31

CONNECTOR B

Shorting bar (—) : located on the upper side of pin 1 and 2 of SRSCM connector A

Note : For short circuit check, shorting bar must be opened. Use a plastic clip as a shorting bar opener for disconnecting shorting bar.

Pin	Function (Connector A)	Pin	Function (Connector B)
1	Airbag Warning Lamp (Shorting bar opener)	1	Curtain Airbag [Driver] Low
2	Power Ground (Shorting bar opener)	2	Curtain Airbag [Driver] High
3	(2nd stage) Driver Airbag Low	3	-

4	(2nd stage) Driver Airbag High	4	-
5	(1st stage) Driver Airbag High	5	-
6	(1st stage) Driver Airbag Low	6	-
7	-	7	Side Airbag [Passenger] High
8	-	8	Side Airbag [Passenger] Low
9	(2nd stage) Passenger Airbag Low	9	Seat Belt Pretensioner [Passenger] Low
10	(2nd stage) Passenger Airbag High	10	Seat Belt Pretensioner [Passenger] High
11	(1st stage) Passenger Airbag High	11	Curtain Airbag [Passenger] Low
12	(1st stage) Passenger Airbag Low	12	Curtain Airbag [Passenger] High
13	Crash Output	13	-
14	-	14	-
15	Front Impact Sensor [Driver] Low	15	-
16	Front Impact Sensor [Driver] High	16	-
17	Front Impact Sensor [Passenger] High	17	Seat Belt Pretensioner [Driver] High
18	Front Impact Sensor [Passenger] Low	18	Seat Belt Pretensioner [Driver] Low
19	CAN High (PODS and OBD)	19	Side Airbag [Driver] Low
20	CAN High (PODS and OBD)	20	Side Airbag [Driver] High
21	-	21	Side Impact Sensor [Driver] Low
22	-	22	Side Impact Sensor [Driver] High
23	Telltale Warning Lamp	23	Side Impact Sensor [Passenger] High
24	Power supply (Ignition)	24	Side Impact Sensor [Passenger] Low
		25	Seat Belt Buckle Switch [Driver] High
		26	Side Impact Sensor [Driver] High
		27	Side Impact Sensor [Driver] Low
		28	Side Impact Sensor [Passenger] Low
		29	Side Impact Sensor [Passenger] High
		30	Seat Belt Buckle Switch [Passenger] High
		31	-
		32	-
		33	-
		34	-
		35	Seat Belt Buckle Switch [Driver] Low
		36	-

		37	-
		38	-
		39	-
		40	Seat Belt Buckle Switch [Passenger] Low

Restraint > Airbag Module > Driver Airbag (DAB) Module and Clock Spring > Description and Operation

Description


Driver Airbag (DAB) is installed in steering wheel and electrically connected to SRSCM via clock spring. It protects the driver from danger by deploying a bag when frontal crash occurs. The SRSCM determines deployment of Driver Airbag (DAB).

CAUTION

Never attempt to measure the circuit resistance of the airbag module (squib) even if you are using the specified tester. If the circuit resistance is measured with a tester, accidental airbag deployment will result in serious personal injury.

Restraint > Airbag Module > Driver Airbag (DAB) Module and Clock Spring > Components and Components Location

Components

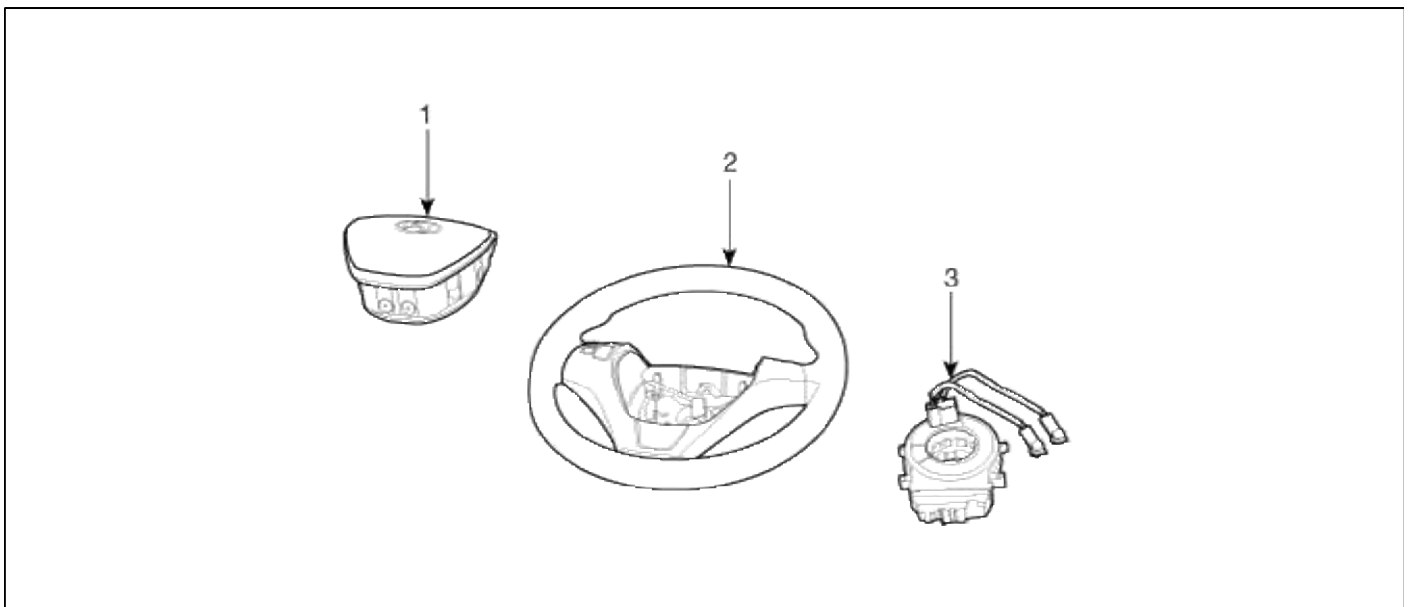


1. Driver Airbag (DAB)
2. Steering Wheel
3. Clock Spring


Restraint > Airbag Module > Driver Airbag (DAB) Module and Clock Spring > Repair procedures

Removal

1. Disconnect the battery negative cable and wait for at least three minutes before beginning work.
2. Remove the airbag module mounting bolts (2EA).

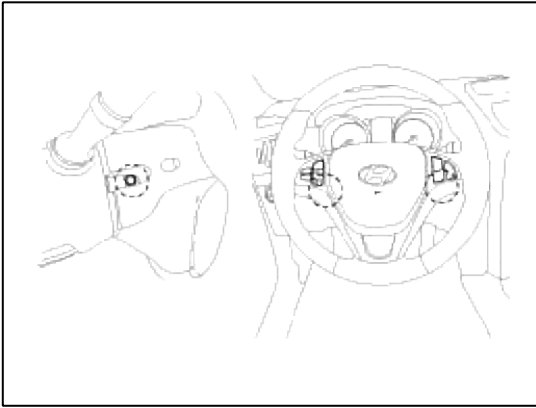

3. Disconnect the horn connector (A).

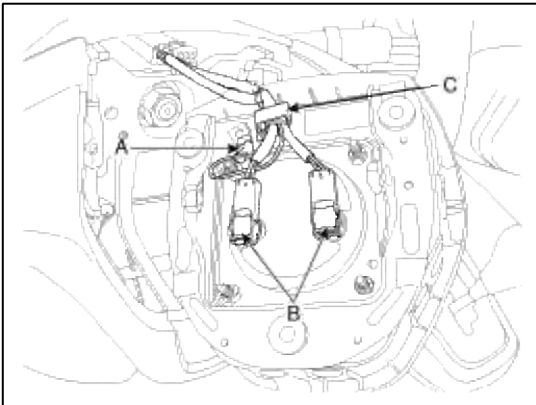


4. Remove the wiring fixing clip (C) and disconnect airbag module connector (B).
5. Separate the airbag module from the steering wheel.


CAUTION

The removed airbag module should be stored in a clean, dry place with the pad cover face up.

6. Remove the steering wheel and steering wheel column cover.
(Refer to Steering System group - "Steering Column and Shaft")

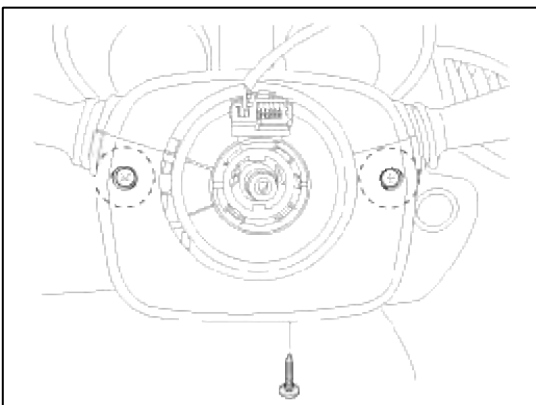

7. Disconnect the clock spring and horn connector, then remove the clock spring.

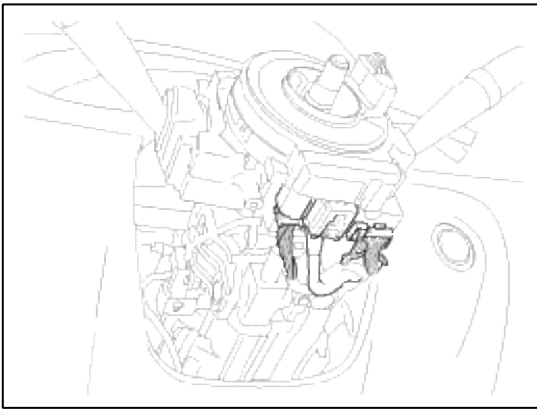

Inspection

Driver Airbag (DAB)

If any improper parts are found during the following inspection, replace the airbag module with a new one.


CAUTION

Never attempt to measure the circuit resistance of the airbag module (squib) even if you are using the specified tester. If the circuit resistance is measured with a tester, accidental airbag deployment will result in serious personal injury.

1. Check pad cover for dents, cracks or deformities.
2. Check the airbag module for denting, cracking or deformation.
3. Check hooks and connectors for damage, terminals for deformities, and harness for binds.
4. Check airbag inflator case for dents, cracks or deformities.
5. Install the airbag module to the steering wheel to check for fit or alignment with the wheel.

Clock Spring

1. If, as a result of the following checks, even one abnormal point is discovered, replace the clock spring with a new one.
2. Check connectors and protective tube for damage, and terminals for deformities.

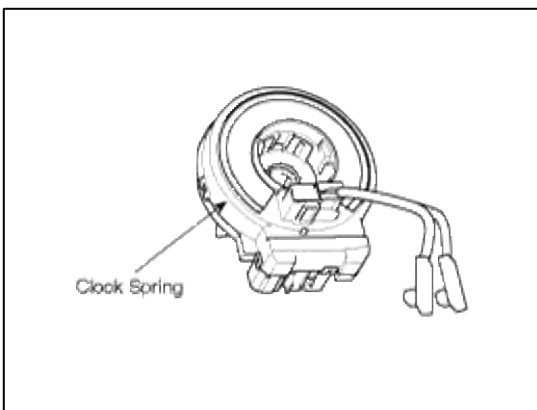


Installation

1. Remove the ignition key from the vehicle.
2. Disconnect the battery negative cable from battery and wait for at least three minutes before beginning work.
3. Connect the clock spring harness connector and horn harness connector to the clock spring.
4. Set the center position by getting marks between the clock spring and the cover into line. Make an array the mark () by turning the clock spring clockwise to the stop and then 3 revolutions counterclockwise.
5. Install the steering wheel column cover and the steering wheel. (Refer to Steering System group- Steering Column and Shaft)

6. Connect the Driver Airbag (DAB) module connector and horn connector, and then install the Driver Airbag (DAB) module on the steering wheel.
7. Secure the Driver Airbag (DAB) with the new mounting bolts.

Tightening torque

: 7.8 ~ 10.8 N.m (0.8 ~ 1.1 kgf.m, 5.8 ~ 8.0 lb.ft)

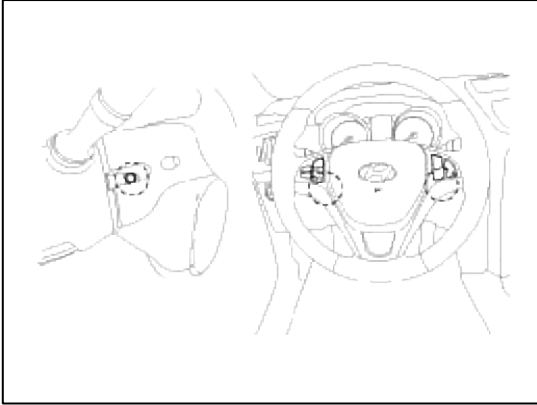

8. Connect the battery negative cable.
9. After installing the airbag, confirm proper system operation:
 - A. Turn the ignition switch ON; the SRS indicator light should be turned on for about six seconds and then go off.
 - B. Make sure horn button works.


Restraint > Airbag Module > Passenger Airbag (PAB) Module > Description and Operation**Description**

The passenger Airbag (PAB) is installed inside the crash pad and protects the front passenger in the event of a frontal crash. The SRSCM determines if and when to deploy the PAB.

CAUTION

Never attempt to measure the circuit resistance of the airbag module (squib) even if you are using the specified tester. If the circuit resistance is measured with a tester, accidental airbag deployment will result in serious personal injury.


Restraint > Airbag Module > Passenger Airbag (PAB) Module > Components and Components**Location****Components**

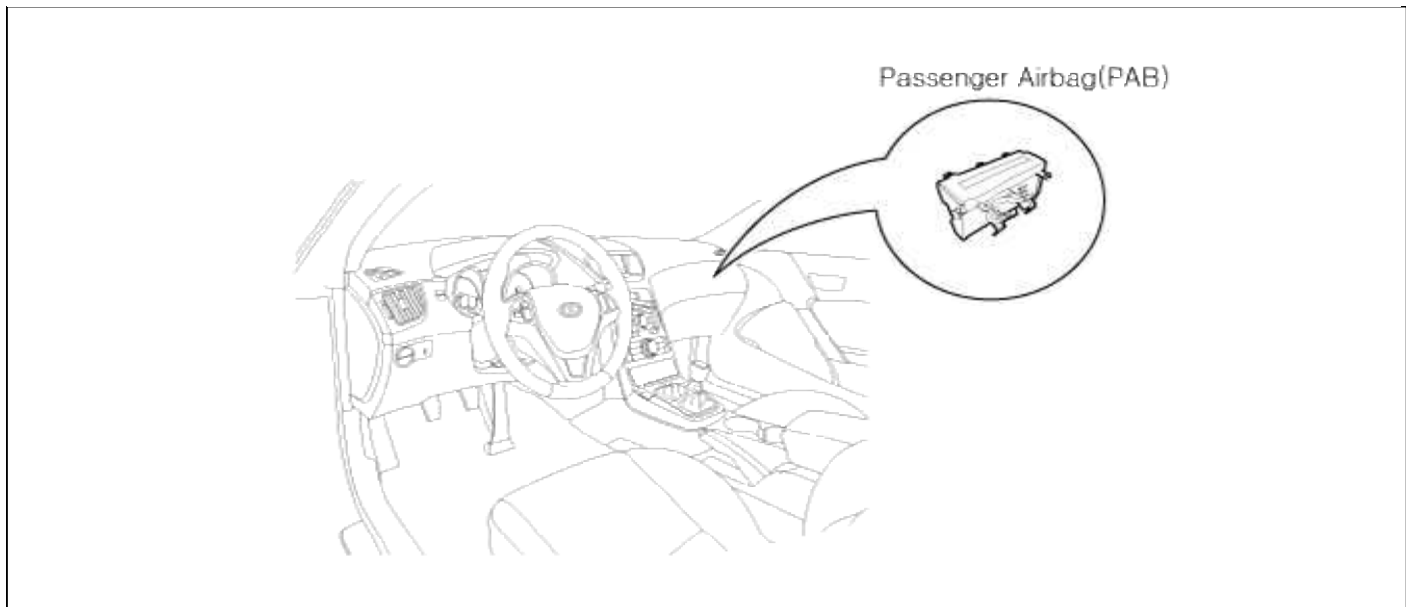

Restraint > Airbag Module > Passenger Airbag (PAB) Module > Repair procedures

Removal

1. Disconnect the battery negative cable and wait for at least three minutes before beginning work.
2. Remove the glove box assembly.
(Refer to Body group - "Crash pad")
3. Disconnect the PAB connector and remove the PAB mounting bolt.

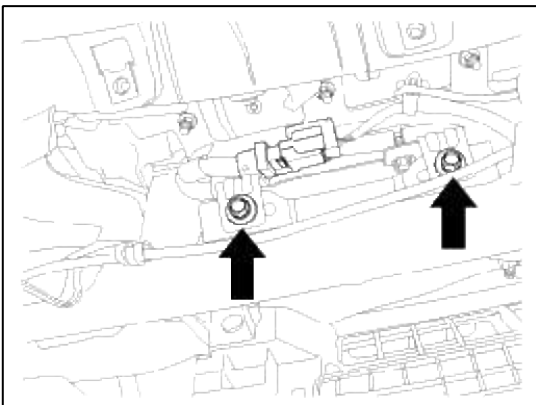

4. Remove the crash pad.
(Refer to Body group - "Crash pad")

NOTE

Replace the crash pad which is damaged while PAB is deployed.

5. Remove the heater duct from the crash pad.
6. Remove the mounting nuts(6EA) from the crash pad. Then remove the passenger airbag.

CAUTION

The removed airbag module should be stored in a clean, dry place with the airbag cushion up.

Installation

1. Remove the ignition key from the vehicle.

2. Disconnect the battery negative cable from battery and wait for at least three minutes before beginning work.
3. Place a Passenger Airbag (PAB) on the crash pad and tighten the Passenger Airbag (PAB) mounting nuts.

Tightening torque

: 3.9 ~ 6.9 N.m (0.4 ~ 0.7 kgf.m, 2.9 ~ 5.0 lb.ft)

4. Install the heater duct to the crash pad.
5. Install the crash pad.
(Refer to Body group - "Crash pad")
6. Tighten the PAB mounting bolt.

Tightening torque

: 6.9 ~ 10.8 N.m (0.7 ~ 1.1 kgf.m, 5.1 ~ 8.0 lb.ft)

7. Connect the Passenger Airbag (PAB) harness connector to the SRS main harness connector.
8. Reinstall the glove box assembly.
(Refer to Body group - "Crash pad")
9. Reconnect the battery negative cable.
10. After installing the Passenger Airbag (PAB), confirm proper system operation:
 - A. Turn the ignition switch ON; the SRS indicator light should be turned on for about six seconds and then go off.

Restraint > Airbag Module > Side Airbag (SAB) Module > Description and Operation

Description


The Side Airbags (SAB) are installed inside the front seat and protect the driver and front passenger from danger when side crash occurs. The SRSCM determines deployment of side airbag by using Side Impact Sensor (SIS) signal.

CAUTION

Never attempt to measure the circuit resistance of the airbag module (squib) even if you are using the specified tester. If the circuit resistance is measured with a tester, accidental airbag deployment will result in serious personal injury.

Restraint > Airbag Module > Side Airbag (SAB) Module > Components and Components Location

Components

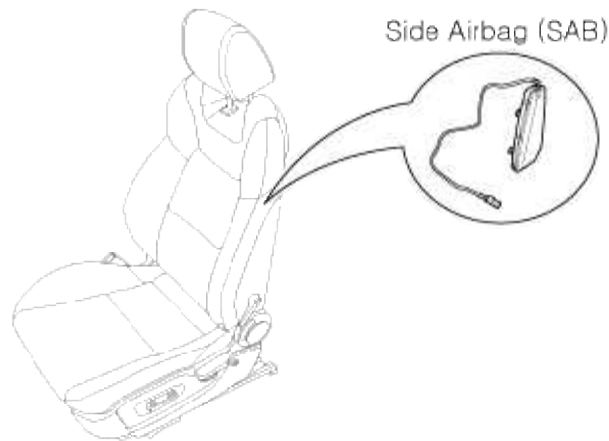

Restraint > Airbag Module > Side Airbag (SAB) Module > Repair procedures


Removal

1. Disconnect the battery negative cable and wait for at least 3 minutes before beginning work.
2. Remove the front seat assembly.
(Refer to Body group - "Seat")
3. Remove the seat back cover.
(Refer to Body group - "Seat")

NOTE

When the front side airbag deployed after a collision, replace the seat back as an assembly.

4. Loosen the SAB mounting nuts and remove the SAB module.

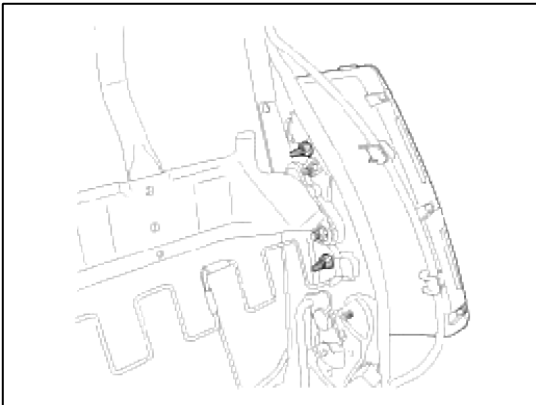

WARNING

The removed airbag module should be stored in a clean and dry place with the cushion side up.

Installation

CAUTION

Be sure to install the harness wires not to be pinched or interfered with other parts.


NOTE

- Do not open the lid of the side airbag cover.
- Use a new mounting nuts when you replace a side airbag.
- Make sure that the airbag assembly cover is installed properly. Improper installation may prevent the proper deployment.

1. Remove the ignition key from the vehicle.
2. Disconnect the battery negative cable and wait for at least three minutes.
3. Place a Side Airbag (SAB) on the side airbag frame and tighten the side airbag mounting nuts (2EA).

Tightening torque

: 5.9 ~ 7.8 N.m (0.6 ~ 0.8 kgf.m , 4.3 ~ 5.8 lb.ft)

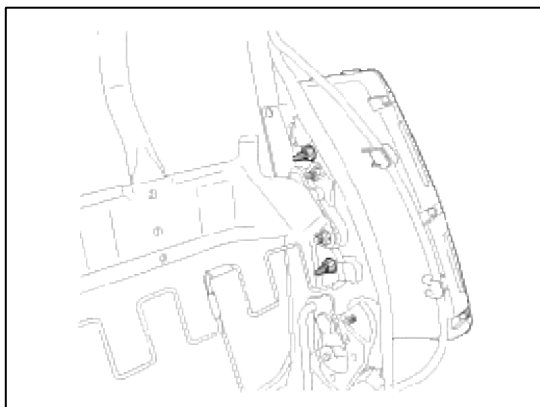

4. Install the new seat back cover.
(Refer to Body group - "Seat")
5. Install the front seat assembly, and then connect the Side Airbag (SAB) harness connector.
6. Recline and slide the front seat forward fully, make sure the harness wires are not pinched or interfering with other parts.
7. Reconnect the battery negative cable.
8. After installing the Side Airbag (SAB), confirm proper system operation:
 - A. Turn the ignition switch ON; the SRS indicator light should be turned on for about six seconds and then go off.

Restraint > Airbag Module > Curtain Airbag (CAB) Module > Description and Operation

Description


Curtain airbags are installed inside the headliner (LH and RH) and protect the driver and passenger from danger when side crash occurs. The SRSCM determines deployment of curtain airbag by using side impact sensor (SIS) signal.

CAUTION


Never attempt to measure the circuit resistance of the airbag module even if you are using the specified tester. If the circuit resistance is measured with a tester, accidental airbag deployment will result in serious personal injury.

Restraint > Airbag Module > Curtain Airbag (CAB) Module > Components and Components Location


Components

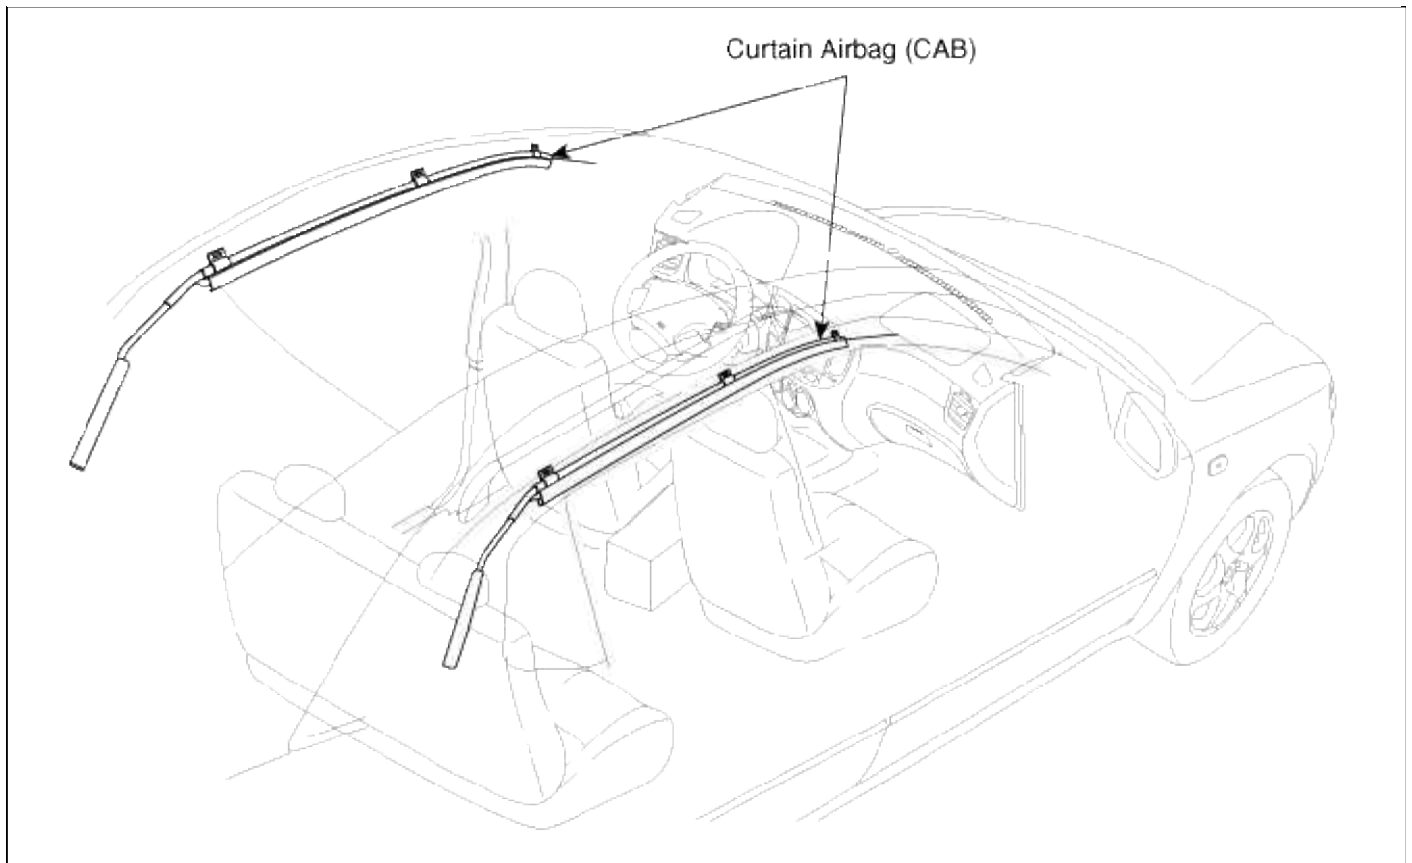**Restraint > Airbag Module > Curtain Airbag (CAB) Module > Repair procedures****Removal**

1. Disconnect the battery negative cable and wait for at least 3 minutes before beginning work.
2. Remove the following parts.
(Refer to Body group - "Interior trim")
 - A. Front pillar trim, Rear seat assembly, Door scuff trim
 - B. Rear pillar trim, Headliner, luggage side trim
3. Disconnect the Curtain Airbag harness connector.

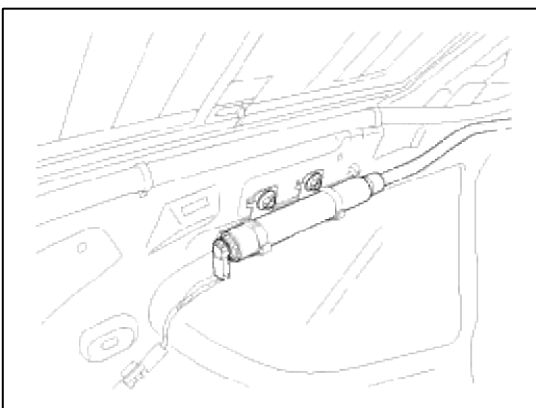

4. After loosening the mounting bolts and nuts remove the curtain airbag.

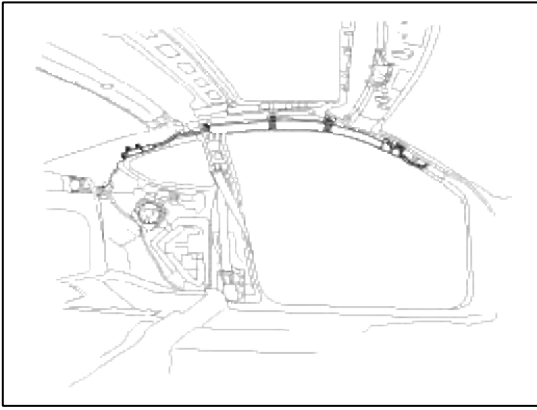

Installation

1. Remove the ignition key from the vehicle.
2. Disconnect the battery negative cable and wait for at least three minutes.
3. Tighten the Curtain Airbag (CAB) mounting bolts.

Tightening torque

: 18.6 ~ 26.5 N.m (1.9 ~ 2.7 kgf.m, 13.7 ~ 19.5 lb.ft)

CAUTION

- Never twist the airbag module when installing it. If the module is twisted, airbag module may operate abnormally.

4. Connect the CAB connector.
5. Install the following parts.
(Refer to Body group - "Interior trim")
 - A. Headliner, Front pillar trim, Rear seat assembly
 - B. Door scuff trim, luggage side trim, Rear pillar trim
6. Reconnect the battery negative cable.
7. After installing the Curtain Airbag (CAB), confirm proper system operation:
 - A. Turn the ignition switch ON; the SRS indicator light should be turned on for about six seconds and then go off.

Restraint > Airbag Module > Airbag Module Disposal > Description and Operation

Airbag Disposal

Special tool required

Deployment tool 0957A-34100A

Before scrapping any airbags or side airbags (including those in a whole vehicle to be scrapped), the airbags or side airbags must be deployed. If the vehicle is still within the warranty period, before deploying the airbags or side airbags, the Technical Manager must give approval and/or special instruction. Only after the airbags or side airbags have been deployed (as the result of vehicle collision, for example), can they be scrapped. If the airbags or side airbags appear intact (not deployed), treat them with extreme caution. Follow this procedure.

Deploying airbags in the vehicle

If an SRS equipped vehicle is to be entirely scrapped, its airbags or side airbags should be deployed while still in the vehicle. The airbags or side airbags should not be considered as salvageable parts and should never be installed in another vehicle.

1. Turn the ignition switch OFF, and disconnect the battery negative cable and wait at least three minutes.

2. Confirm that each airbag or side airbag is securely mounted.
3. Confirm that the special tool is functioning properly by following the check procedure.
 - (1) Driver's Airbag :
 - A. Remove the driver's airbag and install the SST (0957A-38500).
 - B. Install the driver's airbag on the steering wheel.
 - (2) Front Passenger's Airbag :
 - A. Remove the glove box, and then disconnect the 2P connector between the front passenger's airbag and SRS main harness.
 - B. Install the SST(0957A-3F100).
 - (3) Side Airbag :
 - A. Disconnect the 2P connector between the side airbag and side wire harness.
 - B. Install the SST (0957A-3F100).
 - (4) Curtain Airbag :
 - A. Disconnect the 2P connector between the curtain airbag and wire harness.
 - B. Install the SST (0957A-38500).
 - (5) Seat Belt Pretensioner :
 - A. Disconnect the 2P connector from the seat belt pretensioner.
 - B. Install the SST (0957A-38500).
4. Place the deployment tool at least thirty feet (10meters) away from the airbag.
5. Connect a 12 volt battery to the tool.
6. Push the tool's deployment switch. The airbag should deploy (deployment is both highly audible and visible: a loud noise and rapid inflation of the bag, followed by slow deflection)
7. Dispose of the complete airbag. No part of it can be reused. Place it in a sturdy plastic bag and seal it securely.

Deploying the airbag out of the vehicle

If an intact airbag has been removed from a scrapped vehicle, or has been found defective or damage during transit, storage or service, it should be deployed as follows:

1. Confirm that the special is functioning properly by following the check procedure on this page.
2. Position the airbag face up, outdoors on flat ground at least thirty feet (10meters) from any obstacles or people.

Disposal Of Damaged Airbag

1. If installed in a vehicle, follow the removal procedure of driver's airbag front passenger's and side airbag.
2. In all cases, make a short circuit by twisting together the two airbag inflator wires.
3. Package the airbag in exactly the same packing that the new replacement part come in.

Restraint > Seat Belt Pretensioner > Seat Belt Pretensioner (BPT) > Description and Operation

Description


The Seat Belt Pretensioners (BPT) are installed inside Center Pillar (LH & RH). When a vehicle crashes with a certain degree of frontal impact, the pretensioner seat belt helps to reduce the severity of injury to the front seat occupants by retracting the seat belt webbing. This prevents the front occupants from thrusting forward and hitting the steering wheel or the instrument panel when the vehicle crashes.

CAUTION

Never attempt to measure the circuit resistance of the Seat Belt Pretensioner (BPT) even if you are using the specified tester. If the circuit resistance is measured with a tester, the pretensioner will be ignited accidentally. This will result in serious personal injury.


Restraint > Seat Belt Pretensioner > Seat Belt Pretensioner (BPT) > Components and Components Location

Components

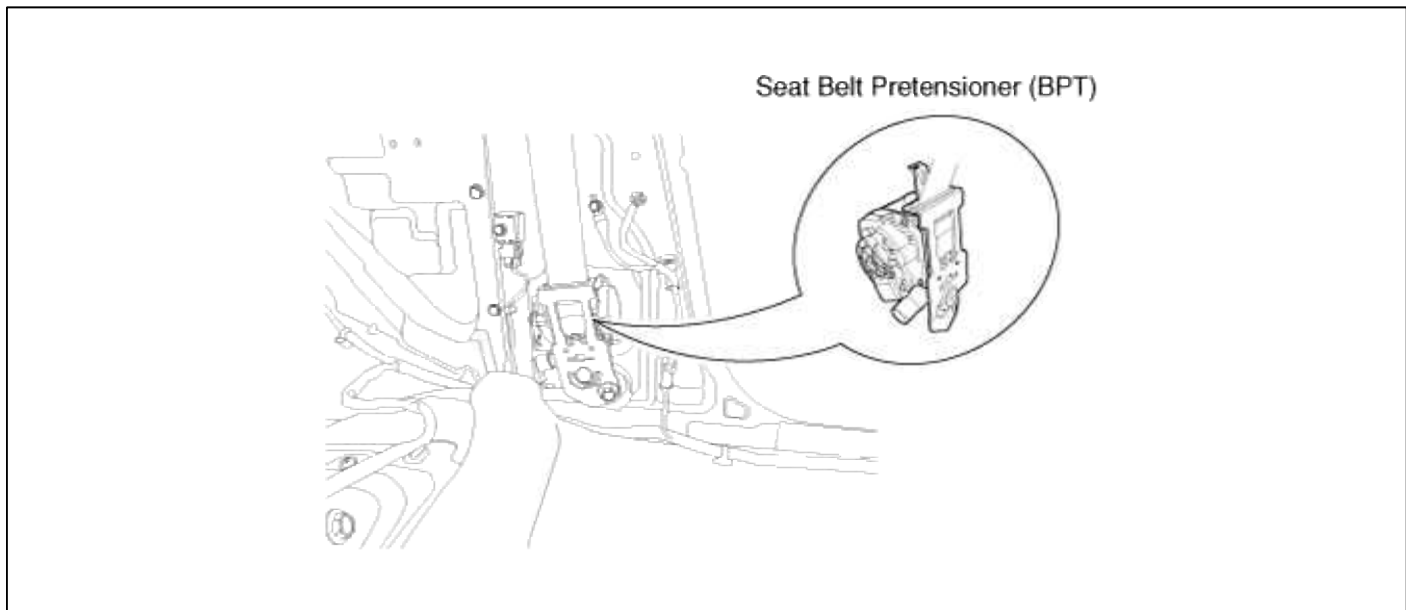

Restraint > Seat Belt Pretensioner > Seat Belt Pretensioner (BPT) > Repair procedures

Removal

1. Disconnect the battery negative cable, and wait for at least three minutes before beginning work.
2. Remove the lower anchor bolt.
3. Remove the following parts.
(Refer to Body group - "Interior trim")
 - A. Rear seat assembly, Door scuff trim
 - B. Luggage side trim, Center upper trim
4. Remove the upper anchor bolt.
5. Loosen the Seat Belt Pretensioner mounting bolt and remove the Seat Belt Pretensioner.

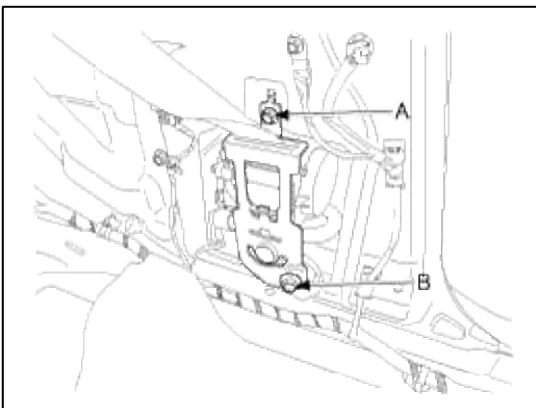

6. Disconnect the Seat Belt Pretensioner connector.

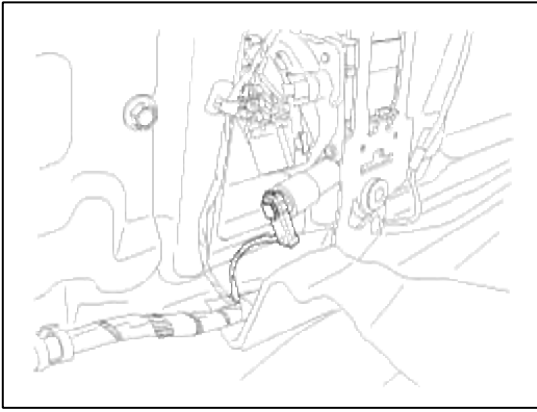


Installation

1. Remove the ignition key from the vehicle.
2. Disconnect the battery negative cable and wait for at least three minutes.
3. Connect the Seat Belt Pretensioner (BPT) connector.
4. Install the Seat Belt Pretensioner (BPT) with a bolt.

Tightening torque

Bolt B : 39.2 ~ 53.9 N.m (4.0 ~ 5.5 kgf.m, 28.9 ~ 39.8 lb.ft)

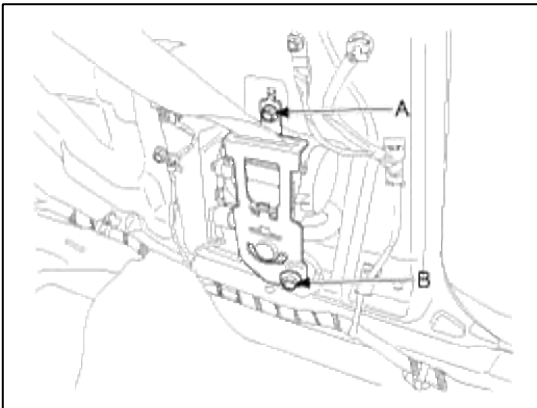

5. Install the upper anchor bolts.

Tightening torque

: 39.2 ~ 53.9 N.m (4.0 ~ 5.5 kgf.m, 28.9 ~39.8 lb.ft)

6. Install the following parts.
(Refer to Body group - "Interior trim")
 - A. Center upper trim, luggage side trim
 - B. Door scuff trim, Rear seat assembly
7. Install the lower anchor bolts.

Tightening torque

: 39.2 ~ 53.9 N.m (4.0 ~ 5.5 kgf.m, 28.9 ~39.8 lb.ft)

8. Reconnect the battery negative cable.
9. After installing the Seat Belt Pretensioner (BPT), confirm proper system operation:
 - A. Turn the ignition switch ON; the SRS indicator light should be turned on for about six seconds and then go off.

GENESIS COUPE(BK) > 2013 > G 3.8 GDI > Steering System**Steering System > General Information > Specifications**

Specifications


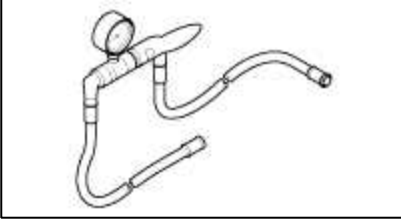
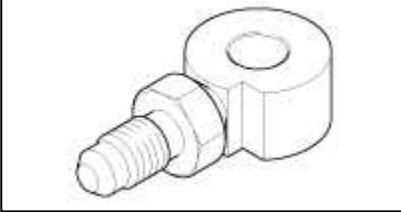
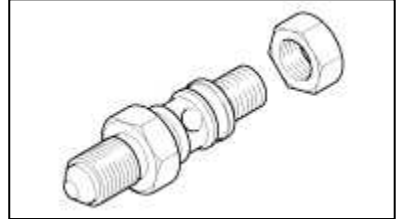

Item		Specification
Steering gear	Type	Rack & Pinion
	Rack stroke	129mm (5.0787 in)
Oil pump	Type	Vane
	Relief pressure	100 ~ 105kgf/cm ²
Steering angle	Inner	38.01°±1°30'
	Outer	31.6°
Power steering oil		PENTOSIN CHF202

Tightening Torques

Item	Tightening torque		
	N.m	kgf.m	lb-ft
Wheel nuts	88.3 ~ 107.9	9.0 ~ 11.0	65.1 ~ 79.6
Steering column assembly and universal joint	29.4 ~ 34.3	3.0 ~ 3.5	21.7 ~ 25.3
Steering column assembly mounting bolt & nuts	12.7 ~ 17.7	1.3 ~ 1.8	9.4 ~ 13.0
Tie rod end & front axle	58.8 ~ 78.5	6.0 ~ 8.0	43.4 ~ 57.9
Steering gear box & sub frame	78.5 ~ 98.1	8.0 ~ 10.0	57.9 ~ 72.3
Steering gear box & bracket	19.6 ~ 29.4	2.0 ~ 3.0	14.5 ~ 21.7
Pressure tube wrench bolt & power steering pump	53.9 ~ 63.7	5.5 ~ 6.5	39.8 ~ 47.0
Steering gear box & universal joint	17.7 ~ 24.5	1.8 ~ 2.5	13.0 ~ 18.1
Dust cover & dash	12.7 ~ 17.7	1.3 ~ 1.8	9.4 ~ 13.0
Dust cover clamp	6.9 ~ 11.8	0.7 ~ 1.2	5.1 ~ 8.7

Steering System > General Information > Special Service Tools

Special Service Tools

Tool (Number and Name)	Illustration	Use
09561-11001 Steering wheel puller		Removal of steering wheel
09572-21000 Oil pressure gauge		Measurement of oil pressure (Use with 09572-22100, 09572-21200)
09572-22100 Oil pressure gauge adaptor		Measurement of oil pressure (Use with 09572-21000, 09572-21200)
09572-21200 Oil pressure gauge adaptor		Measurement of oil pressure (Use with 09572-22100, 09572-22100)
09568-2J100 Ball joint puller		Separation of tie-rod end ball joint

Steering System > General Information > Troubleshooting

Troubleshooting

Symptom	Probable cause	Remedy
Excessive play in steering	Loose yoke plug	Retighten
	Loose steering gear mounting bolts	Retighten
	Loose or worn tie rod end	Retighten or replace as necessary
Steering wheel operation is not smooth (Insufficient power assist)	V-belt slippage	Readjust
	Damaged V-belt	Replace
	Low fluid level	Replenish
	Air in the fluid	Bleed air
	Twisted or damaged hoses	Correct the routing or replace

	Insufficient oil pump pressure	Repair or replace the oil pump
	Sticky flow control valve	Replace
	Excessive internal oil pump leakage	Replace the damaged parts
	Excessive oil leaks from rack and pinion in gear box	Replace the damaged parts
	Distorted or damaged gear box or valve body seals	Replace
Steering wheel does not return properly	Excessive turning resistance of tierod end	Replace
	Yoke plug excessively tight	Adjust
	Tie rod and/or ball joint cannot turn smoothly	Replace
	Loose mounting of gear box mounting bracket Worn steering shaft joint and/or	Retighten
	Worn steering shaft joint and/or body grommet	Correct or replace
	Distorted rack	Replace
	Damaged pinion bearing	Replace
	Twisted or damaged hoses	Reposition or replace
	Damaged oil pressure control valve	Replace
	Damaged oil pump input shaft bearing	Replace
Noise	<p>Hissing Noise in Steering Gear</p> <p>There is some noise with all power steering systems. One of the most common is a hissing sound when the steering wheel is turned and the car is not moving. This noise will be most evident when turning the wheel while the brakes are being applied. There is no relationship between this noise and steering performance. Do not replace the valve unless the "hissing" noise becomes extreme. A replaced valve will also make a slight noise, and is not always a solution for the condition.</p>	
Rattling or chucking noise in the rack and pinion	Interference with hoses from vehicle body	Reposition
	Loose gear box bracket	Retighten
	Loose tie rod end and/or ball joint	Retighten
	Worn tie rod and/or ball joint	Replace
Noise in the oil pump	Low fluid level	Replenish
	Air in the fluid	Bleed air
	Loose pump mounting bolts	Retighten

Steering System > General Information > Repair procedures


Adjustment

Steering Wheel Play Inspection

1. Turn the steering wheel so that the front wheels can face straight ahead.

2. Measure the distance the steering wheel can be turned without moving the front wheels.

Standard value: 30mm (1.181 in.) or less

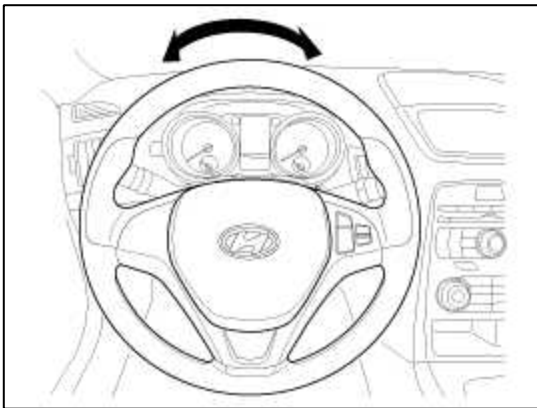


3. If the play exceeds standard value, inspect the steering column, shaft, and linkages.

Checking stationary steering effort

1. Position the vehicle on a level surface and place the steering wheel in the straight ahead position.
2. Start the engine and turn the steering wheel from lock to lock several times to warm up the power steering fluid.
3. Attach a spring scale to the steering wheel. With the engine speed 900 ~ 1100rpm, pull the scale and read it as soon as the tires begin to turn.

Standard value: 3.5kgf or less

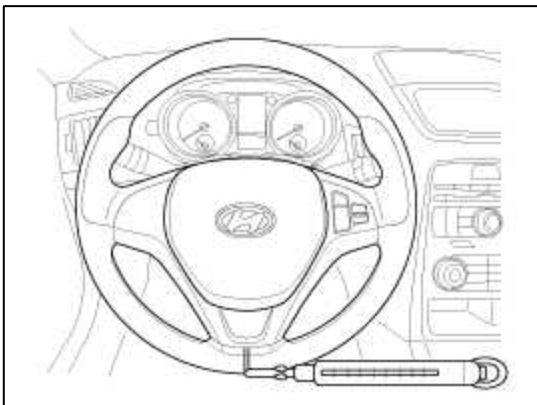

4. If the measured value exceeds standard value, inspect the power steering gear box and pump.

Power steering fluid replacement

CAUTION

Always use genuine power steering fluid. Using other type of power steering fluid or ATF can cause increased wear and poor steering in cold weather.


1. Raise the reservoir and then disconnect the return hose to drain the reservoir. Take care not to spill the fluid on the body and parts. Wipe off any spilled fluid at once.
2. Connect a tube of suitable diameter to the disconnected return hose, and put the hose end in a suitable container.
3. Jack up the front wheels and turn the steering wheel from the lock to lock until fluid stops running out of the tube.
4. Reconnect the return hose to reservoir
5. Fill the reservoir with the power steering fluid and then bleed the power steering system.

Air bleeding

CAUTION

Always use genuine power steering fluid. Using other type of power steering fluid or ATF can cause increased wear and poor steering in cold weather.

1. Fill the reservoir with the power steering fluid up to the level of 'COLD MAX' marked on the reservoir.

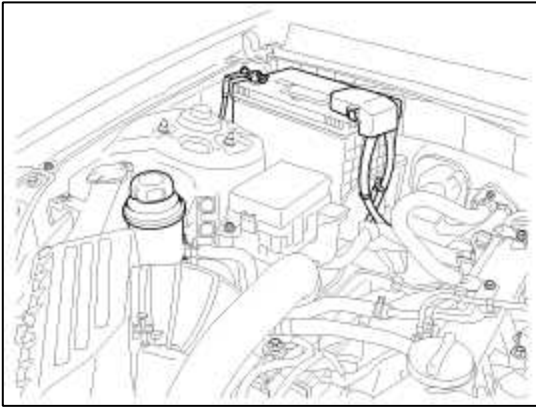**NOTE**

While conducting the following operations, keep replenishing the reservoir so that the fluid level can be always between the 'COLD MAX' and the 'COLD MIN' marked on the reservoir.

2. Jack up the front wheels.
3. Crank the engine 1 ~ 2 times by turning the ignition key very quickly from the 'On' position to the 'Start' position, but do not start the engine.

CAUTION

Be careful not to start the engine. If starting the engine before performing the steps 3 through 4, it may cause an abnormal noise during power steering pump operation.


4. Turn the steering wheel from lock to lock 5 ~ 6 times for 15 ~ 20 seconds.
5. Start the engine and keep turning the steering wheel from lock to lock until air bubbles stop appearing in the reservoir with the engine idle.
6. Check the color and level of the power steering fluid in the reservoir and then replenish the reservoir up to the 'COLD MAX' level as required.

NOTE

If the fluid level moves up and down when turning the steering wheel, the fluid overflows out of the reservoir when the turning off the engine or the fluid has white color, it indicates that air bubbles have not been removed sufficiently from the power steering system. Therefore, repeat the steps 5 through 6 as required.

Oil pump relief pressure test

1. Disconnect the pressure tube from the power steering pump and then install the special tools between the pump and the pressure tube as illustration below.

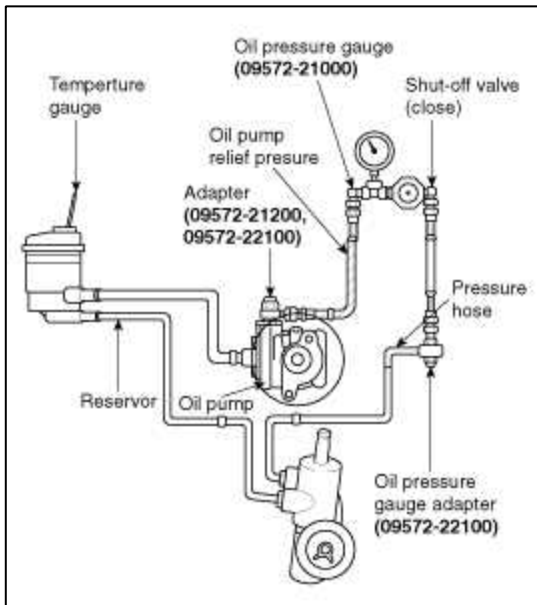

2. Start the engine and turn the steering wheel several times so that the fluid temperature can rise to approx. 50 ~ 60 C (122 F).
3. Set the engine speed to approx. 1000rpm.
4. Close the shut-off valve of the special tools and measure the fluid pressure.

Relief pressure:

100 ~ 105kgf/cm² (1422 ~ 1493psi, 9.7 ~ 10.2Mpa)


CAUTION

Do not keep the shut-off valve on the pressure gauge closed for longer than 10 seconds.

5. Remove the special tools, and then connect the pressure tube to the pump by tightening the eye bolt.
6. Bleed the power steering system.

Steering System > Steering wheel > Components and Components Location

Components

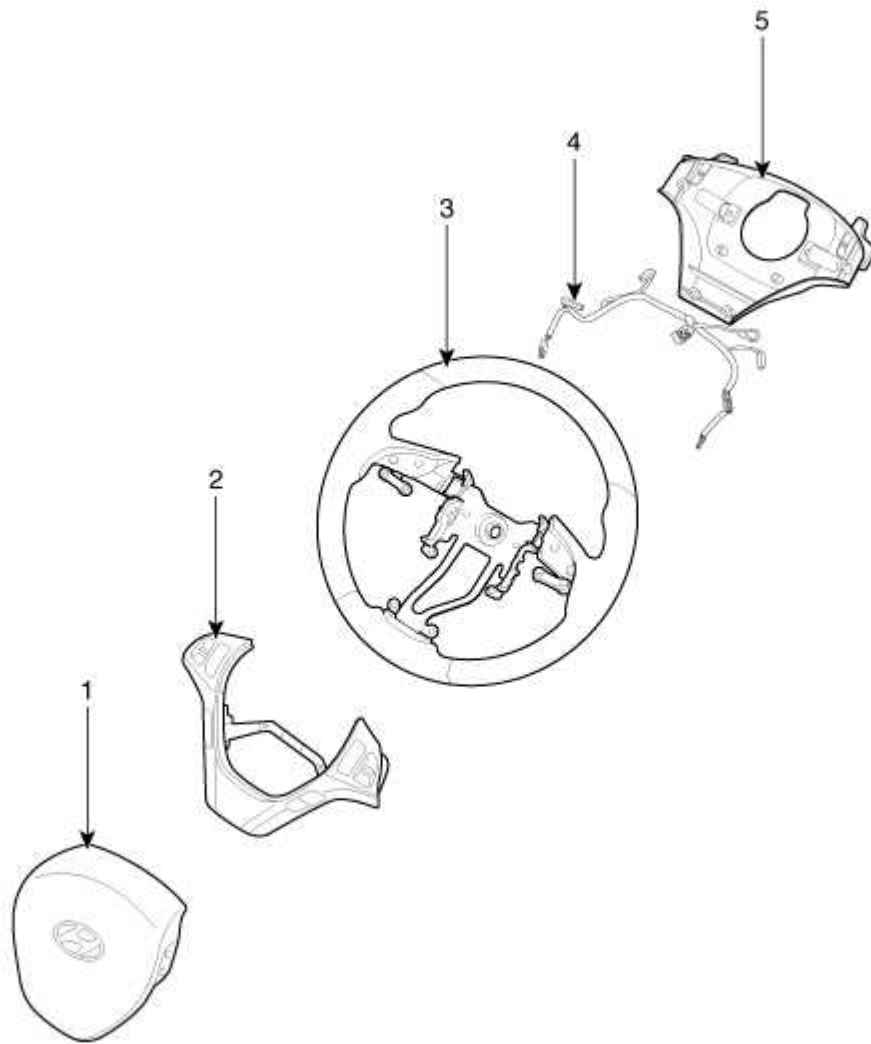

1. Driver airbag module (DAB)	4. Wiring
2. Remote control assembly	5. Lower cover
3. Steering wheel	

Steering System > Steering wheel > Repair procedures



Removal

1. Disconnect the battery negative cable from the battery and then wait for at least 30 seconds.
2. Turn the steering wheel so that the front wheels can face straight ahead.
3. Remove the airbag module.
(Refer to Restraint - "Airbag Module")

4. Disconnect the lock nut (A) remove the steering wheel (B) by using special service tools. (09561-11001)

Tightening torque :

39.2 ~ 44.1N.m (4.0 ~ 4.5kgf.m, 28.9 ~ 32.5lb-ft)

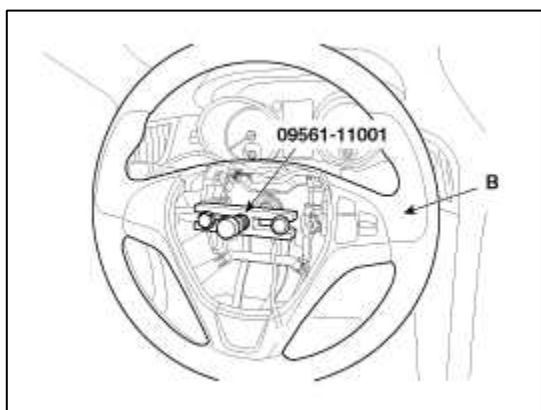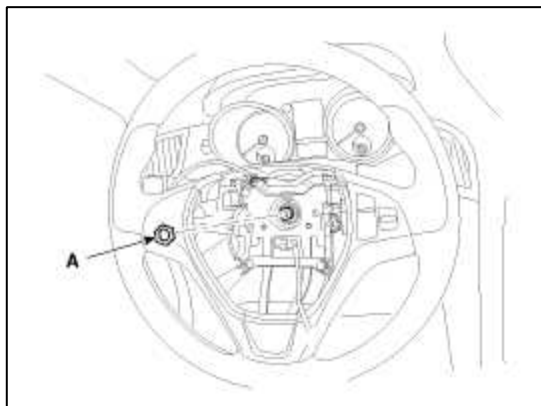


CAUTION


- Do not hammer on the steering wheel to remove it; it may damage the steering column.

5. Installation is the reverse of the removal.


Disassembly

1. Disconnect the screw (A-4ea) & paddle shift connector (B) and then remove the lower cover (C).


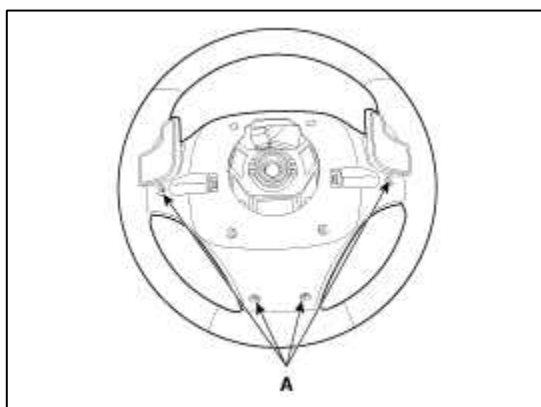


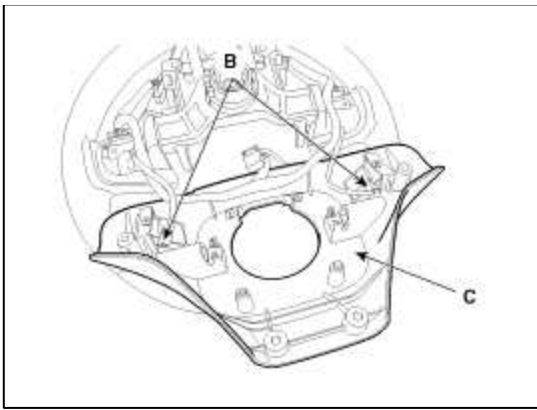

2. Disconnect the wiring (A)

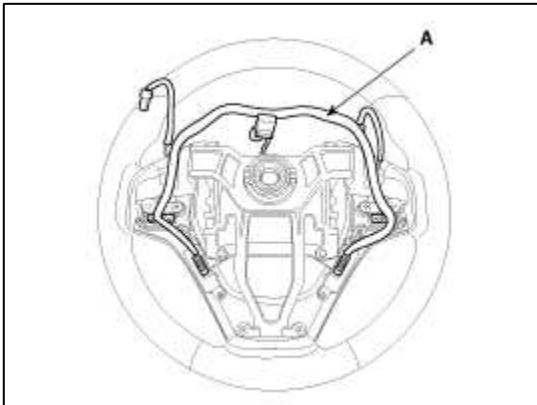


3. Disconnect the screw (A-4ea) remove the remote control assembly (B).

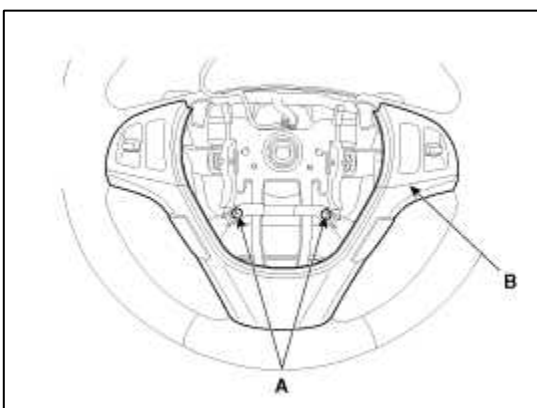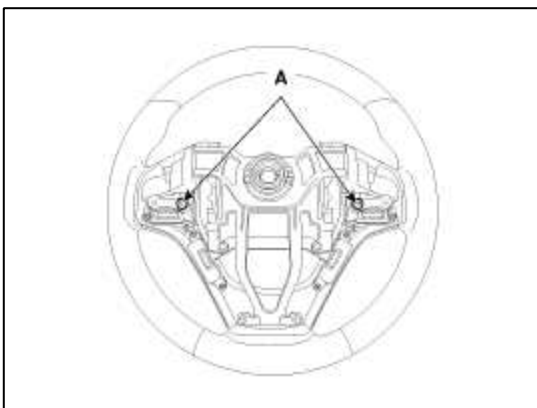

4. Reassembly is the reverse of the disassembly.

Steering System > Steering Column & Shaft > Steering Column-Shaft > Components and Components Location

Components

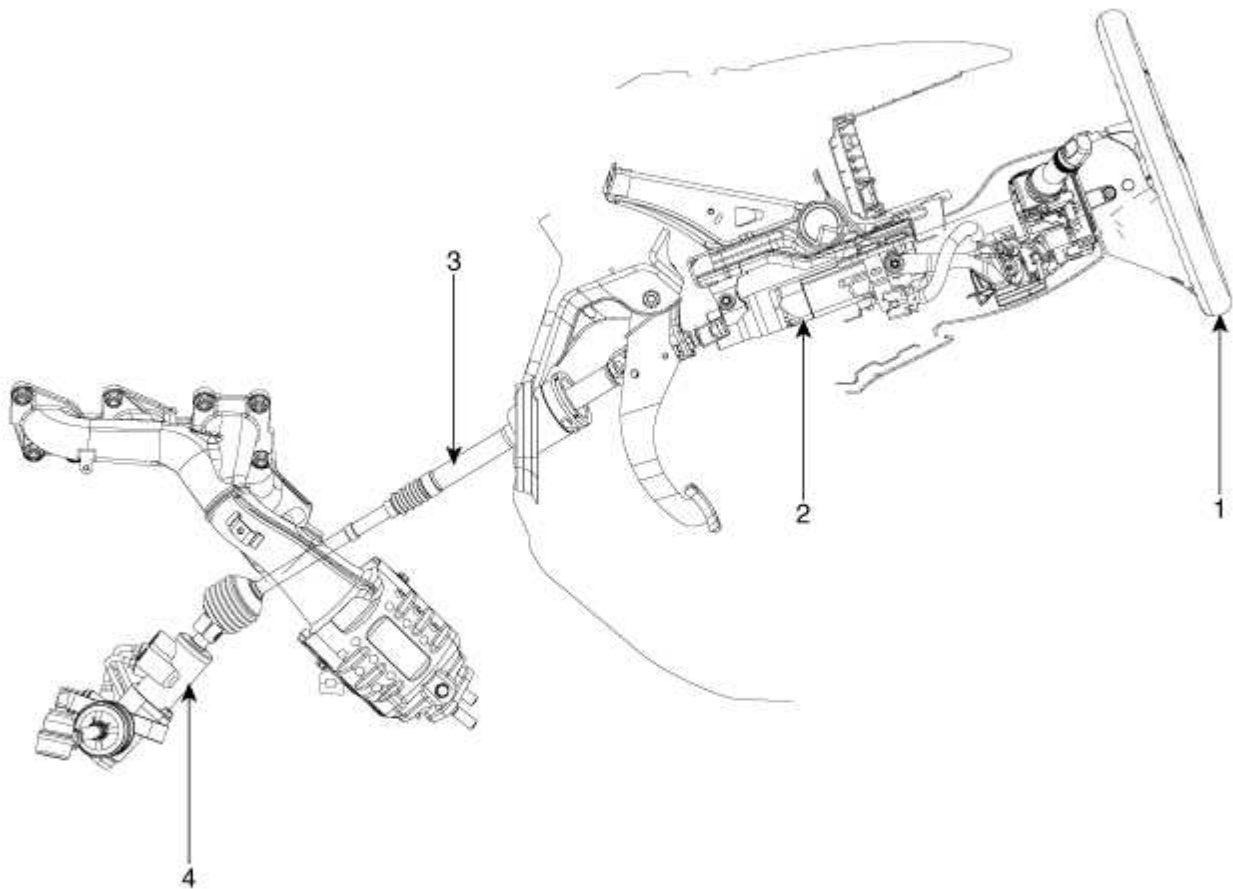

1. Steering wheel	3. Wheel joint assembly
2. Steering column	4. Steering gear box

Steering System > Steering Column & Shaft > Steering Column-Shaft > Repair procedures



Replacement

1. Disconnect the battery negative cable from the battery and then wait for at least 30 seconds.
2. Turn the steering wheel so that the front wheels can face straight ahead.
3. Remove the airbag module.
(Refer to Restraint - "Airbag Module")

4. Disconnect the lock nut (A) remove the steering wheel (B) by using special service tools. (09561-11001)

Tightening torque :


39.2 ~ 44.1N.m (4.0 ~ 4.5kgf.m, 28.9 ~ 32.5lb-ft)

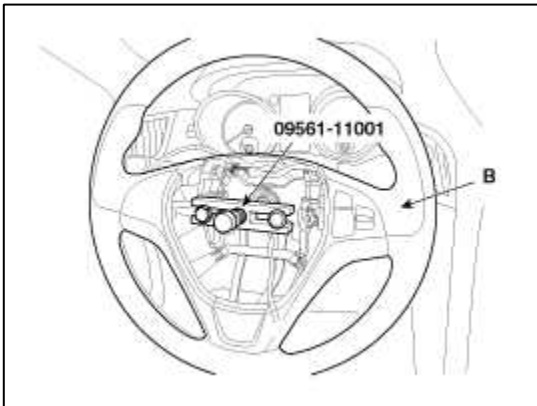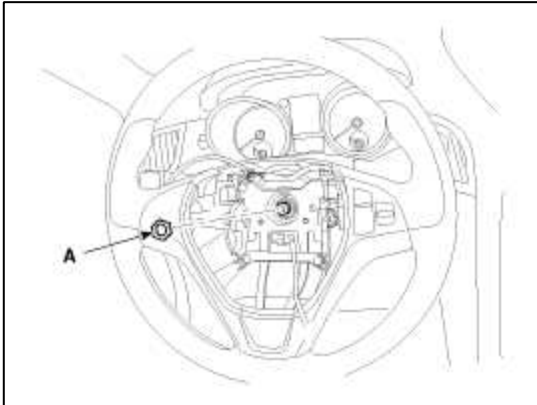


CAUTION

- Do not hammer on the steering wheel to remove it; it may damage the steering column.

5. Remove the steering column upper (A) and lower shroud (B).

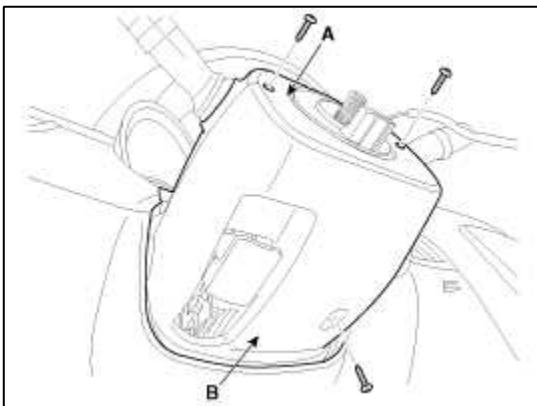


6. Remove the clock spring (A).

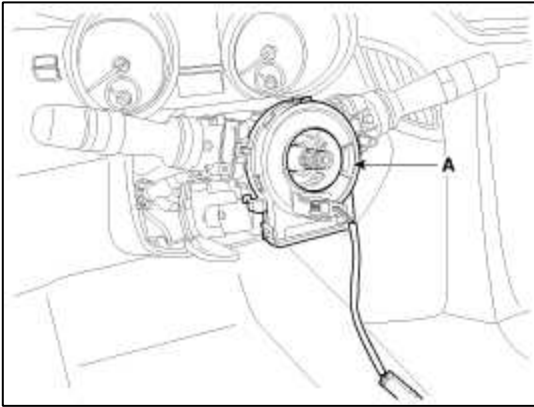**CAUTION**

- When assembling set the center position by setting the marks between the clock spring and the cover into line. Make an array the mark () by turning the clock spring clockwise to the stop and then 2.0 revolutions counterclockwise.

7. Remove the multifunction switches (A).

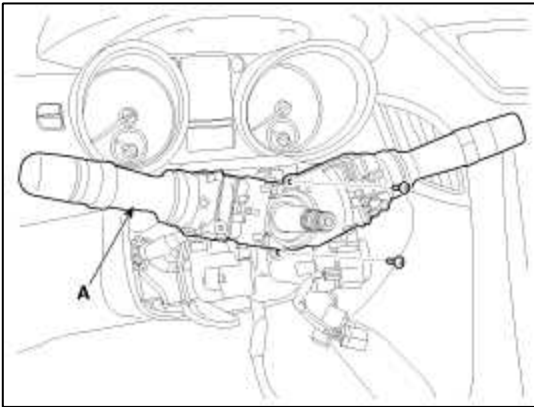


8. Remove the lower crash pad.

(Refer to Body - "Crash Pad")

9. Loosen the bolt and then disconnect the universal joint (A) assembly from the pinion of the steering gear box.

Tightening torque :

17.7 ~ 24.5N.m (1.8 ~ 2.5kgf.m, 13.0 ~ 18.1lb-ft)

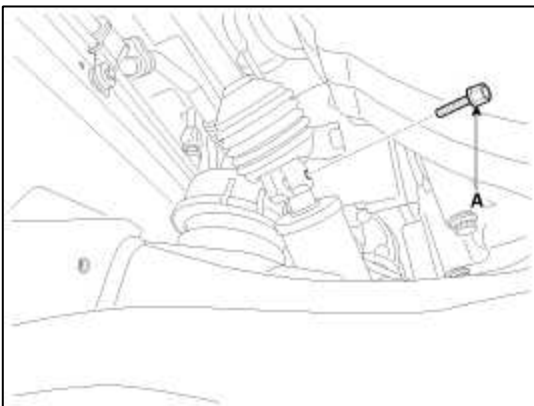


CAUTION

- Lock the steering wheel in the straight ahead position to prevent the damage of the clock spring inner cable when you handle the steering wheel.
- Change to the new bolt when assembling.

10. Remove the steering column dust cover bolts.

Tightening torque :


12.7 ~ 17.7N.m (1.3 ~ 1.8kgf.m, 9.4 ~ 13.0lb-ft)

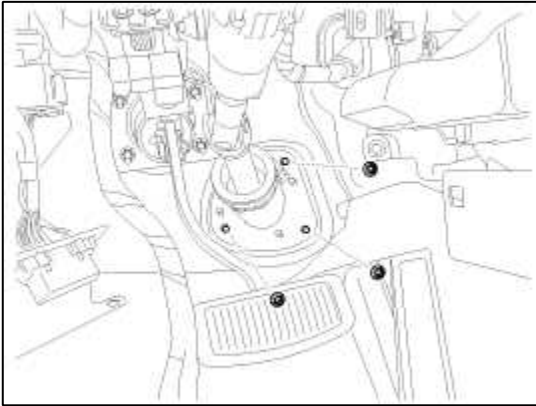

11. Disconnect all connectors connected to the steering column assembly.
 12. Remove the steering column assembly by loosening the mounting bolts and nuts.

Tightening torque :

12.7 ~ 17.7N.m (1.3 ~ 1.8kgf.m, 9.4 ~ 13.0lb-ft)

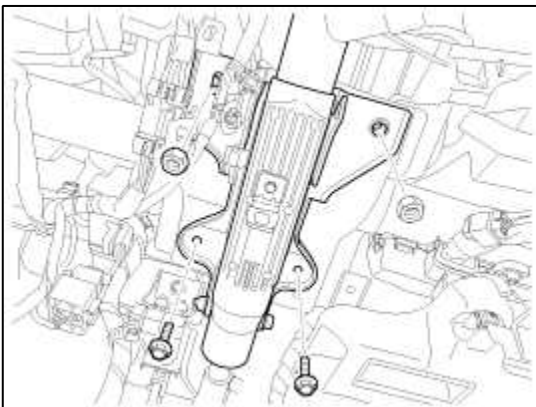

13. Installation is the reverse of the removal.


Disassembly

1. Make a groove on head of the special bolt (A) by using a punch.

2. Use a screwdriver to remove the key lock assembly (B).

Tightening torque :


6.9 ~ 12.7N.m (0.7 ~ 1.3kgf.m, 5.1 ~ 9.4lb-ft)

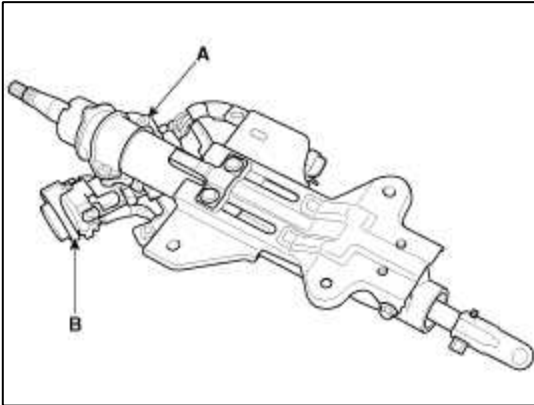**Inspection**

1. Check the steering column for damage and deformation.
2. Check the join bearing for damage and wear.
3. Check the tilt bracket for damage and cracks.
4. Check the key lock assembly for proper operation and replace it if necessary.

Steering System > Hydraulic Power Steering System > Power Steering Gear Box > Components and Components Location

Components

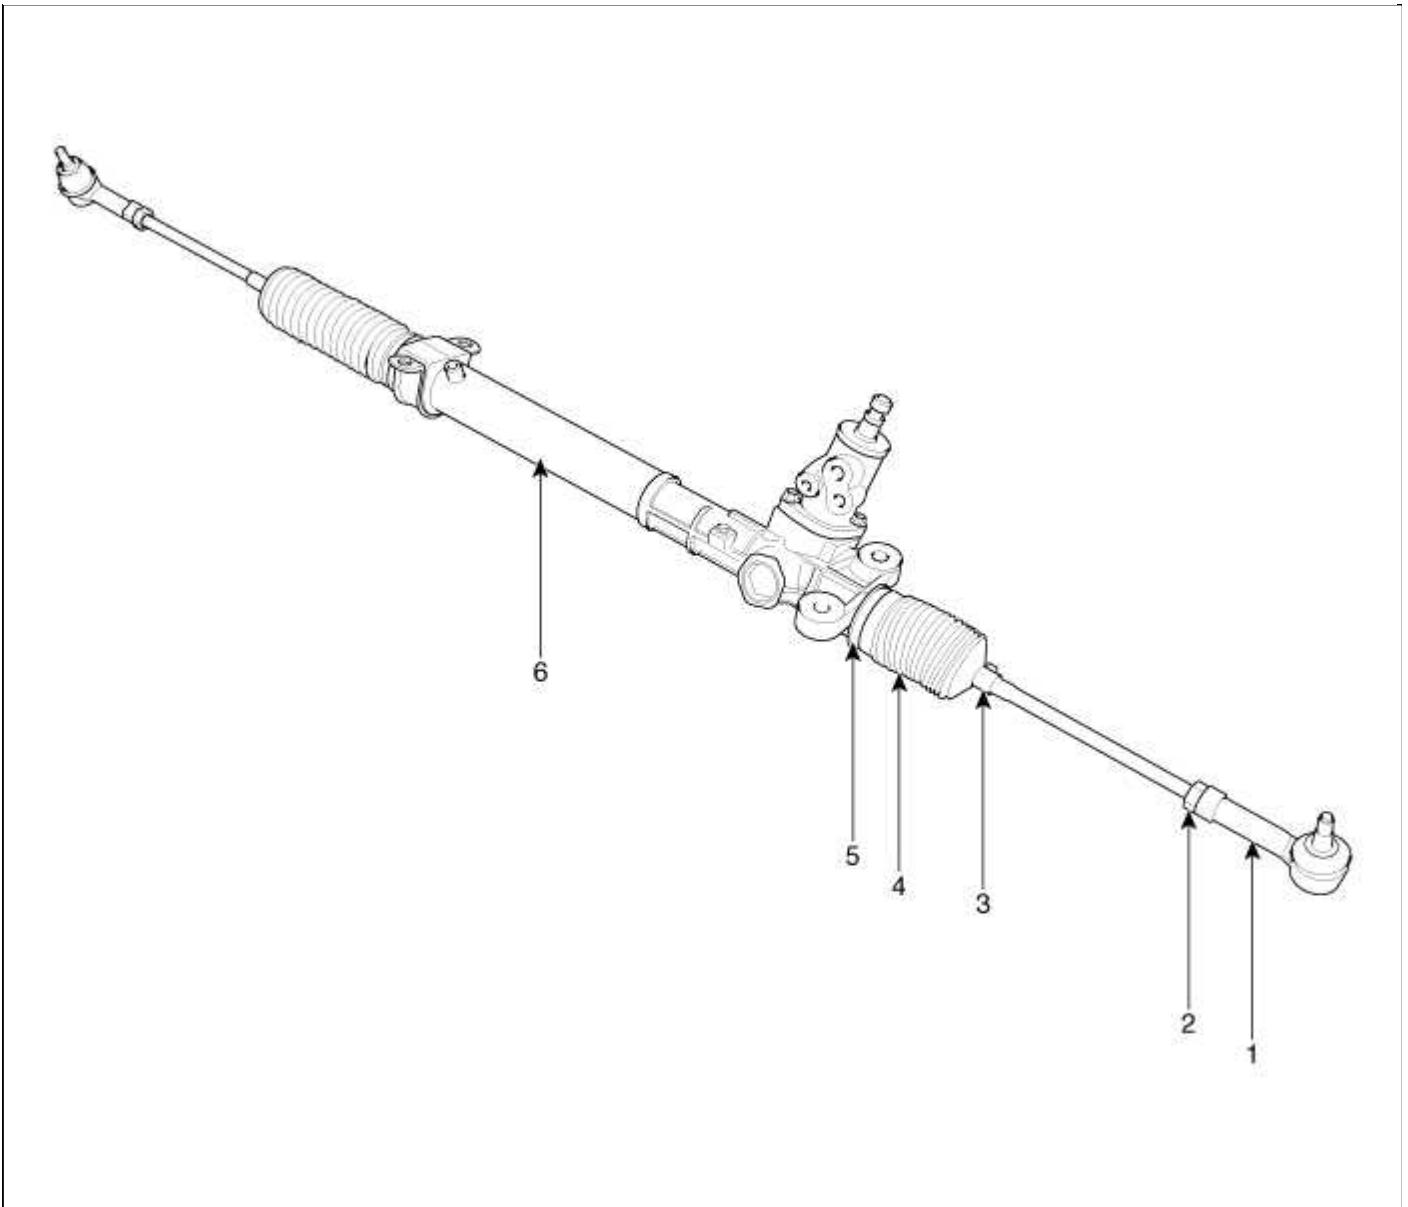

- | | |
|-------------------------|--------------------------|
| 1. Tie rod end assembly | 4. Bellows |
| 2. Lock nut | 5. Bellows band |
| 3. Bellows clip | 6. Rack housing assembly |

Steering System > Hydraulic Power Steering System > Power Steering Gear Box > Repair procedures

Replacement

1. Drain the power steering fluid.
2. Remove the front wheel & tire.


Tightening torque :

88.3 ~ 107.9N.m (9.0 ~ 11.0kgf.m, 65.1 ~ 79.6lb-ft)

3. Loosen the bolt and then disconnect the universal joint (A) assembly from the pinion of the steering gear box.

Tightening torque :


17.7 ~ 24.5N.m (1.8 ~ 2.5kgf.m, 13.0 ~ 18.1lb-ft)

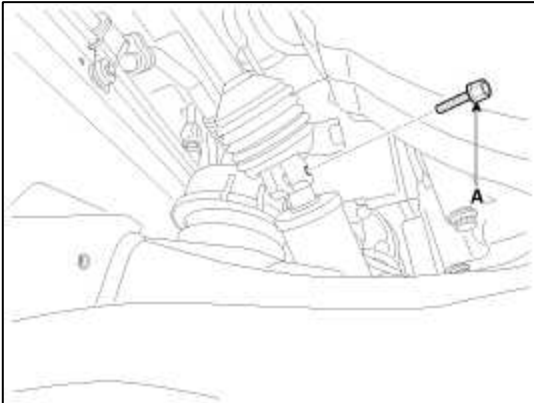


4. Loosen the castle nut (A).

Tightening torque :

58.8 ~ 78.5N.m (6.0 ~ 8.0kgf.m, 43.4 ~ 57.9lb-ft)

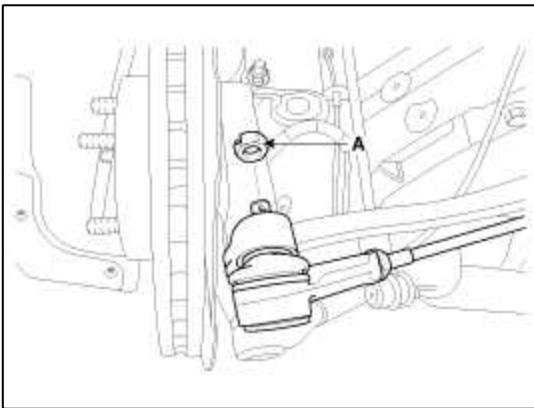



5. Remove the Tie rod end from the front axle by using a SST (09568-2J100).

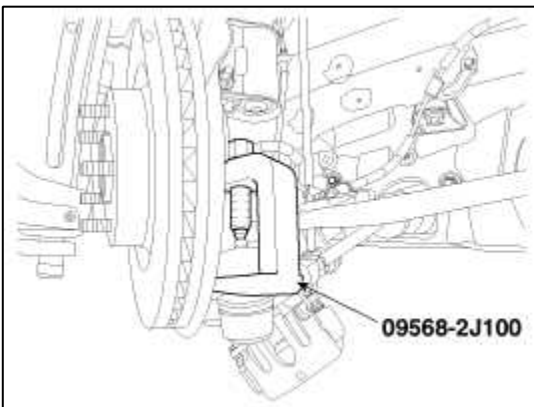

6. Remove steering gearbox from the cross member by loosening the bracket mounting bolts (A).

Tightening torque :


58.8 ~ 78.5N.m (6.0 ~ 8.0kgf.m, 43.4 ~ 57.9lb-ft)

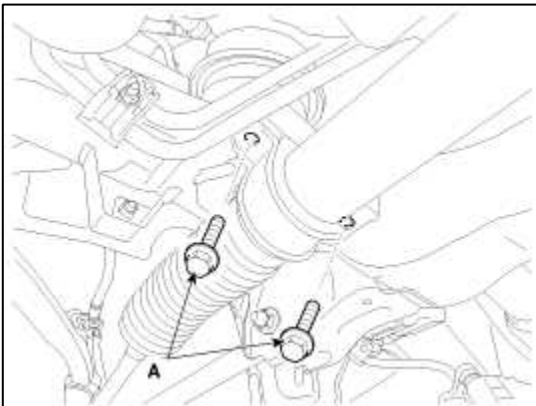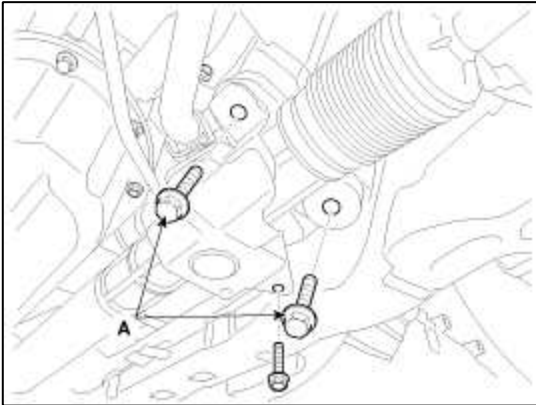


7. Installation is the reverse of the removal.

Disassembly


1. Loosen the lock nut (A) and then unscrew the toe-rod end (B) and lock nut from the tie-rod.

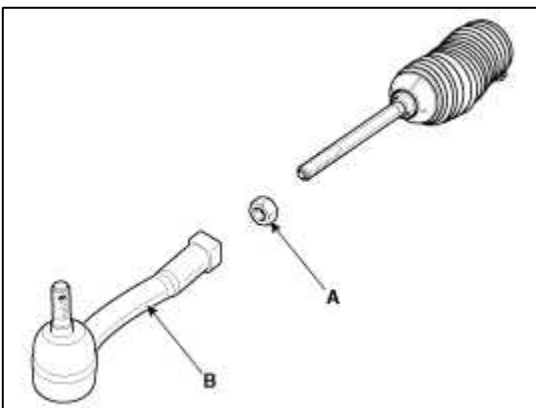


2. Remove the bellows clip (A) and band (B) and then pull the bellows (C) away from the end of the tie-rod.

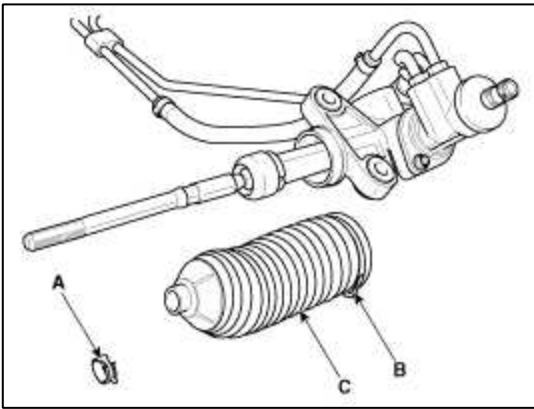


3. Remove the feed tubes (A) from the steering gear box.

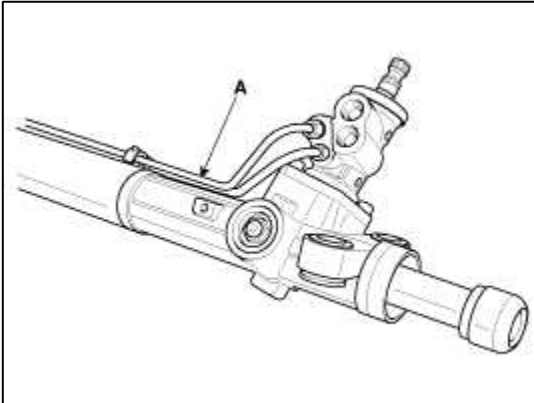


4. Unscrew the tie-rod (A) from the rack bar (B).

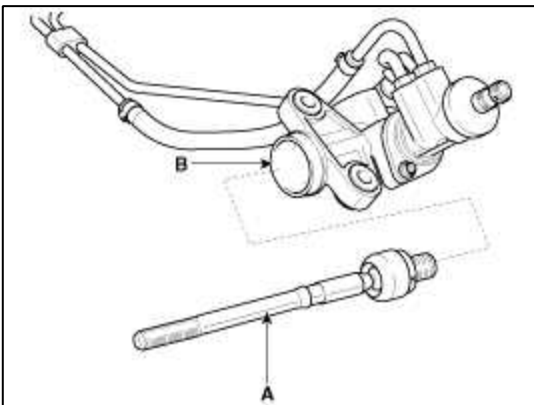


5. Remove the lock nut and yoke plug and then pull out the yoke spring and support yoke.

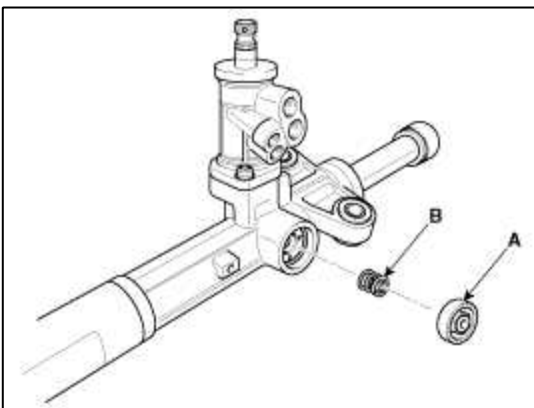

6. Remove the snap ring (A).

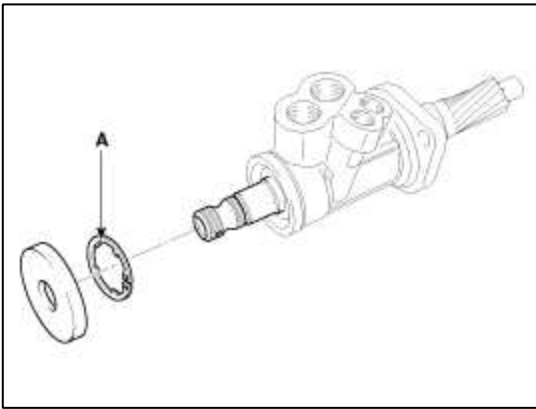

7. Remove the oil seal (A), bearing (B) and snap ring (C).

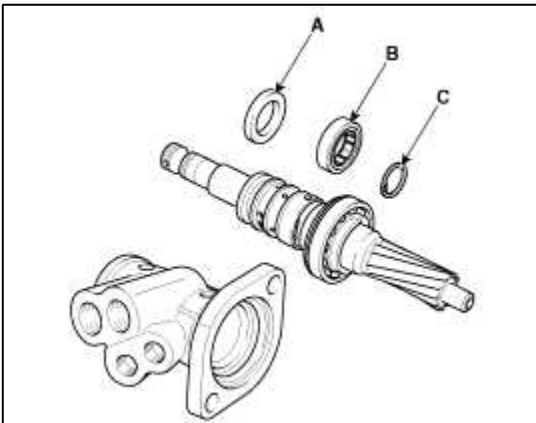

CAUTION

Do not allow dust, dirt, or foreign materials to contact the disassembled parts or inside of the valve assembly housing.

8. Unscrew the rack bush and pull the rack bar out of the rack housing.

9. Reassembly is the reverse of the disassembly.

Inspection

1. Rack

- A. Check for rack tooth face damage or wear.
- B. Check for oil seal contact surface damage.
- C. Check for rack bending or twisting.
- D. Check for oil seal ring damage or wear.
- E. Check for oil seal damage or wear.

2. Pinion valve

- A. Check for pinion gear tooth face damage or wear.
- B. Check for oil seal contact surface damage.
- C. Check for seal ring damage or wear.
- D. Check for oil seal damage or wear.

3. Bearing

- A. Check for seizure or abnormal noise during abearing rotation.
- B. Check for excessive play.
- C. Check for missing needle bearing rollers.


4. Others

- A. Check for damage of the rack housing cylinder bore.
- B. Check for boot damage, cracking or aging.

Steering System > Hydraulic Power Steering System > Power Steering Hoses > Repair procedures

Replacement


- Refer to the components illustration during removal or installation.
- When installing, be sure to connect between hose to tube using a clamp as shown in the illustration.

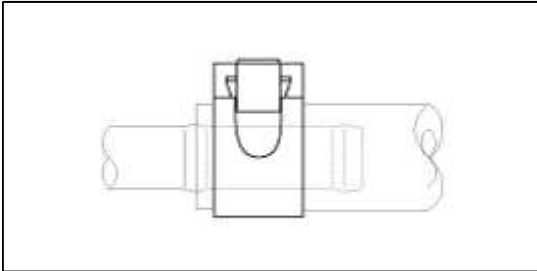

- Check all clamps for deterioration or deformation; replace with the clamps new one if necessary.
- Add the recommended power steering fluid and bleed the power steering system.

Steering System > Hydraulic Power Steering System > Power Steering Oil Pump > Components and Components Location

Components

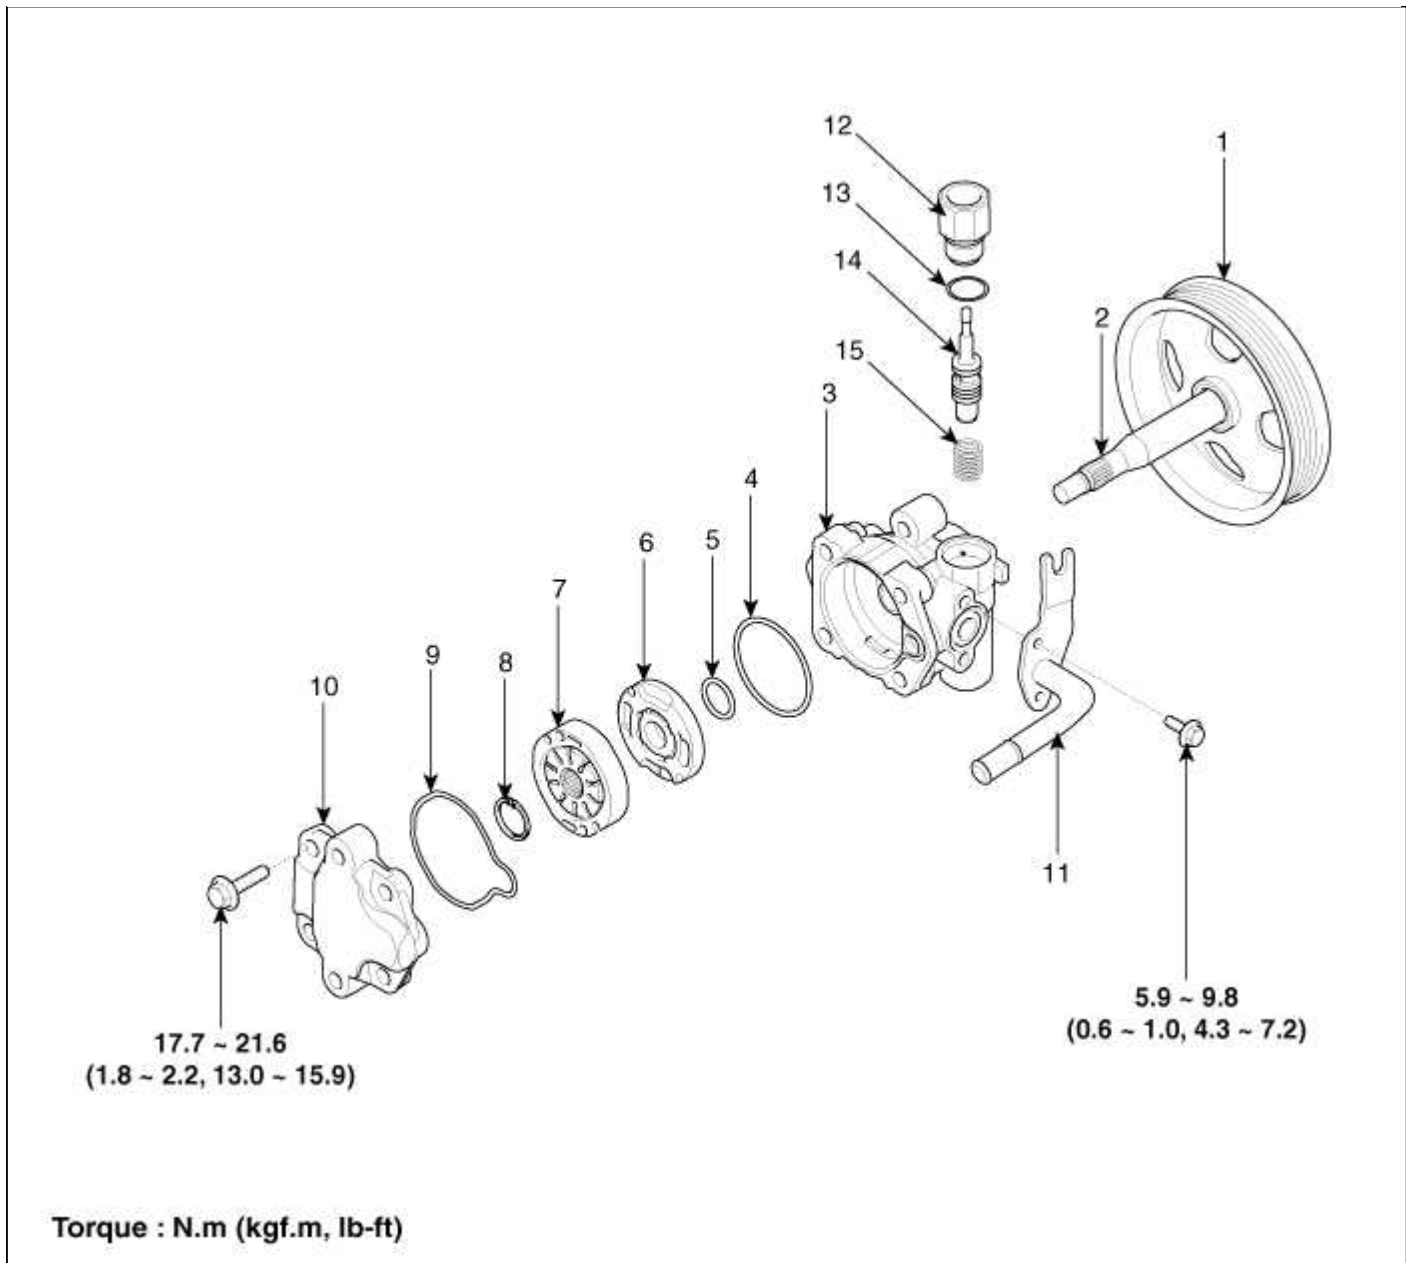

1. Pump pulley	6. Side plate	11. Suction pipe
2. Pump shaft	7. Rotor & vane	12. Connector assembly
3. Pump body	8. O - ring	13. O-ring
4. O - ring	9. O - ring	14. Flow control valve
5. O - ring	10. Pump cover	15. Spring


Steering System > Hydraulic Power Steering System > Power Steering Oil Pump > Repair procedures

Replacement

[2.0 Theta]

1. Drain the power steering fluid.
2. Remove the drive belt.


3. Disconnect the pressure tube and return hose from the power steering pump.

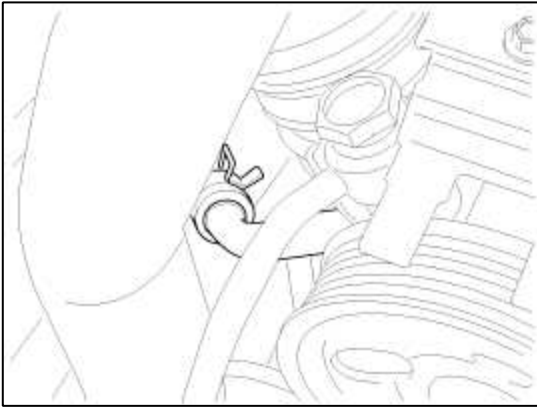

4. Loosen the mounting bolts (A) and then remove the power steering pump (B).

Tightening torque :


19.6 ~ 29.4N.m (2.0 ~ 3.0kgf.m, 14.5 ~ 21.7lb-ft)

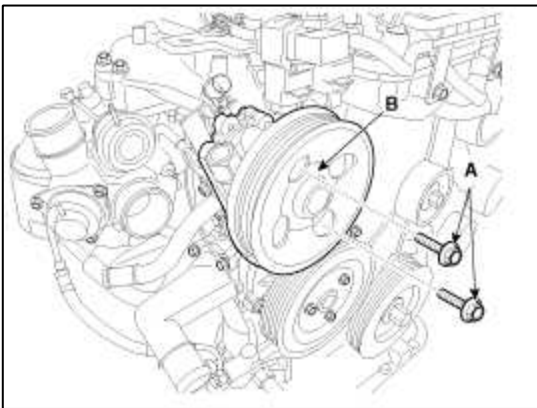

5. Installation is the reverse of the removal.

[3.8 DOHC]


1. Drain the power steering fluid.
2. Remove the drive belt.
3. Disconnect the pressure tube (A) and return hose (B) from the power steering pump.

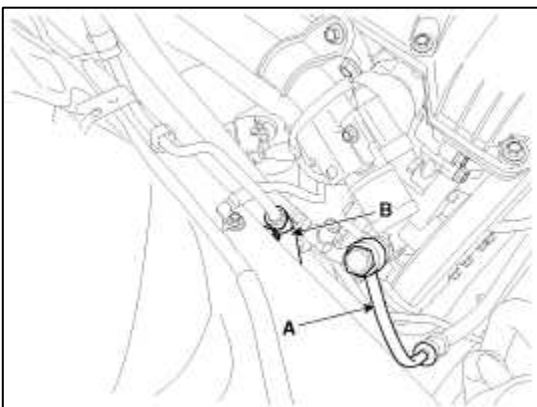

4. Loosen the mounting bolts (A) and then remove the power steering pump (B).

Tightening torque :


19.6 ~ 29.4N.m (2.0 ~ 3.0kgf.m, 14.5 ~ 21.7lb-ft)

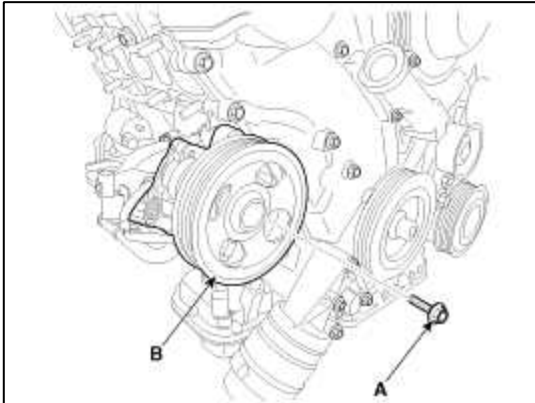


5. Installation is the reverse of the removal.

Disassembly

1. Remove the suction tube (A) and O-ring.
2. Unscrew the connector assembly (B) and then pull the flow control valve (C) and spring out of the pump body.

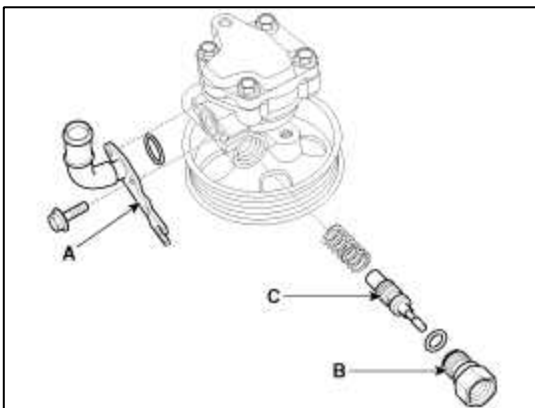


3. Remove the pump cover (A) and O-ring (B).

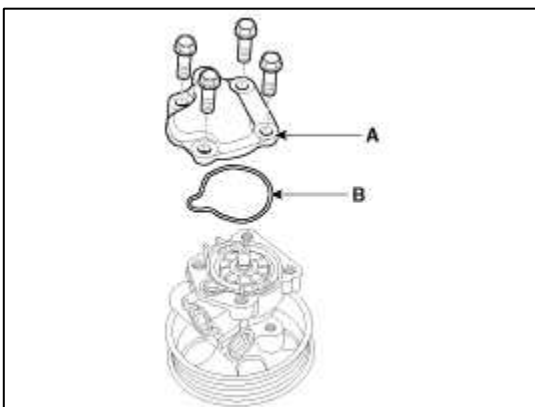


4. Remove the cam ring (A) and rotor& vanes (B).

5. Remove the side plate (C) and O-rings.

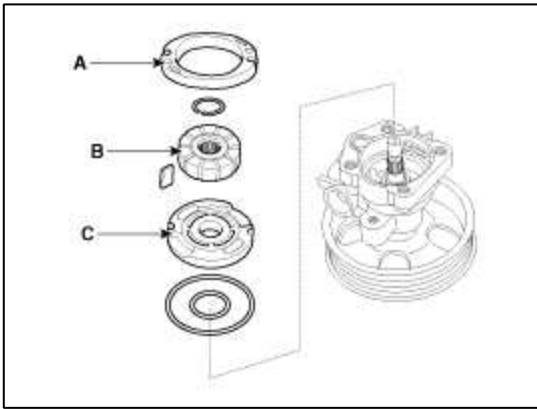

6. Remove the pump pulley & shaft (A) and O – ring (B).

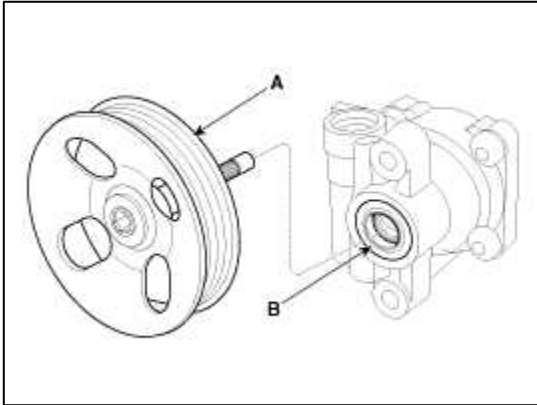

Inspection

1. Check that the flow control valve is not bent.
2. Check the shaft for wear and damage.
3. Check the V belt for wear and deterioration.
4. Check the grooves of the rotor and vanes for stratified abrasion.
5. Check the contact surface of the cam ring and vanes for stratified abrasion.
6. Check vanes for damage.
7. Check that there is no striped wear in the side plate or contacting part between the shaft and the pump cover surface.

GENESIS COUPE(BK) > 2013 > G 3.8 GDI > Suspension System**Suspension System > General Information > Specifications**

Specifications

Front Suspension

Item		Specification
Suspension type		Multi link
Shock absorber	Type	Gas
		Strut tower bar
Coil spring	Free Height [I.D. color]	319.0mm (12.5590 in) Green
Ride height		383±10mm (15.0787±0.3937 in)

Rear Suspension

Item		Specification
Suspension type		Multi link
Shock absorber	Type	Gas
Coil spring	Free Height [I.D. color]	302.4mm (11.9055 in) Cyan
Ride height		383±10mm (15.0787±0.3937 in)

Wheel & Tire

Item		Specification	
Wheel		7.5J x 18 : 8.0J x 18	
		8.0J x 19 : 8.5J x 19	
Temporary Spare Wheel	Aluminum	4.0T x 18	
	Steel	4.0T x 17	
Tire		225/45 R18 : 245/45 R18	
		225/40 R19 : 245/40 R19	
Temporary Spare Tire	Aluminum	T135/80 R18	
	Steel	T135/90 D17	
Tire pressure	Front	P225/45R18	2.5+0.07kg/cm ² (35+1.0psi)
		P225/40R19	2.5+0.07kg/cm ² (35+1.0psi)
		T135/90D17	4.2+0.07kg/cm ² (60+1.0psi)
	Rear	P245/45R18	2.5+0.07kg/cm ² (35+1.0psi)
		P245/40R19	2.5+0.07kg/cm ² (35+1.0psi)
		T135/80R18	4.2+0.07kg/cm ² (60+1.0psi)

Wheel Alignment

Item		Specification	
		Front	Rear
Toe-in	Total	0.28°±0.2°	0.16°±0.2°
	Individual	0.14°±0.1°	0.08°±0.1°
Camber angle		-0.7°±0.5°	-1.5°±0.5°
Caster angle		7.45°±0.5°	-
King-pin angle		13.7°	-

Tightening Torques

Front Suspension

Item	Tightening torque		
	N.m	kgf.m	lb-ft
Wheel nuts	88.3 ~ 107.9	9.0 ~ 11.0	65.1 ~ 79.6
Tension arm to sub frame	137.3 ~ 156.9	14.0 ~ 16.0	101.3 ~ 115.7
Tension arm to front axle	78.5 ~ 88.3	8.0 ~ 9.0	57.9 ~ 65.1
Tension arm to flexible hose	6.9 ~ 10.8	0.7 ~ 1.1	5.1 ~ 8.0
Lateral arm to sub frame	137.3 ~ 156.9	14.0 ~ 16.0	101.3 ~ 115.7
Lateral arm to front axle	78.5 ~ 88.3	8.0 ~ 9.0	57.9 ~ 65.1
Front stabilizer bar to sub frame	49.0 ~ 63.7	5.0 ~ 6.5	36.2 ~ 47.0
Front stabilizer bar to stabilizer link	98.1 ~ 117.7	10.0 ~ 12.0	72.3 ~ 86.8
Steering gear box to front axle	23.5 ~ 33.3	2.4 ~ 3.4	17.4 ~ 24.6


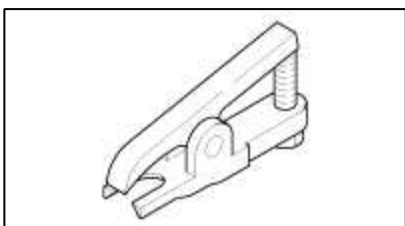

Rear Suspension

Item	Tightening torque		
	N.m	kgf.m	lb-ft
Wheel nuts	88.3 ~ 107.9	9.0 ~ 11.0	65.1 ~ 79.6
Rear shock absorber to frame	44.1 ~ 58.8	4.5 ~ 6.0	32.5 ~ 43.4
Rear shock absorber to lower arm	137.3 ~ 156.9	14.0 ~ 16.0	101.3 ~ 115.7
Front upper arm to sub frame	98.1 ~ 117.7	10.0 ~ 12.0	72.3 ~ 86.8
Front upper arm to rear axle	98.1 ~ 117.7	10.0 ~ 12.0	72.3 ~ 86.8
Rear upper arm to sub frame	98.1 ~ 117.7	10.0 ~ 12.0	72.3 ~ 86.8
Rear upper arm to rear axle	137.3 ~ 156.9	14.0 ~ 16.0	101.3 ~ 115.7
Rear stabilizer bar to sub frame	49.0 ~ 63.7	5.0 ~ 6.5	36.2 ~ 47.0
Rear stabilizer link to lower arm	98.1 ~ 117.7	10.0 ~ 12.0	72.3 ~ 86.8

Rear stabilizer bar to stabilizer link	98.1 ~ 117.7	10.0 ~ 12.0	72.3 ~ 86.8
Rear lower arm to sub frame	137.3 ~ 156.9	14.0 ~ 16.0	101.3 ~ 115.7
Rear lower arm to rear axle	137.3 ~ 156.9	14.0 ~ 16.0	101.3 ~ 115.7
Assist arm to sub frame	137.3 ~ 156.9	14.0 ~ 16.0	101.3 ~ 115.7
Assist arm to rear axle	98.1 ~ 117.7	10.0 ~ 12.0	72.3 ~ 86.8
Trailing arm to sub frame	98.1 ~ 117.7	10.0 ~ 12.0	72.3 ~ 86.8
Trailing arm to rear axle	98.1 ~ 117.7	10.0 ~ 12.0	72.3 ~ 86.8

Suspension System > General Information > Special Service Tools







Special Service Tools

Tool (Number and Name)	Illustration	Use
09546-26000 Strut spring compressor		Compression of coil spring
09568-34000 Ball joint remover		Removal of Ball joint
09568-2J100 Ball joint remover		Removal of Ball joint

Suspension System > General Information > Troubleshooting

Troubleshooting


Trouble symptom	Probable cause	Remedy
Hard steering	Improper front wheel alignment	Repair
	Excessive turning resistance of lower arm ball joint	Replace
	Flat tire	Adjust
	No power assist	Repair or Replace
Poor return of steering wheel to center	Improper front wheel alignment	Repair
Poor ride quality	Improper front wheel alignment	Repair
	Damaged shock absorber	Repair or Replace
	Varied or damaged stabilizer	Replace
	Varied or damaged coil spring	Replace
	Worn lower arm bushing	Replace
Abnormal tire wear	Improper front wheel alignment	Repair
	Improper tire inflation pressure	Adjust
	Worn of shock absorber	Replace
Wandering	Improper front wheel alignment	Repair
	Poor turning resistance of lower arm ball joint	Repair
	Loose or worn lower arm bushing	Re-tighten or Replace
Vehicle pulls to one side	Improper front wheel alignment	Repair
	Excessive turning resistance of lower arm ball joint	Replace
	Varied or damaged coil spring	Replace
	Bent lower arm	Replace
	Tire pressure	Adjust
	Tire lateral pull	Adjust
	Front camber/caster	Adjust
	Perform correct road test on flat, no-crown road	Adjust
Steering wheel shimmy	Improper front wheel alignment	Repair
	Excessive turning resistance of lower arm ball joint	Replace
	Varied or damaged stabilizer	Replace
	Worn lower arm bushing	Replace
	Worn of shock absorber	Replace
	Varied or damaged coil spring	Replace
Bottoming	Broken or worn spring	Replace
	Malfunction of shock absorber	Replace

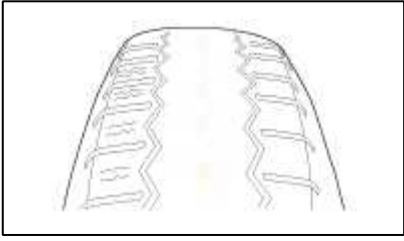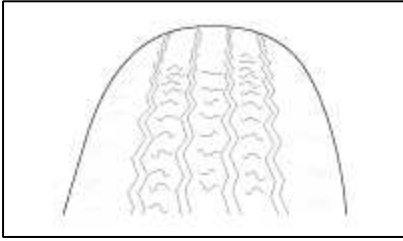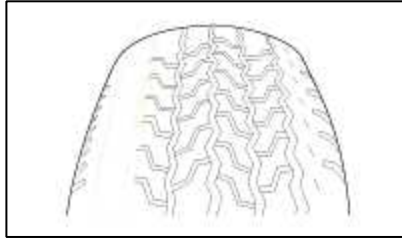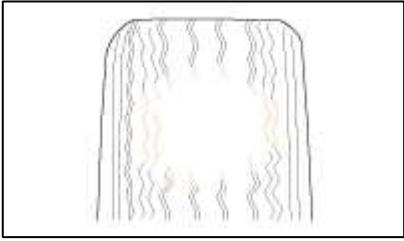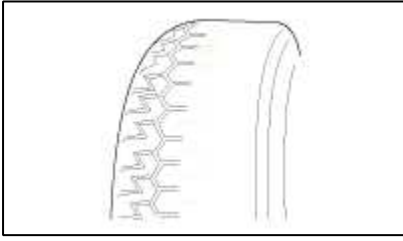Wheel And Tire Diagnosis		
Rapid wear at the center	Rapid wear at both shoulders	Wear at one shoulder
		
<ul style="list-style-type: none"> • Center-tread down to fabric due to excessive over inflated tires • Lack of rotation • Excessive toe on drive wheels • Heavy acceleration on drive 	<ul style="list-style-type: none"> • Under-inflated tires • Worn suspension components • Excessive cornering speeds • Lack of rotation 	<ul style="list-style-type: none"> • Toe adjustment out of specification • Camber out of specification • Damaged strut • Damaged lower arm • Under-inflated tires
Partial wear	Feathered edge	Wear pattern
		
<ul style="list-style-type: none"> • Caused by irregular burrs on brake drums. • Under-inflated tires • Lack of rotation 	<ul style="list-style-type: none"> • Toe adjustment out of specification • Damaged or worn tie rods • Damaged knuckle 	<ul style="list-style-type: none"> • Excessive toe on non-drive wheels • Lack of rotation

Suspension System > Front Suspension System > Components and Components Location


Components

[Theta]

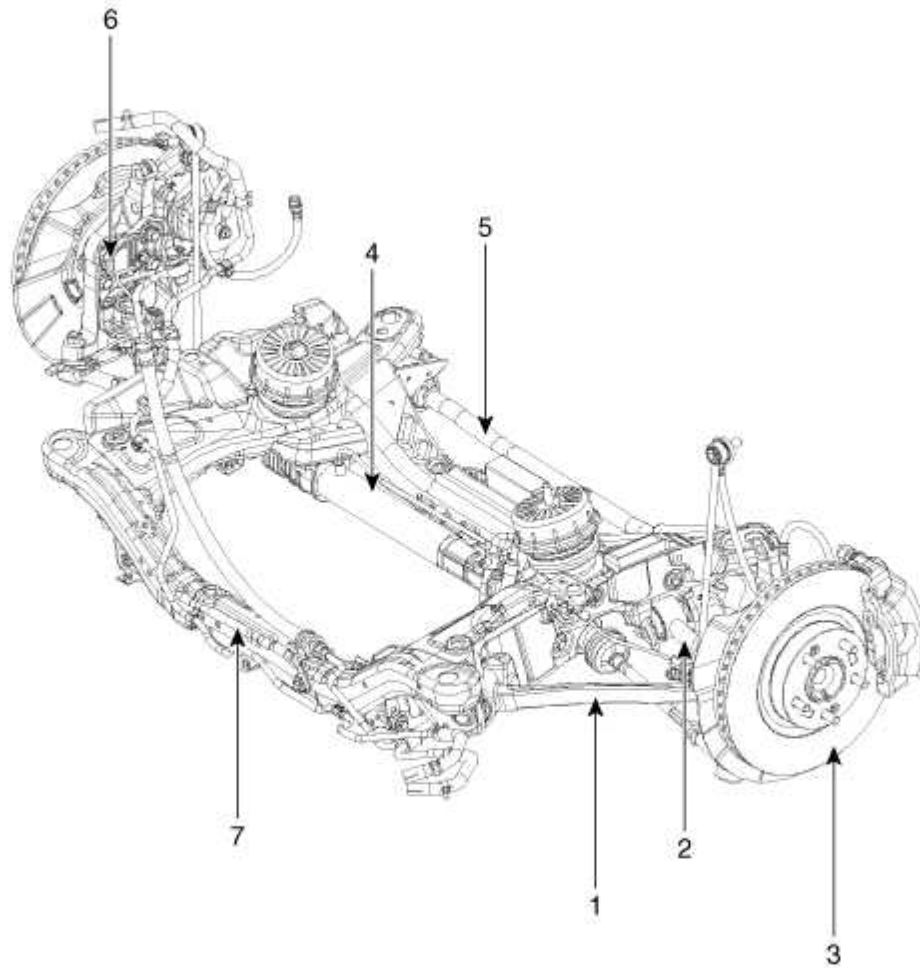

- | | |
|---------------------|-------------------|
| 1. Tension arm | 5. Stabilizer bar |
| 2. Lateral arm | 6. Front axle |
| 3. Front disk | 7. Sub frame |
| 4. Steering gearbox | |


[Lamda]

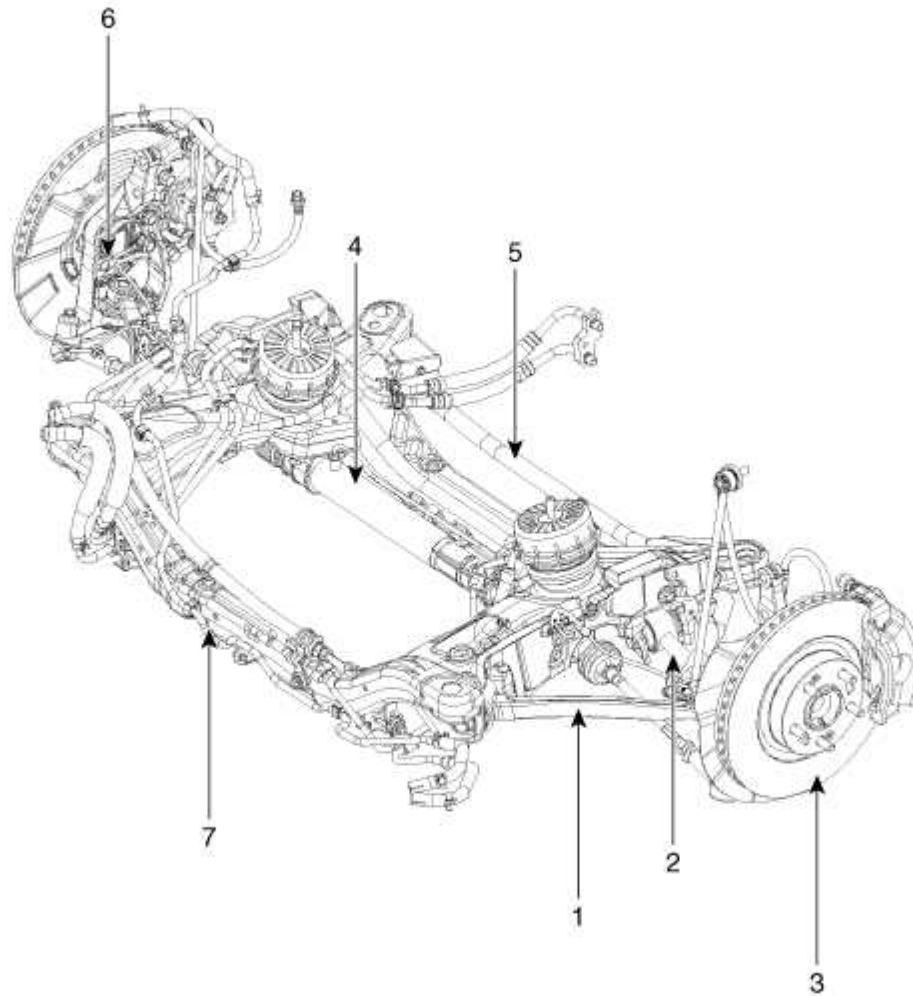

1. Tension arm	5. Stabilizer bar
2. Lateral arm	6. Front axle
3. Front disk	7. Sub frame
4. Steering gearbox	

Suspension System > Front Suspension System > Front Strut Assembly > Components and Components Location

Components

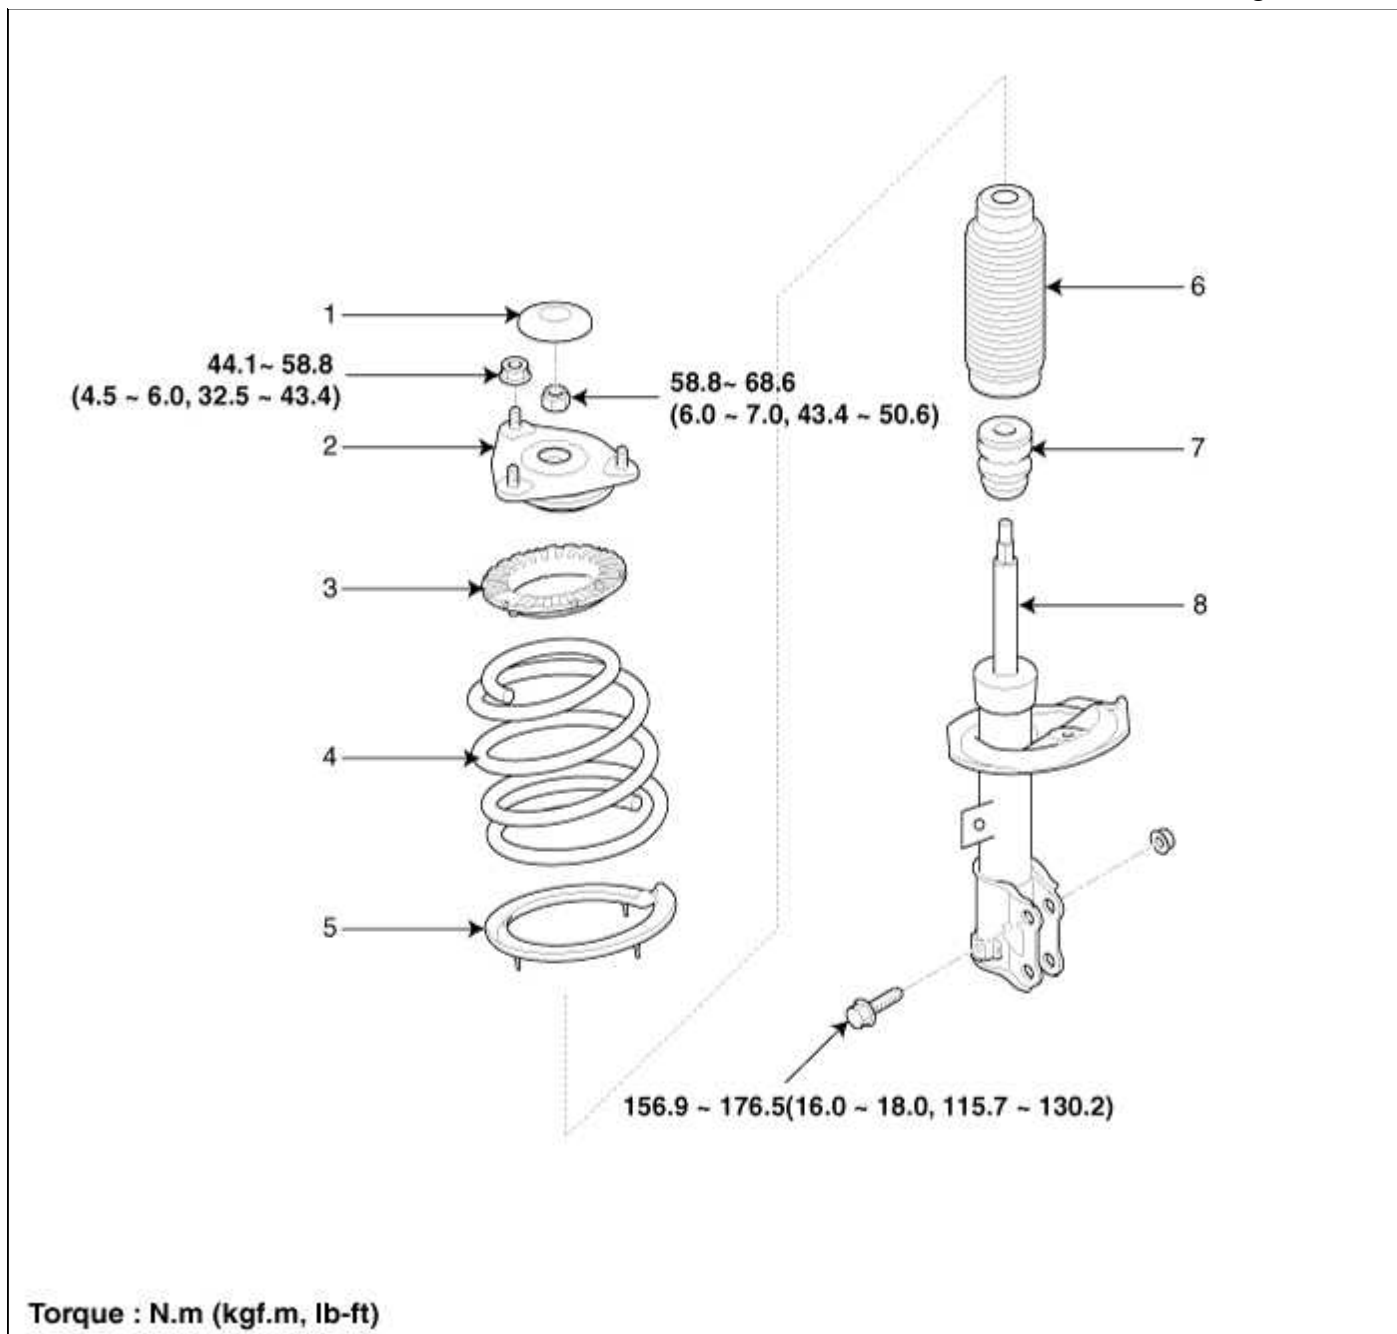

1. Insulator cap	5. Spring lower pad
2. Insulator assembly	6. Dust cover
3. Spring upper pad	7. Bumper rubber
4. Coil spring	8. Shock absorber

Suspension System > Front Suspension System > Front Strut Assembly > Repair procedures

Replacement

1. Remove the front wheel & tire.


Tightening torque :

88.3 ~ 107.9 N.m(9.0 ~ 11.0 kgf.m, 65.1 ~ 79.6 lb-ft)

2. Disconnect the stabilizer link (B) with the front strut assembly (A) after loosening the nut.

Tightening torque :


98.1 ~ 117.7 N.m(10.0 ~ 12.0 kgf.m, 72.3 ~ 86.8 lb-ft)

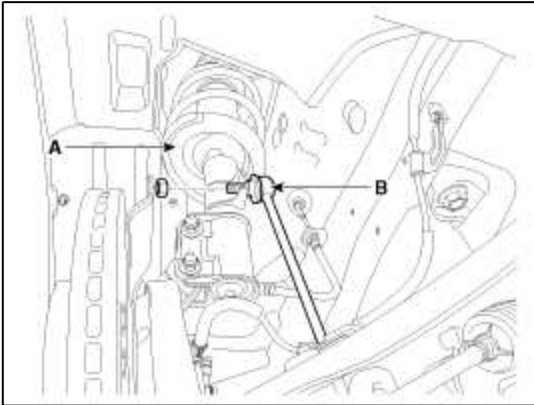

3. Disconnect the front strut assembly with the knuckle by loosening the bolt & nut.

Tightening torque :


137.3 ~ 156.9 N.m(16.0~18.0 kgf.m, 101.3 ~ 115.7 lb-ft)

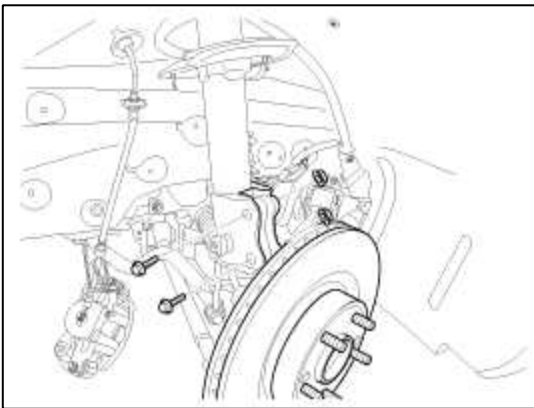

4. Remove the front stabilizer bar (A) removing the nut.

Tightening torque :

26.5 ~ 40.2 N.m(2.7 ~ 4.1 kgf.m, 19.5 ~ 29.7 lb-ft)

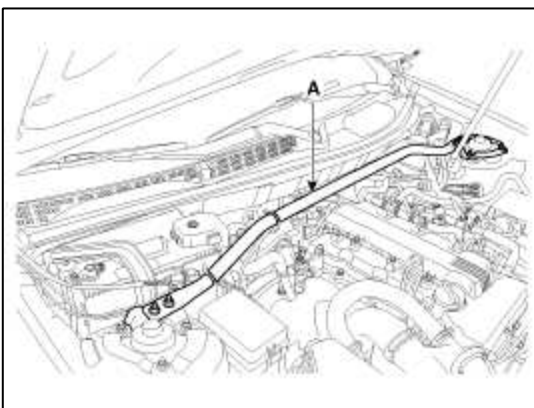


5. Remove the strut cap (A).

6. Remove the bracket (C) removing the nut (B).

Tightening torque :


53.9 ~ 73.5 N.m(5.5 ~ 7.5 kgf.m, 39.8 ~ 54.2 lb-ft)

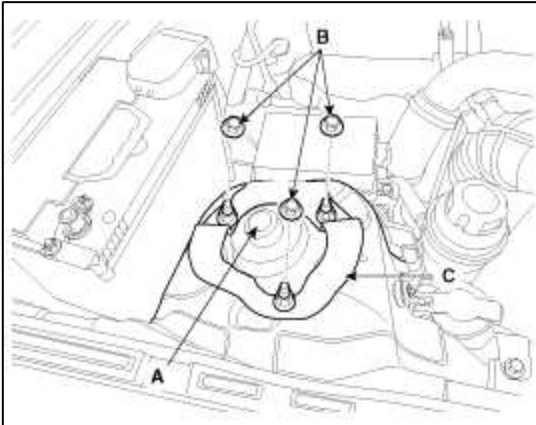

7. Installation is the reverse of removal.


Disassembly

1. Using the special tool (09546-26000), compress the coil spring.

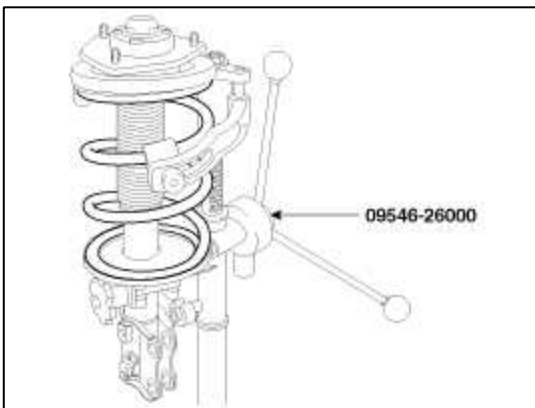


2. Remove the self-locking nut.

3. Remove the insulator, spring seat, coil spring and dust cover from the strut assembly.

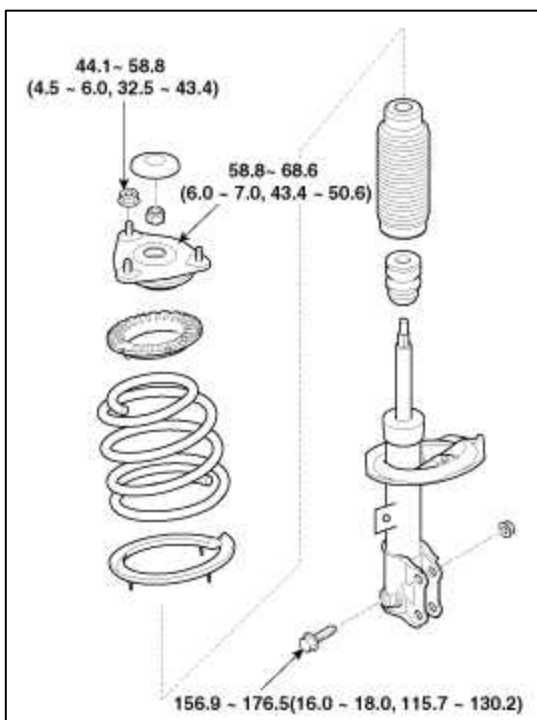

Inspection

1. Check the strut insulator for wear or damage.
2. Check rubber parts for damage or deterioration.
3. Compress and extend the piston rod (A) and check that there is no abnormal resistance or unusual sound during operation.

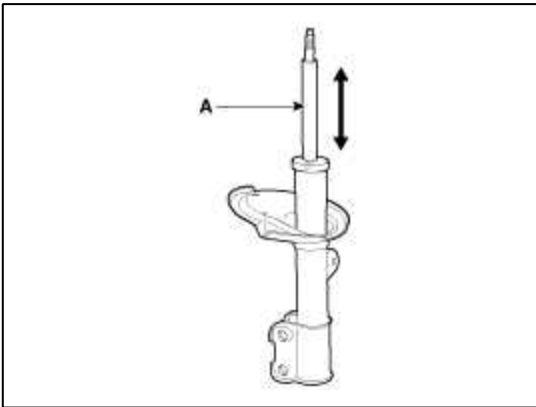


Suspension System > Front Suspension System > Front Strut Bar > Repair procedures

Replacement

1. Loosen the strut bar nuts.

Tightening torque :

26.5 ~ 40.2 N.m(2.7 ~ 4.1 kgf.m, 19.5 ~ 29.7 lb-ft)

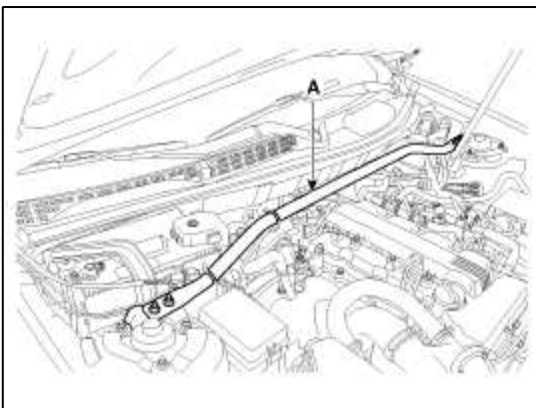

2. Installation is the reverse of removal.

Suspension System > Front Suspension System > Front Lower Arm > Repair procedures

Replacement

Tension arm

1. Remove the front wheel & tire.


Tightening torque :

88.3 ~ 107.9 N.m(9.0 ~ 11.0 kgf.m, 65.1 ~ 79.6 lb-ft)


2. Remove the split pin and the castle nut (A).
-

Tightening torque :

78.5 ~ 88.3 N.m(8.0 ~ 9.0 kgf.m, 57.9 ~ 65.1 lb-ft)

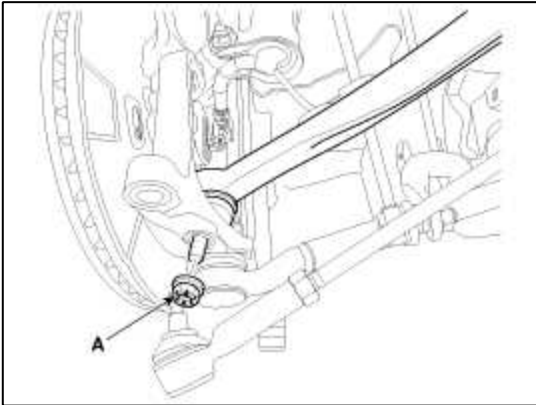


3. Separate the tension arm from the front axle ball joint by using SST (09568-2J000).

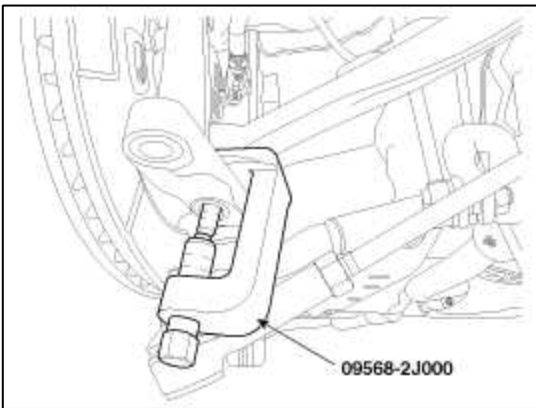

4. Remove the flexible hose (A).
-

Tightening torque :


6.9 ~ 10.8 N.m(0.7 ~ 1.1 kgf.m, 5.1 ~ 8.0 lb-ft)

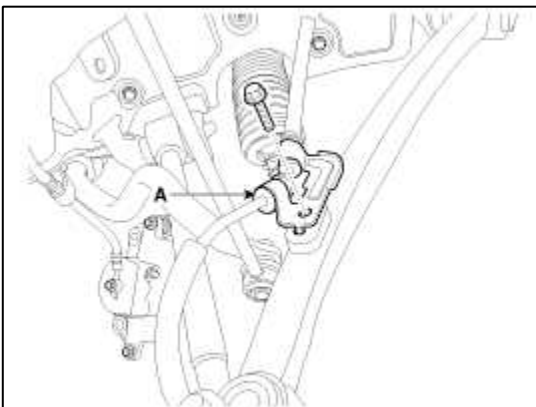

5. Loosen the bolts and nuts and then remove the tension arm (A) from the sub frame.

Tightening torque :

137.3 ~ 156.9 N.m(14.0~16.0 kgf.m, 101.3 ~ 115.7 lb-ft)

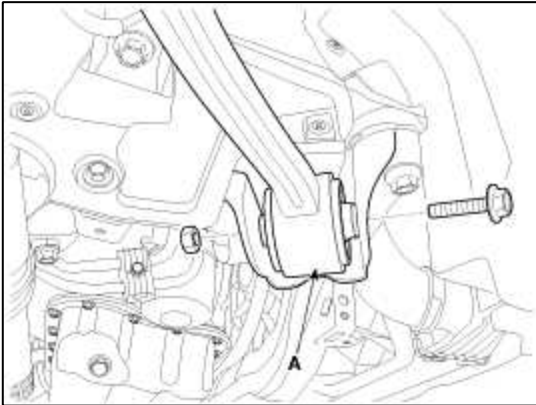

6. Installation is the reverse of removal.

Lateral arm

1. Remove the front wheel & tire.


Tightening torque :

88.3 ~ 107.9 N.m(9.0 ~ 11.0 kgf.m, 65.1 ~ 79.6 lb-ft)


2. Remove the split pin and the castle nut (A).

Tightening torque :

78.5 ~ 88.3 N.m(9.0 ~ 11.0 kgf.m, 57.9 ~ 65.1 lb-ft)

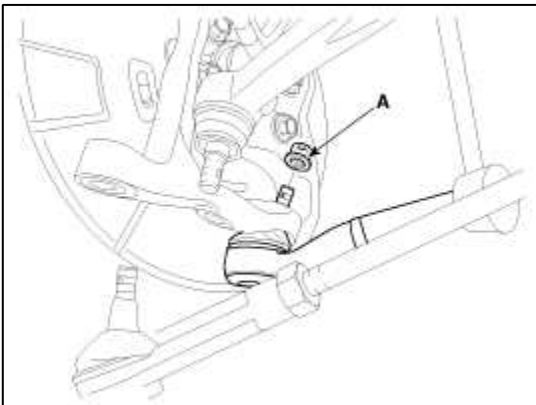


3. Separate the lateral arm from the front axle ball joint by using SST (09568-34000).

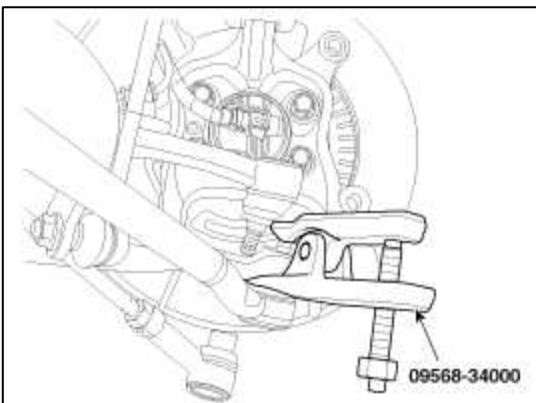

4. Loosen the bolts and nuts and then remove the lateral arm (A) from the sub frame.

Tightening torque :

137.3 ~ 156.9 N.m(16.0~18.0 kgf.m, 101.3 ~ 115.7 lb-ft)

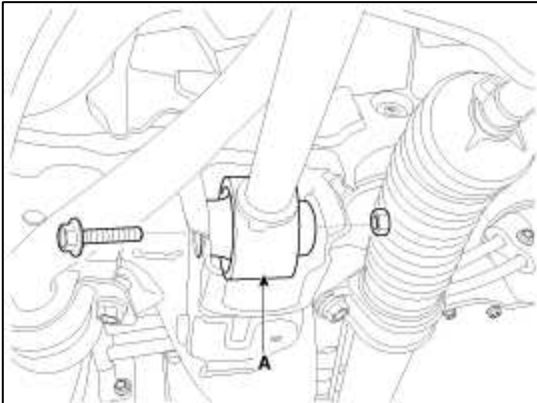

5. Installation is the reverse of removal.

Suspension System > Front Suspension System > Front Stabilizer Bar > Repair procedures

Replacement

1. Remove the front wheel & tire.


Tightening torque :

88.3 ~ 107.9 N.m(9.0 ~ 11.0 kgf.m, 65.1 ~ 79.6 lb-ft)


2. Disconnect the stabilizer link (B) with the front strut assembly (A) after loosening the nut.

Tightening torque :

98.1 ~ 117.7 N.m(10.0 ~ 12.0 kgf.m, 72.3 ~ 86.8 lb-ft)

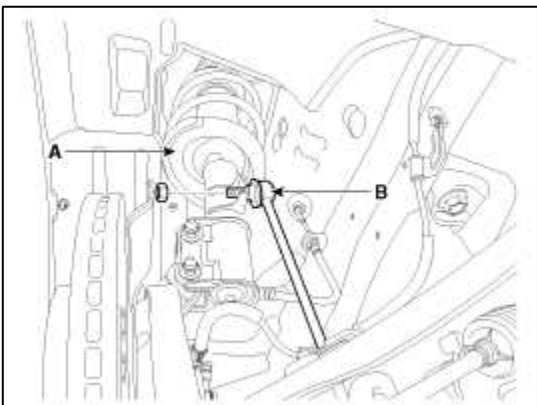

- Remove stabilizer (B) from the cross member by loosening the clamp mounting bolts (A).

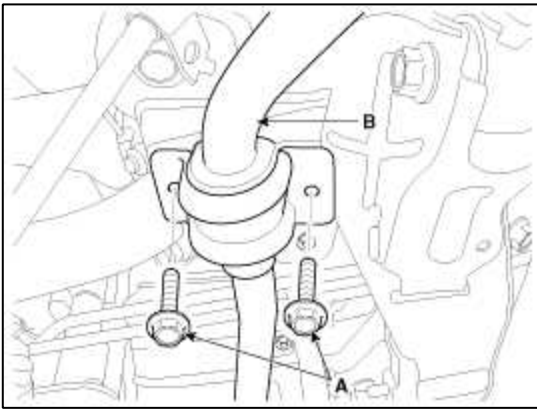

- Installation is the reverse of removal.

Inspection

- Check the bushing for wear and deterioration.
- Check the front stabilizer bar for deformation.
- Check the front stabilizer link ball joint for damage.

Suspension System > Front Suspension System > Sub Frame > Repair procedures


Replacement

- Remove the front wheel & tire.

Tightening torque :

88.3 ~ 107.9 N.m(9.0 ~ 11.0 kgf.m, 65.1 ~ 79.6 lb-ft)


- Remove the lower arm.
(Refer to SS group - "Front Lower Arm")
- Remove the front strut assembly.
(Refer to SS group - "Front Strut Assembly")
- Remove the front stabilizer bar.
(Refer to SS group - "Front Stabilizer Bar")
- Remove the steering gear box.
(Refer to ST group - "Steering Gear Box")
- Remove the cross member (A) from the body by loosening the mounting bolts and nuts.

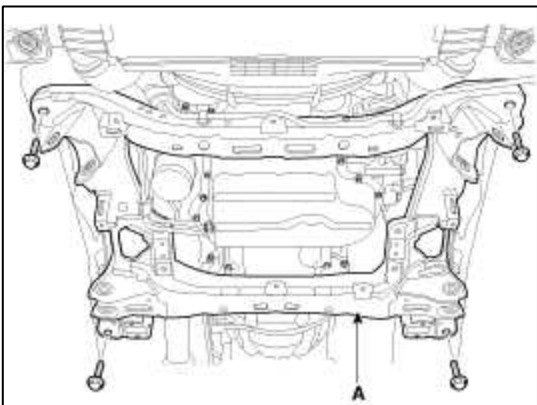

- Installation is the reverse of removal.

Suspension System > Rear Suspension System > Components and Components Location


Components

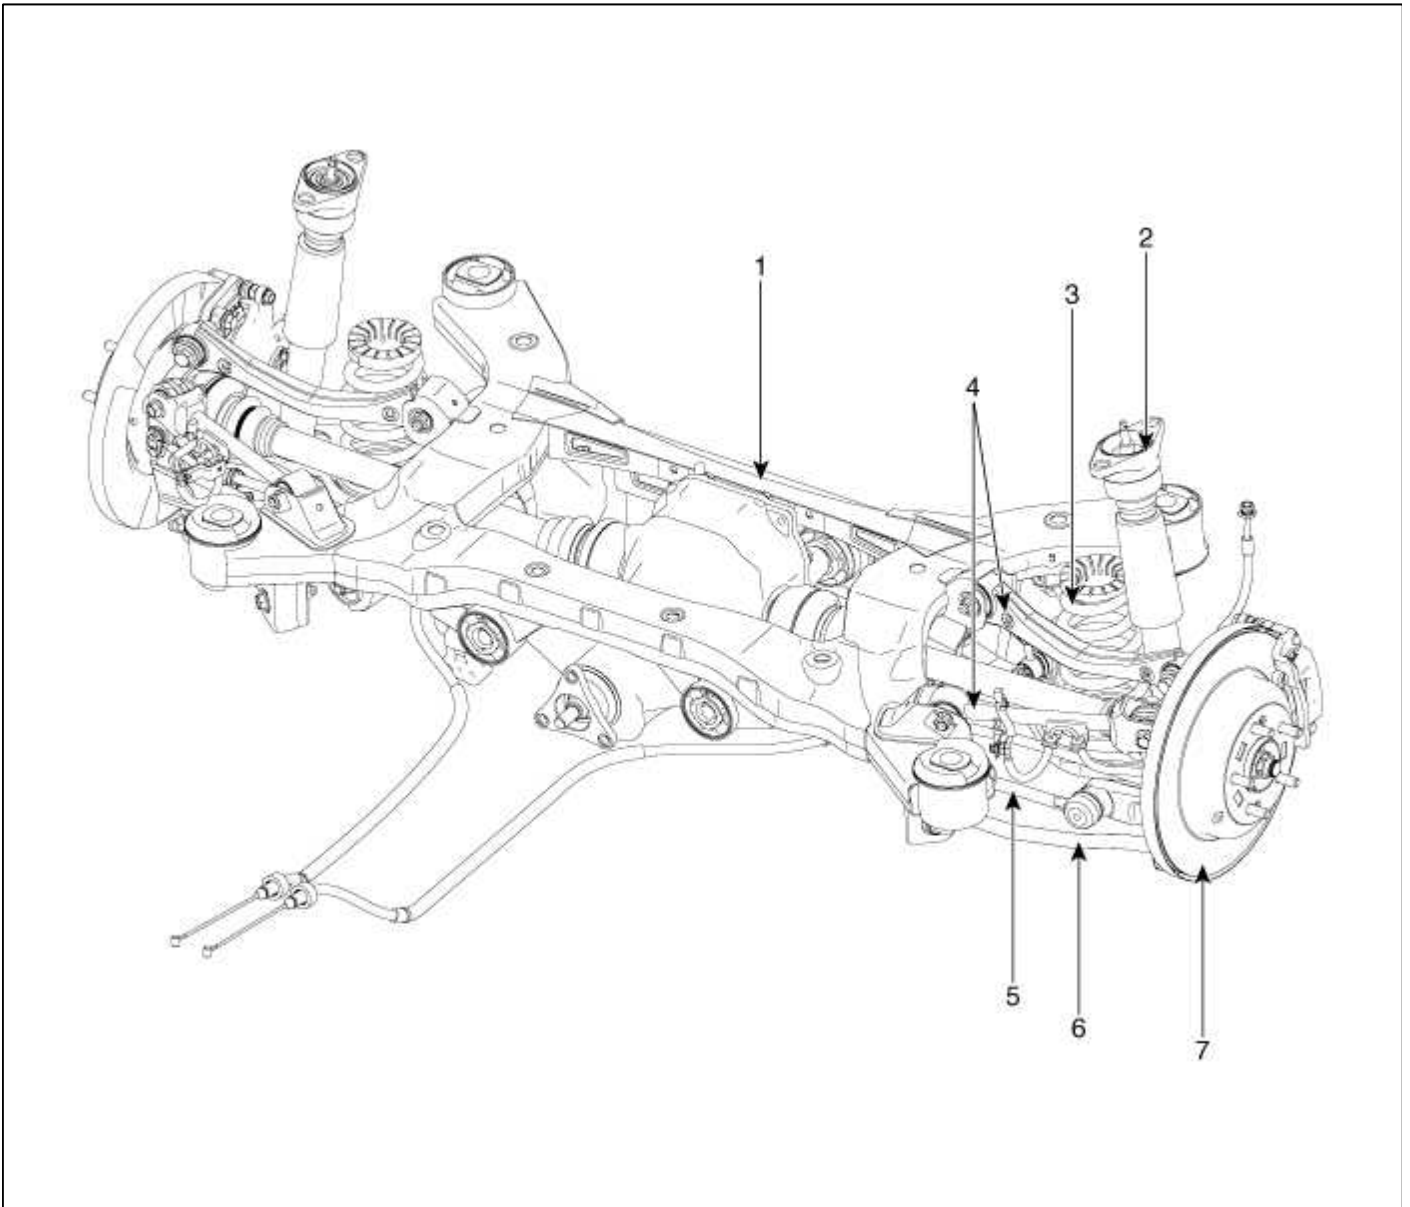

- | | |
|------------------------|-----------------|
| 1. Sub frame | 5. Assist arm |
| 2. Rear shock absorber | 6. Trailing arm |
| 3. Spring | 7. Rear disc |
| 4. Rear upper arm | |

Suspension System > Rear Suspension System > Rear Shock Absorber > Components and Components Location

Components

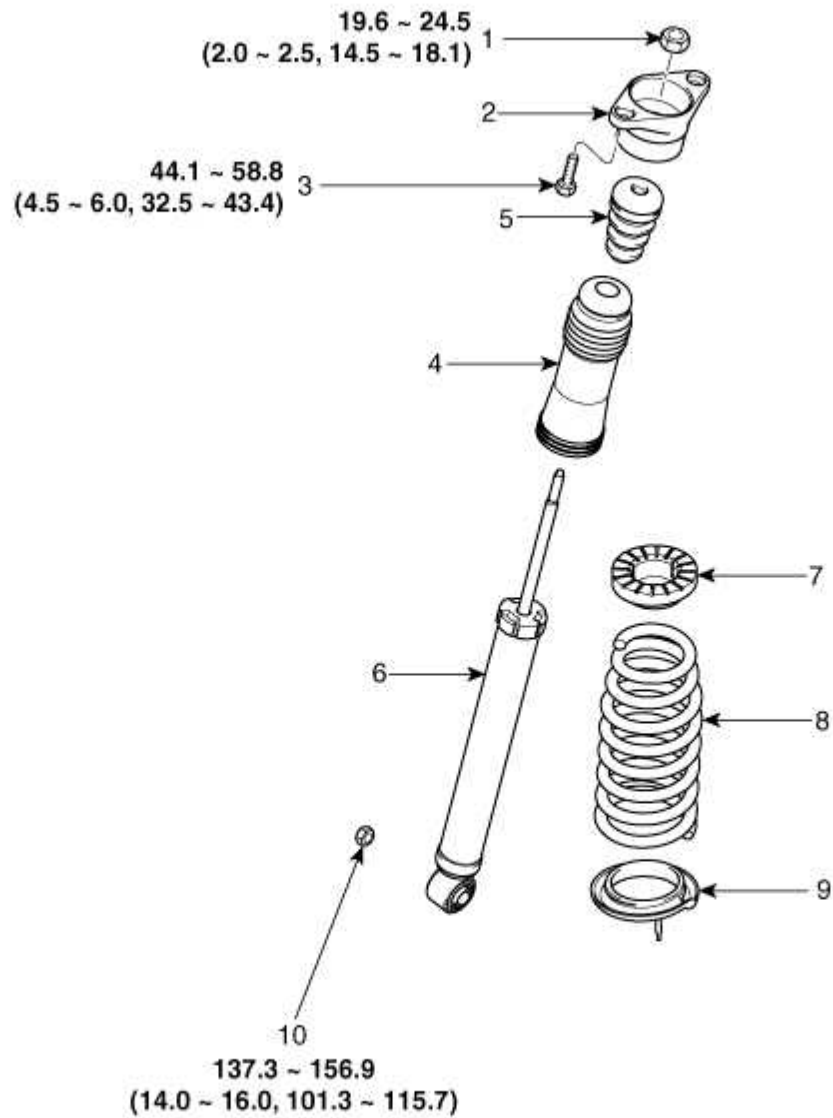

1. Lock nut	5. Urethan bumper	8. Spring
2. Bracket	6. Shock absorber	9. Lower pad
3. Bolt	7. Upper pad	10. Nut
4. Dust cover		

Suspension System > Rear Suspension System > Rear Shock Absorber > Repair procedures

Replacement

1. Remove the rear wheel & tire.


Tightening torque :

88.3 ~ 107.9 N.m(9.0 ~ 11.0 kgf.m, 65.1 ~ 79.6 lb-ft)

- Loosen the bolts and nuts and then remove the rear shock absorber from the lower arm.

Tightening torque :


137.3 ~ 156.9 N.m(14.0~16.0 kgf.m, 101.3 ~ 115.7 lb-ft)

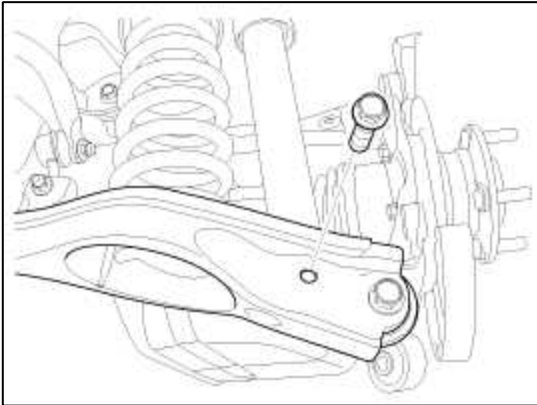

- Loosen the mounting bolts (A).

Tightening torque :


44.1 ~ 58.8 N.m(4.5 ~ 6.0 kgf.m, 32.5 ~ 43.4 lb-ft)

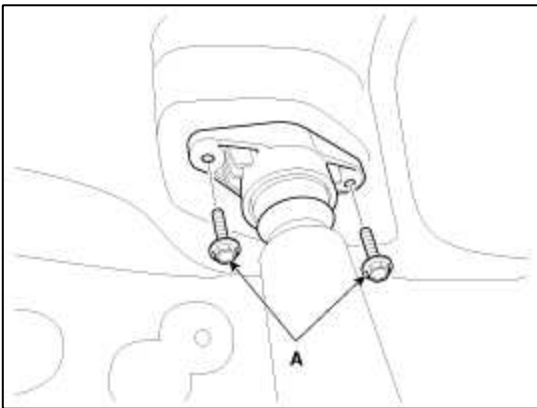

- Installation is the reverse of removal.

Inspection


- Check the components for damage or deformation.
- Compress and extend the piston rod (A) and check that there is no abnormal resistance or unusual sound during operation.

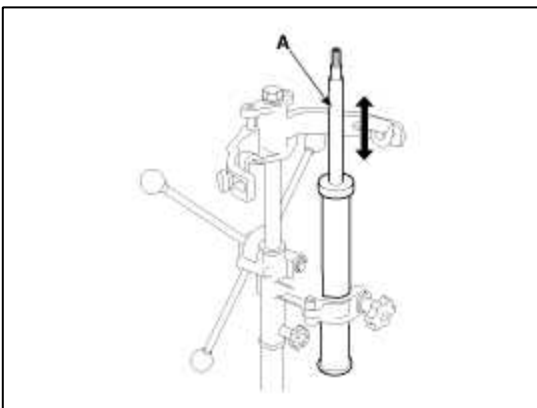

Disposal

- Fully extend the piston rod.

2. Drill a hole on the (A) section to discharge gas from the cylinder.

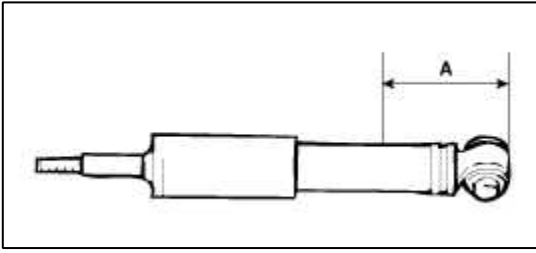

CAUTION

The gas coming out is harmless, but be careful of chips that may fly when drilling. Be sure to wear safety goggles or eye protection when performing this task.

Suspension System > Rear Suspension System > Rear Upper Arm > Repair procedures

Replacement


Front Upper Arm

1. Remove the rear wheel & tire.

Tightening torque :

88.3 ~ 107.9 N.m(9.0 ~ 11.0 kgf.m, 65.1 ~ 79.6 lb-ft)


2. Remove the brake hose bracket.

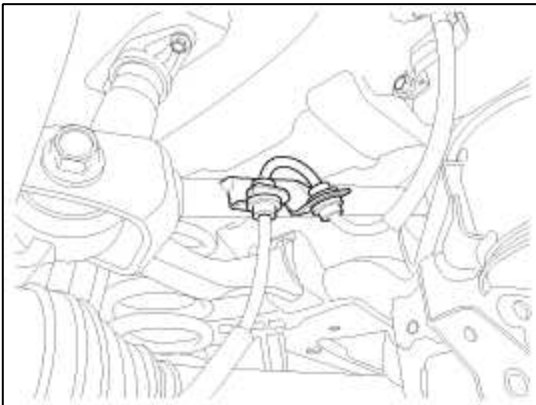

3. Loosen the bolts and nuts and then remove the front upper arm (A) from rear axle.

Tightening torque :


98.1 ~ 117.7 N.m(10.0 ~ 12.0 kgf.m, 72.3 ~ 86.8 lb-ft)

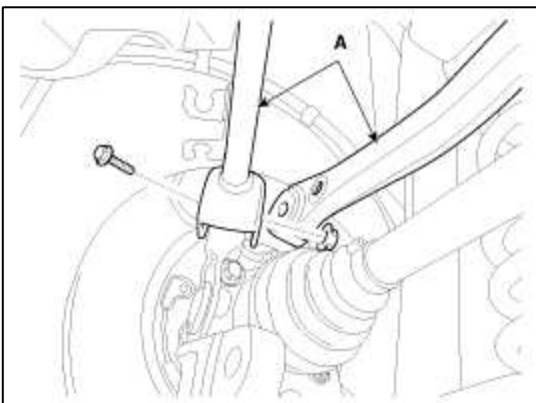

4. Loosen the bolts and nuts and then remove the front upper arm (A) from sub frame.

Tightening torque :

98.1 ~ 117.7 N.m(10.0 ~ 12.0 kgf.m, 72.3 ~ 86.8 lb-ft)

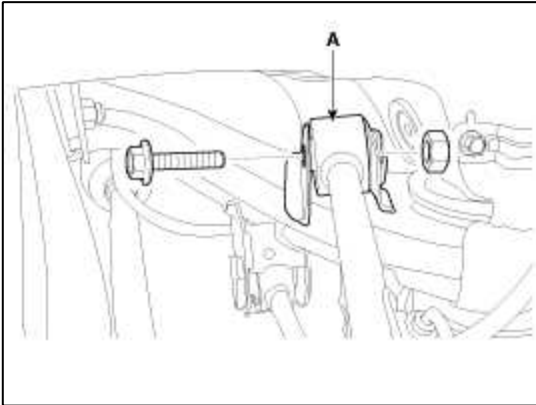

5. Installation is the reverse of removal.

Rear Upper Arm

1. Remove the rear wheel & tire.


Tightening torque :

88.3 ~ 107.9 N.m(9.0 ~ 11.0 kgf.m, 65.1 ~ 79.6 lb-ft)

2. Loosen the bolts and nuts and then remove the rear upper arm (A) from rear axle.

Tightening torque :


137.3 ~ 156.9 N.m(14.0~16.0 kgf.m, 101.3 ~ 115.7 lb-ft)

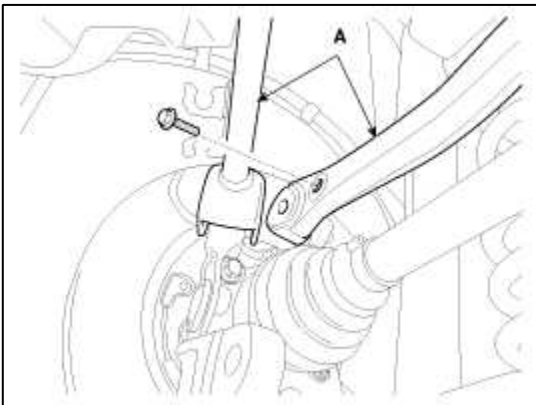

3. Loosen the bolts and nuts and then remove the rear upper arm (A) from sub frame.

Tightening torque :

98.1 ~ 117.7 N.m(10.0 ~ 12.0 kgf.m, 72.3 ~ 86.8 lb-ft)

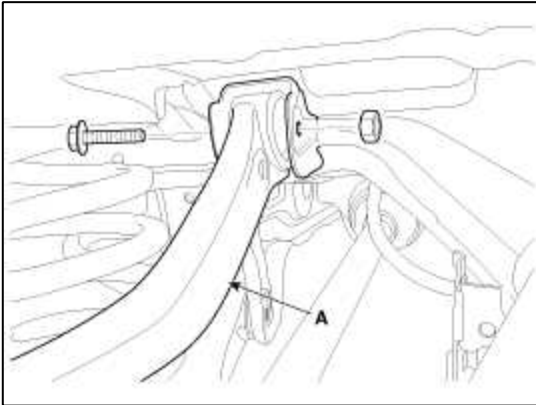

4. Installation is the reverse of removal.

Suspension System > Rear Suspension System > Rear Lower Arm > Repair procedures

Replacement

1. Remove the rear wheel & tire.


Tightening torque :

88.3 ~ 107.9 N.m(9.0 ~ 11.0 kgf.m, 65.1 ~ 79.6 lb-ft)

2. Remove the rear shock absorber.
3. Loosen the bolts and nuts and then remove the lower arm (A) from rear axle.

Tightening torque :


137.3 ~ 156.9 N.m(14.0~16.0 kgf.m, 101.3 ~ 115.7 lb-ft)

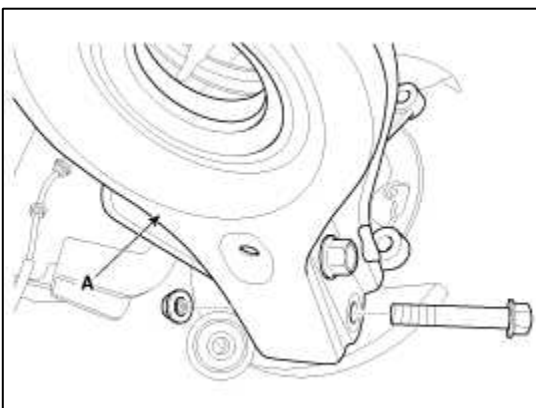

4. Loosen the bolts and nuts and then remove the lower arm (A) from sub frame (B).

Tightening torque :

137.3 ~ 156.9 N.m(14.0~16.0 kgf.m, 101.3 ~ 115.7 lb-ft)

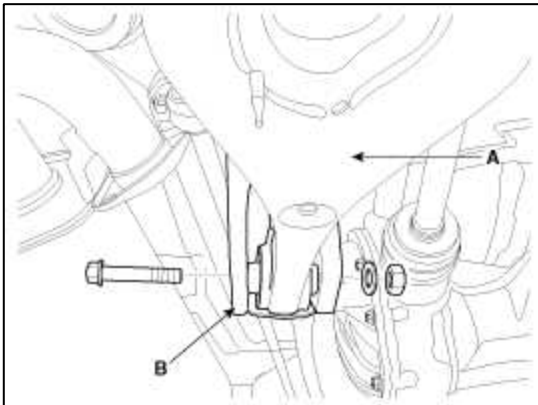

5. Installation is the reverse of removal.

Inspection

1. Check the bushing for wear and deterioration.
2. Check the rear lower arm deformation.
3. Check the all bolts.
4. Check the coil spring pad for deterioration and deformation.

Suspension System > Rear Suspension System > Rear Stabilizer Bar > Repair procedures

Replacement

1. Remove the rear wheel & tire.


Tightening torque :

88.3 ~ 107.9 N.m(9.0 ~ 11.0 kgf.m, 65.1 ~ 79.6 lb-ft)

2. Loosen the nuts and then remove the stabilizer link (A) from stabilizer bar and lower arm.

Tightening torque :


98.1 ~ 117.7 N.m(10.0 ~ 12.0 kgf.m, 72.3 ~ 86.8 lb-ft)

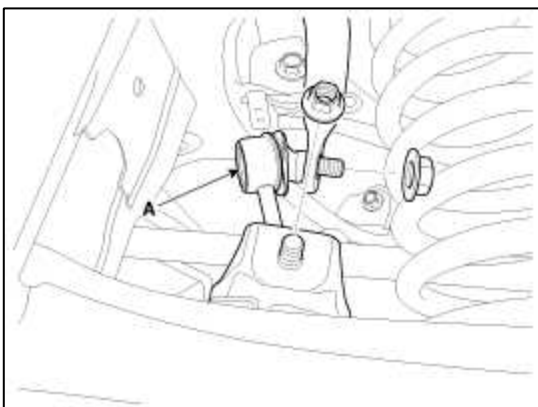

- Loosen the mounting bolts (A).

Tightening torque :

49.0 ~ 63.7 N.m(4.5 ~ 6.0 kgf.m, 36.2 ~ 47.0 lb-ft)

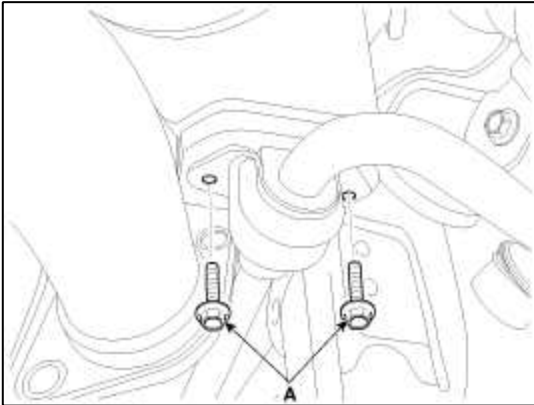

- Installation is the reverse of removal.

Inspection

- Check the bushing for wear deterioration.
- Check the all bolts.
- Check the stabilizer bar for deformation.
- Check the stabilizer link ball joint for damage.

Suspension System > Rear Suspension System > Rear Assist Arm > Repair procedures

Replacement

- Remove the rear wheel & tire.


Tightening torque :

88.3 ~ 107.9 N.m(9.0 ~ 11.0 kgf.m, 65.1 ~ 79.6 lb-ft)


- Loosen the nuts (A).

Tightening torque :

98.1 ~ 117.7 N.m(10.0 ~ 12.0 kgf.m, 72.3 ~ 86.8 lb-ft)

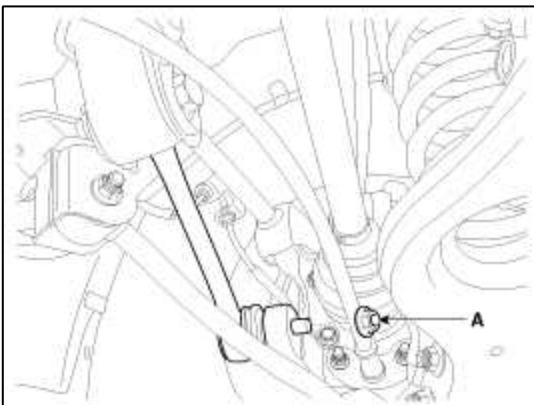


3. Separate the assist arm from the rear axle ball joint by using SST (09568-34000).

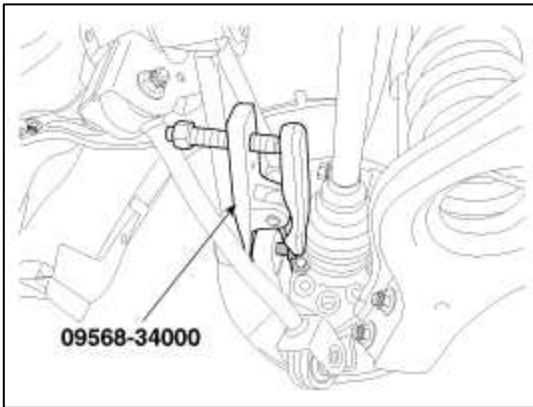

4. Loosen the bolts and nuts and then remove the assist arm (A) from sub frame.

Tightening torque :

137.3 ~ 156.9 N.m(14.0~16.0 kgf.m, 101.3 ~ 115.7 lb-ft)

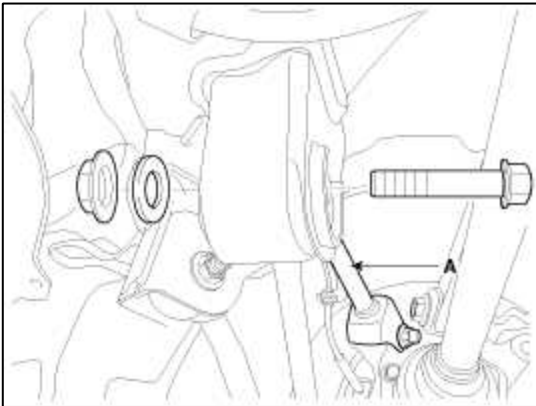

5. Installation is the reverse of removal.

Suspension System > Rear Suspension System > Trailing Arm > Repair procedures

Replacement

1. Remove the rear wheel & tire.


Tightening torque :

88.3 ~ 107.9 N.m(9.0 ~ 11.0 kgf.m, 65.1 ~ 79.6 lb-ft)

- Loosen the bolts and nuts and then remove the trailing arm (A) from rear axle.

Tightening torque :


98.1 ~ 117.7 N.m(10.0 ~ 12.0 kgf.m, 72.3 ~ 86.8 lb-ft)

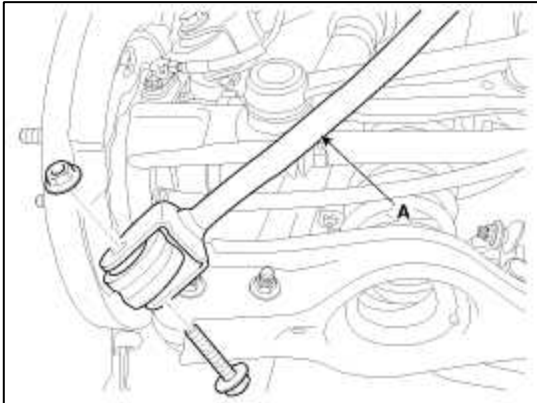

- Loosen the bolts and nuts and then remove the assist arm (A) from sub frame.

Tightening torque :

98.1 ~ 117.7 N.m(10.0 ~ 12.0 kgf.m, 72.3 ~ 86.8 lb-ft)

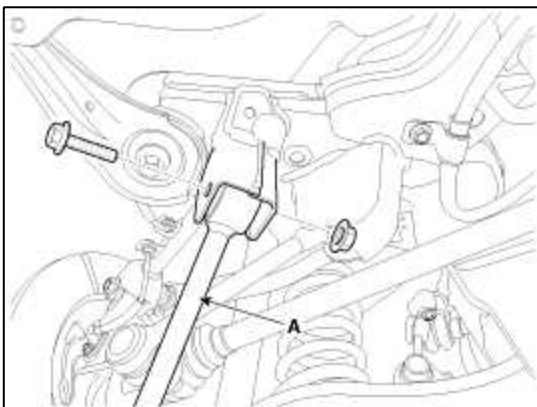

- Installation is the reverse of removal.

Suspension System > Rear Suspension System > Rear Sub Frame > Repair procedures

Replacement

- Remove the rear wheel & tire.

Tightening torque :


88.3 ~ 107.9 N.m(9.0 ~ 11.0 kgf.m, 65.1 ~ 79.6 lb-ft)

- Remove the rear lower arm.
(Refer to SS group - "Rear Lower Arm")
- Remove the rear shock absorber.
(Refer to SS group - "Rear Shock Absorber")
- Remove the rear upper arm.
(Refer to SS group - "Rear Upper Arm")
- Remove the trailing arm.
(Refer to SS group - "Trailing Arm")
- Remove the assist arm.
(Refer to SS group - "Rear Assist Arm")

7. Remove the differential carrier.
(Refer to DS group - "Differential Carrier Assembly")
8. Loosen the bolts and nuts and then remove the sub frame (A).

Tightening torque :

156.9 ~ 176.5 N.m(16.0~18.0 kgf.m, 115.7 ~ 130.2 lb-ft)

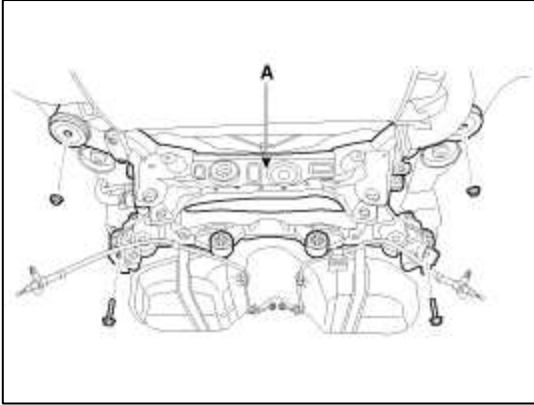

9. Installation is the reverse of removal.

Suspension System > Tires/Wheels > Tire > Repair procedures

Tire Wear


1. Measure the tread depth of the tires.

Tread depth [limit] : 1.6 mm (0.0630 in)

2. If the remaining tread (A) depth is less than the limit, replace the tire.

NOTE

When the tread depth of the tires is less than 1.6 mm (0.0630 in), the wear indicators (B) will appear.

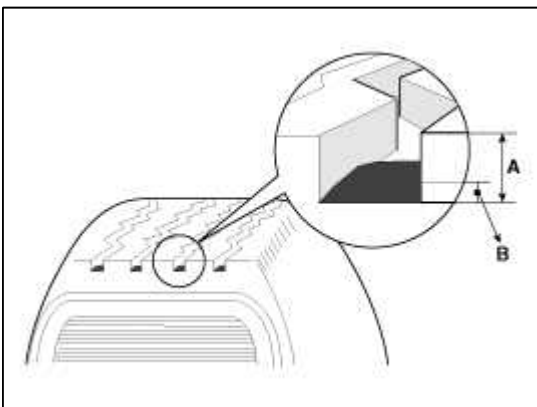


Tire Rotation


Checking For Pull And Wander

If the steering pulls to one side, rotate the tires according to the following wheel rotation procedure.

1. Rotate the front right and front left tires, and perform a road test in order to confirm vehicle stability.

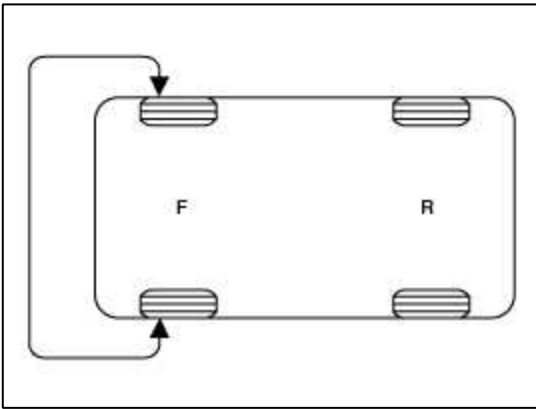

2. If the steering continues to pull to the opposite side, replace the front wheels with new ones.

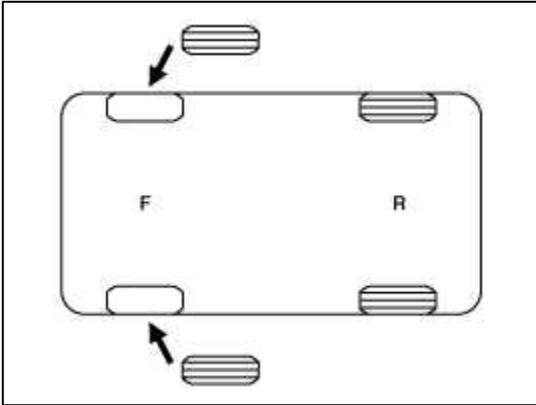

Suspension System > Tires/Wheels > Wheel > Repair procedures


Wheel Alignment

When using commercially available computerized four wheel alignment equipment (caster, camber, toe) to inspect the front wheel alignment, always position the car on a level surface with the front wheels facing straight ahead.

Prior to inspection, make sure that the front suspension and steering system are in normal operating condition and that the wheels and tires face straight ahead and the tires are inflated to the specified pressure.

Toe

Toe is a measurement of how much the front of the wheels are turned in or out from the straight-ahead position.

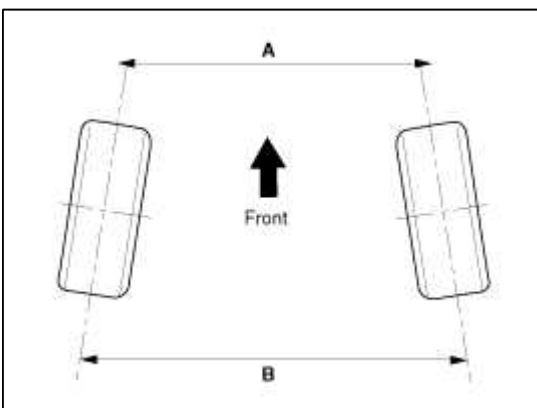

Item	Description
$A - B < 0$	Positive (+) toe (toe in)
$A - B > 0$	Negative (-) toe (toe out)

When the wheels are turned in toward the front of the vehicle, toe is positive (+) (toe in). When the wheels are turned out toward the front of the vehicle, toe is negative(-) (toe out). Toe is measured in degrees, from side to side, and totaled.

[Front]

Toe-in(B-A or angle a+b) is adjusted by turning the tie rod turnbuckles. Toe-in on the left front wheel can be reduced by turning the tie rod toward the rear of the car. Toe- in change is adjusted by turning the tie rods for the right and left heels simultaneously at the same amount as follows.

Standard value :

Toe-in

Total : $0.28^{\circ} \pm 0.2^{\circ}$


Individual : $0.14^{\circ} \pm 0.1^{\circ}$

NOTE

- Toe-in adjustment should be made by turning the right and left tie rods at the same amount.
- When adjusting toe-in, loosen the outer bellows clip to prevent twisting the bellows.
- After the adjustment, tighten the tie rod end lock nuts firmly and reinstall the bellows clip.
- Adjust each toe-in to be the range of $\pm 0.1^{\circ}$.

Tie rod (A) Specified torque :

49.0 ~ 53.9 N.m (5.0 ~ 5.5 kgf.m, 36.2 ~ 39.8 lb-ft)

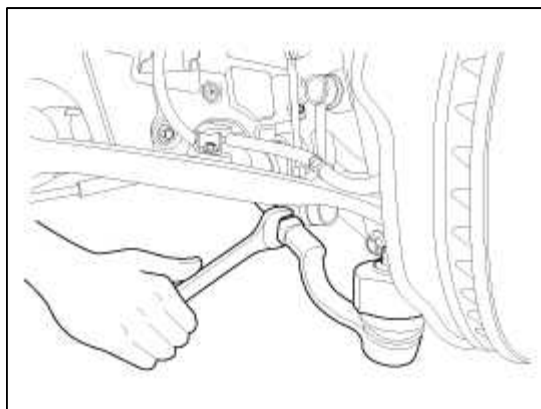

[Rear]

Standard value :

Toe-in

Total : $0.16^{\circ} \pm 0.2^{\circ}$

Individual : $0.08^{\circ} \pm 0.1^{\circ}$

Adjust the toe-in by turning the cambolt of the assist arm.

Left cambolt : Clockwise → toe-out

Right cambolt : Clockwise → toe-in

The variation of toe by a rotation of the cambolt :

About 0.4°


CAUTION

- Each toe should be within $0.1^\circ \pm 0.1^\circ$.
If the difference between right and left is not within $+0.2^\circ$, repeat adjustment.
- After adjusting the cambolt, tighten the nut to the specified torque.

Camber

[Front]

Camber is the inward or outward tilting of the wheels at the top.

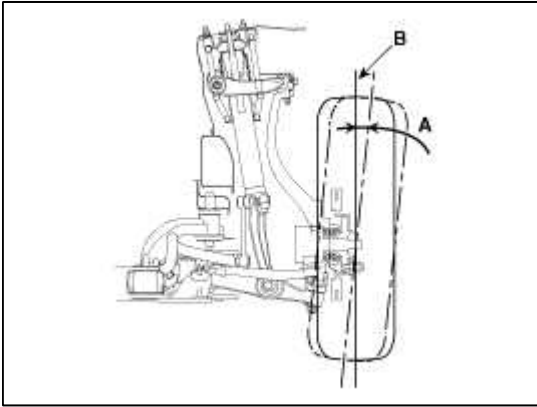

Item	Description
A	Positive camber angle
B	True vertical

When the wheel tilts out at the top, then the camber is positive (+).

When the wheel tilts in at the top, then the camber is negative(-).

Standard value : $-0.7^\circ \pm 0.5^\circ$

NOTE

Camber is pre-set at the factory and doesn't need to be adjusted. If the camber is not within the standard value, replace the bent or damaged parts.

[Rear]

Standard value : $-1.5^\circ \pm 0.5^\circ$

Difference between right and left angle is within 0.5°

Adjust the camber by turning the cambolt of the rear lower arm.

Left cambolt : Clockwise → camber(-)

Right cambolt : Clockwise → camber(+)

The variation of camber by a rotation of the cambolt :


About 0.09°

Caster

Caster is the tilting of the strut axis either forward or backward from vertical. A backward tilt is positive (+) and a forward tilt is negative (-).

Caster is pre-set at the factory and doesn't need to be adjusted. If the caster is not within the standard value, replace the bent or damaged parts.

Caster : $7.45^\circ \pm 0.5^\circ$

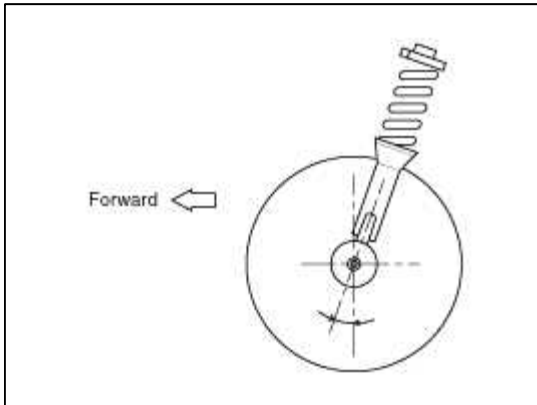


NOTE

- The worn loose or damaged parts of the front suspension assembly must be replaced prior to measuring front wheel alignment.
- Caster are pre-set to the specified value at the factory and don't need to be adjusted.
- If the caster are not within specifications, replace bent or damaged parts.
- The difference of left and right wheels about the the caster must be within the range of $0^\circ \pm 0.5^\circ$.

Wheel Runout

1. Jack up the vehicle and support it with jack stands.
2. Measure the wheel runout with a dial indicator as illustrated.
3. Replace the wheel if the wheel runout exceeds the limit.

Limit		Radial	Axial
Runout mm	Aluminium	0.3mm (0.0118 in.)	0.3mm (0.0118 in.)

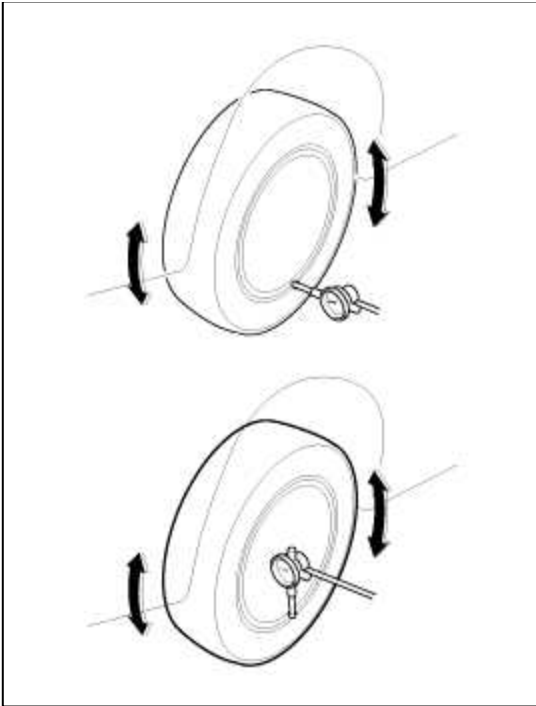

Wheel Nut Tightening

1. Tightening torque.

Tightening torque :


88.3 ~ 107.9 N.m(9.0 ~ 11.0 kgf.m, 65.1 ~ 79.6 lb-ft)

CAUTION

When using an impact gun, final tightening torque should be checked using a torque wrench.


2. Tightening order.

Check the torque again after tightening the wheel nuts diagonally.

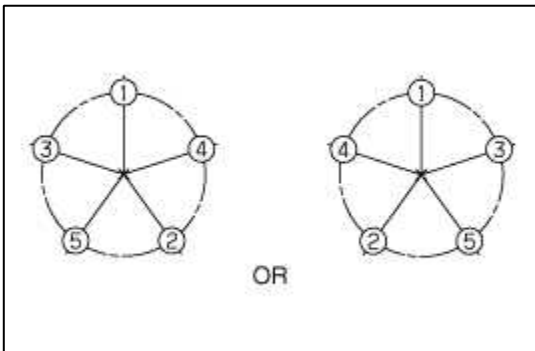

Suspension System > Tire Pressure Monitoring System > Components and Components Location


Components

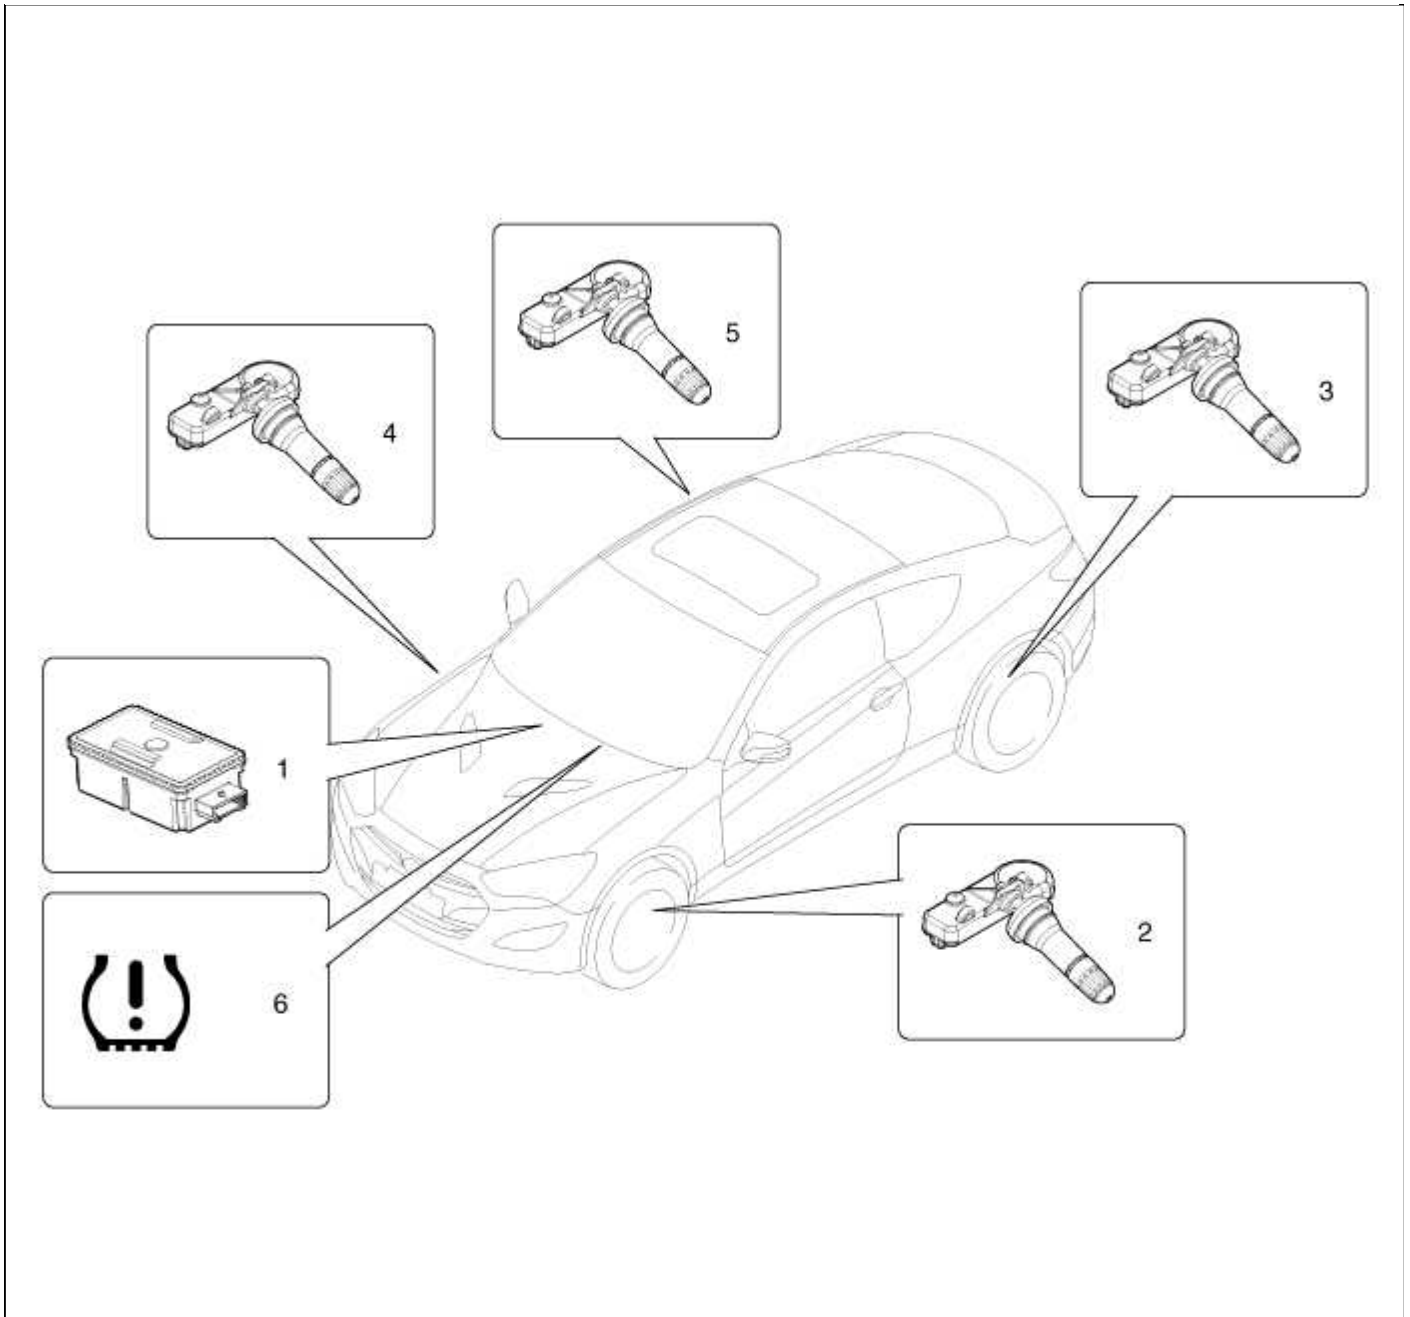


- | | |
|---------------------|---------------------|
| 1. Receiver | 4. TPMS Sensor (S2) |
| 2. TPMS Sensor (S1) | 5. TPMS Sensor (S3) |
| 3. TPMS Sensor (S4) | 6. Tread Lamp |

Suspension System > Tire Pressure Monitoring System > Schematic Diagrams

Circuit Diagram

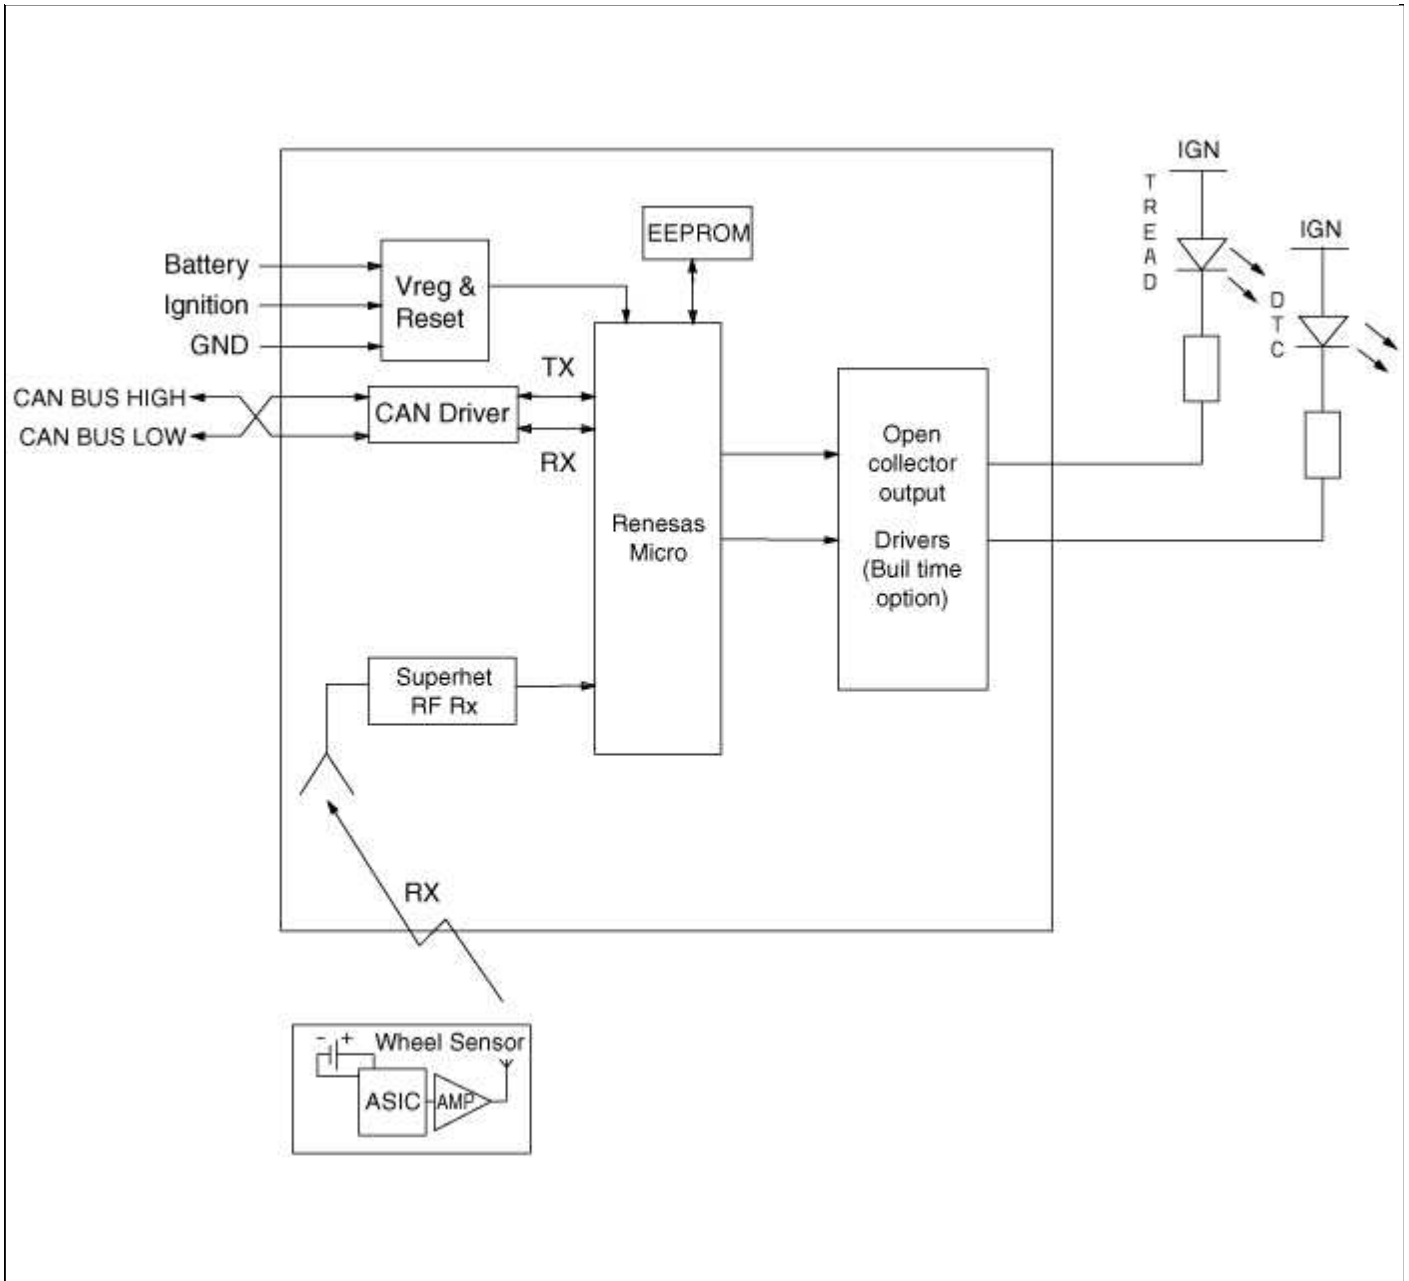

Harness Connector

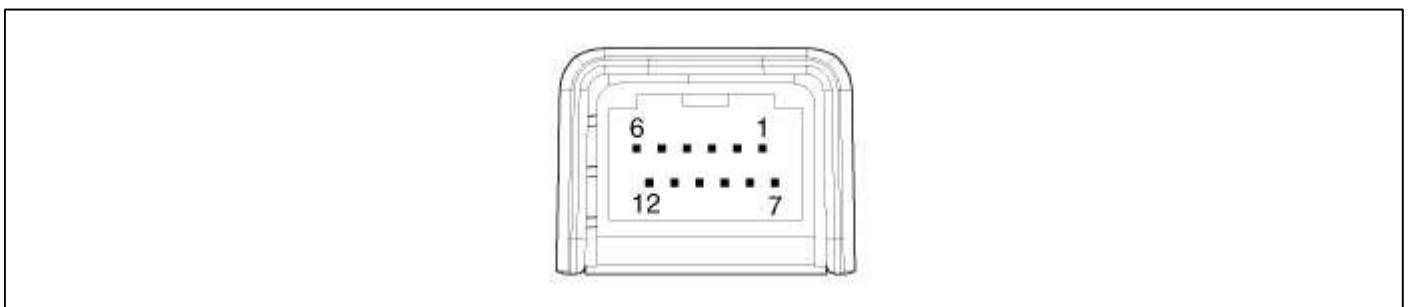

Pin No.	Description	Remark
1	-	
2	-	
3	-	
4	Vehicle Ground	
5	CAN_HIGH	
6	Battery	
7	-	
8	-	
9	-	
10	-	
11	CAN_LOW	
12	Ignition	

Suspension System > Tire Pressure Monitoring System > Description and Operation

Description

TREAD Lamp

- Tire Under Inflation / Leak Warning.



1. Turn on condition
 - A. When tire pressure is below allowed threshold
 - B. When rapid leak is detected by the sensor.
 - C. Indicates that tire needs to be re-inflated to placard pressure / repaired.
2. Turn off condition
 - A. Under-inflation ; When tire pressure is above (warning threshold + hysteresis).
 - B. Rapid Leak ; When tire pressure is above (leak warning threshold).

DTC Warning

1. Turn on condition
 - A. When the system detects a fault that is external to the receiver/ sensor.
 - B. When the system detects a receiver fault.
 - C. When the system detects a sensor fault.
2. Turn off condition
 - A. If the fault is considered as 'critical', then the lamp is held on throughout the current Ignition cycle (even if the DTC has been demoted). This is because it is important to bring the problem to the drivers attention. On the following Ignition cycle, the demotion conditions will be re-checked. If the demotion conditions occur, the lamp will be turned off. It will be held on until DTC demotion checking is completed.
 - B. 'Non critical' faults are those that can occur temporarily e.g. vehicle battery under voltage. The lamp is therefore turned off when the DTC demotion condition occurs.


System Fault

1. General Function

- A. The system monitors a number of inputs across time in order to determine that a fault exists.
- B. Faults are prioritized according to which has the most likely cause.
- C. Maximum fault store is equal to 15.
- D. Certain faults are not covered through DTC. The main ones are:
 - 1) Sensor thermal shutdown (over 257°F/125°C).
 - 2) Ignition Line stuck ; requires observation of lamps at Ignition ON to diagnose.

Suspension System > Tire Pressure Monitoring System > TPMS Sensor > Description and Operation

Description

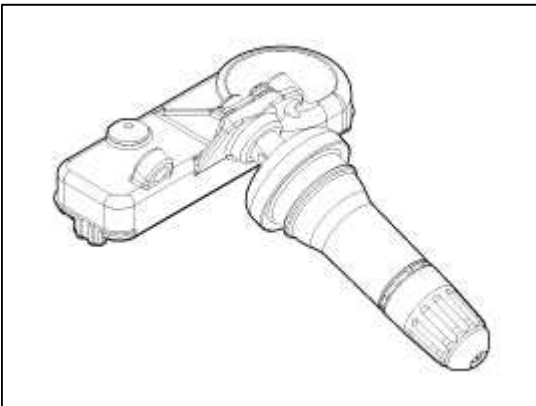

1. Mode

(1) Configuration State

- A. All sensors should be in the Low Line (Base) state.
- B. In Low Line (Base) configuration, sensor transmissions occur every 3 minutes 20 seconds (nominal) and pressure is measured every 20 seconds.

(2) Normal Fixed Base State

- A. Sensor transmissions continue at the Low Line (Base) configuration defined rates until the state is either changed by LF command or by the sensor detecting a condition that requires a temporary change to another state.
- B. The LF command to this state must contain the sensors ID.

(3) Storage Auto State:

- A. This state is a Low current consumption state.
- B. Sensors are in this state when they first arrive at the dealership (either on the vehicle or as replacement spares).
- C. In this state, the sensor does not measure pressure / temperature / battery level.
- D. The sensor will not transmit in this state unless requested to do so by the initiate command.

(4) Alert State:

- A. The sensor automatically enters this state if the measured temperature exceeds 230 °F(110 °C) and over temperature shutdown is likely.
- B. In this state, pressure is measured every 4 seconds and RF data transmitted every 4 seconds.
- C. The state lasts for 1 minute if it is pressure triggered.
- D. This state is also entered when a 3 psi change in pressure from the last RF transmission occurs.


NOTE

Sensor mode is used to configure sensor between high line and low line system. TPMS sensor for UB should be set to low line.

Suspension System > Tire Pressure Monitoring System > TPMS Sensor > Repair procedures**Removal****CAUTION**

Handle the sensor with care.

1. Remove the tire. (Refer to "Tire Removal")
2. Remove the valve nut.

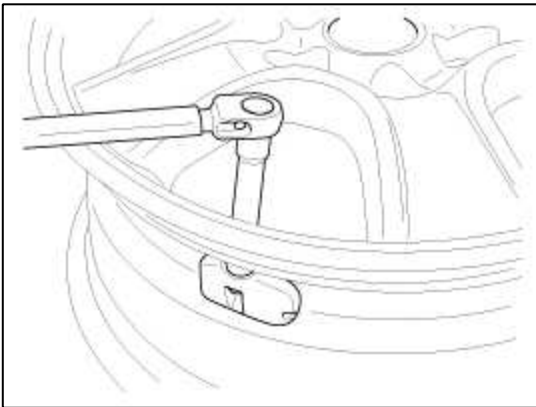**CAUTION**

The valve nut should not be re-used.


3. Discard the valve assembly.

Installation**Sensor Fit****CAUTION**


- Handle the sensor with care.
- Avoid lubricant contact.
- Ensure that the wheel to be fitted is designed for sensor mount. There should normally be a mark to indicate this.
- Ensure that the valve hole and mating face of the wheel are clean.

1. Slide the sensor-valve unit through the valve hole of the rim. Hold the sensor against the rim and the rubber grommet against the sealing surface.

2. Insert the nut over the valve stem and then tighten the nut.

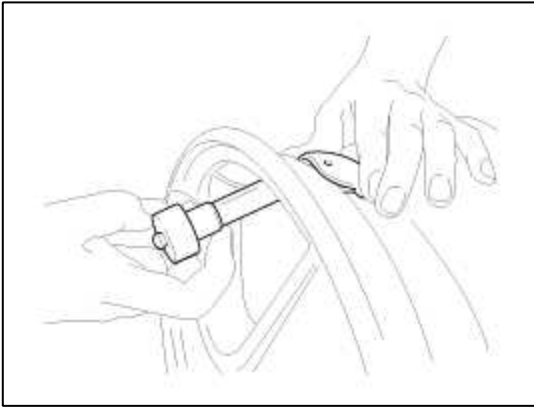

3. Continue to tightening the nut until contact with the rim and then tighten to 3.5 ~ 4.5Nm.

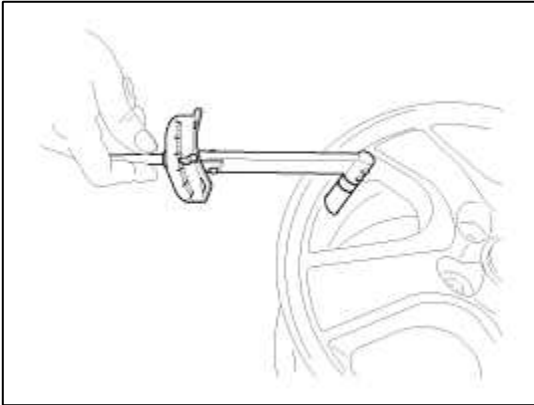

CAUTION

- Tighten slowly with quarter turn steps until the final torque is reached.
- Do not exceed allowed torque.
- Do not use electric or pneumatic tools.

4. Check that the sensor is firmly attached to the rim.

CAUTION

Risk of damage during the tire installation/ removal if the sensor is not firmly attached to the rim.

5. Carry out inflation / pressure correction and then fit valve cap.

CAUTION

Change the newly installed sensor mode to Normal Fixed Base(Low Line) with the 'GDS'. Mode (Status / option) of the sensor installed to the vehicle should be Normal Fixed Base (Low).

6. Install the tire. (Refer to "Tire Installation")

Sensor ID Writing (Wireless)

Register Sensor



This function can register the sensor IDs to TPMS control module(TPMS ECU) after reading the sensor IDs of each tires. Please perform the following procedure as below.

1. Please approach GDS TPMS module to the tire sensor(best detectable distance is 3~4 inches)
2. press the ENTER button when each tire was illuminated in the screen
3. press the Write button after reading all of the sensor IDs

Ok

Cancel

Register Sensor



Please perform the following procedure as below.

1. locate the GDS TPMS module to the tire sensor within 3 inches.
2. press the GDS TPMS module's ENTER button when each tire was illuminated in the screen.
3. press the Write button after reading all of the sensor IDs.

Front Left

Read ID

Write ID

Rear Left

Read ID

Write ID



Front Right

Read ID

Write ID

Rear Right

Read ID

Write ID

CLR

Write

Cancel

Register Sensor



Please perform the following procedure as below.

1. locate the GDS TPMS module to the tire sensor within 3 inches.
2. press the GDS TPMS module's ENTER button when each tire was illuminated in the screen.
3. press the Write button after reading all of the sensor IDs.

Front Left

Read ID

Write ID

Front Right

Read ID

Write ID

Rear Right

Read ID

Write ID

Write ID

GDS TPMS

It takes Max. 30 Sec. Please, wait.....


Cancel

CLR

Write


Cancel

Register Sensor



Please perform the following procedure as below.

1. locate the GDS TPMS module to the tire sensor within 3 inches.
2. press the GDS TPMS module's ENTER button when each tire was illuminated in the screen.
3. press the Write button after reading all of the sensor IDs.

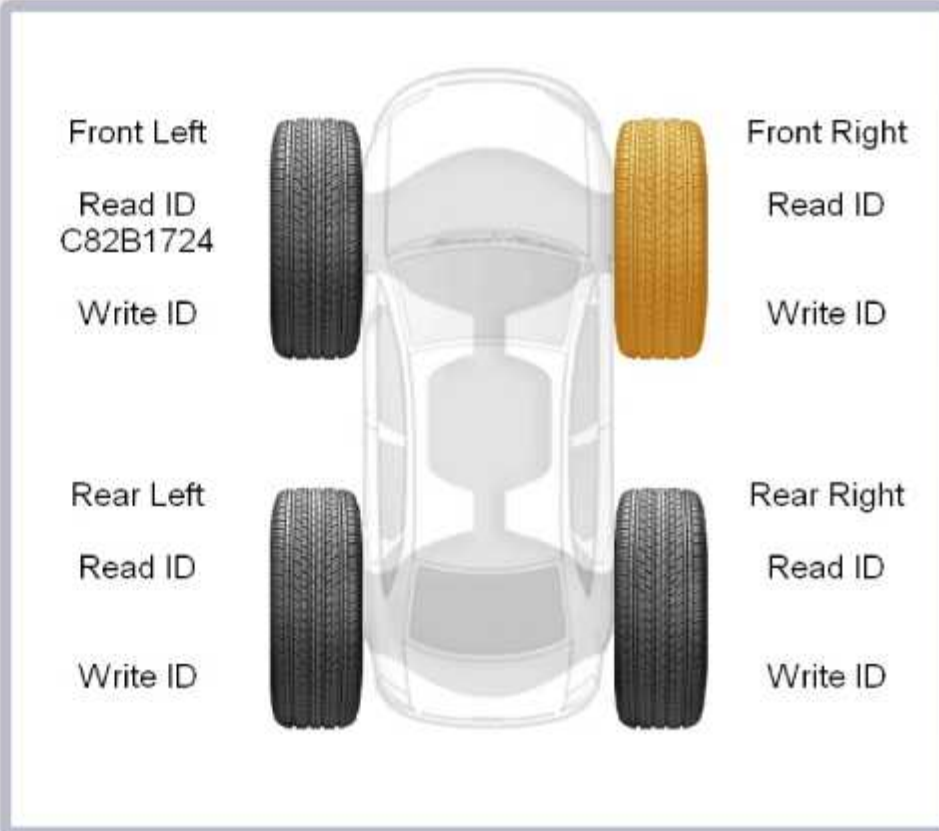

Front Left		Front Right
Read ID C82B1724		Read ID
Write ID		Write ID
Rear Left		Rear Right
Read ID		Read ID
Write ID		Write ID

CLR Write Cancel

Sensor ID Writing

Wheel Sensor ID Writing



1. This function is to input sensor ID to TPMS control module (TPMS ECU), Which is used to operate the TPMS system properly.
2. The data is composed of 8 alphanumeric characters.
3. [Current ID] is current setting sensor ID, [Change ID] is new sensor ID, press the [OK] button.

[Condition] : IG. On (Engine Off)

Ok

Cancel

Wheel Sensor ID Writing




	Current ID	Change ID
Sensor1	E87D34E4	E87D34E4
Sensor2	C87D34D7	C87D34D7
Sensor3	C87D34E4	C87D34E4
Sensor4	C87D349A	C87D349A

Modify sensor ID and press the [OK] button.

Save


Ok

Cancel

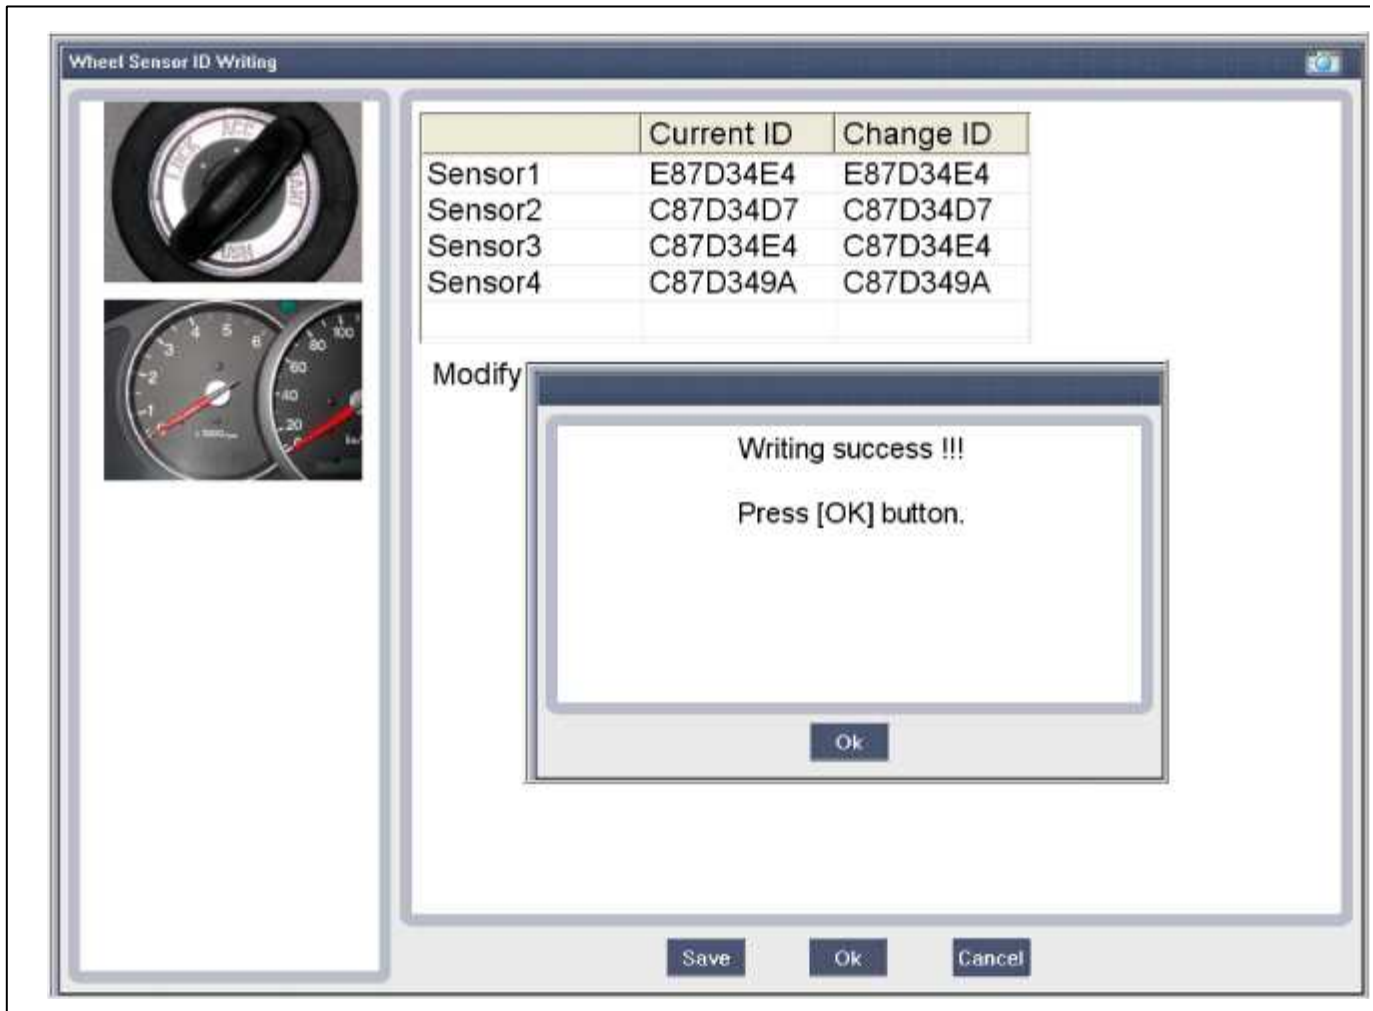

Suspension System > Tire Pressure Monitoring System > TPMS Receiver > Description and Operation

Description

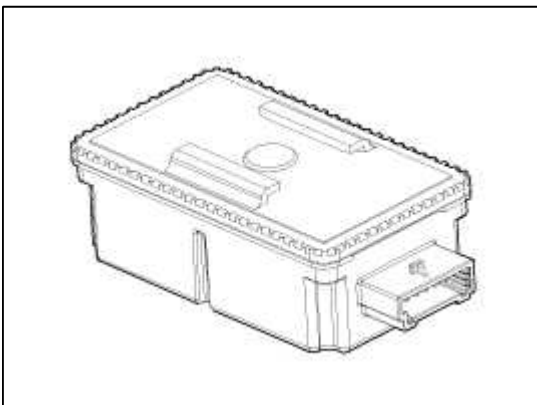

1. Mode

(1) Virgin State

- A. The receiver as a sole part is shipped in this state. Replacement parts should therefore arrive in this state.
- B. In this state, there is no sensor monitoring and no DTC monitoring.
- C. The state indicates that platform specific parameters must be written to the receiver and that sensors are un-learned.

(2) Normal State

- A. In order for tire inflation state and DTC monitoring to occur, the receiver must be in this state.
- B. In this state, automatic sensor learning is enabled.

(3) Test State

- A. This state is only used in manufacturing plant to check RF transmission between sensor and receiver.

2. Overview

- A. Receives RF data from sensor.
- B. Uses sensor data to decide whether to turn on TREAD Lamp.
- C. Learn TPM sensor for under inflation monitoring automatically.
- D. Uses sensor information, distance travelled, background noise levels, Auto-learn status, short / open circuit output status, vehicle battery level, internal receiver states to determine if there is a system or a vehicle fault.

Operation

1. General Function

- A. Auto-learn takes place only once per Ignition cycle.
- B. On successful completion, 4 road wheel sensor ID's are latched into memory for monitoring.
- C. Until Auto-learn completes, previously learned sensors are monitored for under inflation / leak warnings.

2. General Conditions to Learn New Sensors:

- A. Receiver must determine that it is confident that sensor is not temporary:
 - 1) Uses vehicle speed.
 - 2) Uses confidence reduction of previously learned sensors.
- B. Typical time at driving continuously over 12.4 mph(20 kph) to learn a new sensor is up to 20 minutes.

3. General Conditions to Un-Learn a sensor that is removed:

- A. It takes less than 20 minutes at 12.4 ~ 18.6 mph(20 ~ 30kph).
- B. Confidence reduction is dependent on time which vehicle is driven at speed greater than or equal to 12.4 mph(20 kph).

Suspension System > Tire Pressure Monitoring System > TPMS Receiver > Repair procedures

Replacement

NOTE

When the receiver first arrives for replacement:


- 1) It will be in Virgin State.
- 2) It will not be configured for any specific platform.
- 3) It will not have any sensor ID's memorized.

CAUTION

It is important to make sure that the correct receiver is used to replace the faulty part i.e. it must be Low Line and not High Line in order to have the correct inflation warning thresholds set.


1. Disconnect vehicle battery.



2. Remove the glove box.
(Refer to BD group - "Crash Pad")
3. Remove the receiver (A) and fit bracket assembly to new part.

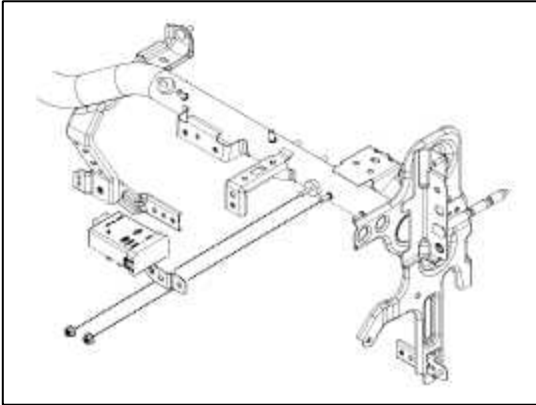


4. Secure new part to vehicle and fit connector.
5. Re-connect battery and turn Ignition on.
6. Check that TREAD Lamp flash rate matches Virgin State indication.

Vehicle Name Writing

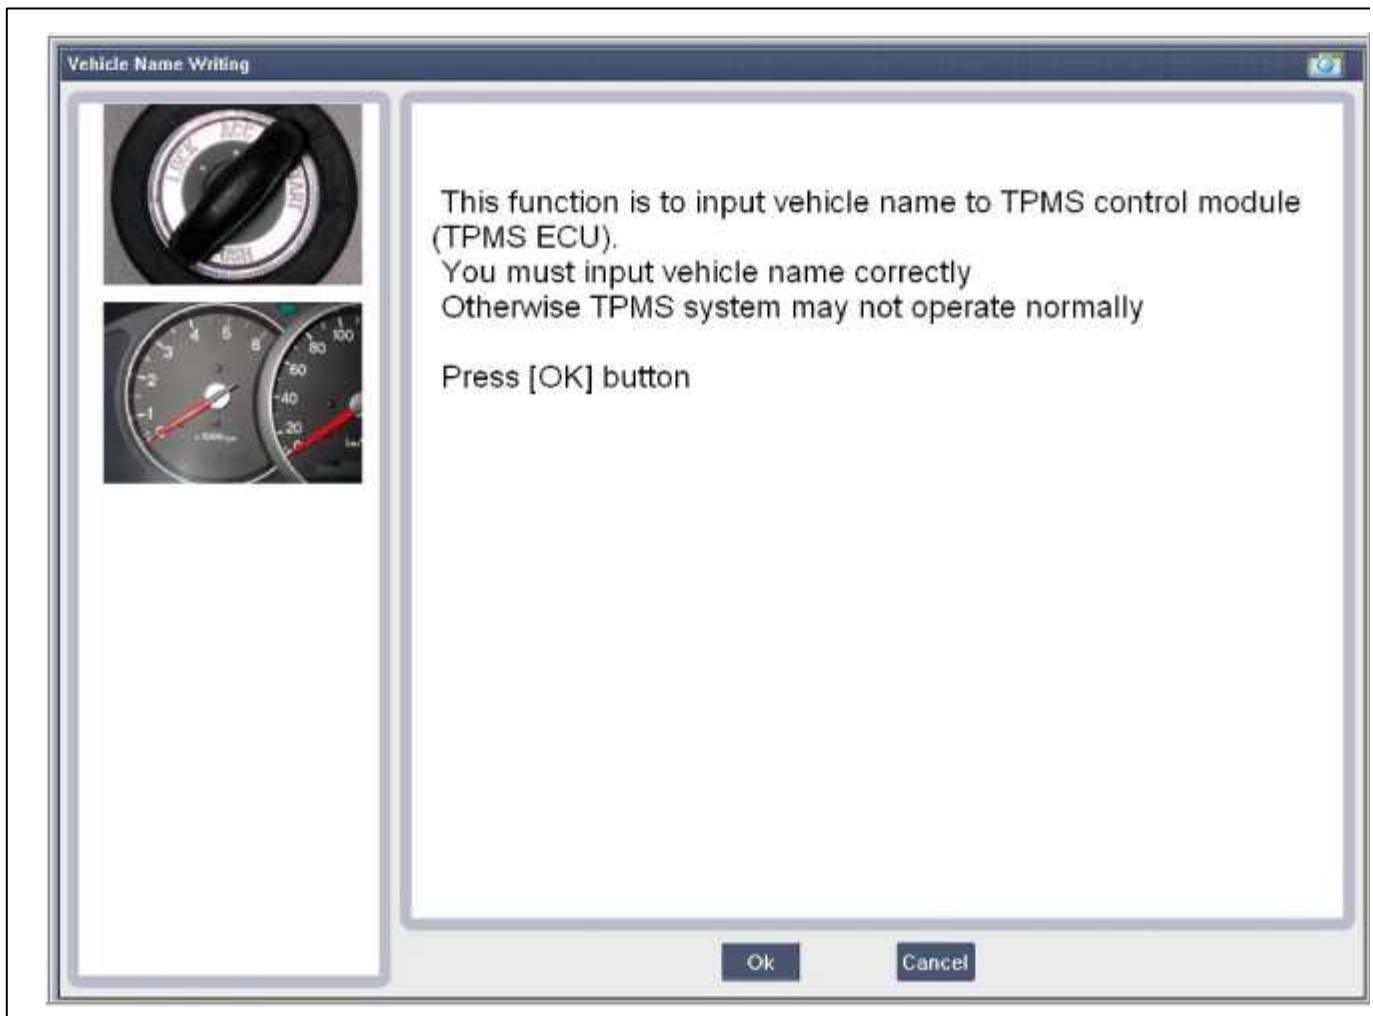

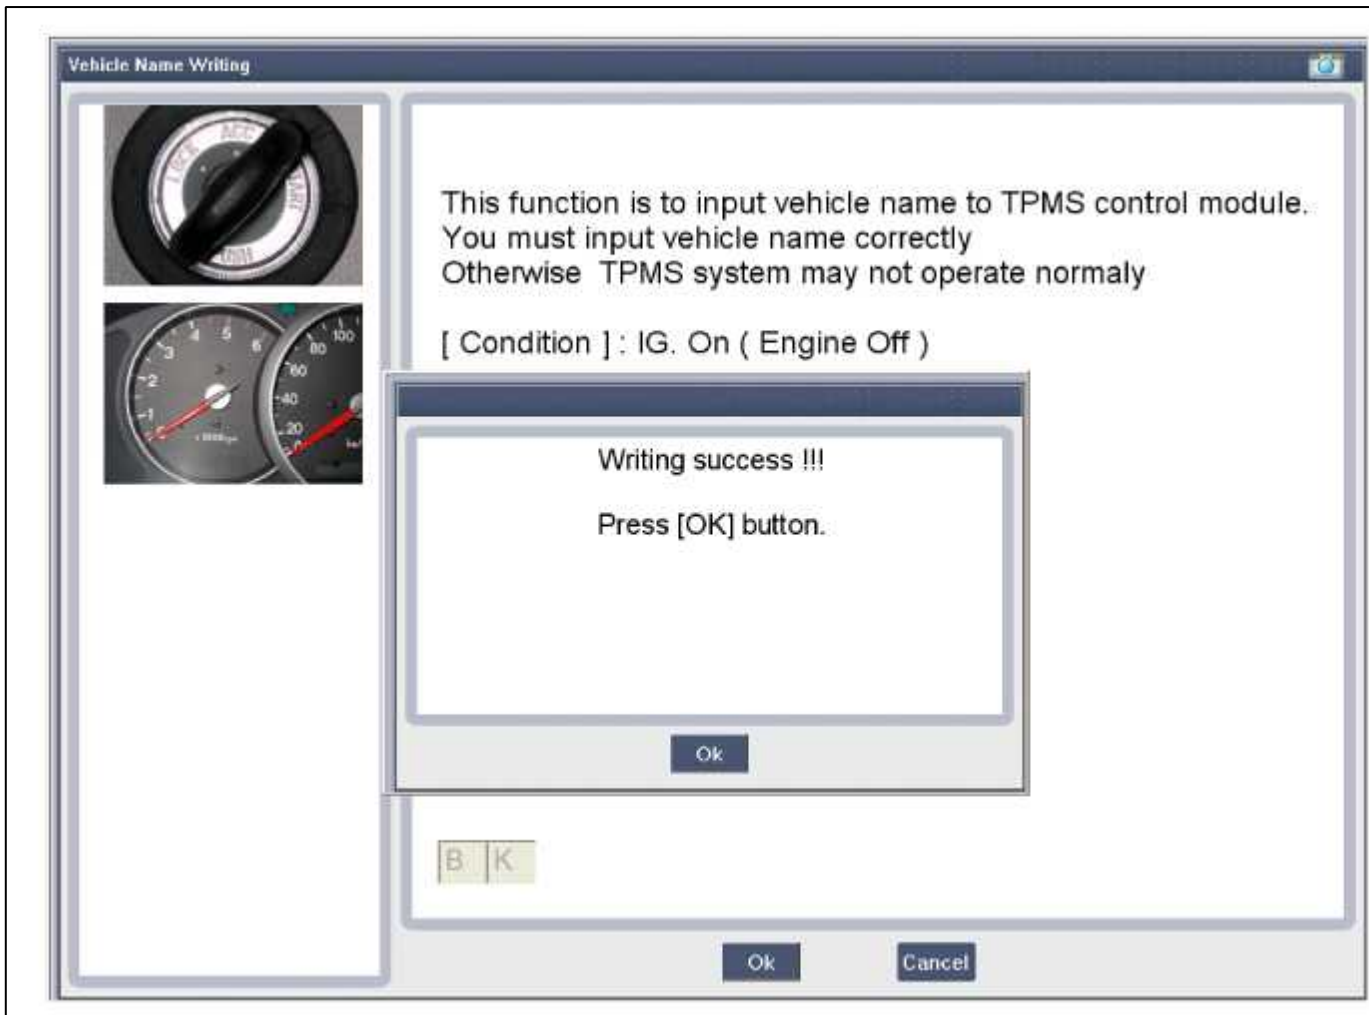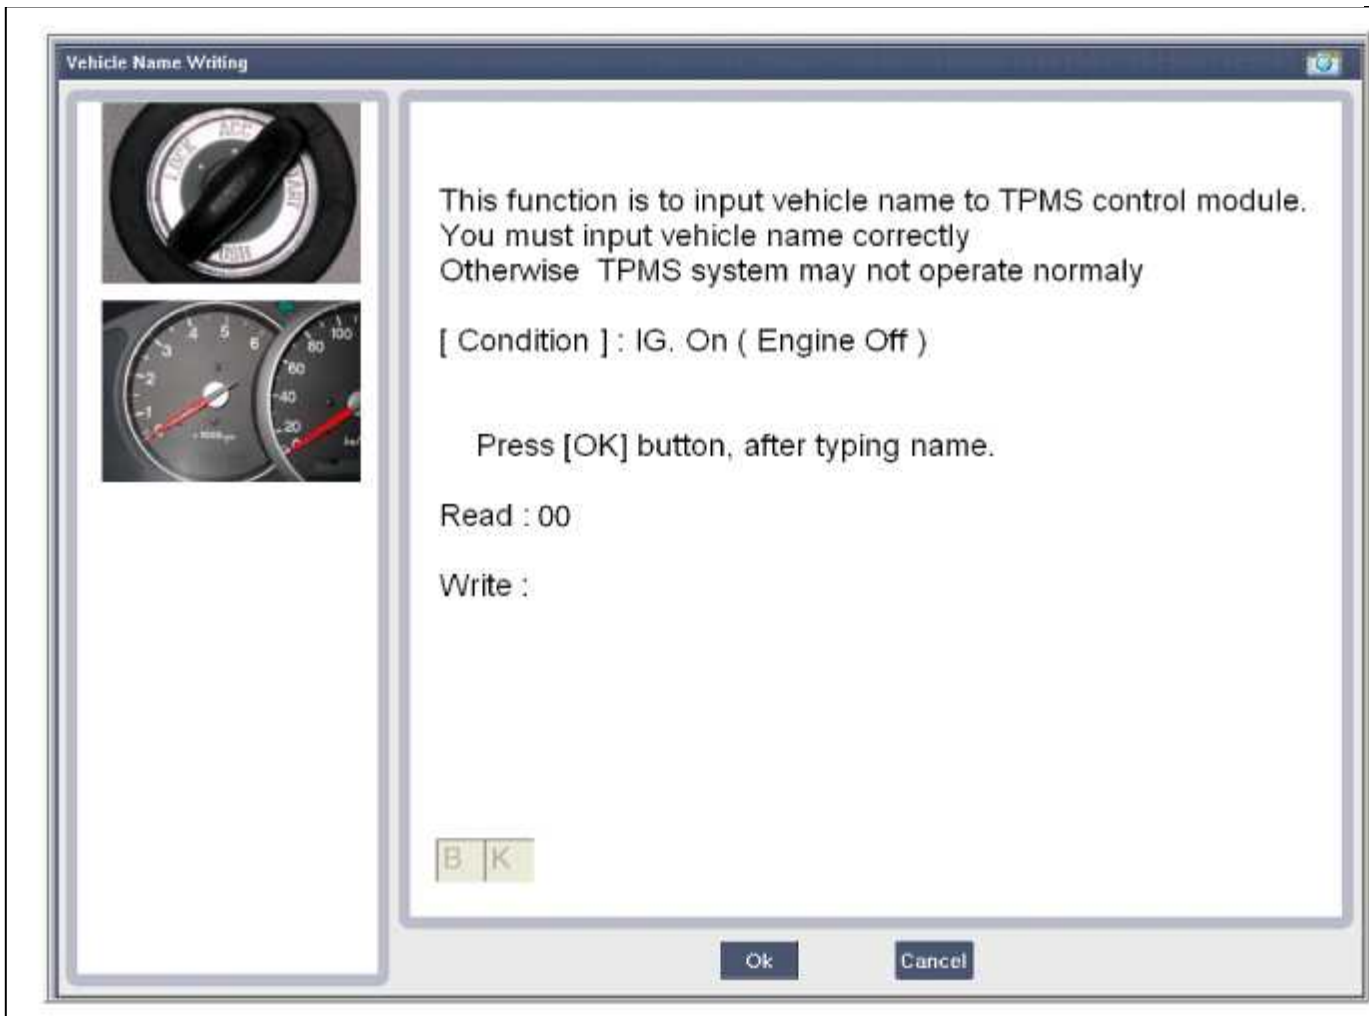

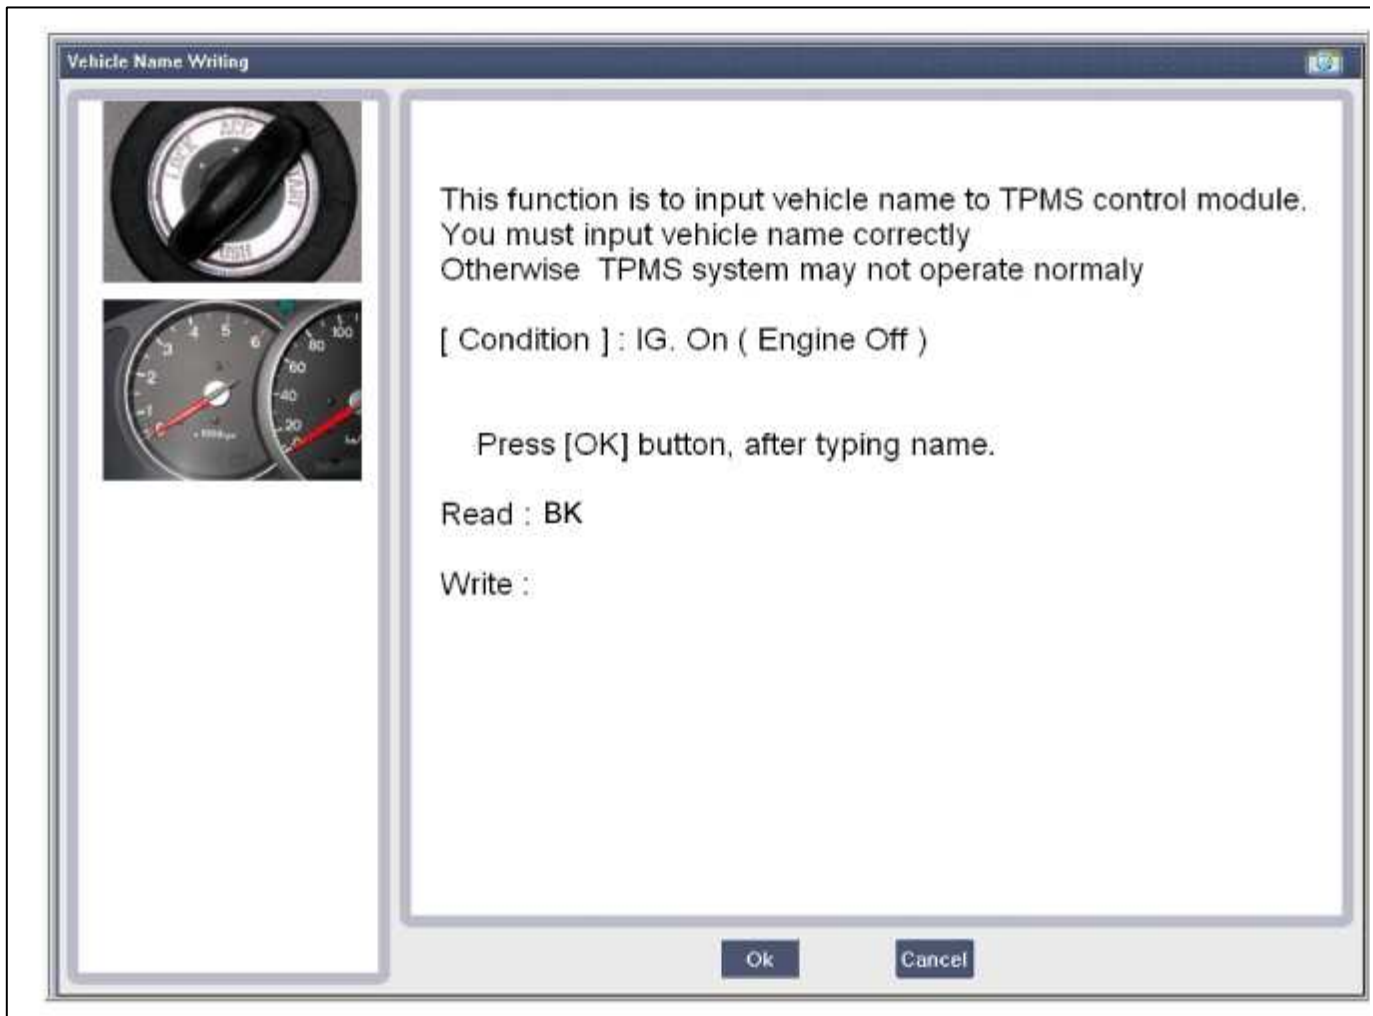


VIN Writing

VIN Writing



This function is used to write the VIN into the ECM's memory.

[Condition] : IG. On (Engine Off)

Press [OK] button, after typing the number.


Read : 000000000000000000

Write :

G	N	E	1	2	3	A	V	R	1	2	3	4	5	6	7	8
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

Ok Cancel

VIN Writing



This function is used to write the VIN into the ECM's memory.

[Condition] : IG. On (Engine Off)

Pre

Re

Wr

Writing success !!!

Press [OK] button.

Ok

G	N	E	1	2	3	A	V	R	1	2	3	4	5	6	7	8
---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---

Ok Cancel

